Ahokua

Assembly Instructions

Living Room Accent Furniture










⚠ **WARNING:**

- Read all instructions carefully and completely before assembly and use.
- Retain for future reference.
- **DO NOT use power tools.**
- **DO NOT over-tighten hardware.**
- Periodically check all hardware and re-tighten as necessary.
- DO NOT sit or stand on product. Use only for intended purpose.
- DO NOT exceed 80 lb on the top panel or 10 lb in each drawer. Distribute weight evenly.


Thanks for purchasing this Living Room Furniture.

If you encounter any issues during installation or use, please email us at support@mi-din.com, including your order ID and a detailed description of the problem. If possible, please provide relevant images to expedite assistance.
We will strive to resolve any issues promptly.


Parts List
Check all parts before assembly

Item no.	Reference image	QTY.	Item no.	Reference image	QTY.	Item no.	Reference image	QTY.
A.		**1**	**F.**		**1**	**K.**		**1**
B.		**1**	**G.**		**2**	**L.**		**3**
C.		**1**	**H.**		**2**	**M.**		**3**
D.		**2**	**I.**		**1**	**N.**		**3**
E.		**1**	**J.**		**1**	**O.**		**3**
H1.		**8+2**	**H6.**		**20+4**	**H11.**		**4+1**
H2.		**8+2**	**H7.**		**12+3**	**H12.**		**1**
H3.		**12+3**	**H8.**		**4+1**	**H13.**		**1**
H4.		**6+2**	**H9.**		**8+2**	**H14.**		**4+1**
H5.		**20+4**	**H10.**		**3**	**H1: M6x25mm H3:M3x12mm H7: M4x25mm H11: M3x14mm**		

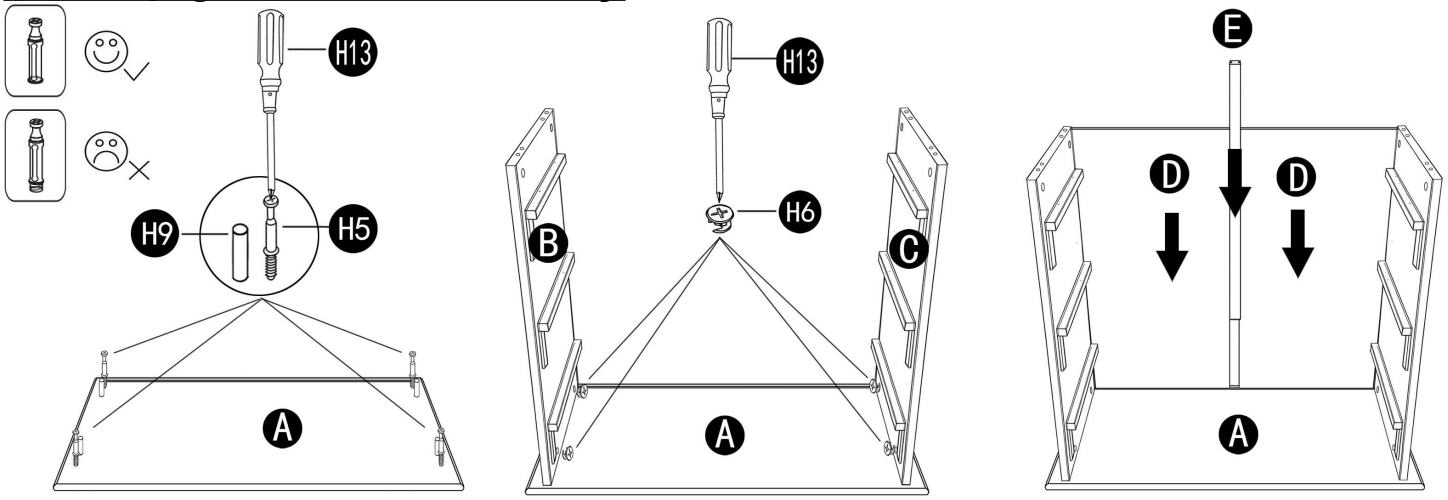Step 1: Place the top panel (A) upside down on a soft, clean surface to protect the finish.
Insert the cam bolts (H5) and wooden dowels (H9) into the pre-drilled holes in panel (A). Tighten the cam bolts (H5) with the screwdriver (H13).
Attach side panels (B) and (C) to panel (A). Insert the cam locks (H6), then turn them clockwise with the screwdriver (H13) to secure the panels.
Slide the two back panels (D) and the wooden strip (E) into the grooves in side panels (B) and (C), as shown.
Do not fully tighten the cam locks in this step.



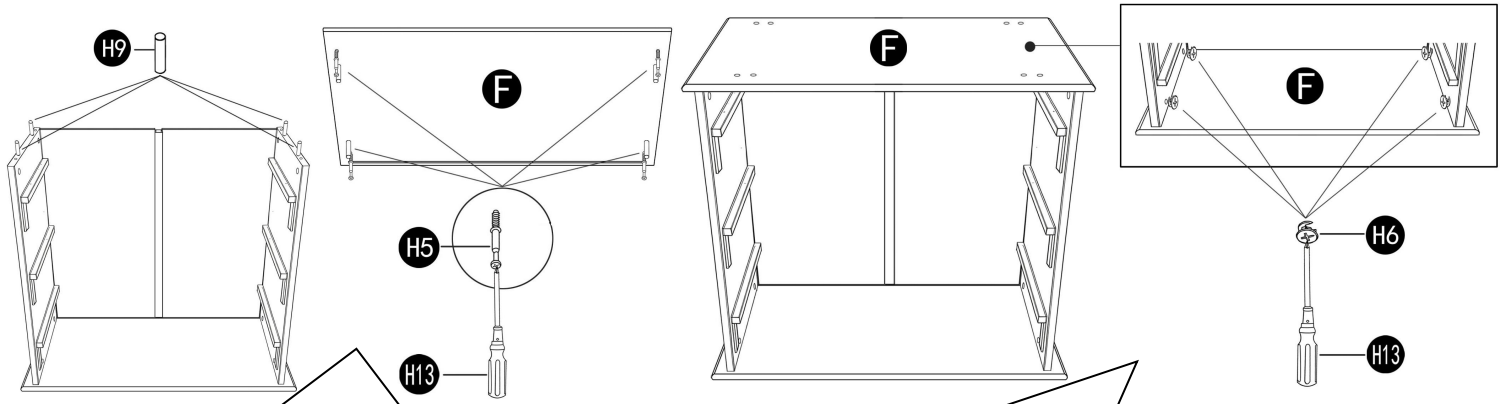
Step 2: Insert the wooden dowels (H9) into the pre-drilled holes in side panels (B) and (C).
Insert the cam bolts (H5) into the pre-drilled holes in bottom panel (F), and tighten them with the screwdriver (H13).
Attach bottom panel (F) to side panels (B) and (C). Insert the cam locks (H6), then turn them clockwise with the screwdriver (H13) to secure the panels. **Fully tighten all cam locks installed in Steps 1 and 2.**




Upside down version, same way as step 1.

Upside down version, same way as step 1.

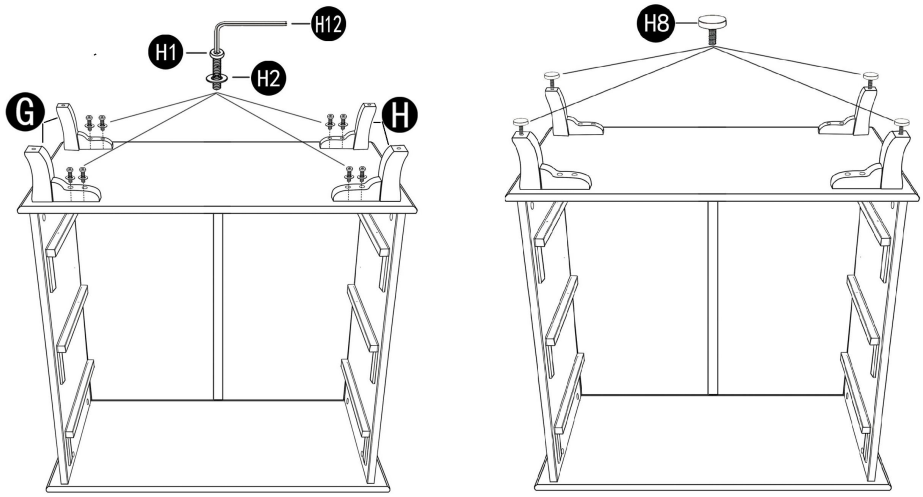
Step 3: Attach legs (G) and (H) using bolts (H1) and washers (H2). Tighten the bolts with the Allen key (H12).
Screw one foot pad (H8) into the bottom of each leg, as shown.



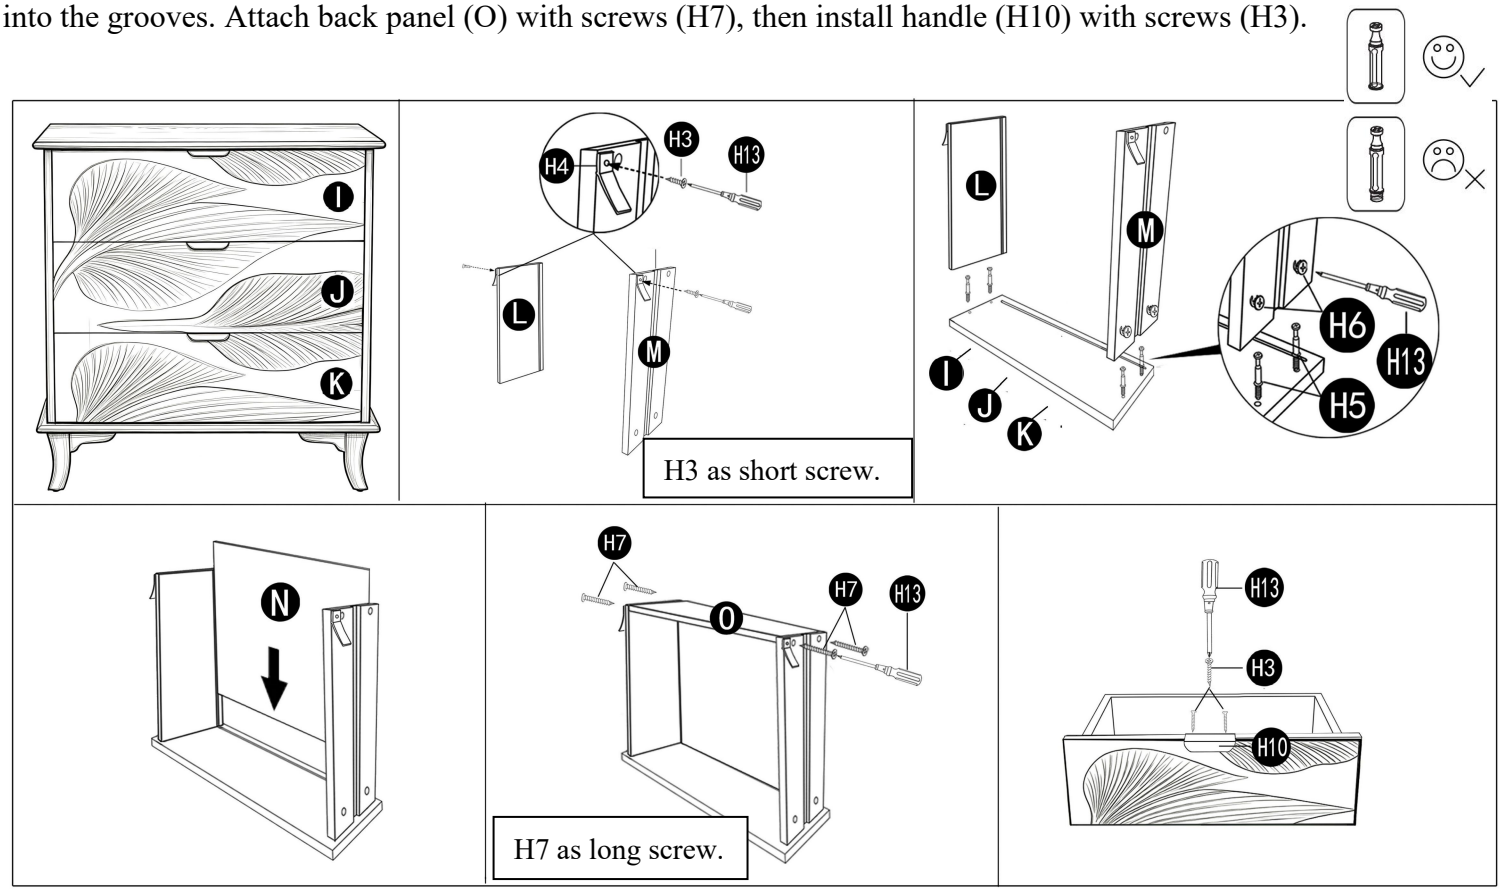Step 4: Assemble the three drawers one at a time on a soft, clean surface.
Use drawer front (I), (J), or (K) for each drawer.
Attach the plastic drawer stops (H4) to side panels (L) and (M) using screws (H3), as shown.
Attach side panels (L) and (M) to the drawer front using cam bolts (H5) and cam locks (H6). Slide drawer bottom (N) into the grooves. Attach back panel (O) with screws (H7), then install handle (H10) with screws (H3).



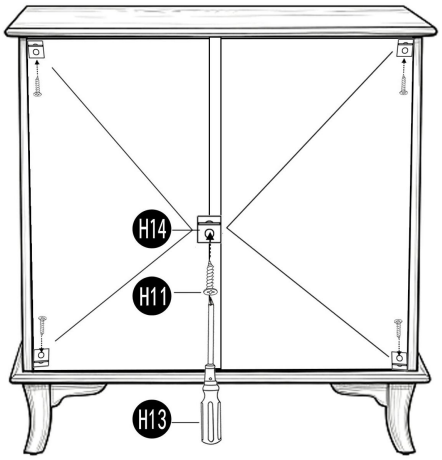Step 5: Insert all three drawers into the cabinet body.
Position the brackets (H14) on the back of the cabinet as shown.
Secure the brackets directly to the cabinet using self-tapping screws (H11) and the screwdriver (H13).



Assembly is complete.