BZB Goods™

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

- **Failure to follow all instruction listed below may result in electric shock, fire and/or serious personal injury.**

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- **When products are used in outdoor applications, connect the power adaptor to a weatherproof covered Class A Ground Fault Circuit Interrupting (GFCI) protected outlet. If one is not provided contact a qualified electrician for proper installation. Ensure that the power adaptor and cord do not interfere with closing the outlet cover.**
- **This seasonal product is not intended for permanent installation or use.**
- **Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.**
- **Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.**
- **Do not install or use within 10 feet of a pool.**
- **Do not use in a bathroom.**
- **Do not let lamps rest on the supply cord or any wire.**
- **Unplug the product when leaving the house, when retiring for the night, or if left unattended.**
- **Do not install near powerlines and other overhead obstacles.**
- **Do not use this product for other than its intended use.**
- **Do not hang ornaments or other objects from the cord, wire, or light string.**
- **Do not close doors or windows on the product extension cords as this may damage wire insulation.**
- **Do not cover product with cloth, paper or any material that is not part of the product when in use.**
- **Do not use an extension cord.**
- **Read and follow all instructions that are on the product or provided with the product.**

⚠ **WARNING: This is an electric product - NOT A TOY! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.**

SAVE THESE INSTRUCTIONS

- This manual contains important safety and operating instructions for power units.

Use and Care Instructions

- **Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged, frayed wire insulation cords, cracks on lamp holders or enclosures, or loose connections and wires.**
- **When not in use, store neatly in a cool, dry location protected from sunlight.**
- **When storing the product, carefully remove the product from where ever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.**
- **For even better night time illumination, you may choose to place an outdoor approved spotlight in front of your inflatable. (Outdoor approved spotlight not provided). Do not place the bulb too close to the inflatable as it may damage the product.**
- **Do not place any foreign objects inside your inflatable.**

CAUTION: **Please handle all inflatable products gently.**

CAUTION: **Do not put fingers near any rotating, spinning, or moving pieces on any inflatables. Doing so could result in injury.**

CAUTION: **To reduce the risk of fire, do not deliberately reposition either lamp holder contact.**

CAUTION: **Do not attempt to inflate during unusually strong winds, rain, or snow. If it becomes too windy for safe operation, simply allow your inflatable to deflate, secure it, and wait for better conditions.**

CAUTION: **Do not attempt to plug in or use the inflatable into an electrical outlet when it is wet or soaked. It is dangerous to combine electricity and water. Protect the electric fan and power cord from direct exposure to water, to reduce the risk of electrical shock. When the temperature is below 14°F (-10°C), the motor temporarily might not run. Simply bring your inflatable indoors for a short period of time and allow unit to reach room temperature.**

CONTENTS:

Inflatable Unit: 1 pc (Actual item may vary slightly from photo)

A. Nylon Tethers: 2~4 pcs. (Quantity may vary)

B. Plastic Stakes: 2~8 pcs. (Quantity may vary)

C. ETL or UL & Equivalent Listed Adaptor: 1 pc.

USER SERVICING INSTRUCTIONS

1. **Risk of fire. Do not replace attachment plug or other parts and accessories. Discard if the attachment plug or parts are damaged.**

INSTRUCTIONS

1. **Remove contents from packaging, lay out in a clean, open area free from obstruction or other debris.**
2. **Before plugging your inflatable into an electrical outlet, please make sure all zippers are closed. Note: All inflatables with connectors (plastic coated electrical clips) must be connected together before plugging into an electrical outlet.**
3. **Check to make sure inflatable is not tangled together. If product is tangled, please do not plug into electrical outlet. Simply untangle inflatable on a flat surface then proceed to plug into electrical outlet to inflate once straightened out.**
4. **Plug into GFCI electrical outlet. Be sure to inflate in a space that will allow the inflatable to expand without any obstructions.**
5. **Ensure that there is no fabric or other material that will block the air intake of the fan.**
6. **Once fully inflated, clip the tethers to each of the nylon loops/ring grommets on the side of the inflatable.**
7. **Insert the stakes into the ground and attach the tethers.**
8. **To deflate simply unplug and open the zipper. Do not unplug by pulling on the cord. Allow inflatable to fully deflate and dry.**
9. **Store in a dry location when item is not in use.**

Note: **Once inflatable unit is unplugged and stop blowing. The inflatable unit will deflate.**

SETUP INSTRUCTIONS

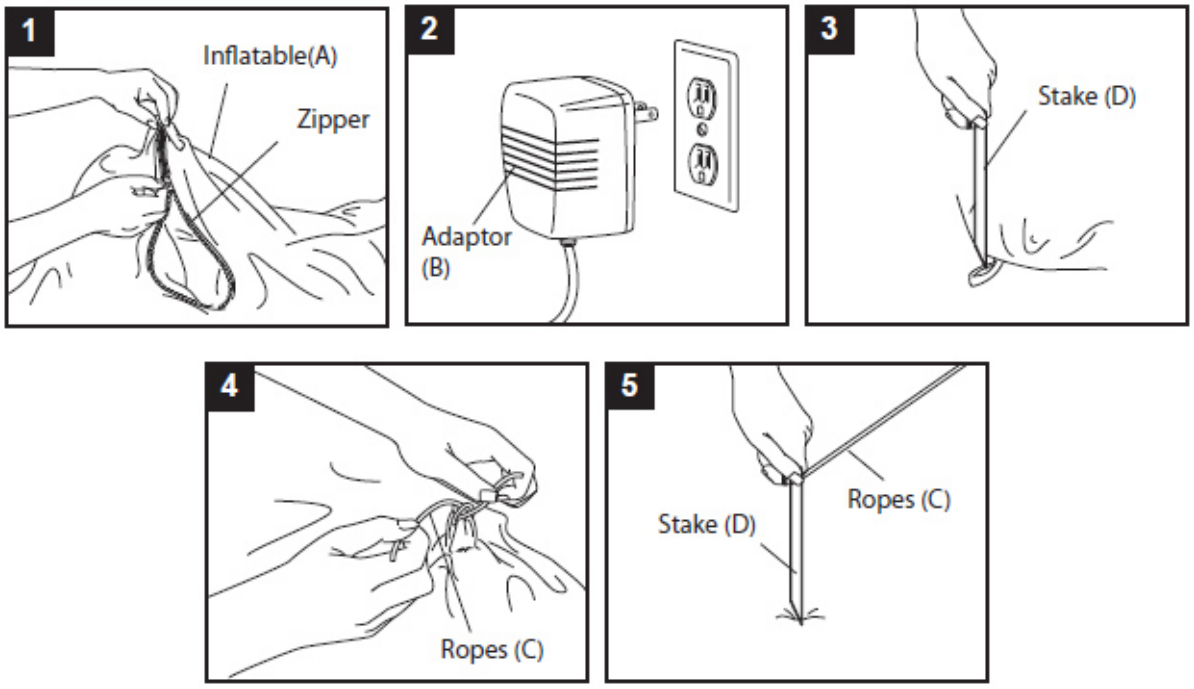


****Illustration for reference only –may differ from actual item**

1. **Remove all plastic fasteners and tags. Make sure the zipper(s) of the inflatable (A) is/are zipped up.**
2. **Plug the FAN power cord into the Adaptor (B) and screw the ring over the cable to fasten the plug. Then plug Adaptor (B) into standard outlet and allow to inflate.**
3. **Insert the base stakes (D) in the hole of the loops attached at the bottom of the inflatable (A) into the ground.**
4. **Clip the tethers/ropes (C) to the nylon loops/ring grommets on the side of the inflatable (A).**
5. **Tie another end of the tethers/ropes (C) to the stakes. Insert the stakes (D) into the ground.**

CAUTION: Do not place near fire, electric heaters, gas, candles, or any other similar sources of heat.

CAUTION: Nylon tethers that are used for securing the inflatable in place should not be played with by any children. Tethers can be circled around the child's neck and cause injury.

TROUBLE SHOOTING CHECKLIST:

The Inflatable is not inflating, the problem may be:

- **The power source is interrupted or the cord may be unplugged.**
- **Debris may be lodged in the motor.**
- **The zipper may not be securely closed.**
- **If the weather conditions are under 14°F (-10°C), the motor may temporarily not run. Simply bring back the unit inside and allow to reach room temperature.**

The unit is torn

- **You may hand sew rips with any type of thread or use clear packing tape to cover the tear.**

There is a delay after plugging in the adaptor:

- **This is a protective feature built in these adapters to protect the electrical circuit and the product. 2 to 3 seconds start up delay can be normal**

Note: It is recommended to check and clean the air-intake periodically for clogs (Such as grass, leaves or other debris).

WARNING: Remove all plastic fasteners and tags. These are part of the packaging and should be discarded. This item is not a toy and should be used for decorative purposes only.

Important:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. **This device may not cause harmful interference, and**
2. **This device must accept any interference received, including interference that may cause undesired operation.**

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult the dealer or an experienced radio/TV technician for help.**

USAGE PRECAUTIONS

