
ASSEMBLY INSTRUCTIONS

<<Before assembling, read all the instructions>>

ITEM NO.:7128

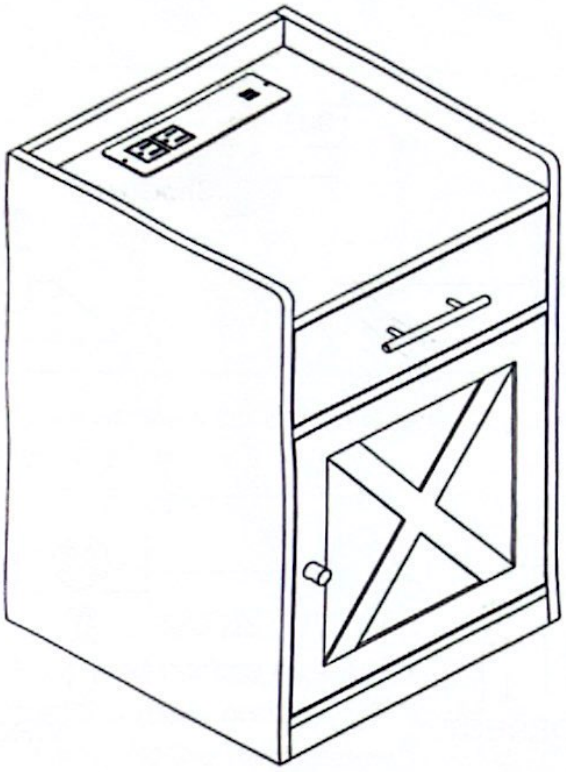


Hardware:

Letter	Piece	Number	Letter	Piece	Number
A		18pcs	H		4pcs
B	 6x35mm	14pcs	I		1set
C	 15x9. 5mm	14pcs	J		1set
D		2pcs	K	 4x14mm	14pcs
E	 3x12mm	12pcs	L		1set
F	 4x30mm	4pcs	M		1set
G		2pcs	N		1pc


Using Cam Lock and Quickfit

QUICKFIT

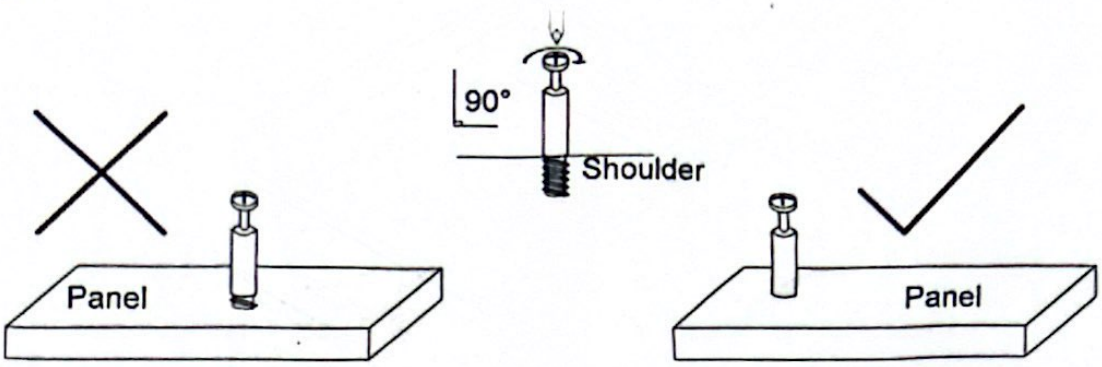


CAM LOCK




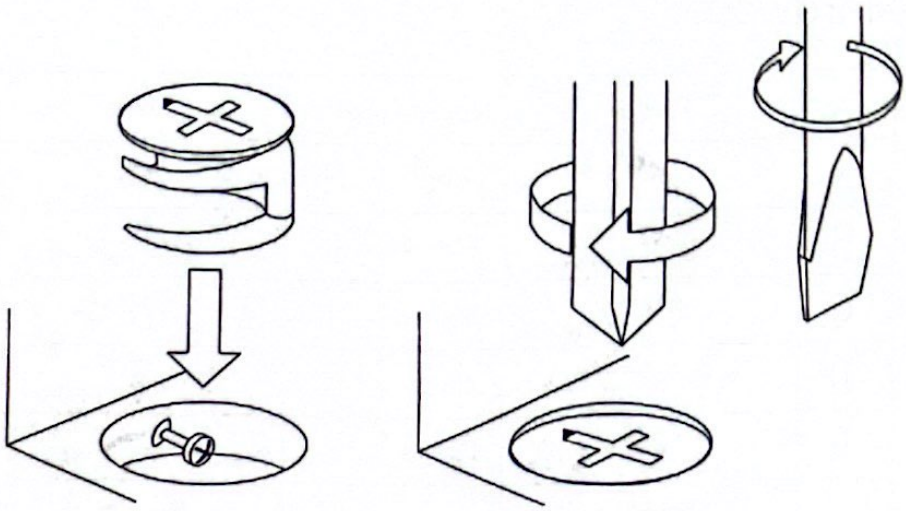

Tools Required



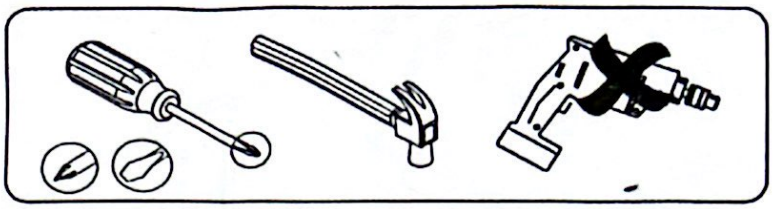

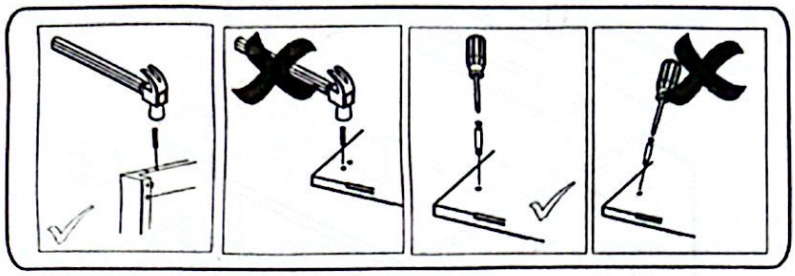

CAUTION: Do not use tools other than those required, as this can damage your new item.

NOTE

- Please check you have all hardware before assembling.
- If you are missing any hardware, please contact the store of purchase.
- Please ensure you have the name of the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION


- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts, screws and knobs are firmly secured.
- Check that all bolts, screws and knobs are securely tightened at least every 4 months.

WARNING


- If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.
- Failure to follow these warnings could result in serious injury.

DANGER

- CHILDREN MUST BE SUPERVISED.

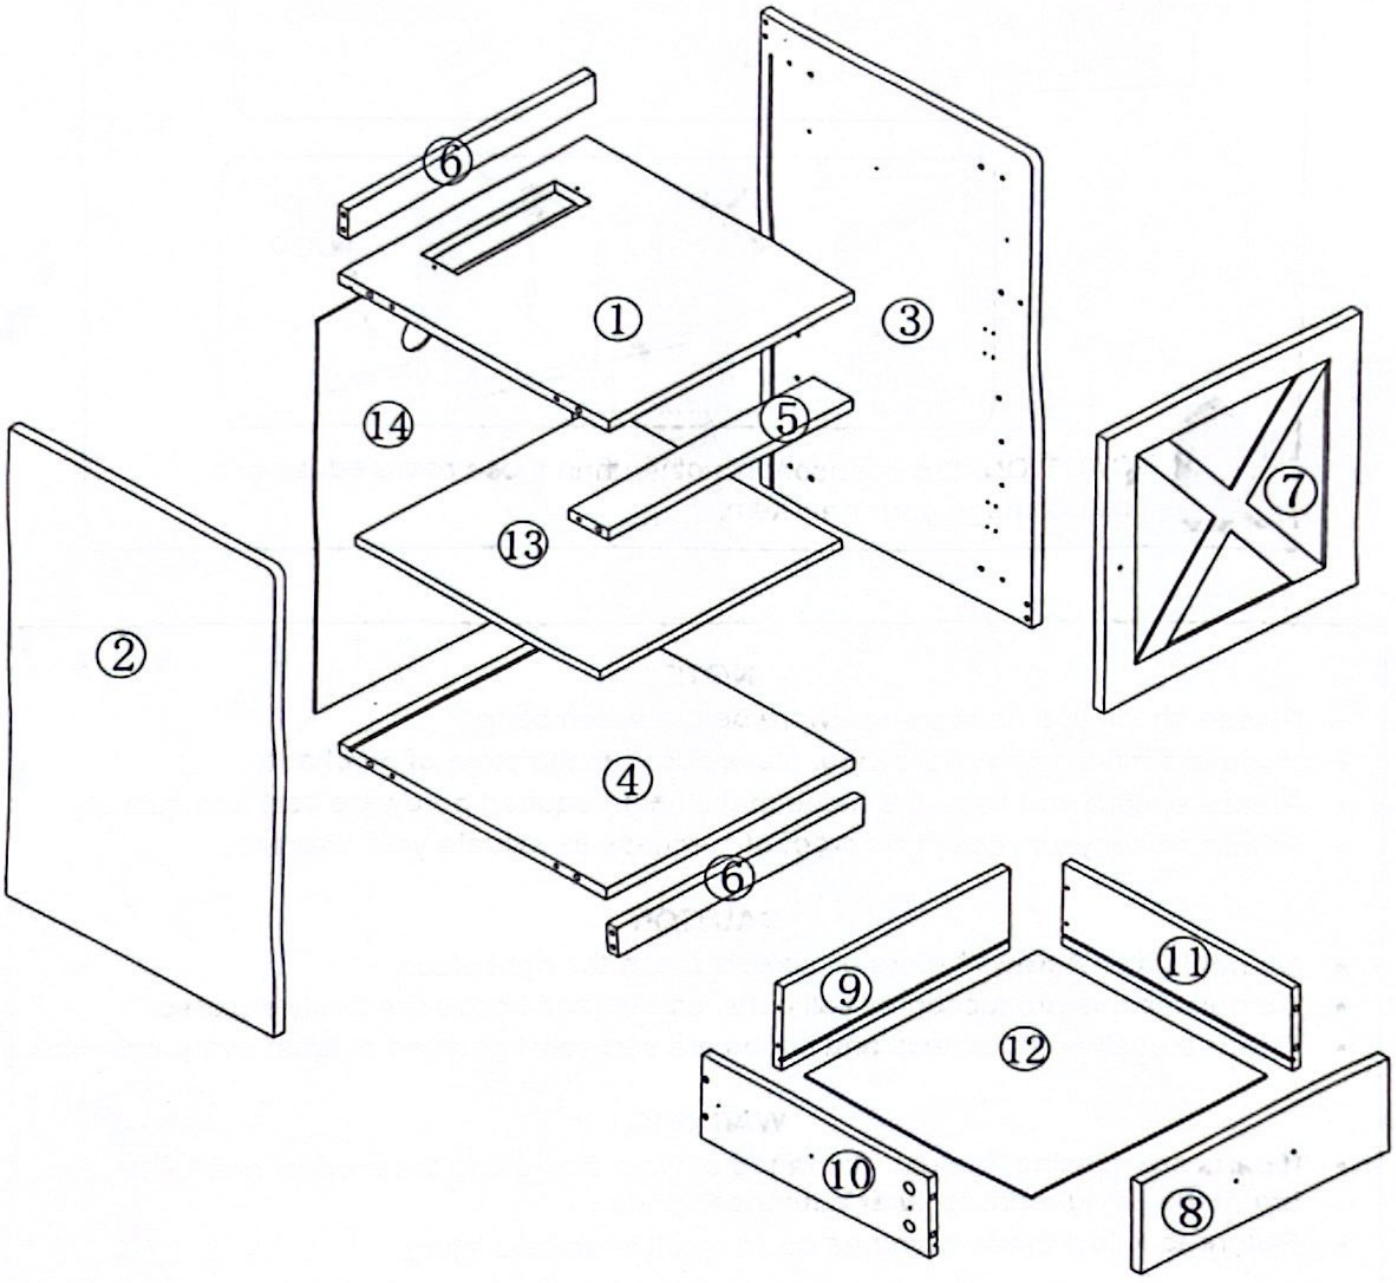
⑥
①
③
⑭
⑤
⑦
⑬
②
④
⑥
⑨
⑪
⑫
⑩
⑧


①

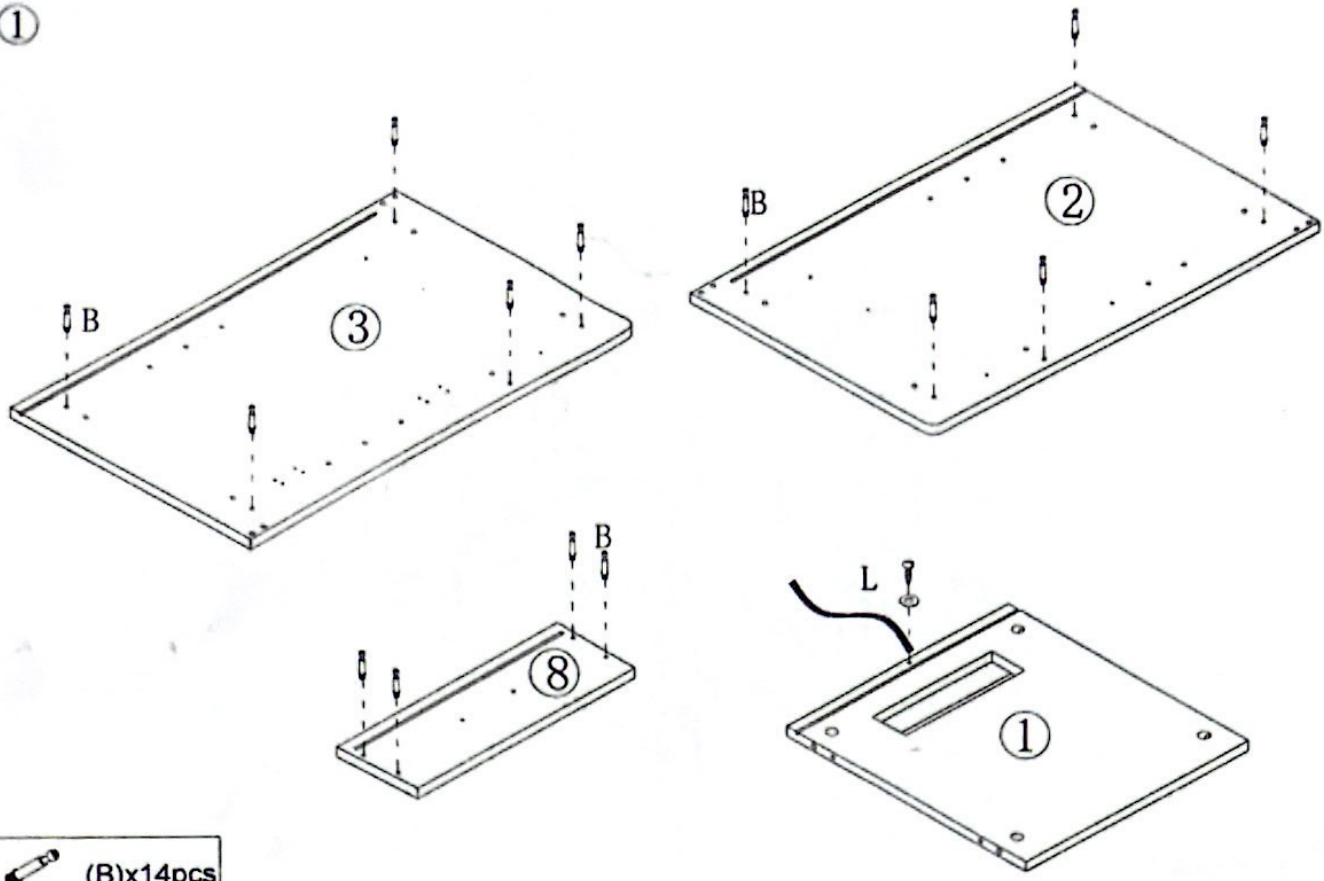


(B)x14pcs

(L)x1set

②

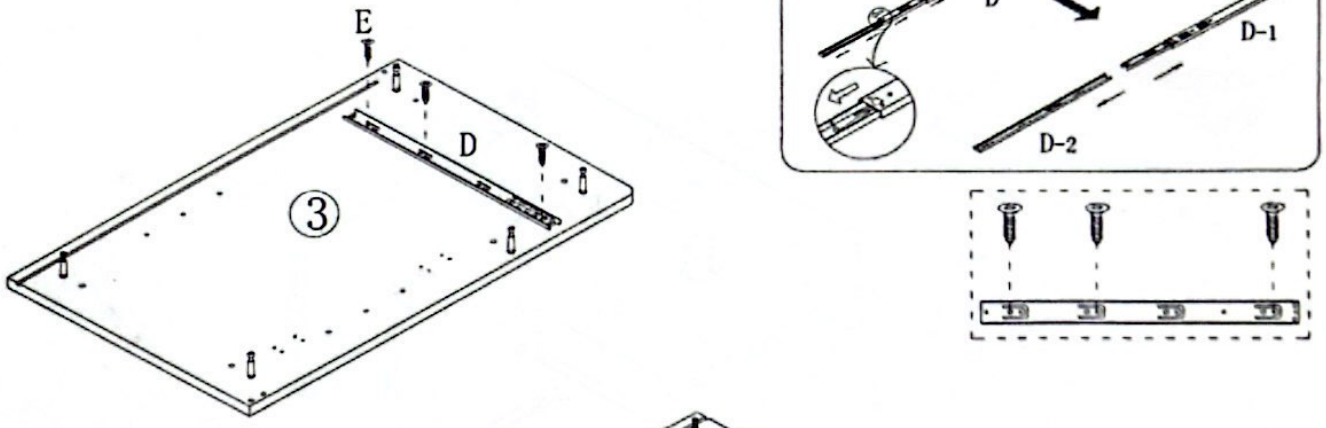


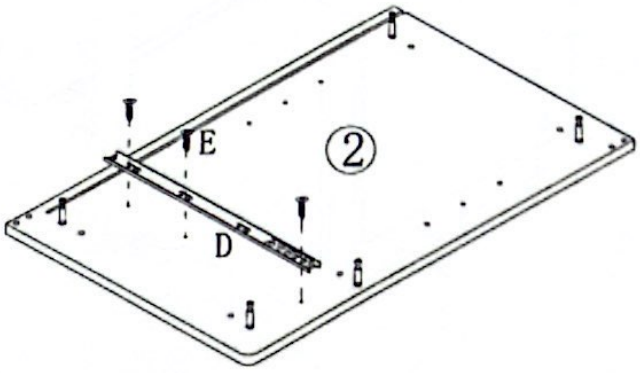

(E)x6pcs


(D)x2pcs

③

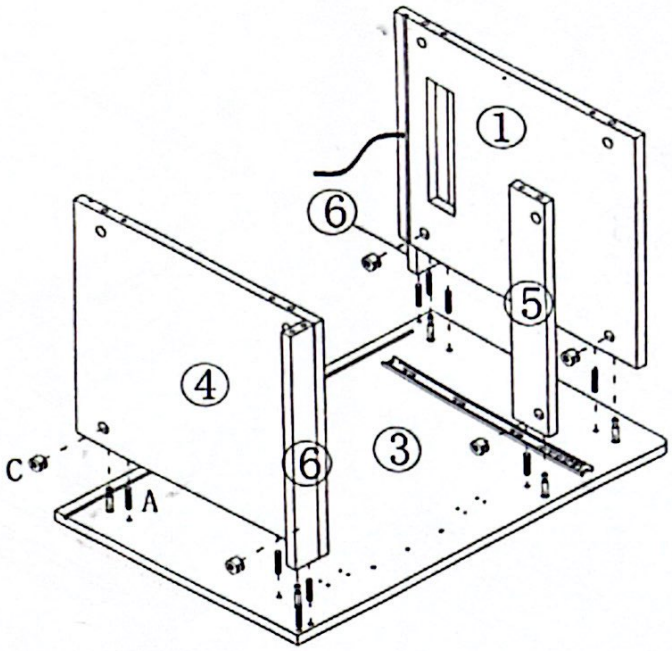


	(A)x9pcs
	(C)x5pcs

④

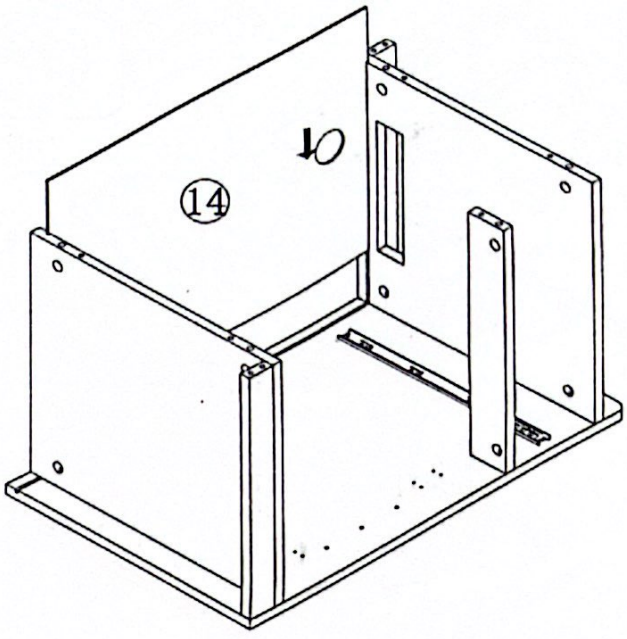


⑤

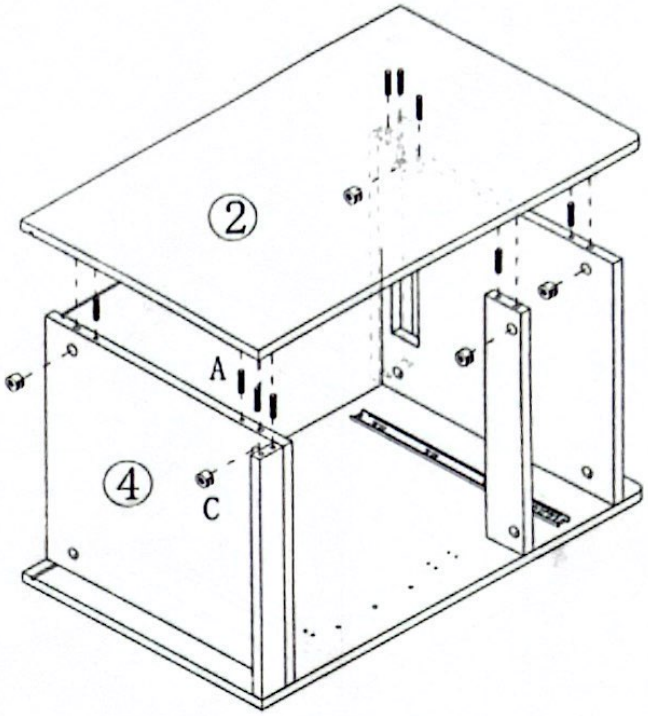


(A)x9pcs

(C)x5pcs

⑥

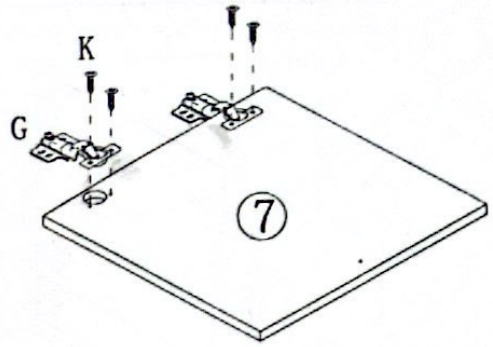

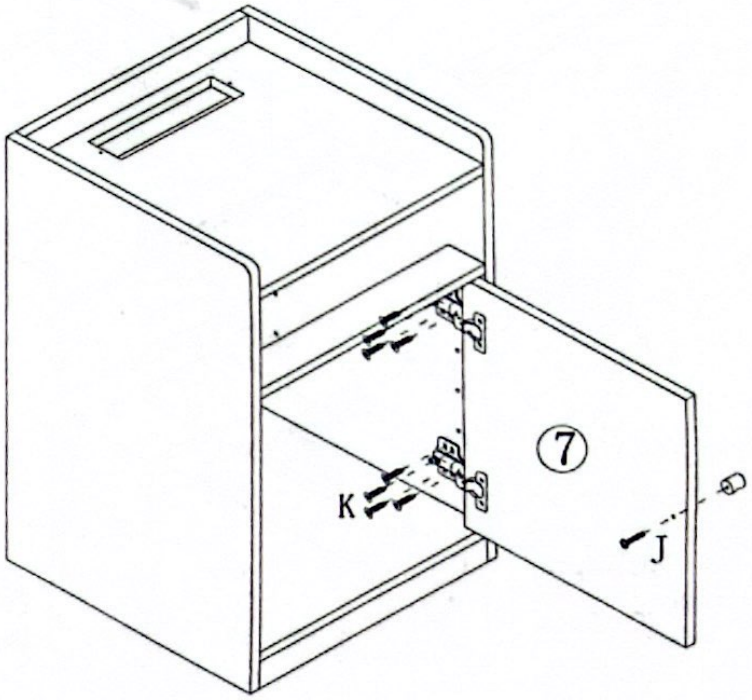


(G)x2pcs

(K)x12pcs


(J)x1set

⑦

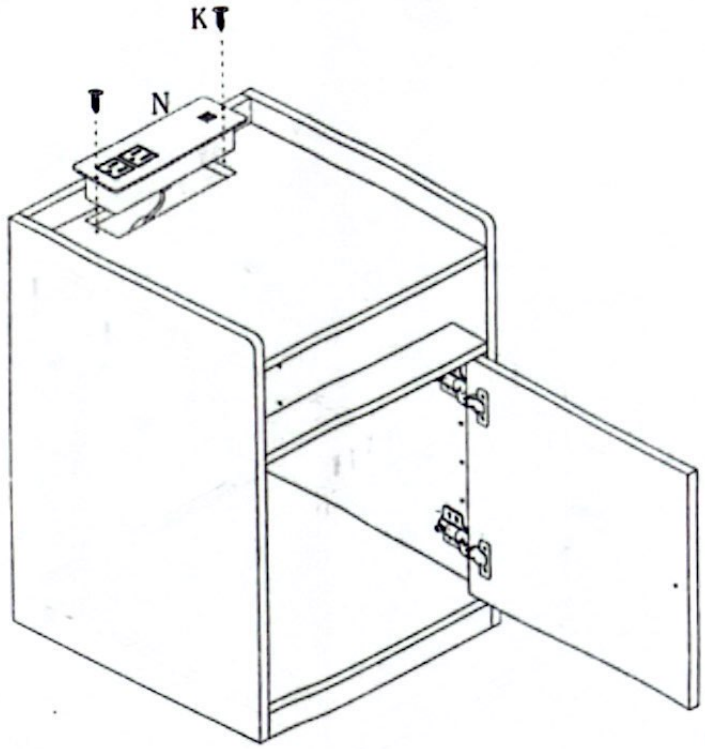


	(K)x2pcs
	(N)x1pc


⑧

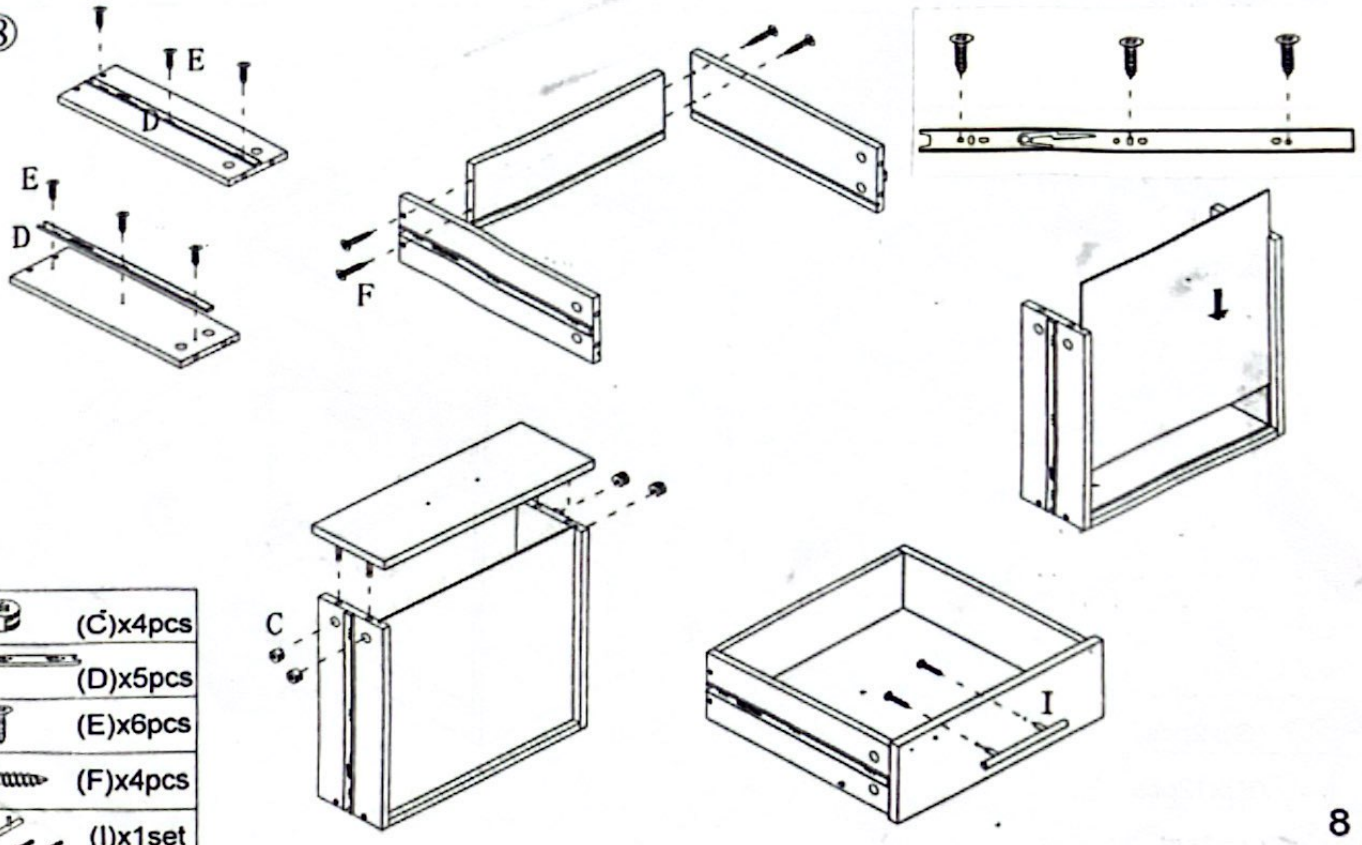


	(C)x4pcs
	(D)x5pcs
	(E)x6pcs
	(F)x4pcs
	(I)x1set


⑨

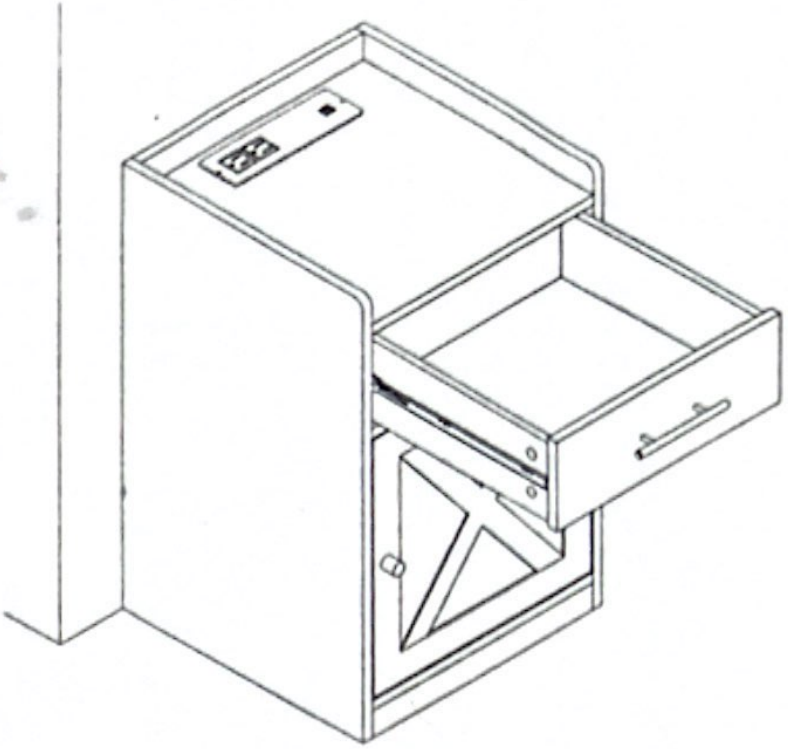

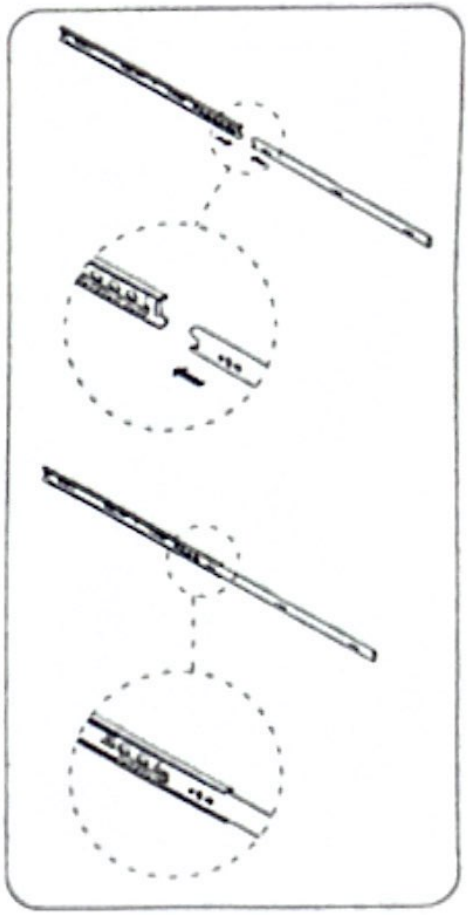

⑩

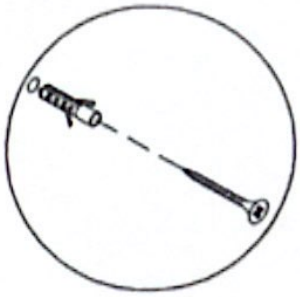

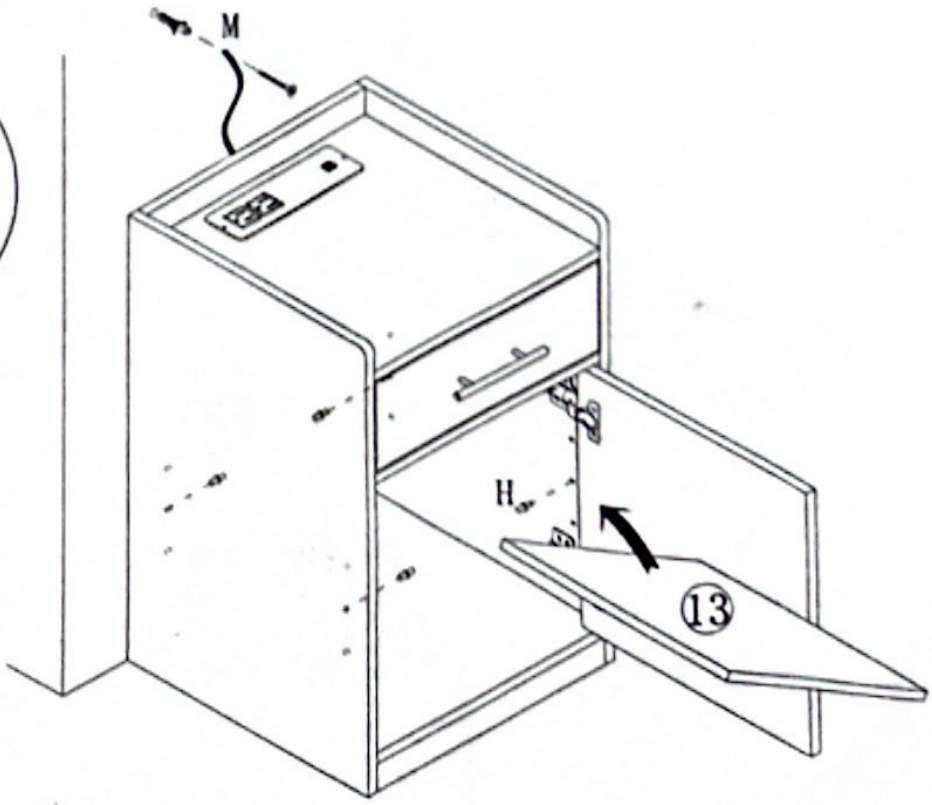

(H)x4pcs

(M)x1set