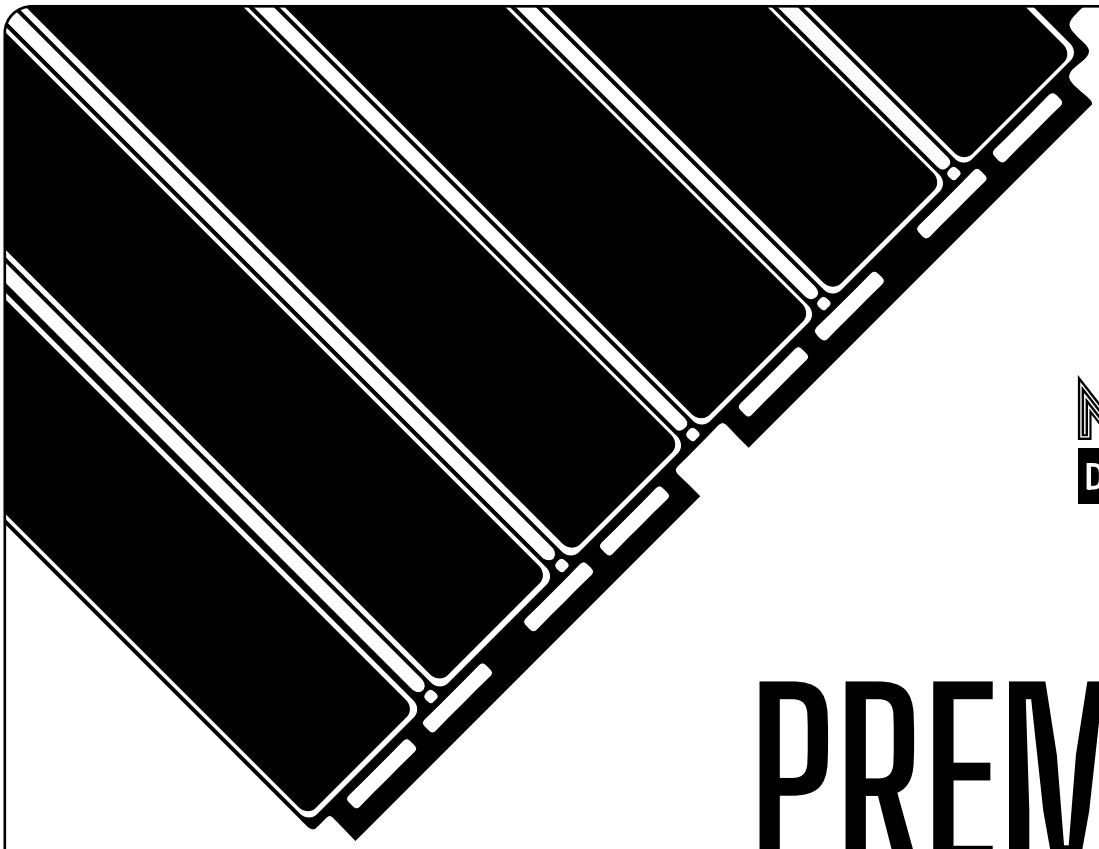


MEGSU
DEFINE YOUR SPACE

PREMIUM DECK TILES

Read all assembly and care instructions carefully before using this product. Save these instructions for future reference.

- Select a smooth, level surface to place the Premium Deck Tiles
- Assemble components on a soft, clean surface to avoid scratching and/or damaging the finish.
- Ensure all parts are accounted for before disposing of packaging.

I WARRANTY INFORMATION

Thank you for choosing Megsu. We stand behind our brand and the quality of the items we sell. Megsu is not responsible for normal wear and tear, for products used commercially or for failures caused by accidents, abuse, alteration, modification, misuse or improper care.
There are no other express warranties beyond the terms of this limited warranty. In no event shall any implied warranties, including merchantability and fitness for a particular purpose, extend beyond the duration of the express warranty contained herein. In no event shall Megsu be liable for incidental or consequential damages.
We offer **01-year warranty for this product.**

Replacement parts or products will be sent at our discretion if the defect is the result of any fault on our side. Proof of purchase, with the date of purchase as well as photos of the defective merchandise, must be provided. Photos are used to determine the cause of defects and for future quality control.
Please contact Megsu Customer Service directly; or if you have any questions, comments or concerns by emailing us at: **contact@megsu.com**, or via our Contact Us page at **https://megsu.com/pages/contact**

I IMPORTANT INFORMATION

Under normal use, Megsu Premium Deck Tiles will last for years.
It is, however, important to follow basic care tips to prolong the life of your deck tiles.

USE & CARE

- Before each use, inspect the outdoor deck tiles for cracks, loose screws, or signs of wear.
- Use with care and avoid sudden or forceful movements to prevent tipping or instability.
- Ensure all parts are properly assembled and securely tightened before use.
- Always supervise children when they are using the outdoor deck tiles to avoid accidents.
- Do not exceed the recommended weight capacity of the deck tiles.
- Clean the wooden surface with a soft cloth and warm water. Dry thoroughly after cleaning to prevent moisture buildup.
- The wood finish is durable but may develop minor scratches over time. Wipe scratched areas as needed and consider applying a protective wood sealant annually for outdoor durability.

TROUBLESHOOTING

If the outdoor deck tiles seems unstable, make sure it is on a level surface and the feet are correctly distributed as shown in the assembly instructions. Also make sure that all components are assembled correctly and the hardware is securely tightened.


Any modification or failure to follow the recommended care will void the product warranty.

⚠ WARNING

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

INSTRUCTION

Step 1

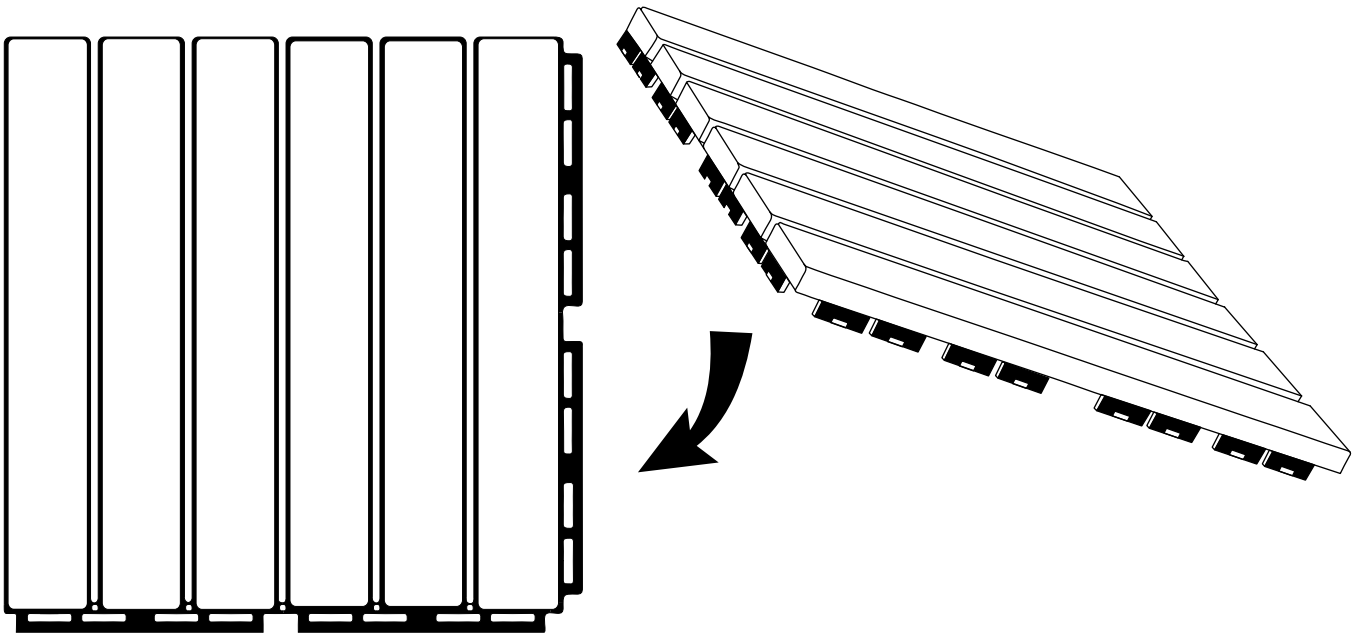

Step 2

