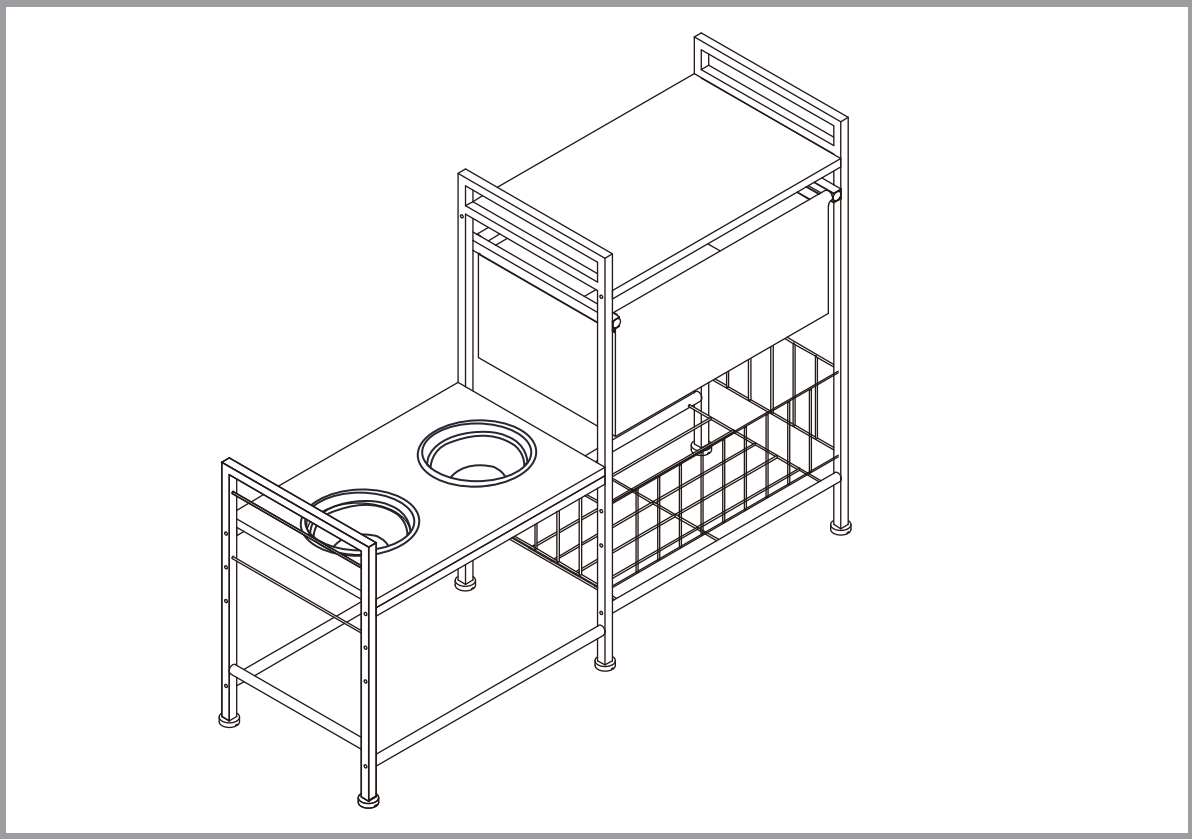
PetMaker®



Pet Feeding Station

Save these instructions.

45 minutes

Questions? www TeamCustomer Service.com

Assembly Instructions

Thank You for your Purchase

- This user manual contains important and useful information to accompany your purchase. This product is intended for indoor, household use only. Failure to follow the instructions outlined may result in personal injury or damage to the product which the manufacturer or vendor cannot be held responsible.
- Please ensure you keep the instruction manual in a safe place so you can refer to the instructions at any time in the future. Adult assembly required. During assembly, children should always be kept away due to possible risk of injury. Please use caution and care when lifting the product to avoid personal injury and/or damage. Please ensure that you have enough space and people to assemble your product safely. Do not stand on the product or use as a stepladder.
- For ease and speed of assembly, we recommend that you identify all parts required for that step before begin. All items are to be assembled near the area which they will be placed in use to avoid moving the product unnecessary once assembled.
- For the protection of your furniture, we recommend that the product be assembled on a protected surface to prevent any damage. During assembly please take care not to over-tighten any fittings, as this may damage the product. Always place the product on a flat and stable surface.




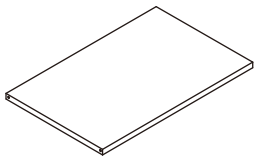
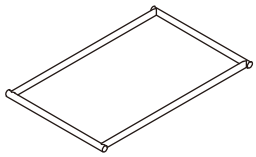
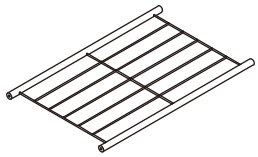
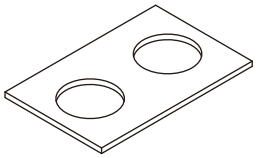


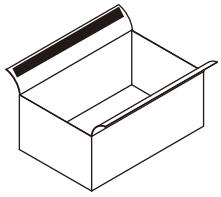

Safety Precautions




- READ ALL INSTRUCTIONS BEFORE ASSEMBLING PRODUCT FOR INDOOR, RESIDENTIAL USE ONLY ADULT ASSEMBLY REQUIRED
- DO NOT throw away packaging material before you finish assembling to ensure that parts are not thrown out by mistake
- DO NOT use accessories or attachments that are not provided or recommended by manufacturer.
- NEVER force any parts or hardware into place when assembling.
- KEEP CHILDREN well away from plastic bags and packing materials this item was shipped in.
- SAVE these instructions for future reference.
- DO anchor product on the wall with at least 1 anchor in contact with stud
- DO not place items, such as toys and remote controls on top of dressers,TVs and other large furniture. Also, make sure that all cords are out of the reach of children. Visit https://www.anchorit.gov/ for more information.

Parts

Removing your Pet Feeding Station from the carton is best accomplished with help from a friend. Gently lay the carton on its side, preferably on a carpeted floor. Remove all packaging material and set aside. Make sure all parts and hardware are present before assembly . 2 person assembly is recommended.




PART	NAME	Q'TY	PART IMAGE	PART	NAME	Q'TY	PART IMAGE
1	Right panel	1		2	Middle panel	1	
3	Left short panel	1		4	Wooden top	1	
5	Rectangular metal frame	1		6	Metal shelf	1	
7	Bowl shelf	1		8	Square metal bar	2	
9	Round metal bar	2		10	Fabric basket	1	
11	Stainless steel bowls	2		12	Metal basket fence	2	

Hardware


PACKAGE	NAME	Q'TY	IMAGE
A	Screws M4x25mm	4	
B	Screws M6x32mm	12	
C	Adjustable foot pads	6	
D	Anti-noise bowl pads	8	
E	Screws M4x35mm	4	

We have included extra piece of screw

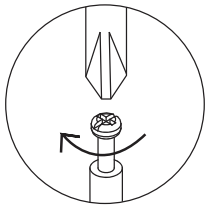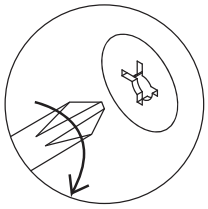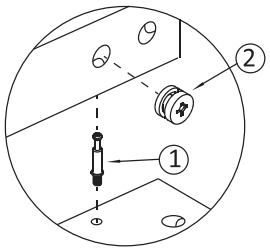Safety Precautions

	Step 1	Step 2	Step 3
Risk of damage or injury. Cam Lock and Bolt system is a multisteps process. Please follow these directions closely. Hidden Cams must be completely tightened. Hidden Cams that are not completely tightened may loosen and parts may separate.			
	Gently screw Cam Bolt into the threaded anchor at the specified location. Tighten with a Phillips screwdriver until threads are not visible	Gently insert Cam Lock in the pre-drill holes at the specified location with arrow pointing toward the receiving hole or toward the closest edge. Use a Phillips screwdriver to turn as needed.Make sure Cam Lock is flushed with the board	Insert Cam Bolt into the predrilled hole on the side of the Cam Lock board.Turn Cam Lock to engage the locking system

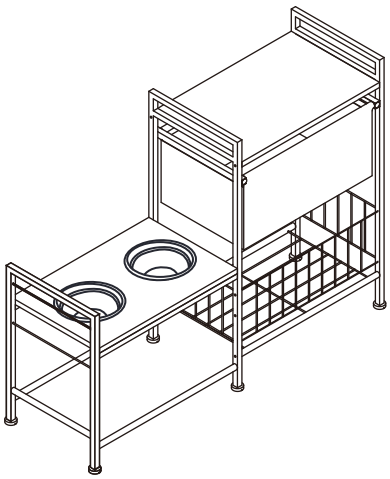
Specifications



Maximum load capacity as follows:

PART	NAME	Maximum Weight Capacity
4	Wooden top	40 lbs
10	Fabric Basket	10 lbs
11	Stainless steel bowls	5 lbs
6	metal shelf	10 lbs

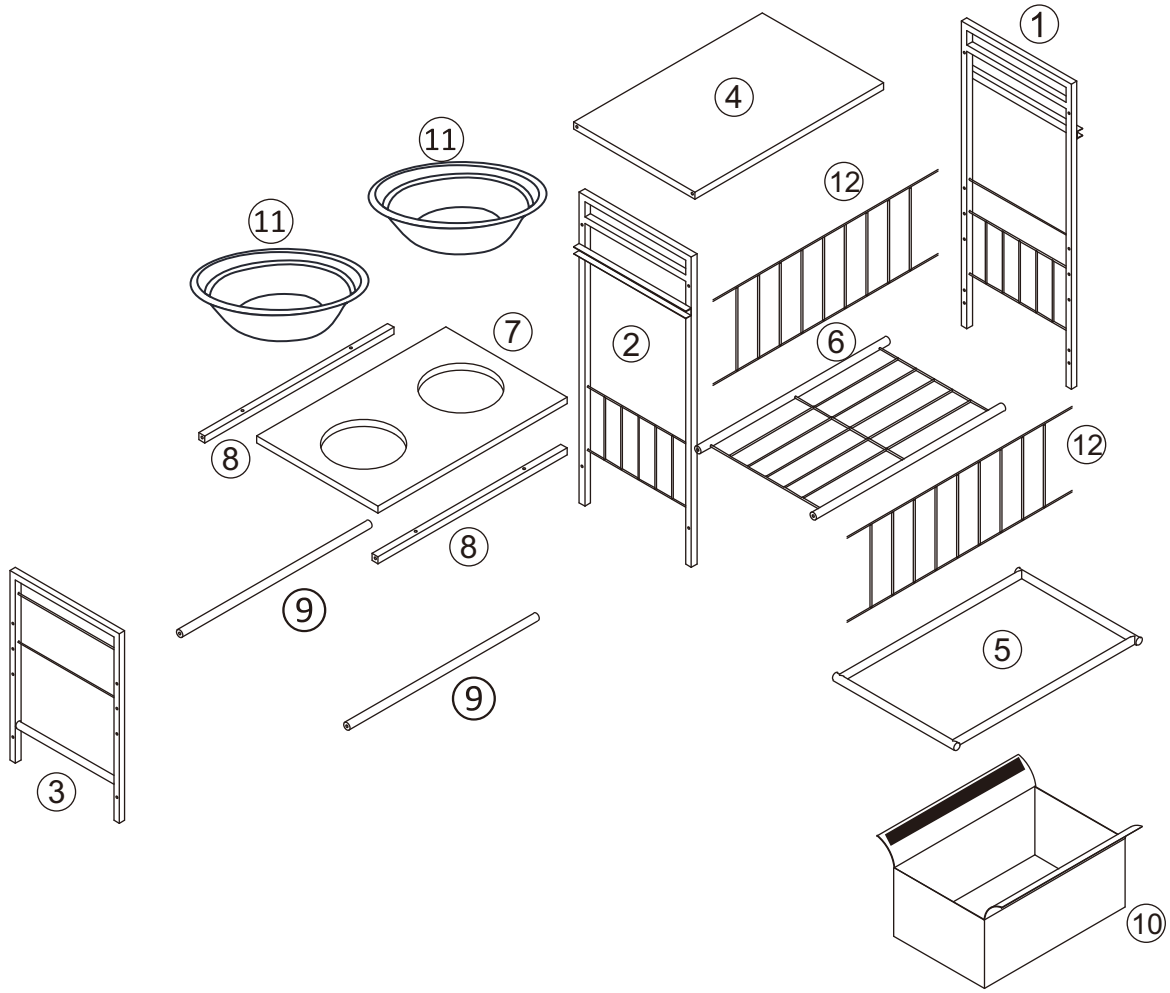Parts




Assembly Instructions


ASSEMBLY TIPS:


1. Remove hardware from box and make sure all your parts are there, prior to assembly.
2. To avoid damage to parts and components, layout and assemblys hould be done on a flat surface.
3. Please check and distinguish each part before assembly.
4. This product is intended for home use only and not intended for commercial establishments.
5. DO NOT attempt to repair or modify parts that are broken or defective. Please contact customer service immediately by visiting: www.teamcustomerservice.com

Step 1 Assemble Bowl shelf and Fabric basket

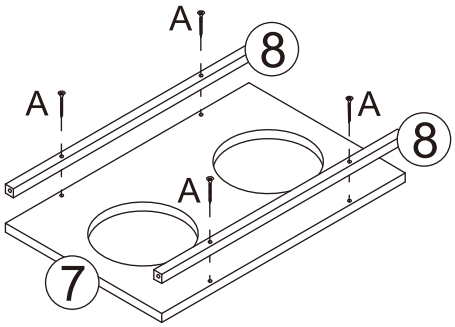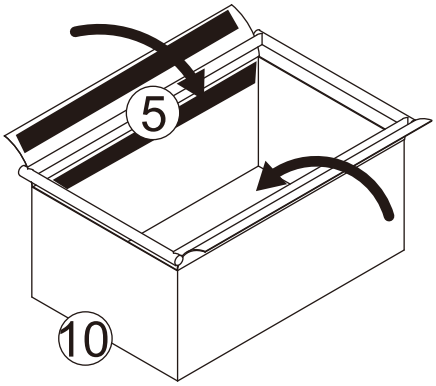1. Fasten 2x Square metal bars ⑧ to Bowl shelf ⑦ with 4x screws (A) and tighten with Philips screwdriver.
2. Put the Rectangular metal frame ⑤ into the Fabric basket ⑩ and fix the Rectangular metal frame with Velcro









Step 2 Assemble Bowls shelf to Left and Middle panel

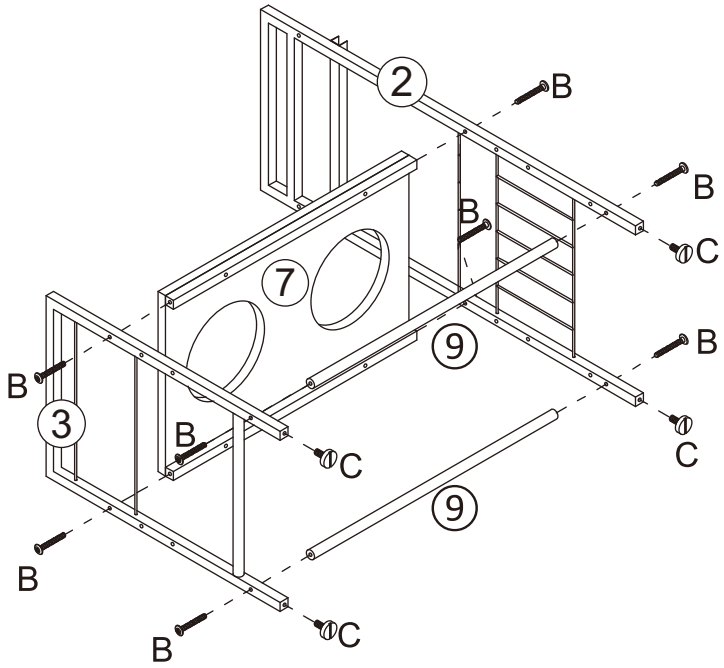
1. Fasten Left panel ③ to Bowls shelf ⑦ and 2x Round metal bars ⑨ with 4x Screws (B) and tighten with Philips screwdriver.
2. Fasten Middle panel ② to Bowls shelf ⑦ and 2x Round metal bars ⑨ with 4x Screws (B) and tighten with Philips screwdriver.
3. Fasten 4x Foot pads (C) to Left panel ③ and Middle panel ②






Step 3 Assemble Shelves and Metal Fence to Middle Panel

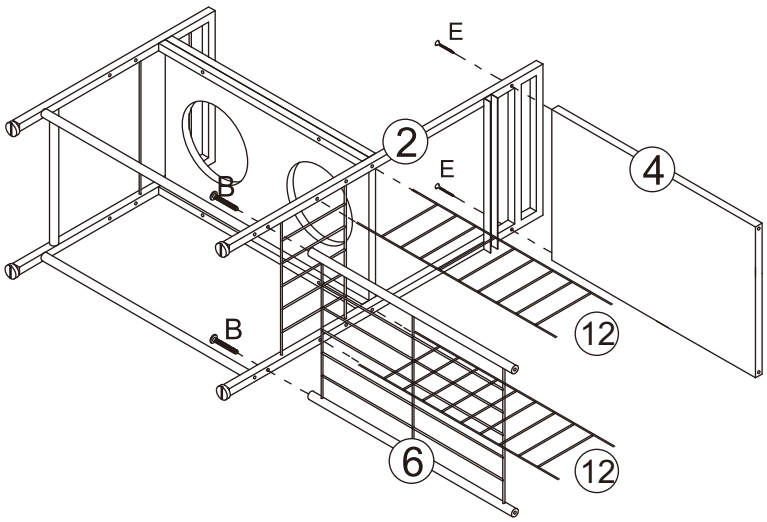
1. Fasten Wooden top ④ and Metal shelf ⑥ to Middle panel ② with 4x Screws (A), 4x Screws (B) and tighten with Philips screwdriver
2. Align 2x Metal basket fences ⑫ to the holes at Middle panel ② and insert them to the holes.






Step 4 Assemble Shelves and Metal Fence to Right Panel

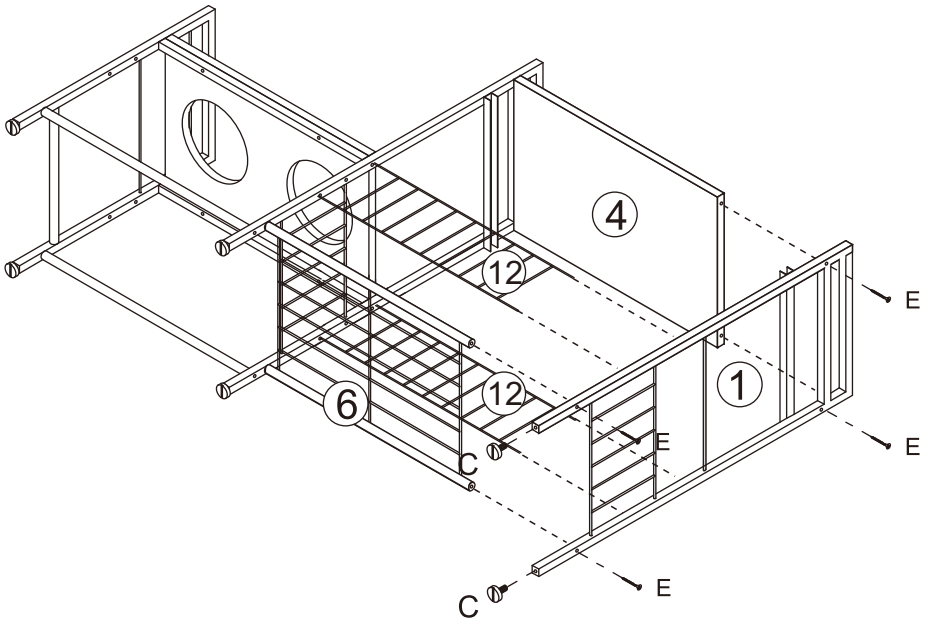
1. Align 2x Metal basket fences ⑫ to the holes at Right panel ① and insert them to the holes.
2. Fasten Wooden top ④ and Metal shelf ⑥ to Right panel ① with 4x Screws (A), 4x Screws (B) and tighten with Philips screwdriver.
3. Fasten 2x Foot pads (C) to Right panel ①.






Step 5 Place stainless steel bowls and assemble Fabric basket

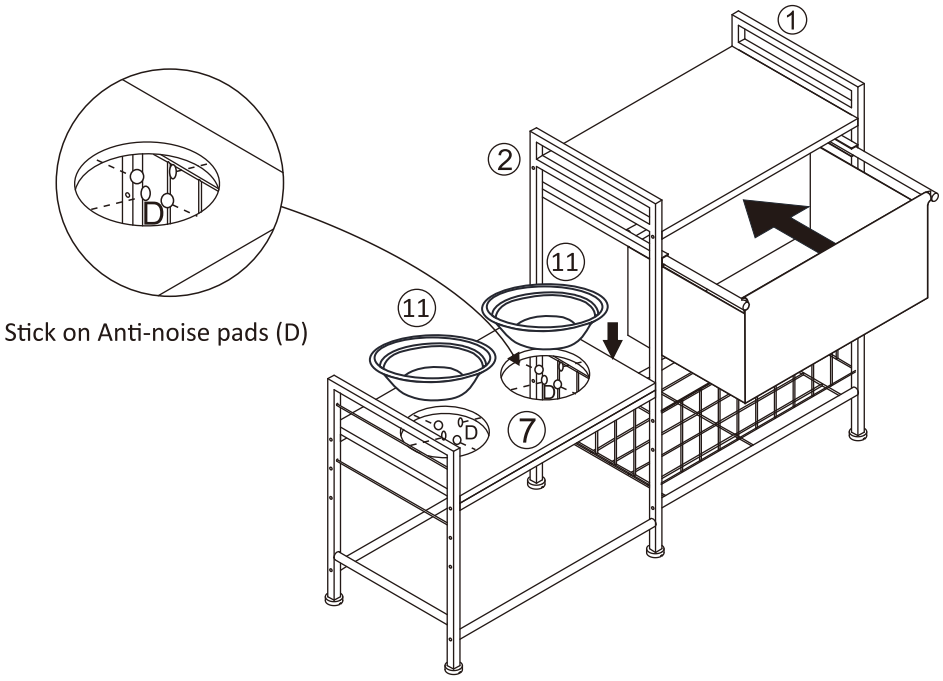1. Stick on 8x Anti-noise pads (D) on two bowl holes as below indication
2. Place 2x Stainless steel bowls to the Bowl shelf holes.
3. Insert Fabric basket ⑩ to the metal grooves on Middle panel ② and Right panel ①.





Care & Maintenance

- Regularly check all fastenings to ensure that they are properly tightened.
- Clean with a damp soft cloth, then use a soft lint free cloth to dry.
- Hot or wet items should not be placed directly on the furniture surface.
- Do not clean furniture with harsh cleaners or polish.
- Do not place furniture in direct sunlight or near heating/cooling vents.
- To protect the surface, use a pad when writing on top of the furniture.
- For indoor residential use, do not place furniture outside.
- Do not stand on the product or use as a step ladder.
- Children should not climb on furniture.

Customer Service



Contact us through our website:
www.TeamCustomerService.com

If you have a question about assembly or use please contact us and we will be glad to assist you.