SALAV®



USER MANUAL

Please read all instructions carefully before using this product.

RETRO EDITION
DUOPRESS STEAMER & IRON

MODEL: IS-900

www.salavusa.com

WARRANTY



One Year Limited Warranty

Salav warrants to the original purchaser of Brand New Salav branded device or accessories shall be free from defects in materials and workmanship under normal use (as instructed in Salav's device user manual) for a period of one (1) year from the date of purchase from Salav or its authorized resellers.

If such a defect arises and a return authorization request is received by Salav within the applicable Warranty Period, Salav will, at its choice and to the extent permitted by law, either (1) repair the defective product at no charge, using new or refurbished replacement parts or (2) replace the defective product with a new or refurbished product. In the event of such a defect, to the extent permitted by law, these are your sole and exclusive remedies. Shipping and handling charges may apply except where prohibited by applicable law. Any replacement product will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is greater, or for any additional period of time that may be required by applicable law.

To obtain a repair or replacement under the terms of this warranty, contact customer service for return authorization. Please be sure to have your proof of purchase ready.

If you have any questions regarding this warranty, you may contact us through our website: www.salavusa.com

Customers located outside of the continental US will be responsible for all international shipping charges for your return or replacement.

WARRANTY EXCLUSIONS AND LIMITATIONS

This Limited Product Warranty applies only to the original purchaser of the Salav branded product that was purchased from Salav directly or Salav's authorized reseller. Without limiting the foregoing, the Limited Product Warranty does not apply to any (a) Salav products and services other than the Brand New Salav branded products which are purchased directly from Salav or from Salav's authorized reseller, (b)non- Salav products, even if included or sold with a Product, including, without limitation, any counterfeit products, (c) products that are, or Salav reasonably believes to be, stolen, (d) consumables (such as cleaning pads). This Limited Product Warranty does not apply to third party products or accessories, including but not limited to products with the "Made for Salav" or "Works with Salav" logos or advertising.

This Limited Product Warranty does not apply to a product or part of a product that has been replaced, repaired, serviced, altered, refurbished or modified by anyone who is not authorized by Salav, nor does it apply to any cosmetic damage such as scratches and dents. In addition, this Limited Product Warranty does not apply to damage or defects caused by (a) use with non- True & Tidy products such as non- Salav steamer liquid; (b) accident, abuse, misuse, mishandling, flood, fire, earthquake or other external causes; (c) normal wear and tear or aging of the product such as discoloration of product; or (d) operating the product (i) outside the permitted or intended uses described by Salav under Salav's Product User Manual , (ii) not in accordance with instructions provided by Salav, or (iii) with improper voltage or power supply, water or other add-on products.

No Salav, authorized reseller, distributor, agent, reseller, or employee is authorized to make any modification, extension or addition to this Limited Product Warranty. If any term contained herein is held to be illegal, void or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

If you have any questions regarding this warranty, you may contact us through our website: www.salavusa.com


Dear Valued Customer

Thank you for purchasing this SALAV product. Please read this manual prior to using your SALAV appliance. For more product information, FAQ and customer support please visit our website at www.salavusa.com.

Important Safety Instruction:

1. Prior to first use, inspect all parts of the steamer to make sure all parts are intact. The steamer must not be used if it has been dropped, if there are visible signs of damage to the body or cord or if it is leaking.
2. DANGER - any appliance is electrically live even when the switch is off.
3. To reduce the risk of death by electric shock always unplug this steamer from the electrical outlet immediately after using and before cleaning.
4. Do not reach for an appliance that has fallen in to water. Unplug it immediately.
5. Do not immerse or let appliance be soaked in water. Do not use while bathing or in the shower.
6. This appliance is not a toy and should not be used by children. Close supervision is necessary when this appliance is used near children, or individuals with certain disabilities. Unsupervised use could result in fire or personal injury.
7. Never pull on the cord to disconnect from the electrical outlet; grasp plug and pull to disconnect.
8. To reduce the risk of electric shock, do not disassemble or attempt to repair the appliance; contact our customer support listed at the end of this manual.
9. To reduce the likelihood of circuit overload, do not operate another high wattage appliance on the same circuit.
10. Use this appliance only for its intended use. Do not use attachments not specified in this manual.
11. If an extension cord is absolutely necessary, a cord with a 15 ampere rating should be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that the cord cannot be pulled or tripped over.
12. Burns can occur from touching steam output vents, hot water, or steam. Do not hold your hand in front of steam.
13. Do not direct steam at people, animals, plants or clothes while they are being worn.
14. While steam is being emitted, this appliance may cause burns if it is used too close to the skin, scalp or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water emitting from steam vents, test appliance before each use by holding it away from body.
15. Ensure the steamer is properly assembled before use.
16. Do not place the appliance in the same spot for more than 10 seconds to avoid damage from heavy heating.
17. Do not touch the bottom of the appliance during operation.
18. Do not tilt or turn the appliance over when in use.
19. Do not fill the water tank with hot water or corrosive cleaning agents. Distilled water is strongly recommended.
20. Fill water into the water tank by removing the water tank cover using the measuring cup (90 ml). Do not overfill!
21. Unplug the product when filling with water, whenever the water tank is empty, and when not in use. Wait until product is completely cooled down before storing.
22. Make sure the product and its protective mat are placed on a level surface to prevent the product from falling. Always place product on the protective mat after using until completely cooled down.

PRODUCT COMPONENTS

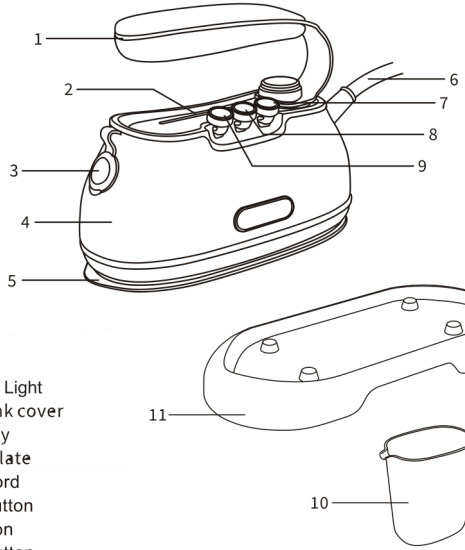


1. Handle
2. Indicator Light
3. Water tank cover
4. Main body
5. Ironing plate
6. Power Cord
7. Power Button
8. Iron Button
9. Steam Button
10. Measuring Cup
11. Heat-Resistant Holder

Product specification

Input Voltage: 120V ~ 60Hz
Output Power: 1000W
Water Tank Capacity: 100mL
Steam preheating time: 40s

INSTRUCTIONS FOR USE


1.Before using, if needed, turn the handle 180°counter clockwise for a more ergonomic grip. A"CLICK" sound indicates the handle is now secure in its new position.

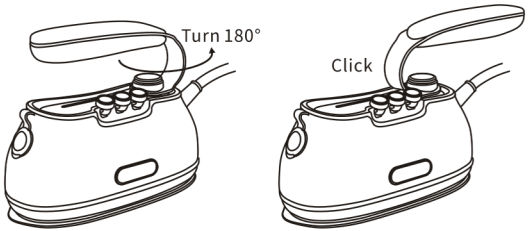

Attention


Turn handle gently.
Handle is not made to turn more than 180° counter clockwise.

2. Open the water tank cover. Use the measuring cup to fill water into the water tank and securely close the cover.

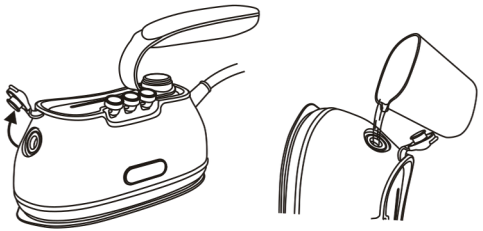

INSTRUCTIONS FOR USE

3. Plug the unit into the power outlet. Press the Power Button. The indicator light will appear as a solid red light indicating the unit is on.
a) Press the Iron Button once and wait 50 seconds to begin ironing. Iron Mode is shown by the blue indicator light. Once the blue indicator light stops flashing and turns solid blue, the iron is now ready to use.
b) Press the Steam Button once and wait 10 seconds to begin steaming. Steam Mode is shown by the orange indicator light.
c) Press the Iron Button once to return to Iron Mode.
d) Press the Steam Button once to return to Steam Mode.
e) Press the Power Button once in either Iron or Steam mode to fully turn off the unit.

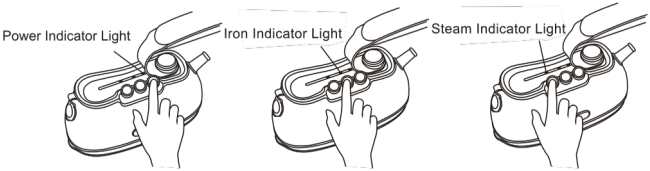

Attention


Once preheating is completed, the two modes of Iron and Steam can be switched freely back and forth by clicking each respective button. If the unit is shut off and turned back on within 30 seconds, there is no need to wait for preheating and the unit can enter Iron or Steam Mode immediately. If the unit is shut off for more than 30 seconds, the unit will need to preheat again before being able to use the Iron and Steam Modes.

INSTRUCTIONS FOR USE

Warning

Do not touch the ironing plate once the unit is plugged in.
Do not overfill the water tank with water. Wipe clean any spills with a dry cloth.
Do not fill the unit with water when plugged in.
Use distilled water in this unit to prevent damage and extend the life of this product.

4. After using, place the unit back onto its heat-resistant holder. Once the unit has cooled down completely, turn the handle clockwise until a "CLICK" sound is heard,indicating the handle has locked into place before storing.

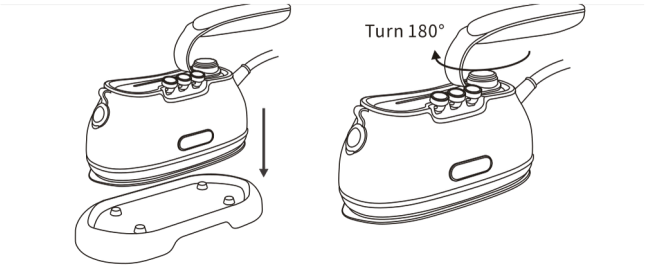

IRONING GUIDELINE

1.The ironing panel can reach a high temperature of up to 200°F. Do not leave the unit ironing or steaming in one spot for a long time.
2.Before putting the steamer away for storage, continue to steam until no steam is spraying out of the panel. Be sure the steamer is completely cooled down and turned off before storing (approximately 30 mins).

TROUBLE SHOOTING

PROBLEM	REASON	SOLUTION
Unit fails to iron/steam.Indicator light does not illuminate.	The appliance is not plugged in	Connect the plug to the power supply
	The household power fuse is off or fused	Check the power supply or ask qualified electricians for help
Unit fails to iron/steam. Indicator light illuminates.	There is no water in the tank	Add water to the max line
	Temperature controller is not working	Add water to cool the temperature controller down before steaming again
	Unit is scaled and needs to be decalcified	Add a descaling solution of 1/2 distilledwater and 1/2 distilled vinegar to the water tank and turn on the steamer until the solution is empty. Refill the tank with distilled or filtered water and allow it to steam through the unit fully before steaming garments.
Ironing plate produces heat and steam, but the indicator light Is off.	Damaged indicator light.	Contact customer support.
Water ejects from ironing plate.	Boiler does not work.	Contact customer support.

CLEANING AND MAINTENANCE

1. If the appliance shows visible damage or if the power cord is damaged, please contact customer service for help and maintenance. Do not try to disassemble or repair.
2. Please pull out the plug and wait until the appliance is completely dry and cooled down before cleaning and/or storing.
3. Do not place the appliance in water, Use a cloth to clean the steamer and steam plate.

Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of you product. You'll receive:

Product Support Reminders and Alerts

We'll contact you with any important product maintenance reminders and alerts.

Faster Service

Supplying your information now saves your time should you need to contact us with questions regarding your product.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.salavusa.com/pages/product-registration-1

For information about replacement parts, or questions about your warranty:

Call:
Salav customer care
1(855) 725-2887

Email:
support@ctbrandco.com

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim.

Follow us on social media


SALAVNorthAmerica

salavusa

salavusa

salavusa

SALAV®

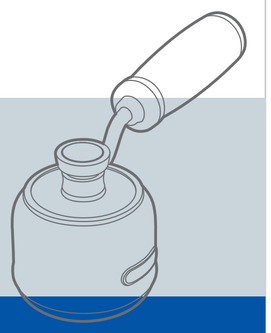

USER
MANUAL

Please read all instructions carefully before using this product.

RETRO EDITION 6 BLADE FABRIC SHAVER

MODEL NO: LR-900

www.salavusa.com

Dear Valued Customer


Thank you for purchasing this SALAV product. Please read this manual prior to using your SALAV appliance. For more product information, FAQ and customer support please visit our website at www.salavusa.com.

IMPORTANT SAFETY INSTRUCTIONS

1. Prior to first use, inspect all parts of the fabric shaver to make sure all parts are intact. The fabric shaver and its accessories should not be used if there are visible signs of damage to the body or accessories.
2. DANGER: Any appliance is electrically live even when the switch is off.
3. To reduce the risk of death by electric shock, always unplug the fabric shaver from its charger before using and before cleaning.
4. Do not reach for an appliance that has fallen into water. Do not immerse or let appliance be soaked in water. Do not use it while bathing or in the shower.
5. This appliance is not a toy and should not be used by children.Close supervision is necessary when this appliance is used near children, or individuals with certain disabilities. Unsupervised use could result in fire or personal injury.
6. Use this appliance only for its intended use. Do not use attachments not specified in this manual.
7. Do not use on animals, people, or plants. Do not use on clothes while being worn.
8. This appliance is meant to be used indoors. Store, charge, and use this appliance in a cool, dry place.
9. Do not charge the unit in areas with temperatures exceeding 100°F or below 50°F.
10. When unplugging the USB-C cable, grab the plug to unplug it ,as it may cause damage to the USB-C cable and the connector
11. Do not insert fingers, body parts, or metal objects into the blade section, as it may cause damage to the machine or personal injury.
12. Do not turn on the machine when removing or installing the blade mesh cover.
13. Do not forcefully press the thin blade mesh cover surface or strike it with a hard object
14. Do not directly use blades on clothing.
15. This product is only suitable for general clothing lint removal and should not be used for other purposes.

PRODUCT PARTS

1.Fabric Shield
2.Blade Cover
3.Blade
4.Fabric Shaver
5.Charging Port
6.Power Button
7.Handle
8.Handle Cover
9.Lint Roller
10.Roller Cover
11.USB-C Cable
12.Brush

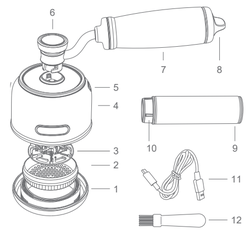

PRODUCT SPECIFICATION

Input Voltage: 3.7V
Output Power: 3W
Recharge Voltage: 4.2V
Product Dimension: 7.87x3.14x4.80 inches

OPERATING THE FABRIC SHAVER

1.Press the power button to power on the unit. White light will illuminate when unit is turned on.



2. Move the fabric shaver in an up and down motion or a side to side motion, using light pressure to remove lint from clothes.



OPERATING THE LINT ROLLER


1.Turn the handle counterclockwise when unit is off to unlock



2.Separate the fabric shaver from the handle



3.Turn the handle cover counterclockwise to unlock




OPERATING THE LINT ROLLER

4.Remove the lint roller and replace the handle cover. Turn the handle cover clockwise to lock into place.

5.Attach the lint roller to the handle following the arrow shown and turn clockwise to lock into place.

6. Use the lint roller in an up and down or side to side motion for optimal lint removal.




STEPS FOR REPLACING THE LINT ROLLER


1. Turn the handle cover counterclockwise to unlock.



2. Remove the roller from inside the handle.



3. Gently pull the roller cover off to release the lint roller



4. Remove the old roller and replace it with a new one.



5. Press the roller cover back onto the lint roller end



CLEANING INSTRUCTIONS

1.Ensure the product is turned off and not connected to a power supply and/or charger



2.Rotate the fabric shield counterclockwise to remove.Discard any fabric shavings inside of the main unit.



3. Rotate the blade cover counterclockwise and remove to gain access to the blade.



4. Use the brush to clean the blade cover and blade compartment



5. After cleaning, reinstall the blade,blade cover, and fabric shield. Twist the blade cover and fabric shield clockwise to secure.



6. Use a damp cloth to clean the main unit.



Charging

1.Use, charge, and store the appliance at a temperature between 50° and 100°F
2.Charge appliance by inserting USB-C cable into the charging port and plug into a power source
3.Indicator light will flash white while charging
4.Full charge to capacity takes 2 hours
5.Fabric shaver use time at full charge: 90 mins



WARNING

1.If the battery begins to leak, do not touch it with your hands. If it comes into contact with the eyes or skin, wash immediately with water and consult a doctor

2.This product uses a polymer lithium-ion battery. Dispose in accordance with applicable regulations. Battery should be disposed of in a location that is specifically designated to safely recycle. Do not burn or bury the battery or unit

3.Do not disassemble the battery or short-circuit the battery equipment

4. Make sure charging port is clear of debris before charging the unit

5.Charge the unit at least once every 6 months to extend battery life

TROUBLESHOOTING

Problem	Solution
What if the machine does not work?	1. Check if the fabric shield and blade cover is screwed on properly 2. Check if the machine has power and/or needs to be charged 3. Check if the machine is jammed or needs to be cleaned 4. Contact our customer support team for further assistance
What if lint is not being removed when using?	1. Check if the fabric shield and blade cover is screwed on properly 2. Check if the machine has power and/or needs to be charged 3. Check if the machine is jammed or needs to be cleaned 4. Check if the blade is worn. Contact our customer support team for further assistance
What if there is a loud noise when the machine starts?	1. Check if there are any foreign objects stuck in the blade and/or blade cover 2. Check if the blade is worn or damaged. Contact our customer support team for further assistance
What if the machine will not charge?	1. Check if anything is stuck in the charging port 2. Make sure the USB-C cable is properly plugged into the charging port 3. Check the USB-C cable for any damage 4. Contact our customer support team for further assistance

Warranty exclusions and limitations

This Limited Product Warranty applies only to the original purchaser of the SALAV branded product that was purchased from SALAV directly or SALAV's authorized reseller. Without limiting the foregoing, the Limited Product Warranty does not apply to any (a) SALAV products and services other than the Brand New SALAV branded products which are purchased directly from SALAV or from SALAV's authorized reseller, (b) non-SALAV products, even if included or sold with a Product, including, without limitation, any counterfeit products, (c) products that are, or SALAV reasonably believes to be, stolen, (d) consumables (such as cleaning pads). This Limited Product Warranty does not apply to third party products or accessories, including but not limited to products with the "Made for SALAV" or "Works with SALAV" logos or advertising.

This Limited Product Warranty does not apply to a product or part of a product that has been replaced, repaired, serviced, altered, refurbished or modified by anyone who is not authorized by SALAV, nor does it apply to any cosmetic damage such as scratches and dents. In addition, this Limited Product Warranty does not apply to damage or defects caused by (a) use with non-SALAV products such as non-SALAV steamer liquid; (b) accident, abuse, misuse, mishandling, flood, fire, earthquake or other external causes; (c) normal wear and tear or aging of the product such as discoloration of product; or (d) operating the product (i) outside the permitted or intended uses described by SALAV under SALAV's Product User Manual , (ii) not in accordance with instructions provided by SALAV, or (iii) with improper voltage or power supply, water or other add-on products.
No SALAV, authorized reseller, distributor, agent, reseller, or employee is authorized to make any modification, extension or addition to this Limited Product Warranty. If any term contained herein is held to be illegal, void or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

If you have any questions regarding this warranty, you may contact us through our website: www.salavusa.com

Limitation of Damages

Except to the extent prohibited by applicable law, SALAV shall not be liable for any incidental, indirect, special or consequential damages, including, without limitation, loss of profits, revenue, resulting from any breach of express or implied warranty or condition or under any other legal theory, even if SALAV has been advised of the possibility of such damages. SALAV warranty and liability is only limited to replacement of the defective item.

Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of you product.
You'll receive:
Product Support Reminders and Alerts
We'll contact you with any important product maintenance reminders and alerts.
Faster Service
Supplying your information now saves your time should you need to contact us with questions regarding your product.
Special Promotions
Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.salavusa.com/pages/product-registration-1

For information about replacement parts, or questions about your warranty:

Call:
Salav customer care
1(855) 725-2887

Email:
support@ctbrandco.com

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim.

Follow us on social media

SALAVNorthAmerica
salavusa
salavusa
salavusa

Explore more videos