




Electric Reclining Chair Sofa

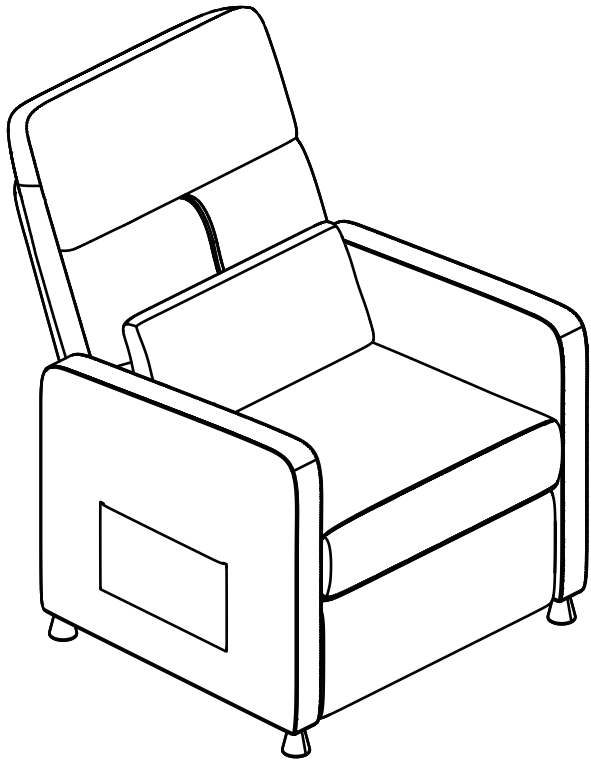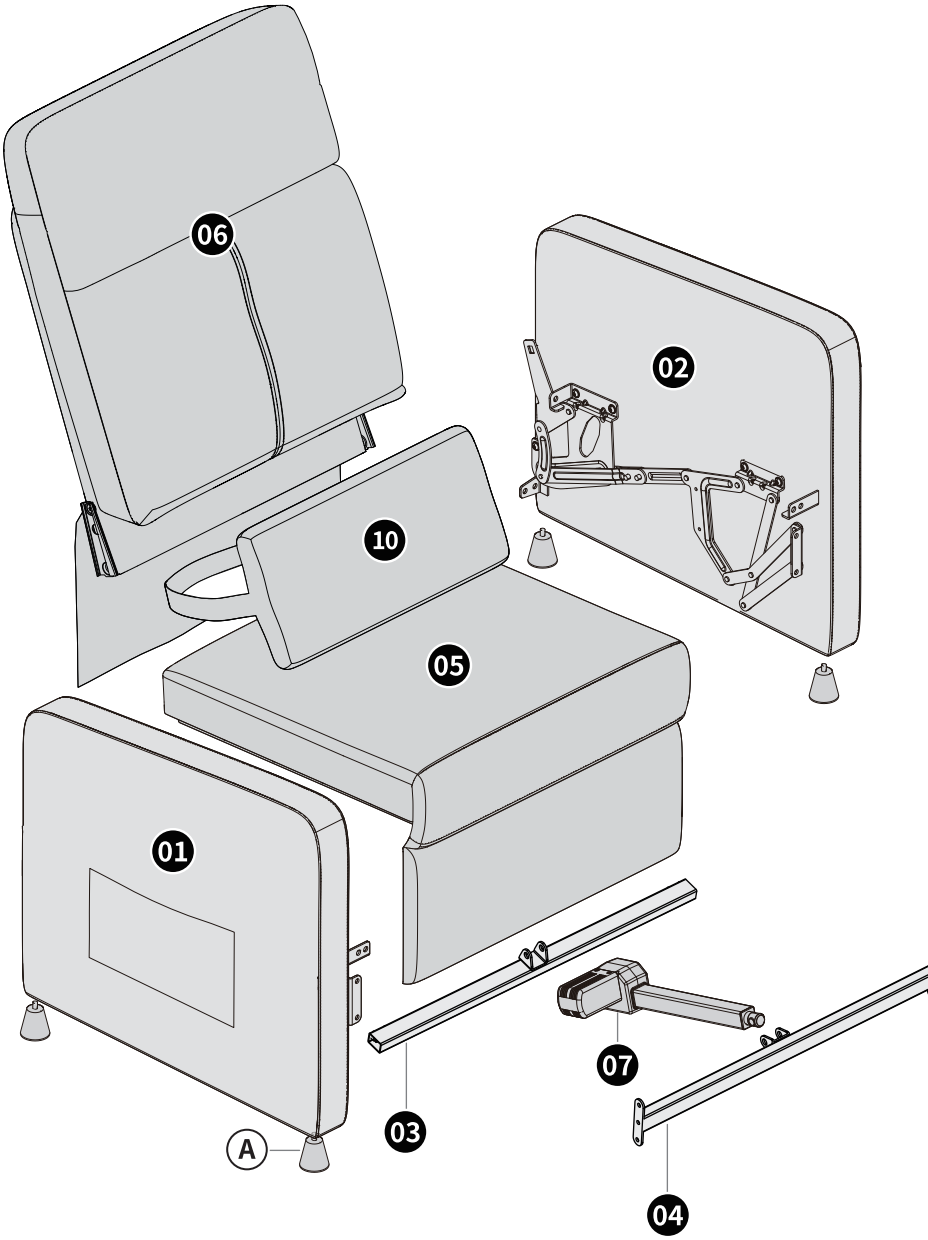



06
02
10
05
01
A
03
07
04

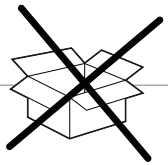




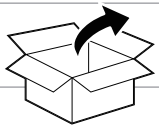




A x 4




M8 x 20mm
B x 10




M6 x 11mm
C x 4




M6 x 15mm
D x 4

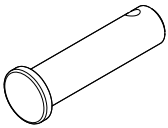

Ø10 x 40mm
E x 2

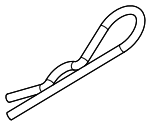


F x 2



3/16″ (5mm)
G x 1


Spare parts




M8 x 20mm
B x 2




M6 x 11mm
C x 1




M6 x 15mm
D x 1

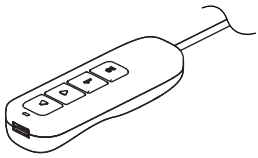


08 x 1

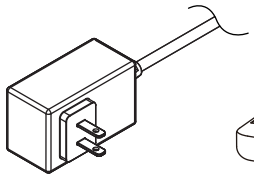

09 x 1

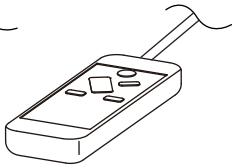



11 x 1

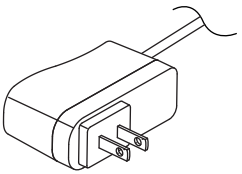


12 x 1


1

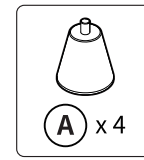

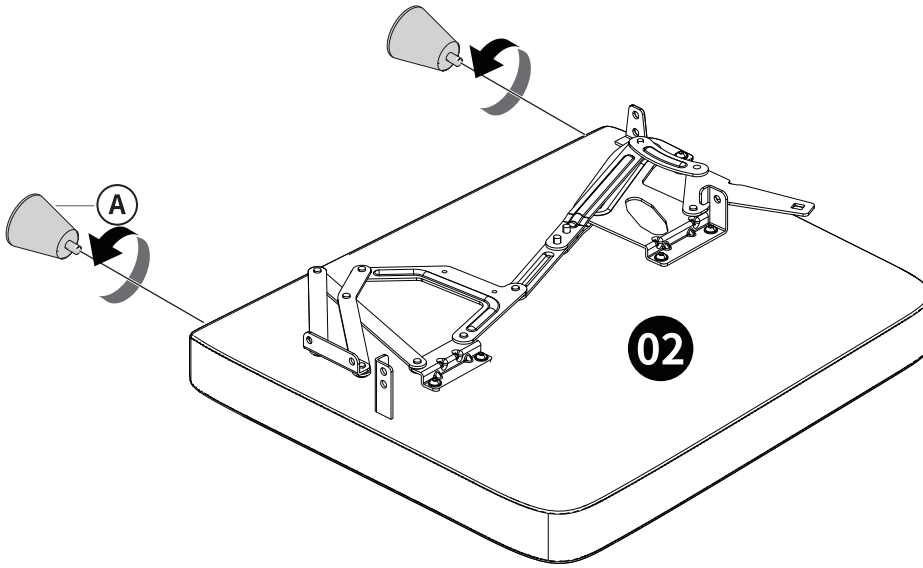


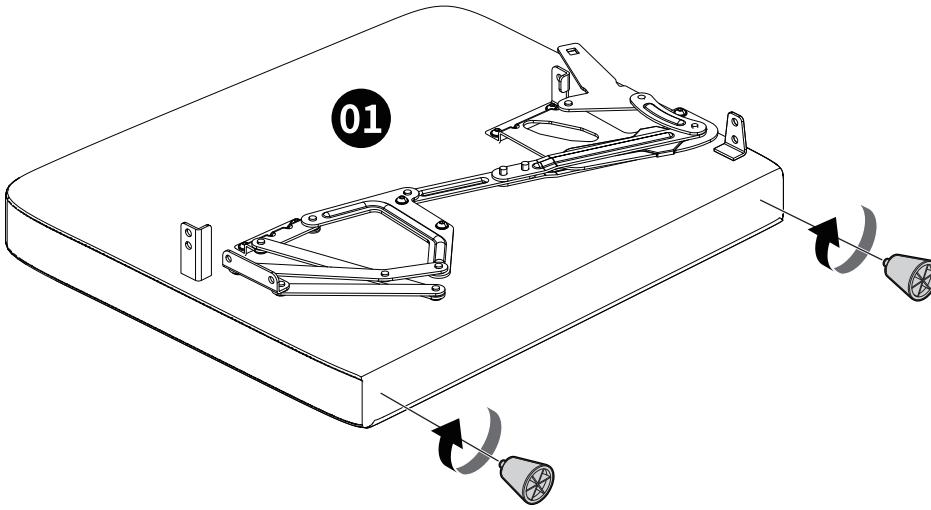


2

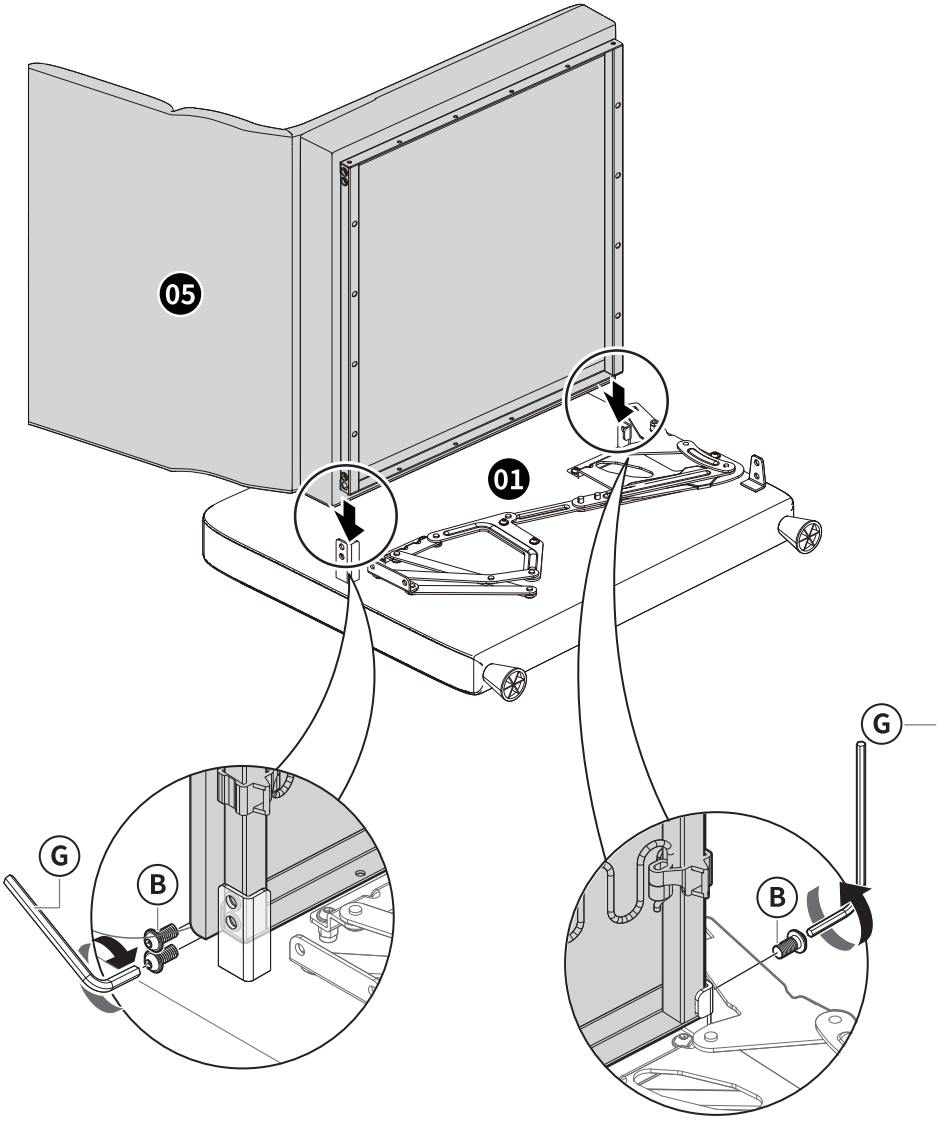


3

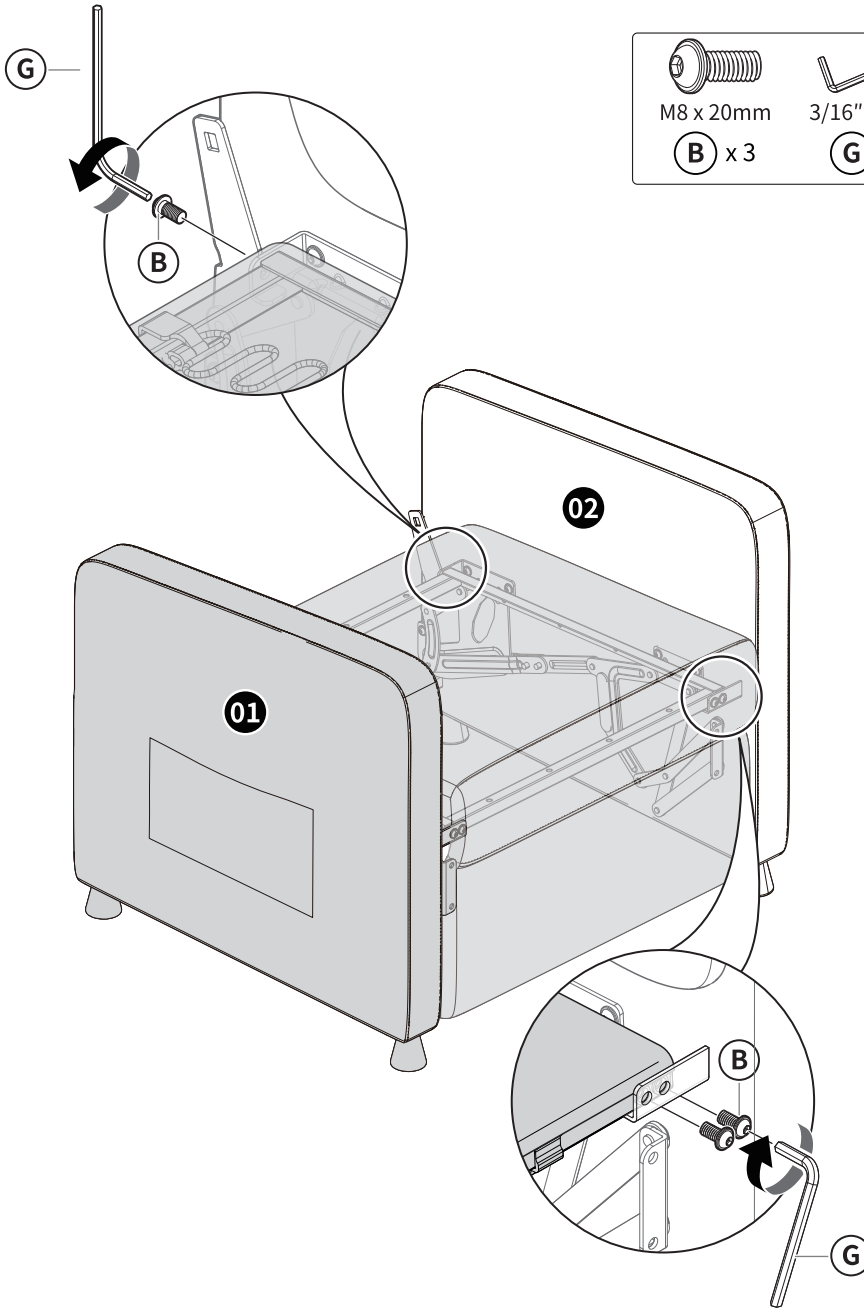



4

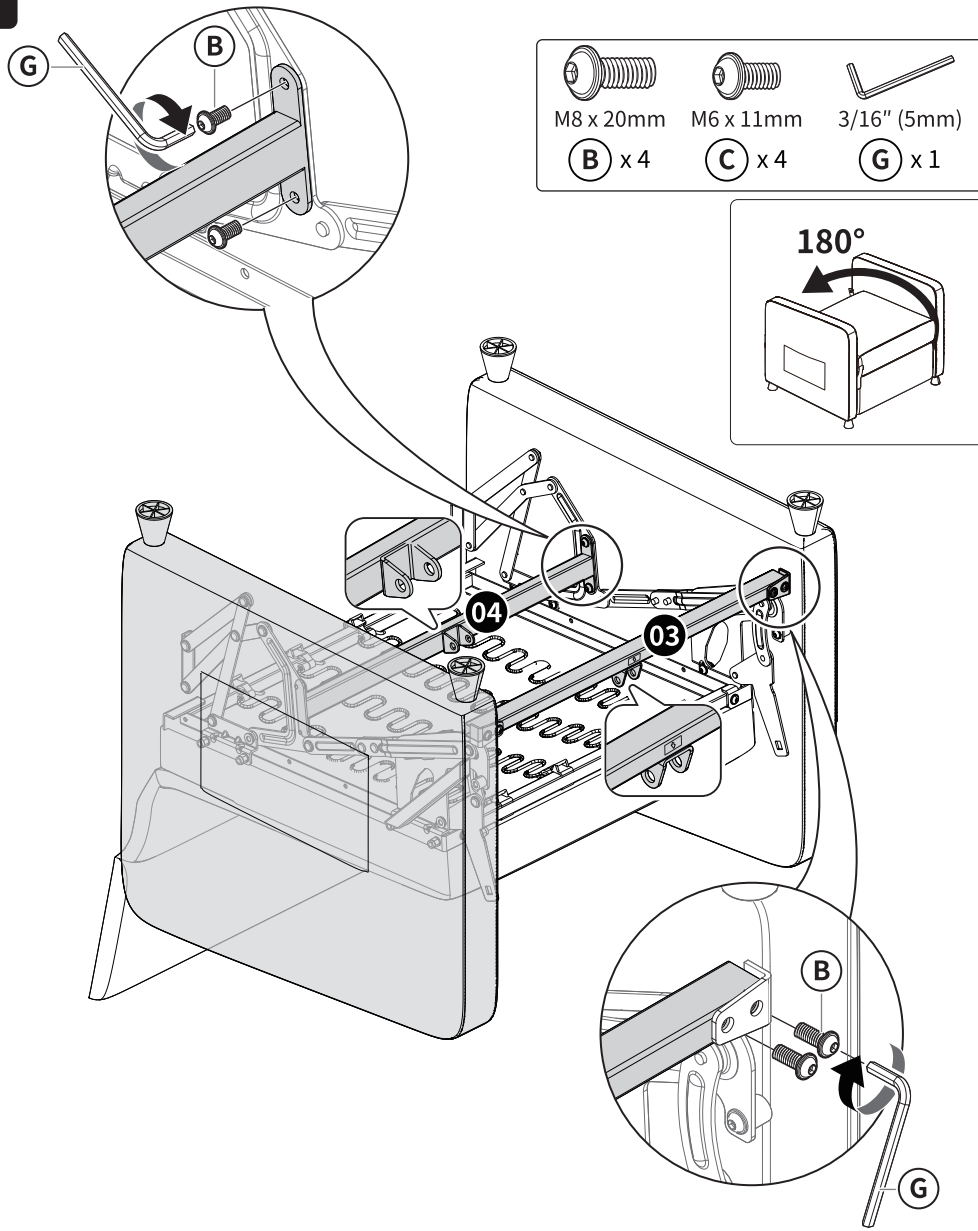


5

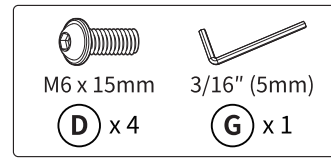


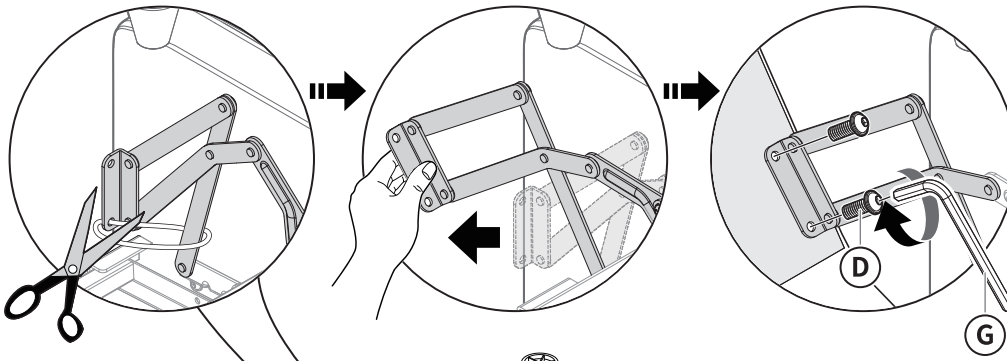

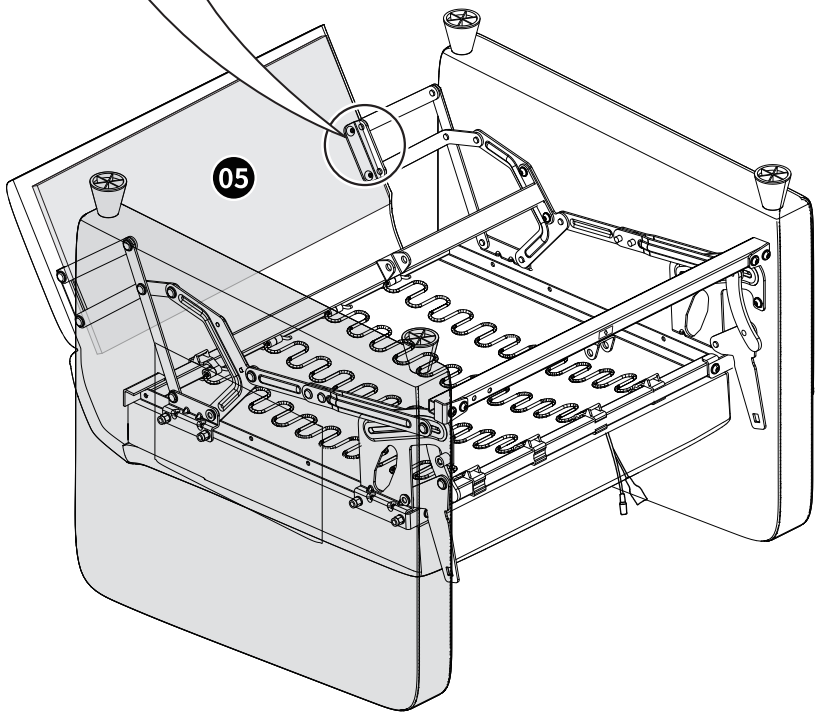


6

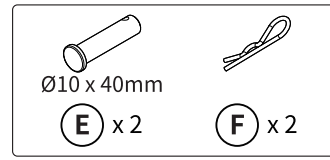


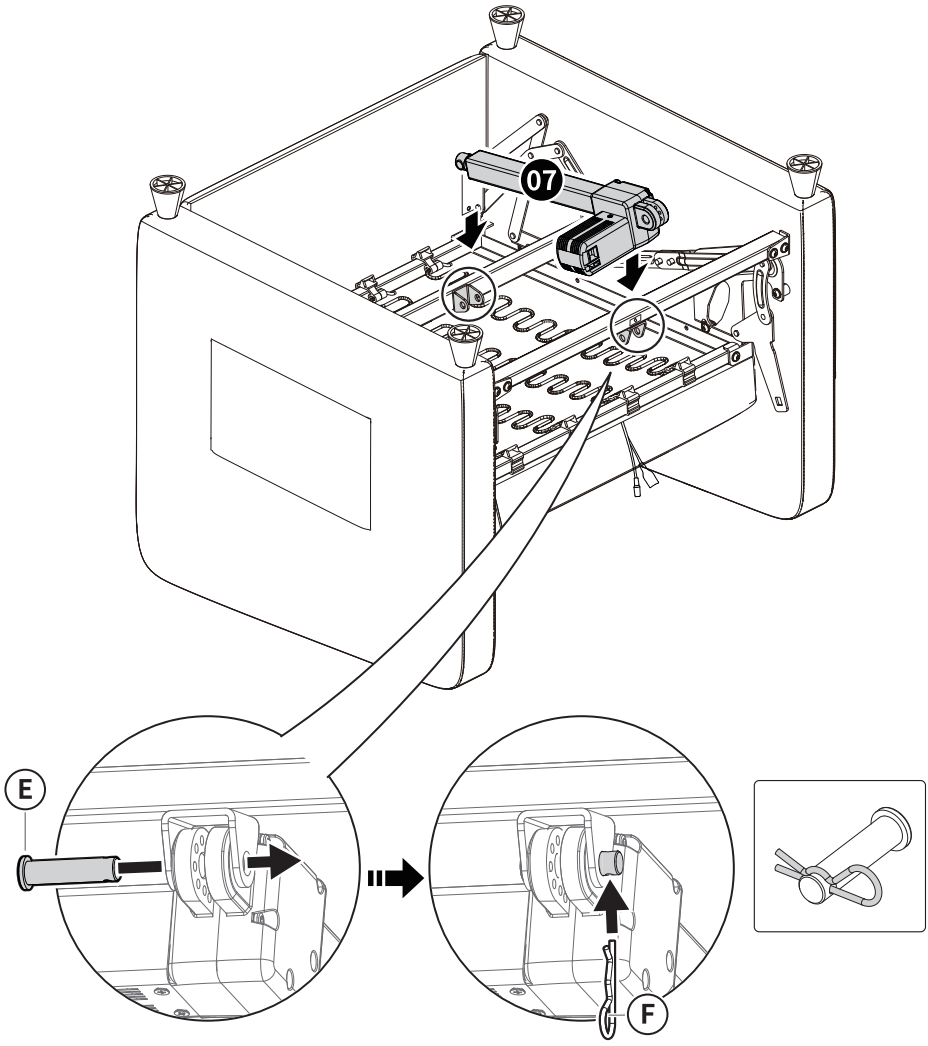


7

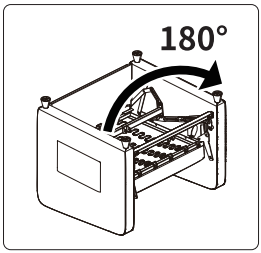


8

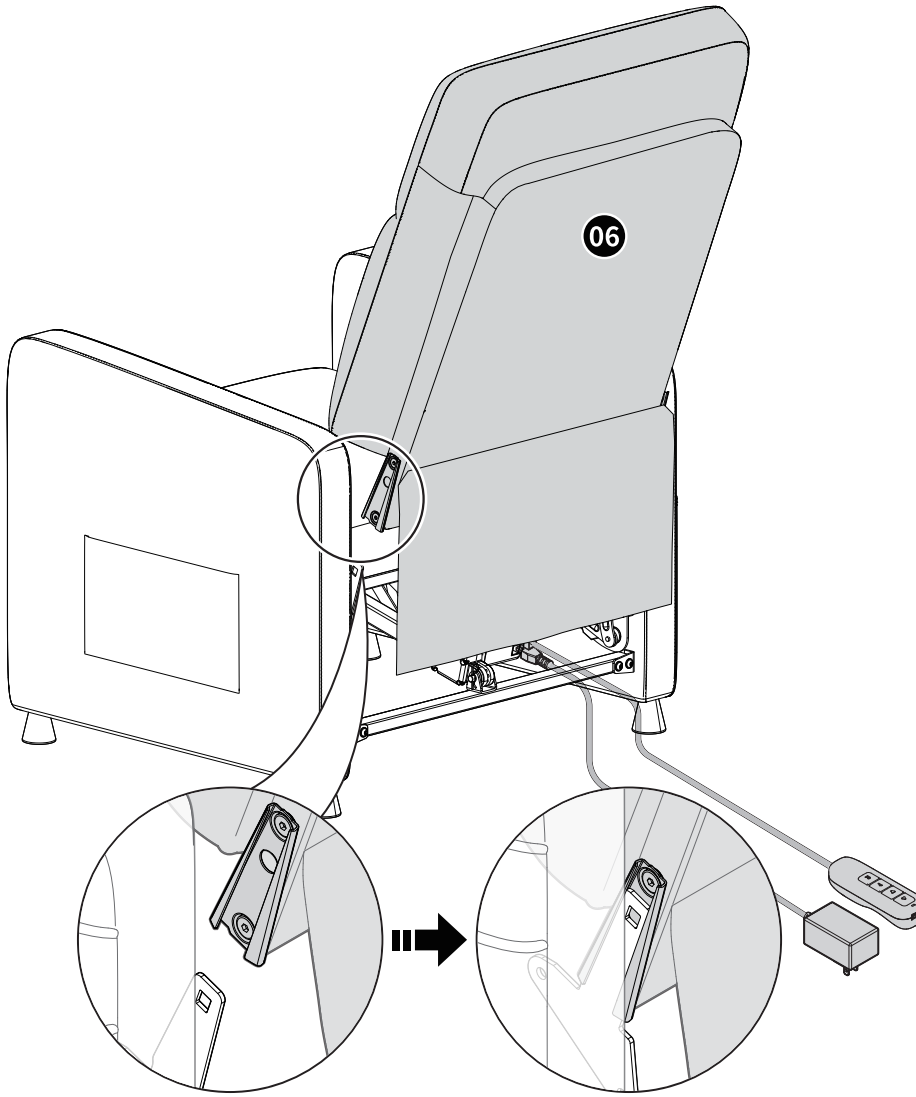


9

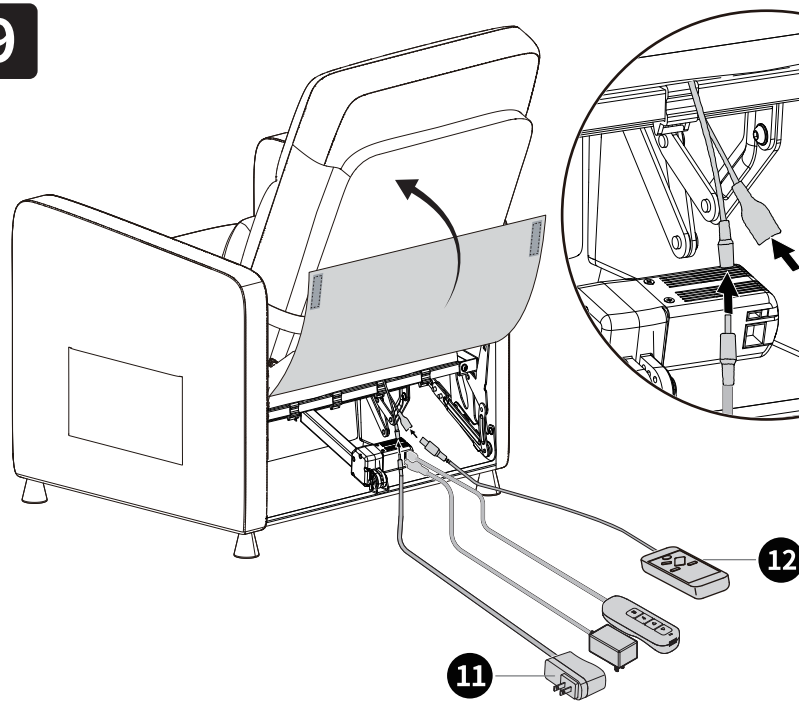


10

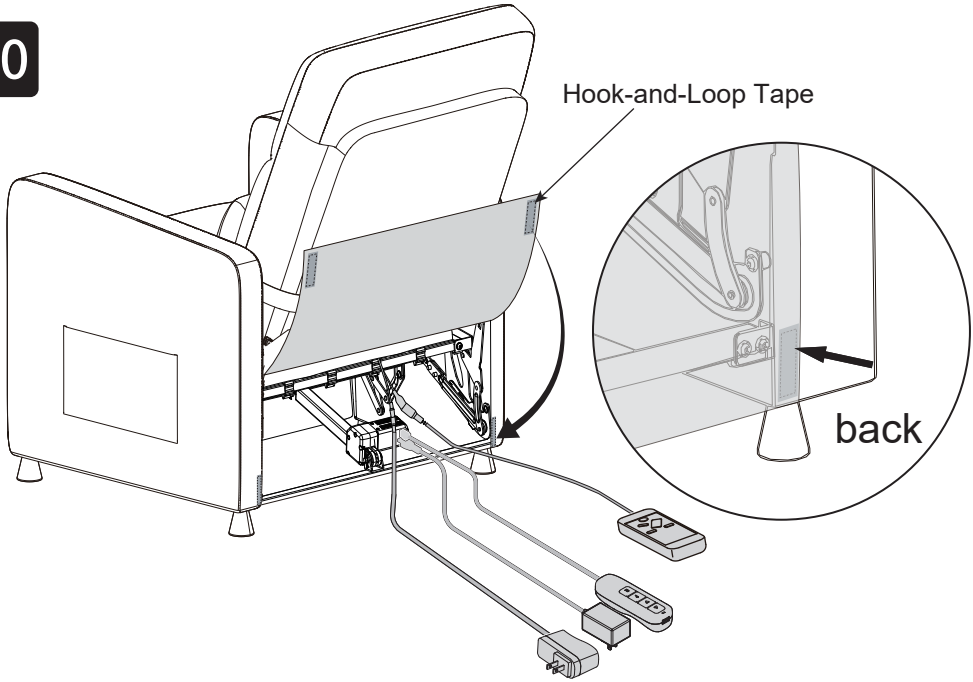



11

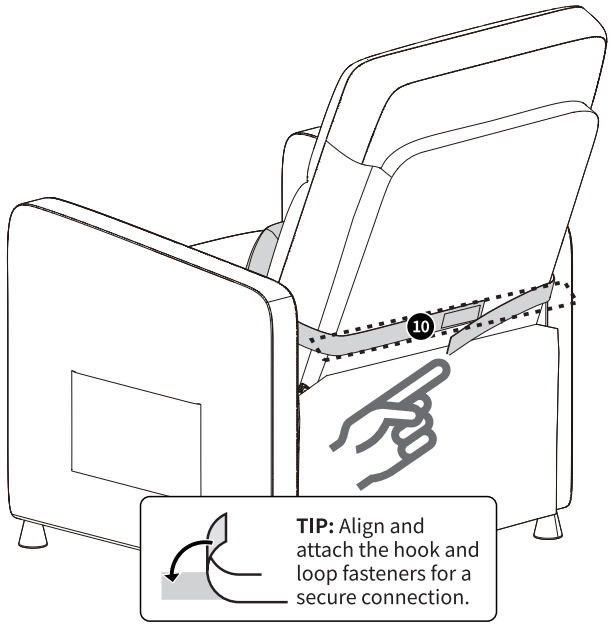
10
TIP: Align and attach the hook and loop fasteners for a secure connection.

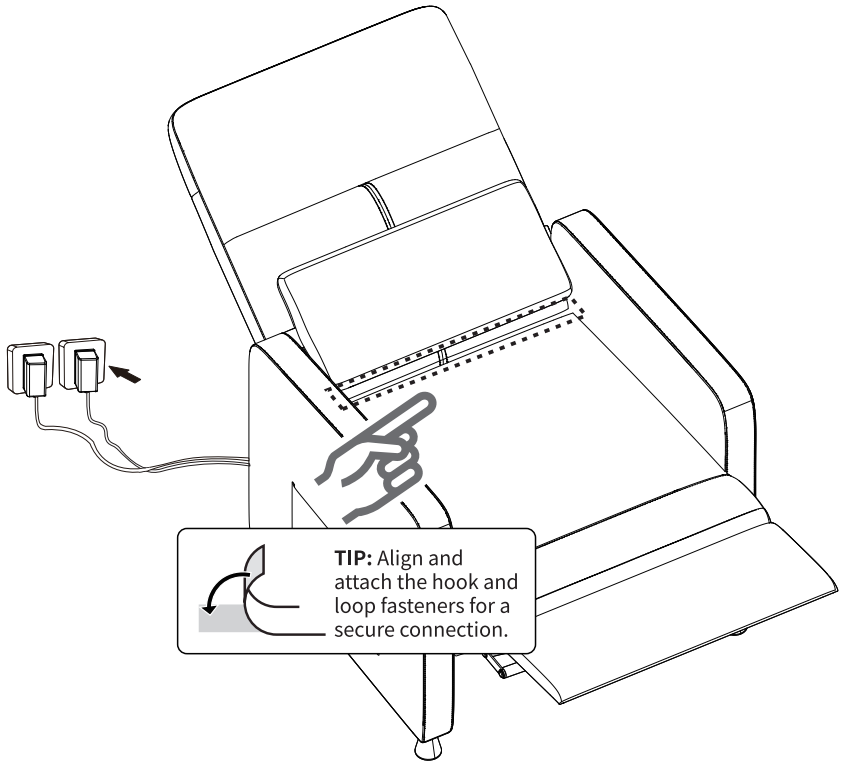
TIP: Align and attach the hook and loop fasteners for a secure connection.

The sofa is tidied up before use


The sponge requires rebound time after compression,
which can be patted to correct the position and accelerate rebound

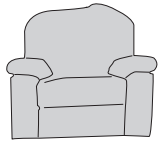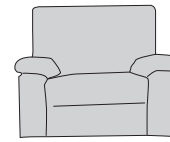Before   After 





① 

② 

③ 

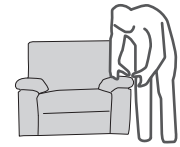
④ 

Attention Error example

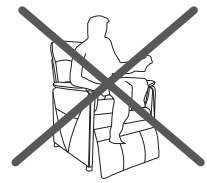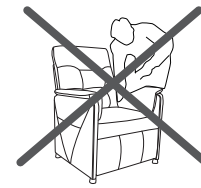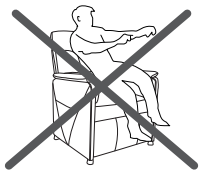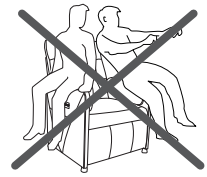
Manual controller instructions

A. Describes how to use normal keys

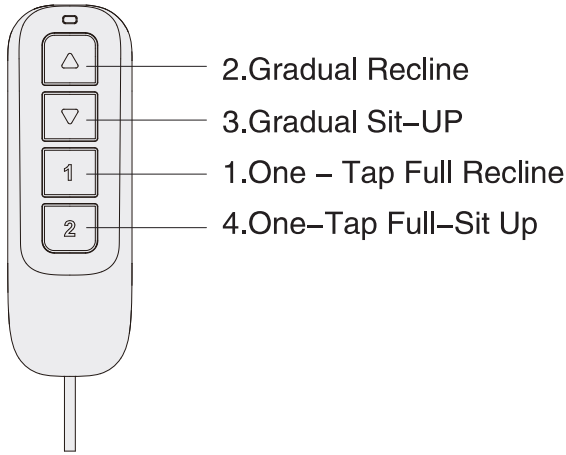

B. Remember the instructions for position adjustment

1. Regular Setup Guide

1 : Tap this button, and your couch will start reclining smoothly until it reaches the memorized position（the default position is fully flat, if any adjustment, refer to the instruction of "Memory Function"）

△ : Long press and hold this button to make the couch recline. Release whenever you reach your favorite reclining angle.

▽ : Long press this button to raise the couch. Let go when you've found the perfect sitting position.

2 : Tap this button, and your couch will move up steadily until it reaches the memorized position（the default position is fully upright, if any adjustment, refer to the instruction of "Memory Function"）

2. Memory Function


Save Your Favorite Position: Hold down the 1 or 2 button for 3 seconds. Your current couch position will be saved as a memory.

Recall Your Saved Position: Simply tap the 1 or 2 button. The couch will adjust to your saved memory position.

3. Resetting

If you encounter any problems during use, press and hold both the 1 and 2 buttons for 5 second, you can force the electric sofa to return to an upright position.

Manual controller instructions

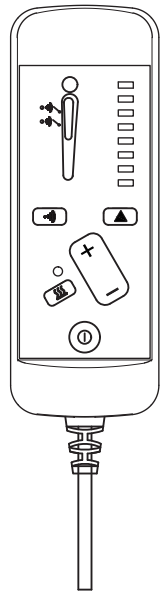

First of all, check if local voltage is consistent with the transformer power supply， If available， then plug in, to set up an electric circuit.

1. The product needs DC 12V power supply.
2. Part buttons: Press the button to switch the massage area.
3. Mode button: Press the button to switch the massage modes.
4. Heating button: Press the button to turn on or off the heating function.
5. Intensity enhancement button: Press the button to increase the intensity of the vibration massage.
6. Intensity reduction button: Press the button to reduce the intensity of the vibration massage.
7. Power button: Press the button to turn on or off the vibration massage.

Limited Liability & Warning

No Unauthorized Modifications/Repairs: Do not modify or attempt to repair this product unless you are an authorized technician. Unauthorized actions may create hazards and void all warranties

Misuse & Non-Compliance: We are not liable for any injury, damage, or loss resulting from:

(a) misuse, abuse, neglect, or improper installation;

(b) failure to follow instructions or safety precautions;

(c) use of unauthorized parts/accessories;

(d) unauthorized modifications/repairs;

(e) accidents, natural disasters, or external causes.

If you doubt any step of installation or operation, stop using the product and contact authorized service or the customer support.

LIMITACIÓN DE RESPONSABILIDAD Y ADVERTENCIA

Modificaciones o Reparaciones No Autorizadas: NO modifique ni intente reparar este producto a menos que sea un técnico autorizado. Las acciones no autorizadas pueden generar riesgos y anularán todas las garantías.

Uso Indebido e Incumplimiento: No asumimos responsabilidad alguna por lesiones, daños o pérdidas que resulten de:

(a) uso indebido, abuso, negligencia o instalación incorrecta;

(b) incumplimiento de las instrucciones o precauciones de seguridad;

(c) uso de piezas o accesorios no autorizados;

(d) modificaciones o reparaciones no autorizadas;

(e) accidentes, desastres naturales o causas externas.

Si tiene dudas sobre algún paso de la instalación o el funcionamiento, deje de usar el producto y póngase en contacto con el servicio técnico autorizado o con atención al cliente.