

# Assembly Instruction

Product Name: OUTDOOR FIREPLACE -STEEL

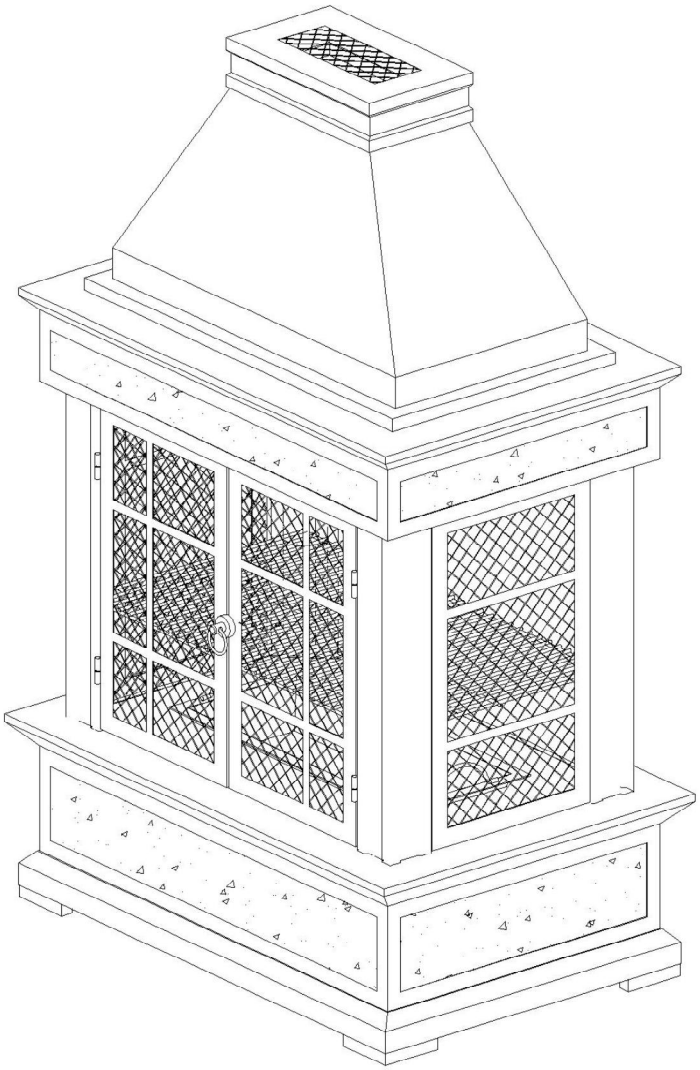

# PACKAGE CONTENTS

| PART | DESCRIPTION | QUANTITY |
|---|---|---|
| A | Chimney cover | 1 |
| B | Chimney | 1 |
| C | Tile decoration frame | 1 |
| D | Door damper | 1 |
| E | Grill | 1 |
| F | Back panel | 1 |
| G | Side screen panel | 2 |
| H1 | Left door screen panel | 1 |
| H2 | Right door screen panel | 1 |
| J1 | Door handle | 1 |
| J2 | Door lock | 1 |
| K1 | Back column | 2 |
| K2 | Left column | 1 |
| K3 | Right column | 1 |
| L | Bowl | 1 |
| M | Tile decoration base | 1 |
| N | Base bottom | 1 |
| P | Poker | 1 |
| Q | PVC cover | 1 |

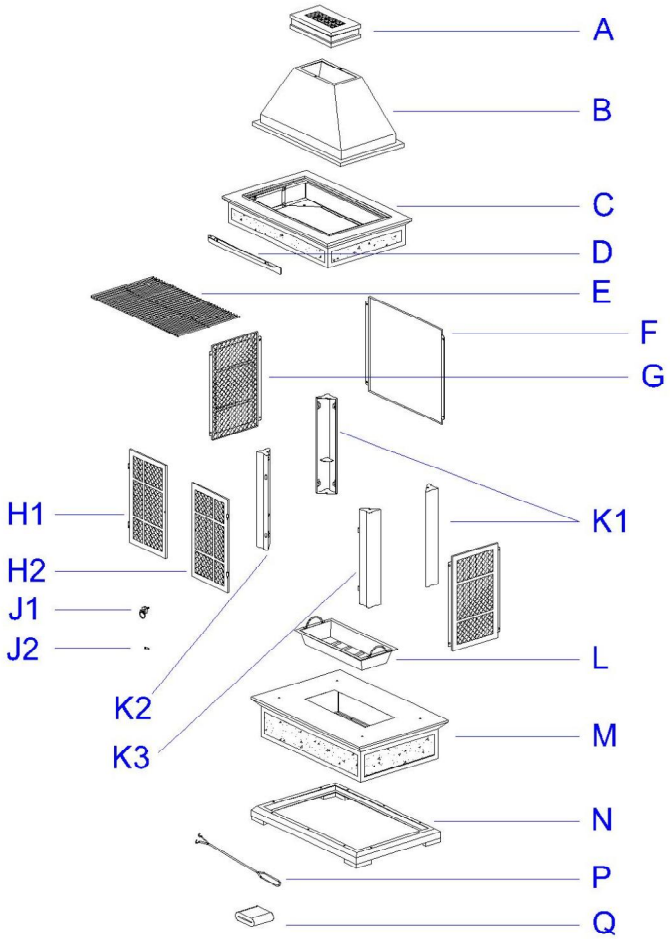


# HARDWARE KITS LIST

| | | |
|---|---|---|
| S1<br>M6*12 | 34 |  |
| S2<br>M6 | 2 |  |
| S3<br>M6 | 1 |  |

# SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNINGS:

- This fireplace is intended for outdoor use only. **Do not** use on wooden decks.
- This fireplace is intended to burn wood logs only. **Do not** burn coal, leaves, or other combustible materials in the fire bowl.
- Not for use by children. Keep children and pets away from the fireplace.
- The fireplace is hot. Use with caution. **Do not** touch the hot fire bowl with bare hands.
- Never leave the burning fire bowl unattended, and always extinguish the fire completely before leaving the fireplace.
- **Do not** use near flammable or combustible objects or materials.
- When the fireplace is in use, the handle on the mesh screen can reach extreme temperatures that can cause serious injury to an unprotected hand. Use a poker or an appropriate heat resistant glove or pad when handling.
- Check local fire regulations and municipal by-laws for safe use.
- Some parts may contain sharp edges especially as noted in the manual. Wear protective gloves if necessary.
- The metal may become very hot during and after use. **Do not** touch the metal or try to move the unit while hot.

- Keep children away from the unit while in use until the fire is extinguished and the metal has cooled.
- **Do not** use on a wooden surface, or on grass, near walls or flammable articles, or under overhead coverings.
- Keep at least 2 feet away from all other articles during use.
- Use only the fuel type(s) specified in the instructions. Using other fuel types is dangerous and could cause injury.


# PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

**Estimated Assembly Time: 15 minutes.**


Tools Required for Assembly: M6 Wrench (Included) and Phillips Screwdriver (Included)



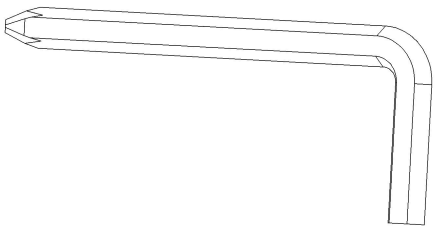


# ASSEMBLY STEPS


**Step1**: Attach Base bottom (N) to Tile decoration base (M) using 10PCS M6 x 12mm Bolts (S1) . Tighten all bolts with Phillips Screwdriver (included). Then turn it over so that the front is facing up.

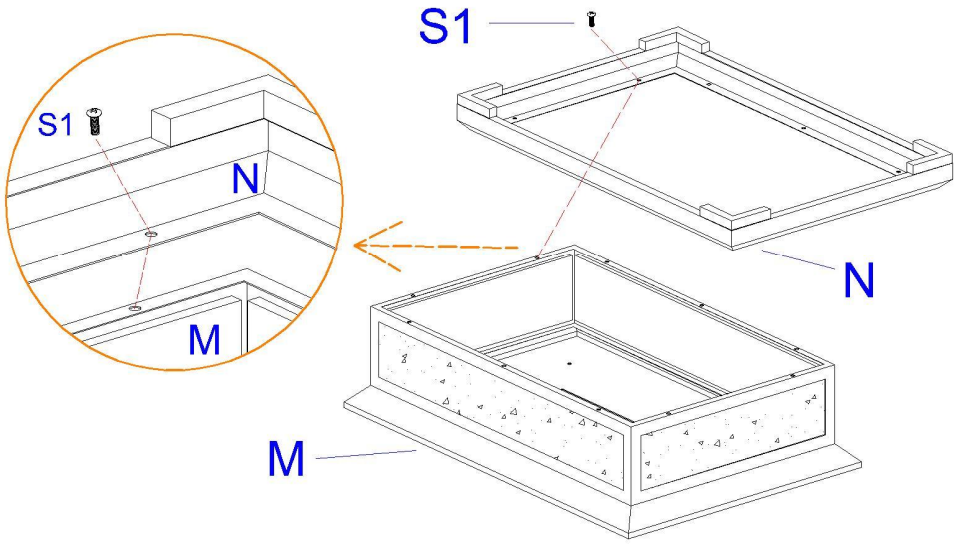



**Step2:** Attach 2pcs back column (K1) to base using 2PCS M6 x 12mm Bolts (S1). and attach left and right column (K2, K3) to base using 2PCS M6 x 12mm Bolts (S1), then tighten all bolts with Phillips Screwdriver (included).

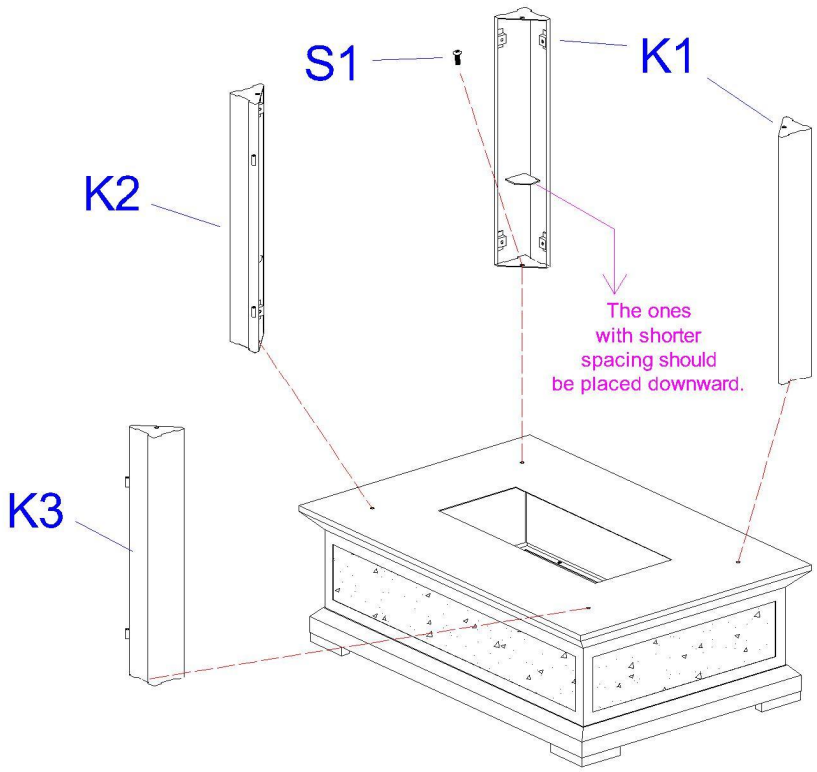



**Step3**: Attach Back panel (F) and side screen panel (G) to column using 12PCS M6 x 12mm Bolts (S1). Tighten securely with screwdriver (included).

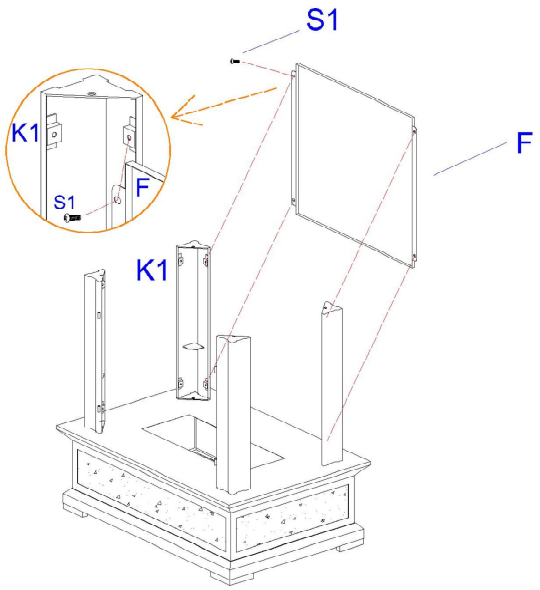

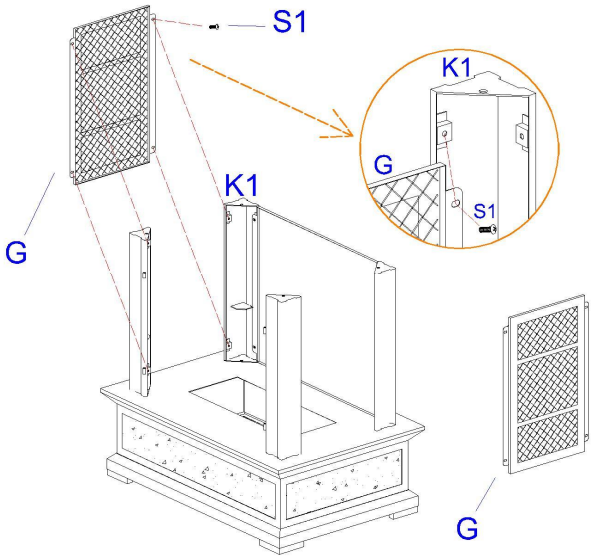


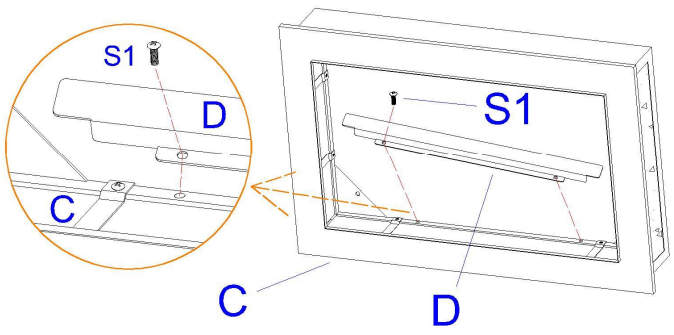

**Step4:** Attach door damper (D) to Tile decoration frame (C) using 2PCS M6 x 12mm Bolts (S1). Attach the tile decoration frame (C) to column using 4PCS M6 x 12mm Bolts (S1) , Tighten all bolts.

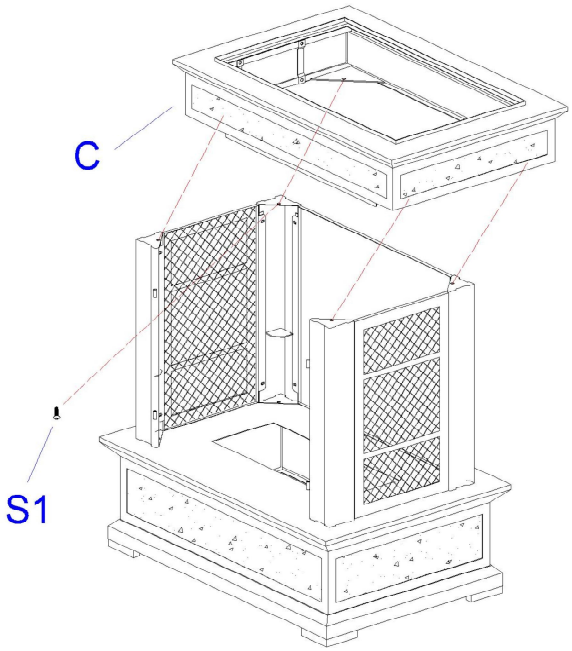



**Step5:** Attach Chimney Cover to Chimney using 2pcs M6x12mm Bolts (S1), tighten all hardware kits with screwdriver (included).Then put on the top of fire place body.

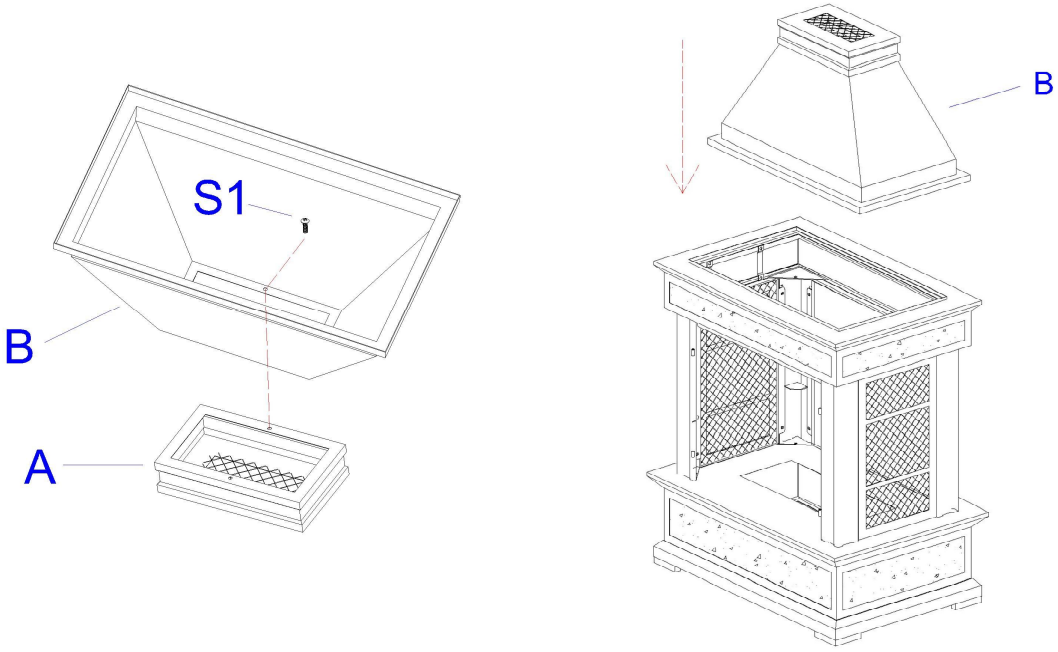


**Step6:** Slip the hinges on left door panel (H1) and right door panel (H2) down over the hinges on Left and Upright column.Tighten the door handle(J1) into left door hole using door lock (J2) ,2pcs flat washer (S2) and 1pc M6 nut (S3). Tighten securely with wrench and screwdriver (included).

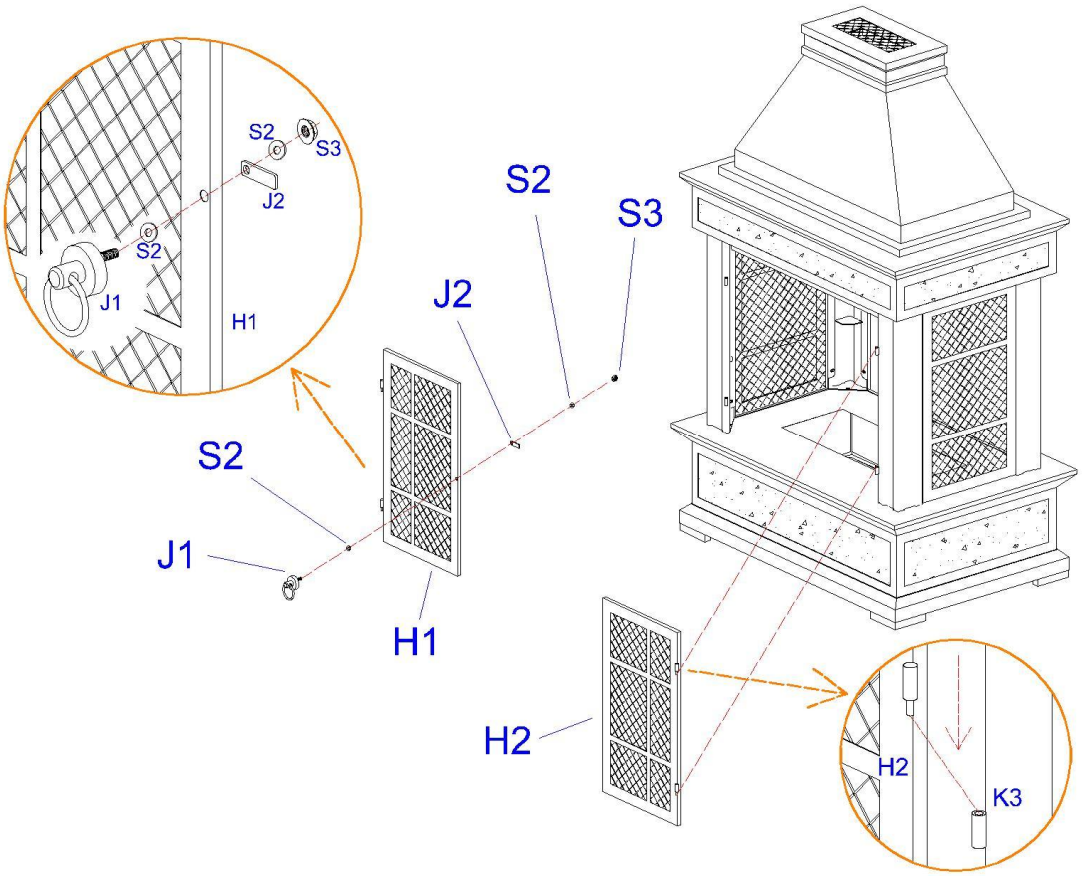

**Step7:** Place the Bowl (L) and cooking grill (E) into the fire bowl. Tilt （E） at a certain angle to make it easier to fit in.

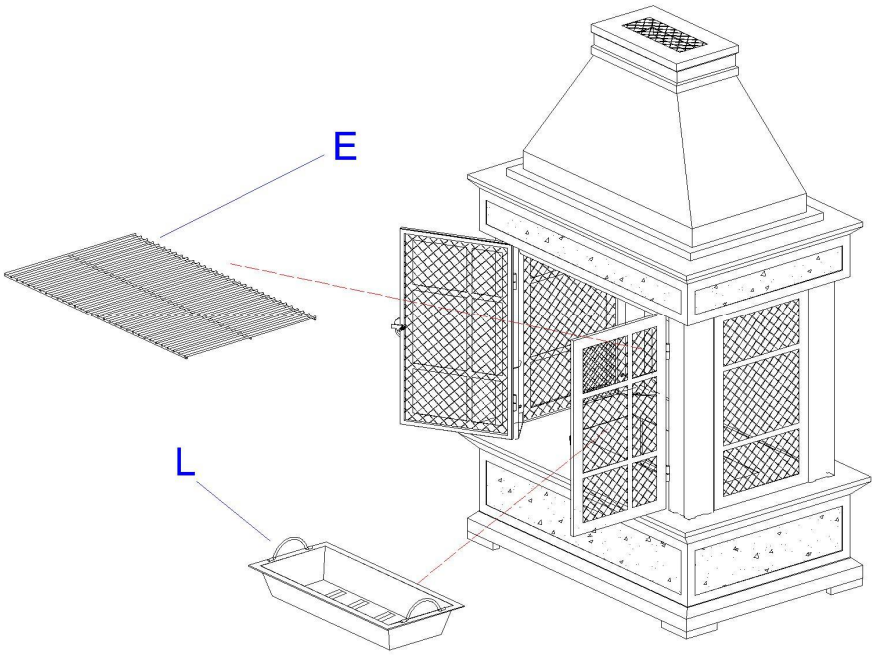


**Step8:** Put the poker (P) and PVC cover (Q) beside the assembly fire place. Your fire place is now ready for use. Keep Poker (P) and PVC cover (Q) near fire place for use at anytime.

