
Lighted Reindeer and Sleigh

Instruction Manual

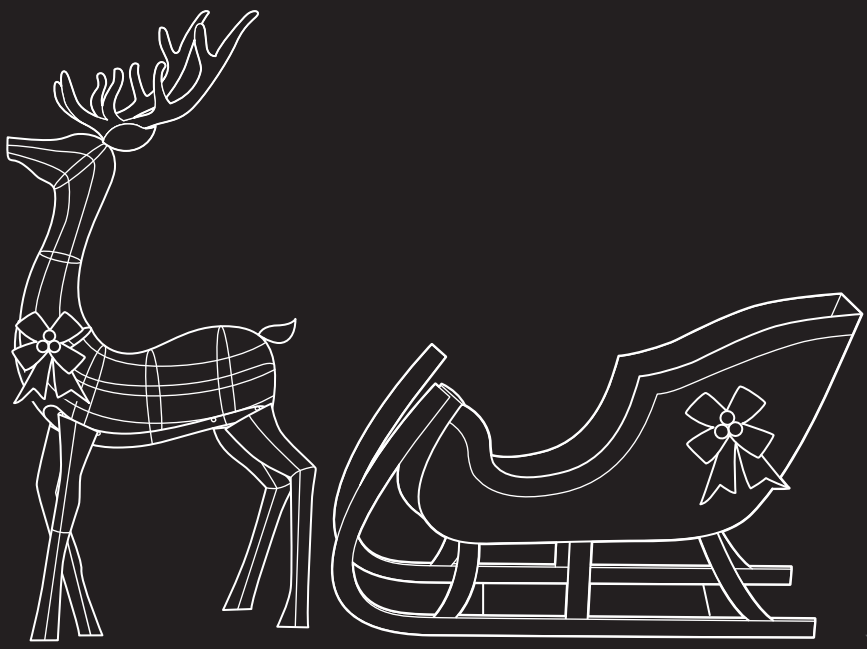


ⓘ NOTE

- Please retain these instructions for future reference.
- This product is not intended for permanent installation or continuous use.
- Unplug the product when not in use or when left unattended.
- Ensure the power supply matches the rated voltage.
- If any parts are missing, broken, damaged, or worn, discontinue use of this product until repairs are made or replacement parts are installed.
- Do not use this product in any manner inconsistent with the manufacturer's instructions as doing so may void the warranty.


⚠WARNING

- Do not plug into a wall outlet until the product is fully assembled and all lights are properly connected.
- Do not use in extreme weather conditions.
- This product contains glitter, which may cause mess or damage. Use caution when assembling.
- Do not allow glitter to contact your eyes or face, as this may result in skin irritation or injury.
- Keep the product away from all heat sources (fireplace, stove, heater, etc.).
- Please use the provided stakes to properly secure the reindeer.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.

PACKAGE CONTENTS

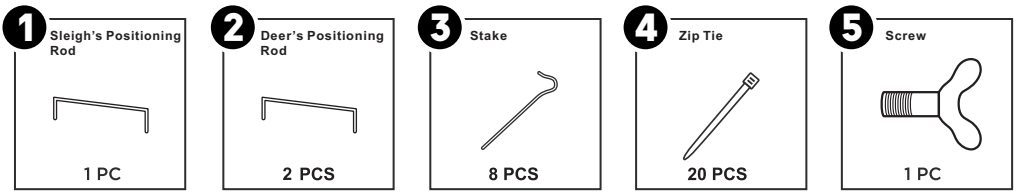


PACKAGE CONTENTS

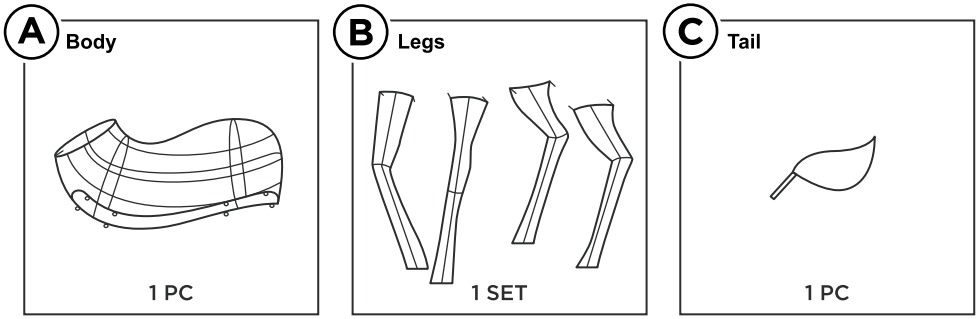

PACKAGE CONTENTS

D Head




1 PC

E Antlers



1 SET

F Bow

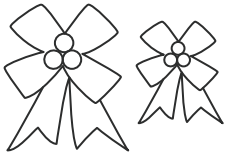

1 SET

G Left Side Panel




1 PC

H Right Side Panel




1 PC

I Base Panel

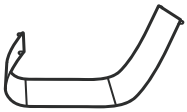


1 PC

J Left Runner

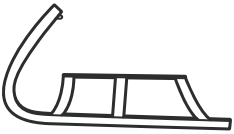

1 PC

K Right Runner

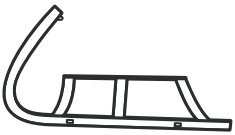


1 PC

Parts are loosely connected by string lights. Handle with care, as the electrical wires link the sections together.


PRODUCT ASSEMBLY

1 Insert the legs Ⓑ into the designated holes on the body Ⓐ .

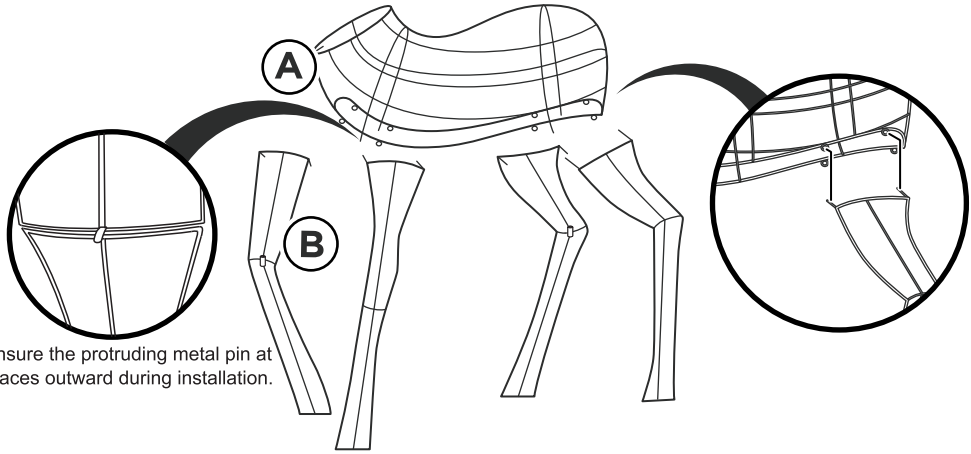


NOTE: Ensure the protruding metal pin at the joint faces outward during installation.

2 Insert the positioning rod ❷ into the holes on the front legs. Repeat for the back legs. Then attach the tail Ⓒ to the rear of the body.

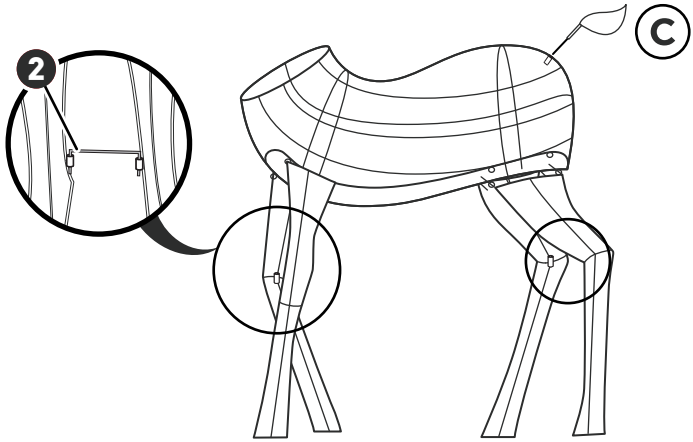


PRODUCT ASSEMBLY

3 Attach the head (D) to the front of the body. Secure the back of the neck as shown.

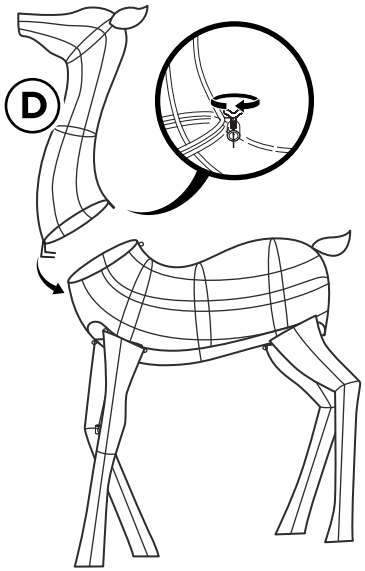


4 Insert the antlers (E) into the head.

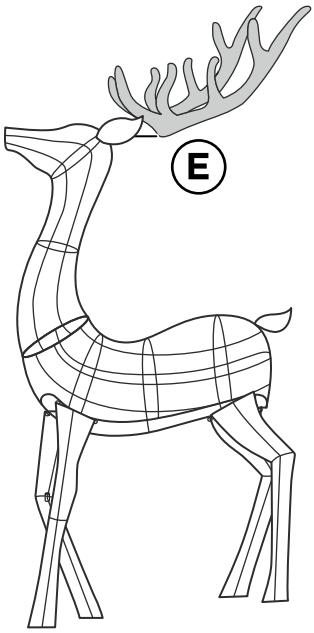


PRODUCT ASSEMBLY

5 Attach the bow (F) to the neck.

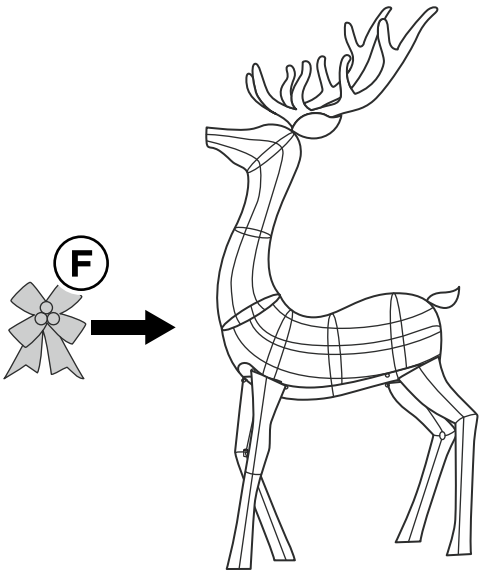


6 Insert the left side panel (G) into the left runner (J).

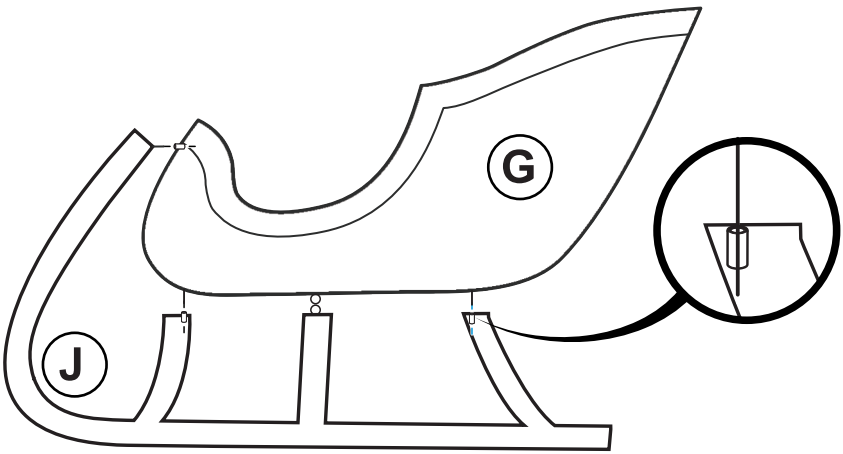


PRODUCT ASSEMBLY

7 Attach the base panel (I) to the left side panel (G). Secure with two cabble ties (4).

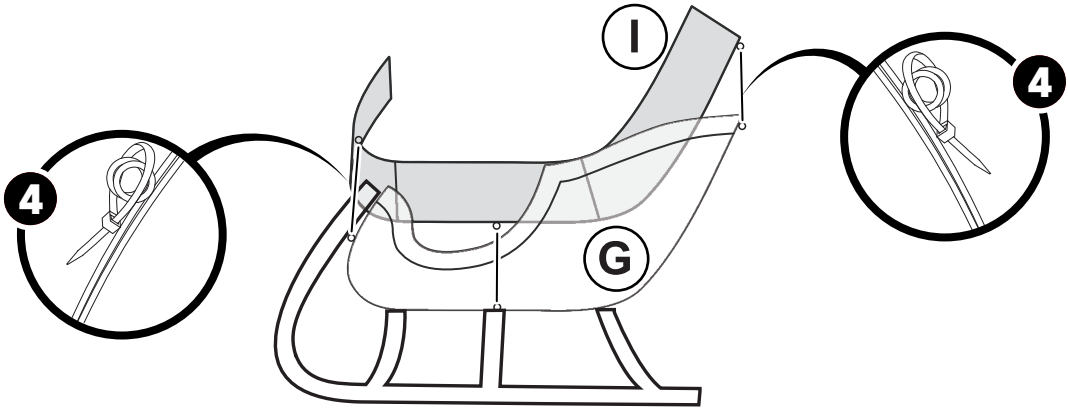


8 Repeat step 6 and step 7 using right side panel (H) and right runner (K) to complete the assembly of the sleigh.

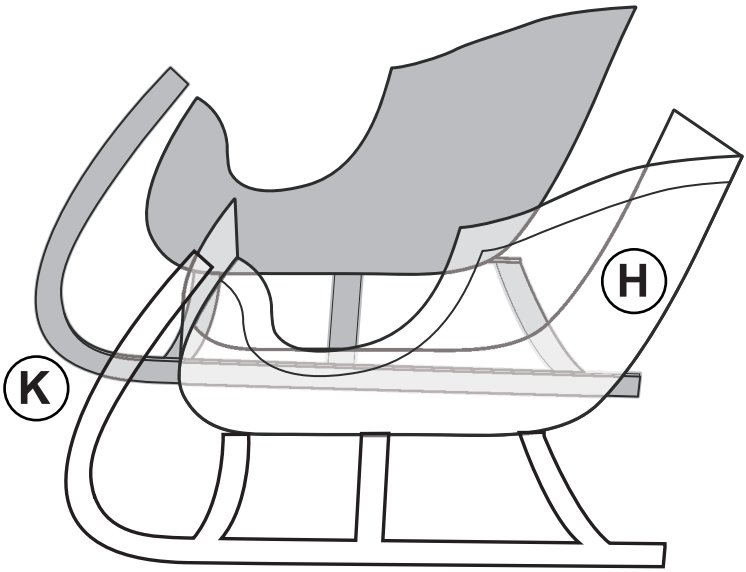


PRODUCT ASSEMBLY

9 Secure the sleigh with three cable ties ❹ : one on each side and one in the back.

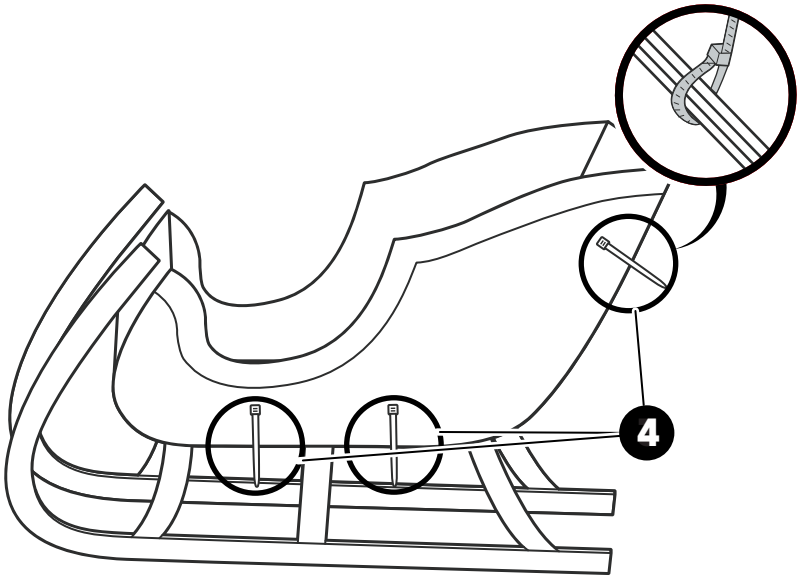



10 Insert the positioning rod ❶ into the designated holes on the runner. Attach the bow Ⓕ to the sleigh.

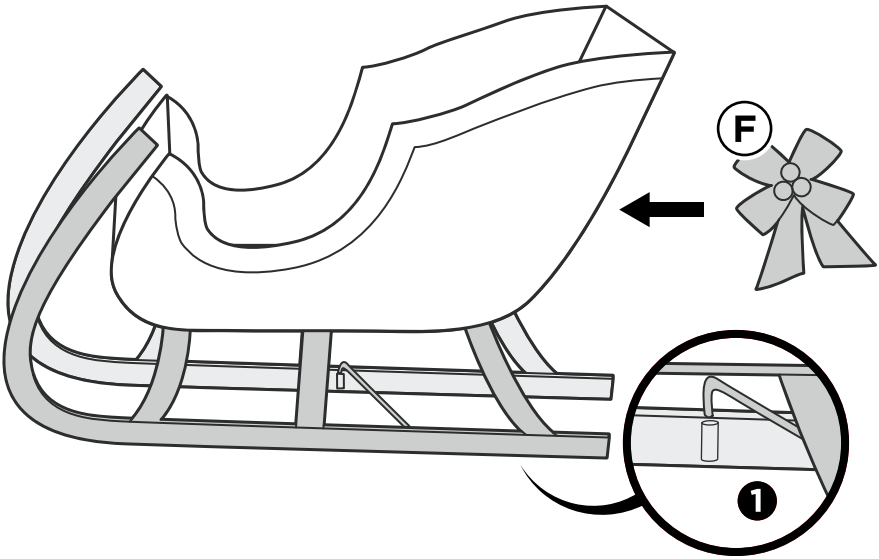


PRODUCT ASSEMBLY

11 Secure the reindeer and sleigh to the ground with eight stakes ❸. Find the 2-pin connectors and connect them as shown. Then plug into an electrical outlet to turn on the lights.

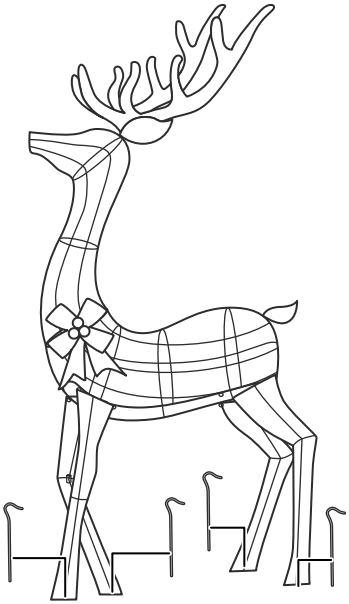

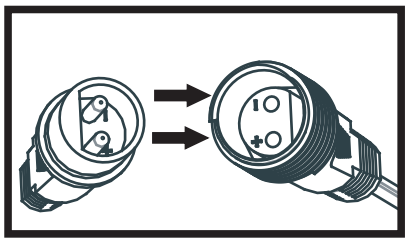

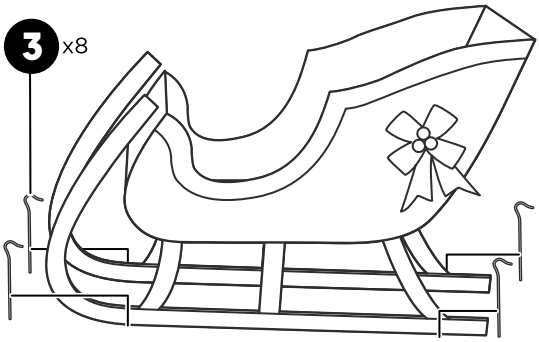

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Lights do not work	Not properly plugged in	Firmly insert the plug into a working wall outlet
	No power supply to the extension cord	Ensure the extension cord is properly plugged in and powered on
	The 2-pin connectors are improperly connected or their polarity is reversed.	Check and match the polarity of the positive and negative terminals.

