Instruction sheet A4


Magic Tree Tour

Christmas tree
with LED lights




Please refer to the instructions for correct use

Quick guide

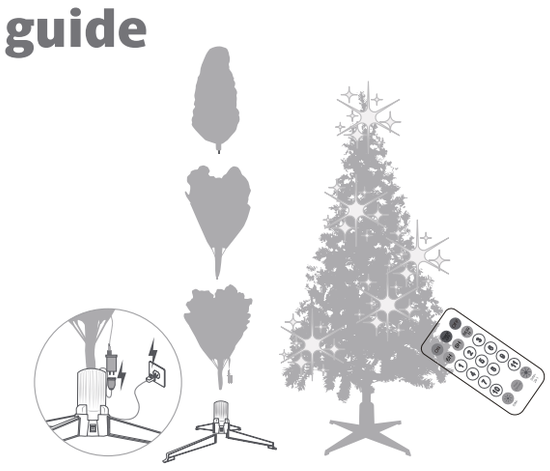


1 Identify

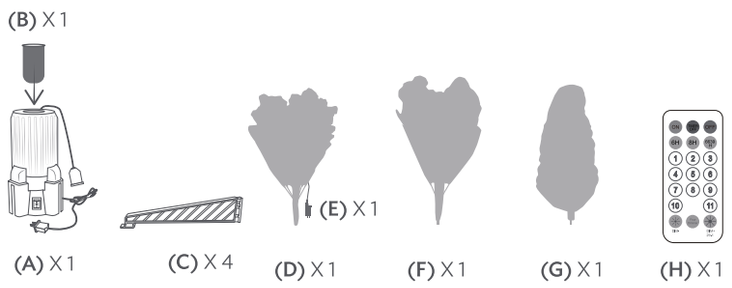


Engine A includes a spare fuse, see Section 10.

2 Mounting base

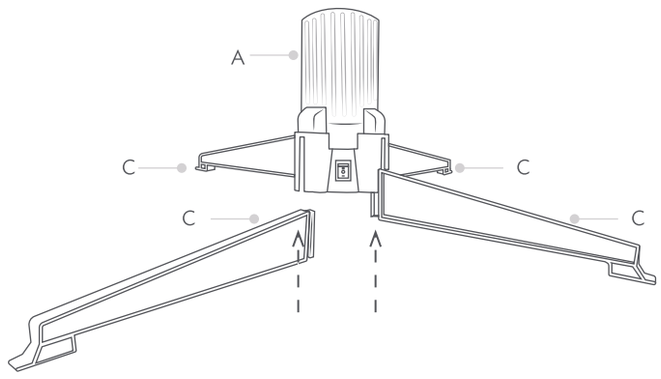


3 Mounting tree

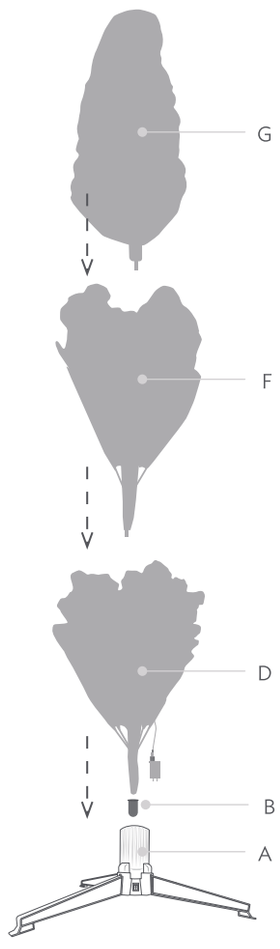


• Assemble from bottom to top.

4 Connect the lights

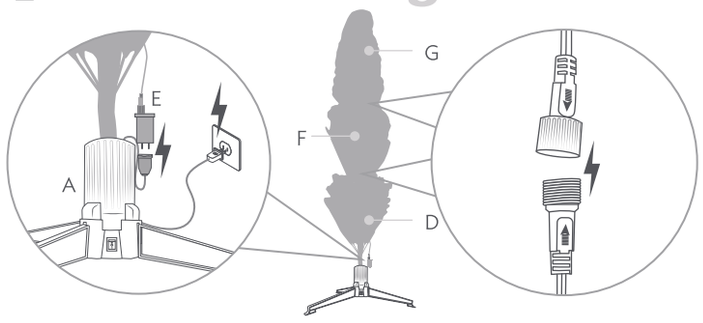

• Connect from bottom to top starting with the motor plug(A) to the plug(E) of the branch(D). Then connect the lights of the rest of the branches(D/F)and(F/G).

5 Open branches

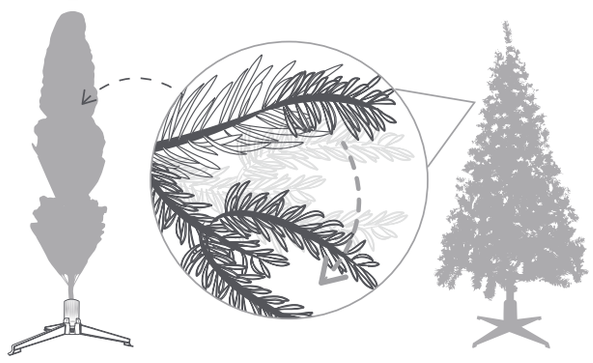

• Recommendation: disconnect the plug(E) connection of the LED series on a branch during operation.

Ink:

Pantone Cool Gray 11 C

Instruction sheet A4

6 Turn on lights




Down
- Slide the switch to the down "-" position to turn on the series of light.
- Press "O" to delete.

7 Turn on lights and rotate



Make progress
- Set the switch to "=" to turn on the series of lights and rotate.
- Set to "o" to close.
- Do not use additional lights to avoid them getting tangled when the tree rotates.

8 Remote control

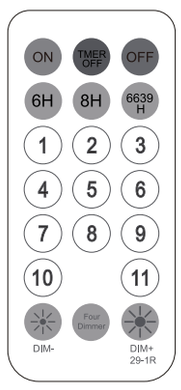


ON Power on	6639 H 6H(ON)6H(OFF) 3H(ON)9H(OFF)	5 C2 Mixture	10 FLASH
OFF Power off	1 COMB	6 SL0-GL0	11 In Wave
TMER OFF Time setting	2 C1 Steady 0N	7 Breathing	Decrease brightness
6H 6H(ON)18H(OFF)	3 C2 Steady	8 C1 SLO-GL0	Increase brightness
8H 8H(ON)16H(OFF)	4 C1 Mixture	9 C2 SLO-GLO	Four Dimmer Four Dimmer

- **Important:** the remote control is only for the operation of the LED series.
- Remove the protective plastic from the battery to use.
- Always aim at the plug(E), the distance for using the remote control is a maximum of 4 meters.
- Use the controller to command any of the following 3 modes:


  (a green LED will light up on the plug(E)).
- **Mode 1:** 6 hours on/18 hours off
- **Mode 2:** 8 hours on/16 hours off
- **Mode 3:** 6 hours on/6 hours off/3 hours on/9 hours off.
- Select a light effect from 1 to 11.
- If you need to change the battery, insert a CR2025 button battery.

9 Use mod or manual

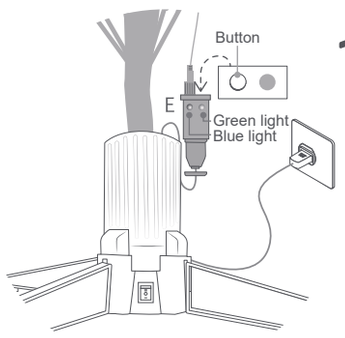

- Press the button to switch between light modes.
- Hold the button for 3 seconds to go to the first mode, unique to this use. (a green LED will light up)
- **Mode 1:** 6 hours on/18 hours off.
  Note: the lights can only be turned on and off with the control. If you want to turn them off manually, disconnect the plug(E)

10 Change fuse (in necessary case)

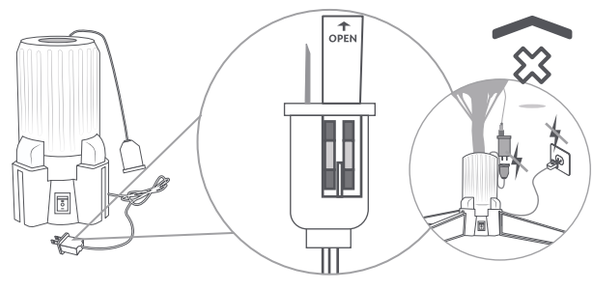

Important: Disconnect before changing.
- If the tree stops working, replace the fuses.
- Slide the cover up to access the fuses.
- Right side: working fuse.
- Left side: spare.

Important

CAUTION To reduce the risk of fire and electric shock:
- The tree is for domestic and indoor use, do not use outdoors.
- Do not install or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Turn off and unplug the product when leaving the house, going to bed or if left unattended.
- Do not hang ornaments or other objects from the cord, cable or string of lights.
- Do not cover the tree with cloth, paper or any material that is not part of the product when in use.
- Do not place the tree where the strings can be cut or damage the wire insulation.
- Disconnect the decorative item from the power supply before performing any maintenance or cleaning activities.

Important: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or training concerning the operation of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not use the appliance as a toy.

Electrical characteristics: 30 V ⎓ 0.12 A 3.6 W
Base: 120V~60 Hz 0.036A 3.7 W
Adapter: 120V~60 Hz 0.2 A 25 W Output: 30 V ⎓ 0.12 A 3.6 W
Remote control: 3 V ⎓ Works with 1 CR2025 battery of 3 V ⎓

Ink:

Pantone Cool Gray 11 C