
INSTRUCTION

UPHOLSTERED DINING CHAIR

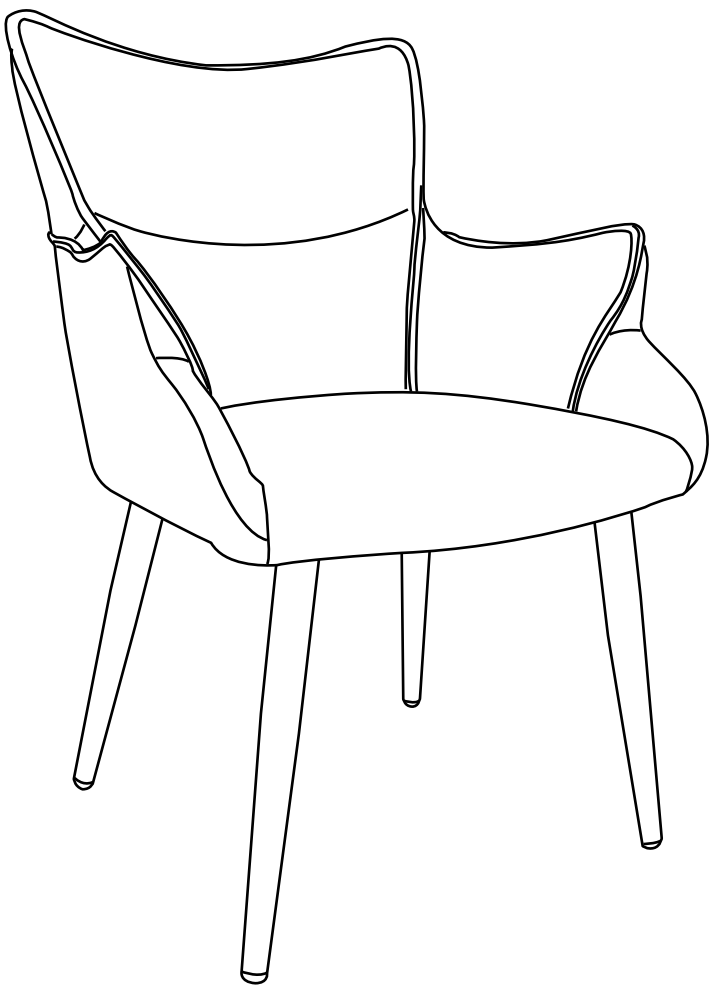

DC005-USWFWM

NOTICE

EN

Please keep these instructions for future reference.
Dear customer

- Thank you for your purchase. When you receive the product, please make sure that all the parts are intact. If any parts are missing, please contact us promptly torequest replacement parts.
- Then follow the entire installation instructions to install.
- Each part is crucial , so please be careful not to lose any.

It is recommended to store parts with different lettered identifiers in separate boxes or bags to avoid confusion during installation.

A. The outer box is damaged

B. The product is damaged / bent /cracked while you open the box

C. The parts / accessories / assembly tools are missing

D. The instructions are not clear and can not be referred

E. The product has functional problems

F. Other aspects that you are not satisfied with

WHAT'S IN THE PACKING BOX

1X Chair Body / Seat & Backrest
1X Leg Assembly (Front)
1X Leg Assembly (Rear)
6X Screws
1X Allen Key

STORAGE & CARE



Avoid Sunlight & Moisture
Keep the chair away from direct sunlight and humid areas to prevent fabric fading, aging and mildew.



Daily Dust Cleaning
Wipe dust regularly with a soft dry cloth or vacuum brush; do not use strong chemicals or bleach.



Stain Maintenance
Clean stains gently with mild detergent and a damp cloth, then let it air dry naturally.



Structural Inspection
Periodically check and tighten the leg screws to maintain the chair's stability and service life.

FOR YOUR SAFETY

Weight Limit Warning
Do not exceed the maximum weight capacity (typically 220-330 lbs / 100-150 kg). Only use as a single-seat chair; never stand, jump, or place heavy objects on it.

Proper Usage
Sit centered on the seat with your back against the backrest. Do not lean on the edges, armrests, or backrest excessively, as this may cause the chair to tip over.


Assembly & Stability Check
Ensure all screws and connections are fully tightened before use. Periodically inspect legs and hardware for looseness or damage; stop using immediately if the chair wobbles or shows signs of wear.

Child Safety
Keep small assembly parts away from children under 3 years old. Do not allow children to climb, stand, or play on the chair unsupervised to prevent falls or injuries.

Assembly Steps


CAUTION:Because of the edges of some parts before assembly may be sharp , please handle unassembled parts carefully.

DC005-USWFWM

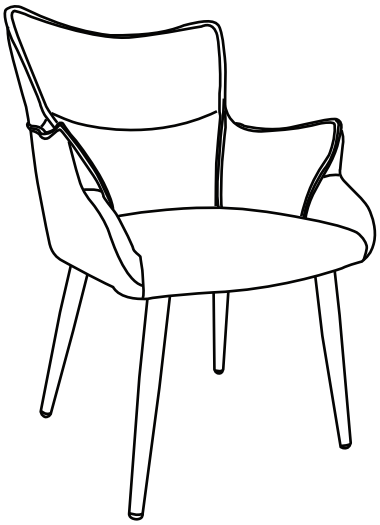


Parts List	Qty
A 	1
B 	1
C 	1
D 	6
E 	1

1

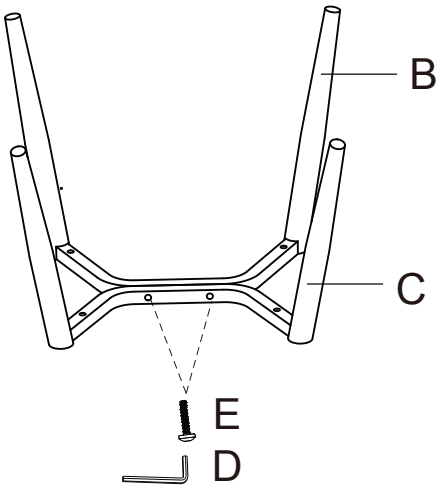

2

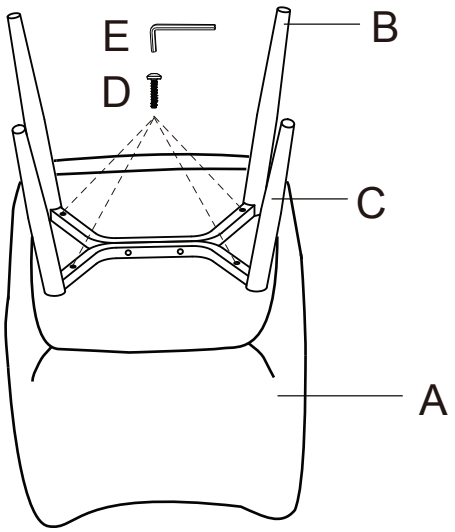

3

