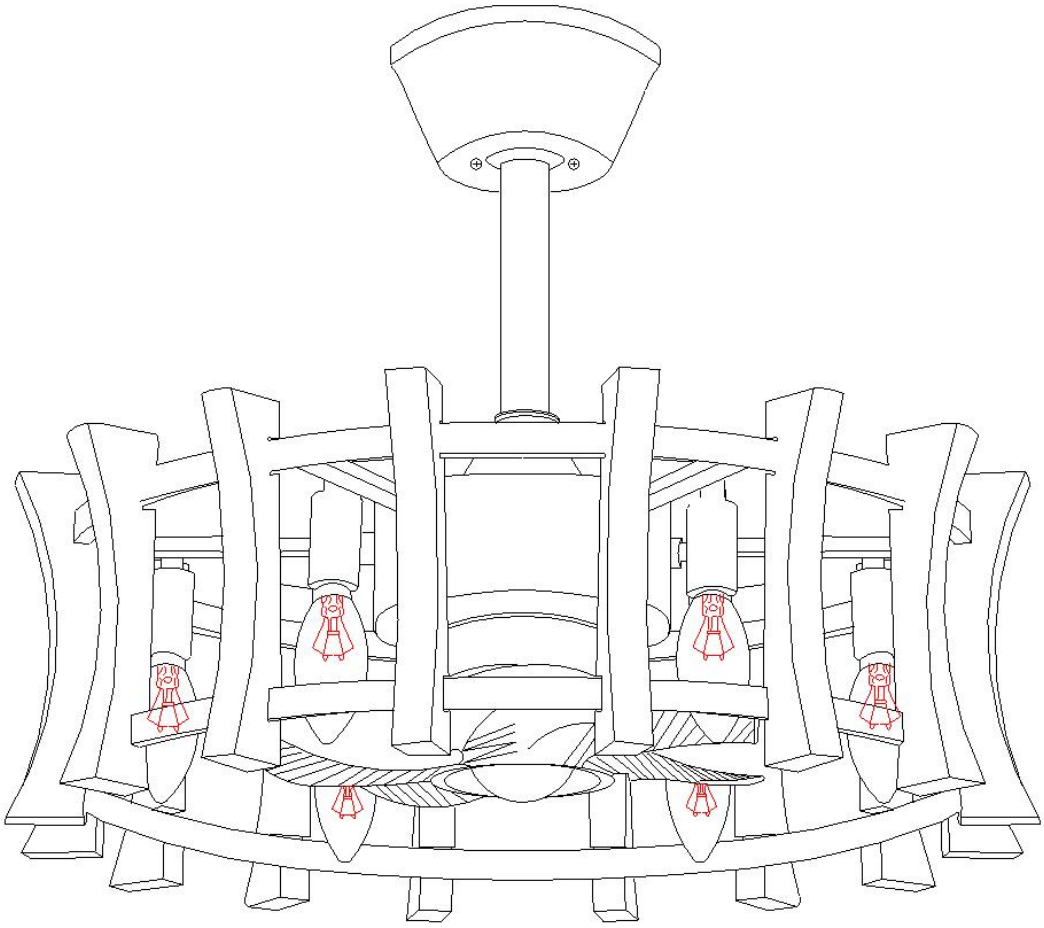


Ceiling Fan with Lights

Installation & Troubleshooting Manual

CAUTION

READ INSTRUCTIONS CAREFULLY FOR

SAFE INSTALLATION AND FAN OPERATION

SAFETY RULES

1. To reduce the risk of electric shock, turn off the electricity to the fan at the main fuse box or circuit panel before beginning.

2. All wiring must be in accordance with the local electrical codes or National Electrical Code. Electrical installation should be performed by a qualified licensed electrician.

3. To avoid personal injury, the use of gloves may be necessary while handling fan parts with sharp edges.

4. Make sure the installation site you choose allows clear space for the blades to rotate and at least 7 feet(2.13 meters) of clearance between the floor and the fan blade tips.

5. WARNING: To reduce the risk of fire, electric shock, or personal injury, mount fan only to an outlet box marked acceptable for fan support and use mounting screws provided with the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and may need to be replaced. Consult a qualified electrician if in doubt.

6. The outlet box and ceiling support structure must be securely mounted and capable of supporting at least 45 KGS.

7. To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning the fan.


8. Do not use water or detergents when cleaning the fan or fan blades. A dry dust cloth or lightly dampened cloth will be suitable for most cleaning.

9. After making electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box.

10. Electrical diagrams are for reference only.


11. The fan is more suitable for indoor use.

TOOLS REQUIRED

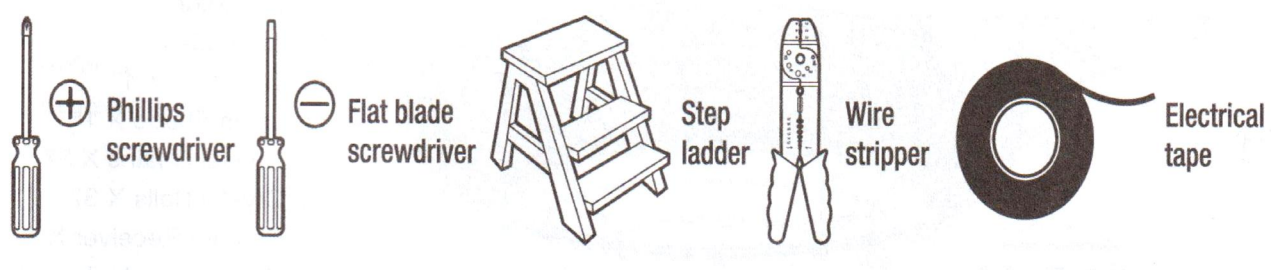

BEFORE INSTALLATION

Unpack your fan and check the contents. You should have the followings:

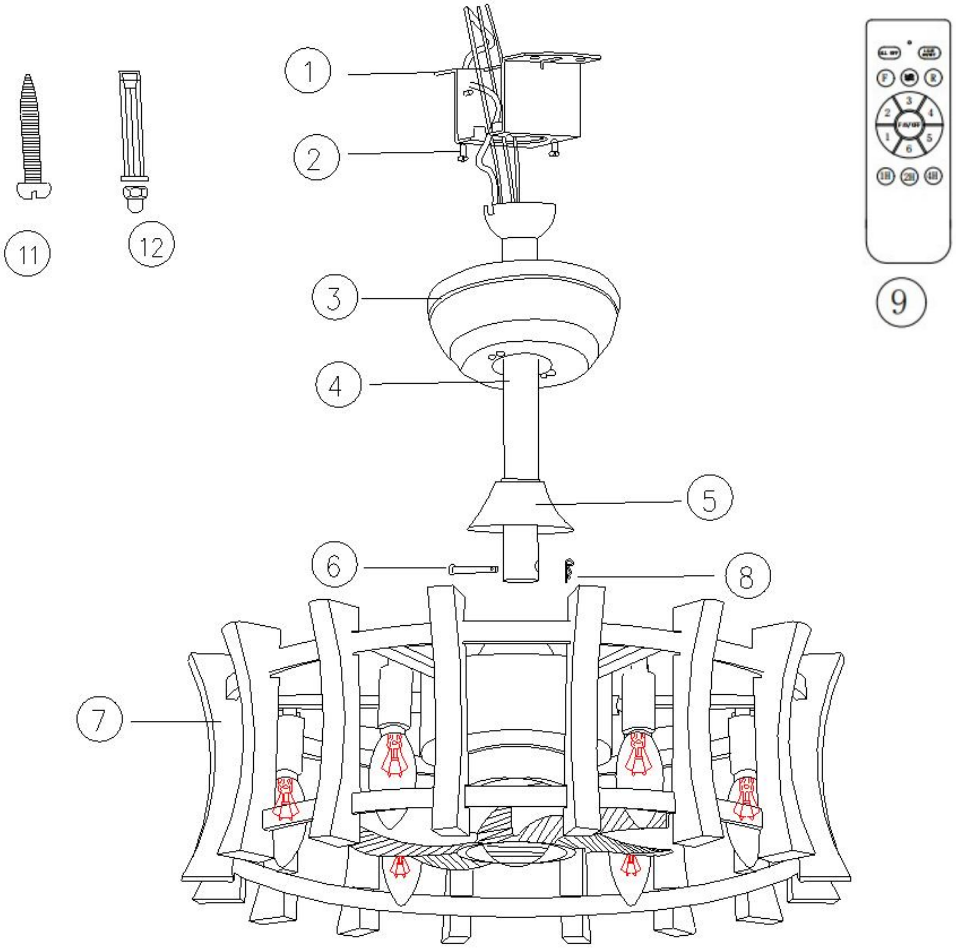

1. Mounting Bracket X 1
2. Canopy screws X 2
3. Canopy X 1
4. Downrod X 2
(4 or 8 inches, choose based on the height of ceilings)
5. Coupling cover X 1
6. Cross pin X 1
7. Wooden Lamp Shade X 1
8. Clamp pin X 1
9. Remote controller
10. Wood screws X 4
11. Expansion screws X 2
12. Bulb base X 6 (E12)
13. Hanger ball

INSTALL THE FAN


Tools Required: Phillips Screwdriver, Pair of Pliers, Straight slot screwdriver, Adjustable Wrench, Step Ladder and Wire Cutters.

INSTALL THE MOUNTING BRACKET

To prevent injury and damage, ensure that the hanging location allows a clearance of 7 feet(2.13 meters) from the floor for fans operating safely.


If there isn't an existing CUL listed mounting box, then read the following instructions carefully:

1. For concrete ceilings: Mark the position of mounting bracket on the ceiling and drill holes according to the determined position. Secure the bracket to the ceiling with expansion screws provided. (Fig.1)

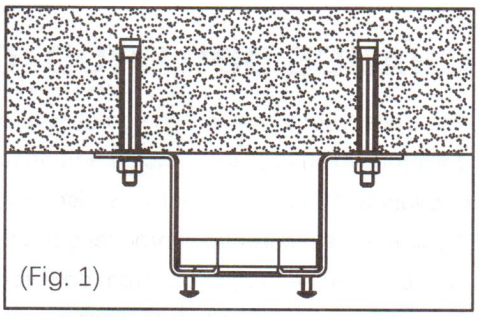


(Fig.1)

1. For Wood Ceilings: Mark the position for mounting bracket installation secure the mounting bracket to the ceiling with four wood screws provided. (Fig.2)

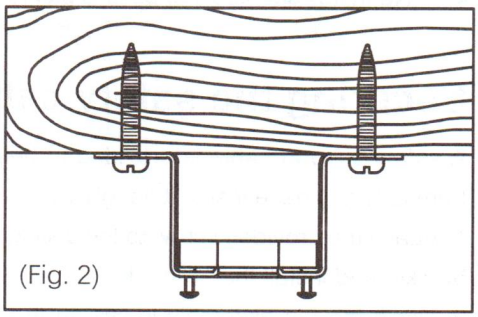

(Fig.2)

2. Refer to Fig. 3 for mounting when the ceiling is angled max. 15 degree angle. (Fig.3)

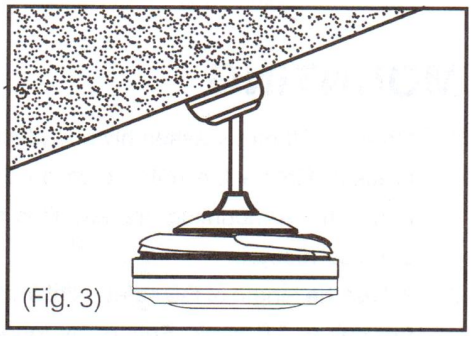


(Fig.3)

NOTE: Electric box must be able to withstand a weight of 45 Kilograms or more

INSTALL THE DOWNROD

TURN OFF the power before performing installation. Follow the steps below to fit your fan properly:

1. Remove the cross pin and clamp pin from downrod and slightly loosen the screws.
2. Have downrod passed through the canopy and coupling cover, carefully thread motor wires through the downrod.
3. Fit the downrod to the back of the fan with cross pin and clamp pin removed from step 1. Tighten the screws that previously loosened.

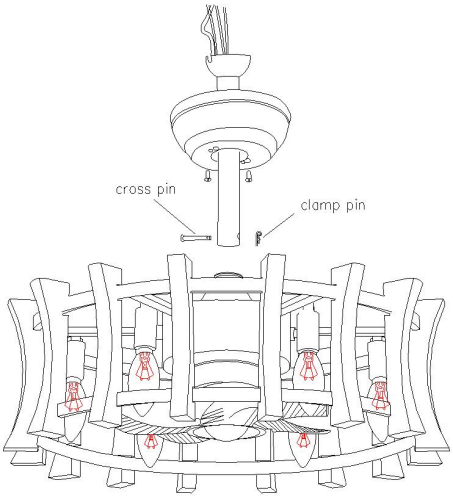



CHANGE DOWNROD (OPTIONAL)

Package comes with a 4 inches standard downrod pre-assembled and attached to a hanger ball and a 8 inches downrod specifically for higher ceilings.

If you need to change the length of the downrod, please follow these steps:


1. Separate the hanger ball from the original downrod by loosening the screws on the top.
2. Take out the cross pin from the hanger ball and replace the original downrod with the other.
3. Attach the hanger ball to the replaced downrod with screws and the cross pin previously taken out.

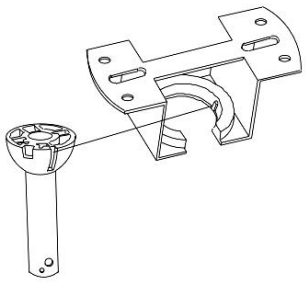

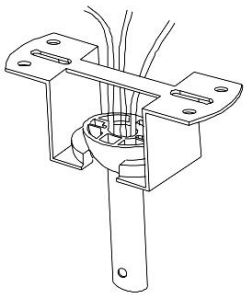


SECURE THE CANOPY

1. Lift up the canopy and align the holes on it with the canopy screws on the bottom of the mounting bracket.
2. Rotate the canopy until the canopy screws securely put into place.
3. Tighten the canopy screws.
4. Connect the live, neutral and earth wire to the power from the ceiling correspondingly.

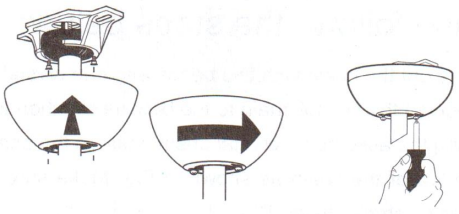

INTELLEGENT REMOTE CONTROL

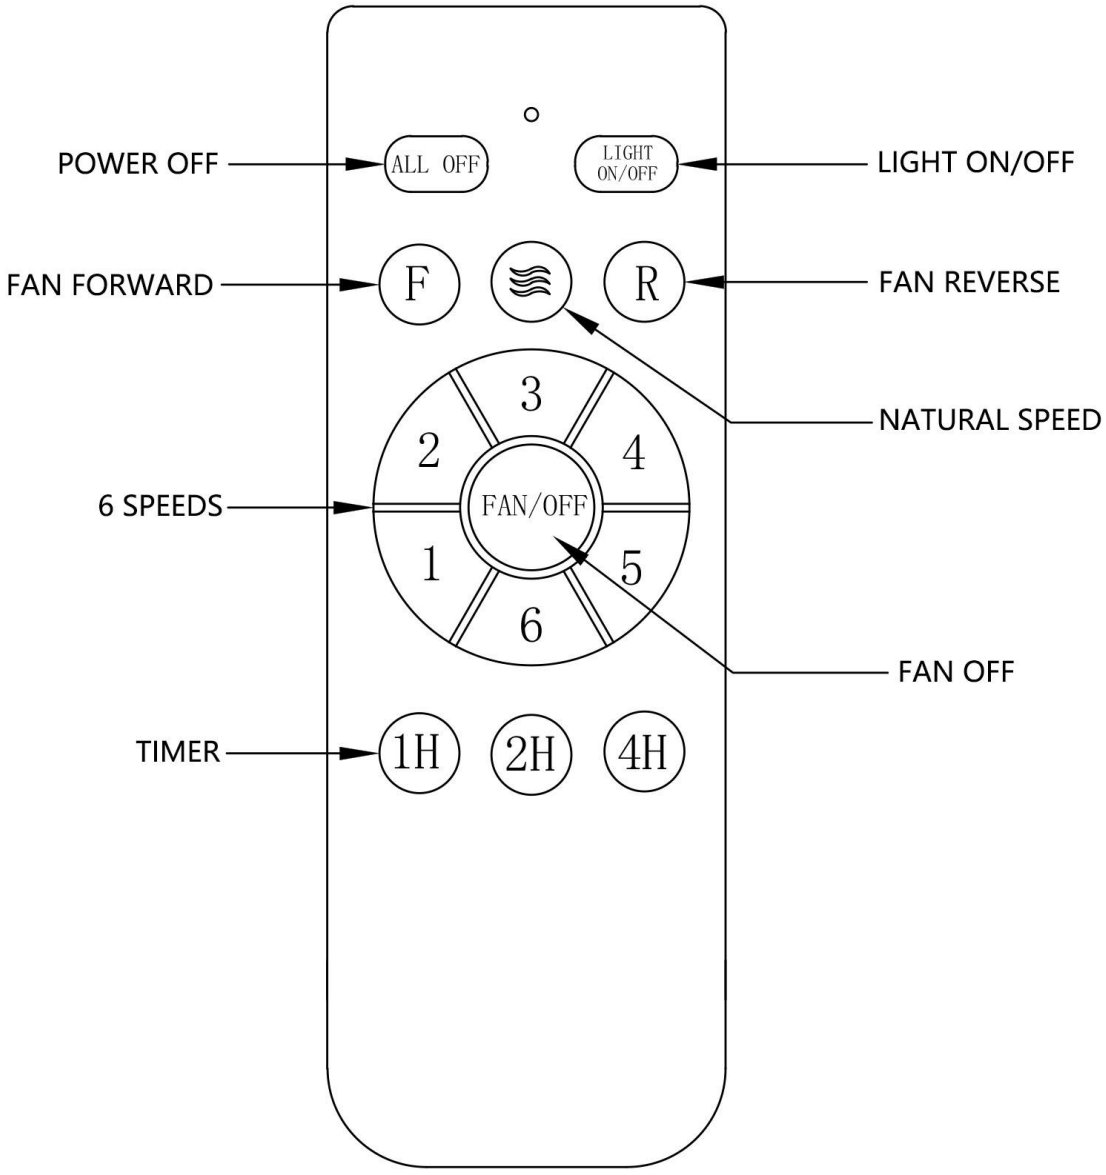


ATTENTION: If the remote doesn't work with the fan, please pair it with the fan by holding the "ALL OFF" button for 3 seconds within 5 seconds the fan powered on. If it makes a "beep" sound, it indicates that the remote has been successfully paired with the ceiling fan light. **(2*AAA BATTERIES REQUIRED FOR REMOTE CONTROL)**

INSTALL WALL SWITCHES (OPTIONAL)

BEFORE:

1. This is a replaceable light bulb ceiling fan, it can't be seamlessly dimmed, **DO NOT** use any Dimmer Switch for this.

2. Install & Control the ceiling fan via remote **OR** wall switch, please **DO NOT** install both of them since the wiring is complex depends on the different switch you use, and it may interfere with the remote/receiver signal and the fan/light fixture will not work properly.

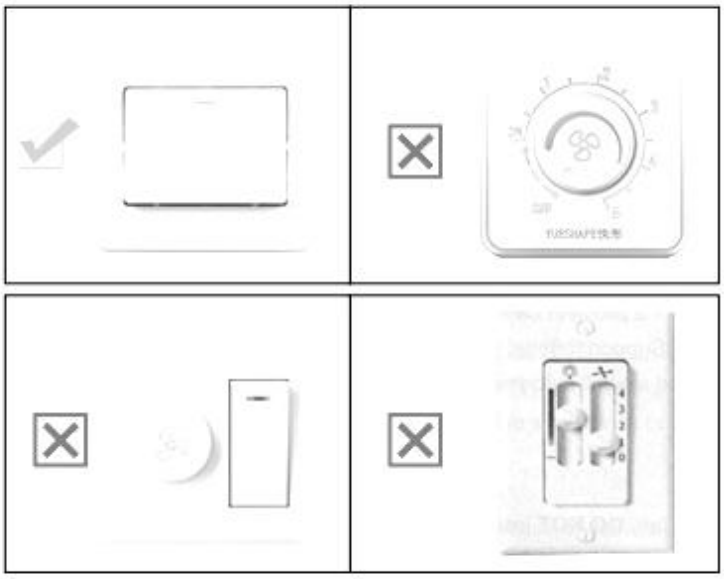


TROUBLESHOOTING GUIDE

If you have difficulty operating your new ceiling fan, it may be the result of incorrect assembly, installation, or wiring. In some cases, these installation errors may be mistaken for defects. If you experience any faults, please check this Trouble Shooting guide. If a problem cannot be remedied, please consult with your authorized electrician and please feel free to contact us.
Please contact us and we will help you check and get the problem resolved, you don't have to uninstall and send it back.

Before:

1. This is a replaceable light bulb ceiling fan, **DO NOT** install any dimmer switch for this.
2. Install the Remote OR Wall Switch, **DO NOT** install both of them.
3. Check circuit fuses or breakers and make sure the there are good batteries in the remot
4. Check line wire connections to the fan and switch wire connections in the switch housir

CAUTION: Make sure the main power is off.

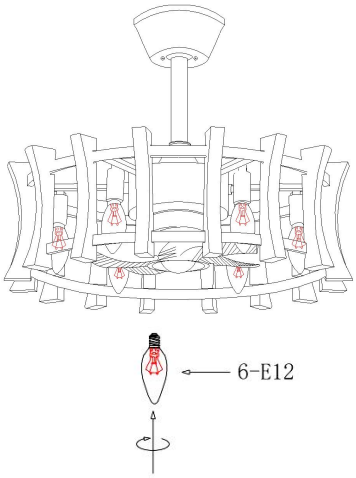

(BULBS NOT INCLUDED)

Problem: Light does not work

1. Check whether the wire connections in the switch housing are connected.
2. Make wiring connections from the house to the LED light directly (don't connect the remote and the fan) to check if it's the issue of the LED light.

Problem: Fan will not start.

1. Check wire connections to the fan and switch wire connections in the switch housing. CAUTION: Make sure the main power is off.
2. Make the Fan wiring connections while not wiring the Remote & Transmitter and the light, to check if it's the issue of the fan.

a) Please don't wire the light at the bottom
b) Connect the Ceiling Fan Neutral Wire (White) to the Neutral Wire (White) coming through the ceiling
Connect the Ceiling Fan Live Wire (Black) to the Live wire (Black or Colored) coming through the ceiling
Then turn on the main power, check the fan works separately or not.

