
Manual Book

Retractable Ceiling Fabs

Model No.:YY-8111-36YH/YY-8111-36G/YY-8111-36C/YY-8111-36N

Size: 36inches

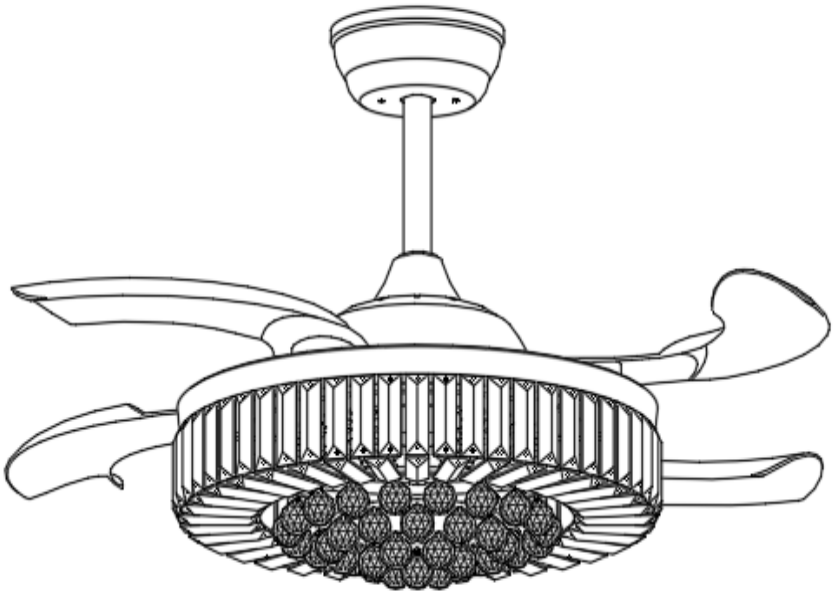

APP Control Applicablle

Table of Contents

Table of Contents.....2
Safety Information.....2
Dimension Reference.....3
Hardware Included.....3
Fan Parts Included.....3
Exploded View.....4
Installation Instructions.....5
Troubleshooting Guide.....10

Safety Information

READ AND SAVE THESE INSTRUCTIONS.

1. To reduce the risk of electric shock, ensure electricity has been turned off at the circuit breaker or fuse box before you begin.

2. All wiring must be in accordancce with the National Electrical Code “ANSI/NFPA 70” and local electrical codes. Electrical installation should be operated qualified licensed electrician.

3. The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 50 lbs(22.6 kg). Use only UL Listed outlet boxes marked “ Acceptable for Fan Support of 50 lbs. (22.6 kg) or less. ”

4. Do not place objects in the path of the blades.

5. To clean the fixture,turn off the power, wait for it to cool, and wipe the fixture with a dry soft cloth.

6. After making electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor and the equipment grounding conductor on one side of the outlet box and ungrounded conductor on the other side of the outlet box.

7. All setscrews must be checked and retightened where necessary before installation.



WARNING: To reduce the risk of electrical shock or fire, not use this fan with any solid-state fan speed control device. It will permanently damage the electronic circuitry.



WARNING: To reduce the risk of personal injury, donot bend the blade brackets when installing the rackets balancing the blades.



WARNING: To reduce the risk of fire, electric shock or personal injury, mount to outlet box marked “acceptable for fan support of 50 lbs. (22.6 kg) or less” and use screws provided with the outlet box.



WARNING: To avoid possible electrical shock, turn the electricity off at the main fuse box before wiring.



WARNING: To reduce the risk of electrical shock, this must be installed with an isolating wall control / switch.



CAUTION: To reduce the risk of personal injury, use only the screws provided with the outlet box.



CAUTION: Please use carefully when working around or cleaning the fan to avoid injury or damage of fan.




CAUTION: The fan must be mounted with a minimum of 7 ft (2.1 m) clearance from the trailing edge of the blades to the floor.




CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Dimension Reference

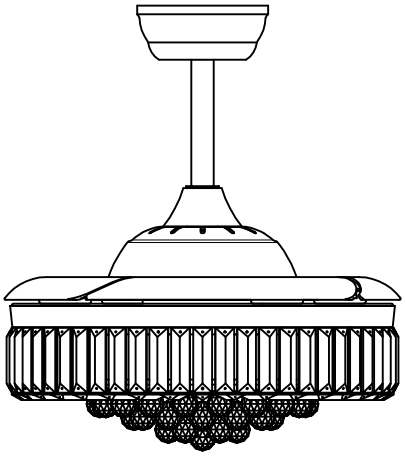



Hardware Included


	Set Screw	2PCS		Flat washer	6pcs
	Wood Screww	4pcs		Balanced patch	2pcs
	Wire Nut	3PCS		Pin	19pcs
	Flat washer screw	4pcs		Plastic expansion pipe	4pcs
				Key chain	3pcs


Fan Parts Included

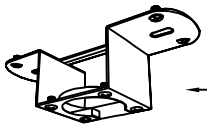




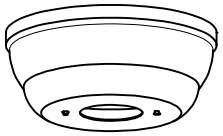

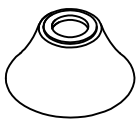

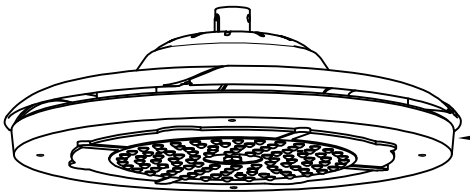


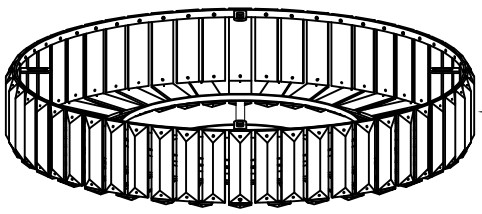




9

	Quantity
1. Mounting Bracket	1
2. Down Rod	1+1
3. Canopy	1
4. Canopy Cover	1
5. Fan Motor Assembly	1
6. Light Frame	1
7. Star anise beads	2
8.Crystal Ball	20
9. Remote Control	1
(Batteries Not Included)	

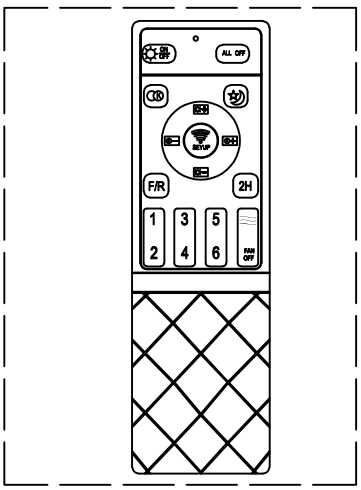

Exploded review

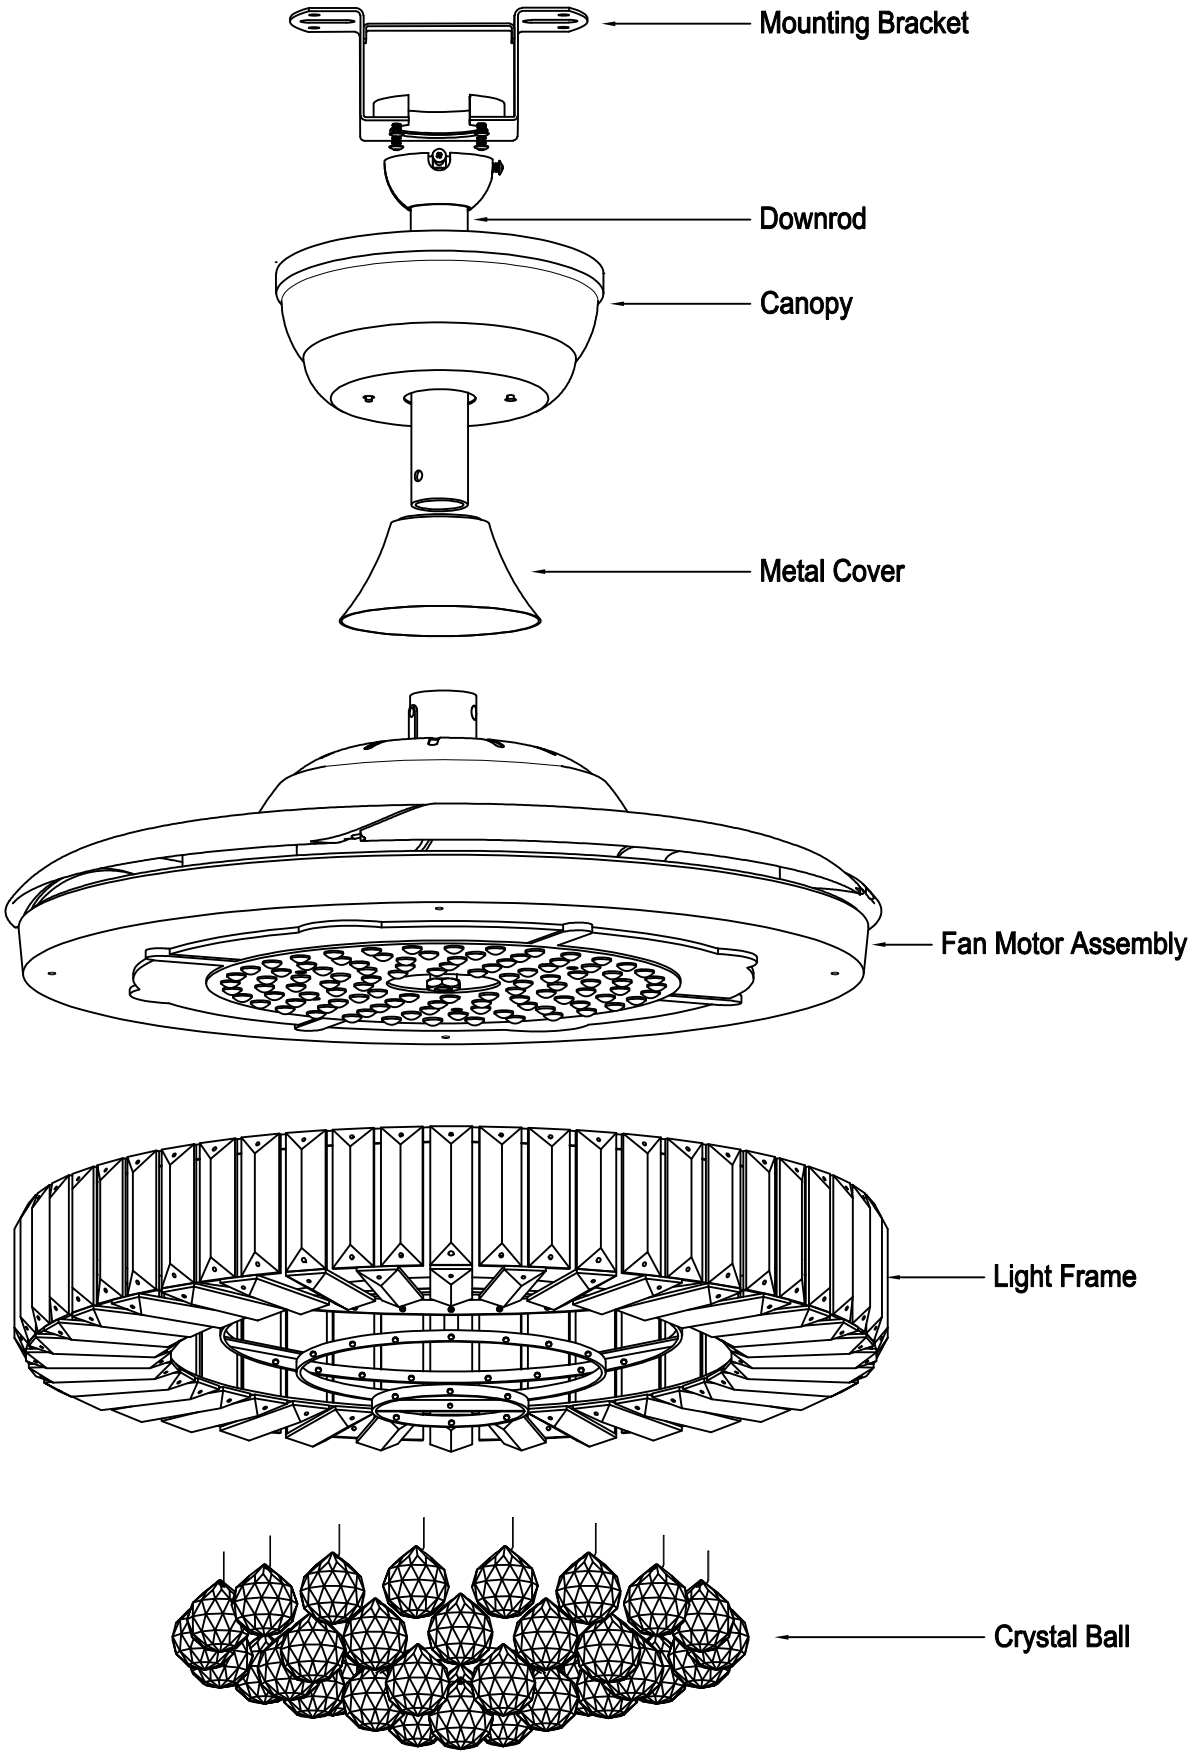

Installation Instructions

Step1 MOUNTING

- Take out fan motor housing.
- Remove cotter pin and bolt from the downrod.（Fig.1a)
- Loosen jam screw in yoke until it is flush with the inside surface.（Fig.1b)
- Insert the down rod into the connection of the lamp body and lock the bolt with a cotter pin.（Fig.1c)
- Route wires exiting the motor through the metal cover, canopy, and downrod.（Fig.1d)
- Insert bolt through teh hole in and downrod. Be careful not to damage or cut the fan wires.（Fig.1e)
- Secure the down rod in position by tightening the jam screws. The side yoke cover is down and it will flush with the motor housing.

CAUTION: To ensure wobble-free operation and to avoid damage to the fan, the down rod and the set screw must be completely tightened.

Warning:
For your safety, please turn off the power of the fuse box or circuit breaker before all your actions.

Fig.1a

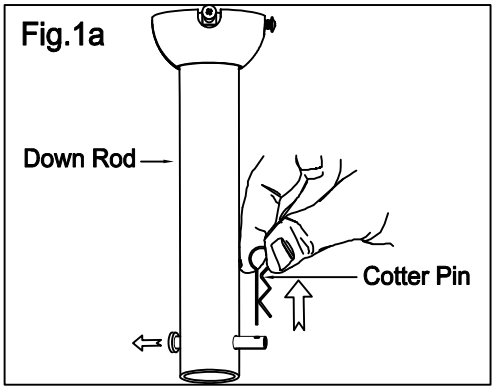


Fig.1b

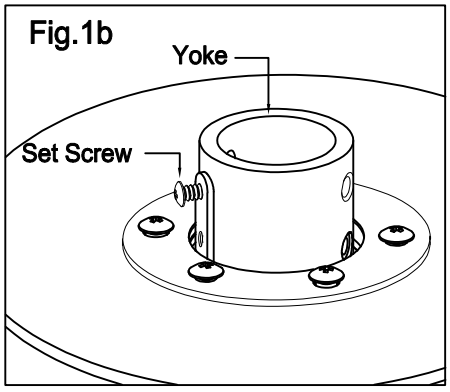


Fig.1c

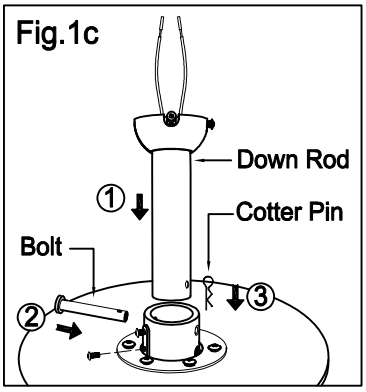


Fig.1d


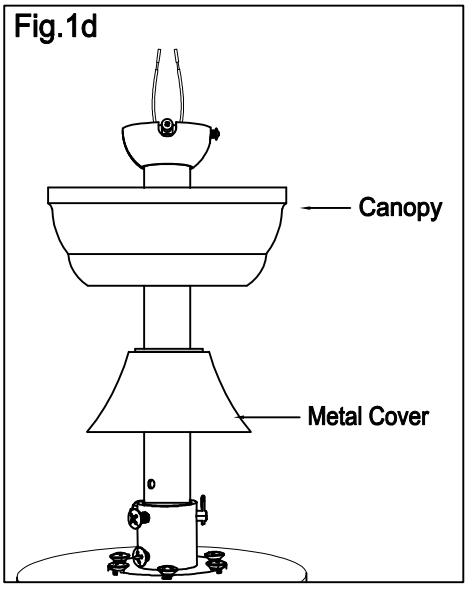


Fig.1e

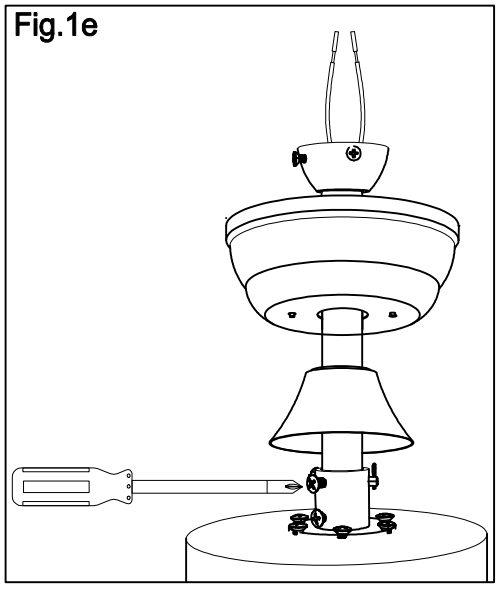

Installation Instructions

Step 2 INSTALL MOUNTING BRACKET

- Install through centre of outlet box and into the ceiling joist.
- Secure mounting bracket and rubber gaskets to metal outlet box.

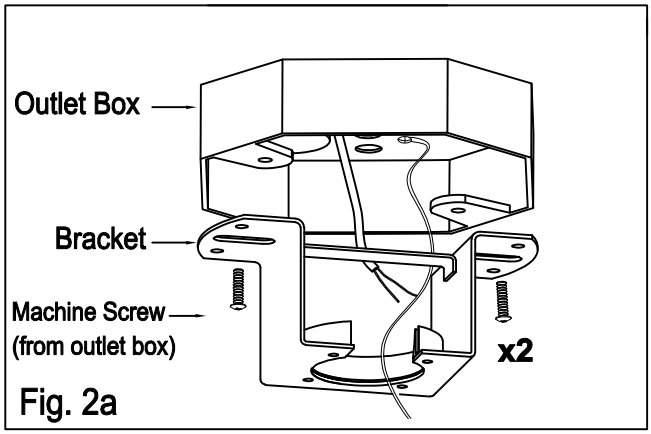


Fig. 2a

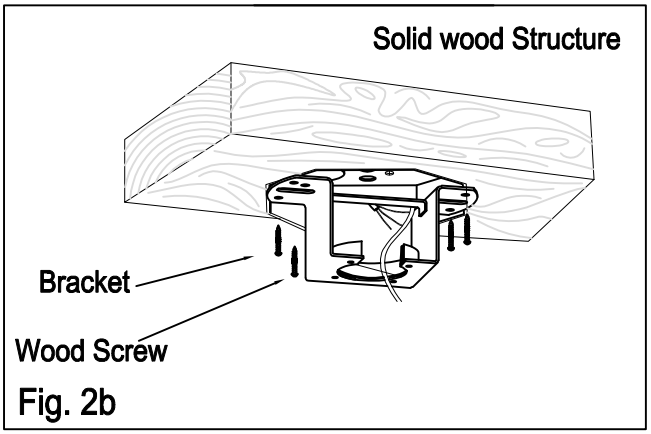


Fig. 2b

- Hang the ball joint and the fan onto the bracket, make sure the guide pin of the bracket is fitted into slot of ball joint.

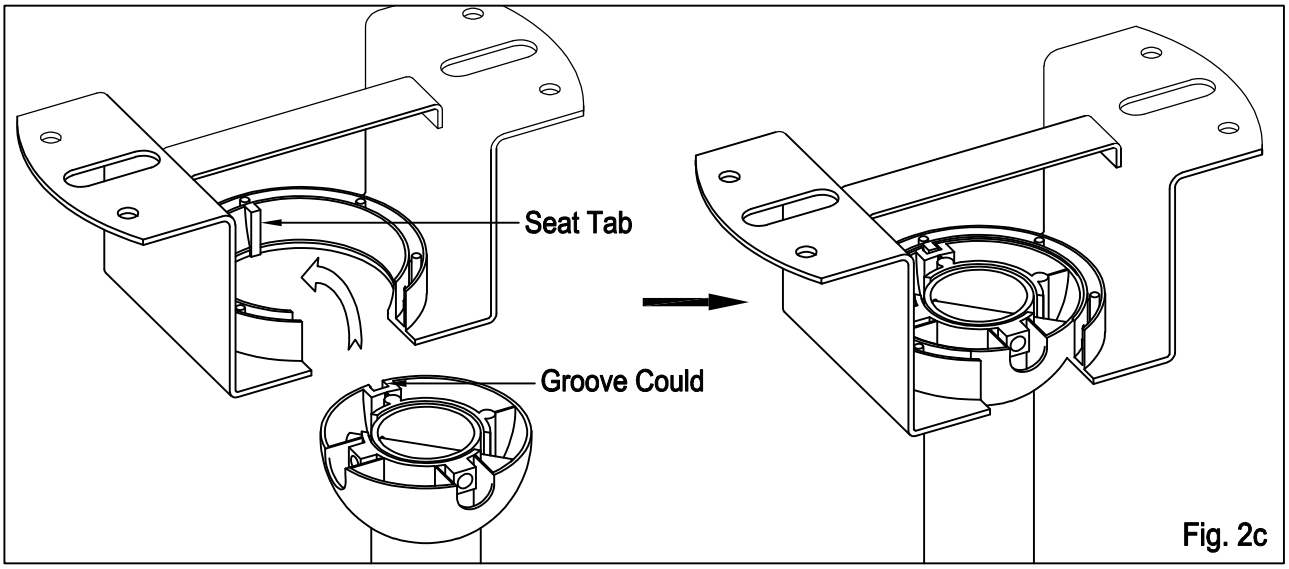


Fig. 2c

WARNING : Failure to seat tab in groove could cause damage to electrical wires and possible shock or fire hazard.

Installation Instructions

Step 3 ELECTRICAL HOOK-UP

Use wire connectors to connect household supply and receiver wires according to the diagram and the following steps:

- Connect the green wire from the down rod and mounting bracket to the Bare / Green(ground) supply wire.
- Connect the white wire with the "AC IN N" label to the white supply wire.
- Connect the black wire with the "AC IN L" label to the black supply wire.

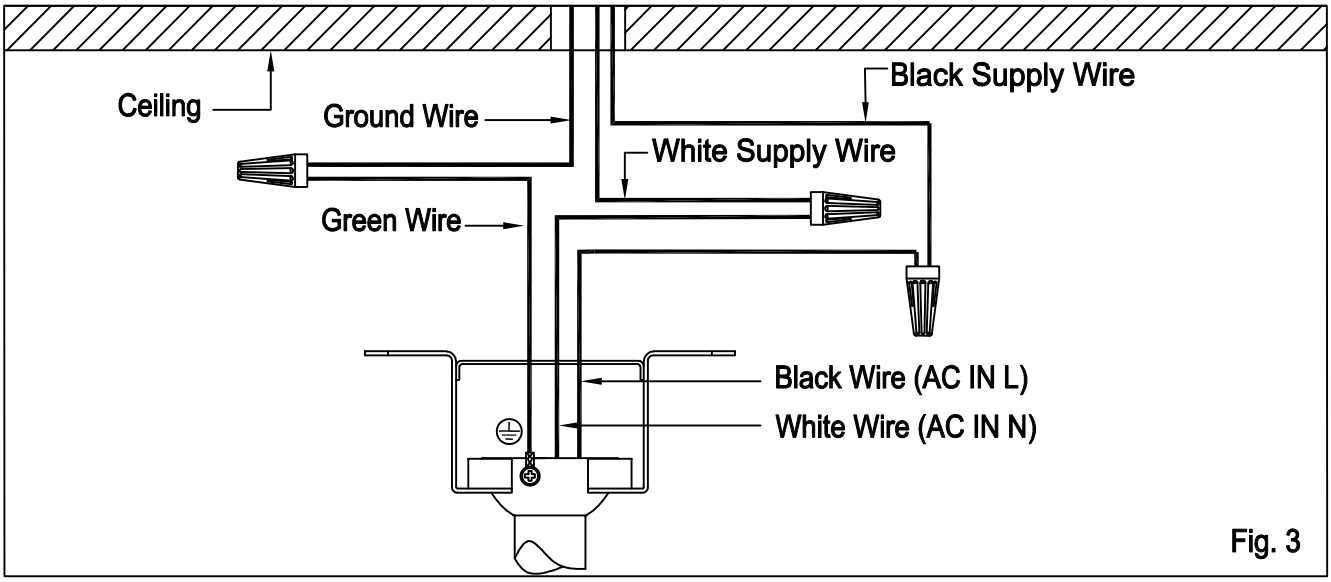


Fig. 3

Step 4 ELECTRICAL HOOK-UP

Push all connected wires up into ceiling box.
When installing the canopy, ensure the antenna is not pressed by the canopy.
Ensure to connect all ground wires accordingly.

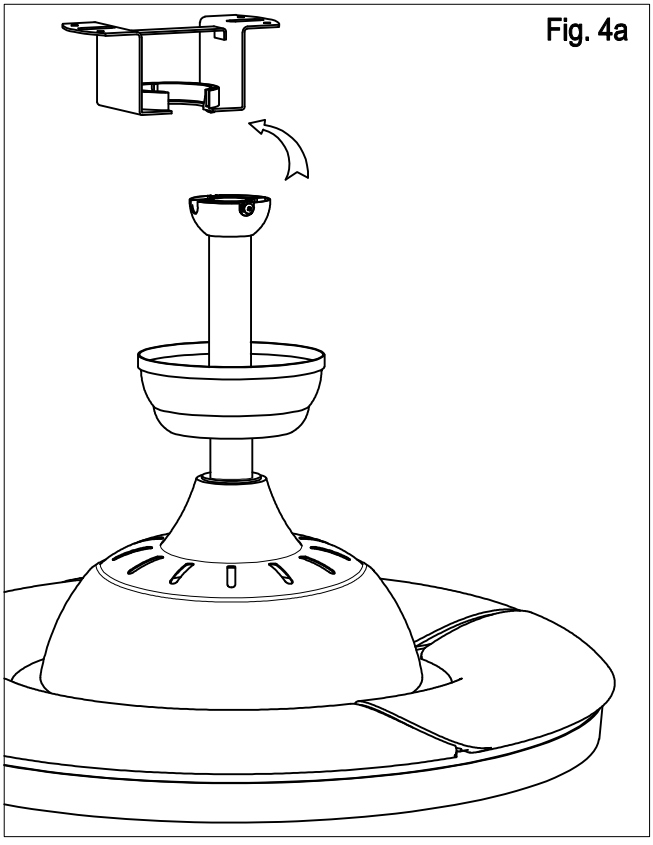


Fig. 4a

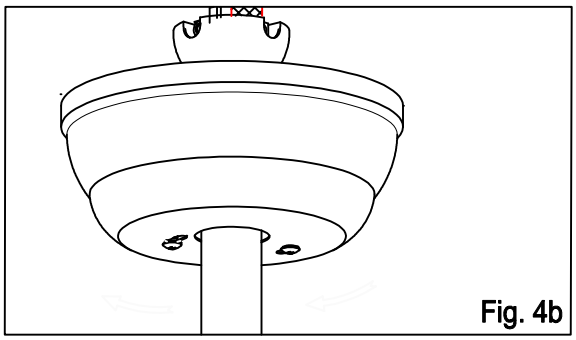


Fig. 4b

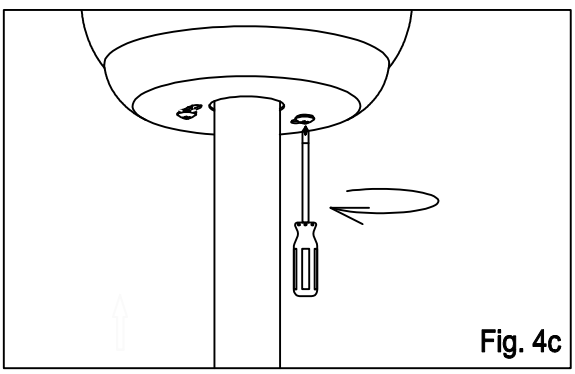


Fig. 4c


Installation Instructions


Product introduction:

1. This product adopts 433 wireless digital technology, Remote control one-to-one control
The work piece can be controlled from any angle within the allowable space,
Not limited by direction, Simple and convenient operation, Strong anti-interference ability.
2. Remote control instructions:
 a. If the remote control is not used for a long time, please remove the battery.
 b. Remote control matching code :
 Turn on the power, Press the pair code button within 5 seconds of the light on.
 When you hear two" tick " sound or the light flashes, the code matches successfully.
 If you need to match the code again, You need to wait 30 seconds before turning on the power and repeat the above operation.

warning

This electronic switch product needs to be operated by professionals during installation.
Remote trigger electronic switch.
The radio frequency of the remote control transmitter is 433M.

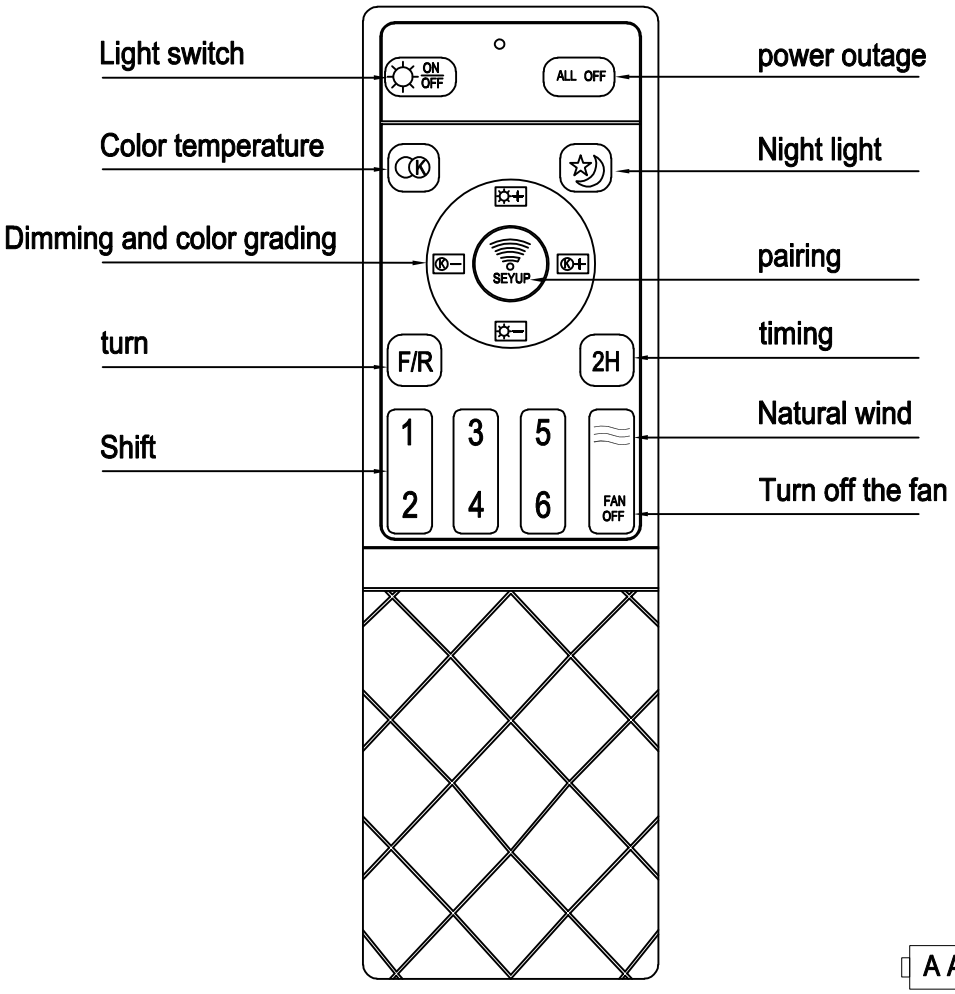




2*AAA Battery (1.5V)
(Batteries Not Included)

Installation Instructions


Step 5 Installing the light frame and crystal balls

- Step 1. Take out the fan base and placeit facing up. Take off the screws from the base.

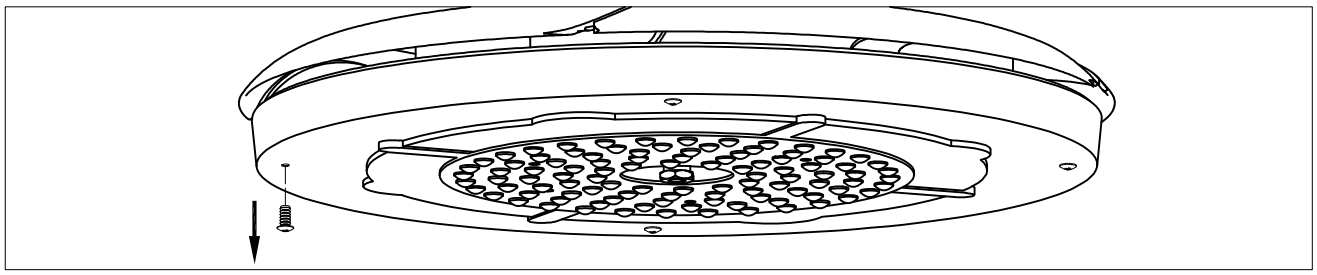


- Step 2. Attach the light frame with the screws taken off. Longer screw driver recommended.


Note: Install the first three screws pre-locked 1/3, twist on the fourth screw and then all locking

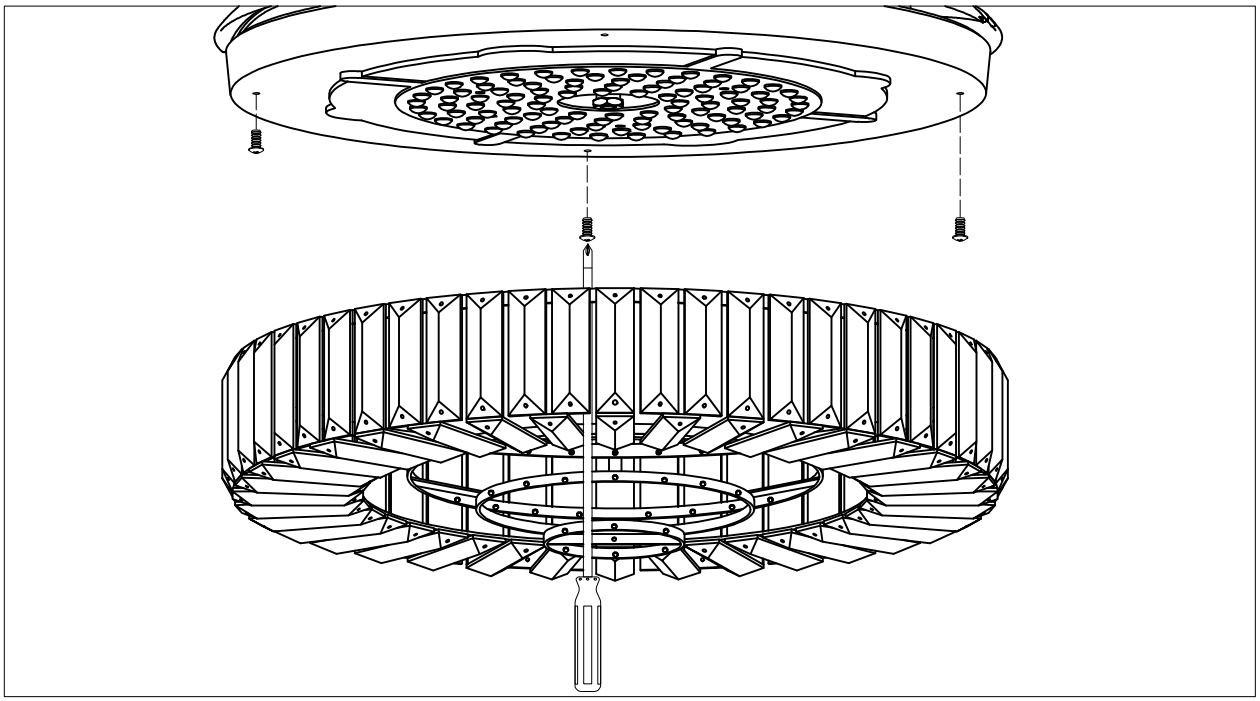



- Step 3. Hook the crystal balls onto the light frame with the pins.

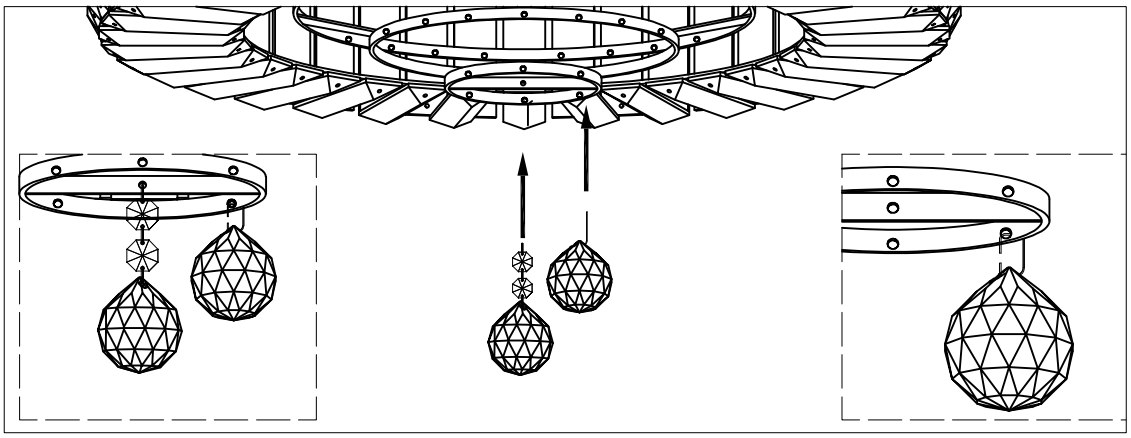


Installation Instructions

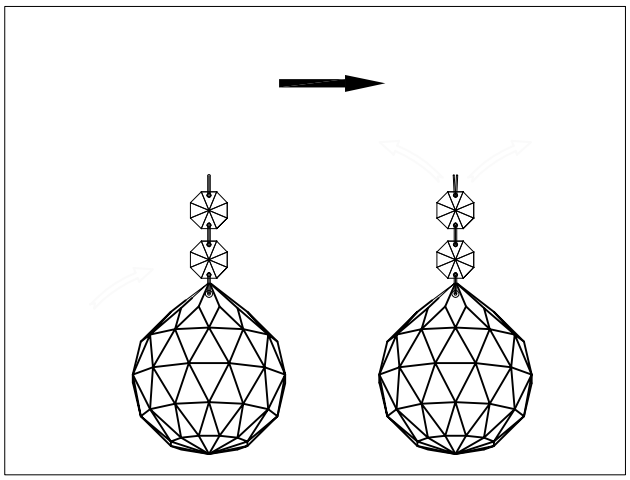

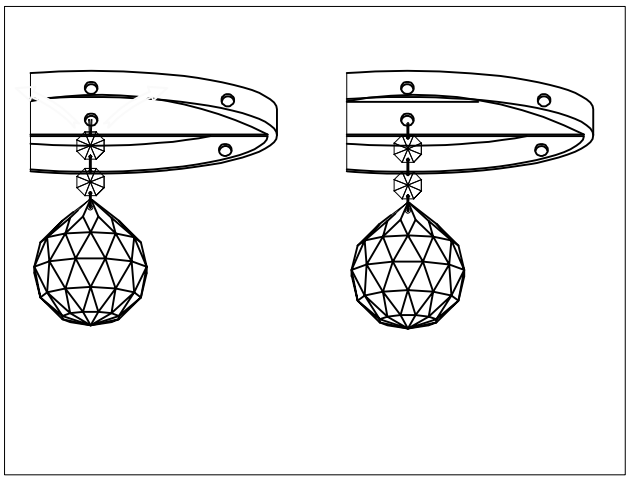

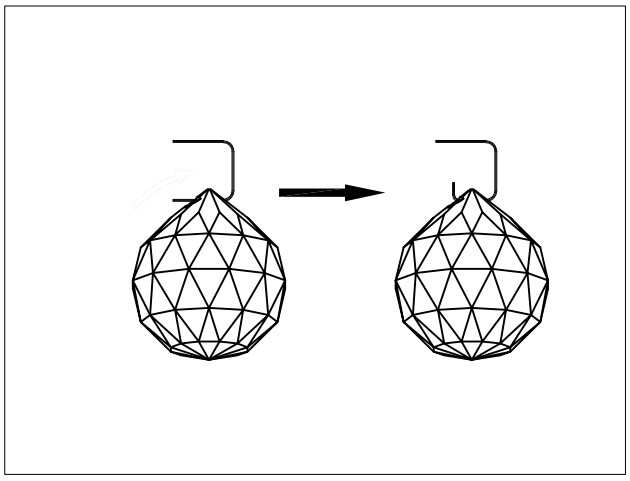

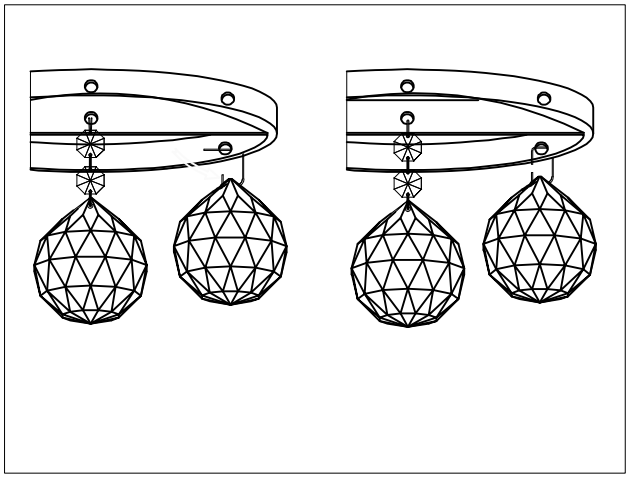

Step 1. Hook the crystal balls with the clips provided. Hook one ball with the 2- octagon crystal strand.

Step 2. Hook the crystals onto the frame. Hook the octagon strand in the center of the frame.

NOTE:

1. Rectangle crystals in the package are only for the spare parts of the assembled light shade, not for hanging like crystal balls.

Troubleshooting Guide

If you have difficulty operating your new ceiling fan it may be the result of incorrect assembly, installation, or wiring. In some cases these installation errors may be mistaken for defects. If you experience any faults please check this troubleshooting guide.

1. Fan doesn't work

- Press a fan speed button (1-6).
- Check the remote control battery (not included in this package).
- Check the circuit breaker to ensure the power is turned on.
- Make sure the blades spin freely.
- Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram.

2. Bulbs do not light up

- Check your power and switch to make sure it's power on.
- Check the bulb to make sure it's installed correctly.
- Change a new bulb.
- Check the wires to make sure they are connected correctly.

4. Noisy operation

- Tighten the light fitting
- Re-tighten all screws on bracket, downrod and fan blades (do not over tighten).
- Check to see if any of the blades are cracked. If so, replace all of the blades.

5. Remote does not work

- Make sure the battery is installed correctly.
- Install 2 new batteries.
- Pair the remote (page 8).

6. Excessive wobbling

- Tighten all of the blade screws.
- Turn off power, support the fan carefully, and check that the hanger ball is properly seated.
- Use the provided balancing kit and instructions to balance the fan:

Step 1. Attach the magnet to place①, ②, ③ or ④, turn on the fan and test where it needs the balance kit.

Step 2. Replace the magnet with the balance paster.

