
# Candle Warmer Lamp
# User Manual

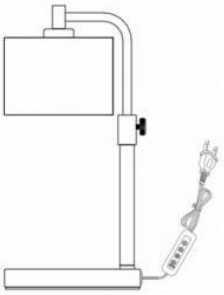


## Ⅰ. Product Specifications

| | |
|---|---|
| Input Voltage | AC110-120V/60Hz |
| Max Wattage | 50W |
| Bulb Base | GU10 |
| Dimmer | 10%-100%(stepless dimming) |
| Timer | 1H/2H/4H |
| Waterproof Level | IP20 |

## Ⅱ. Halogen Bulb Specifications

| | |
|---|---|
| Voltage | AC120V |
| Power | 50W |
| Bulb Base | GU10 |
| Color Temperature | 2700K |

## Ⅲ. How to use the candle warmer lamp

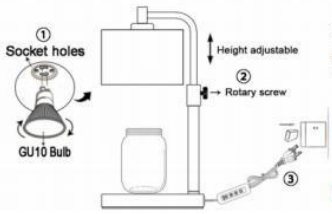



① Install the GU10 bulb pins into the socket holes and turn it clockwise until it seats.

② Loosen the screw could adjust the height , then rotating screw to fix it.

③ Insert the plug into the socket and turn on the light by controller.

Tip: If the lampshade is loose, you can twist the silver ring on the bulb base to put the lampshade back.

## Ⅳ. How to use the controller

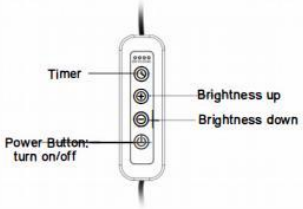


Dimmer: long press the brightness button to choose the brightness you need. It supports stepless dimming, different light intensities will affect melting speed of candle.

Timer: the candle warmer lamp can be set to automatically shut off after 1, 2, or 4 hours.

## Ⅴ. WARNING

1.The candle warmer lamp will melt candle by heat energy, please don't fire the candle when using.

2. Please turn off the power before replacing the light bulb. You need to wait for the bulb temperature to drop and then to replace the bulb, avoid burns.

3. The fragrant essential oil in the candle will volatilize after a period of use. To maximize the fragrance of the candle, please scrape off and pour out the melted wax on the surface.

4. Please keep candle warmer Lamp out of reach of children and pets.

5. Please turn off the candle warmer lamp before going out.