
ASSEMBLY INSTRUCTION

ITEM: N715P472712

DINING TABLE

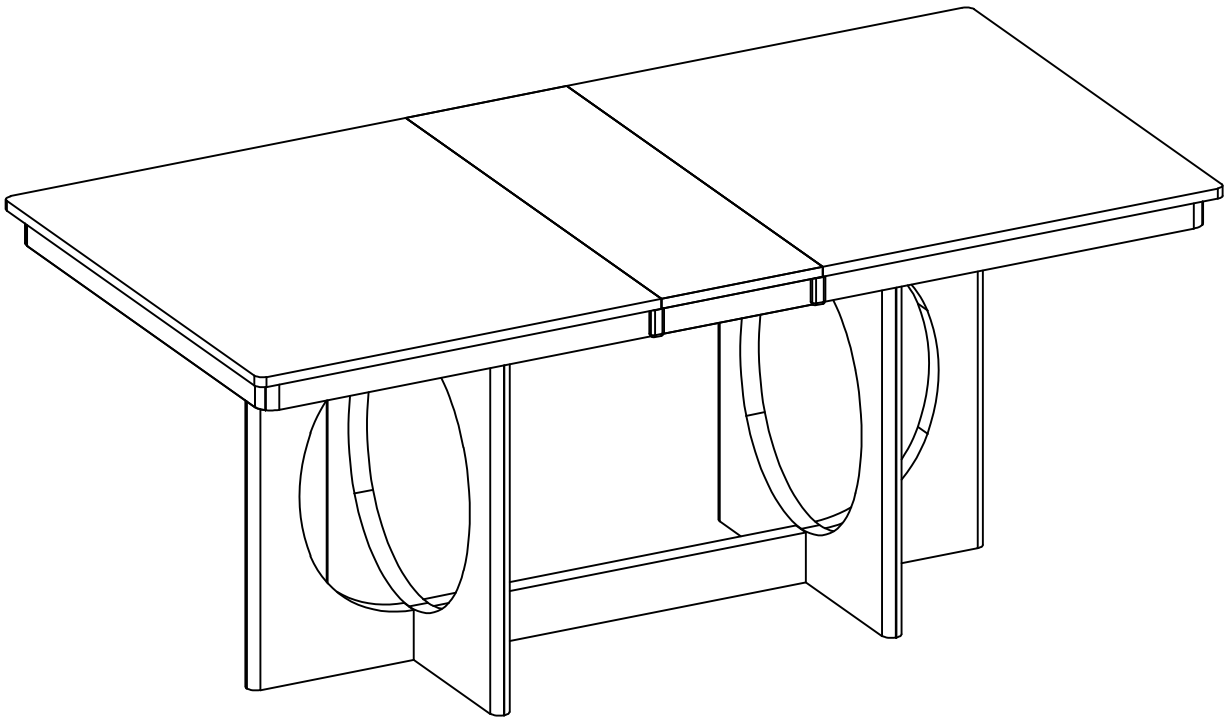


IMPORTANT NOTE :

① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.

② BEFORE YOU BEGIN , KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

3 DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE TABLE IS FULLY SET-UP

Detail view

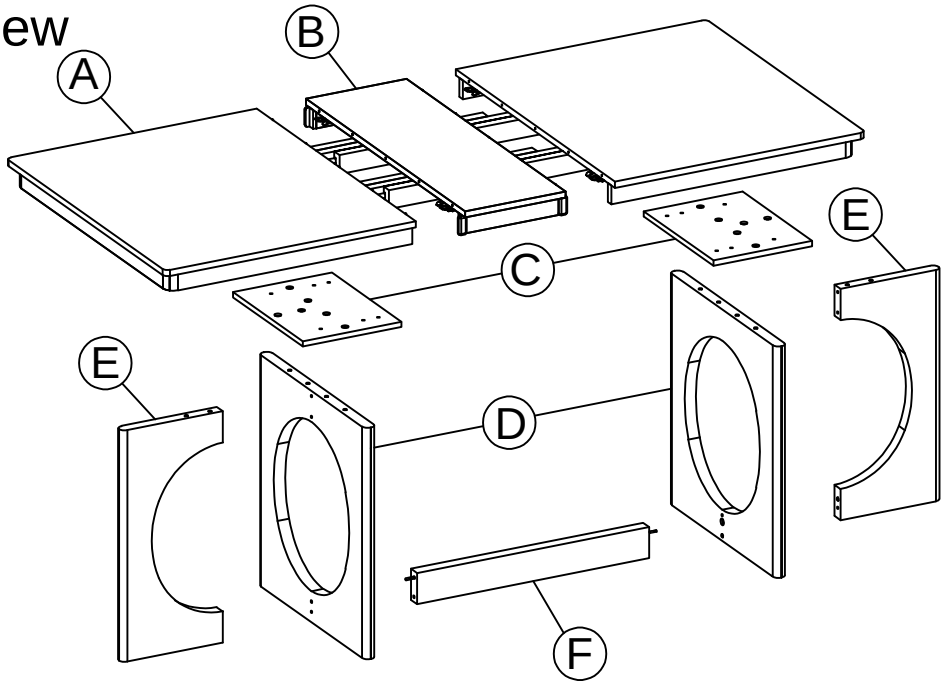

Part List

A


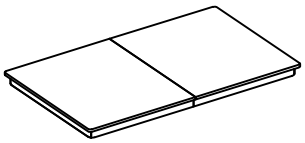



Table Top (1pc)

B

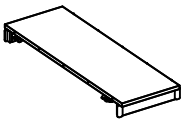

Center Leaf (1pc)

C



Link Board (2pcs)

D

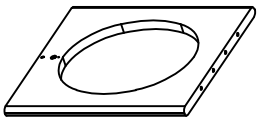


Table Middle Legs (2pcs)

E



Table Side Legs (2pcs)

F



Stretcher (1pc)

Hardware List

1



Ø1/4" x 55mm

Bolt (4pcs)

2



Ø1/4" x 35mm

Bolt (12pcs)

3



Ø1/4" x 13mm x 1.5mm

Spring Washer (14pcs)

4



Ø1/4" x 16mm x 1.5mm

Flat Washer (14pcs)

5



Ø8 x 30mm

Wood Dowel (6pcs)

6



4 x 58mm

Allen key (1pc)

7




Ø1/4"


Half Moon Washer (2pcs)

Step 1

Remove the pre-installed Connecting Board (C) from the Table Top (A) using an Allen Key.
Note: Keep the removed hardware separate for use in the next step.

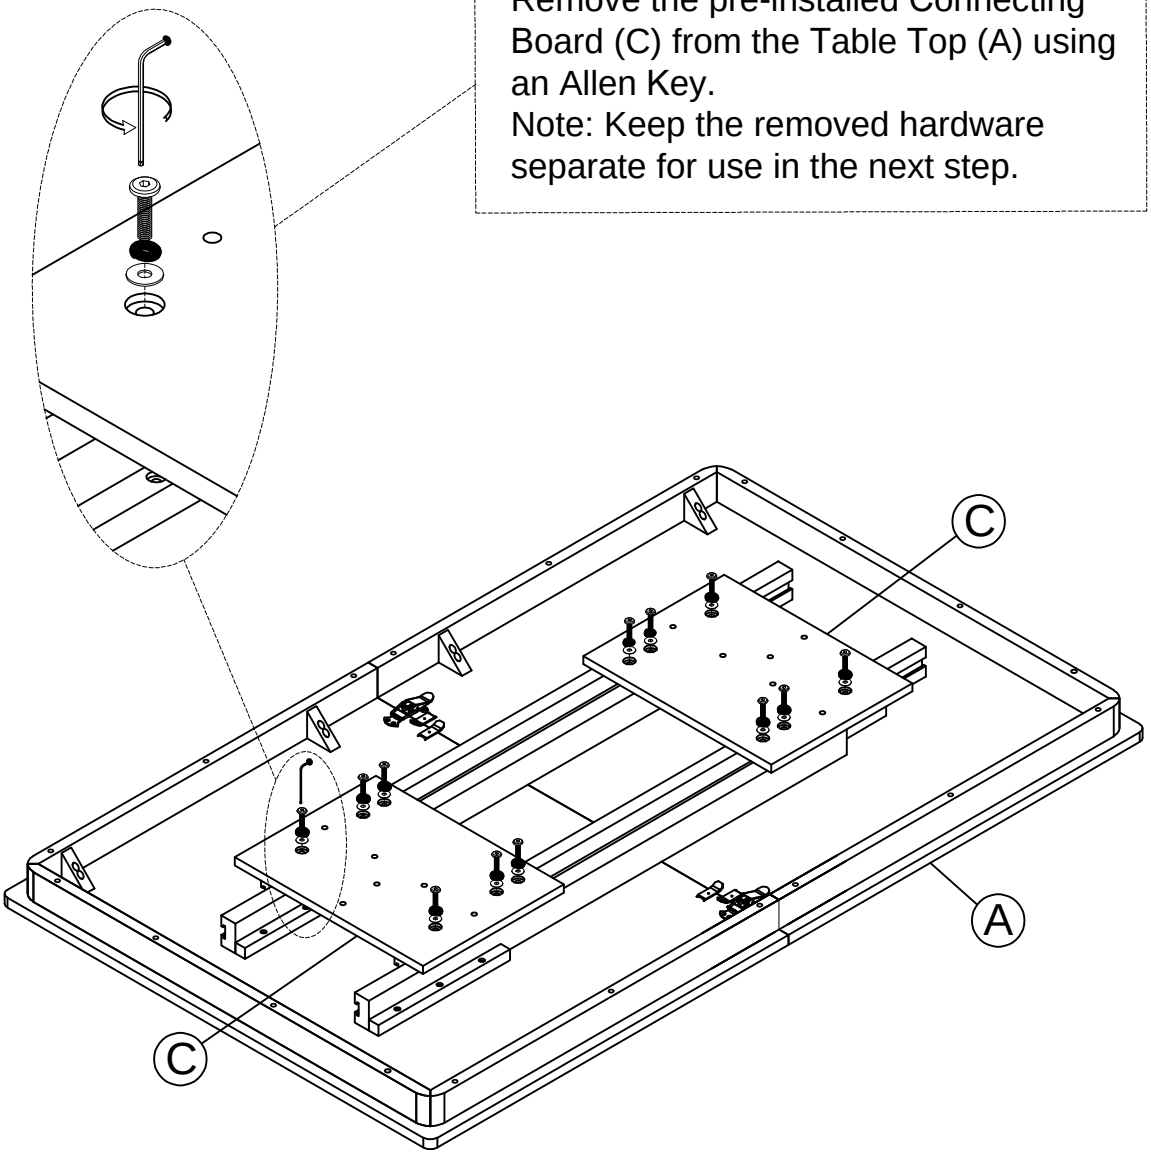


Step 2

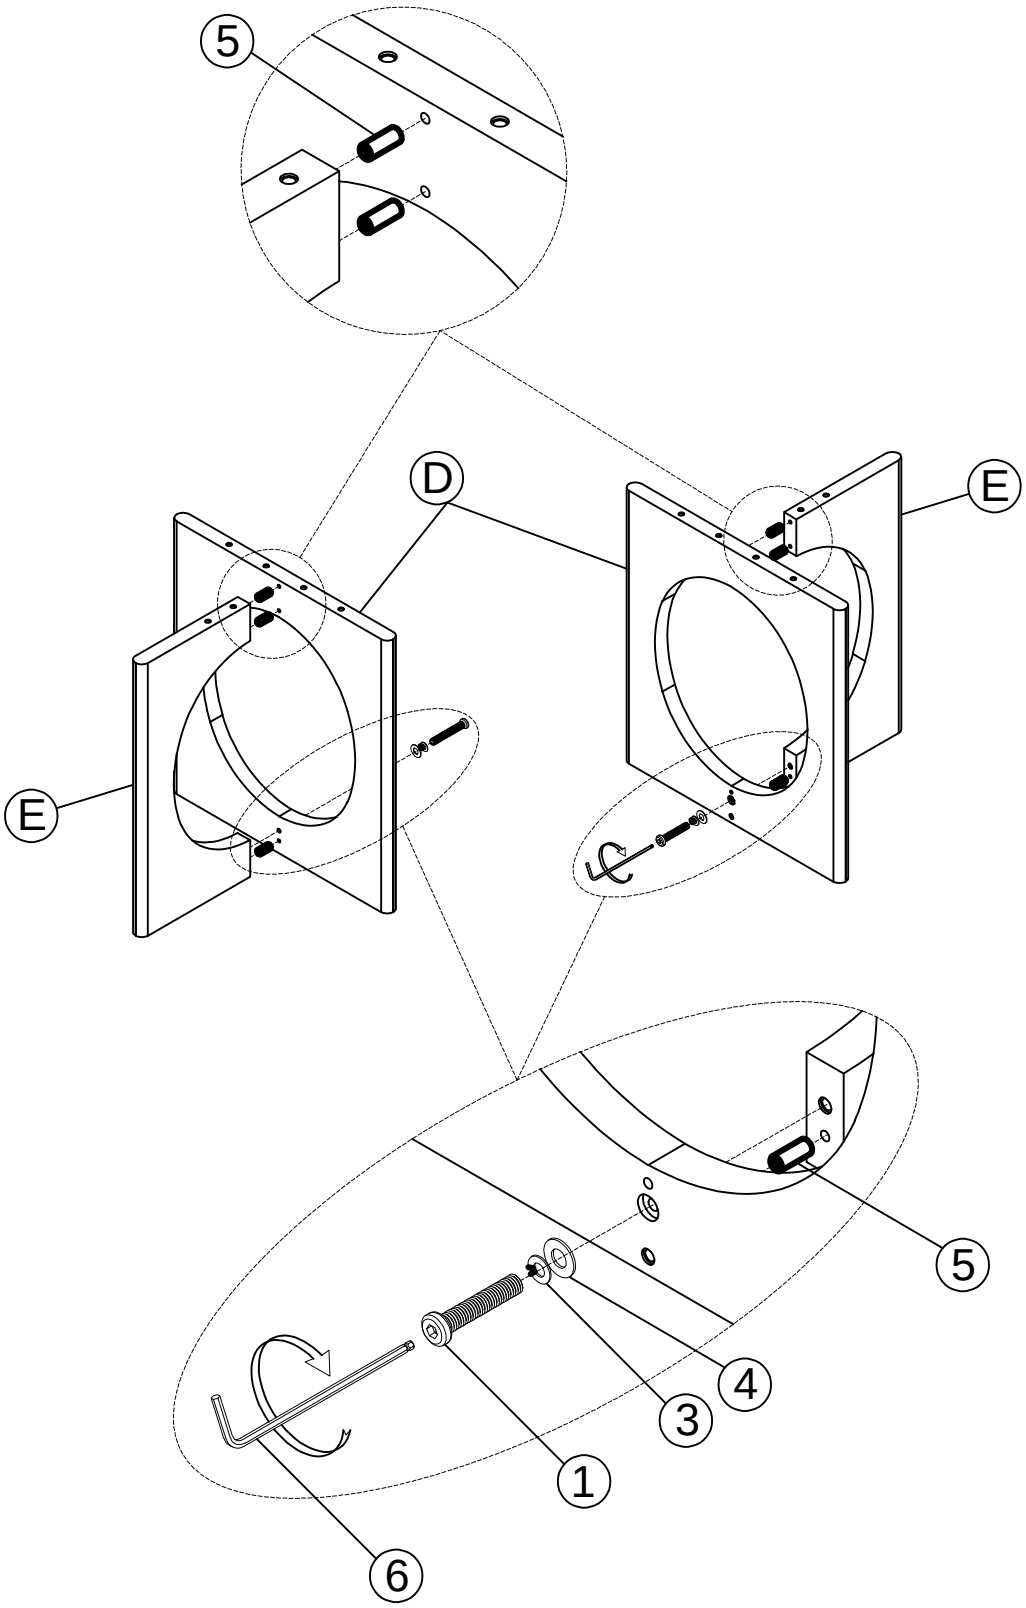


1	Ø1/4"x55	2PCS			
3	Ø1/4"x13x1.5	2PCS	5	Ø8x30	6PCS
4	Ø1/4"x16x1.5	2PCS	6	4x58	1PC

Step 3

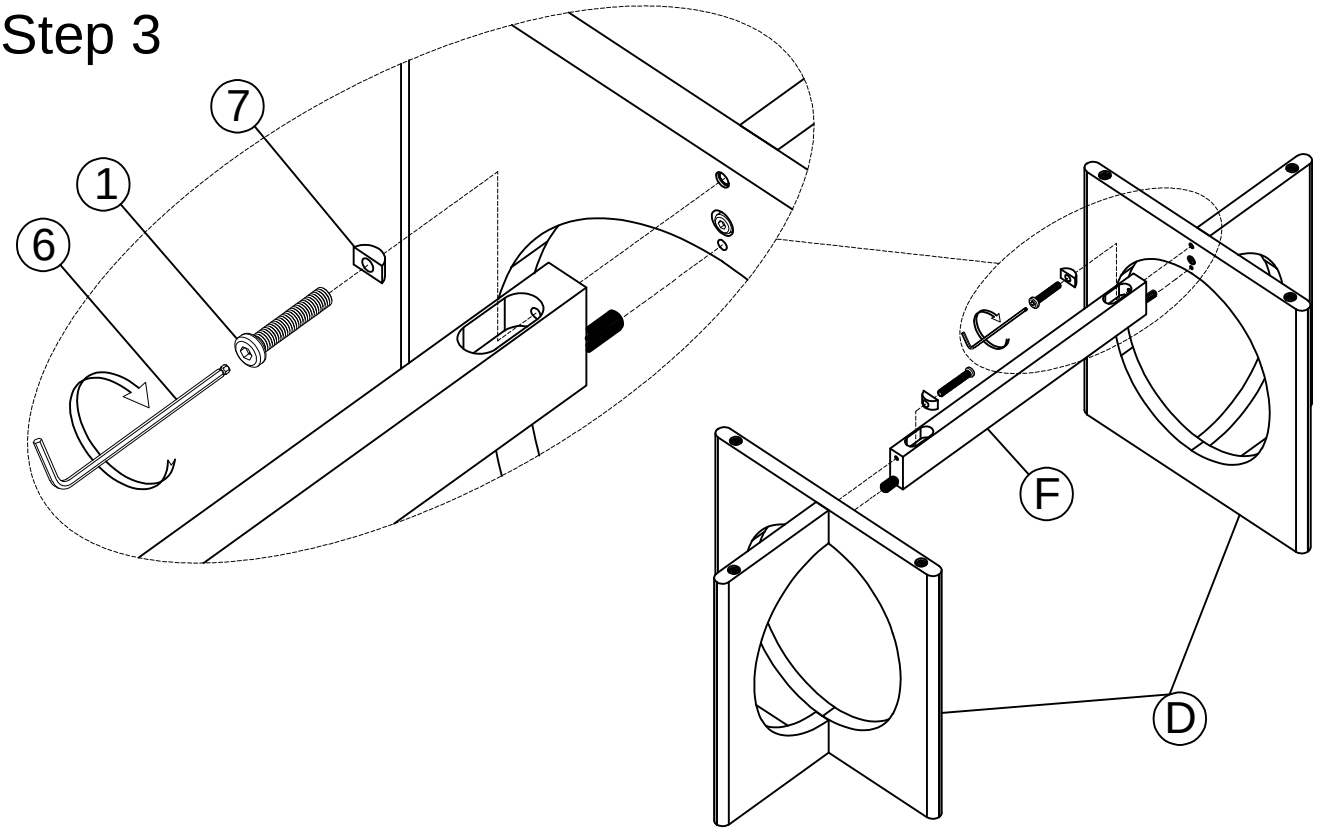


1	Ø1/4"x55	2PCS	6	4x58	1PC
7	Ø1/4"	2PCS			

Step 4

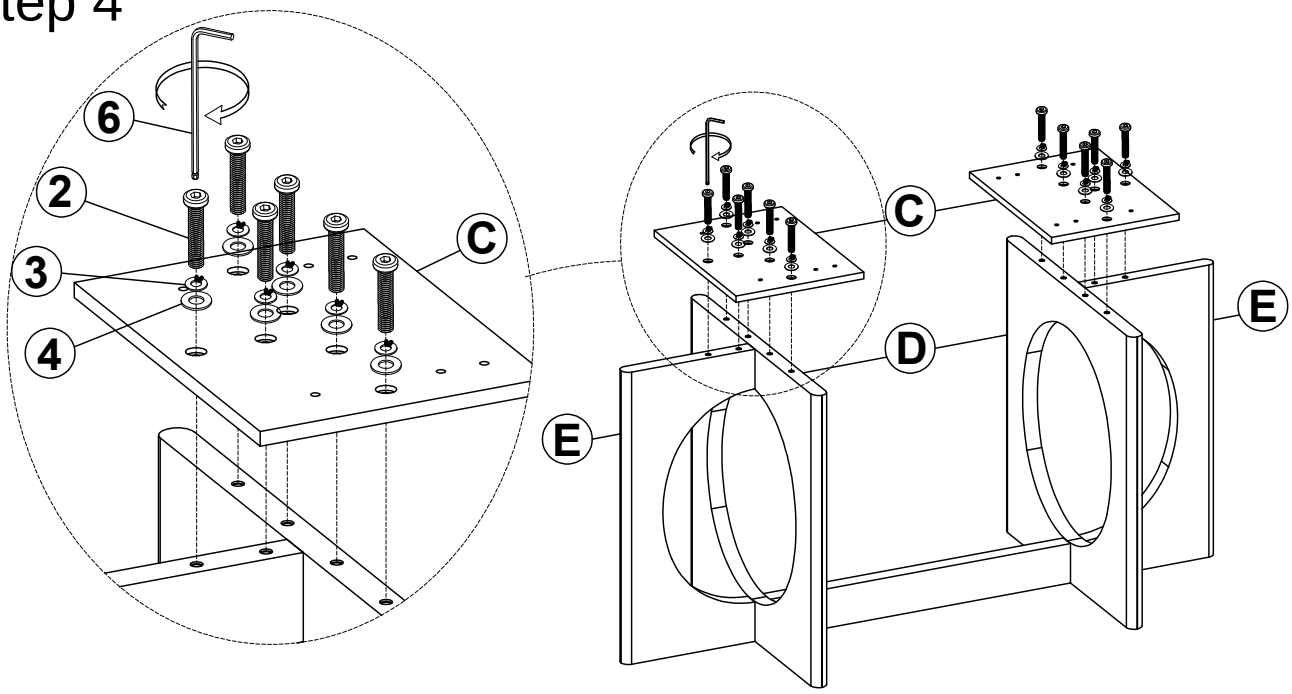


2	Ø1/4"x35	12PCS	4	Ø1/4"x16x1.5	12PCS
3	Ø1/4"x13x1.5	12PCS	6	4x58	1PC

Step 5

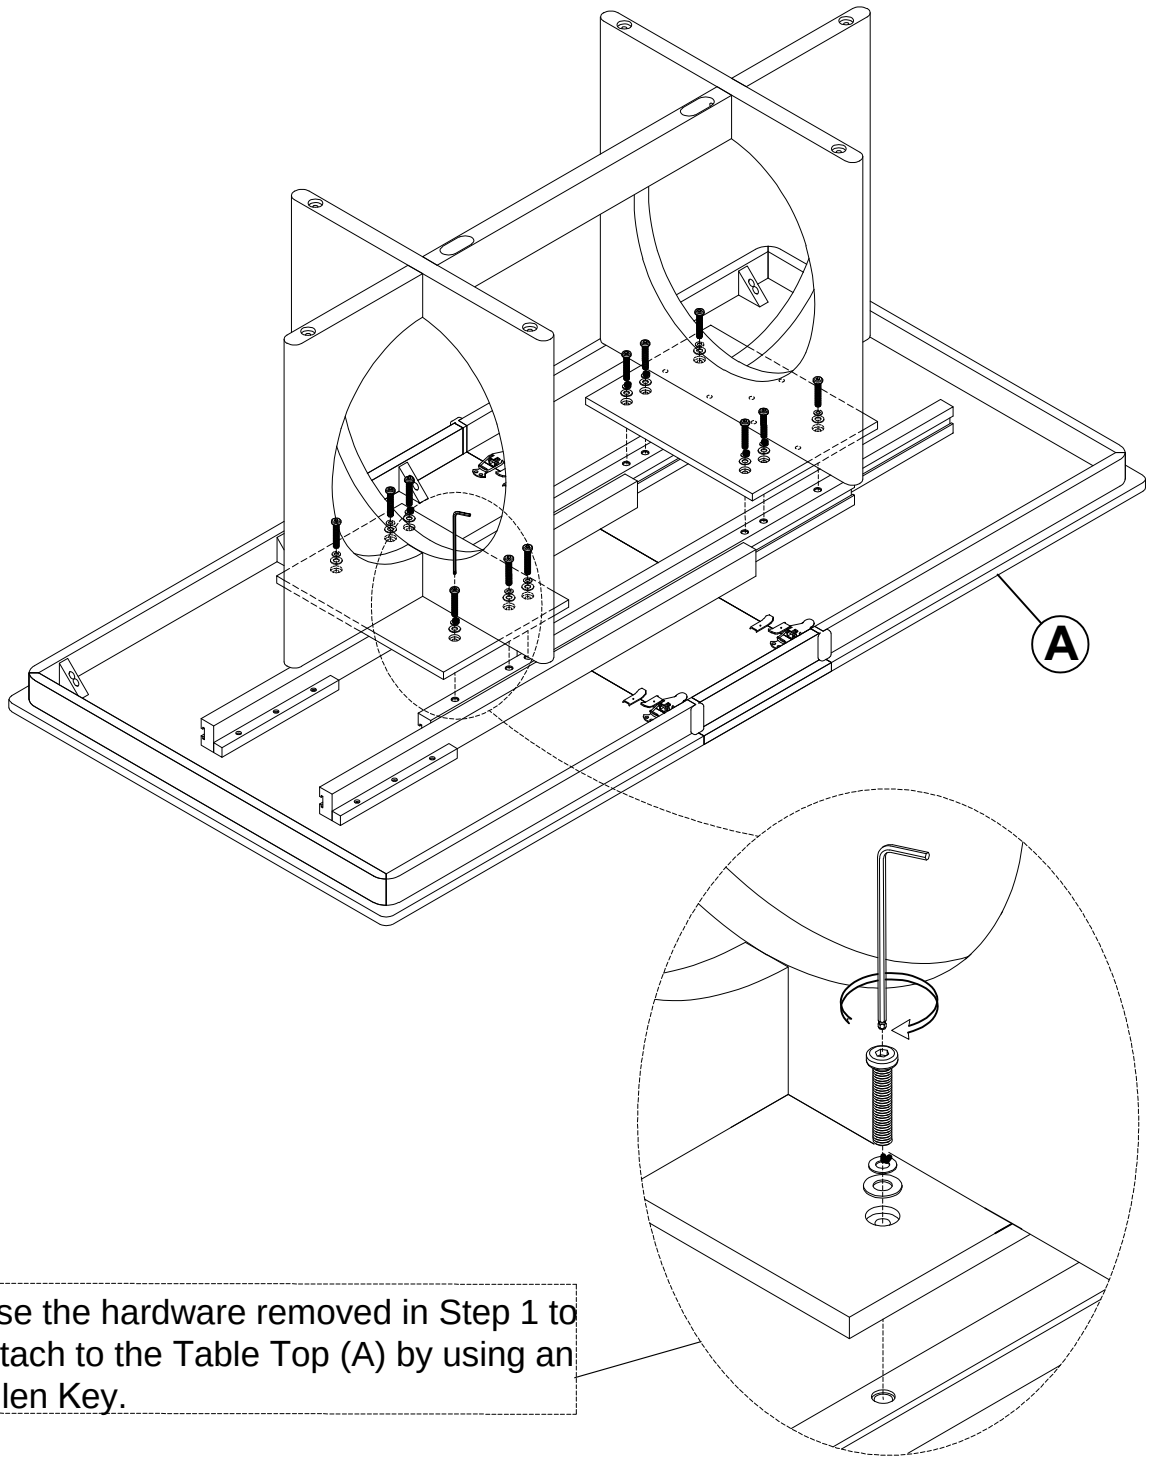


Use the hardware removed in Step 1 to attach to the Table Top (A) by using an Allen Key.


Step 6

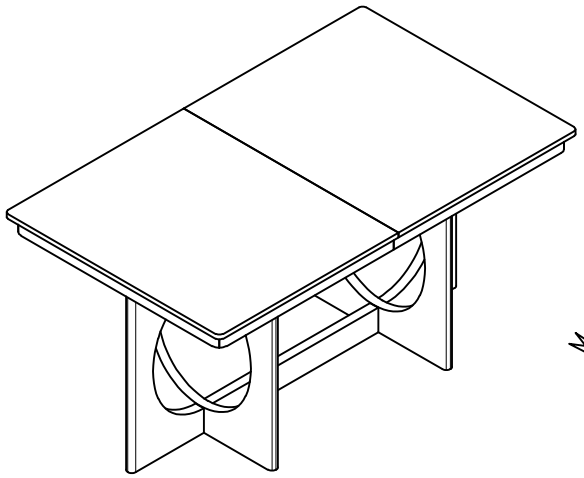


Unlock in these positions and pull the table top to either side.

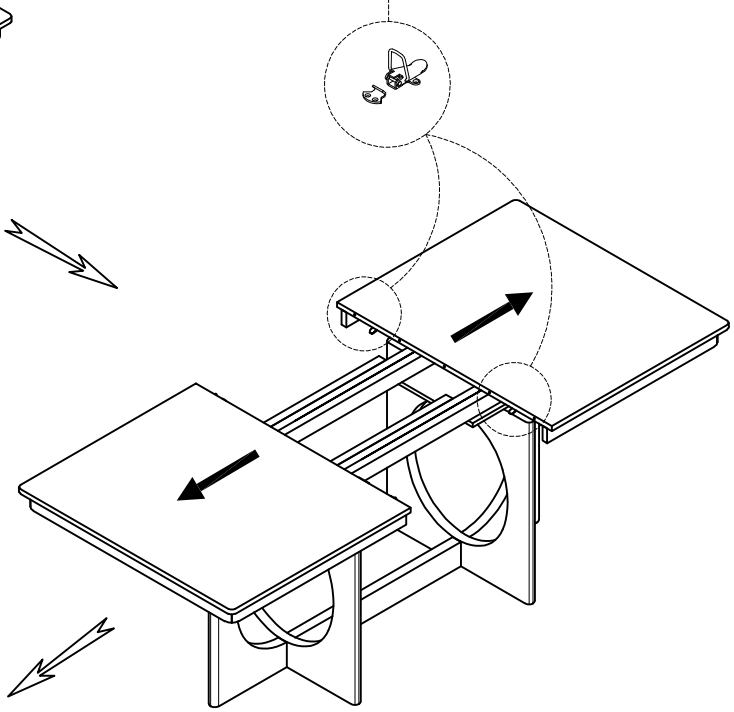

Place (B) in this position and align the drill holes accordingly then push the two table tops together.

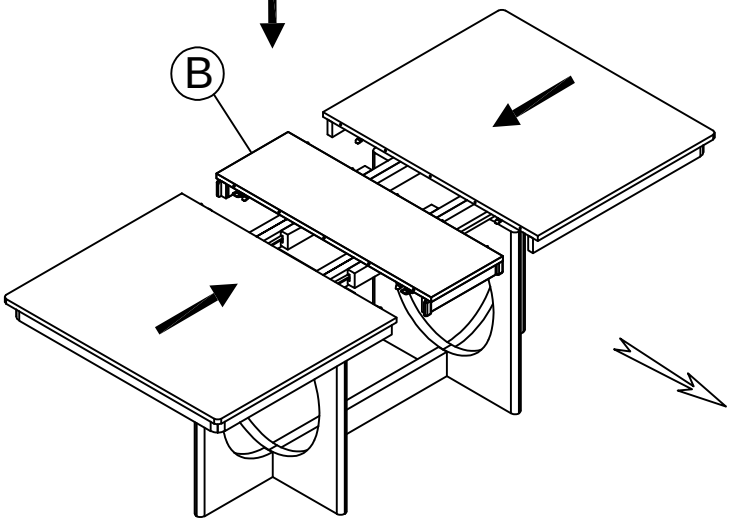

Hardware lock these positions.

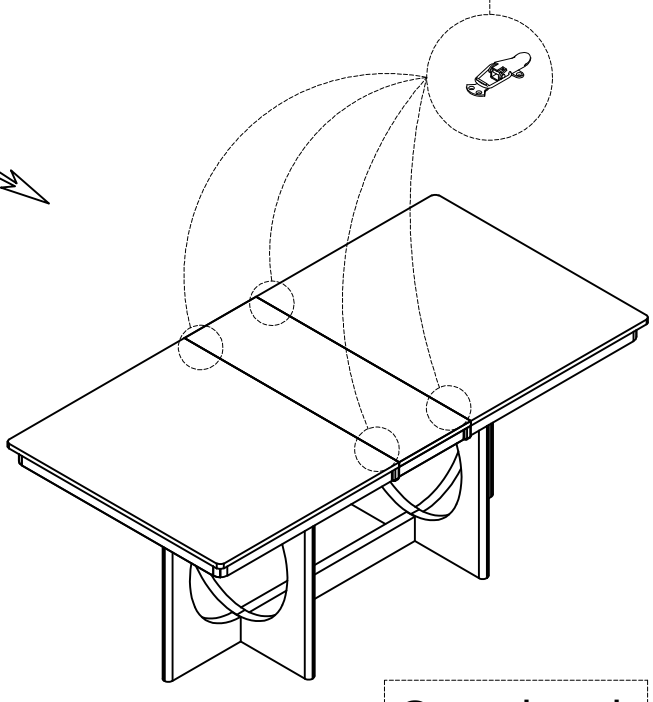

Completed