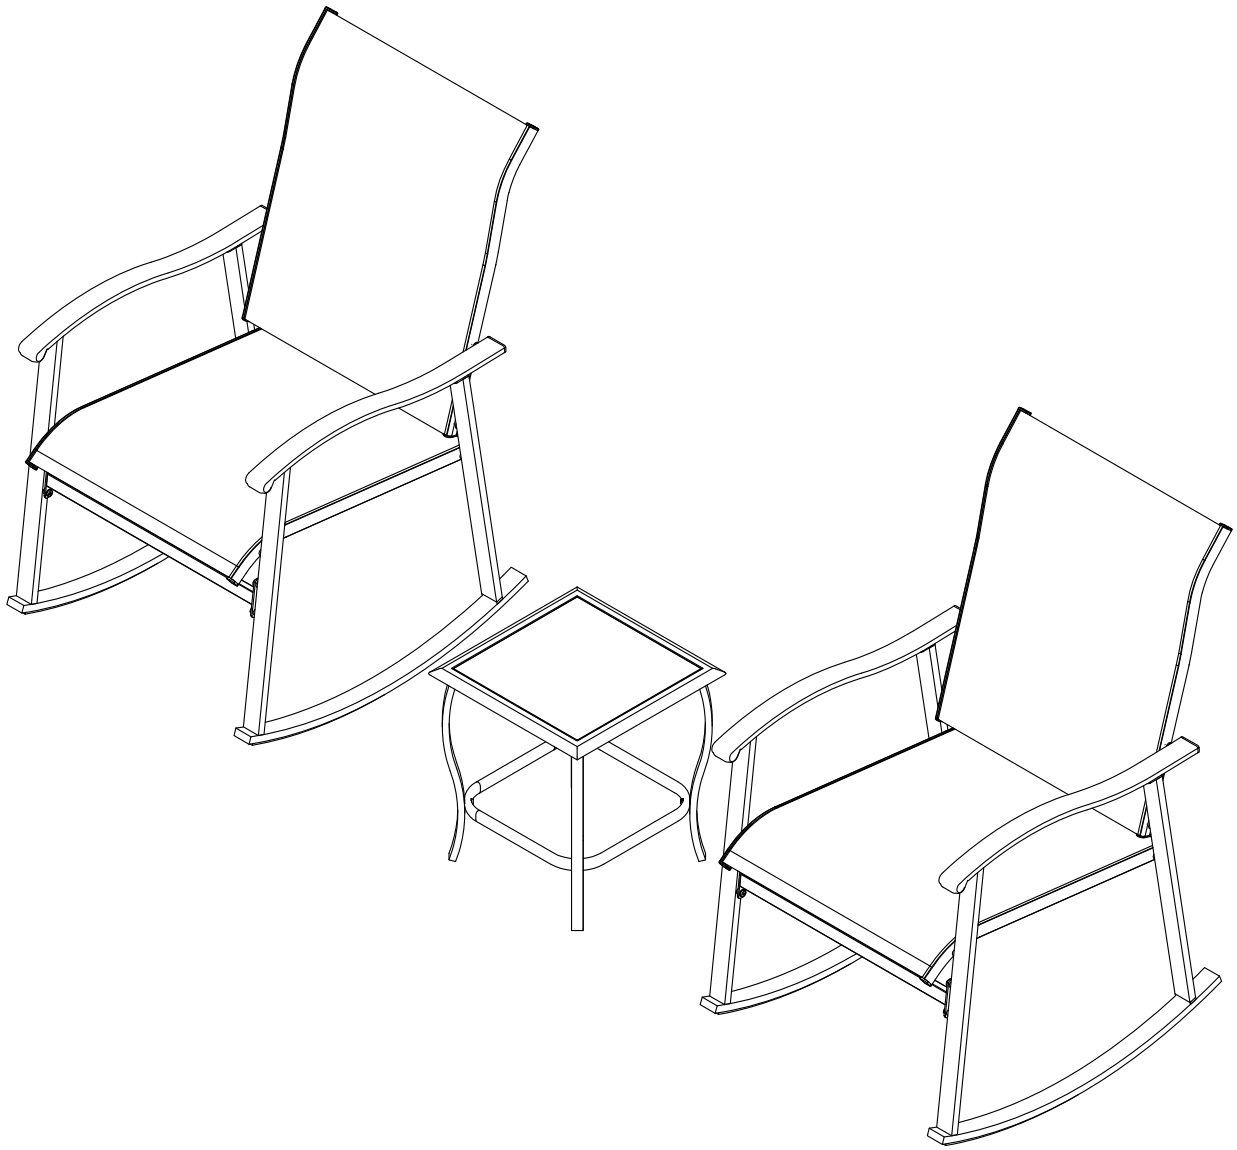
Outdoor Rocking Chair	SKU:LW-TSL3-GR-X-1-S SKU:LW-TSL3-LG-X-1-S SKU:LW-TSL3-BR-X-1-S SKU:LW-TSL3-DB-X-1-S SKU:LW-TSL3-BLU-X-1-S



Instruction Manual

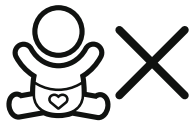

Thank you for shopping with us!

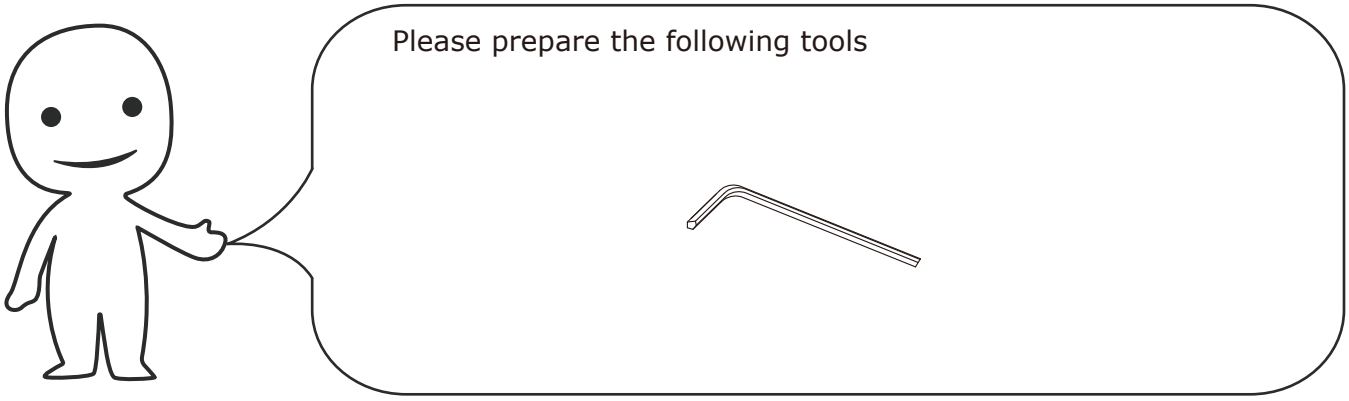
If any parts is missing, broken upon receipt or you need any help from us.

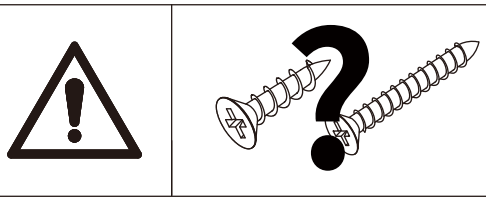
For the FASTEST solutions, please FIRSTLY CONTACT US at our after-sales email: **CSsince1987@hotmail.com!**

⚠ IMPORTANT

Please follow the instruction manuals and use a pad to avoid damage during assembly.



	Not intended for use by children. Please keep your children closely supervised.
	Keep away from fire or other heat sources.
	Do not use harsh cleaner for cleaning!
	We recommend wearing protective gloves for assembly.
	Identify, sort and count the parts before assembly.

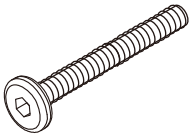





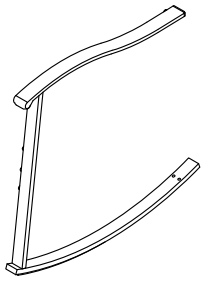
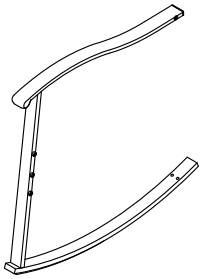
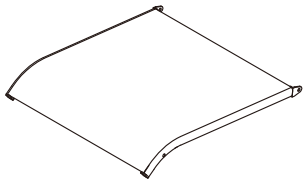
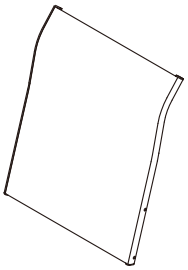
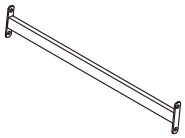
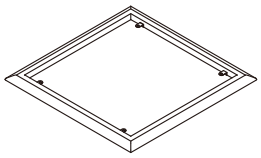
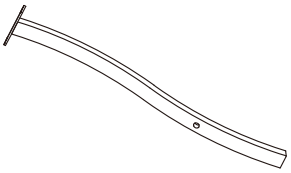
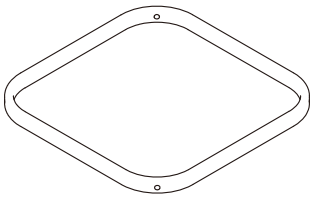
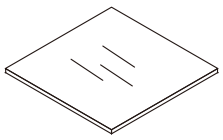
When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

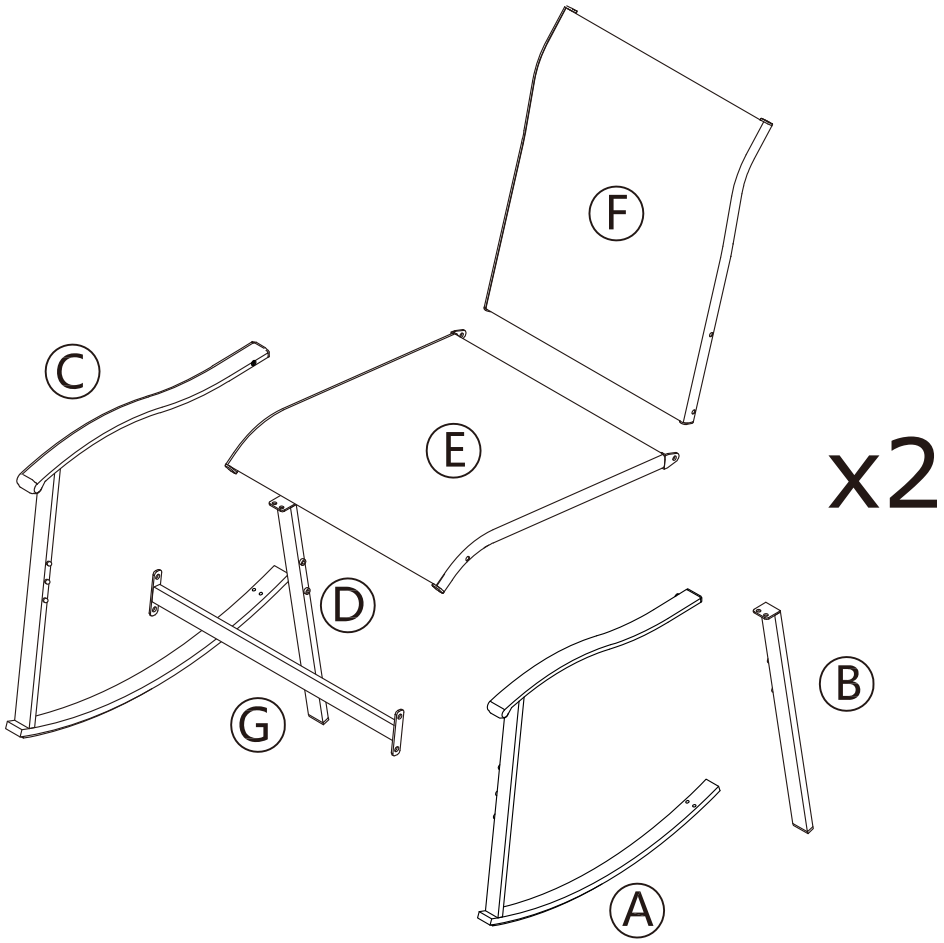
Hardware List

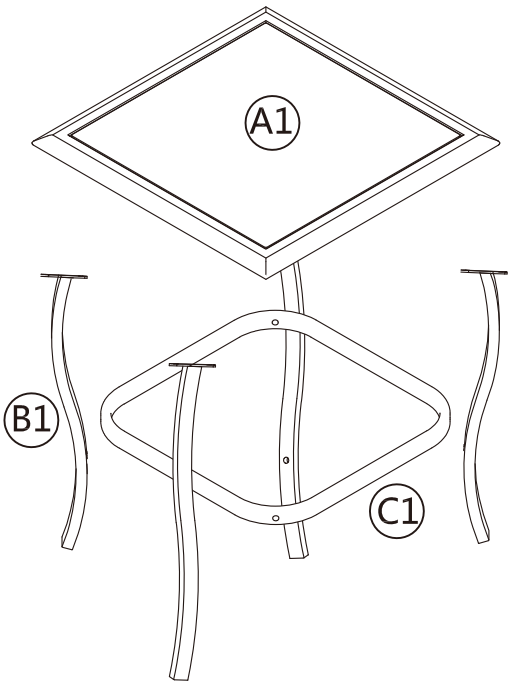
① x 20	② x 24	④ x 52	⑤ x 1
 M6 x 15 mm	 M6 x 30 mm		 Allen key

⑥ x 4	⑦ x 4	⑧ x 1
 M6 x 35 mm	 nut	 Wrench



Parts List

	Ⓐ LEFT 2PCS		Ⓑ LEFT 2PCS		Ⓒ RIGHT 2PCS		Ⓓ RIGHT 2PCS
	Ⓔ SEAT 2PCS		Ⓕ BACK 2PCS		Ⓖ SUPPORT BAR 2PCS		A1 TABLE TOP 1PC
	B1 TABLE LEG 4PCS		C1 LEG BRACE 1PC		D1 GLASS 1PC		


F
C
E
x2
D
B
G
A

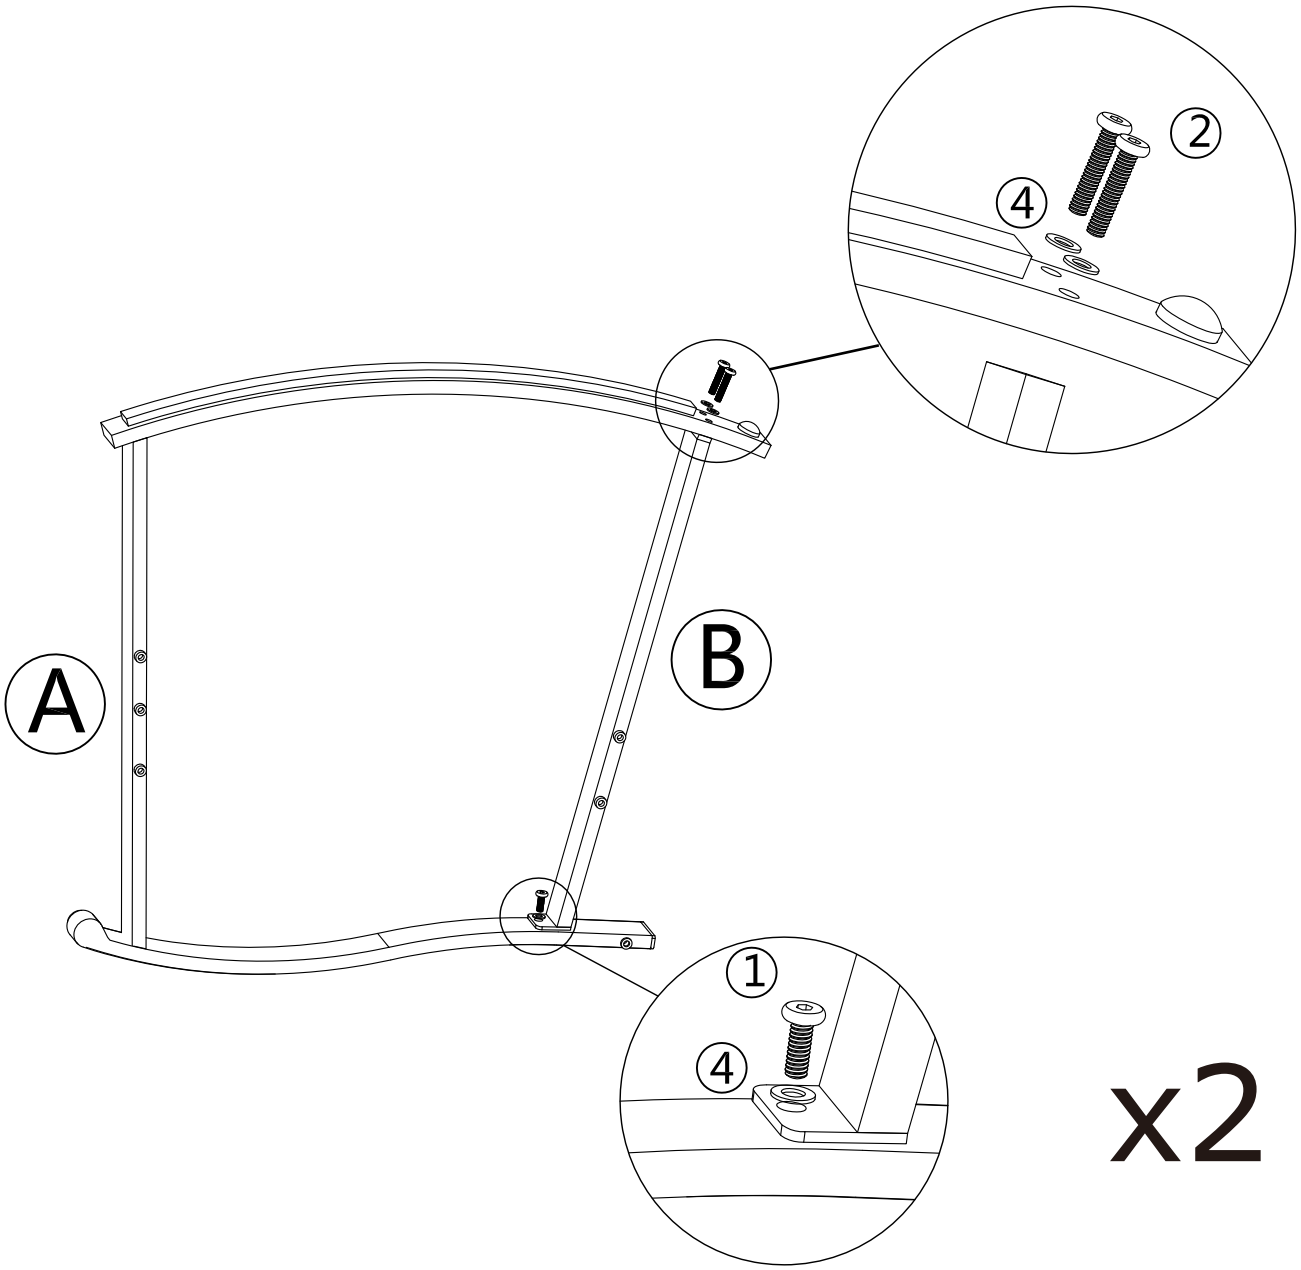

A1
B1
C1

STEP 1

Ⓐ x 1	Ⓑ x 1	① x 1	② x 2	④ x 3	⑤ x 1
					
LEFT	LEFT	M6 x 15 mm	M6 x 30 mm		

Fix part A with part B with two M6x30mm Screws (2) and Flat Washers (4) .



Use (5) Allen key. **DO NOT YET TIGHTEN.**



Fix part A with part B with one M6x15mm Screws (1)

and Flat Washers (4).Use (5) Allen key. **DO NOT YET TIGHTEN.**

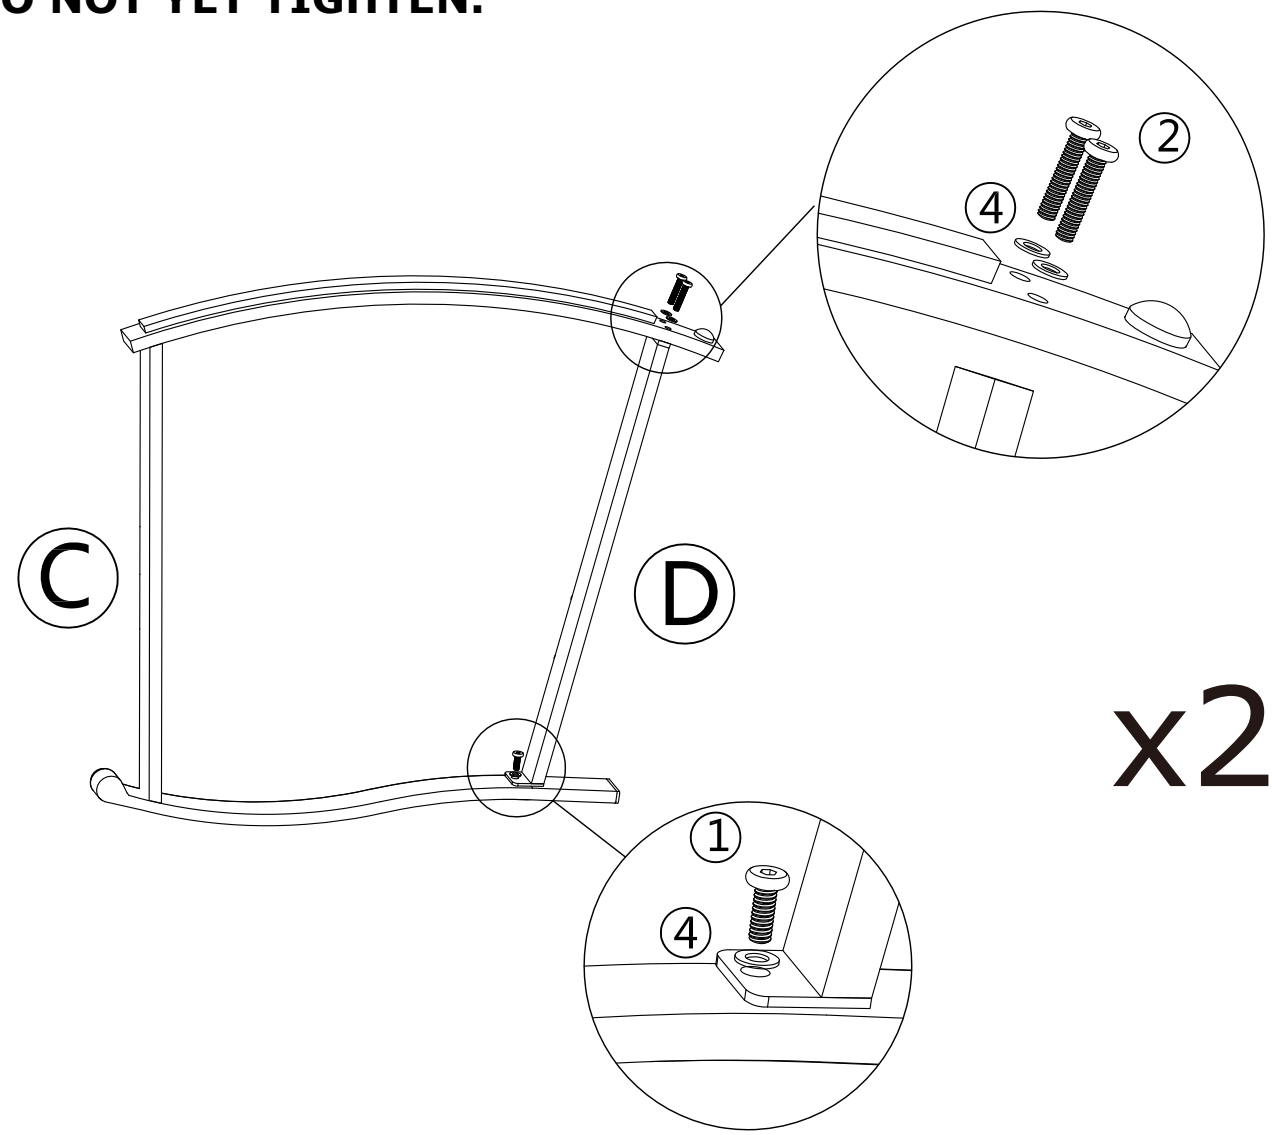
STEP 2

Ⓒ x 1	Ⓓ x 1	① x 1	② x 2	④ x 3	⑤ x 1
					
RIGHT	RIGHT	M6 x 15 mm	M6 x 30 mm		

Fix part C with part D with two M6x30mm Screws (2)

and Flat Washers (4) . Use (5) Allen key.



DO NOT YET TIGHTEN.



Fix part C with part D with one M6x15mm Screws (1)

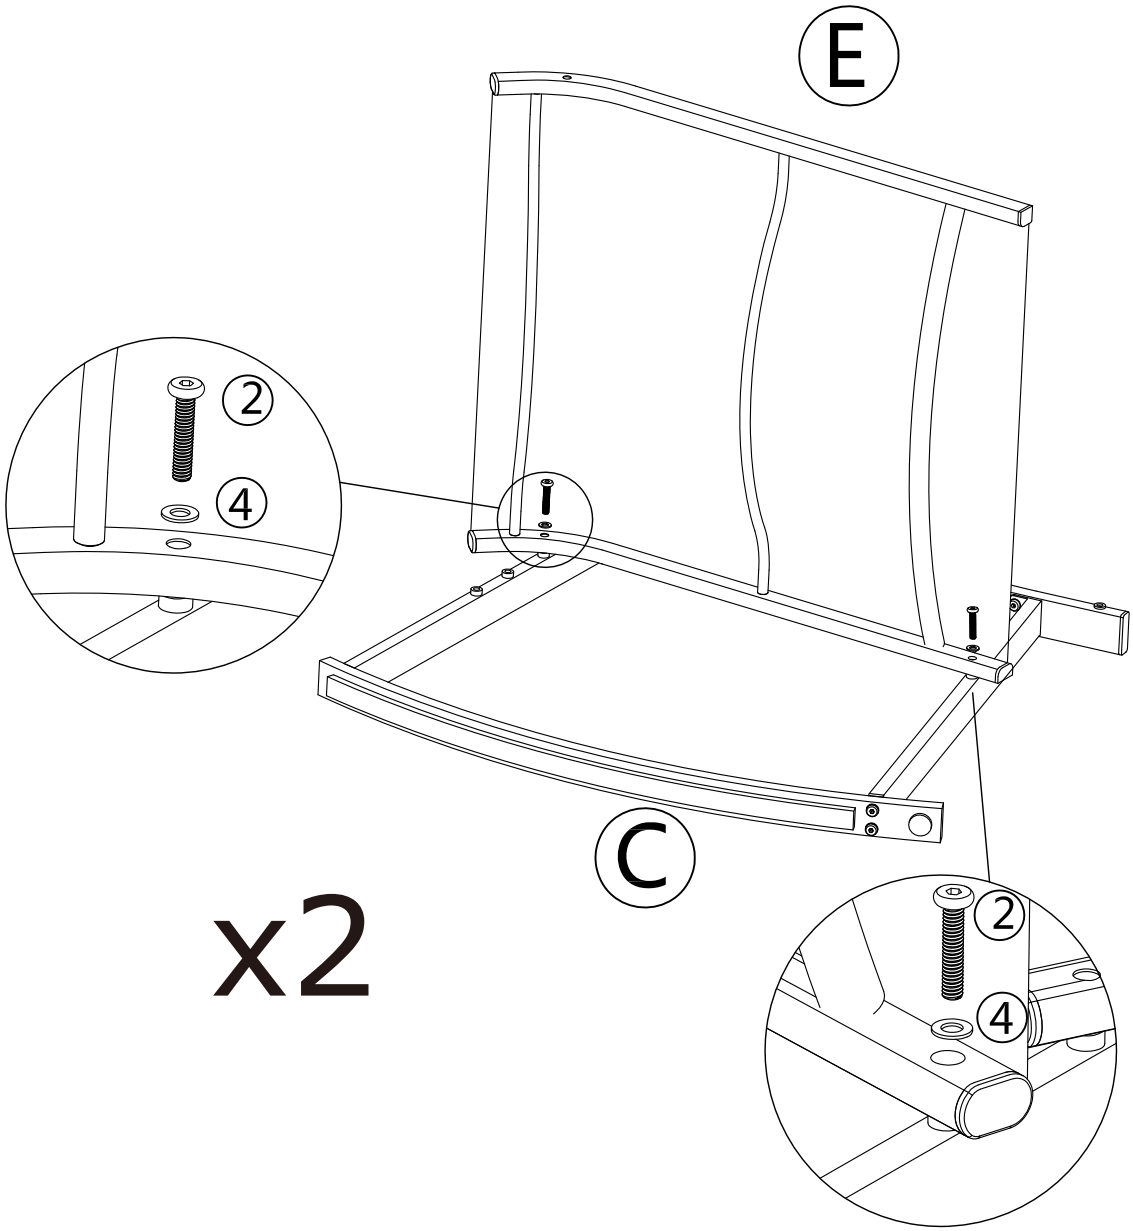
and Flat Washers (4).Use (5) Allen key. **DO NOT YET TIGHTEN.**

STEP 3



Ⓔ x 1	② x 2	④ x 2	⑤ x 1
 SEAT	 M6 x 30 mm		

Fix part E with part C with two M6x30mm Screws (2)

and Flat Washers (4).Use (5) Allen key. **DO NOT YET TIGHTEN.**

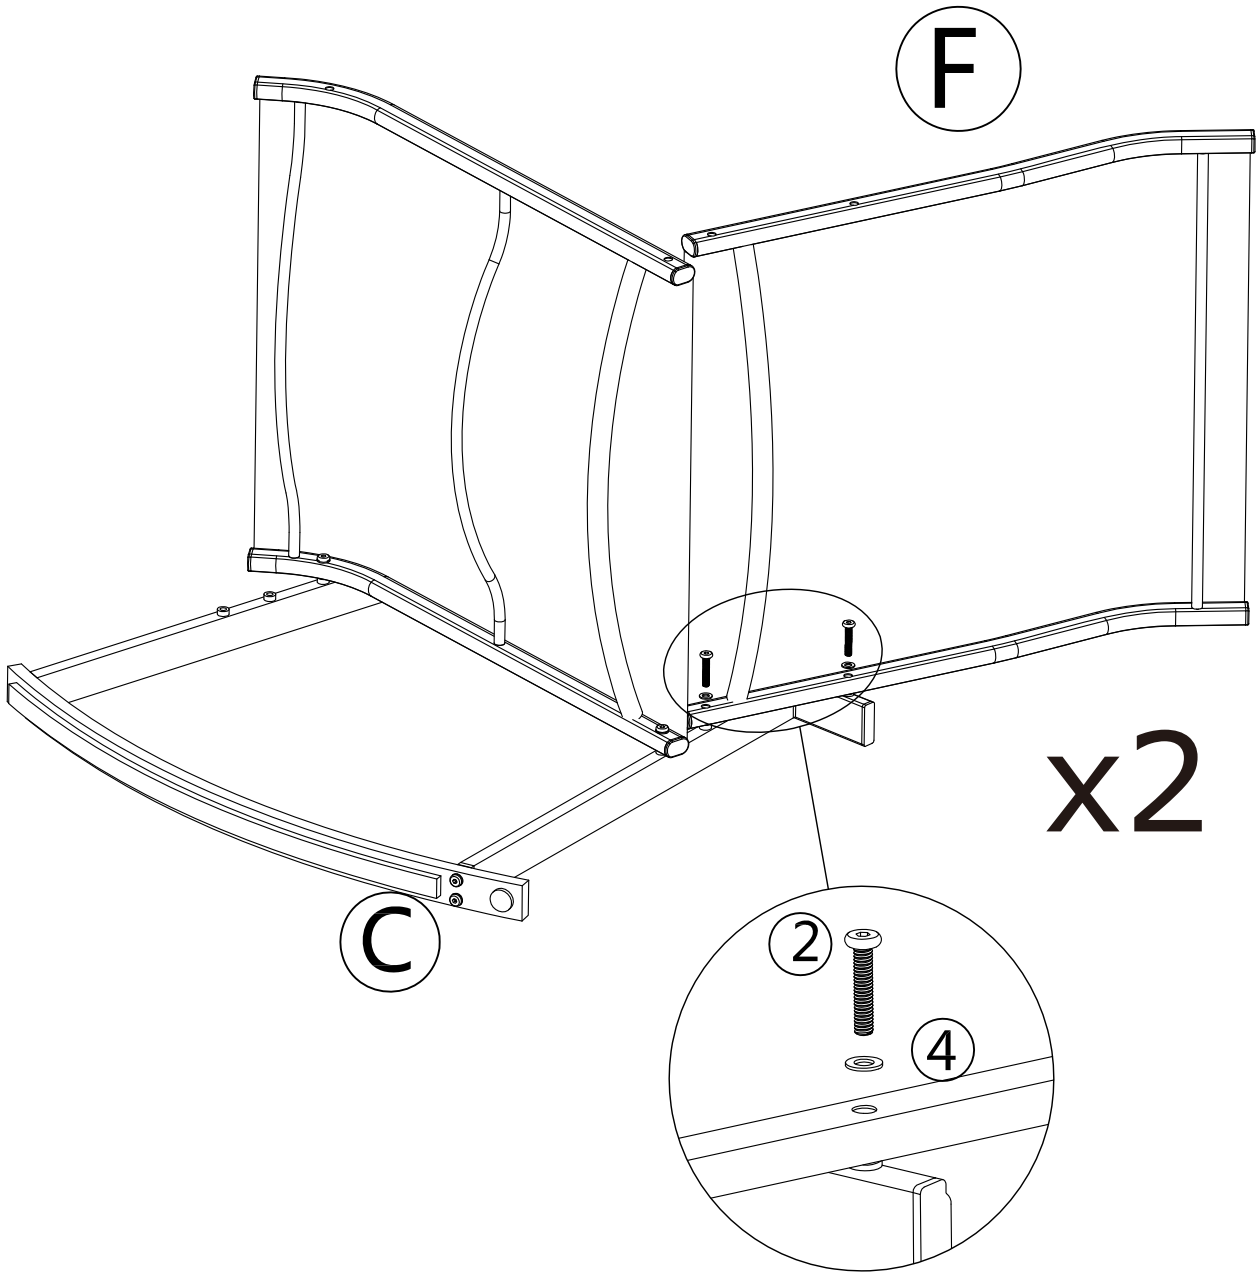


STEP 4


F x 1	② x 2	④ x 2	⑤ x 1
 BACK	 M6 x 30 mm		

Fix part F with part C with two M6x30mm Screws (2)

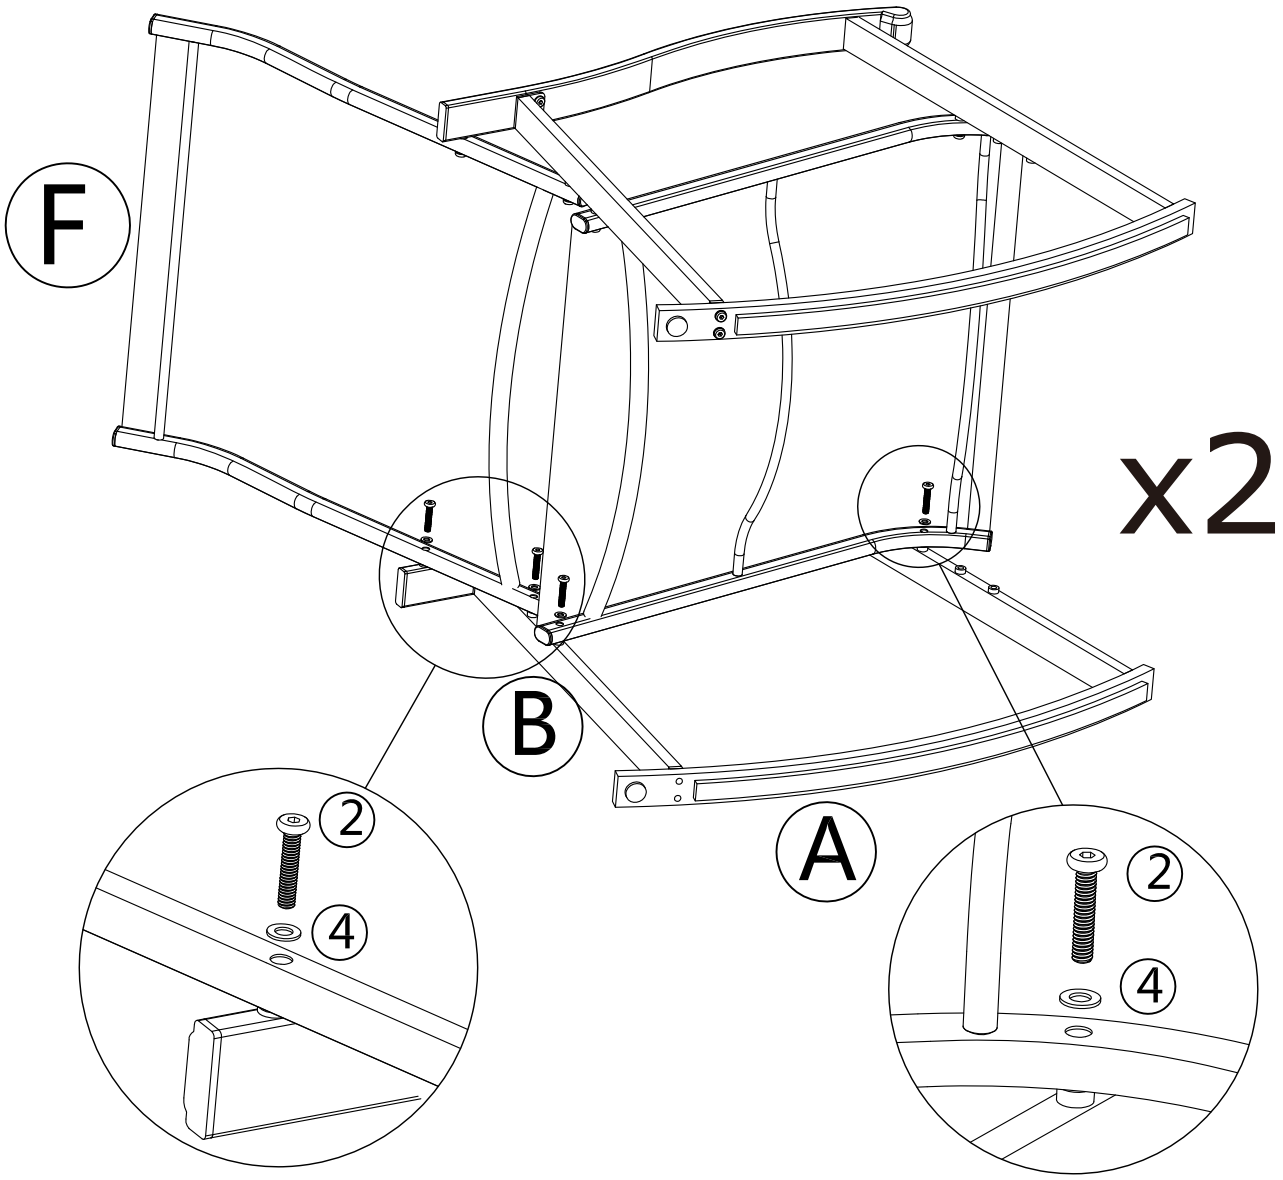
and Flat Washers (4).Use (5) Allen key. **DO NOT YET TIGHTEN.**



STEP 5

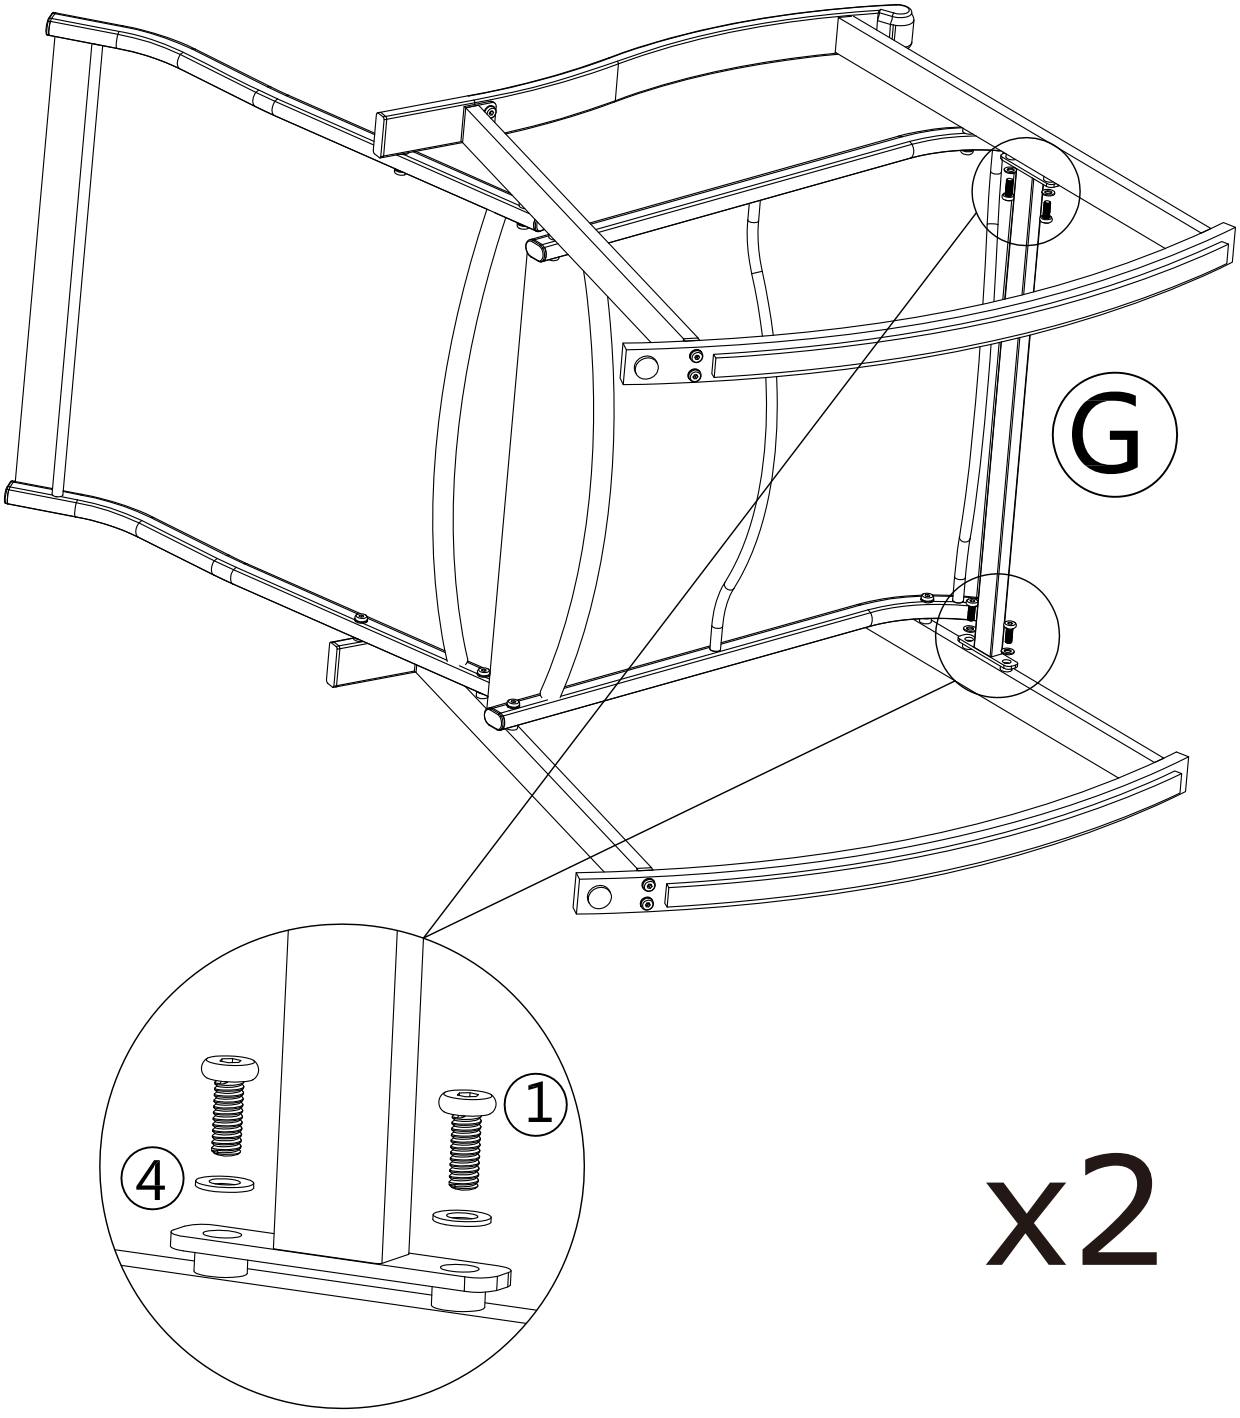
② x 4	④ x 4	⑤ x 1
 M6 x 30 mm		

Fix part F with part A and part B with four M6x30mm Screws (2) and Flat Washers (4).Use (5) Allen key. **DO NOT YET TIGHTEN.**



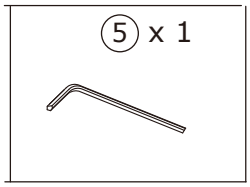
STEP 6

Ⓖ x 1	① x 4	④ x 4	⑤ x 1
			
SUPPORT BAR	M6 x 15 mm		



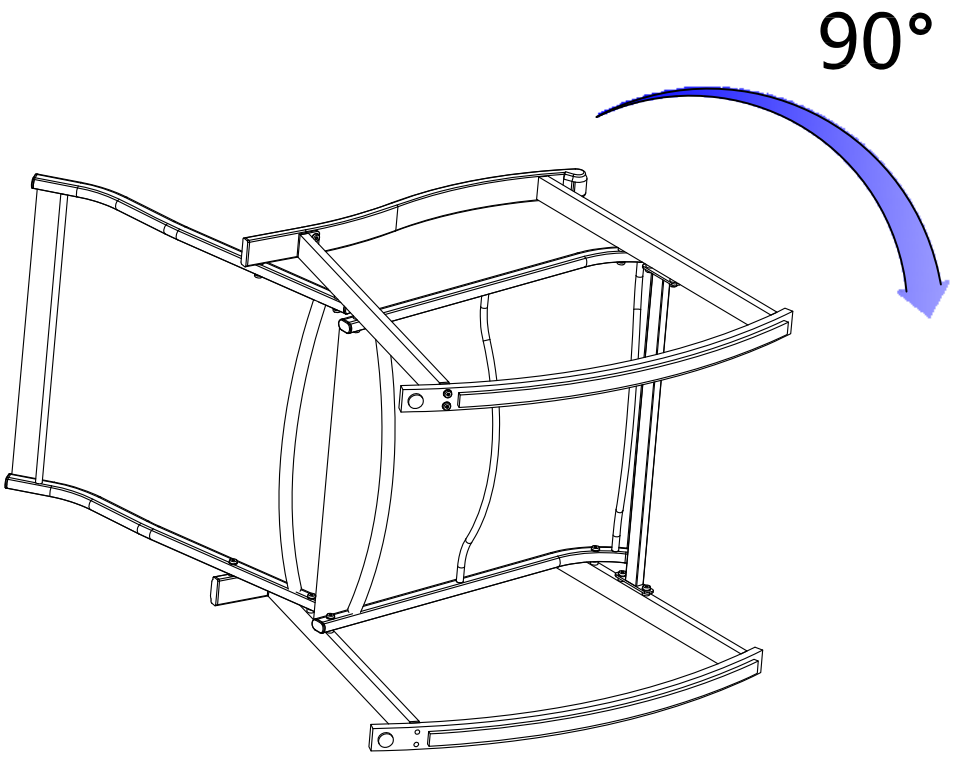
Fix part G with part A and part B with four M6x15mm Screws (1) and Flat Washers (4).Use (5) Allen key. **DO NOT YET TIGHTEN.**

STEP 7

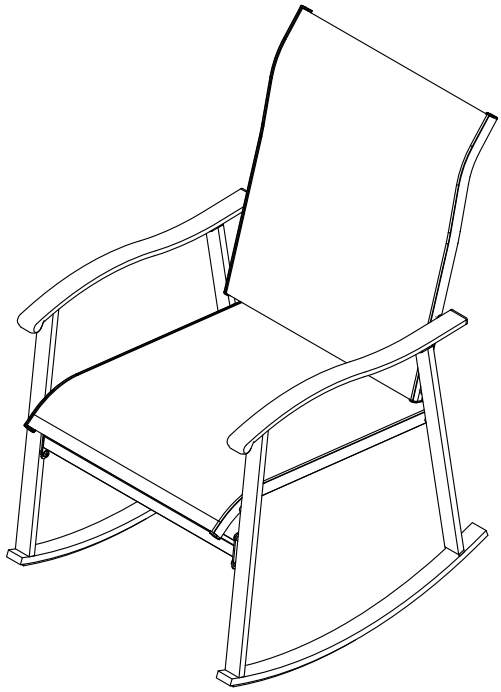


Adjust alignments and NOW



TIGNTEN ALL SCREWS with (5) Allen key.



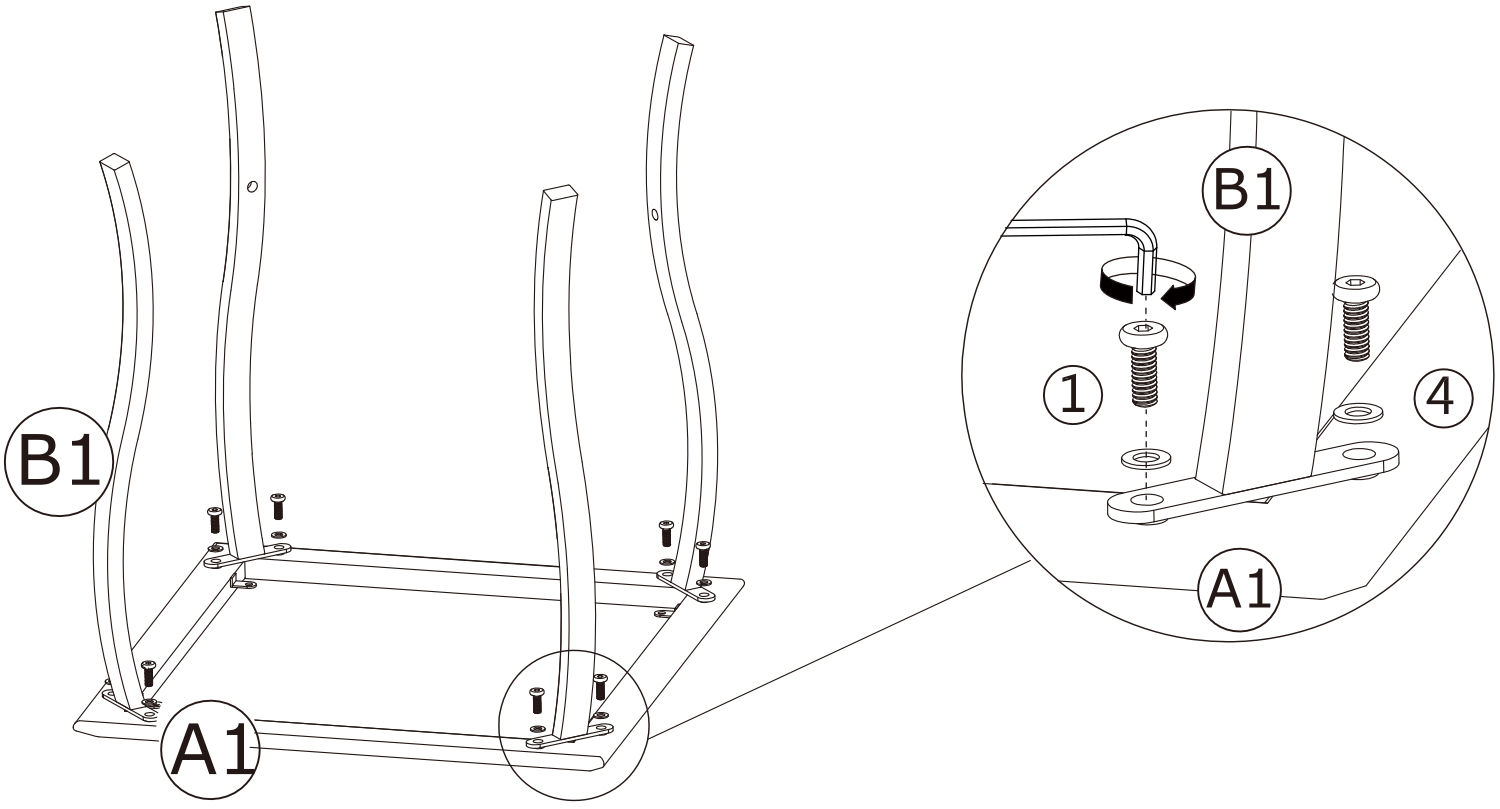
x2




STEP 8

Ⓐ1 x 1	Ⓑ1 x 4	① x 8	④ x 8	⑤ x 1
				
TABLE TOP	TABLE LEG	M6 x 15 mm		

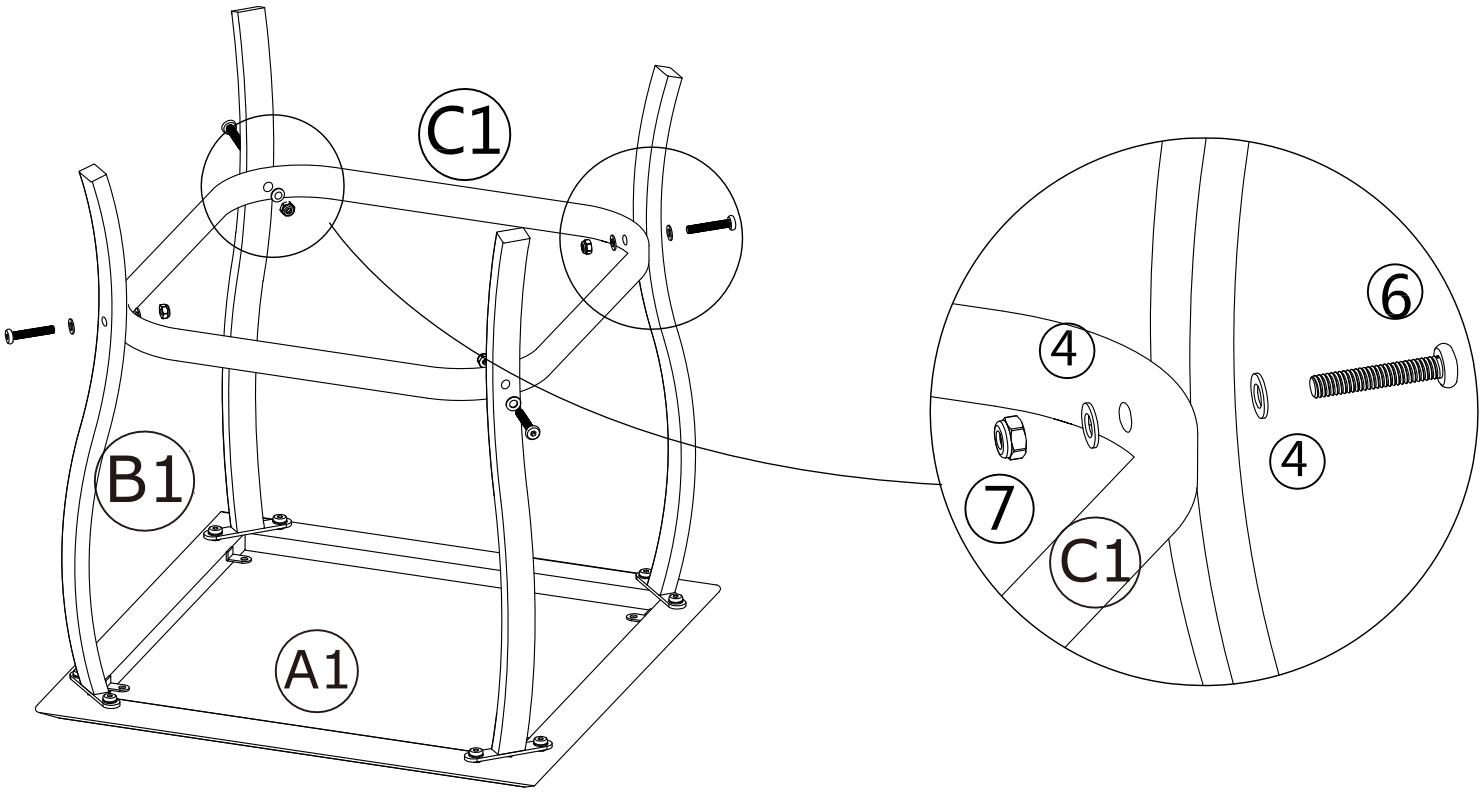
Fix leg B1 with part A1 with eight M6x15mm Screws (1)
and Flat Washers (4).Use (5) Allen key. **DO NOT YET TIGHTEN.**



STEP 9

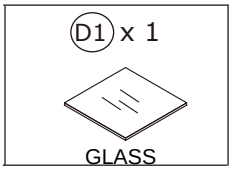
C1 x 1	④ x 8	⑤ x 1	⑥ x 4	⑦ x 4	⑧ x 1
					
LEG BRACE			M6 x 35 mm	nut	Wrench

Fix C1 with four legs(B1) with four M6x20mm Screws (3) and Flat Washers (4).Use (5) Allen key.

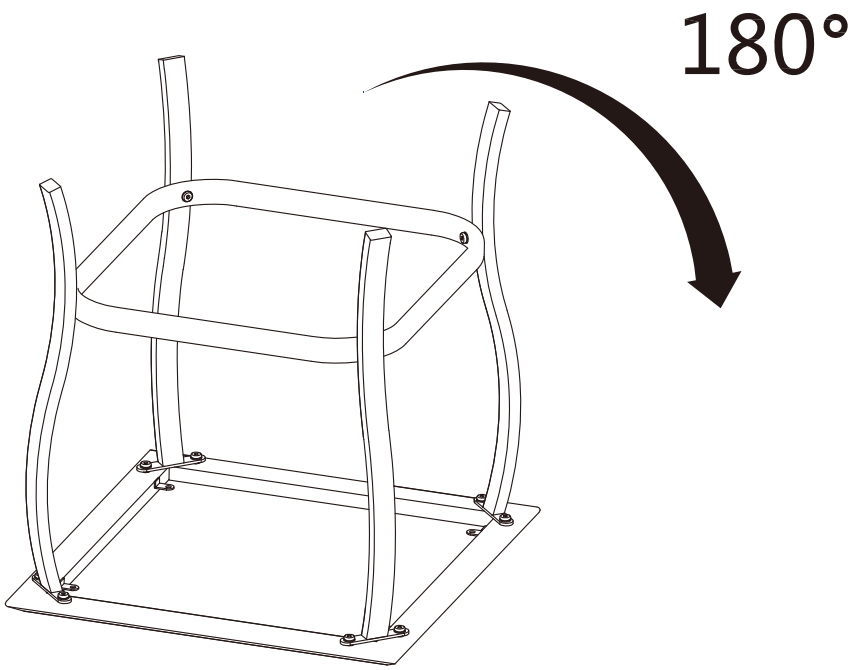


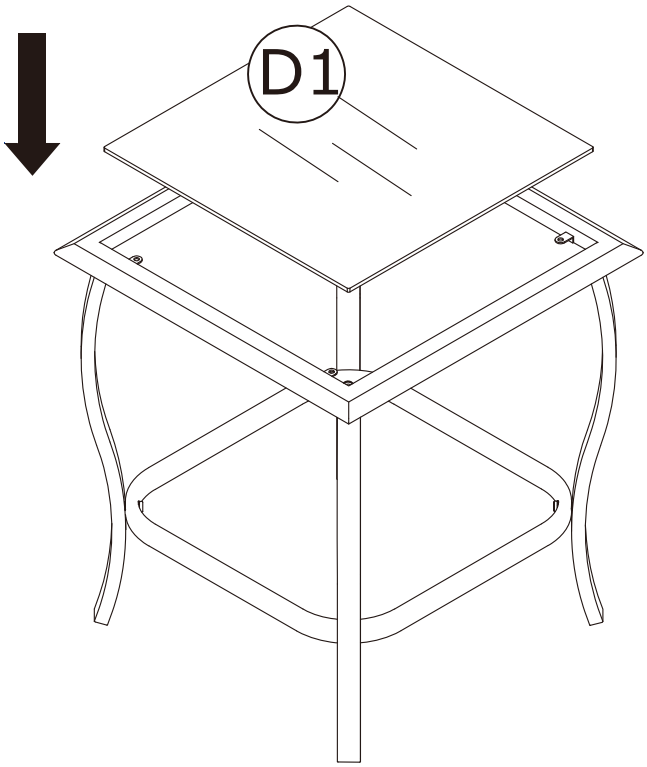
Adjust alignments and NOW TIGNTEN ALL SCREWS with (5) Allen key.

STEP 10



Stand up the unit and place top D1 as shown.





Warning

Seller is responsible for the product-related issues occurred upon receipt, but will not be responsible for the personal injury, property damage or loss resulting from the incorrect assembly, improper use, inadequate maintenance or neglect of this product.