
INSTALLATION MANUAL

RY - TS2607

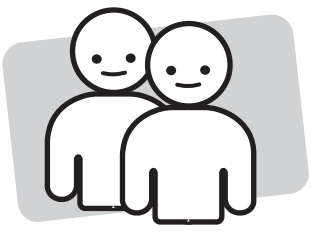

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

260227-v1

Before You Start


- Please read all instructions carefully.
- Retain instructions for future reference.
- Separate and count all parts and hardware.
- Read through each step carefully and follow the proper order.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady and stable surface.
- Keep all small parts and packaging materials for this product away fr om babies and children as they potentially pose a serious choking hazard.


Assembly Instructions

We have designed our furniture with you,the customer in mind.Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.




Please do not return to the store
Broken or missing Hardware?
Neen help with Assembly?
If you have any questions just email us at
ryhome_service@163.com

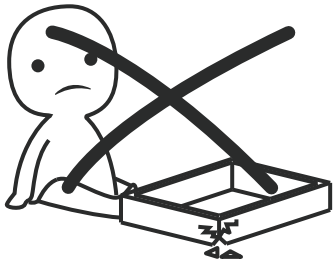

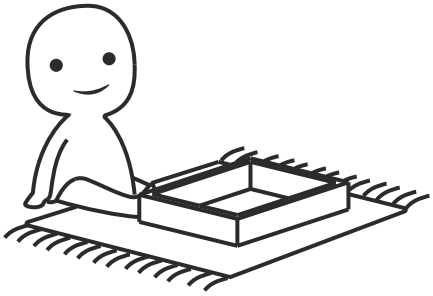

AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembledon a soft layer-could be a rug.

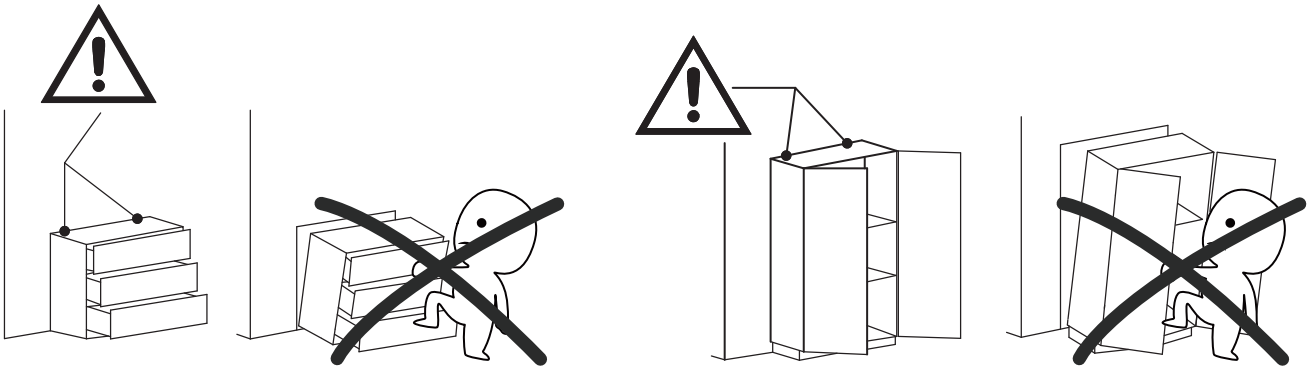

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

Completed Assembly

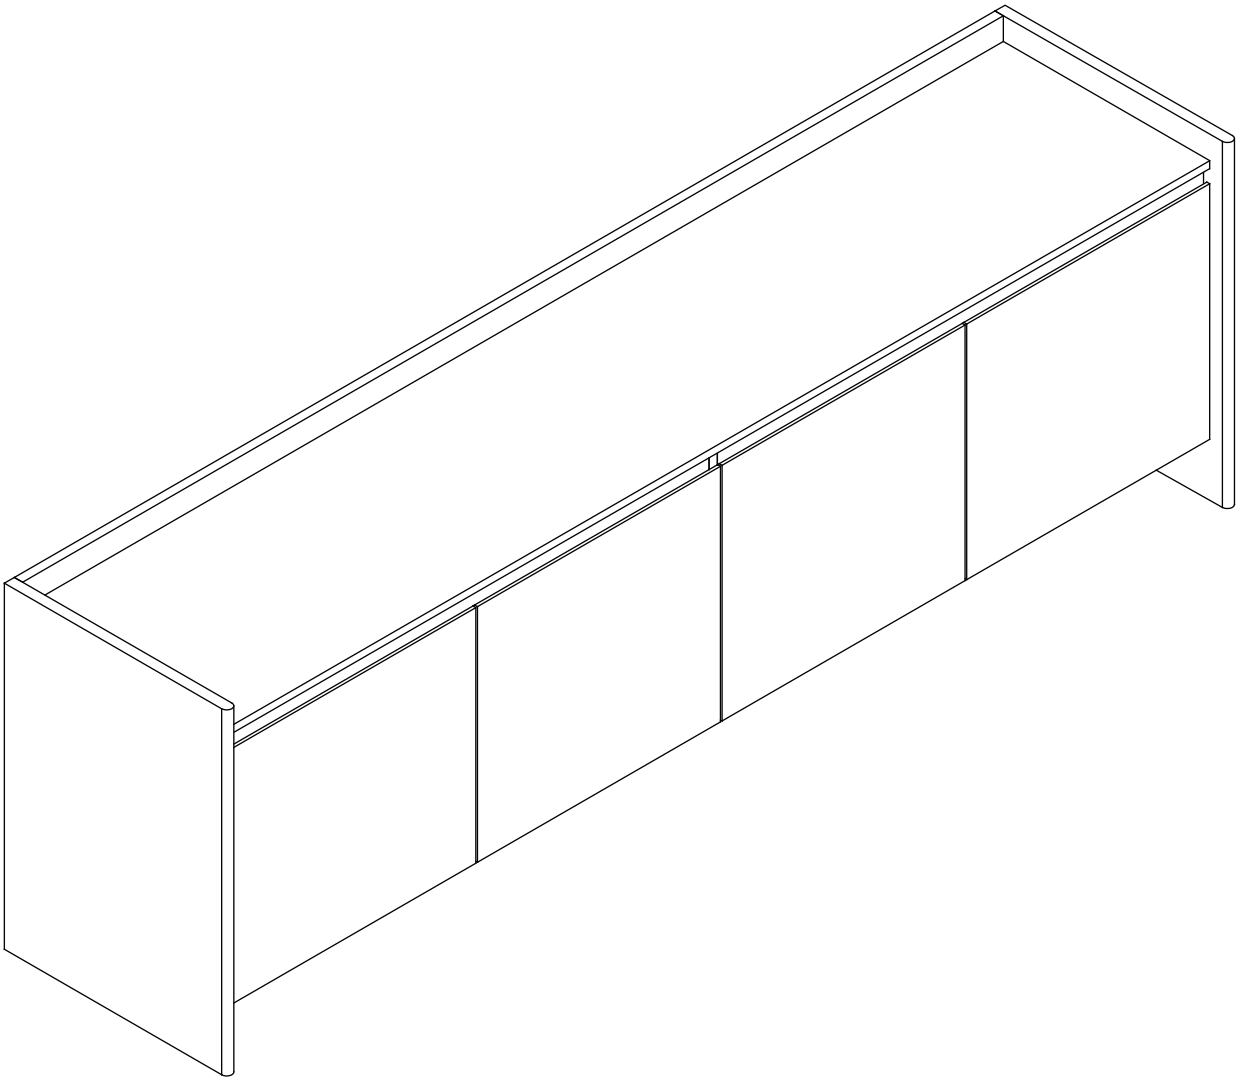


Parts Description

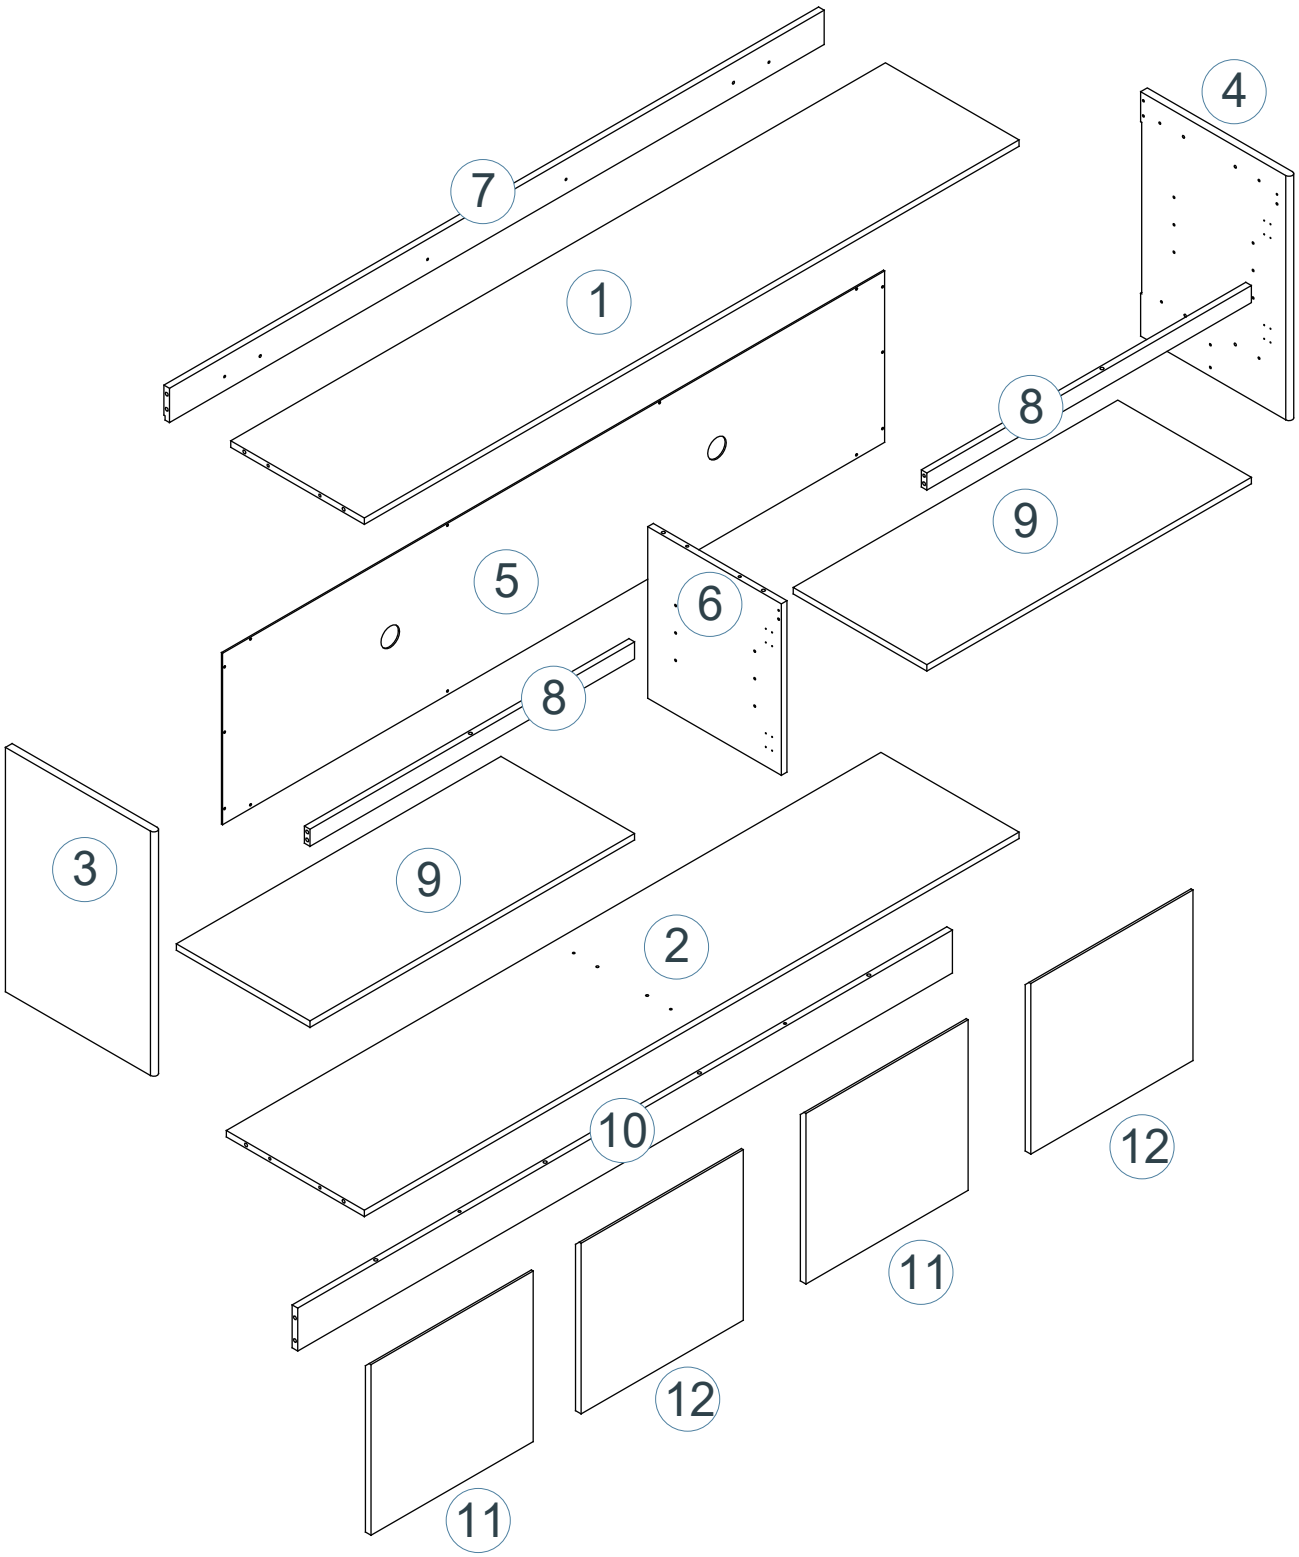


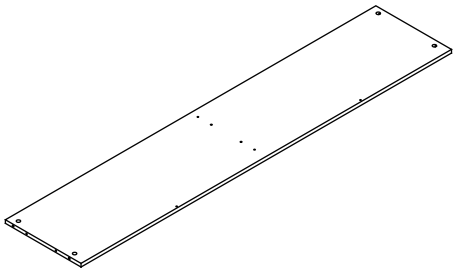


1

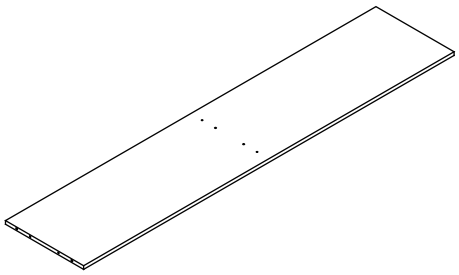


2

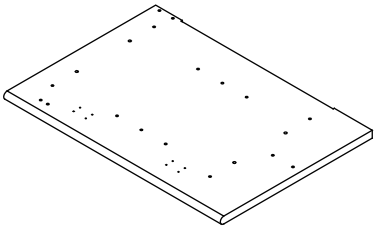


3

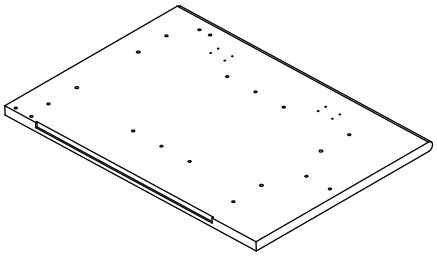


4

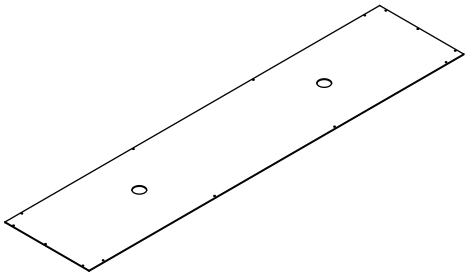


5

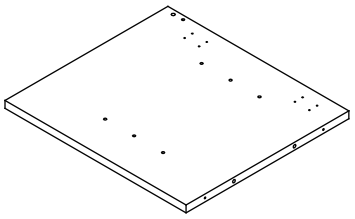


6

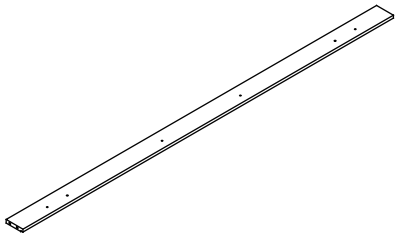


7

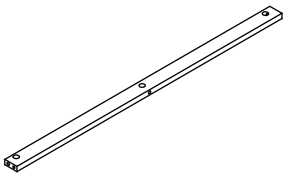


8 x2

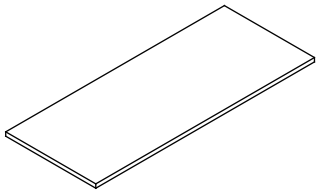


9 x2

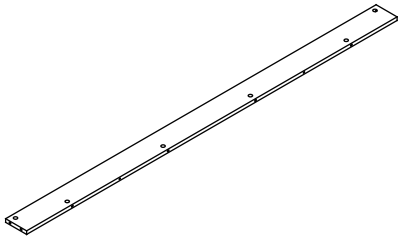











10

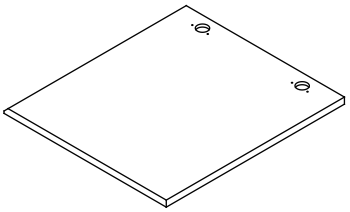

11 x2

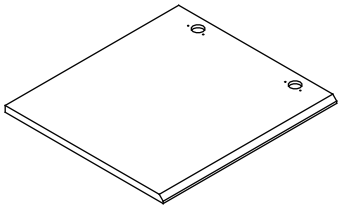

12 x2

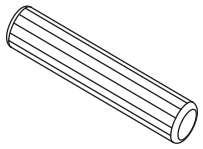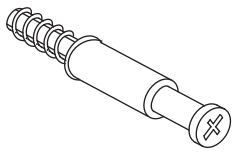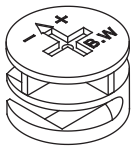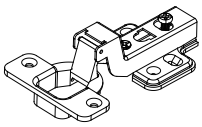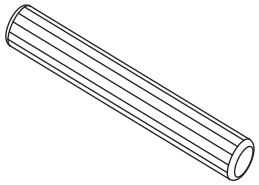A  6x30mm Dowel 20pcs	B  4 x 35mm Screw 6pcs	C  Bolt 26pcs	D  Locking Nut 26pcs
E  4 x 14mm Screw 48pcs	F  Hinge 4pcs	G  3 x 12mm Screw 14pcs	H  Shelf Plug 8pcs
I  Plastic Glide 6pcs	J  Hinge 4pcs	K  Large Dowel 1pc	



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock




CAM BOLT




CAM LOCK


Cam Bolt


Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

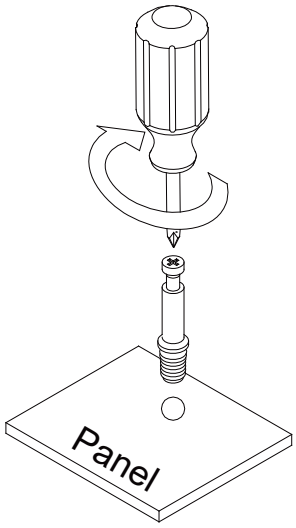

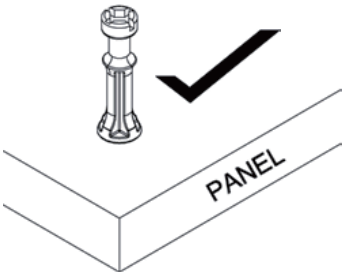


Shoulder is flushed (on the same level) with the panel.

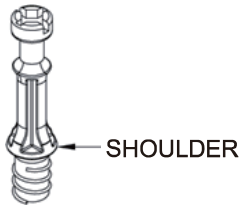


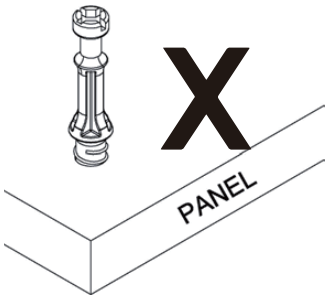

Shoulder is above the panel.

CAM-LOCK
Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock.

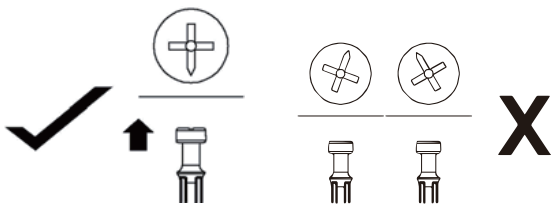

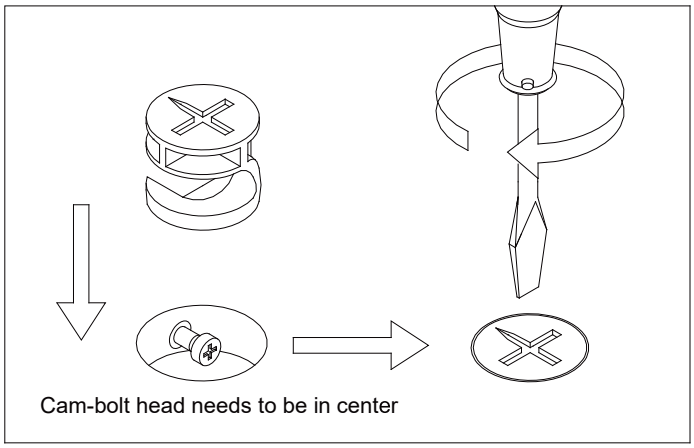


Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.

Step 1

Hardware Needed		
C		X2

Step 2

Hardware Needed		
D		X2
K		X1

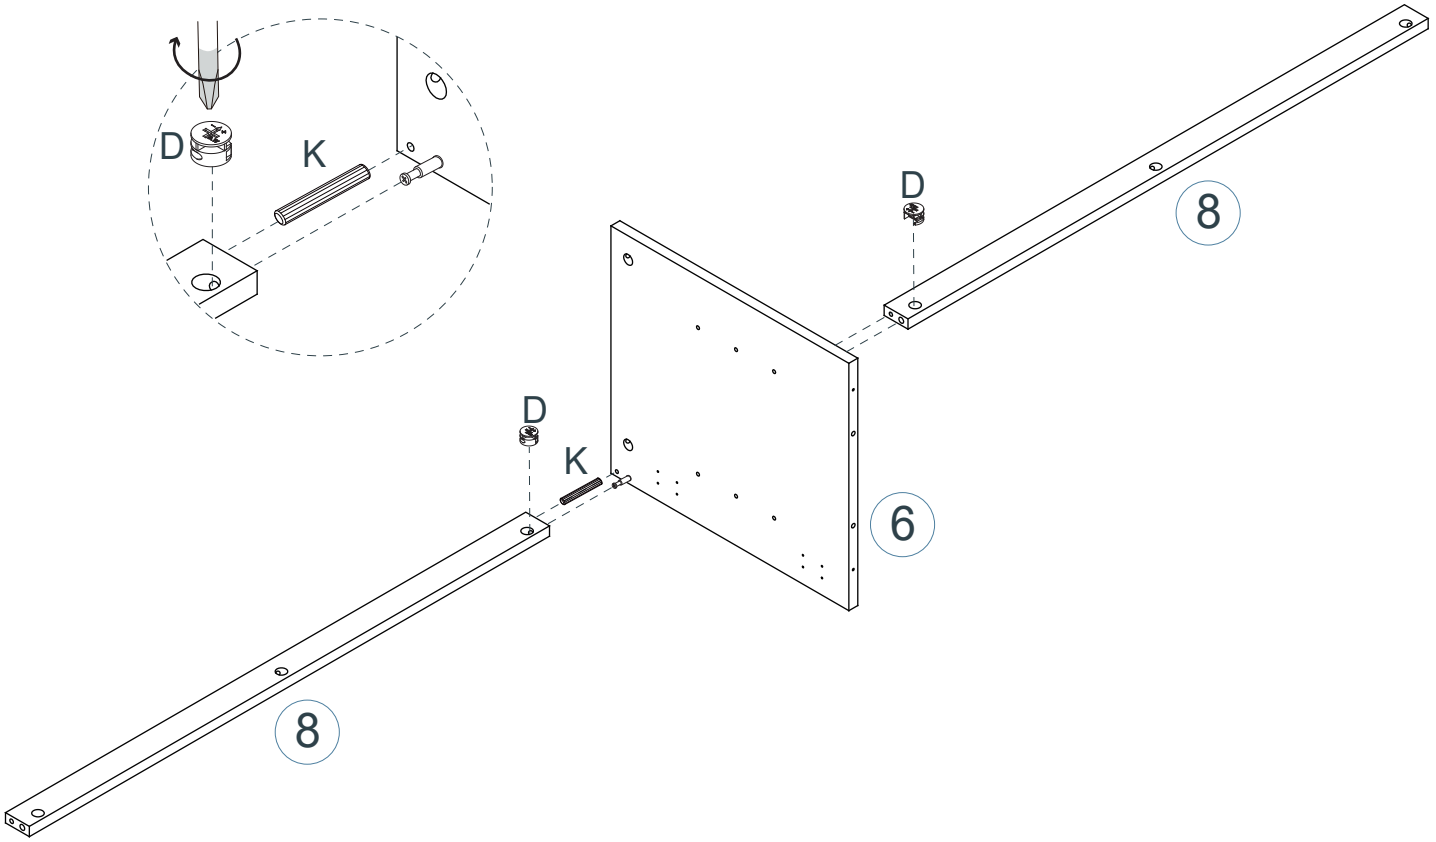

Step 3


Hardware Needed		
C		X8


Step 4

Hardware Needed		
A		X2
D		X4

Step 5


Hardware Needed		
A		X2
D		X4

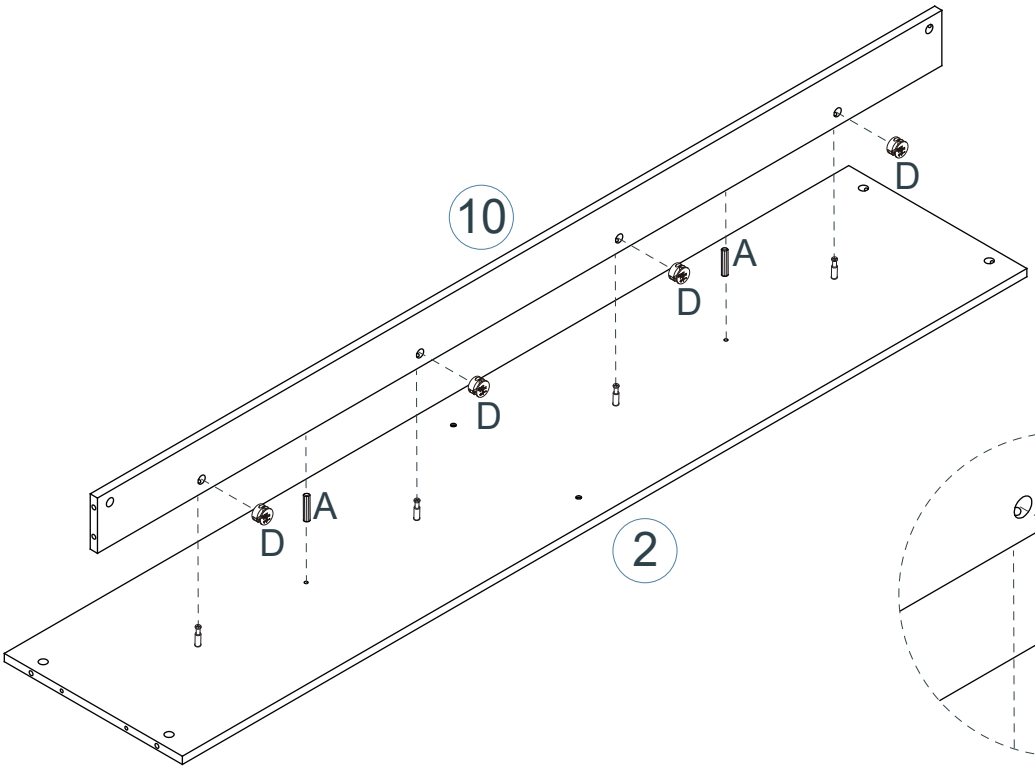


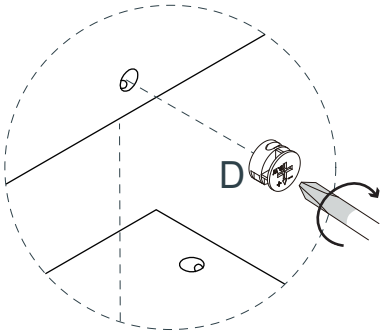

Step 6

Hardware Needed		
A		X2
B		X4

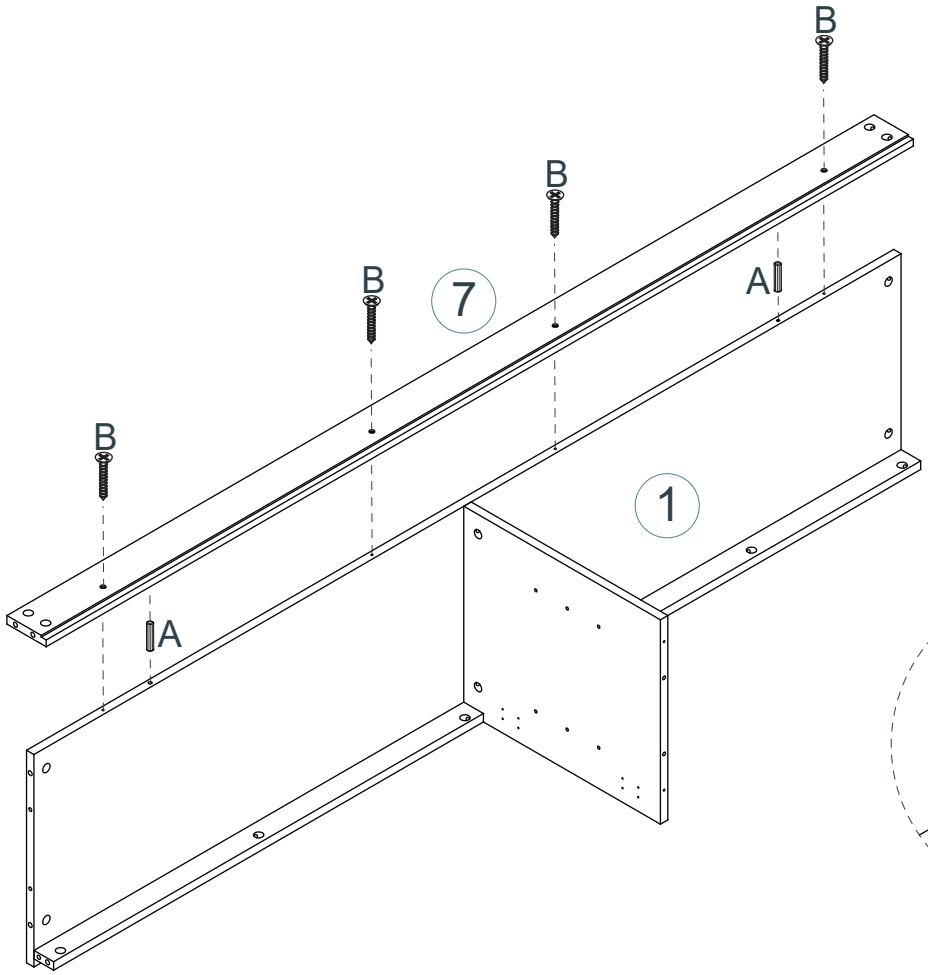

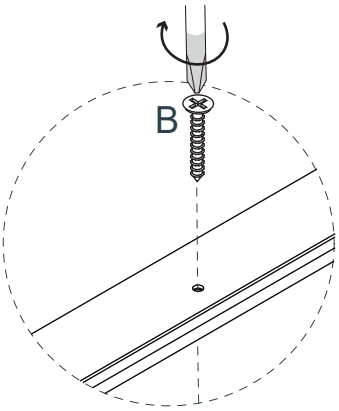

Step 7

Hardware Needed		
A		X2
B		X2

Step 8


Hardware Needed		
C		X16

Step 9

Hardware Needed		
A		X6
D		X5


Step 10

Hardware Needed		
A		X6
D		X5

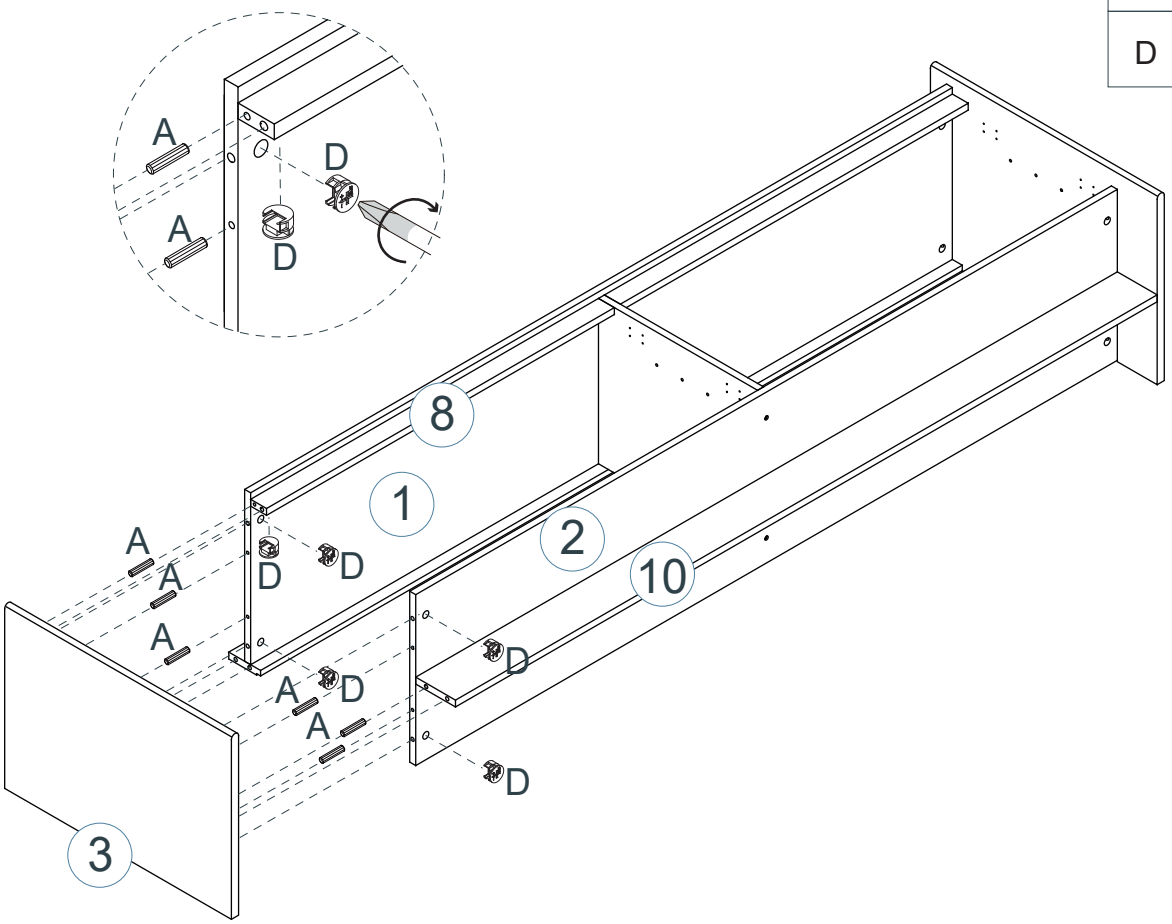

Step 11

Hardware Needed		
D		X6

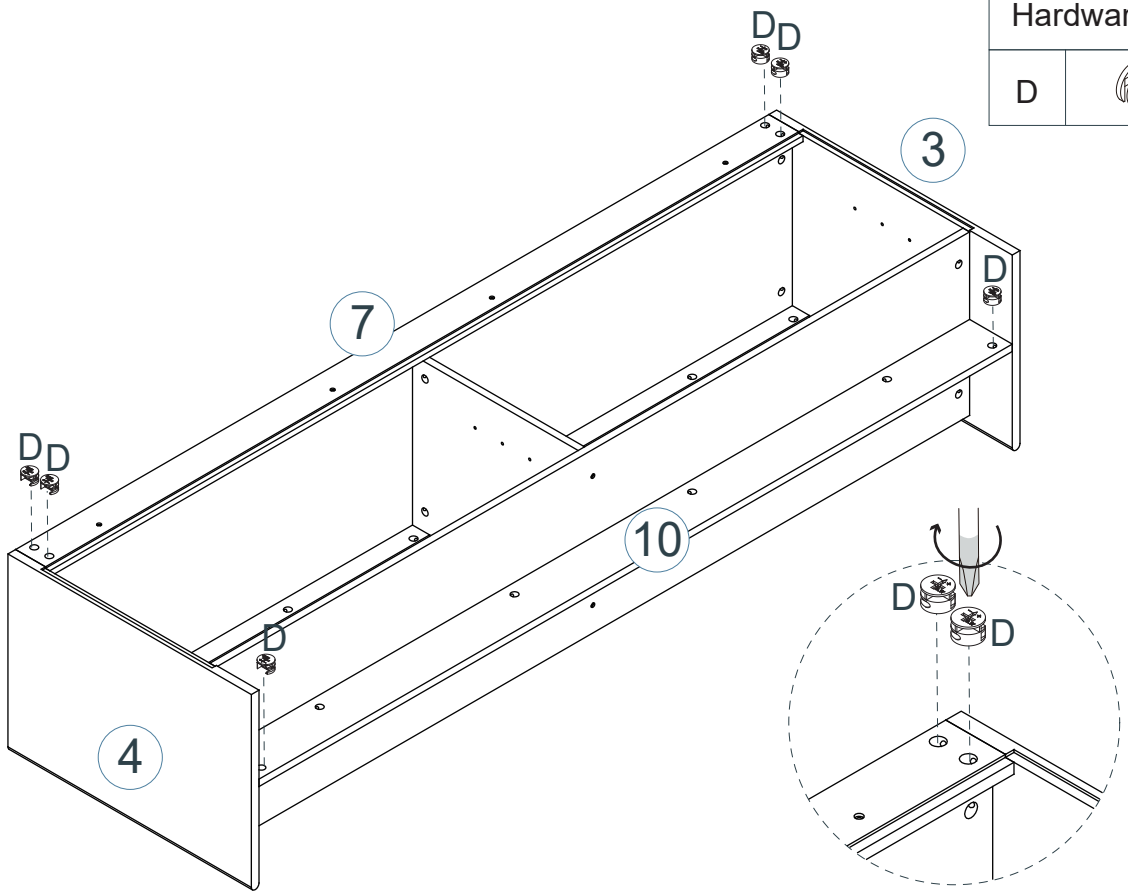


Step 12

Hardware Needed		
G		X14


Step 13

Hardware Needed		
I		X6

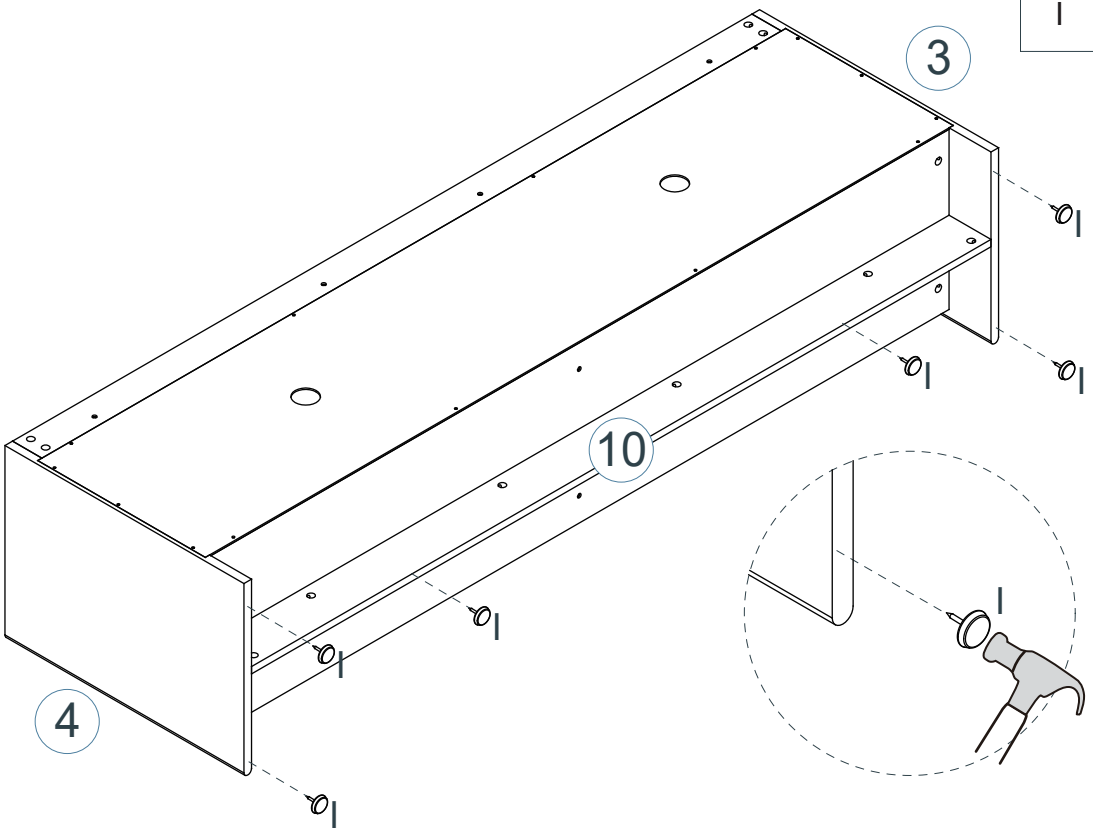


Step 14

Hardware Needed		
H		X8

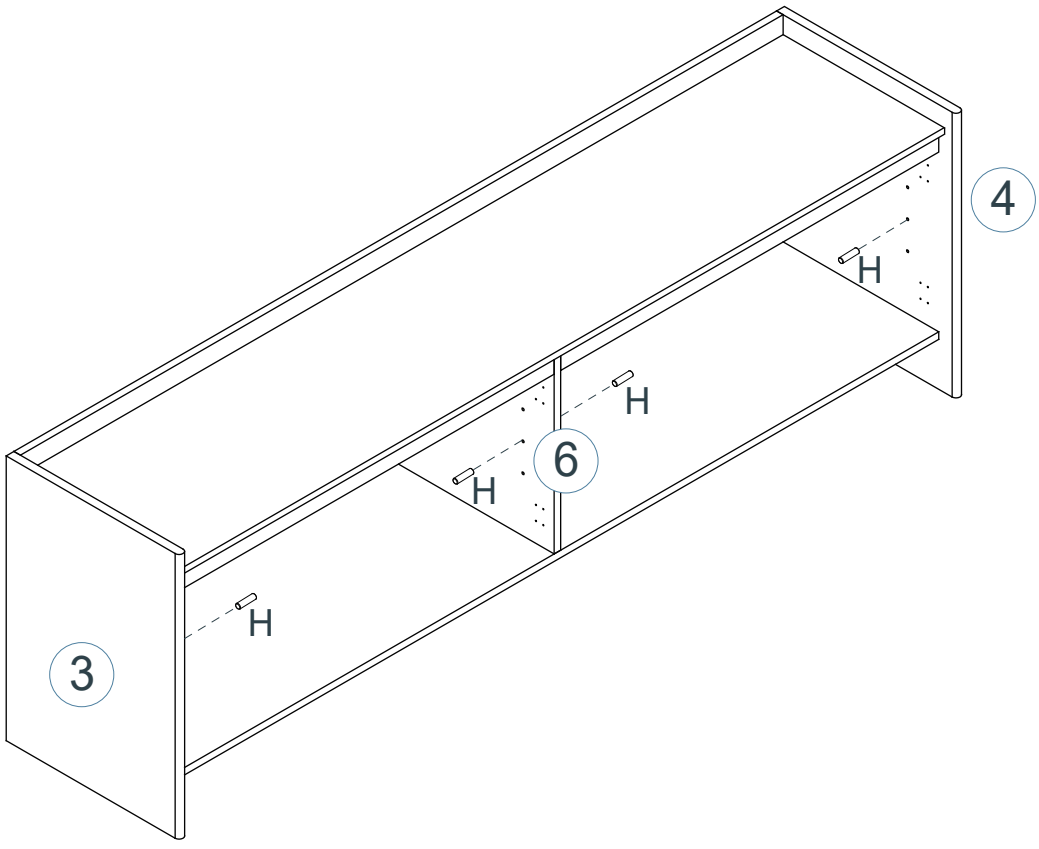



Step 15

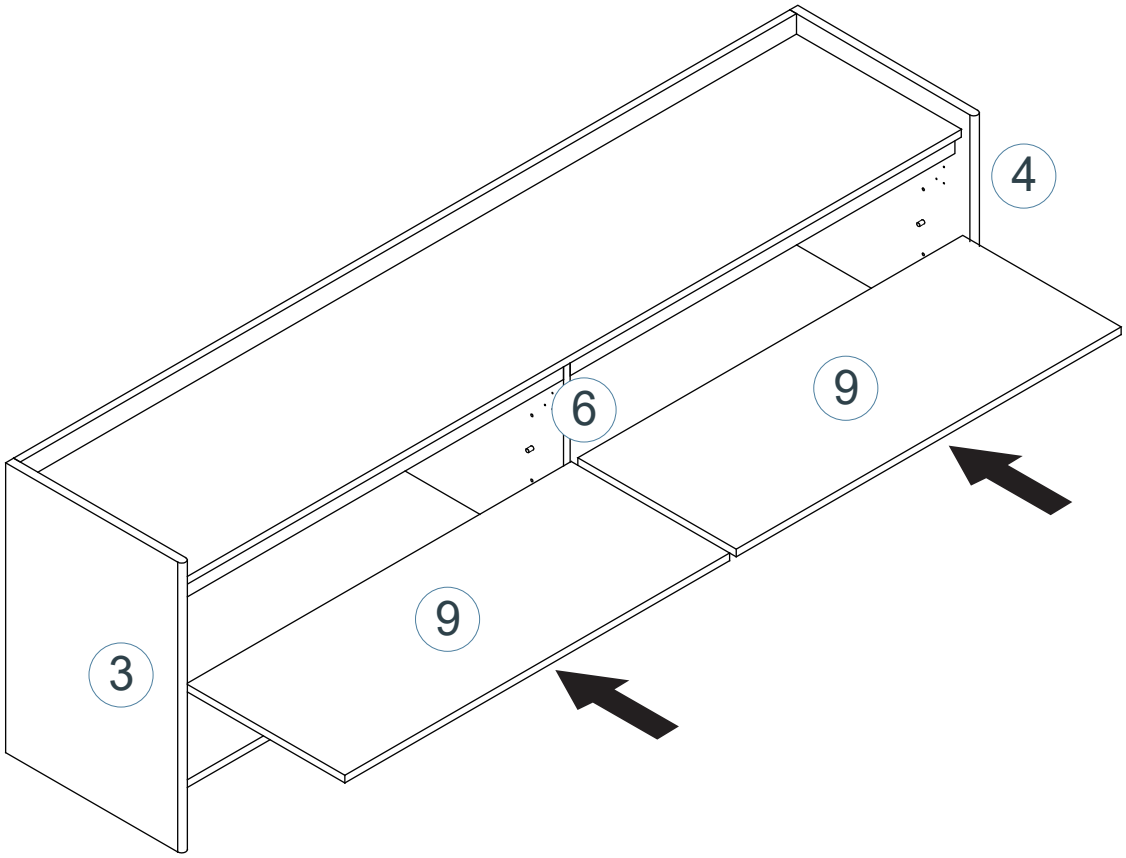

Step 16

Hardware Needed		
E		x16
F		x4
J		x4

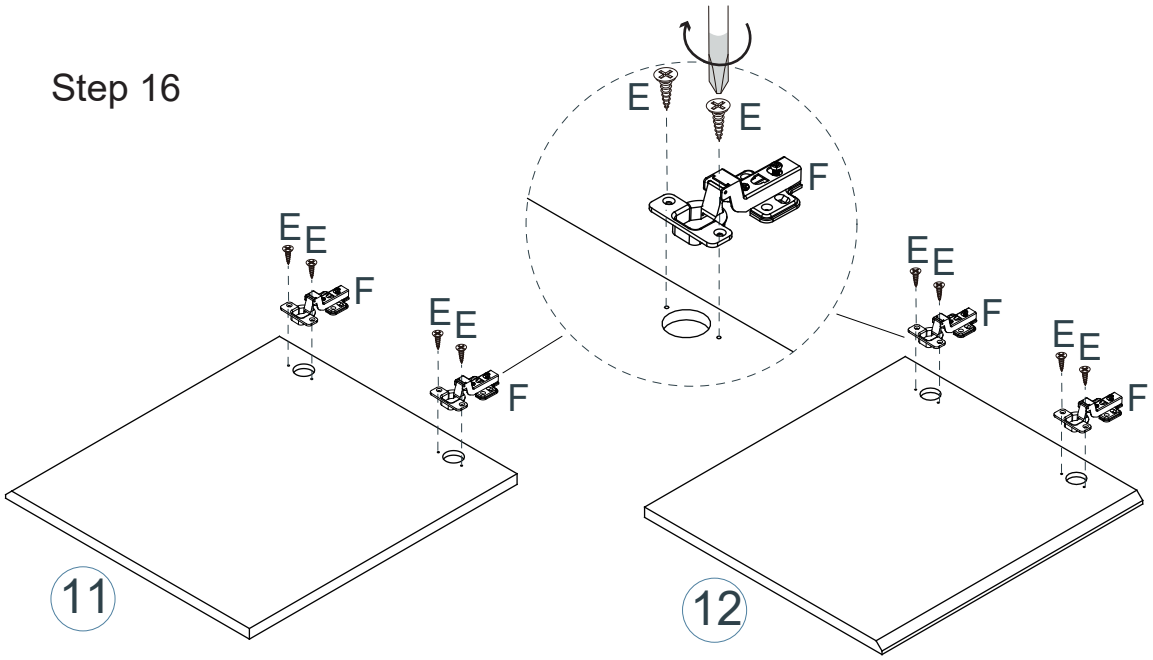

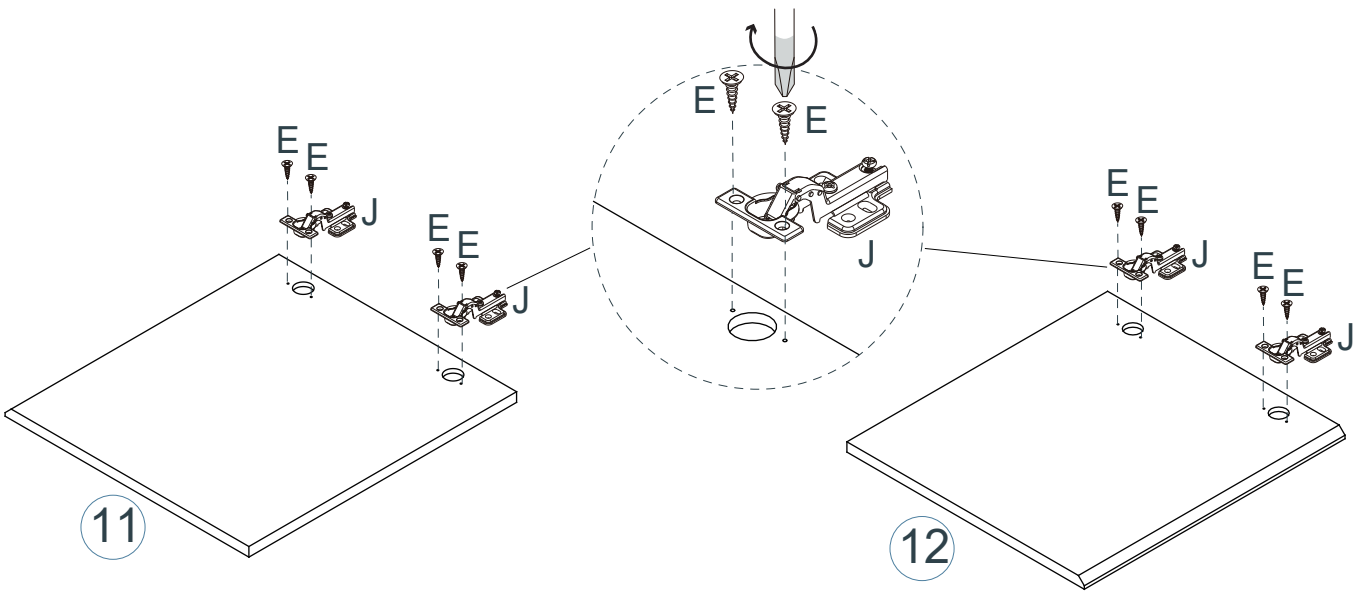


Step 17

Hardware Needed		
E		x32

NOTE: If the doors are uneven or there is a gap in the middle, loosen or tighten the screw on the door hinge until they are sitting flush. See last page.

Step 18

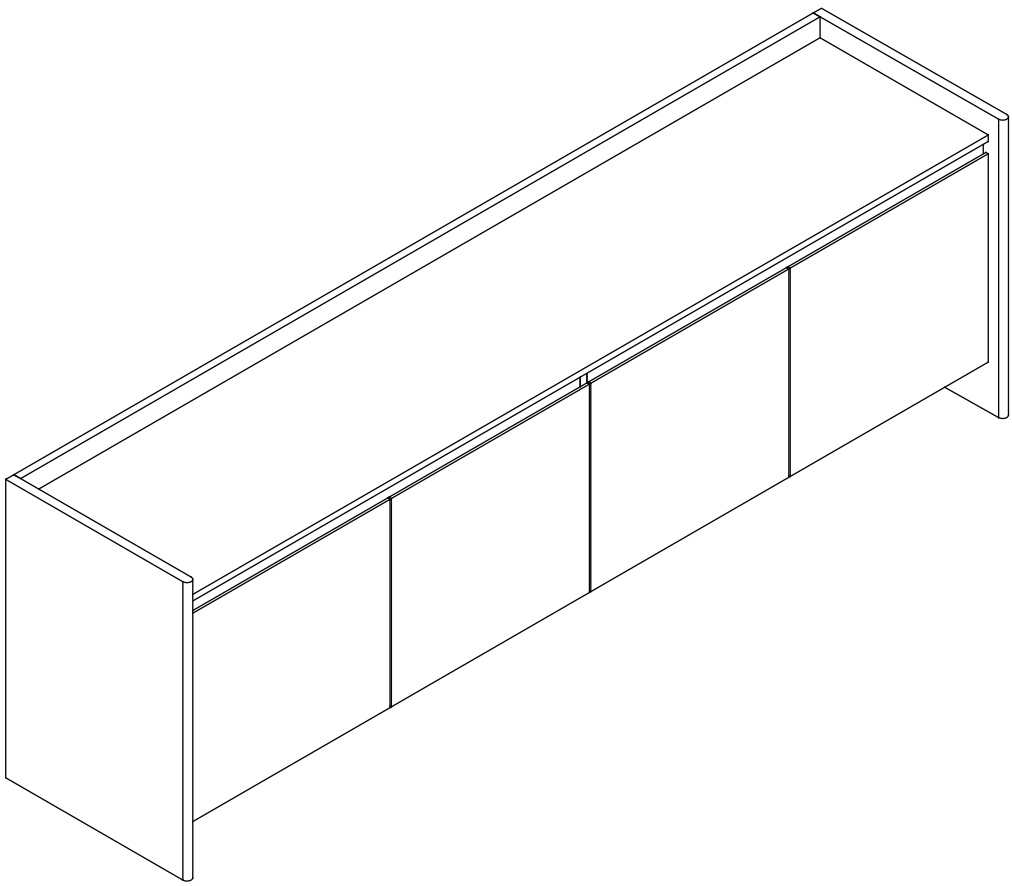

Step 19

HOW TO ADJUST THE HINGES TO ALIGN THE DOORS IF NEEDED.

