Assembly Instructions

Caution: You must read this before you proceed.

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.






Please look in Carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.

Dining Chair

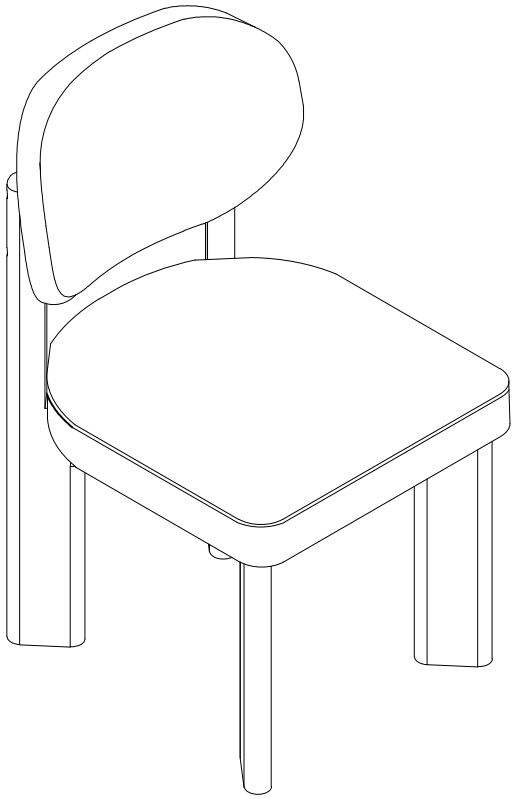


Caution: This Dining Chair is NOT a TOY.
Keep your child / children at bay during the assembly process.
Whenever moving or lifting the Dining Chair and to prevent any possible damage to it, two adults are needed to execute this action.

Parts List

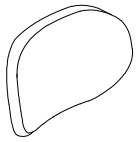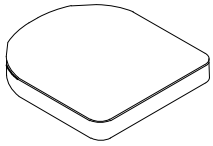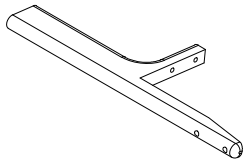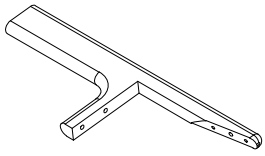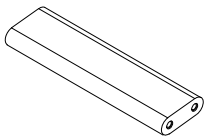Label	Picture	Description	Qty
A		Chair Back	1
B		Seat panel	1
C		Back Left Leg	1
D		Back Right Leg	1
E		Front Leg	2


HARDWARE

Label	Picture	Description	Qty
1		Bolts 1/4" x 35mm	4+1
2		Flat Washer Ø13*1/4	4+1
3		Wooden button	4+1
4		Bolts 5/16" x 50mm	4+1
5		Bolts 5/16" x 35mm	4+1
6		Bolts 5/16" x 25mm	8+1
7		Washer Ø19*5/16	16+1
8		Spring washer	16+1
9		Metal steel	2
10		Wood Dowel Ø10*30	2
11		Wrench	1
12		Plastic hammern (not included)	

Hardware : Each of the above hardware including extra 1 pc

Assembly Preparation

Before begining assembly

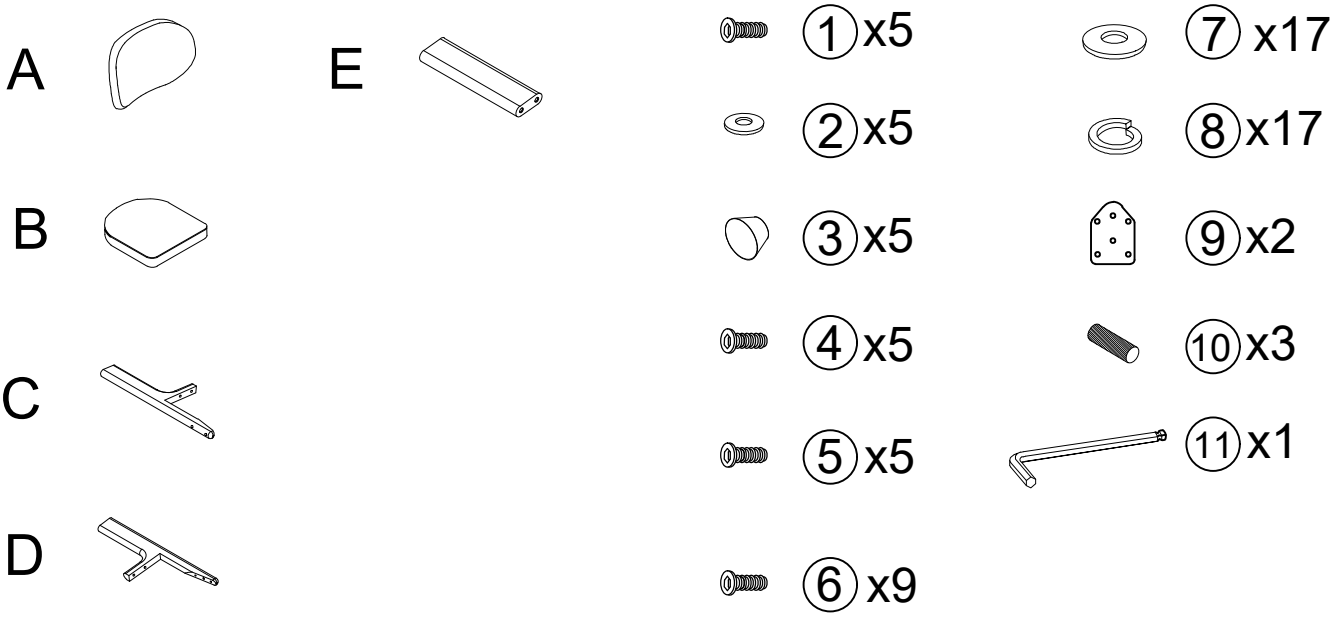




- Read instruction, cover to cover.
- Have 2 adults on hand for assembly.
- Do not assemble on flooring or carpet.
- Assemble on a clean non-marring surface (packing foam).
- Save all packaging until finished.

Assembly Steps


Overview

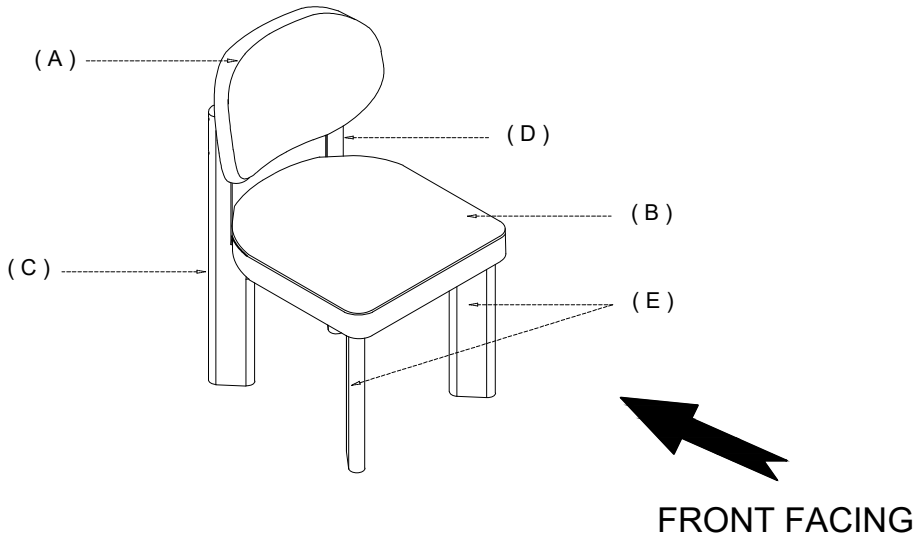

This Dining Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various Dining Chair parts into perspective. Please read through the instructions here below to familiarise the parts and steps before assembly.

STEP 1


5 x 4	9 x 2	8 x 4	7 x 4	11 x 1

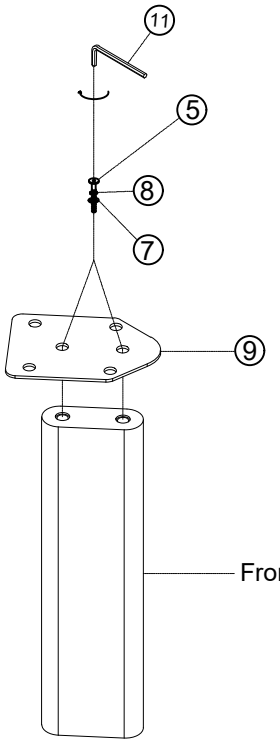

Attach the Front Legs (E) Metal steel (9) using Flat Washers (7), Spring Washers (8), Bolt (5), Wrench (11) as shown below.Please full tighten bolt

STEP 2

4 x 4	6 x 8	8 x 12	7 x 12	11 x 1

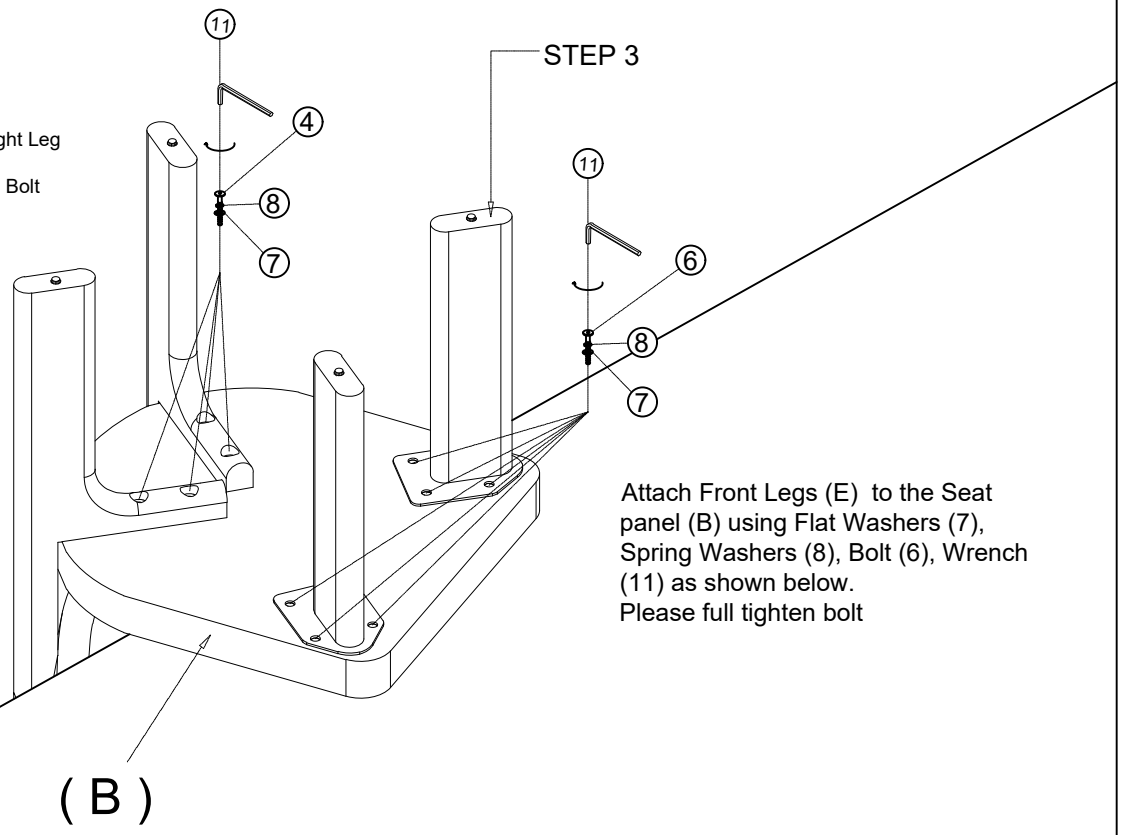


Attach the Back Left Leg/Back Right Leg to the Seat panel (B) using Flat Washers (7), Spring Washers (8), Bolt (4), Wrench (11) as shown below. Please non full tighten bolt

Attach Front Legs (E) to the Seat panel (B) using Flat Washers (7), Spring Washers (8), Bolt (6), Wrench (11) as shown below. Please full tighten bolt

STEP 3


1 x 4	2 x 4	10 x 2	11 x 1

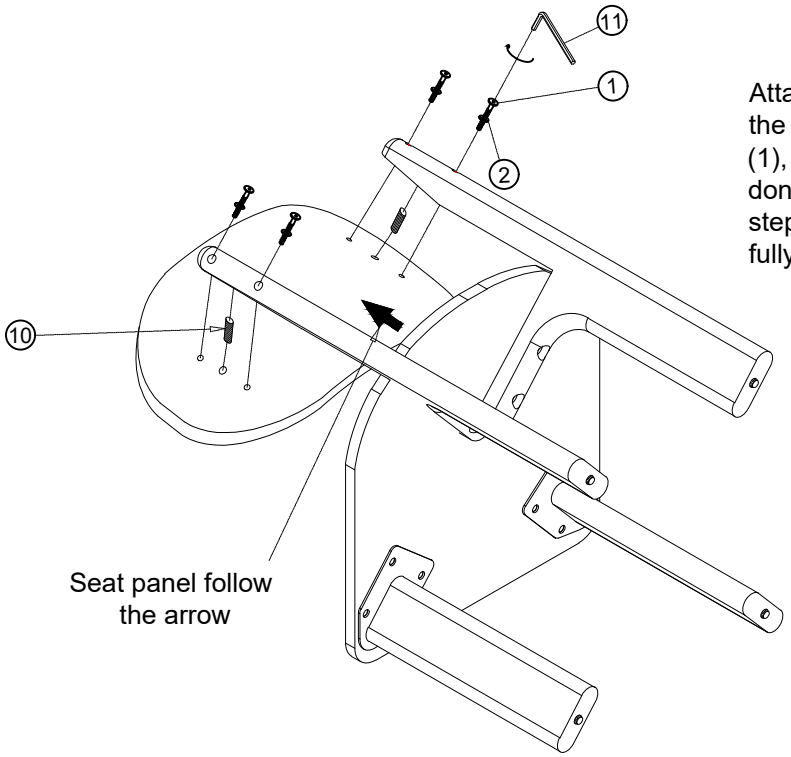

Attach the chair back to the back chair using the Wood dowel (10) , flat washers (2), bolts (1), and wrench (11) as shown below. Please don’t fully tighten the bolts yet. After completing step 3 and assembling all the bolts, check and fully tighten them.

STEP 4


3 x 4

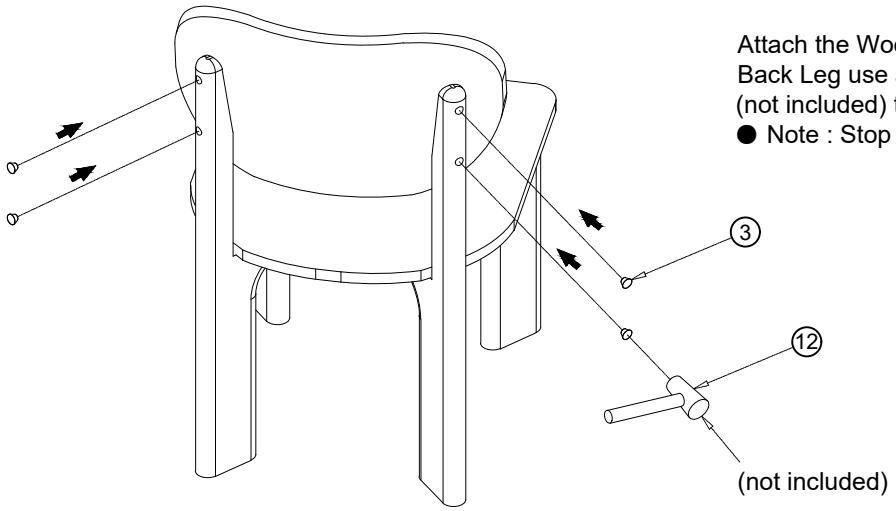

Attach the Wooden button (3) to hole Back Leg use a plastic hammer (12) (not included) to tap it in gently.

● Note : Stop when it's flush.

STEP 5

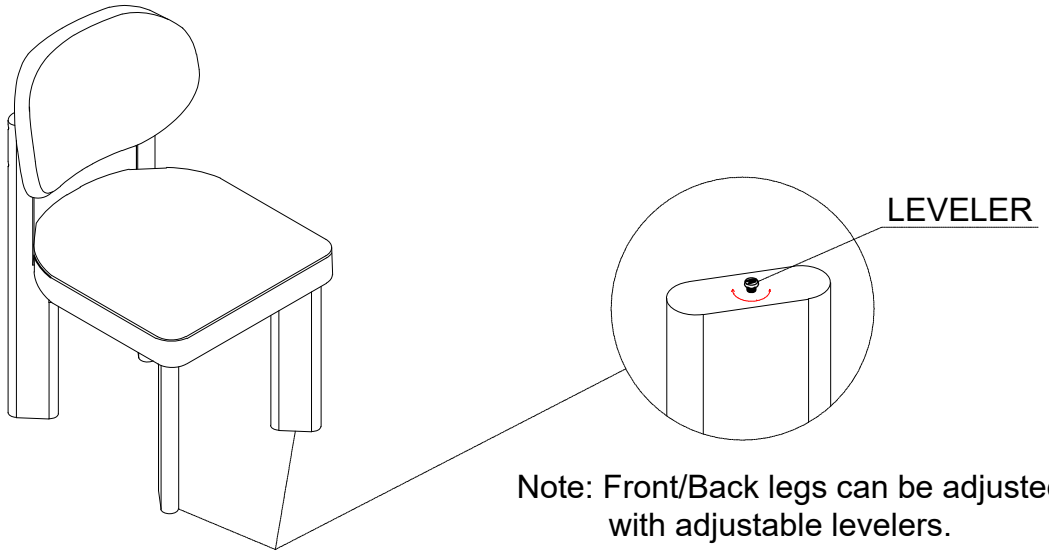

Note: Front/Back legs can be adjusted with adjustable levelers.

ADDITIONAL NOTE ABOUT SAFETY: NUTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Ensure all screws are fully locked into position.
The Dining Chair **is ready to be used.**
Caution 2: This Dining Chair **can only be used on a flat, level surface**

Questions & Answers about Proposition 65

● What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals.

Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of
drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

● What types of chemicals are on the Proposition 65 list? The list contains a wide range of naturally occurring and synthetic
chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.

● What does a warning mean?

If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.

By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.

● Where can I get more information on Proposition 65?

If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at P65.Questions@oehha.ca.gov, or by phone at (916) 445-6900.