
ASSEMBLY INSTRUCTIONS

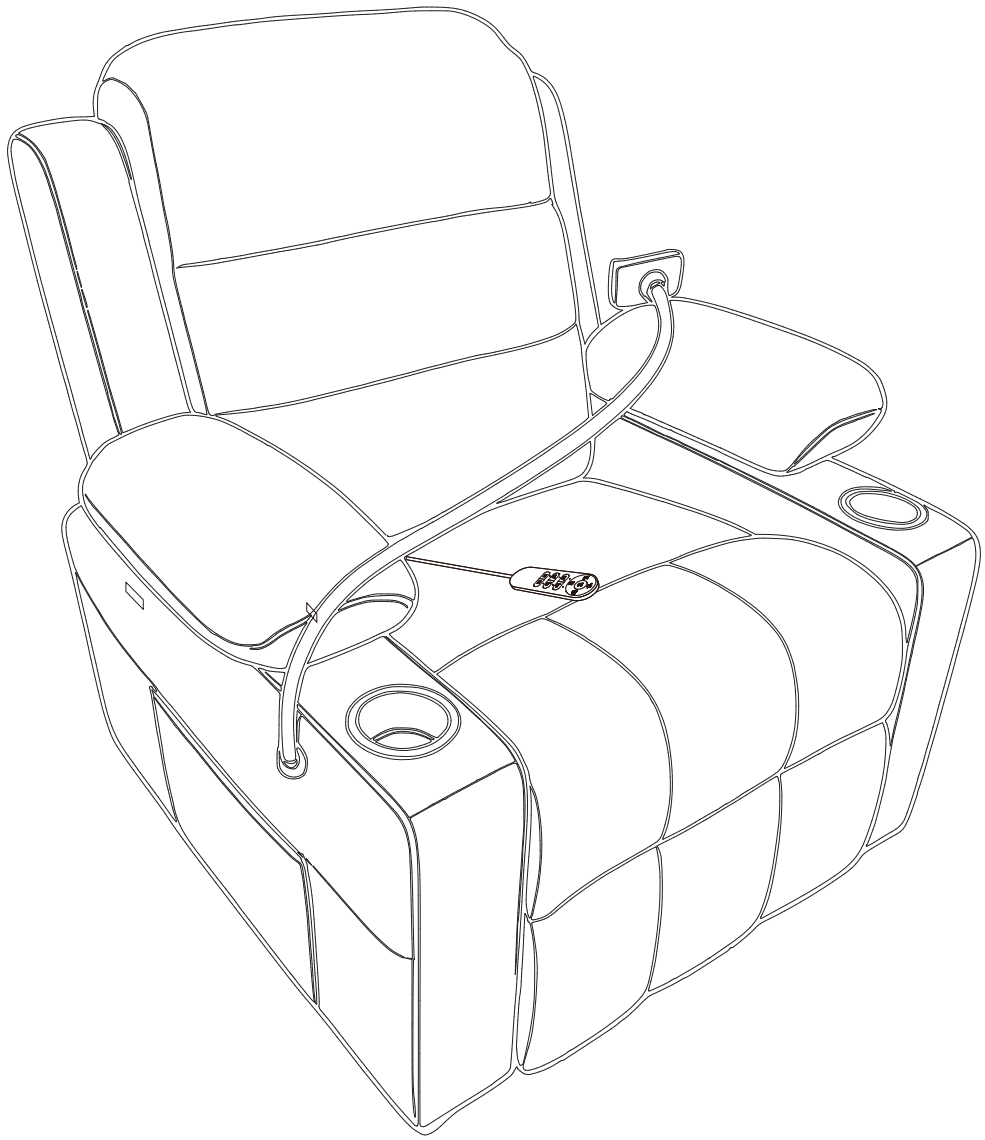

PRS-0187-002


Smart Power Recliner

PLEASE READ BEFORE ASSEMBLY

1. Follow the assembly steps in order; do not skip any.
2. Assemble in a spacious area, away from infants and children. Protect the floor with packaging material before starting.
3. Ensure all connections (screws, bolts, etc.) are properly tightened. If assembly requires two or more people, do not attempt it alone for safety reasons.

CAUTION

1. When cleaning, please use a soft cloth to gently wipe the surface or use professional cleaning supplies. Avoid using chemical agents or abrasive cleaners.
2. During use, please do not exceed the product's maximum weight capacity. Exceeding this limit may damage the product or pose a risk of injury.
3. For safety reasons, do not leave infants unattended on the product to prevent any risk of harm, such as suffocation.
4. If you need to move the product, please do so with two or more people and carefully relocate it to the desired area. Additionally, the product can be disassembled and reassembled if necessary.
5. The product may differ slightly in appearance from the assembly illustrations.
6. The packaging contains plastic bags. Keep them away from infants and children to avoid suffocation, after unboxing, dispose of the bags immediately; do not reuse them.

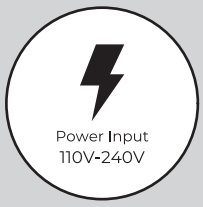




CAUTION: Do not exceed maximum listed weight capacity. Serious injury or property damage may occur.

⚠ CAUTION


Two people are recommended for safe and efficient assembly.

Your recliner comes packaged in two box. Carefully remove all of components from the packaging and set aside for assembly.


CAUTION:
DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result

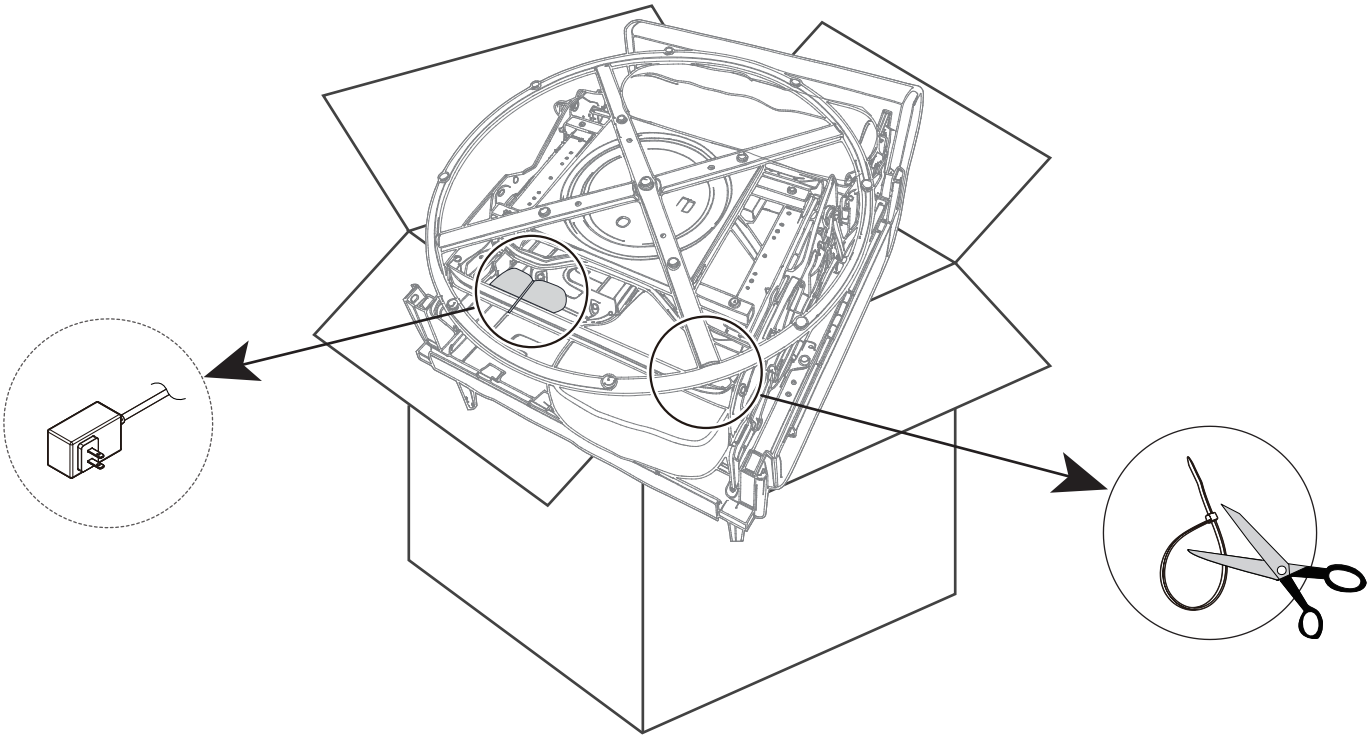


Cut the white cable ties securing the bubble wrap, then remove the accessories
Cut the white cable tie securing the rotating turntable.
NOTICE: Do not cut the black cable ties securing the wire harness box.

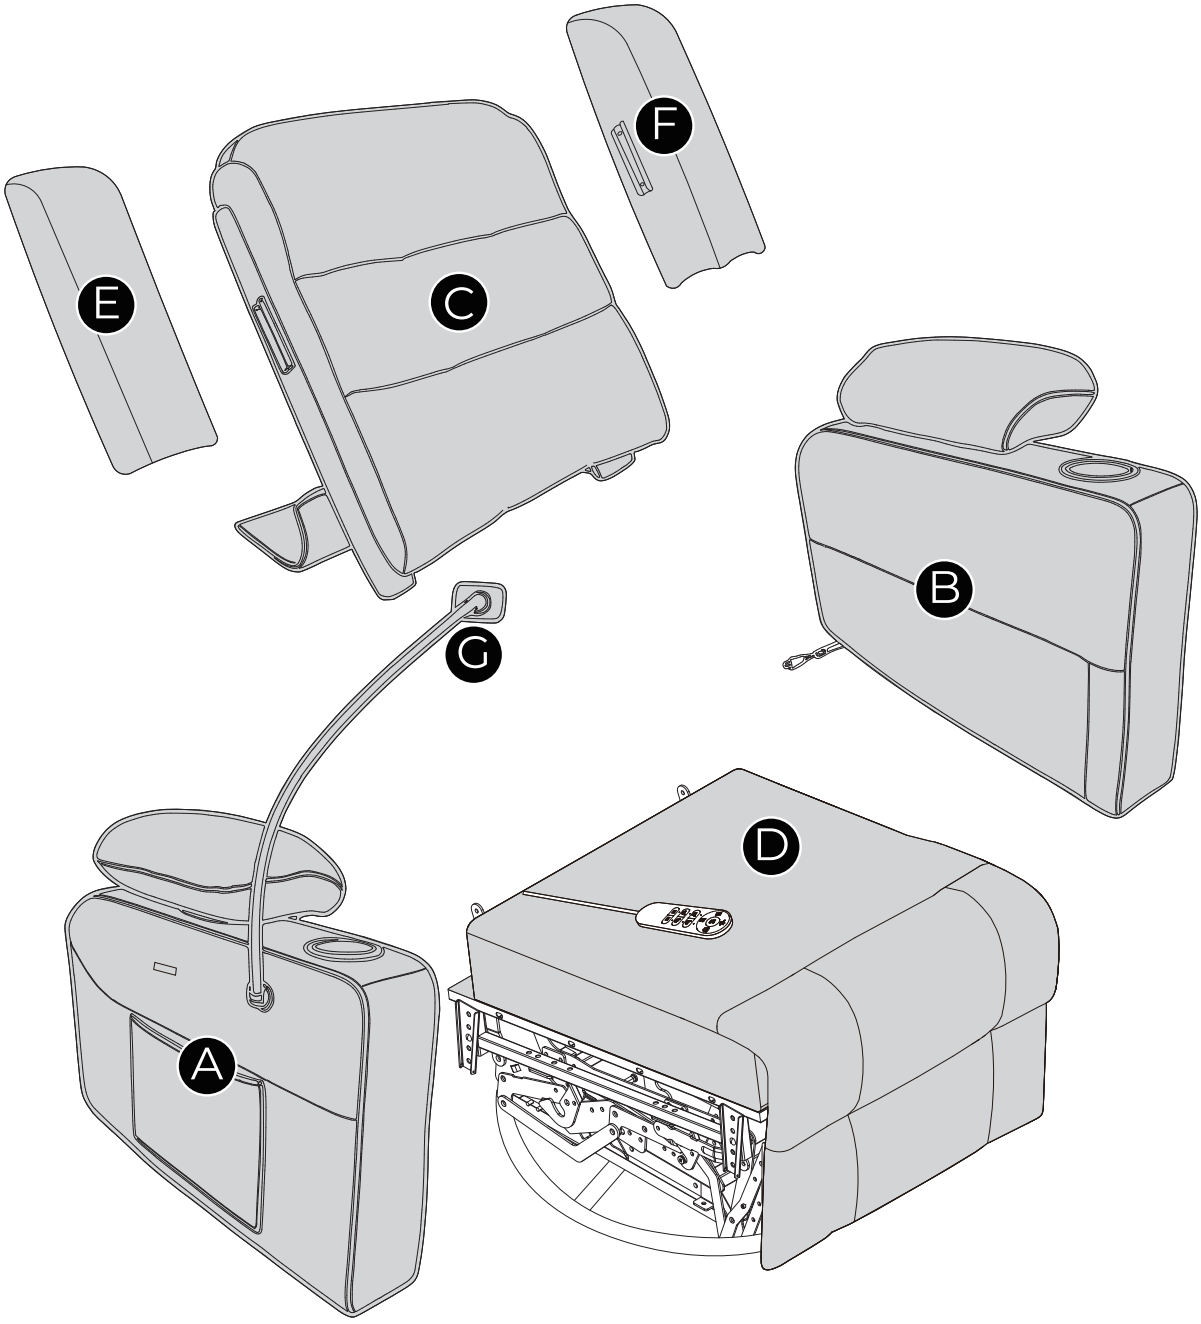
F
E
C
B
G
D
A


PARTS LIST -BOX A

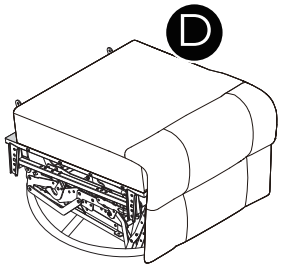


Seat Cushion
X 1

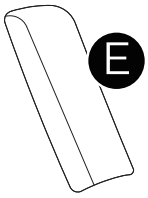


Right Ear
X 1

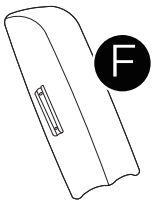


Left Ear
X 1

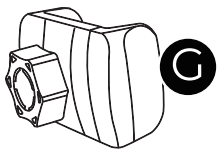


Phone Holder
X 1

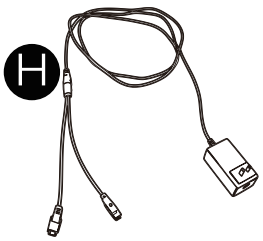


Power Adapter
X 1

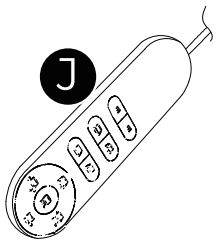


Remote Control
X 1

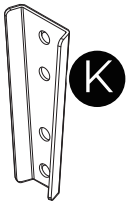

Connecting Bracket
X 4

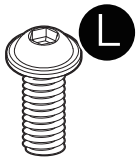


M6*20mm Bolts
X 8+2

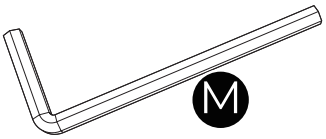


5mm Wrench
X 1


PARTS LIST -BOX B

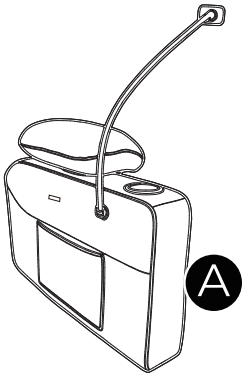

Right Armrest
X 1

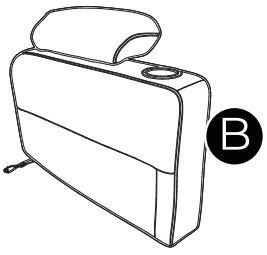

Left Armrest
X 1

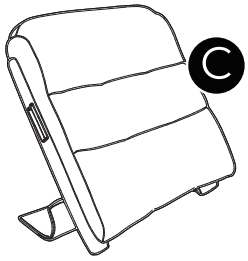


Backrest
X 1

Step 1


How to Assemble a Phone Holder

1

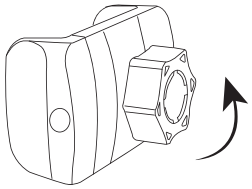


Turn the locking knob on the back of the phone holder counterclockwise to loosen it.

2

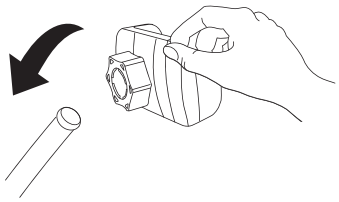


Slide the phone holder onto the connecting rod on the main sofa body.

3

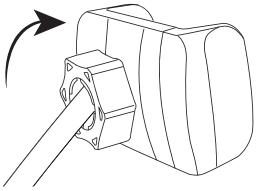


Turn the locking knob clockwise to tighten it.

4

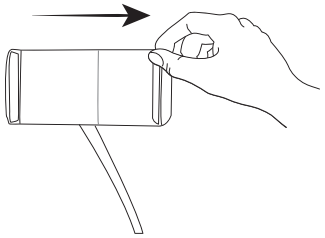


Expand the phone holder and place your phone inside.

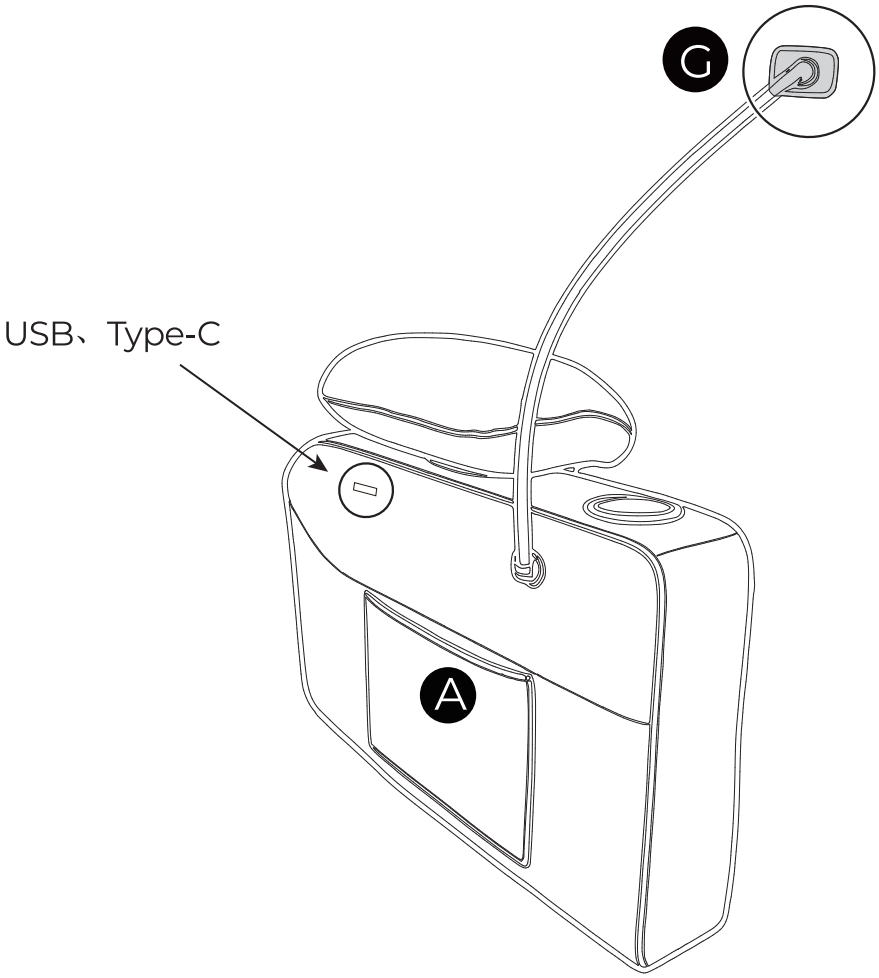


Step 2

Attach the brackets (**K**) to the inside of the right armrest (**A**) and left armrest (**B**) using the bolts (**L**) and wrench (**M**).

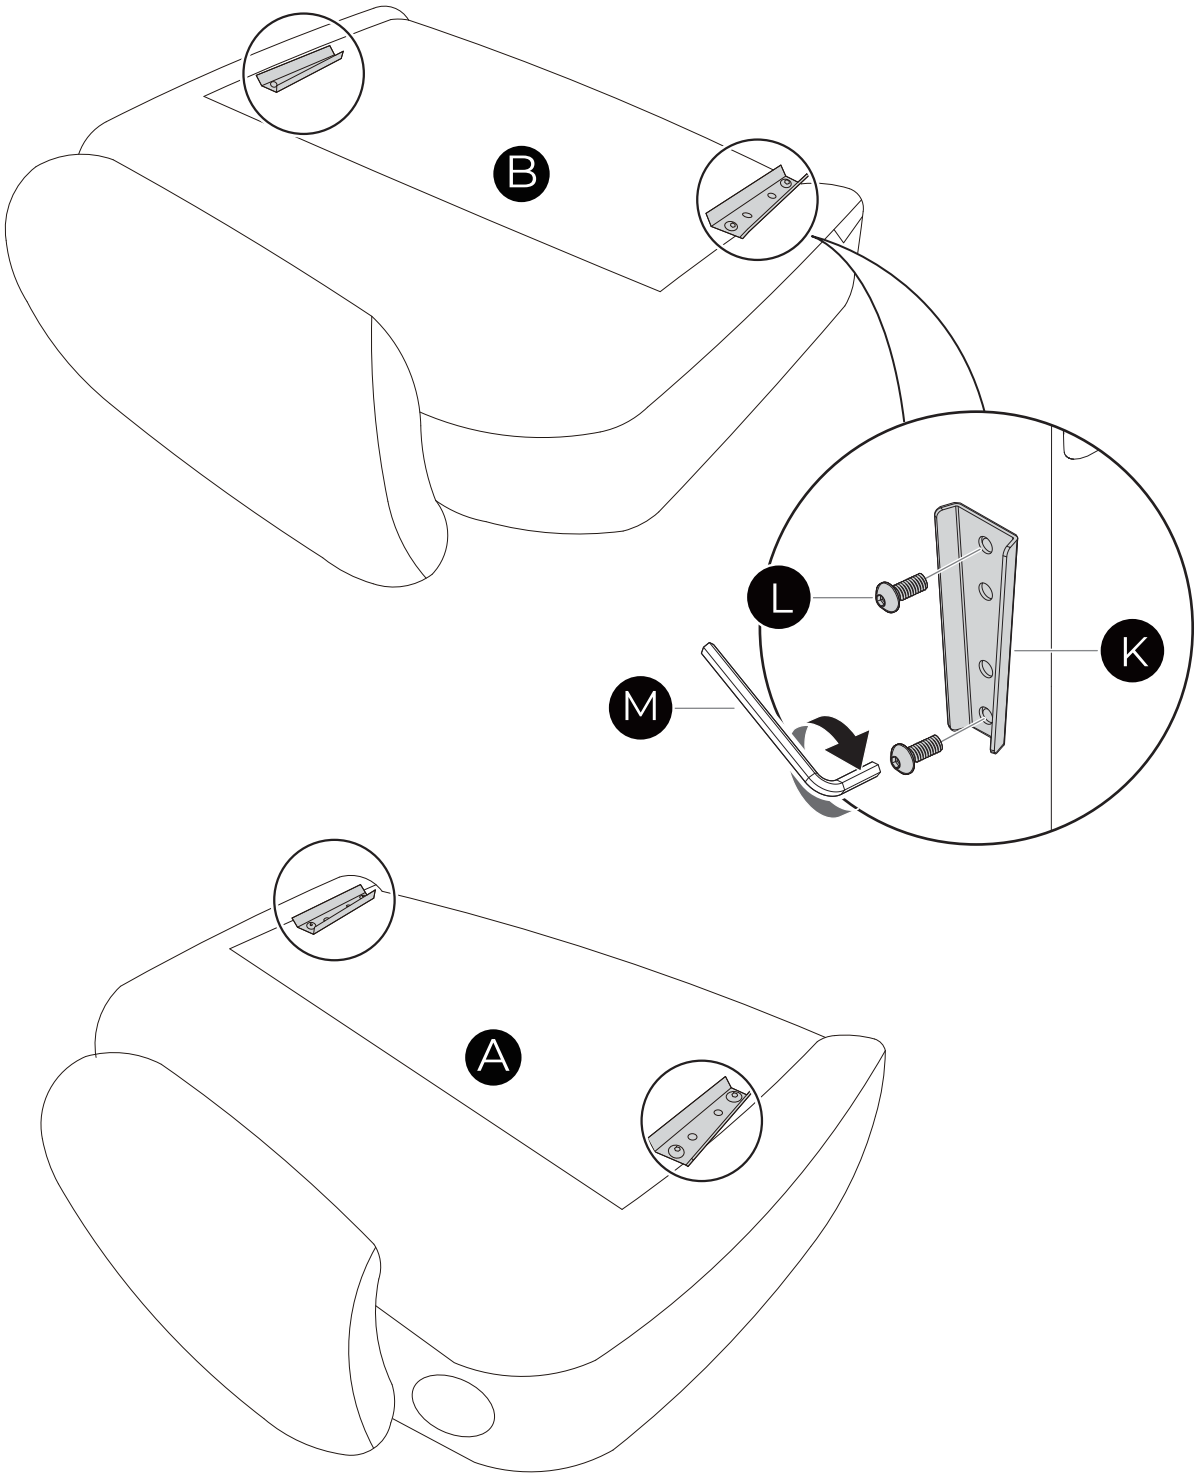

Step 3


Attach the right armrest (**A**) and left armrest (**B**) to the seat (**D**).

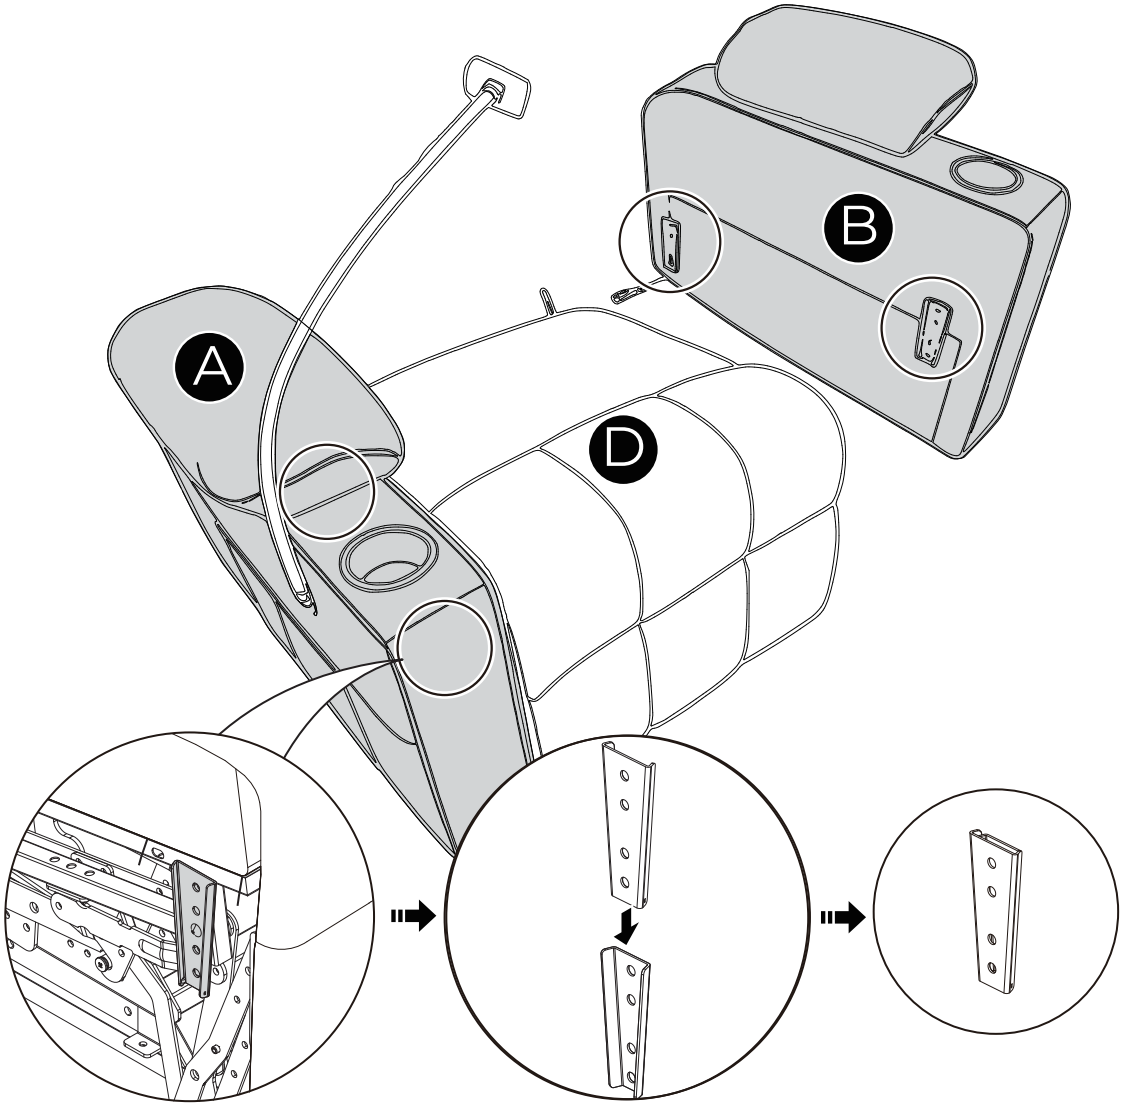

NOTICE: Parts **A** and **B** feature quick-release bracket structures.
Do not pull, lift, or apply force to these brackets when moving or handling the unit to prevent accidental detachment.


Step 4

Attach the backrest (**C**) to the seat (**D**).

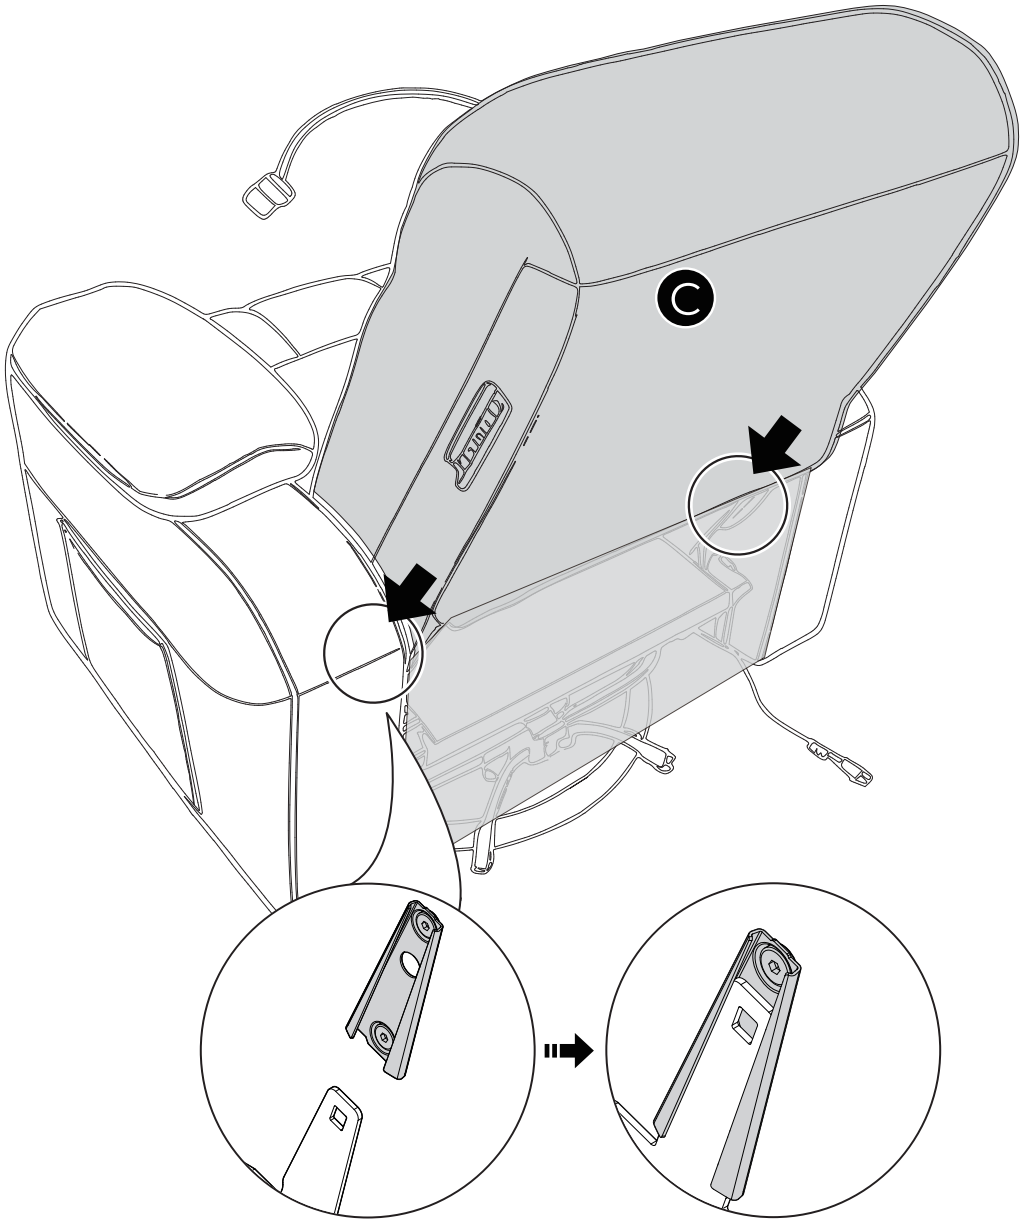

Step 5


Attach the right ear (**E**) and left ear (**F**) to the backrest (**C**).

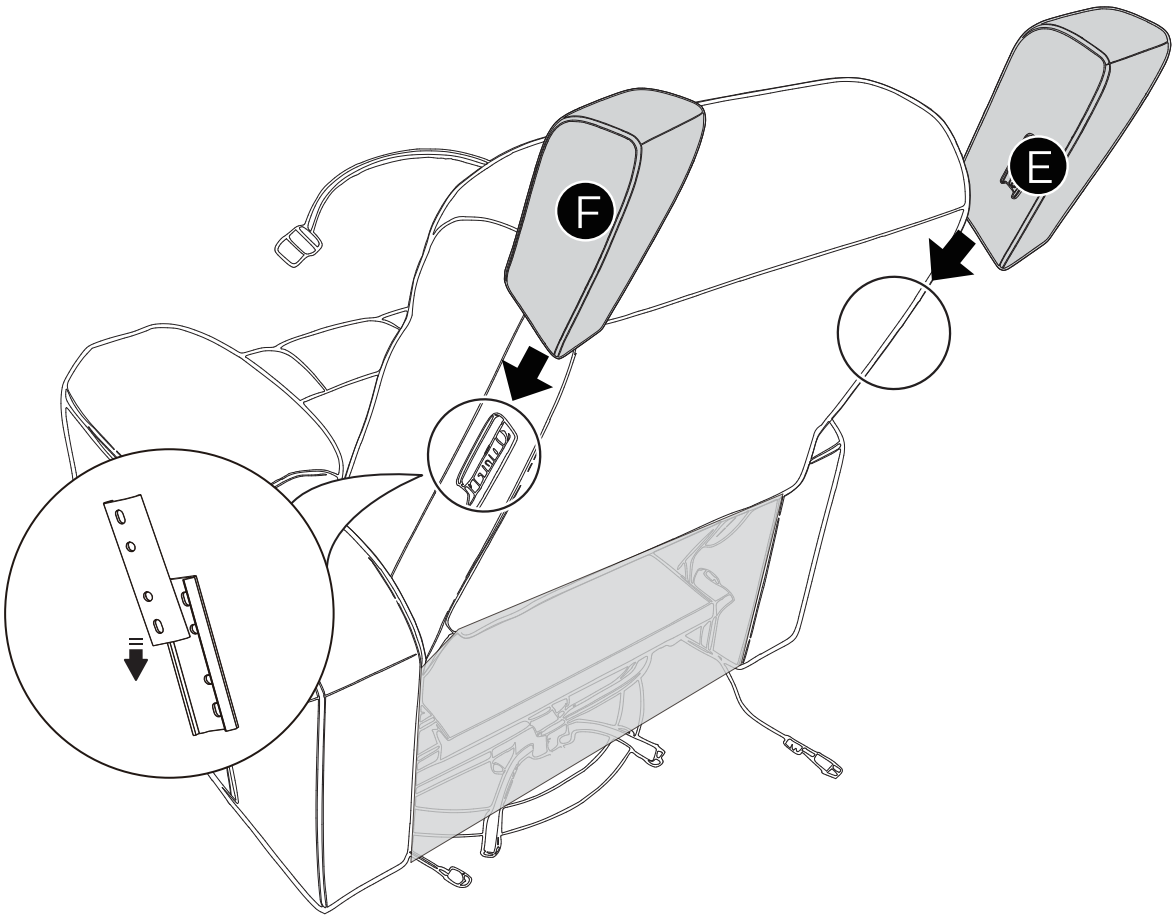

NOTICE: Items **E** and **F** feature quick-release mechanisms. Do not use them as lifting or leverage points when moving the chair, as this may cause accidental detachment.


Step 6

First, connect the cables by matching the label numbers: connect the white **M2** and **M3** connectors to their corresponding yellow **M2** and **M3** connectors. Then, connect the remote control **J**, and finally connect the power cord **H**.
NOTICE: Two power cord connections are required at this location.

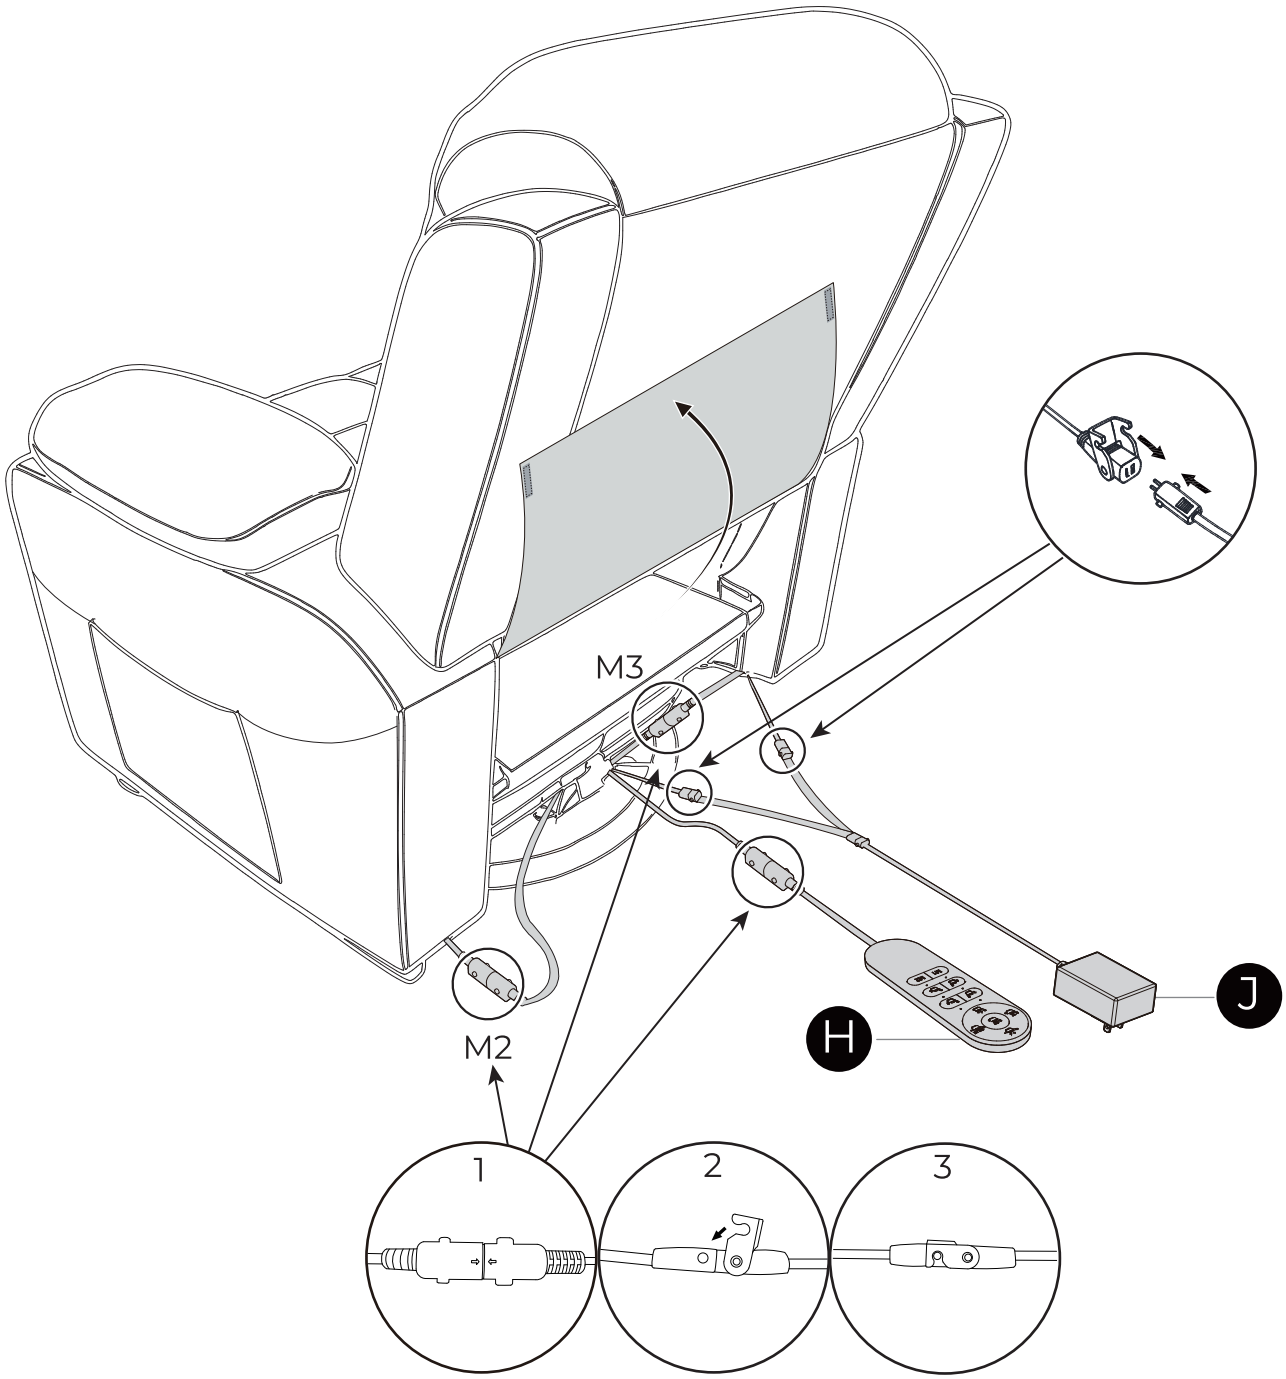

Step 7


Attach the loop fabric of the rear cover to the hook strip on the chair base.

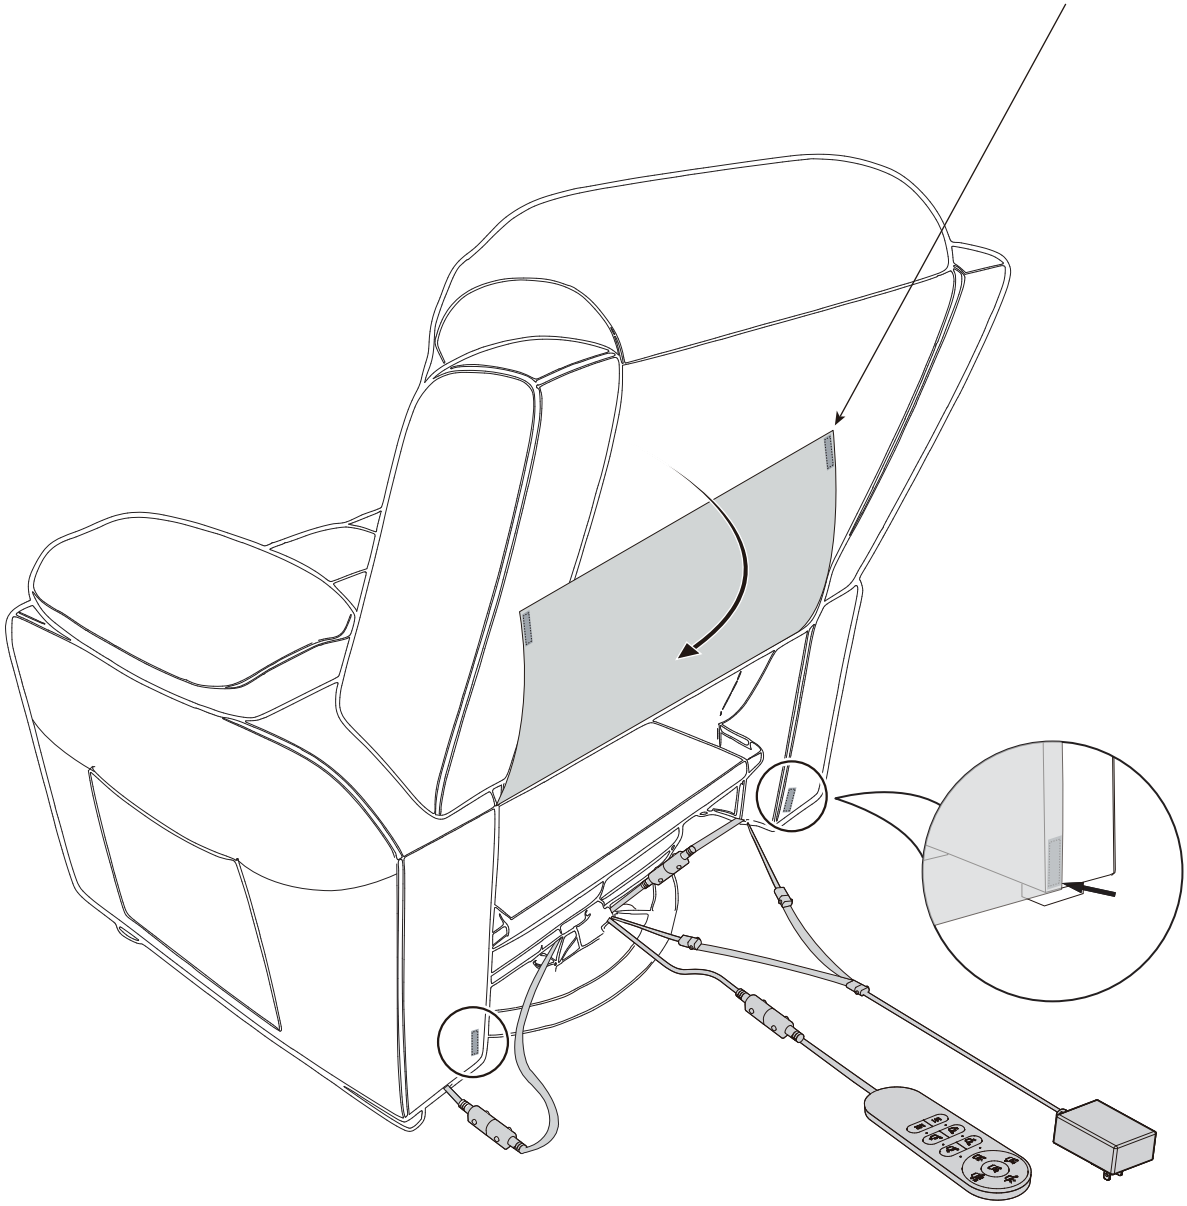



Step 8

Connect the power cable to complete assembly.

Plug in the
power supply.

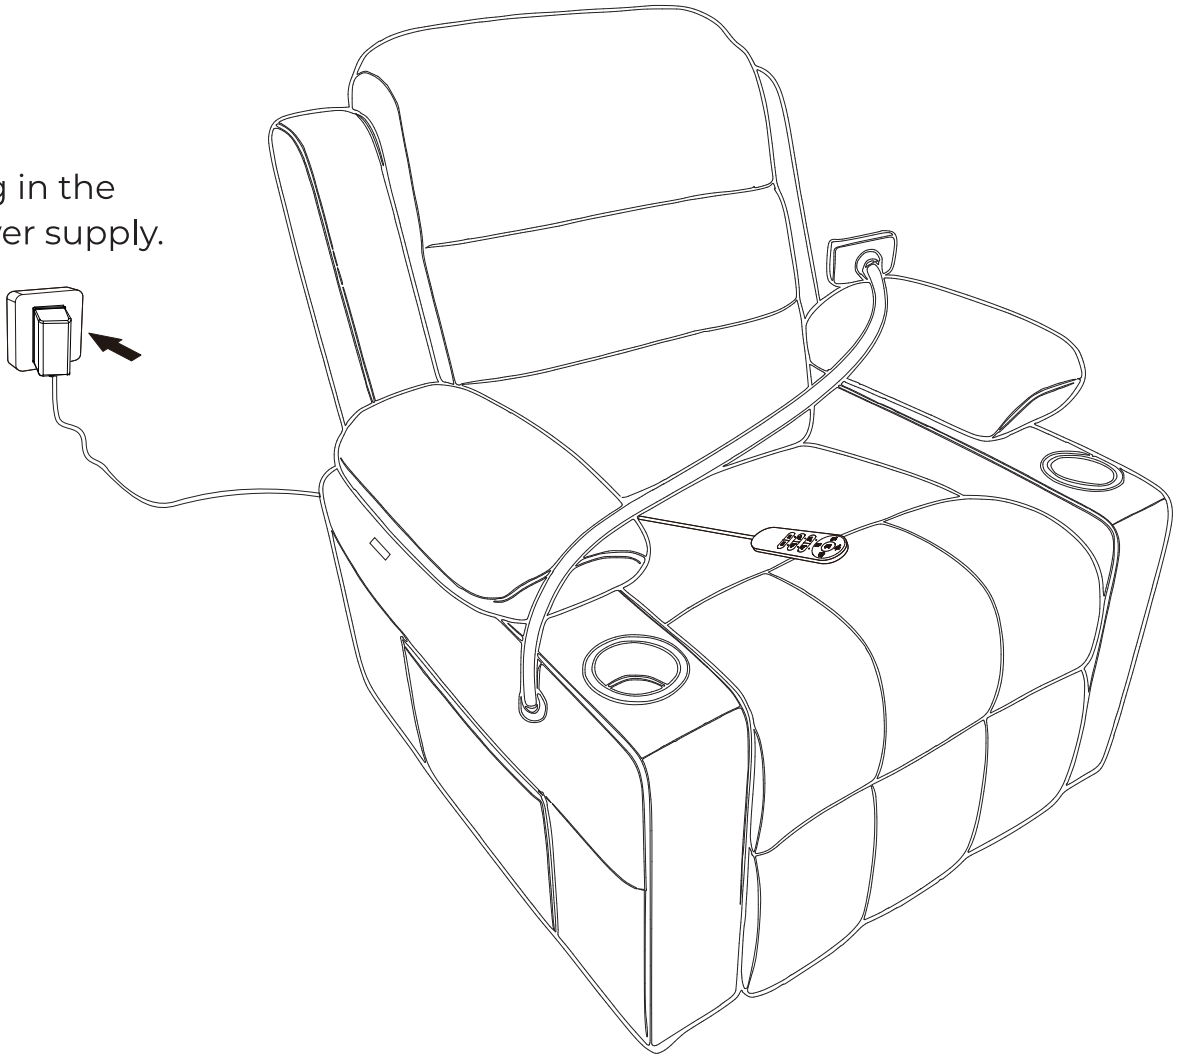


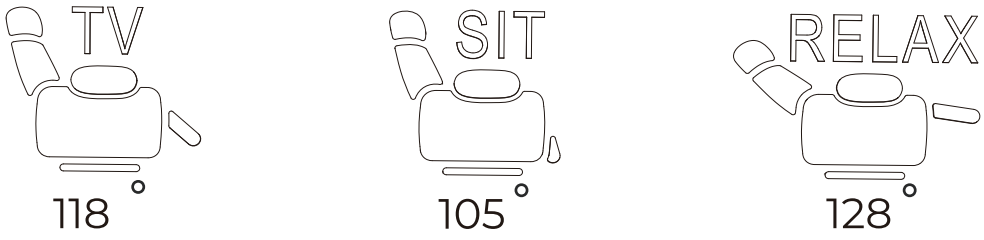

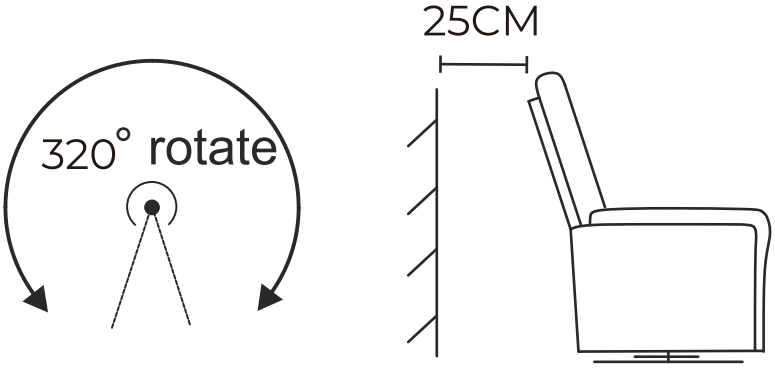

Recliner Manual

1. Recliner Position Controls:

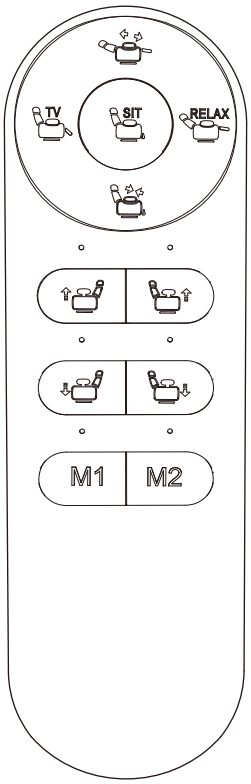

: Press and hold this button to recline the chair. Release it when you reach your preferred reclining angle.

: Press and hold this button to raise the seat. Release it once you reach your desired position.

: Press and hold this button to raise the left armrest.

: Press and hold this button to lower the left armrest.

: Press and hold this button to raise the right armrest.

: Press and hold this button to lower the right armrest

2. Preset Position Buttons:

: Press this button to return the chair to the upright position. Both armrests will automatically lower to their lowest point.

: Press this button to adjust the recliner to the TV mode.

: Press this button to adjust the recliner to the RELAX mode.

3. Memory Settings:

Saving a preset position: Press and hold “ M1 ” or “ M2 ” for 10 seconds until the corresponding indicator light above flashes, confirming the position has been saved.Recalling a preset position: Press “ M1 ” or “ M2 ” to return the recliner to your saved position.

4. Reset Instructions:

Recliner Reset: If the recliner fails to operate, press and hold the Recline button “ ” and “ M2 ” simultaneously for 10 seconds. The two indicator lights in the top row will flash to signal that reset mode is active. The recliner will automatically return to the upright position. Do not press any buttons while the reset is in progress.

Left Armrest Reset: If the left armrest fails to adjust, press and hold the Left Armrest Down button “ ” and “ M2 ” simultaneously for 10 seconds. The two indicator lights in the middle row will flash to signal that reset mode is active. The armrest will automatically return to its lowest position. Do not press any buttons while the reset is in progress.

Right Armrest Reset: If the right armrest fails to adjust, press and hold the Right Armrest Down button “ ” and “ M2 ” simultaneously for 10 seconds. The two indicator lights in the bottom row will flash to signal that reset mode is active. The armrest will automatically return to its lowest position. Do not press any buttons while the reset is in progress.

AFTER-SALES SERVICE

Thank you for choosing our product! We are committed to ensuring your satisfaction and providing excellent after-sales support. If you have any questions or concerns after receiving your order, please feel free to contact us. We are here to help!

What to Include in Your Message:
To help us resolve your issue as quickly as possible, please provide the following details:

1. Your order number.
2.A description of the issue or concern.
3.Any relevant photos or videos (if applicable).
Our customer support team will respond to your inquiry, and we will do our best to ensure a smooth and hassle-free experience.