

INSTALLATION
Product Manual

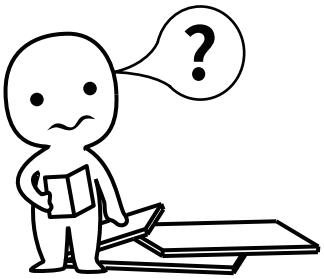


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

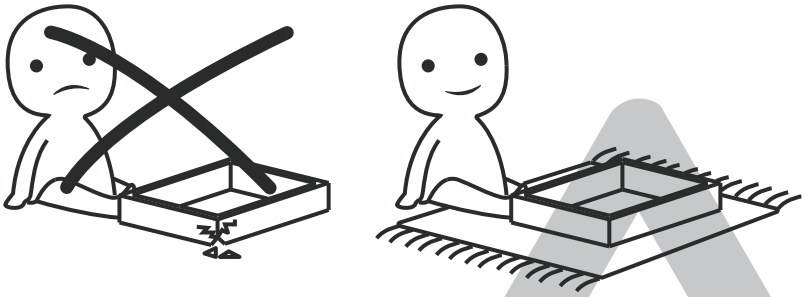


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

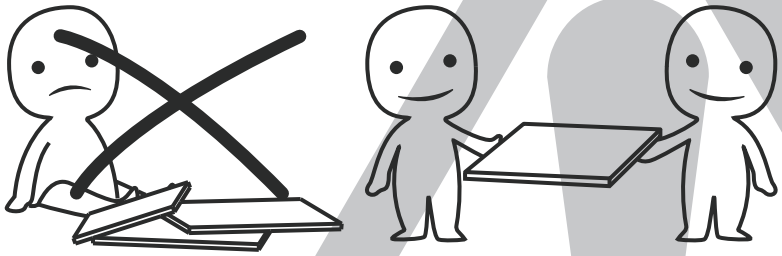

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

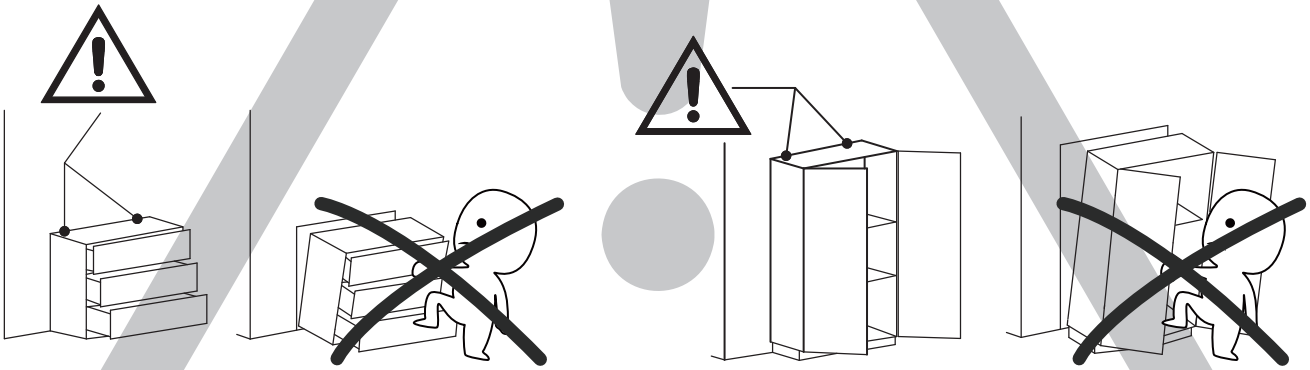

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.










For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

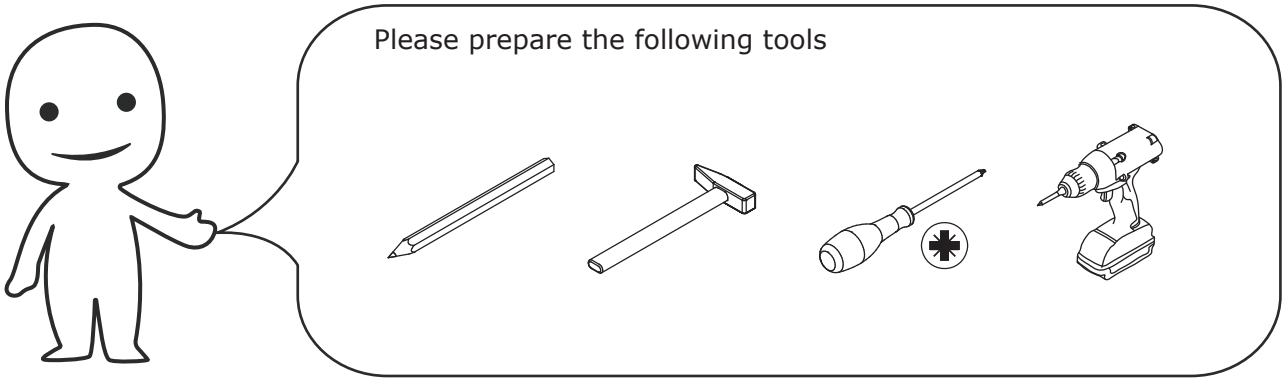


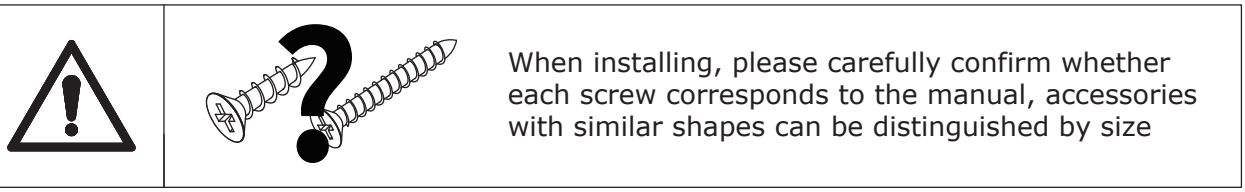

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

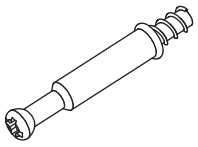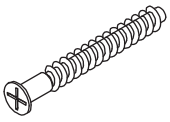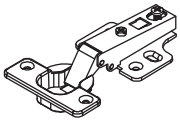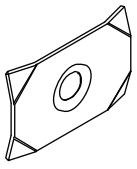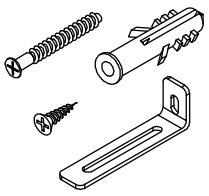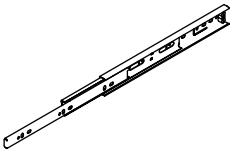A x 89	B x 89	C x 32	D x 132
 CRA0635A	 CRB1595A	 CRF0630A	 CRD3514A
E x 12	**F x 8**	**G x 3**	**H x 12**
 CRD3512A	 CRE0420A	 CRE0418A	 CRC0540A
J x 8	**K x 8**	**L x 11**	**M x 14**
 DGA861A	 DGA861C		
N x 42	**P x 3**	**Q x 6**	
			

1.When assembling the product, please be sure to follow the steps according to the instructions.
2. The assembly requires two people to install;

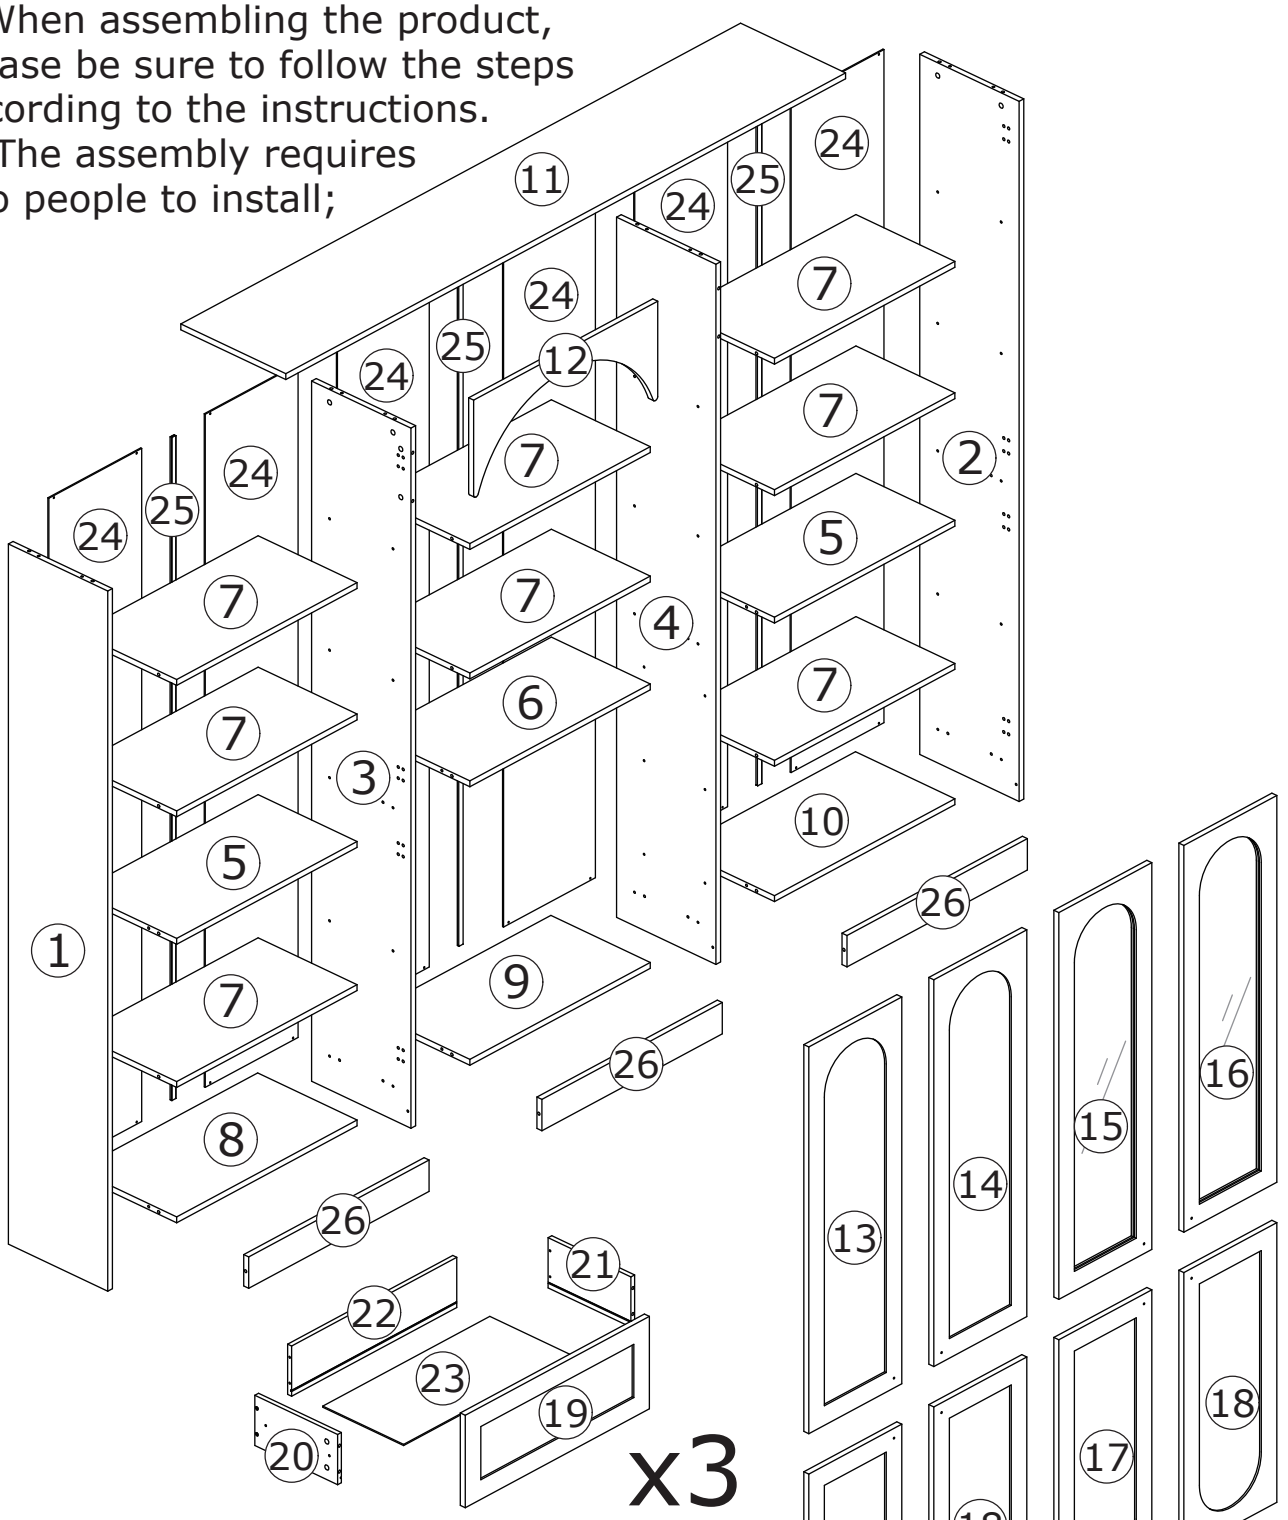


⚠WARNING

Children have died from furniture tipover.To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!

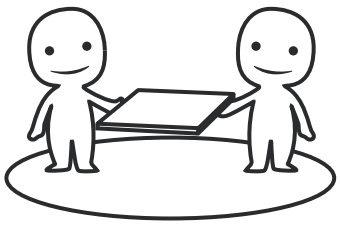


ASSEMBLED BY 2 ADULTS


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.


Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

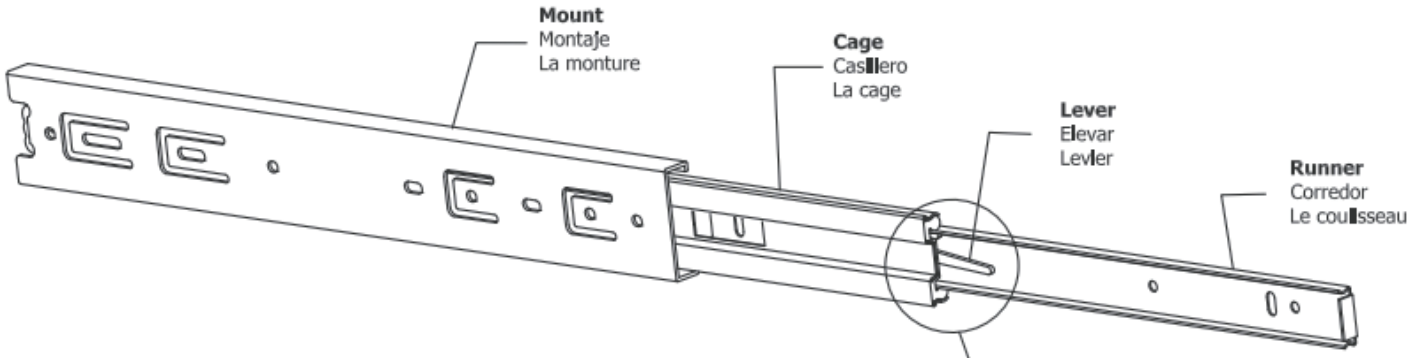


STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

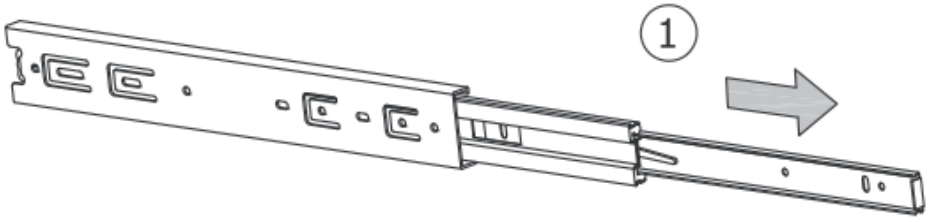


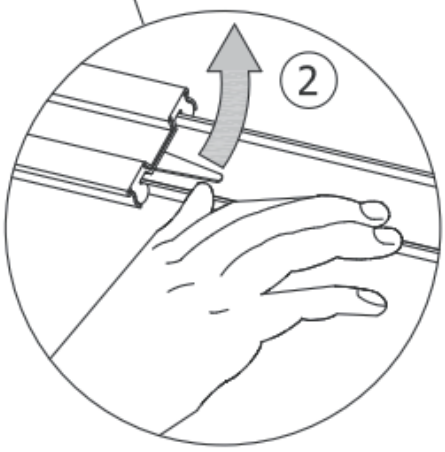



STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

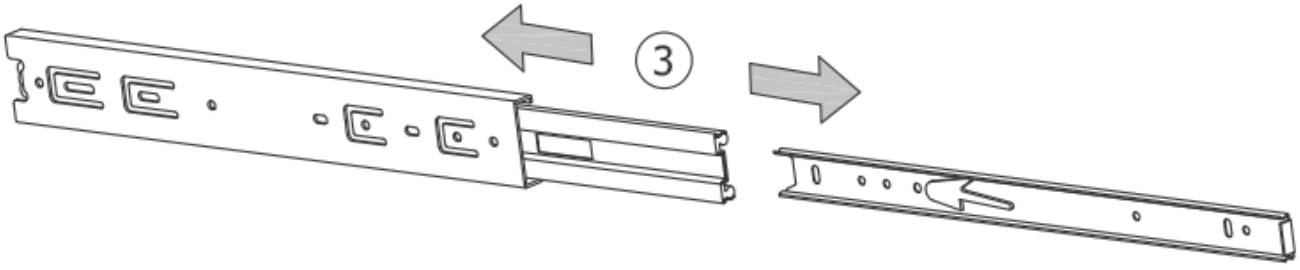


1



A x 3	B x 3	
		
CRA0635A	CRB1595A	

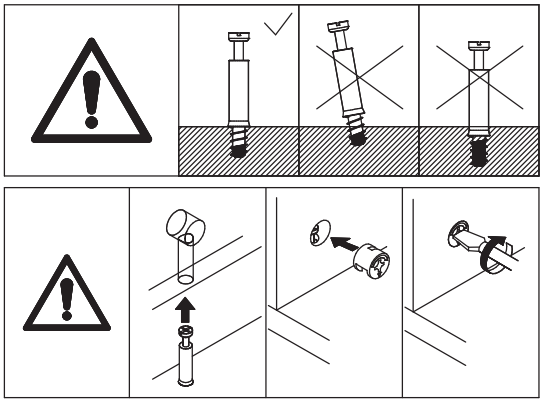



Screw eccentric rod(A) into panel 8, 9 and 10 at first.
Attach panel 26 to panel 8, 9 and 10 respectively, add cam lock(B) into panel 26 and turn clockwise to tighten as shown.

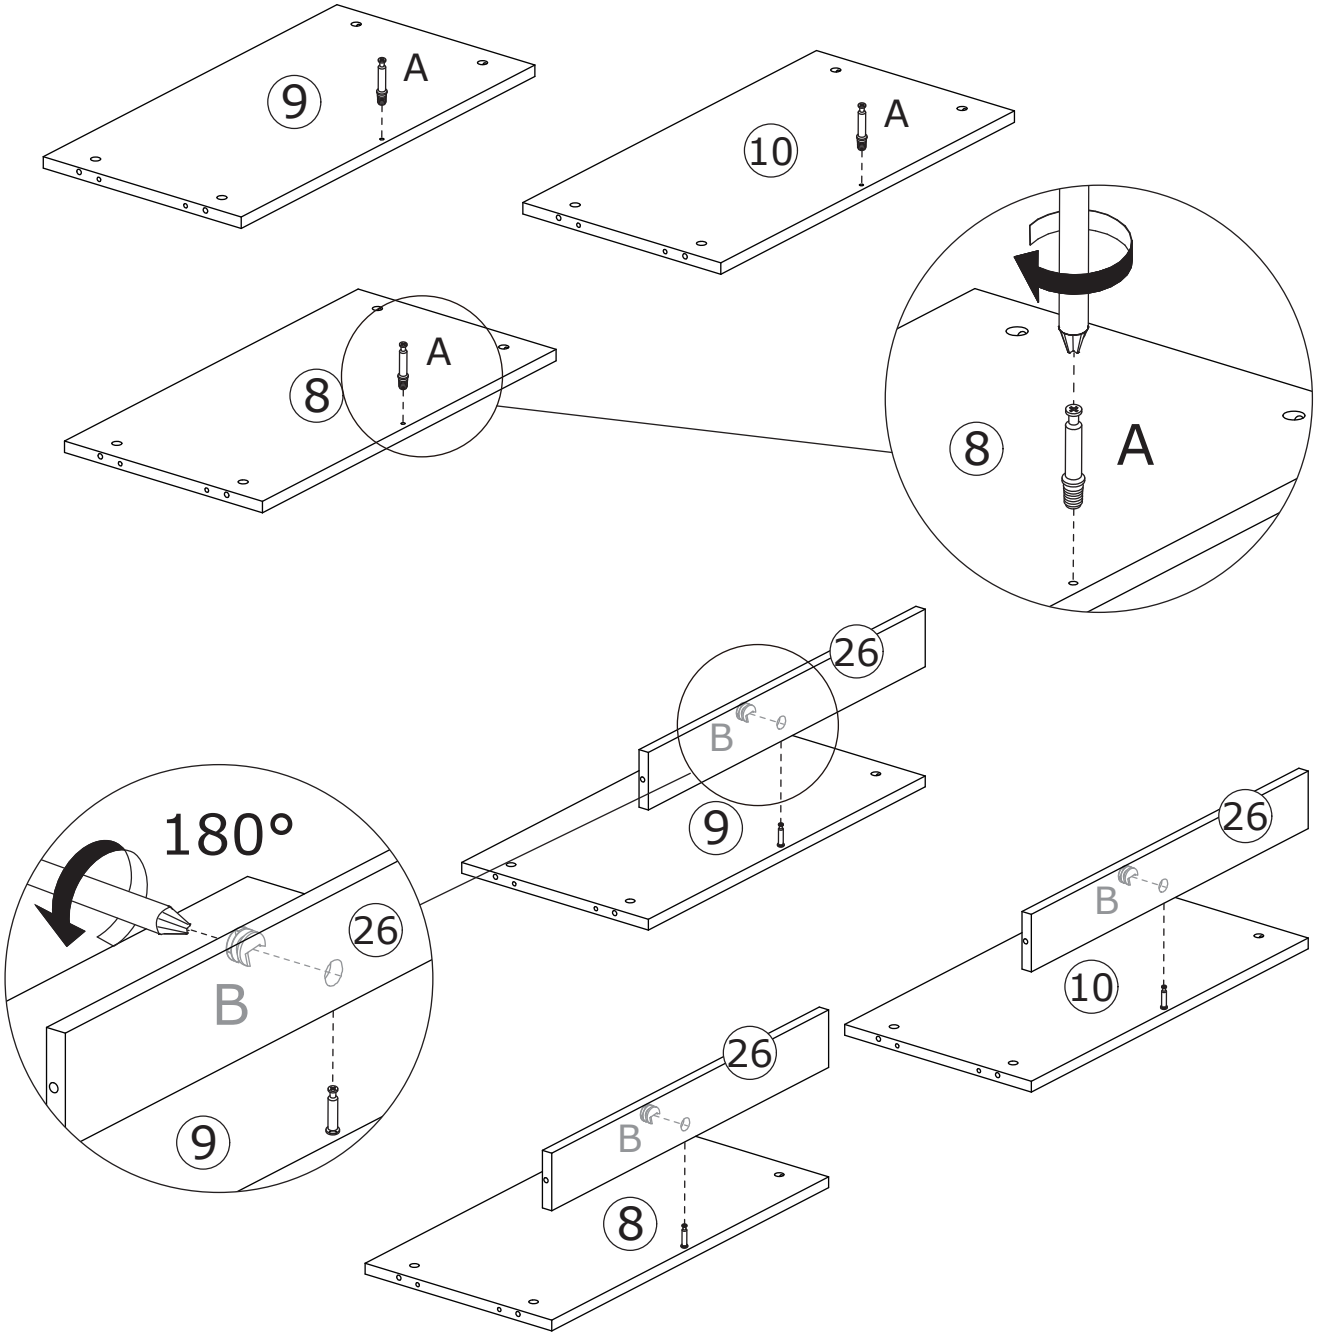


2

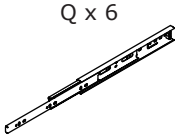D x 12	Q x 6	
 CRD3514A		

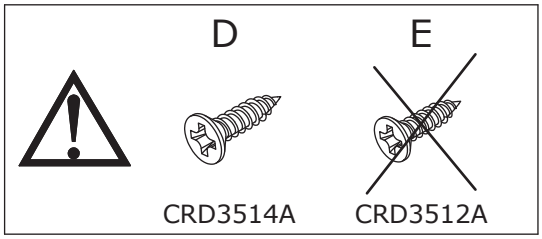

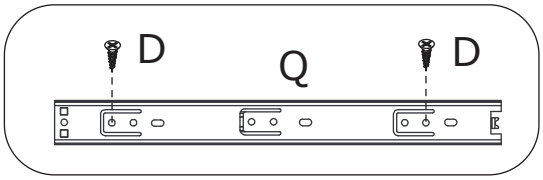


Separate slide(Q) into two parts at first.(Page 5)
Fix rail(Q) to panel 3 and 4 with screw(D) as shown.

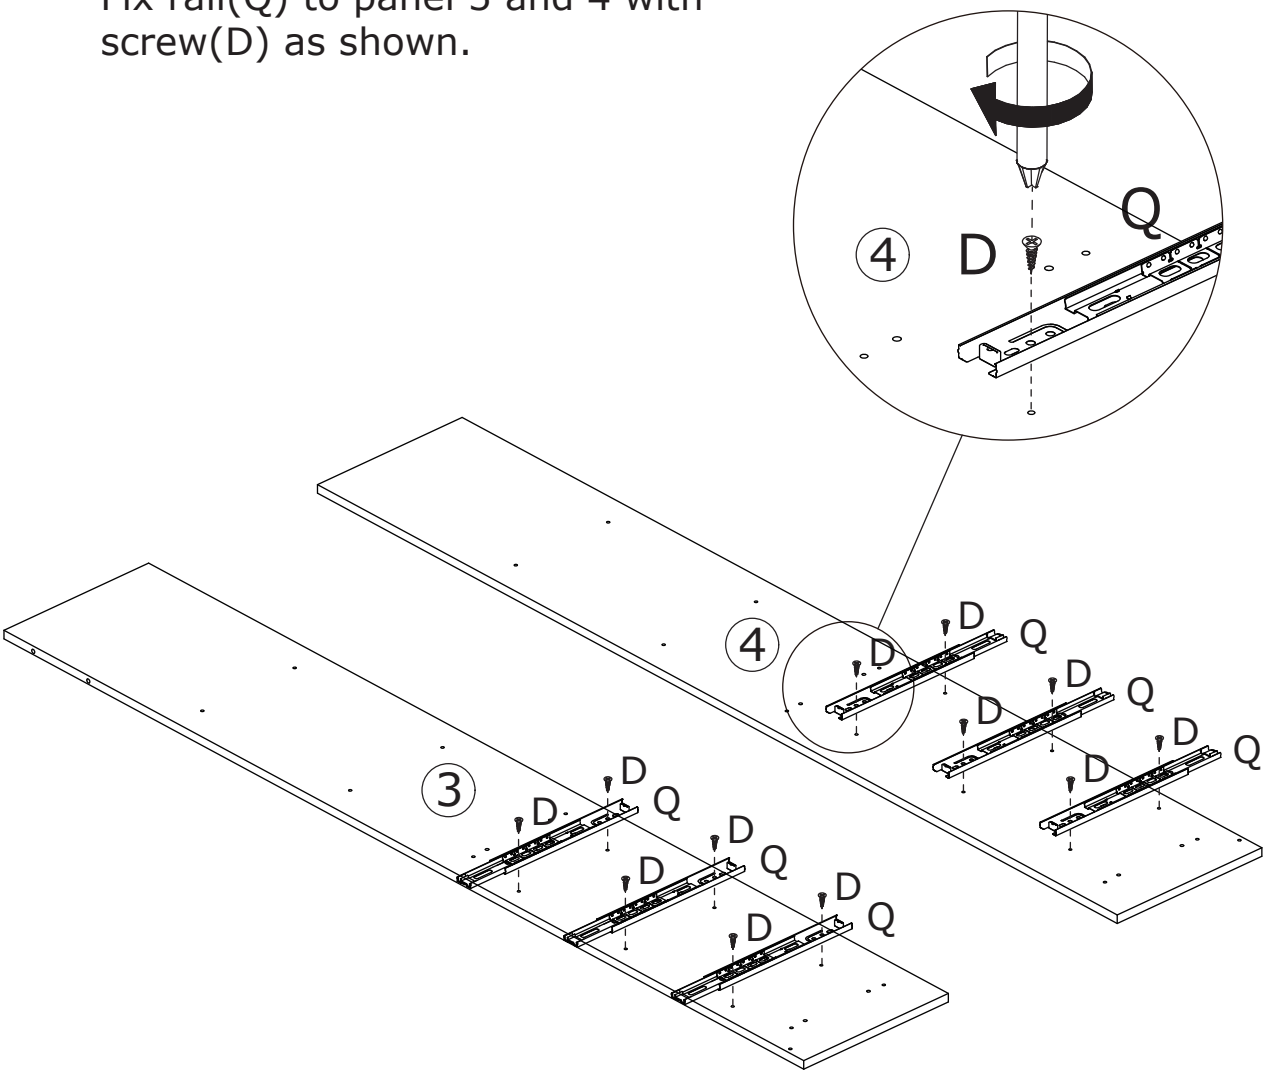



3

A x 40





CRA0635A



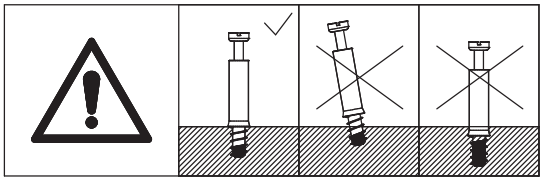



Screw eccentric rod(A) into panel 3 and 4 at first.
Flip to back, screw eccentric rod(A) into as well.

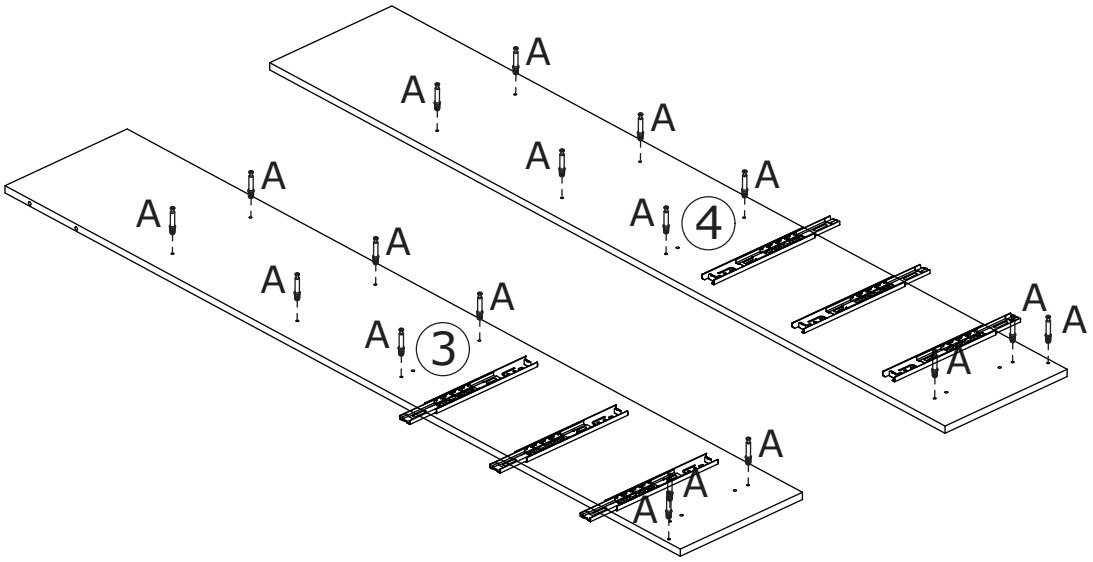

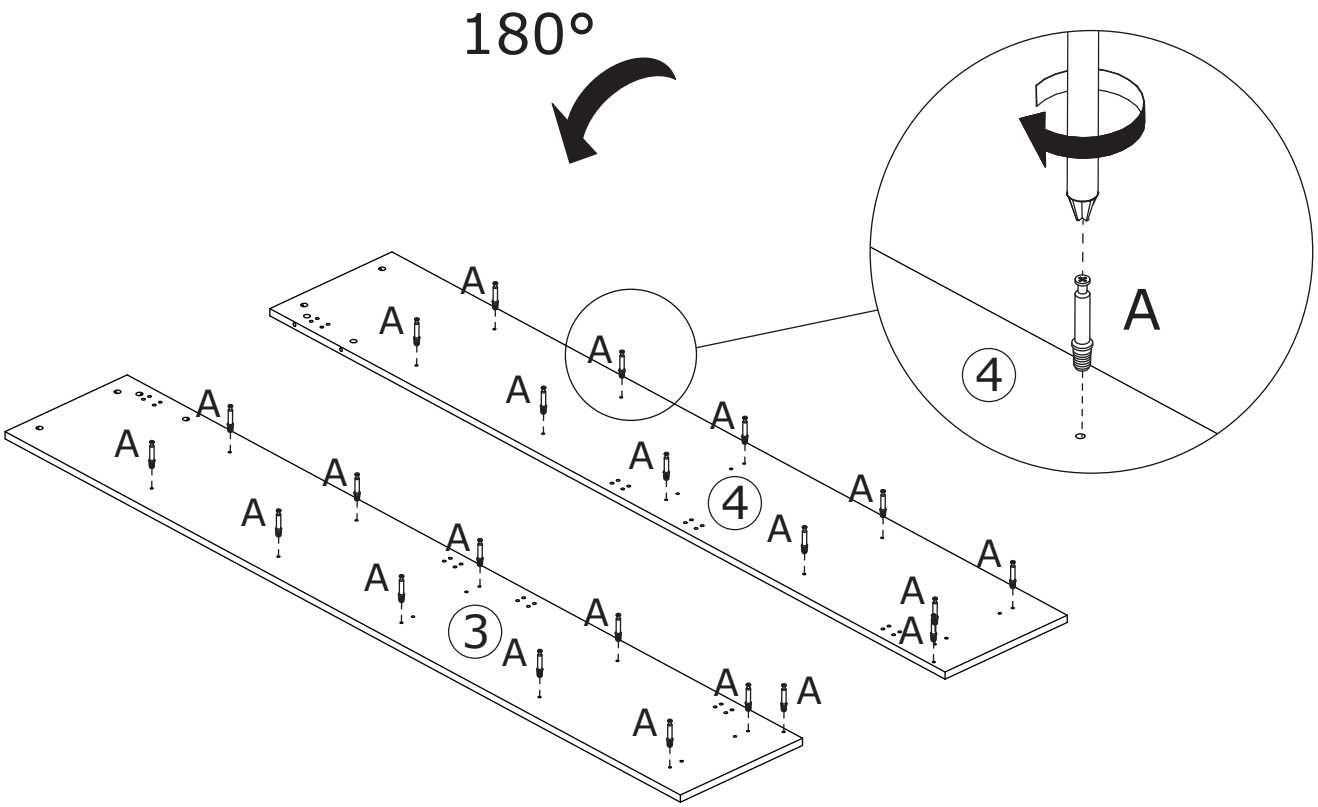


4

B x 18	C x 8	
		
CRB1595A	CRF0630A	

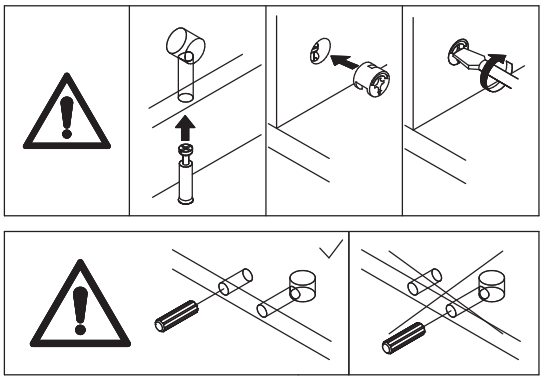


Connect panel 3 and 4 to panel 7, 6, 9 and 26 using wooden dowel(C), add cam lock(B) into panel 7,6,9,26 and turn clockwise to tighten as shown.

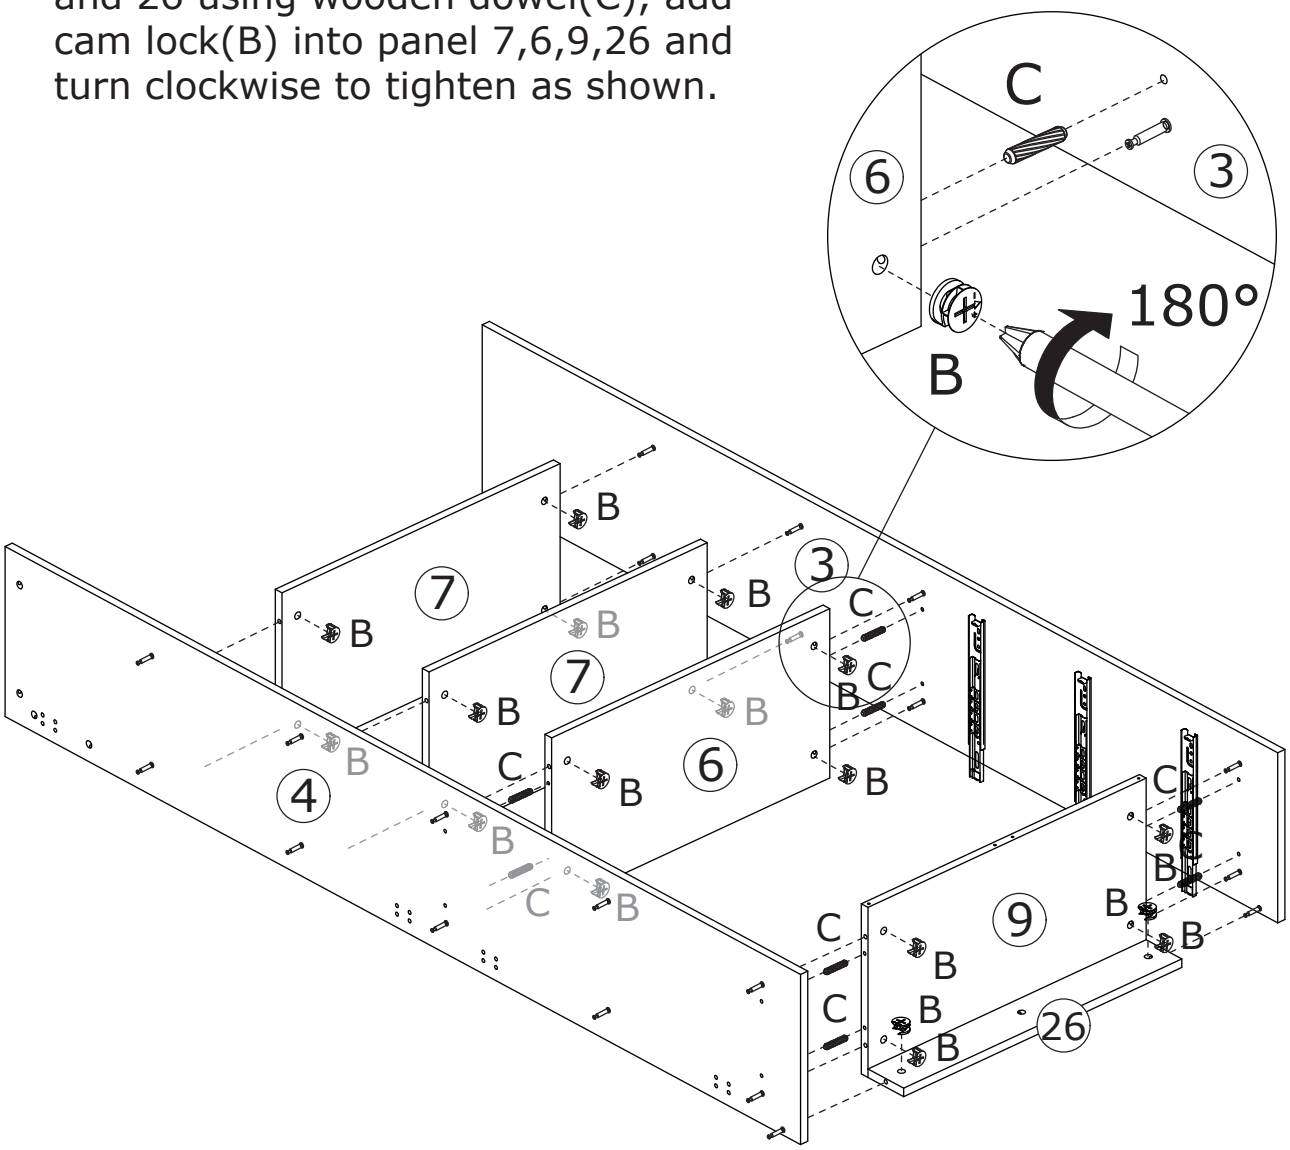



5

A x 22




CRA0635A




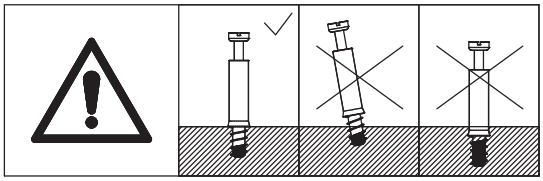


Screw eccentric rod(A)
into panel 1 and 2 at first.

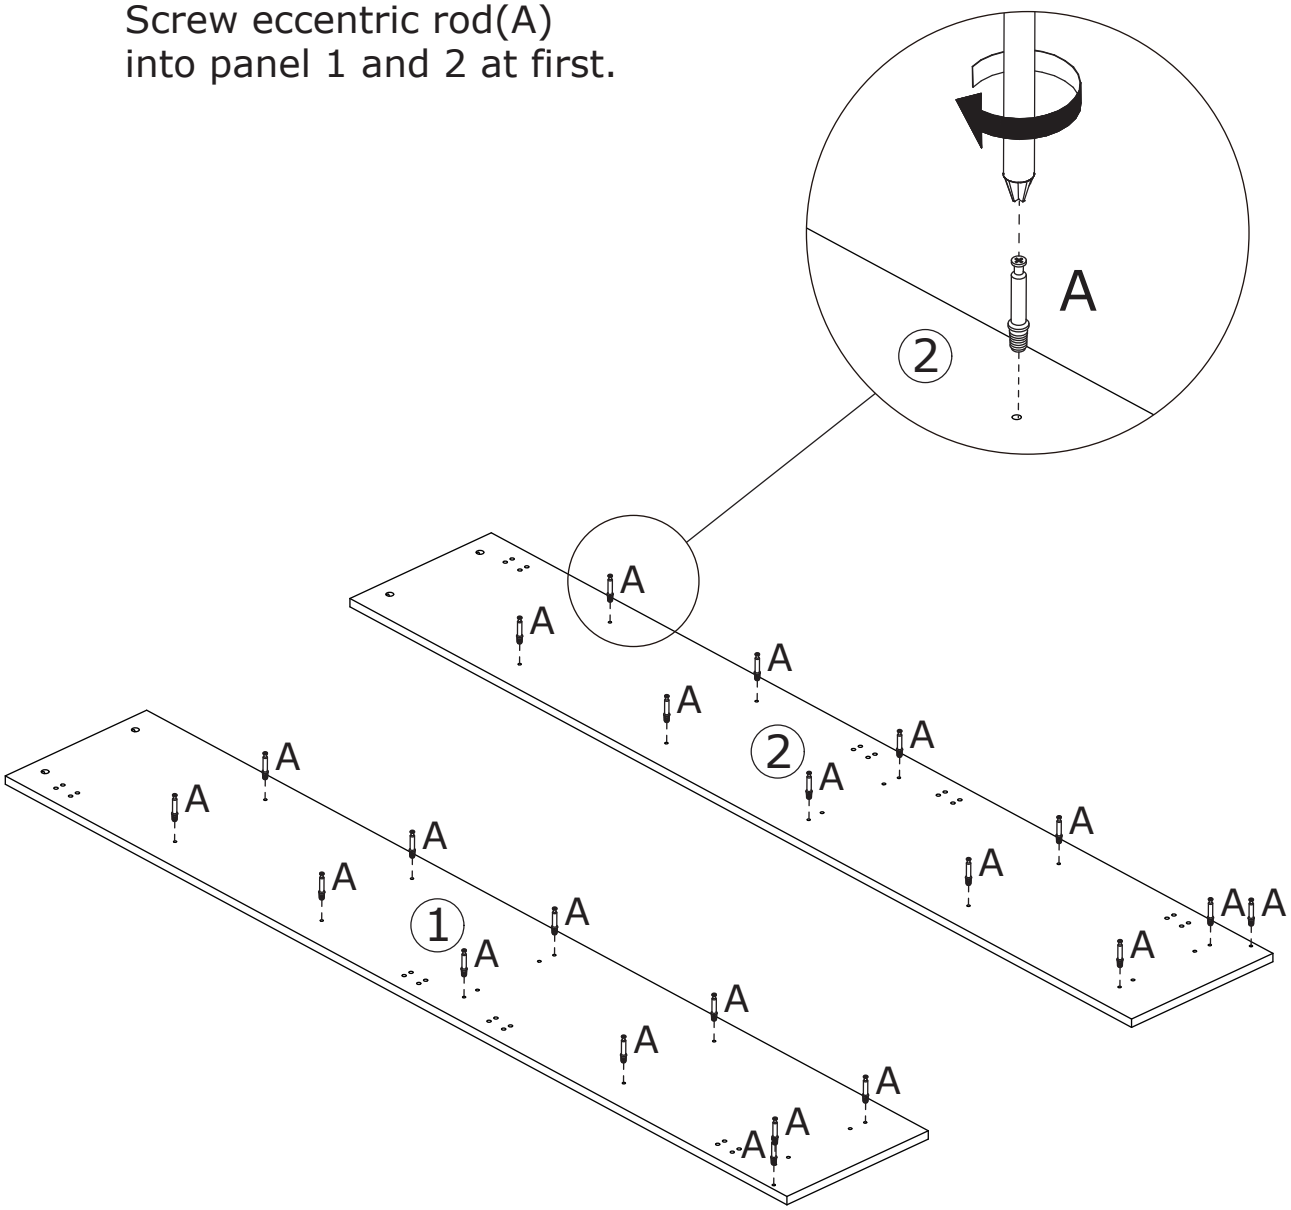



6

B x 22	C x 8	
		
CRB1595A	CRF0630A	

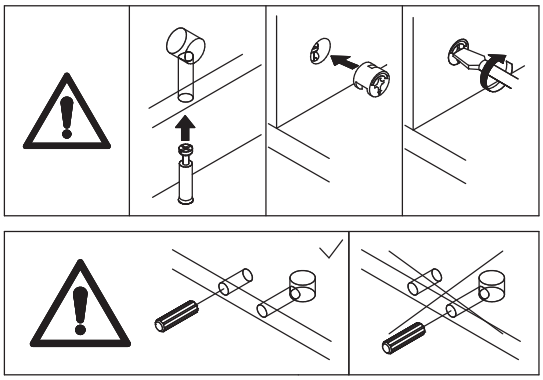



Connect panel 1 and 3 to panel 7, 5, 8 and 26 using wooden dowel(C), add cam lock(B) into panel 7,5,8,26 and turn clockwise to tighten as shown.

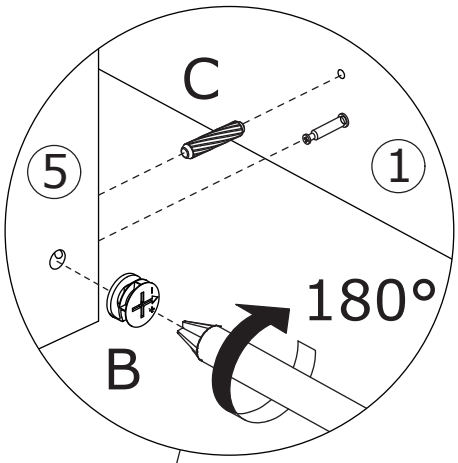

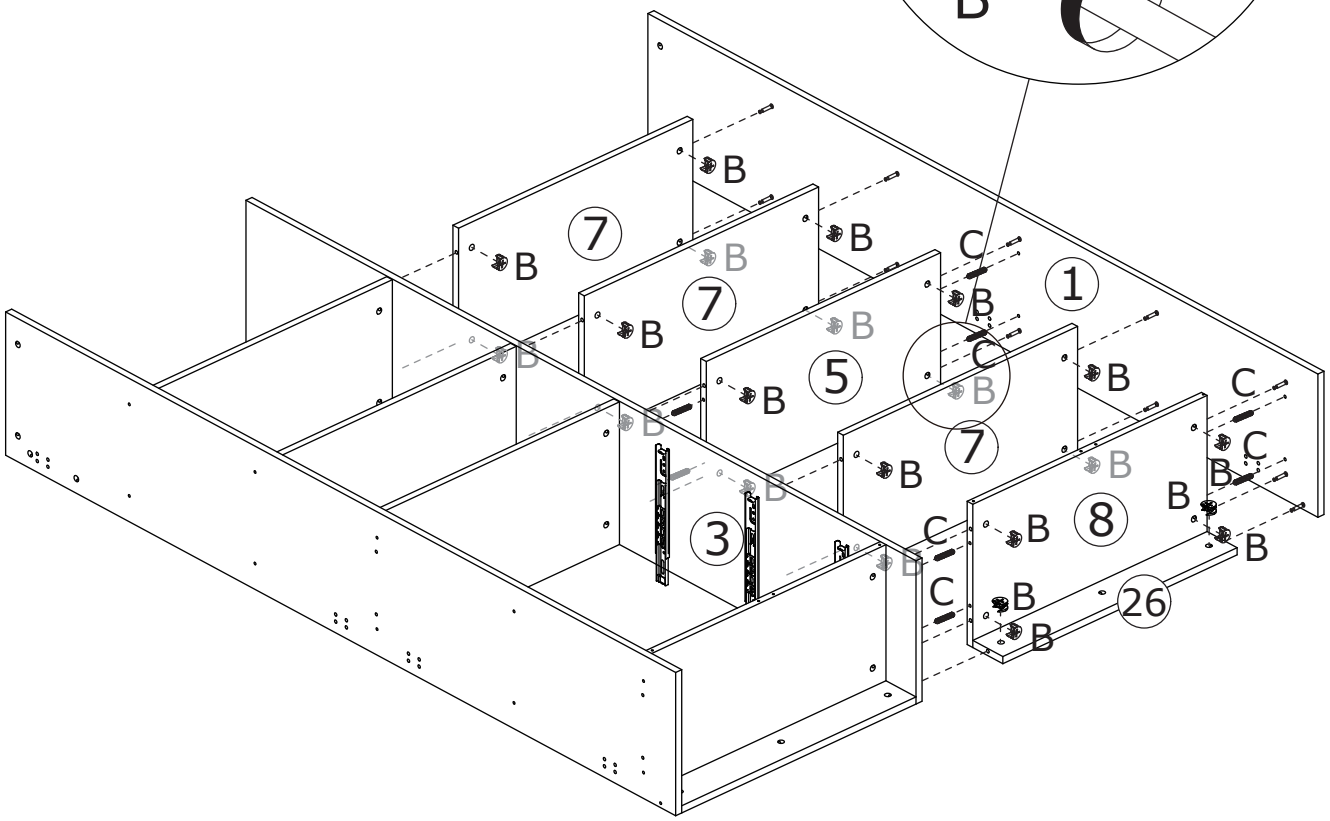



7

B x 22	C x 8	
		
CRB1595A	CRF0630A	

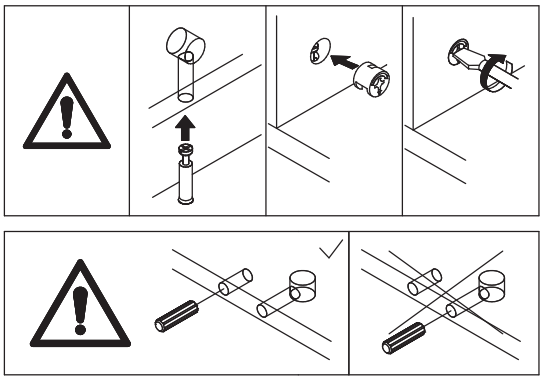


Connect panel 2 and 4 to panel 7, 5, 10 and 26 using wooden dowel(C), add cam lock(B) into panel 7,5,10,26 and turn clockwise to tighten as shown.

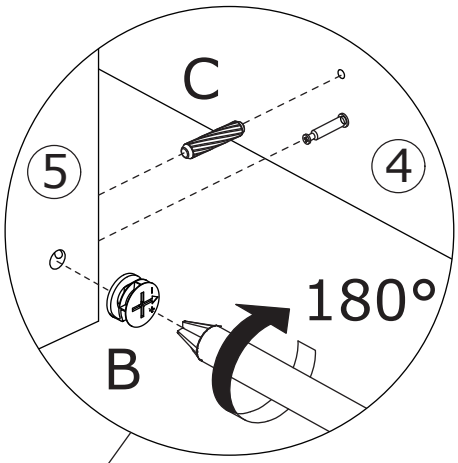

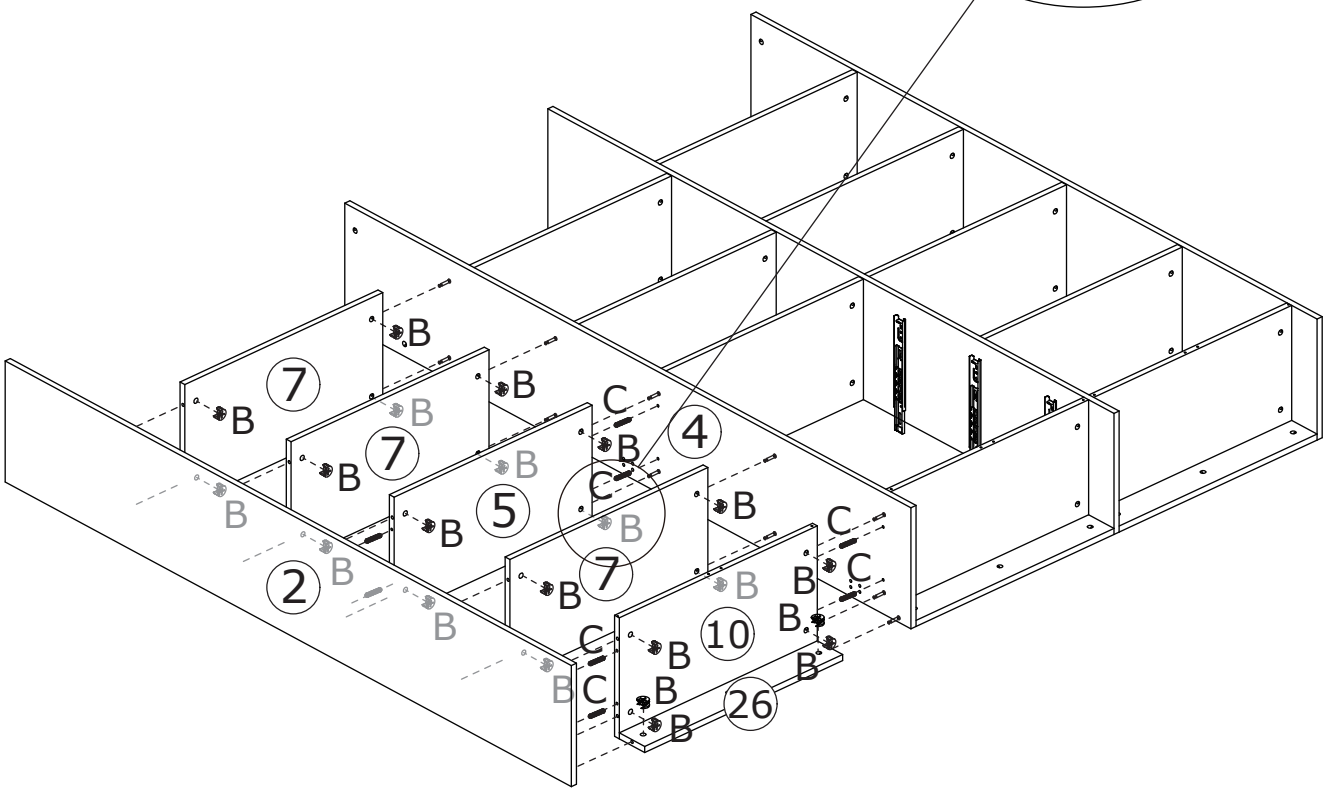



8

A x 8




CRA0635A




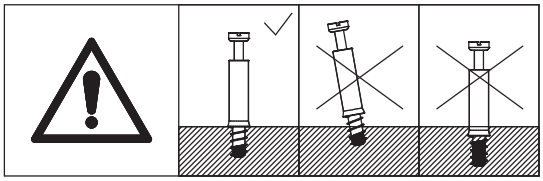


Screw eccentric rod(A)
into panel 11 at first.

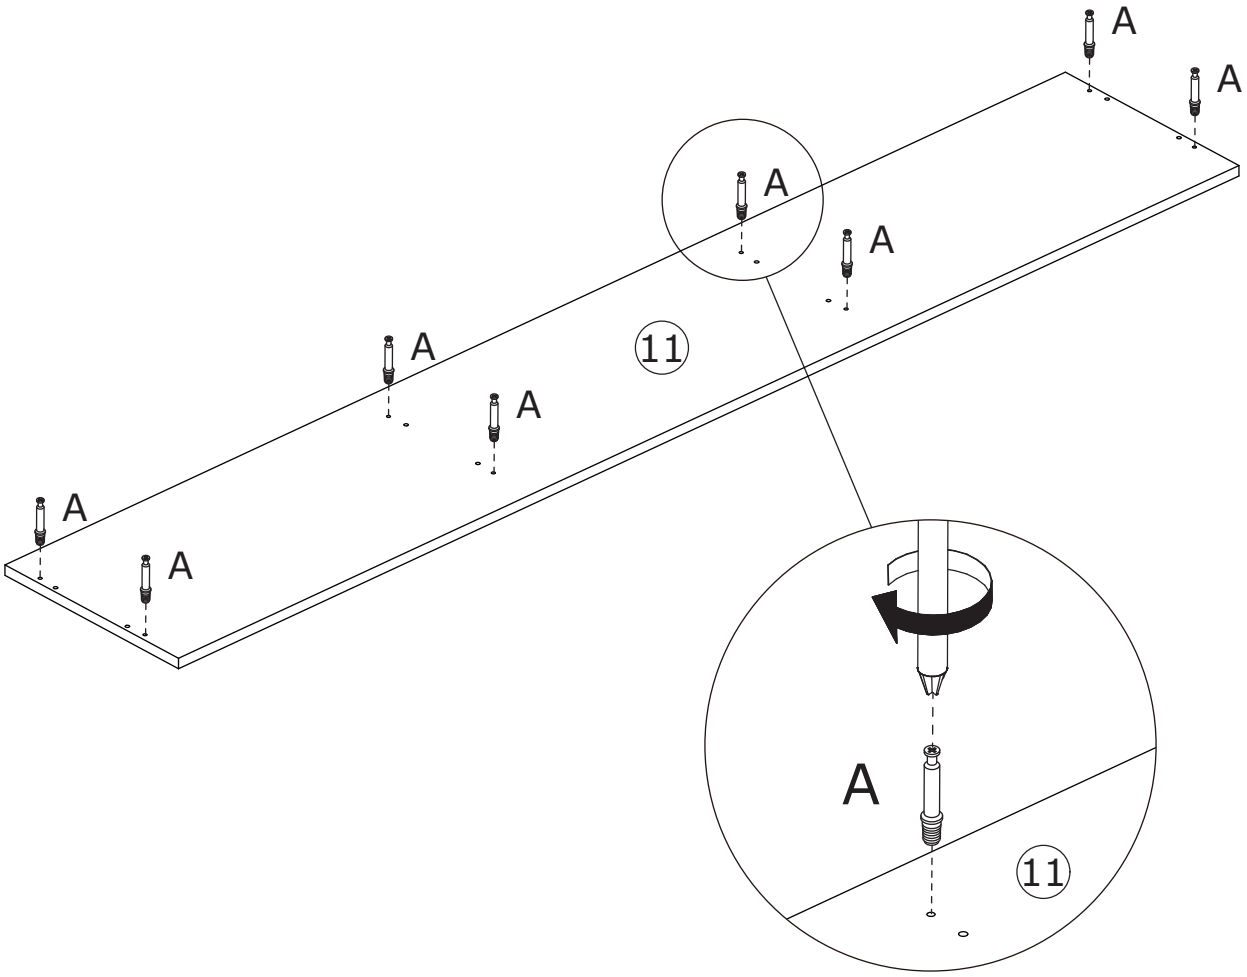



9

B x 8	C x 8	
		
CRB1595A	CRF0630A	


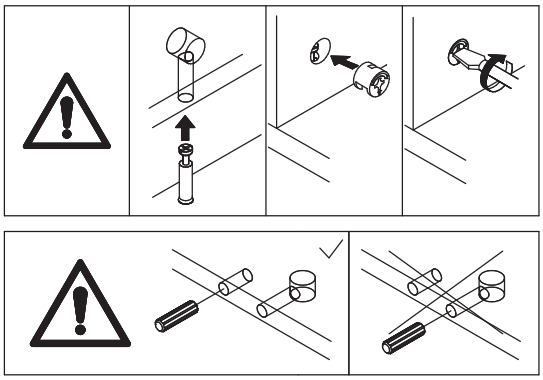



Attach panel 11 to panel 1, 3, 4 and 2
using wooden dowel(C), add cam lock(B)
into and turn clockwise to tighten as shown.

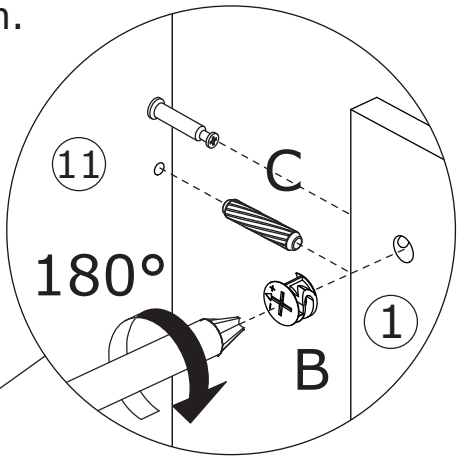

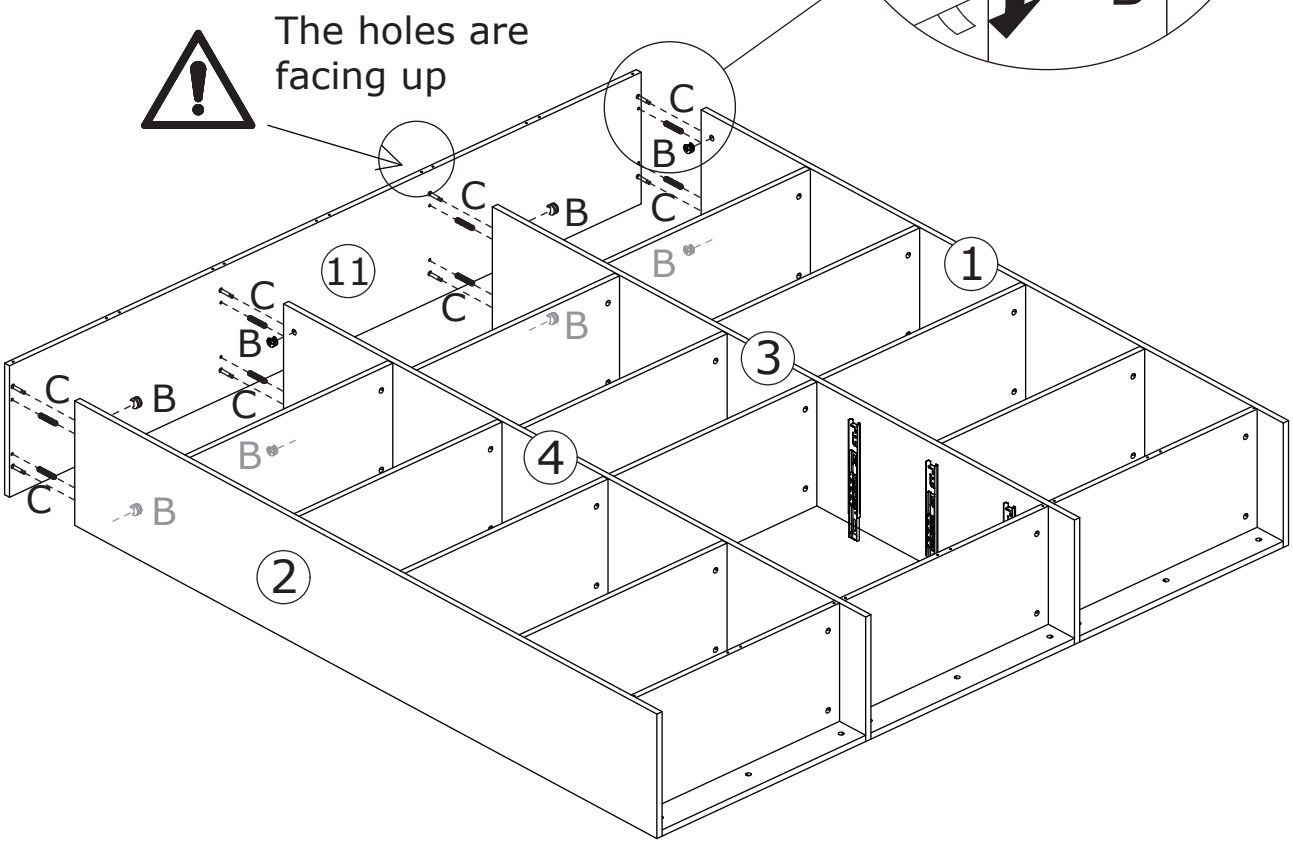


10



D x 24	M x 14	N x 42	
 CRD3514A			

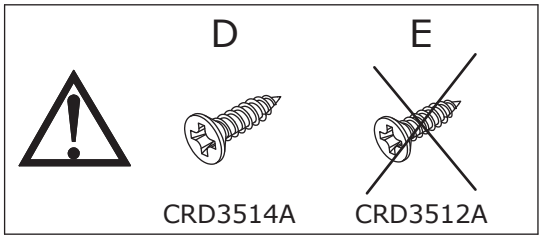


Connect panel 24 with strip 25 at first.
Fix back panel 24 to the unit with screw(D) and nail(N) as shown.
Fix iron sheet(M) to panel 24 with nail(N) as shown.

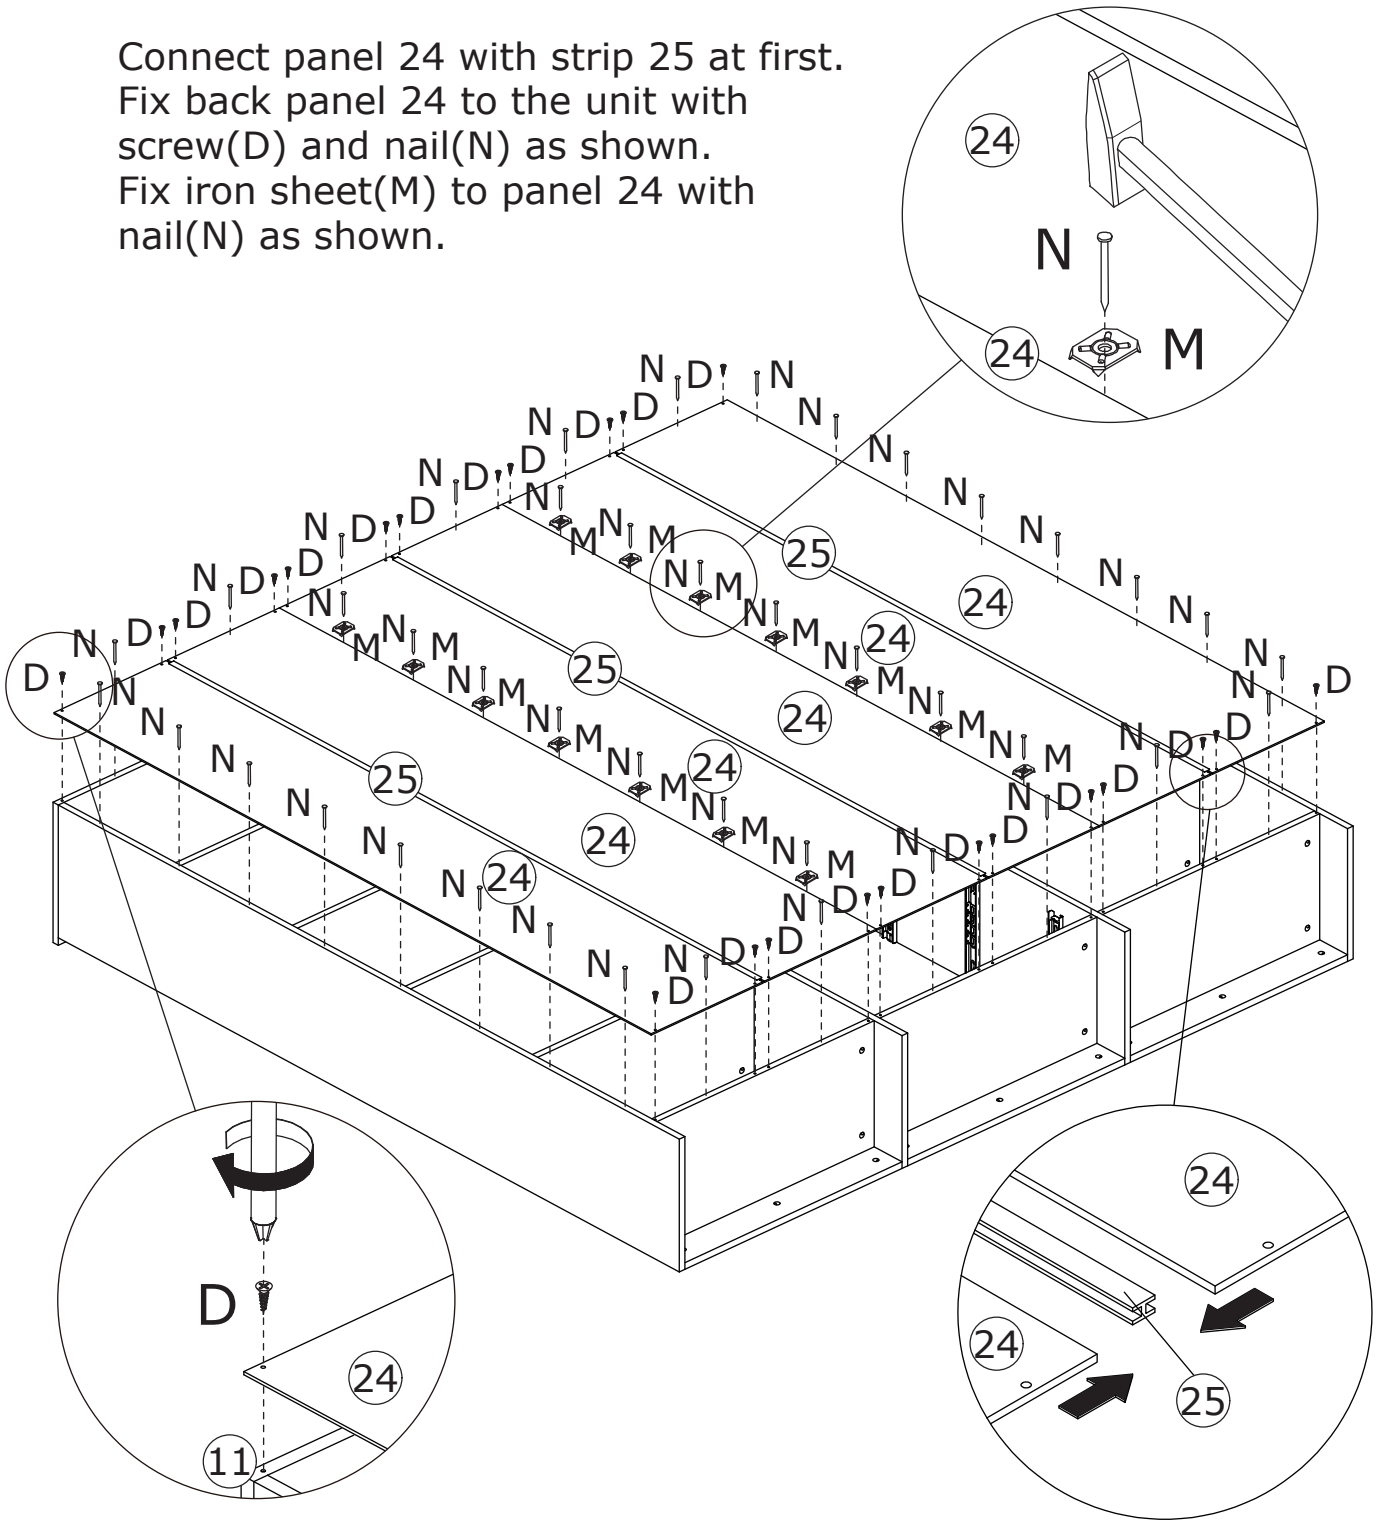


11

A x 4	B x 4	
		
CRA0635A	CRB1595A	

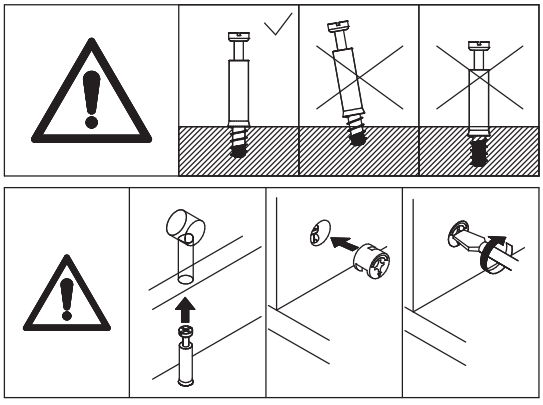

Screw eccentric rod(A) into panel 12 at first.
Attach panel 12 to panel 3 and 4, add cam lock(B) into and turn clockwise to tighten as shown.

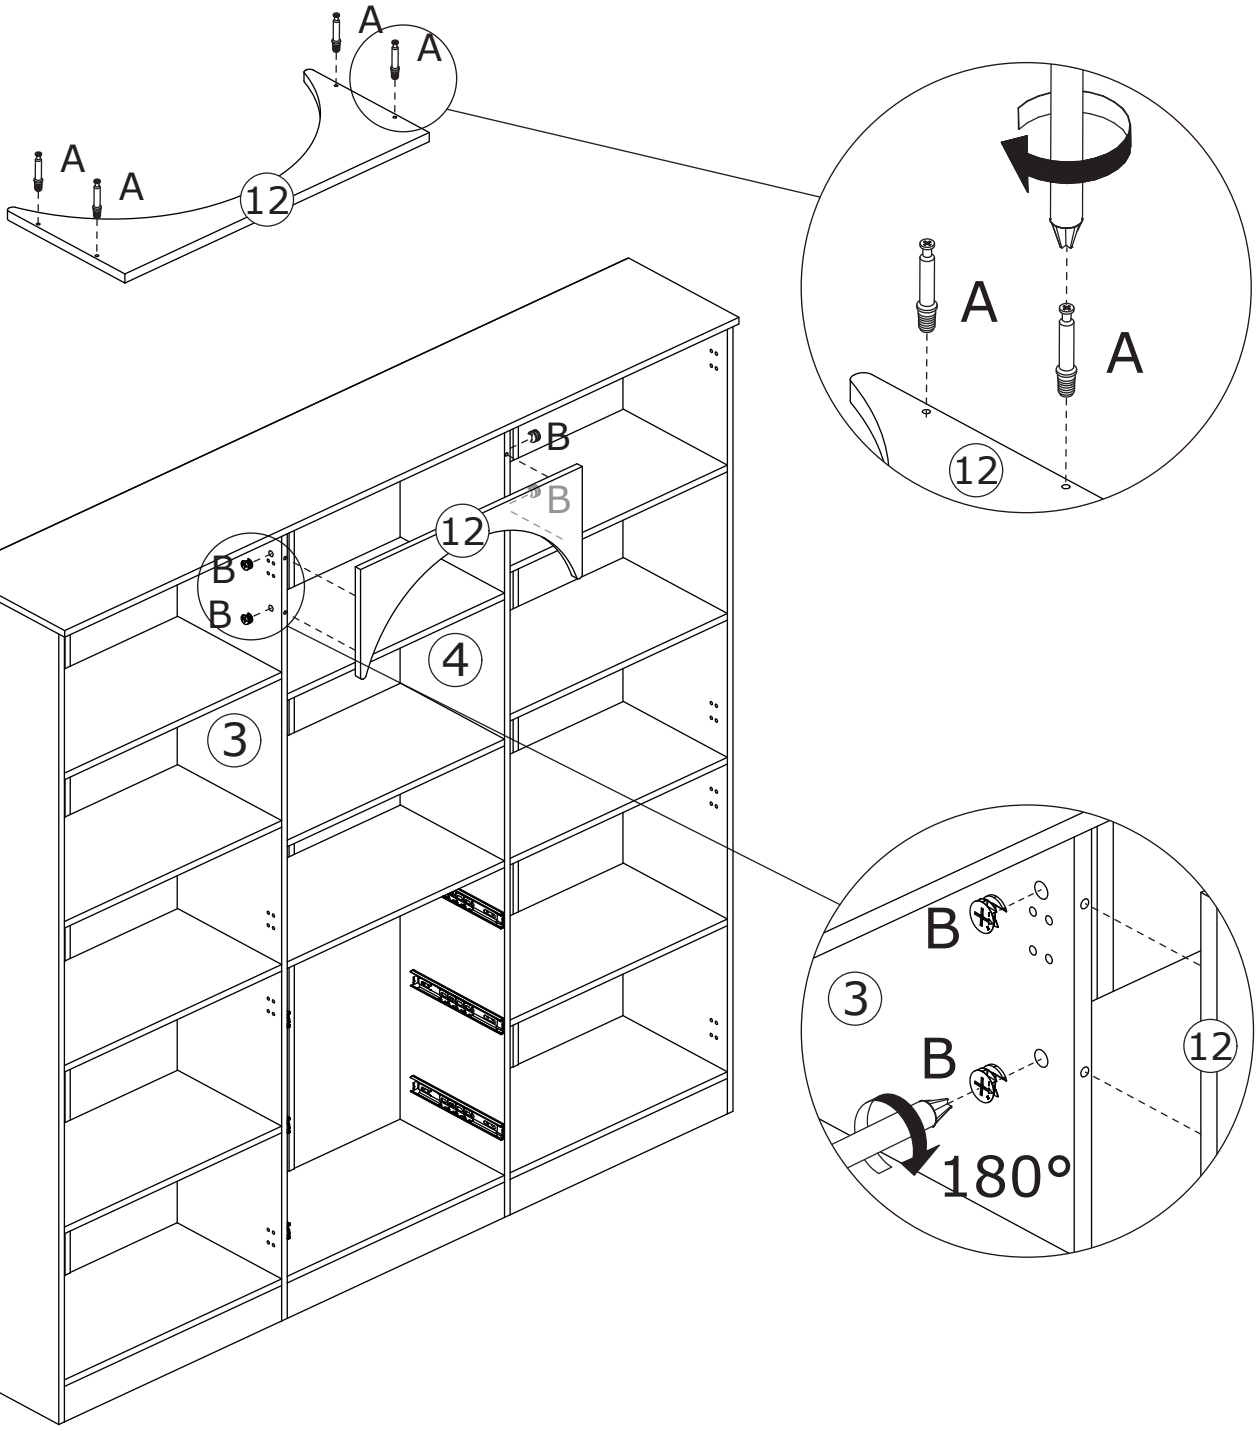


12


Pay attention to the difference between the middle parts of the two types of door hinges.

The full coverage door hinges(J) are used on outermost door panel.

The curved door hinges(K) are used on the door panel in the middle of the cabinet.

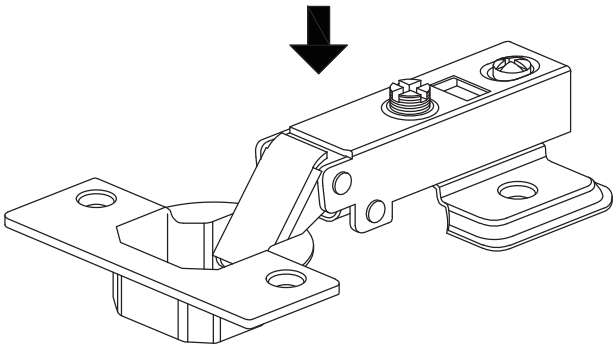

J

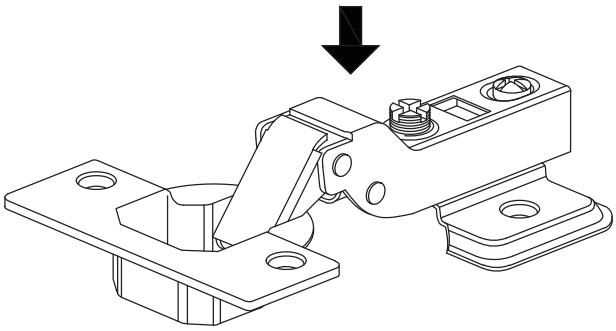

K

13


D x 8	F x 2	J x 4	L x 2	
CRD3514A	CRE0420A	DGA861A		

Fix hinge(J) to panel 17 and 13 with screw(D) as shown.
Fix knob(L) to panel 17 and 13 with screw(F) as shown.


	D	E
	CRD3514A	CRD3512A

	F	G
	CRE0420A	CRE0418A


	J	K
	DGA861A	DGA861C

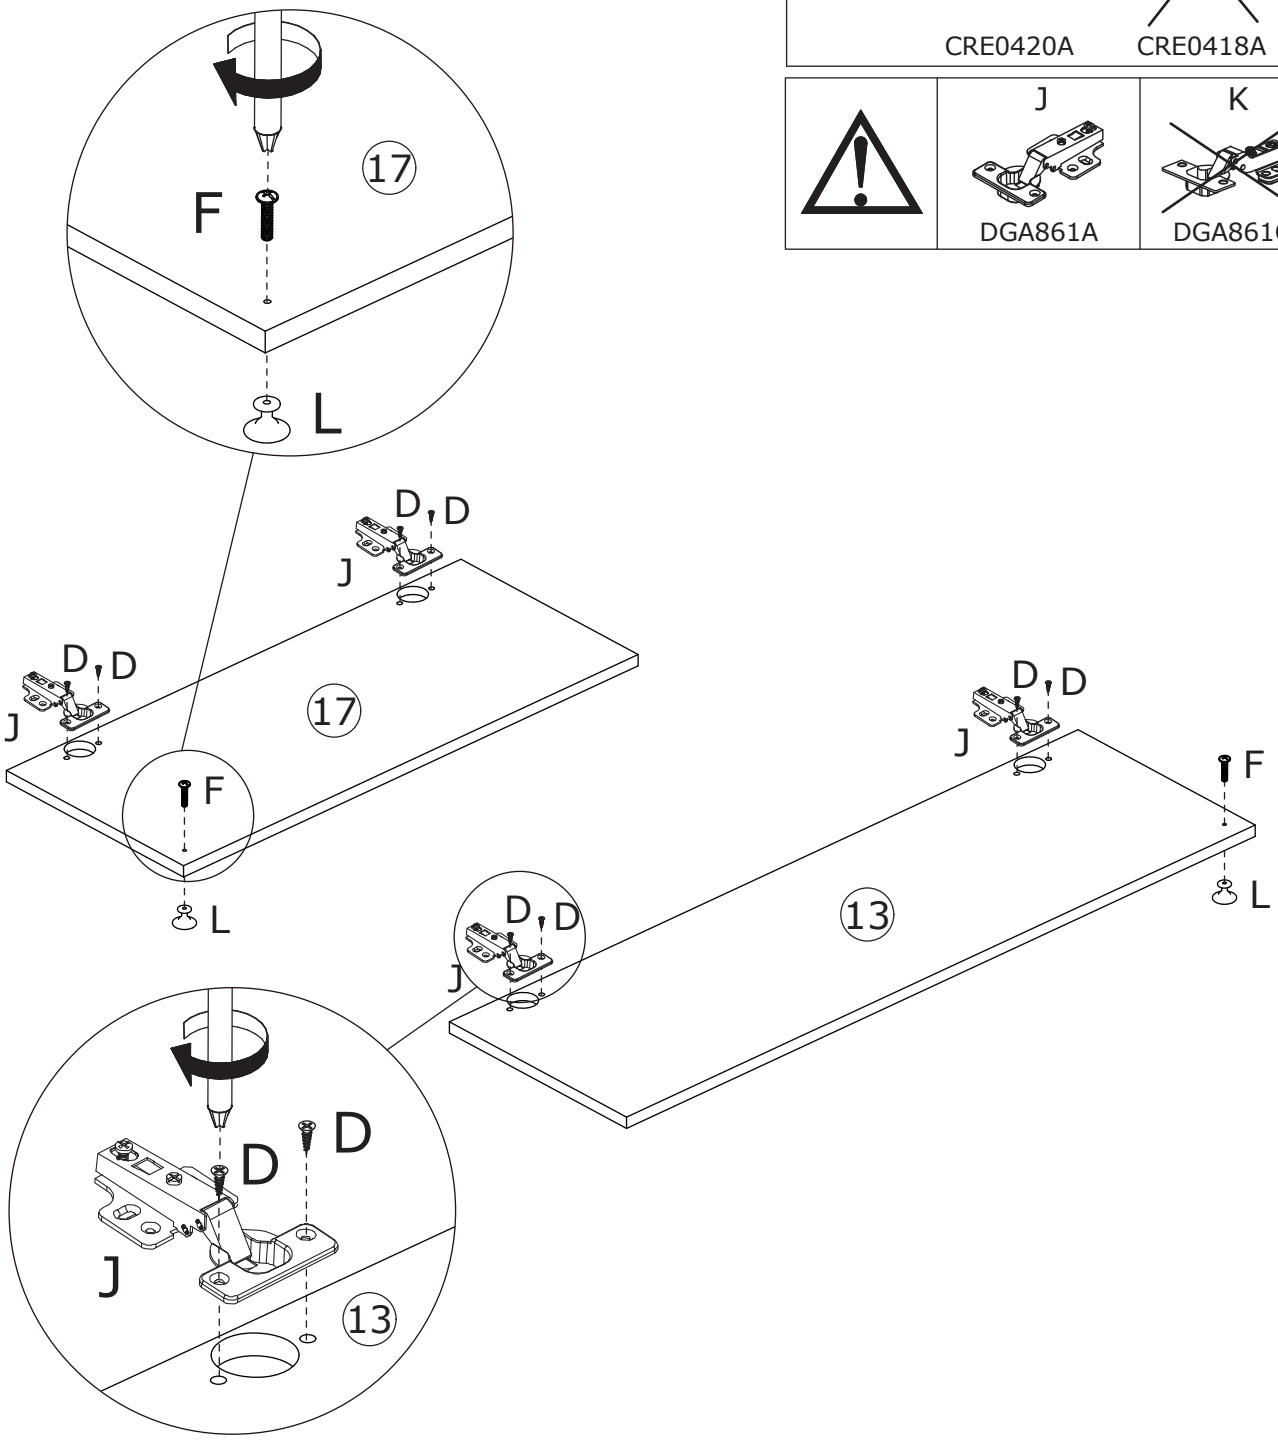



14

D x 8	F x 2	J x 4	L x 2	
				
CRD3514A	CRE0420A	DGA861A		

Fix hinge(J) to panel 18 and 16 with screw(D) as shown.
Fix knob(L) to panel 18 and 16 with screw(F) as shown.

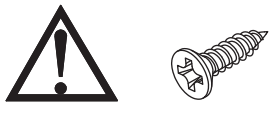D	E
	
CRD3514A	CRD3512A

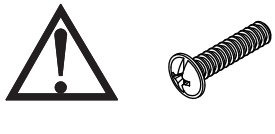F	G
	
CRE0420A	CRE0418A

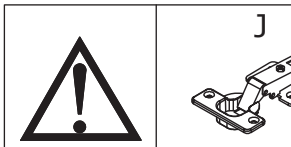
J	K
	
DGA861A	DGA861C

15

D x 32




CRD3514A






D




CRD3514A

E

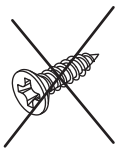



CRD3512A


Assemble door 13, 17, 16 and 18 to outermost side by fixing hinge(J) with screw(D) as shown.

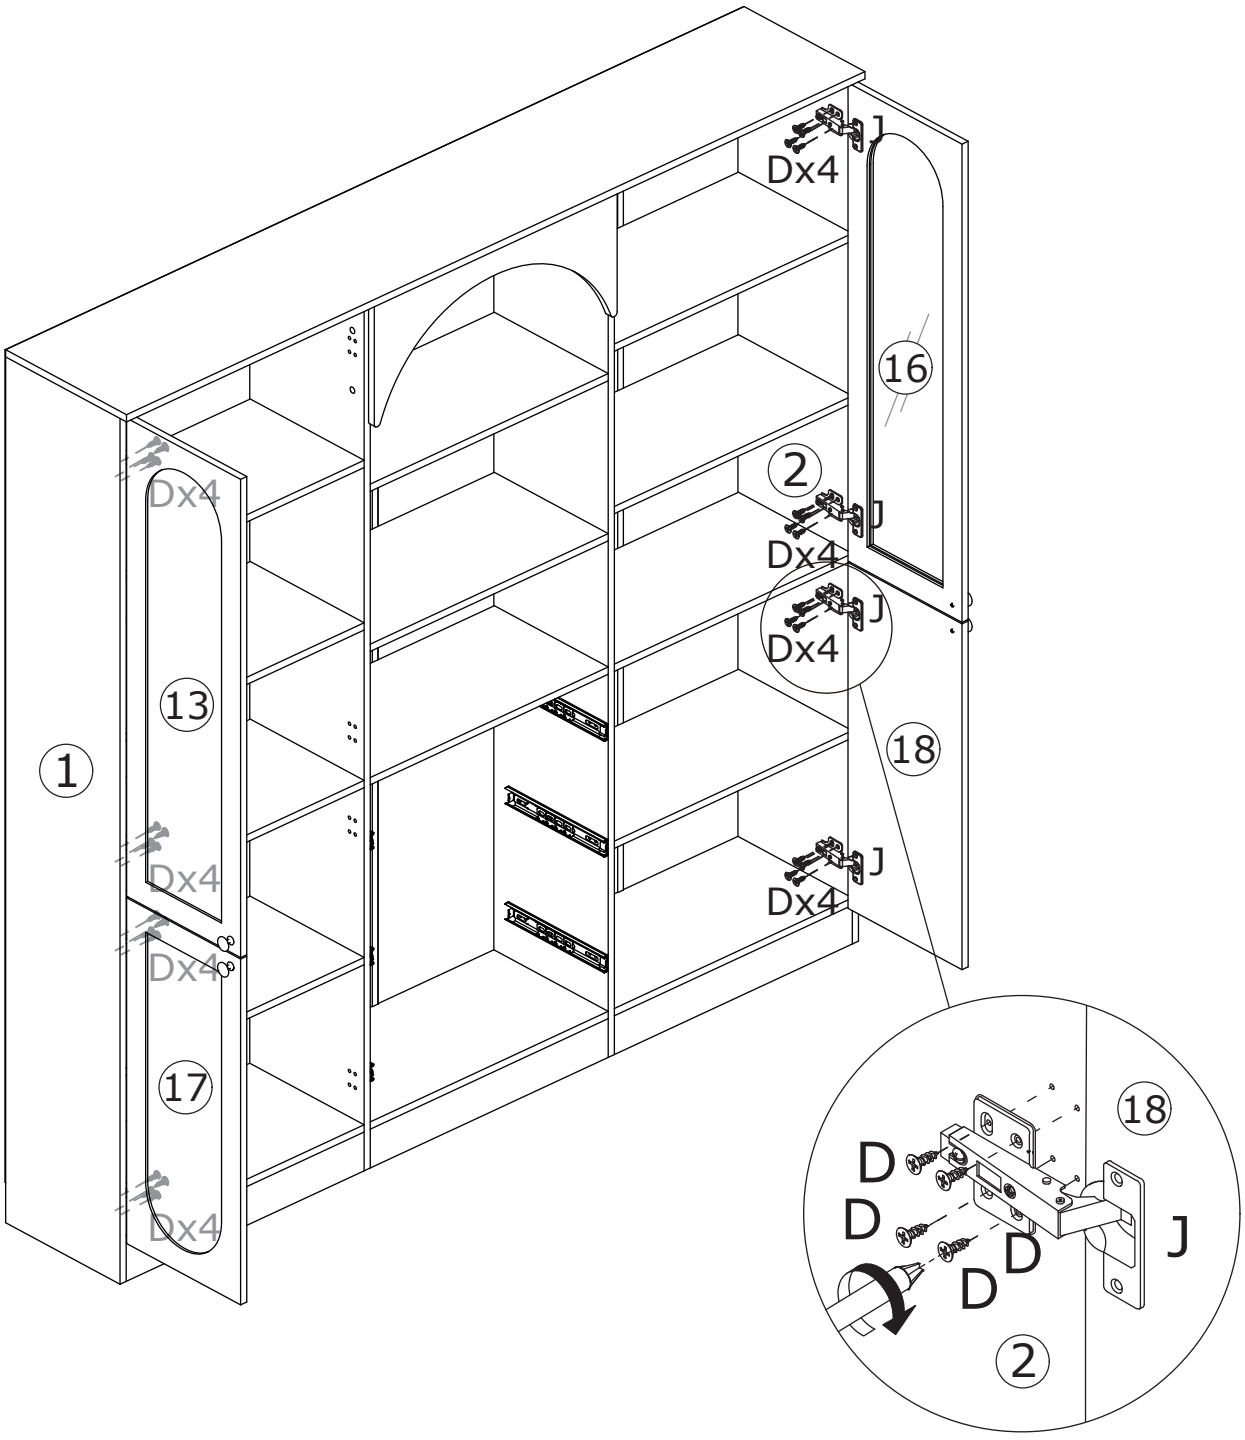


16

D x 8	F x 2	K x 4	L x 2	
				
CRD3514A	CRE0420A	DGA861C		

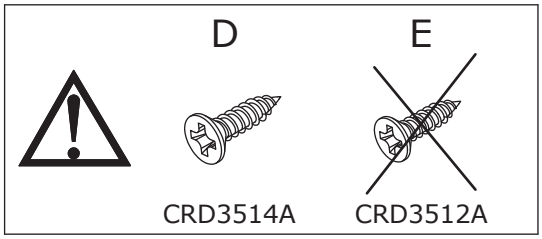

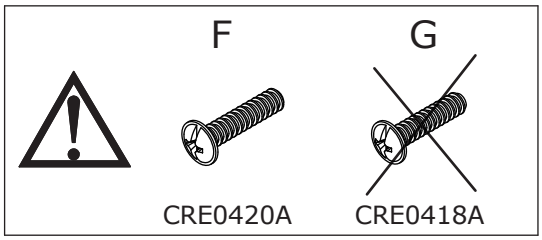

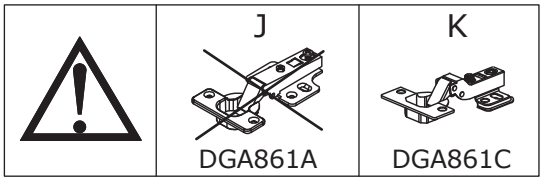

Fix hinge(K) to panel 17 and 15 with screw(D) as shown.
Fix knob(L) to panel 17 and 15 with screw(F) as shown.

17


D x 8	F x 2	K x 4	L x 2	
CRD3514A	CRE0420A	DGA861C		

D	E
CRD3514A	CRD3512A

F	G
CRE0420A	CRE0418A

J	K
DGA861A	DGA861C

Fix hinge(K) to panel 18 and 14 with screw(D) as shown.
Fix knob(L) to panel 18 and 14 with screw(F) as shown.

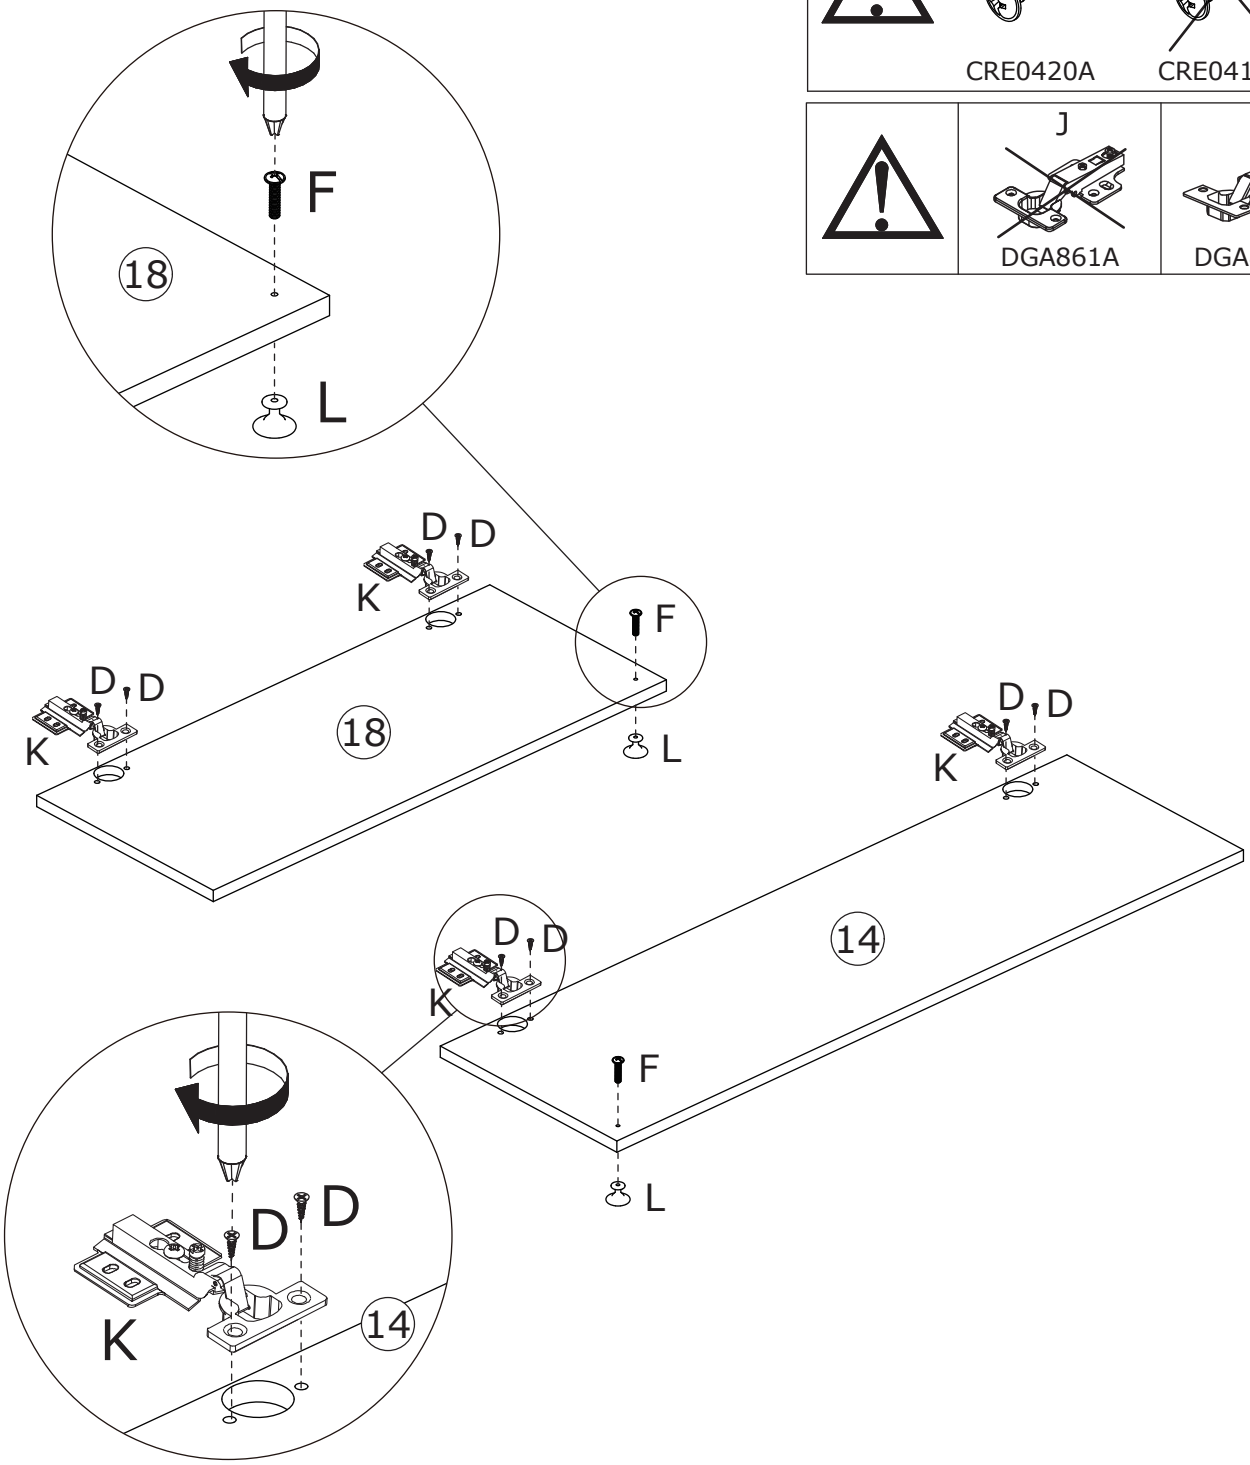


18

D x 32




CRD3514A






D




CRD3514A

E

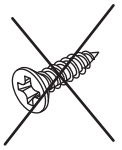



CRD3512A

Assemble door 15, 17, 14 and 18 to middle side panels by fixing hinge(K) with screw(D) as shown.

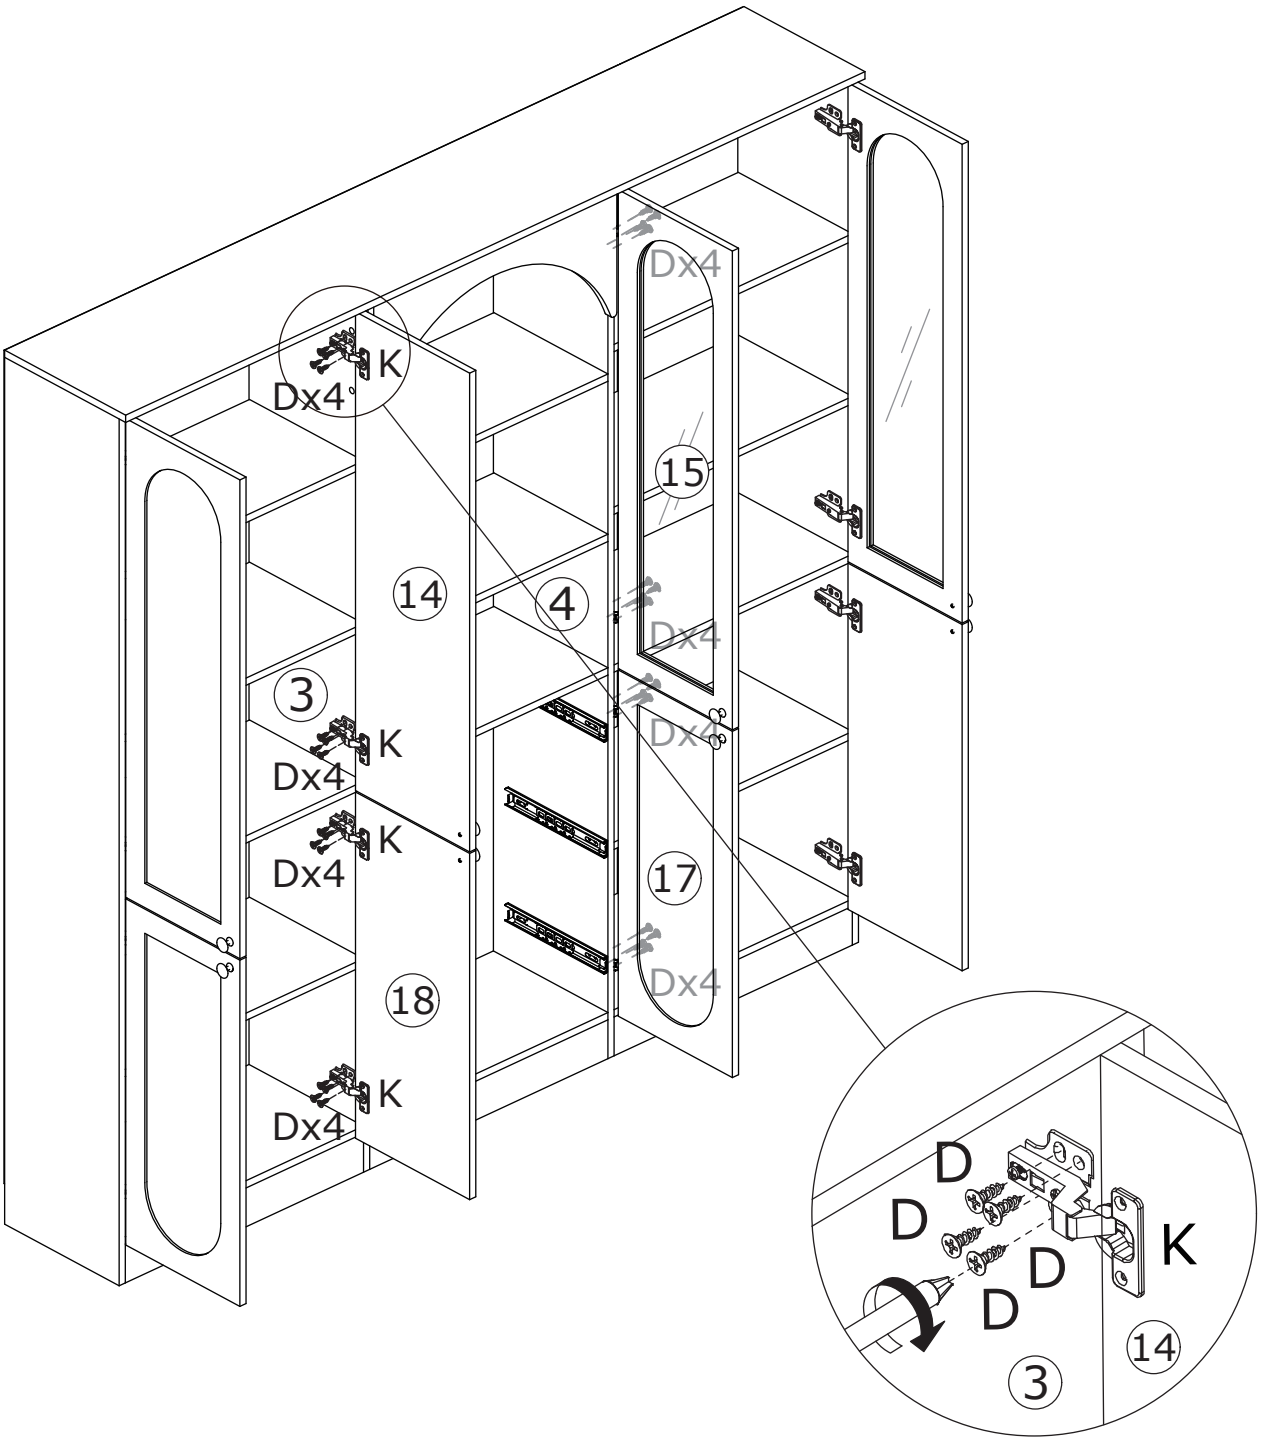


19

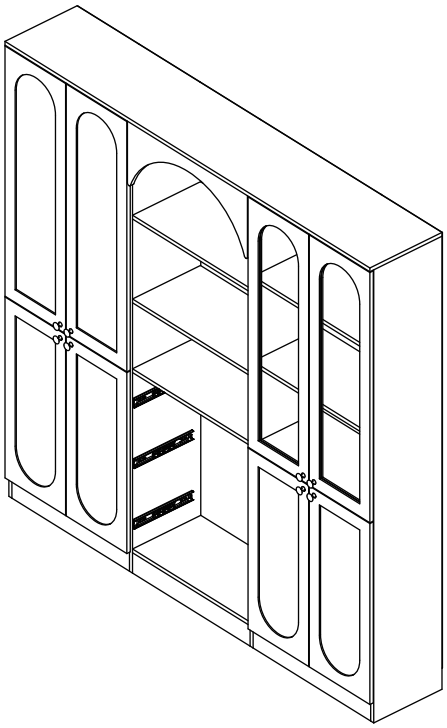


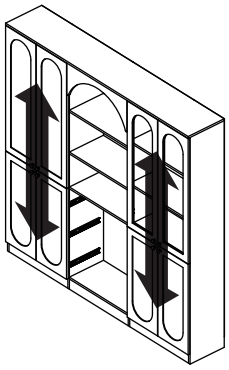


Ⅰ

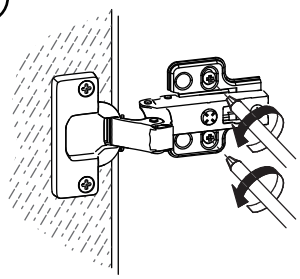


Ⅱ

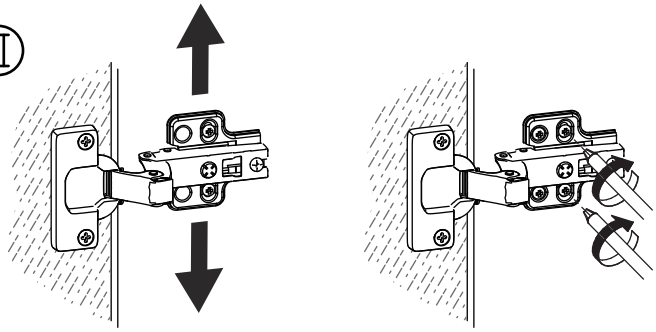


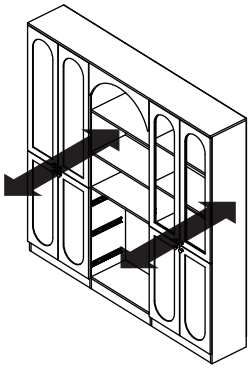



Ⅰ

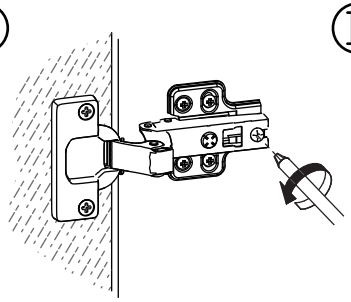


Ⅱ

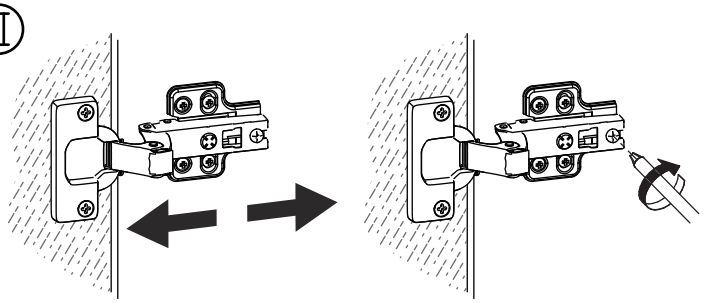

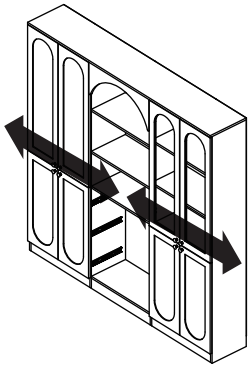


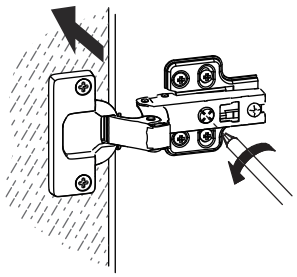

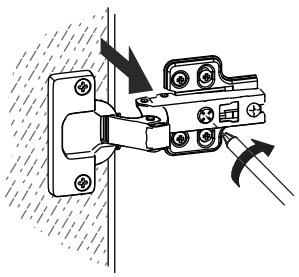



20

A x 12




CRA0635A



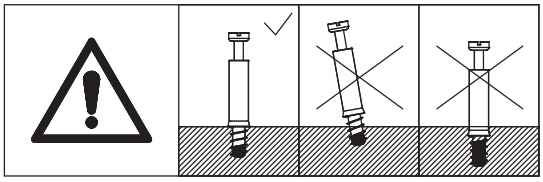

Screw eccentric rod(A)
into panel 19 at first.

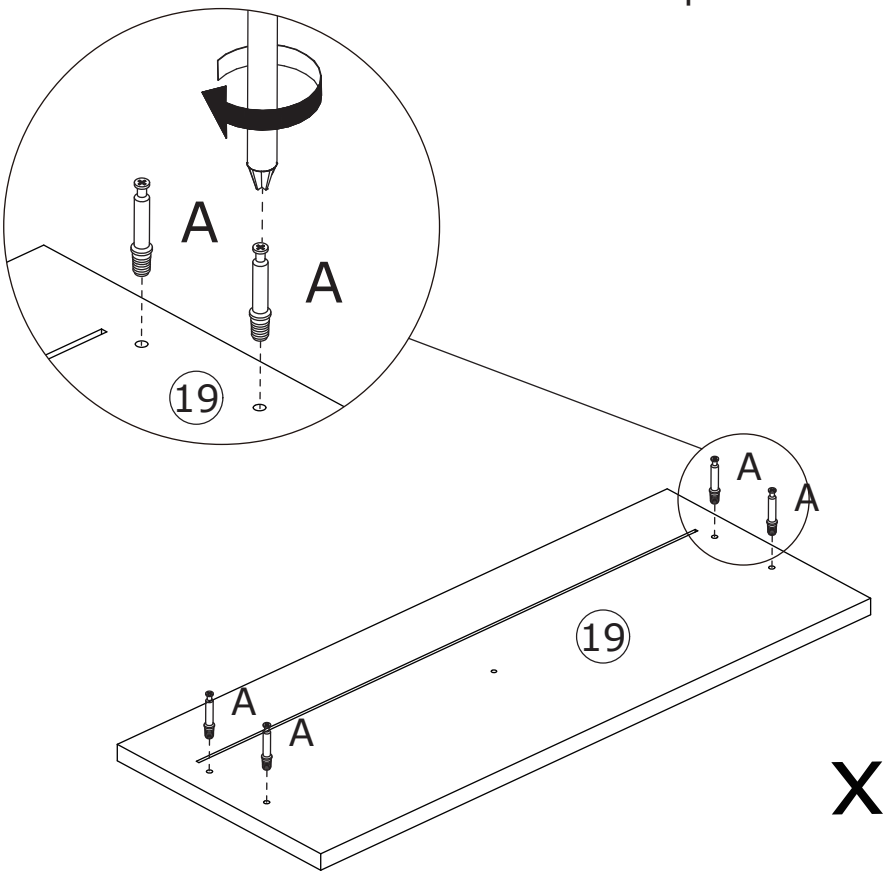


x3


21

B x 12




CRB1595A



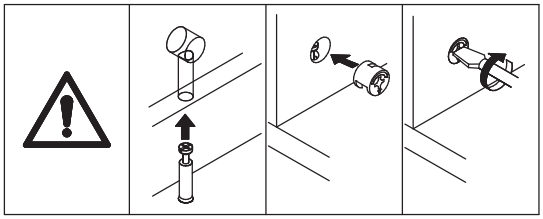


Attach panel 19 to panel 20 and 21, add cam lock(B) into and turn clockwise to tighten as shown.

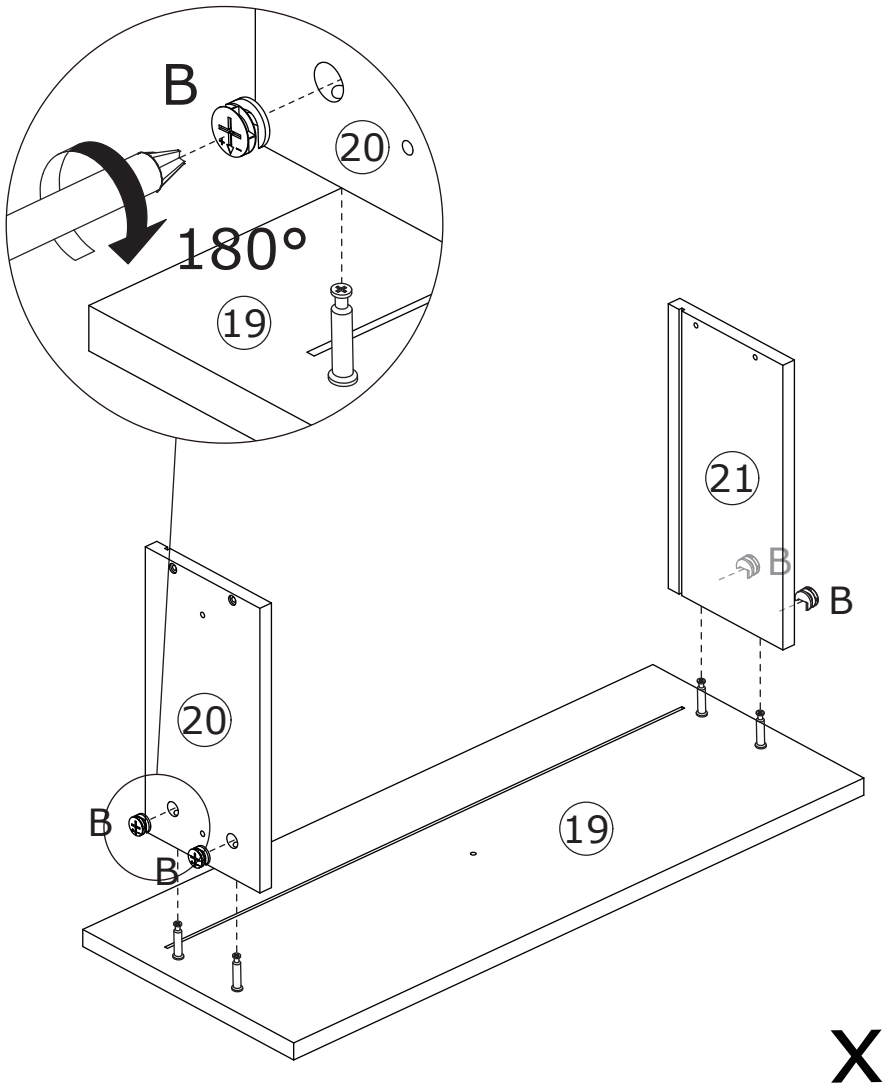

x3

22


Insert bottom panel 23 along available grooves as shown.

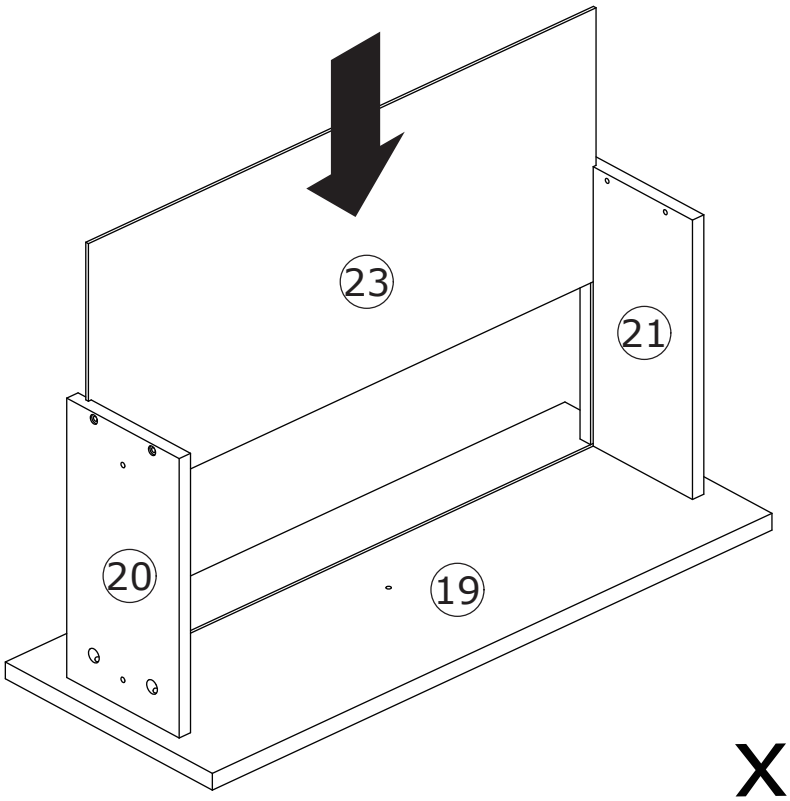


x3

23


H x 12



CRC0540A



Fix panel 22 to panel 20 and 21 with screw(H) as shown.

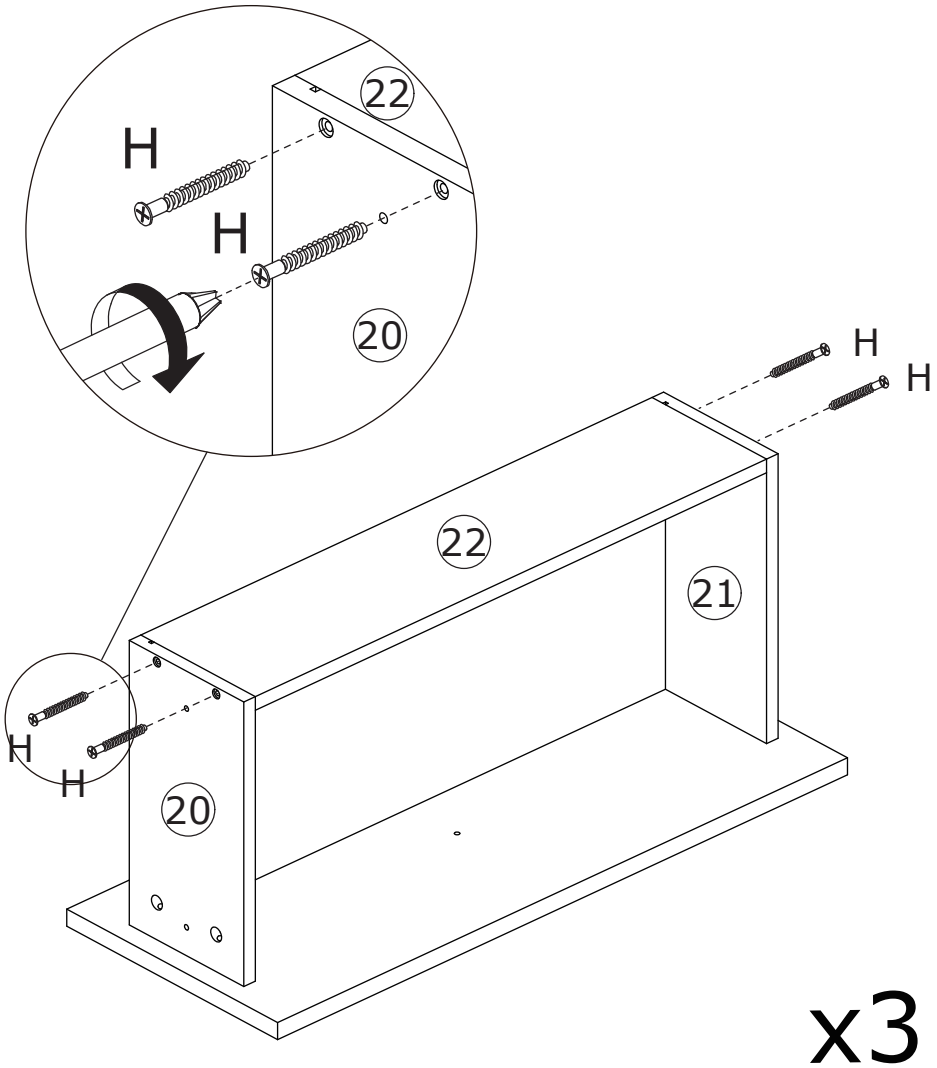

x3

24

E x 12	G x 3	L x 3	Q x 6	
CRD3512A	CRE0418A			


D CRD3514A

E CRD3512A


F CRE0420A

G CRE0418A

Fix runner(Q) to panel 20 and 21
with screw(E) as shown.
Fix knob(L) with screw(G) as shown.

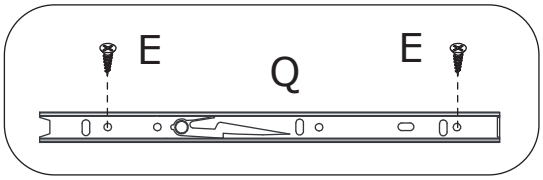


25

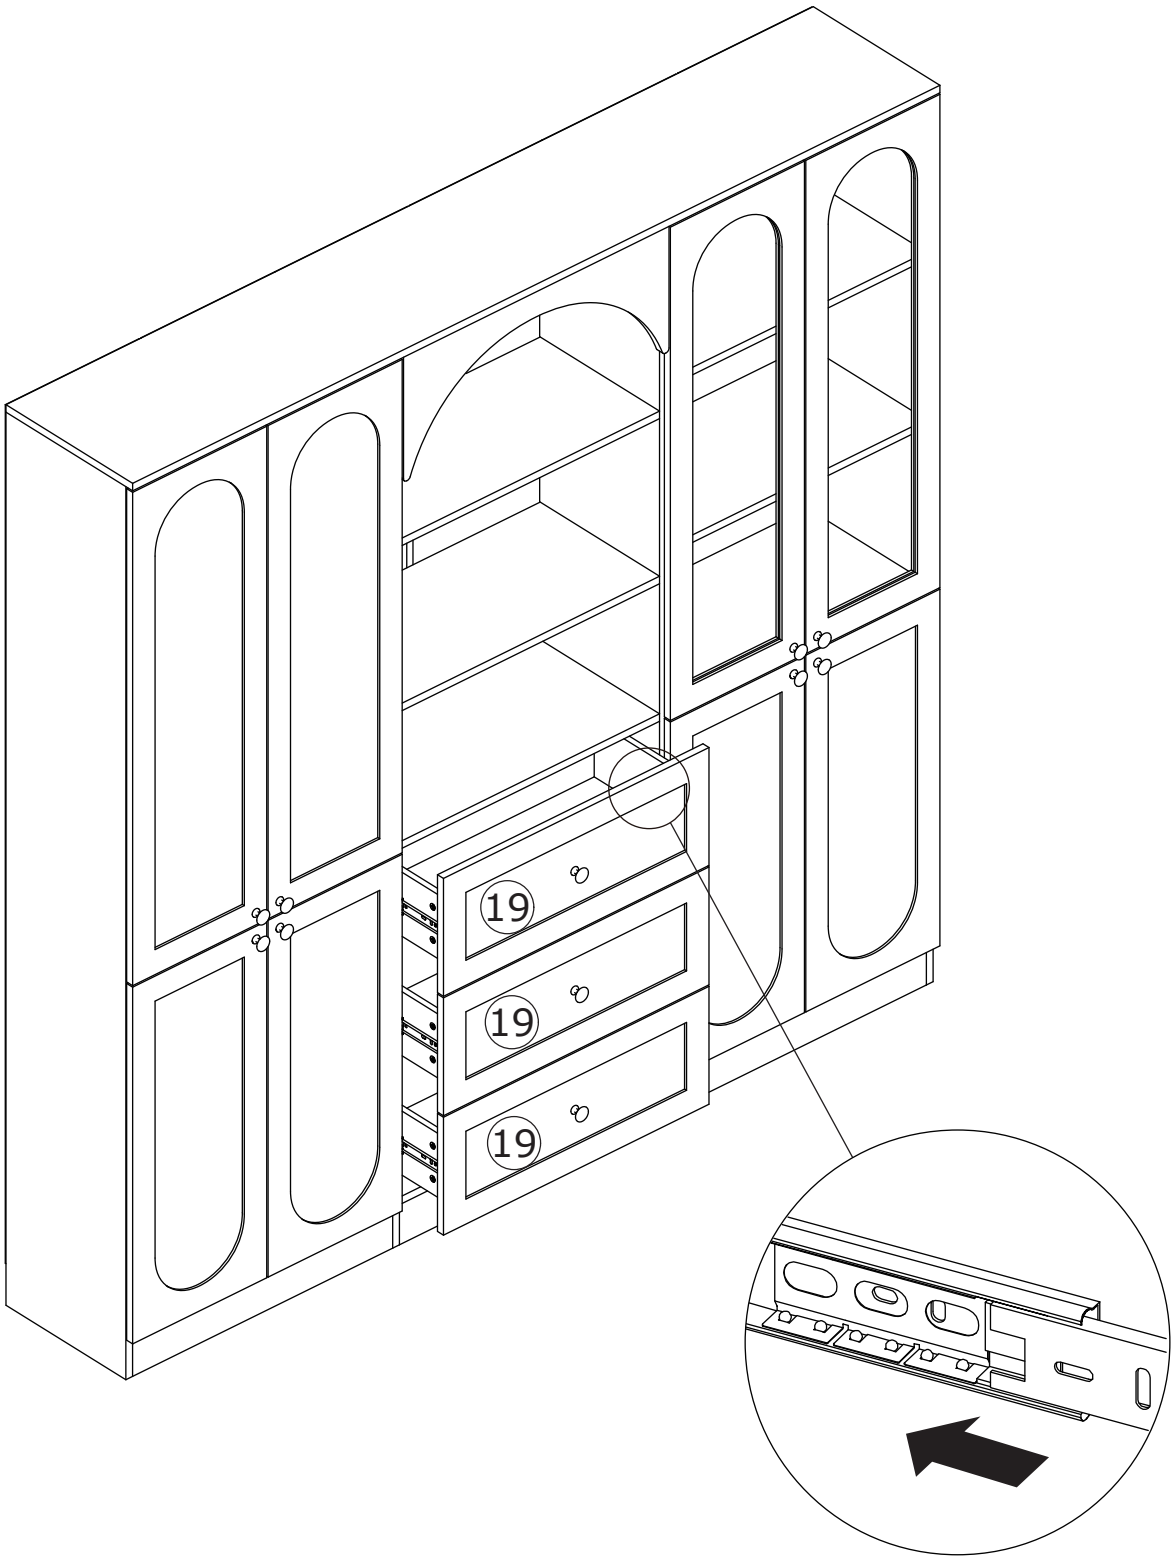



26


P x 3




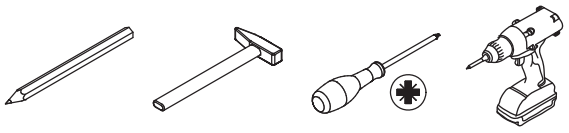


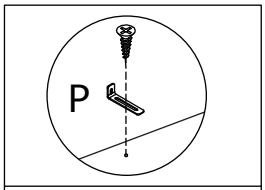

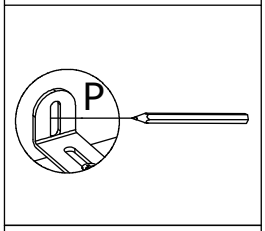


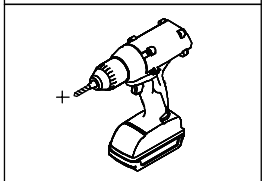


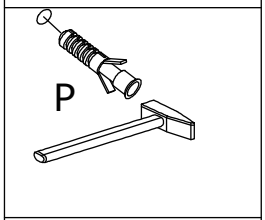

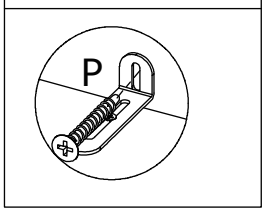

Install anti-tipping device as shown.

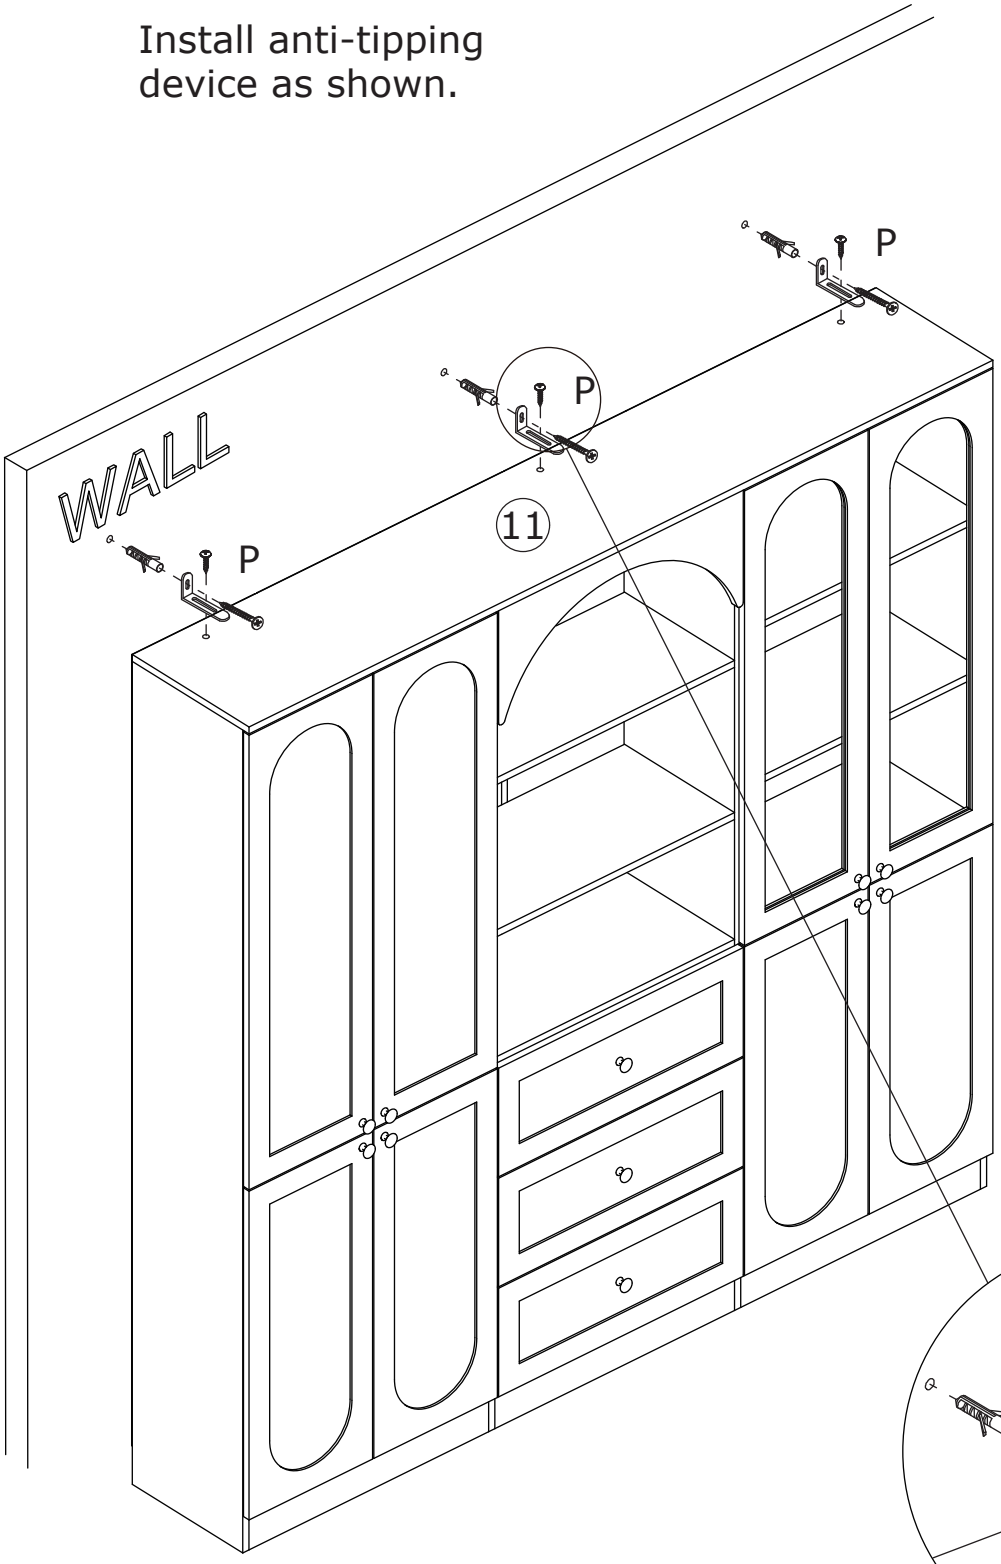

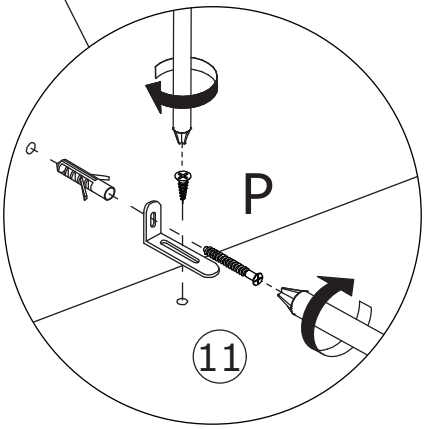

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order.
  Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.