
Any Questions? airchoice@afterservice.vip

Electric Fireplace

OWNER'S MANUAL

Model No.: FP201S-T3-A2

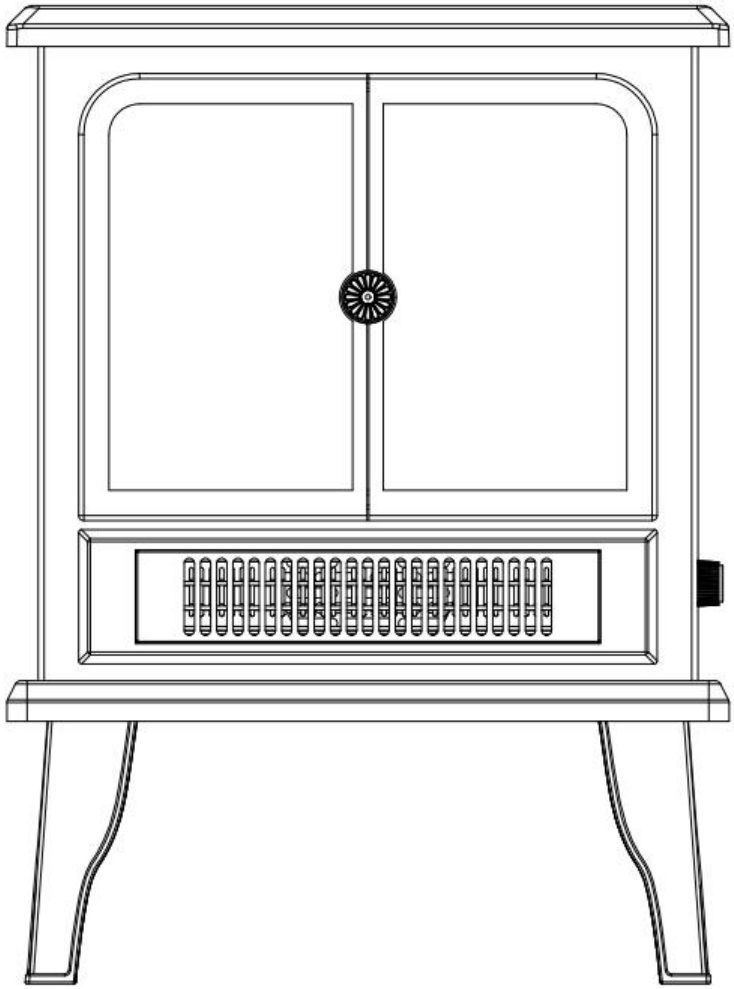

PLEASE SAVE THESE INSTRUCTIONS

WARNING: READ THIS OWNER'S MANUAL CAREFULLY BEFORE USE.

Thank you for choosing our Electric Fireplace. This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new heater.

IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hyperthermia, including the following:

1. Read ALL instructions before using this unit.
2. CAUTION: Risk of Electric Shock. DO NOT open or try to repair the heater by yourself.
3. This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater.
4. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
5. Extreme caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
6. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
7. This heater is not intended for use in bathrooms, laundry areas or similar indoor locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
8. DO NOT touch the control panel or plug with a wet hand.
9. DO NOT run cords under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
10. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
13. Always plug heaters directly into a wall outlet receptacle. Never use an extension cord or relocatable power tap (outlet/power strip).

Any Questions? airchoice@afterservice.vip

14. To avoid fire or shock hazard, plug the unit directly into a 120 V AC electrical outlet.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on the plug, DO NOT unplug by pulling on the cord.
16. Always unplug the unit before moving or cleaning, or whenever the heater is not in use.
17. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
18. Always use on a dry, level surface. Use on floor only.
19. DO NOT use outdoors.
20. WARNING: To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
21. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Qualified personnel should perform all servicing only.
22. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
23. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

SAVE THESE INSTRUCTIONS

SPECIFICATIONS

Voltage Rating	120V (60Hz)
Power Consumption	1500W
Unit Size	14in. (W) x8.1in. (D) x 18.9in. (H)
Unit Weight	7.8 lbs

SAFETY FEATURES

Overheat Safety Feature

This heater is equipped with an overheat safety feature. When the heaters internal components reach a certain temperature that could cause overheat and possible fire, the heater will automatically shut off.

IN THE BOX

*ELECTRIC STOVE *LEG(4pcs) *SCREW(12pcs) *INSTRUCTION BOOKLET

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.



Tools Required for Assembly (**not included**): Phillips screwdriver


ASSEMBLY INSTRUCTIONS

Lay stove upside down on a padded surface with the underside accessible. Attach leg to stove by inserting the tab on the top of the leg into the corresponding slot on the bottom of the stove. Insert three screws into predrilled holes and tighten securely. Repeat with remaining three legs

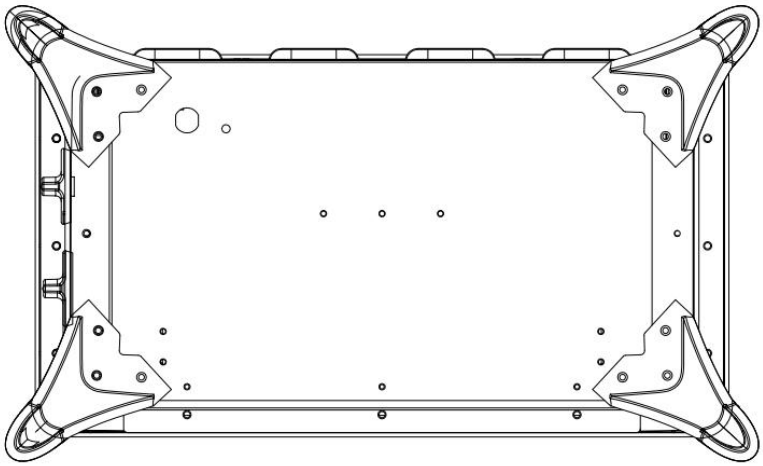


WARNING: It is normal for the power cord to feel warm to the touch; however, a loose fit between the outlet and the plug may cause overheating of the plug. If this occurs, try inserting the plug into a different outlet. Contact a qualified electrician to inspect the original outlet for damage.

PRODUCT DIAGRAM

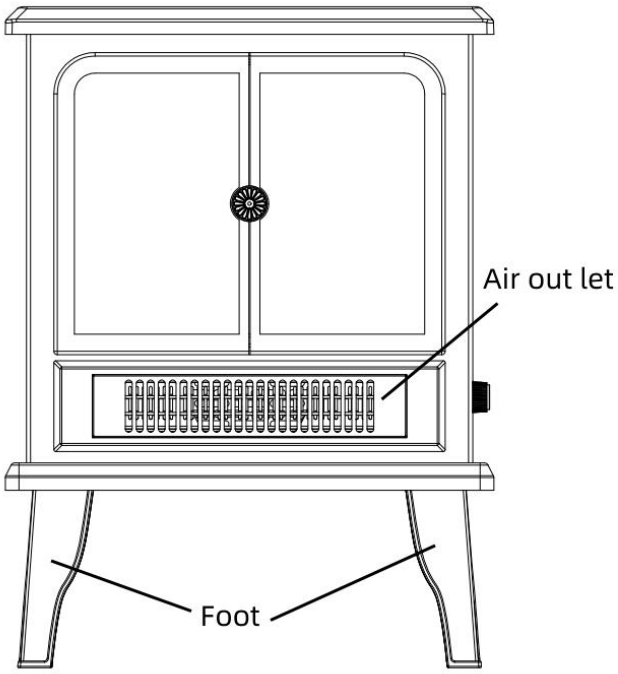

Control panel

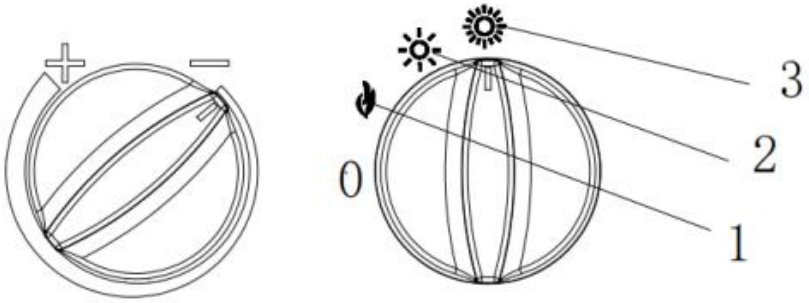

1. Power switch - Switches flame effect and power on/off
2. Heat switch – One switch for low heat setting
3. Heat Switch - Two switches for high heat setting

OPERATING YOUR HEATER


Once the stove has been properly assembled and connected to an electrical outlet, it is ready to operate:

Open the iron gate


1.Flame Function

	Press power switch (#1) to the “on” position for flame function. Note: This function can be used without heat

2. Low Heat Setting

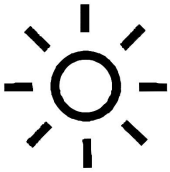	For low heat function – Press(#2) switch while the (# 1) switchis in the “on” position for low heat. The low heat is 750W

3. High Heat Setting

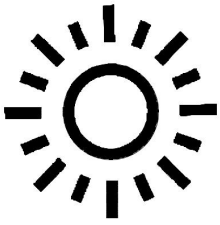	For high heat function -Press(#3) switch while both (#2) and (#1) are in the “on” position for high heat. The high heat is 1500W

PREPARATION

Place the heater on a firm, level surface and plug into a 120V 60Hz power outlet. Only operate heater in upright position with caster wheels attached.

MAINTENANCE

1. Glass Information

* Under no circumstances should this product be operated with missing or broken glass.
* Do not strike or slam the glass.
* Do not use abrasive cleaners to clean the glass.
* Replacement glass is available from the manufacturer and replacement should be carried out by a qualified service person.

2. **Cleaning**

*To clean the unit, first turn off controls on unit and unplug unit from power source.

*To clean the glass door: remove dust with clean dry cloth or to remove finger prints and other marks clean glass with clean damp cloth. Do not use abrasive cleaners or spray liquids on glass door surfaces.

*Metal and metal painted parts should be cleaned with clean damp cloth only. Do not use abrasive cleaners or spray liquids on this surface.

TROUBLE SHOOTING

If the heater does not operate, please check the following before seeking repair of service:

1. Check if the power cord is plugged into an electrical outlet, if not, plug in.

2. Check if electricity to the outlet is working.

STORAGE

Store the heater in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

WARRANTY:

AIR CHOICE warrants this product against defects in materials and/or workmanship under normal use for a period of ONE YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, AIR CHOICE will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by AIR CHOICE, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes AIR CHOICE's property. When a store credit is given, the original product must be returned to AIR CHOICE and becomes AIR CHOICE's property. To obtain warranty service, e-mail AIR CHOICE Limited Warranty Service at **airchoice@afterservice.vip**. Please be prepared to describe the product that needs service and the nature of the problem.

This warranty does not apply to:
a) damage caused by failure to follow instructions relating to product' use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake, or other external causes; c) damage caused by service performed by anyone who is not a representative of AIR CHOICE; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

CONTACT US:

Thank you for choosing **AIR CHOICE** product.

For any questions about your product or honor your warranty, please try the following methods to get in touch with us:

1. Scan the QR code below;
2. Write us at [**airchoice@afterservice.vip**];
3. Call us at **+1 (855) 620 5858.**

Our customer service time will respond ASAP within 24 hours!

Get 24/7 Assistance at

airchoice

Use camera or QR scanner to scan

Visit: https://airchoice.afterservice.vip
Email: airchoice@afterservice.vip
Call: +1 (855) 620 5858

Questions or Problems?

Tell us

We are here to help with our lifetime professional 100% satisfied service within 12 hrs.

airchoice@afterservice.vip