
INSTALLATION
Product Manual

Version: 460085US-01-25A-AA

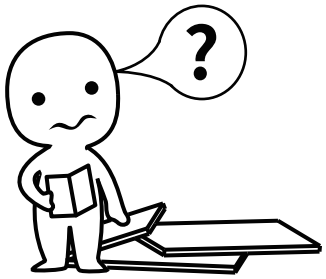


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.




AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

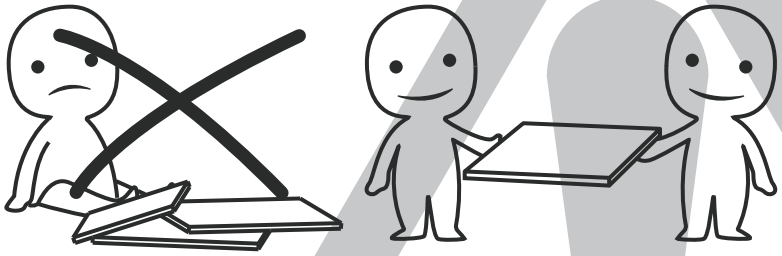

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

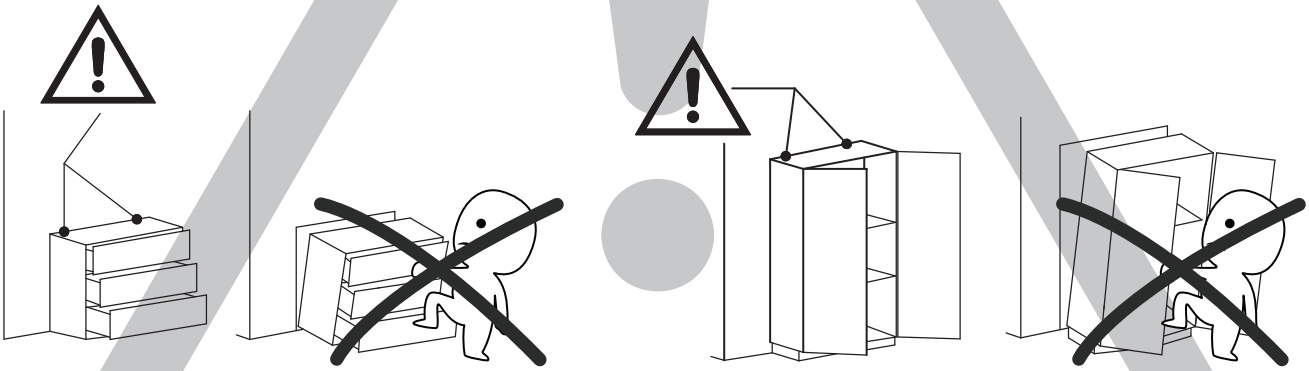

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !







It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


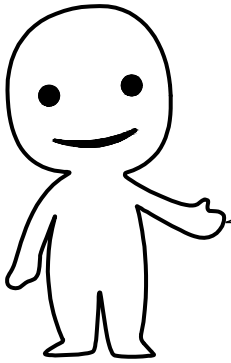




Please prepare the following tools

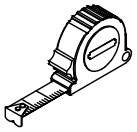
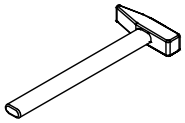

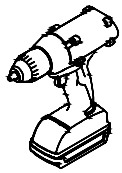
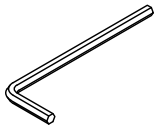












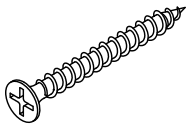

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

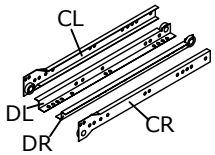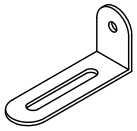
A x 31	B x 31	C x 16	D x 12	E x 26
 CRB1595A	 CRA0635A	 CRF0630A	 CRD0314A	 CRD3512A

F x 36	G x 2	H x 23	J x 8	K x 8
 CRD3514A	 CRD3535A	 CRC0540A	 CRE0314A	

L x 3	M x 6	P x 12	Q x 5	R x 2
 WX1012A	 DGA861A			

S x 2	U x 5	V x 1
	 CRG0625A	 M4

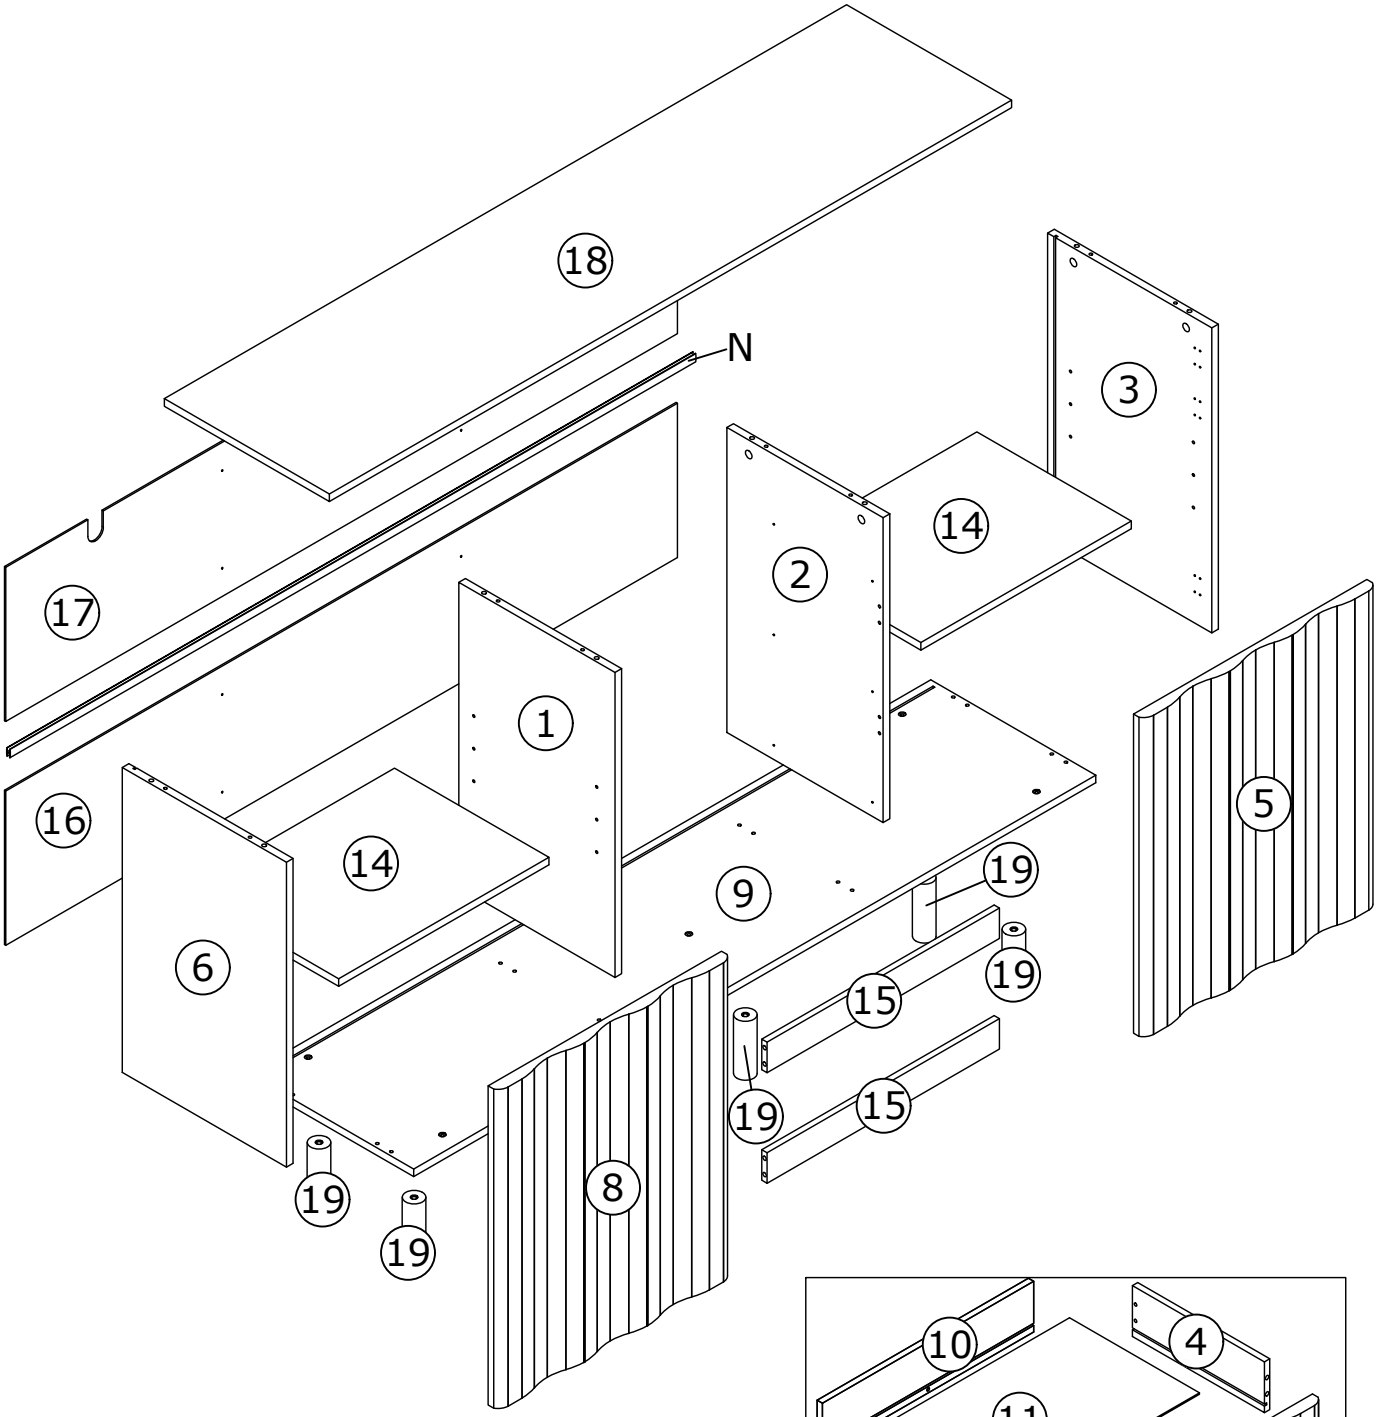

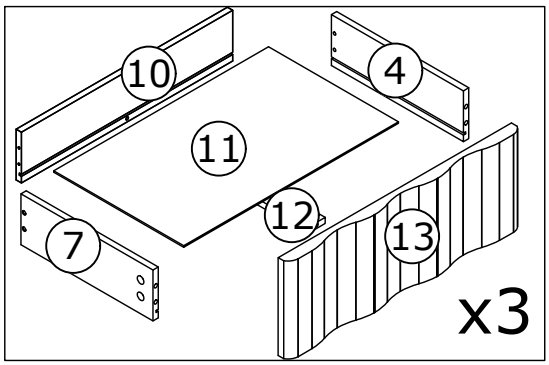


⚠WARNING




Children have died from furniture tipover To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


This is a permanent label.
Do not remove!

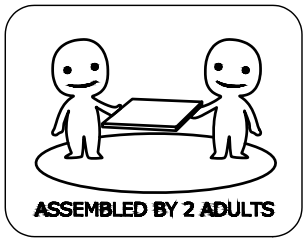


1

B x 8	E x 12	L x 3	
			
CRA0635A	CRD3512A	WX1012A	

As shown in the figure, screw the self-tapping rod (B) into Panel 1 and Panel 2. Use the screw (E) to fix the sliding rails L (L-CL) and L (L-CR) to Panel 1 and Panel 2.

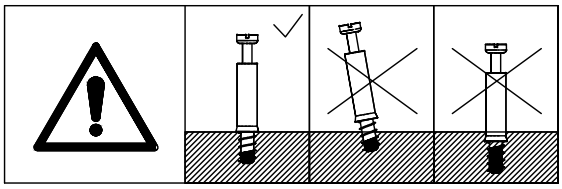

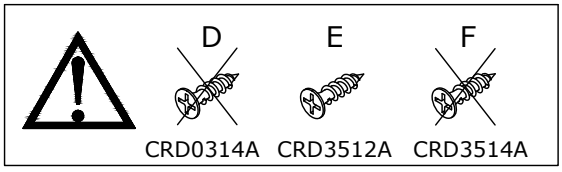






2


A x 8




CRB1595A




As shown in the figure, connect Panel 1 and Panel 2 to Panel 15, and then insert the eccentric wheel (A) and tighten it by rotating it clockwise.

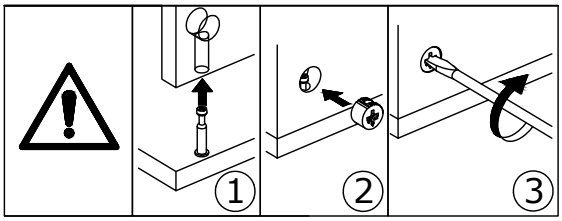


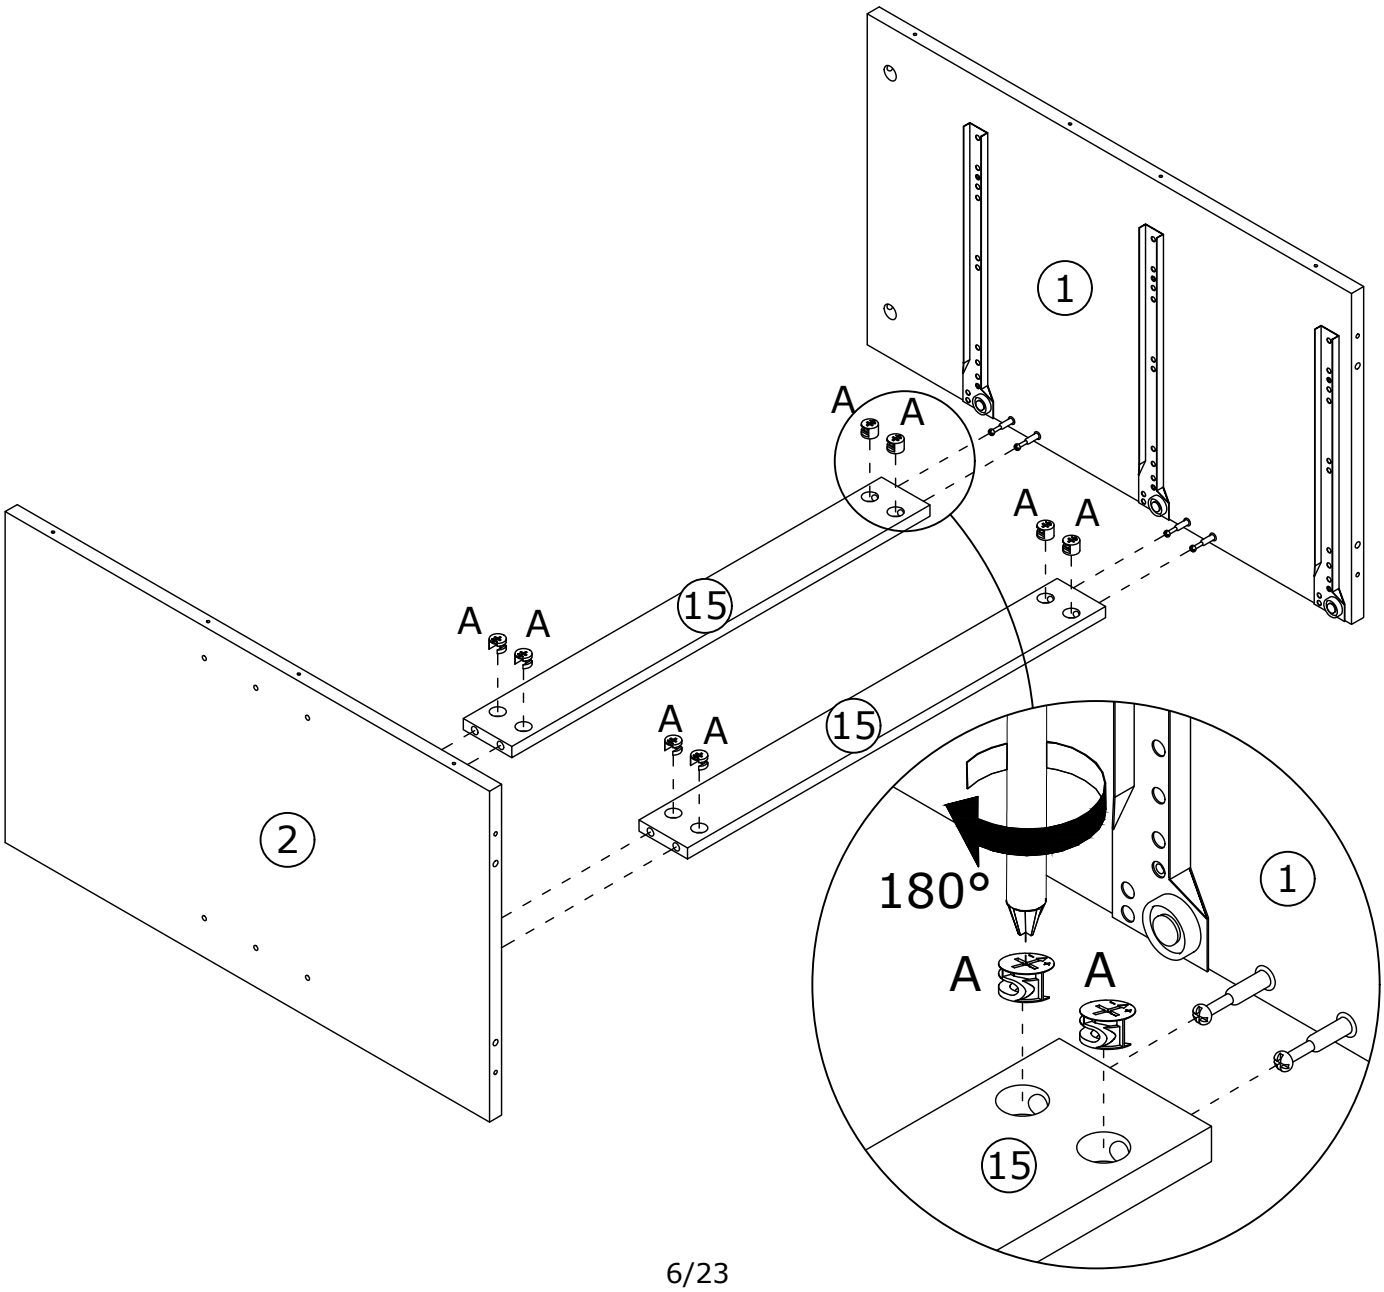


3


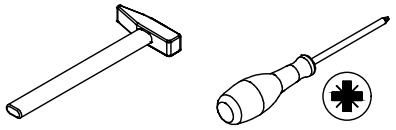
C x 8	H x 8	Q x 5	
			
CRF0630A	CRC0540A		

As shown in the figure, use the wooden dowels (C) to connect Panel 1, 2, 3 and 6 to Panel 9, and then fix them with the screws (H).

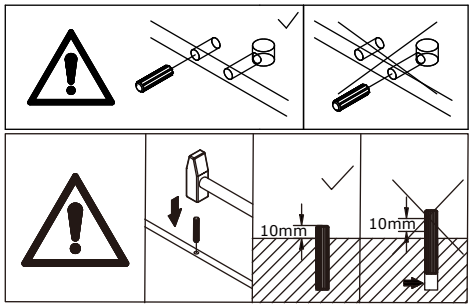


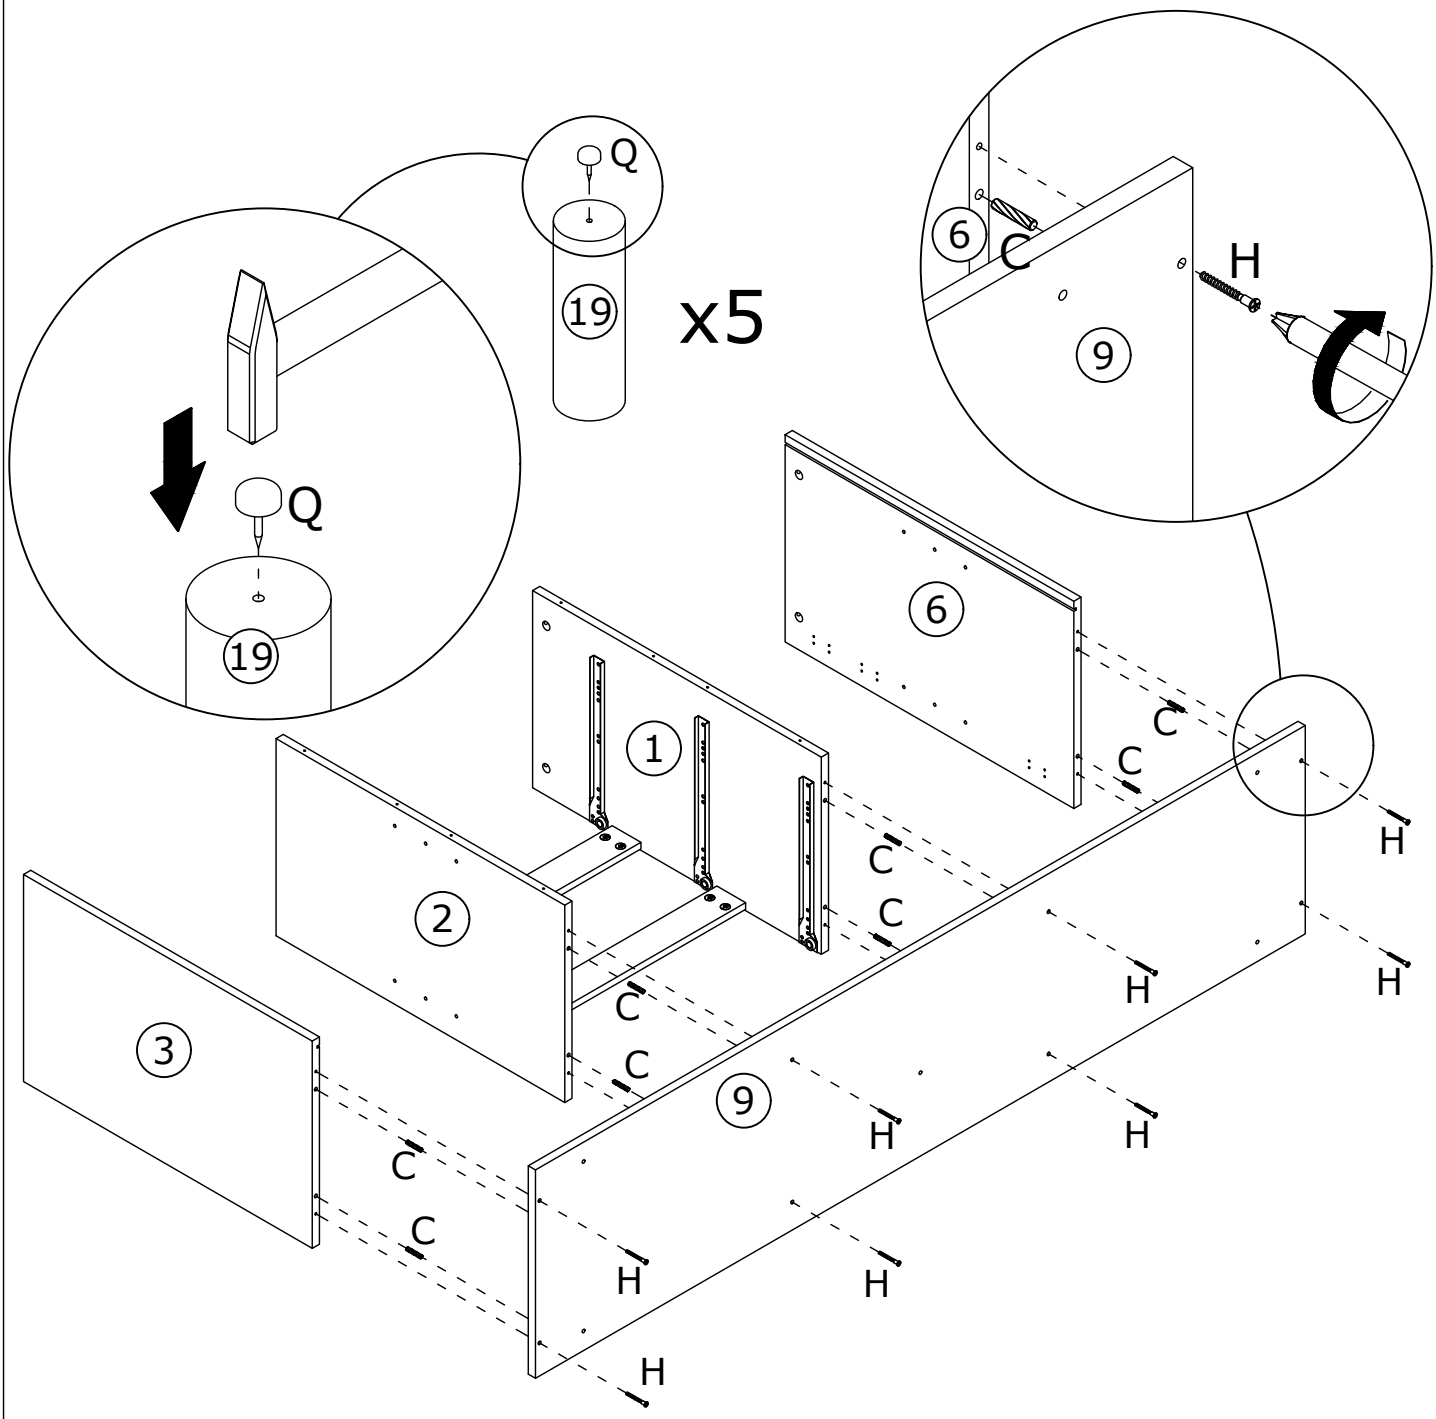

4


U x 5	V x 1	
		
CRG0625A	M4	

As shown in the figure, use the screw (U) to fix the component (19) to Panel 9.


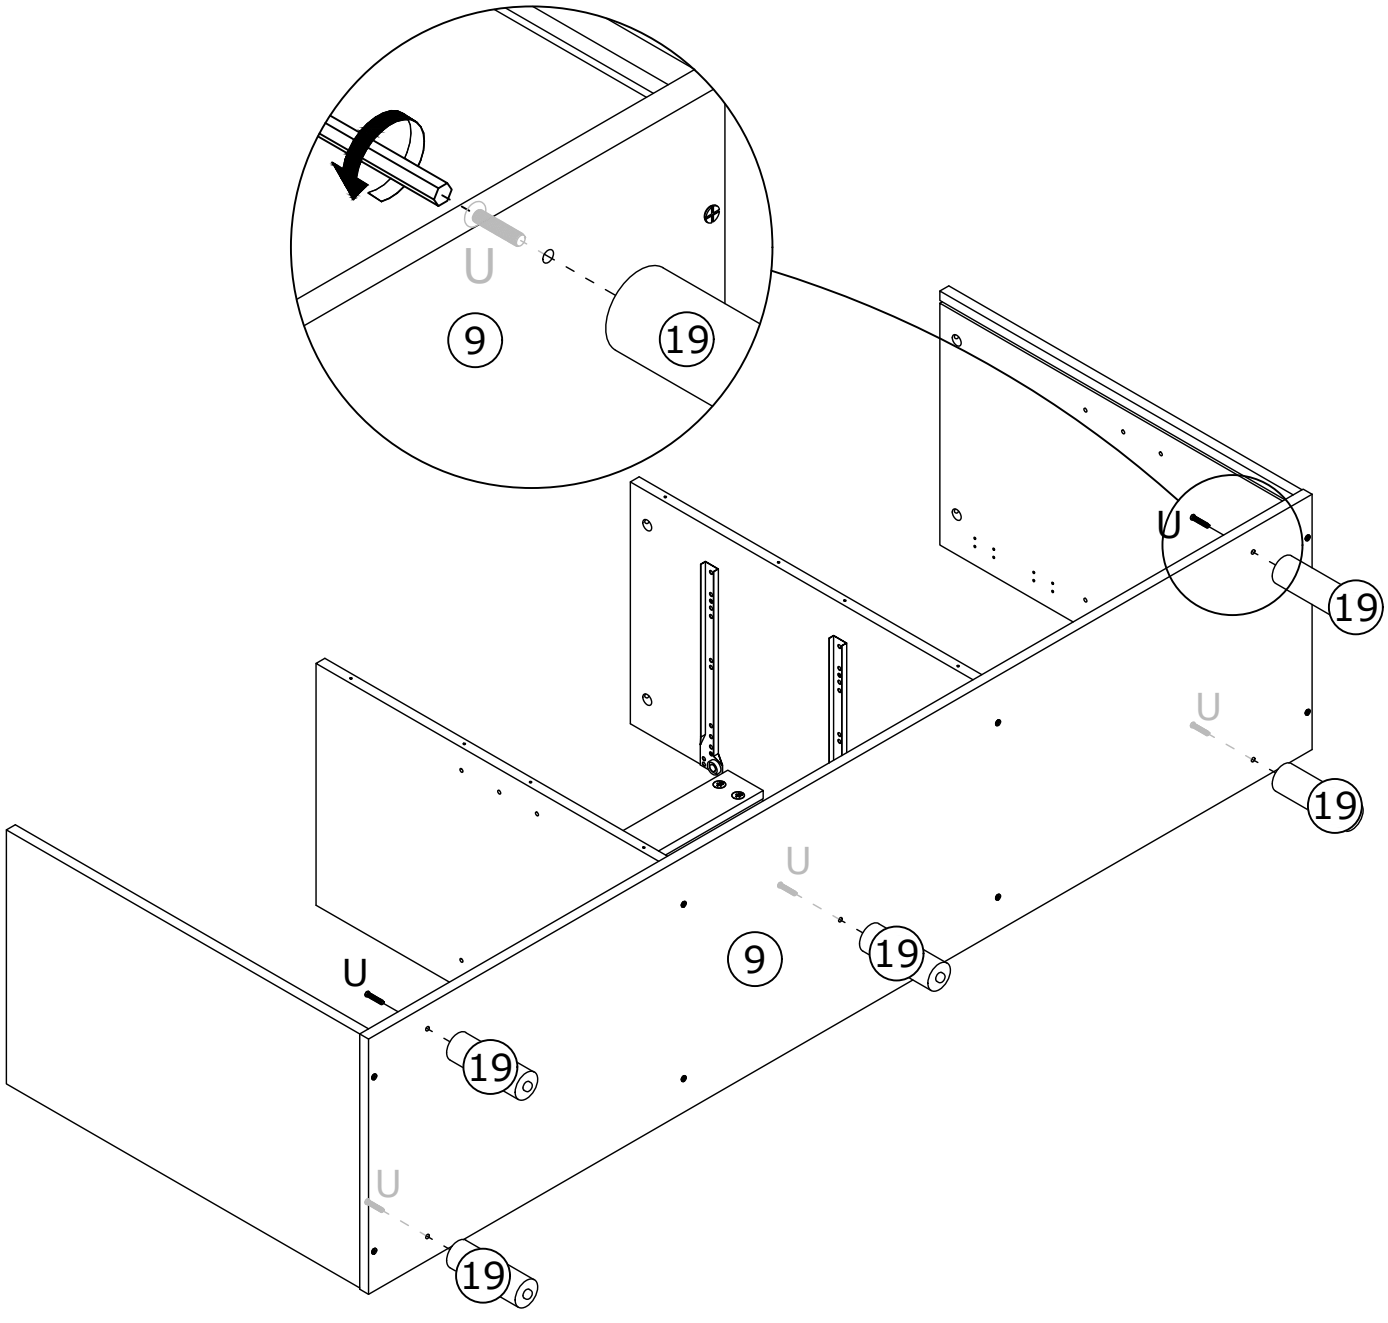



5


As shown in the figure, connect Panel 16, 17 and the component (N), and then insert them along the available slot.

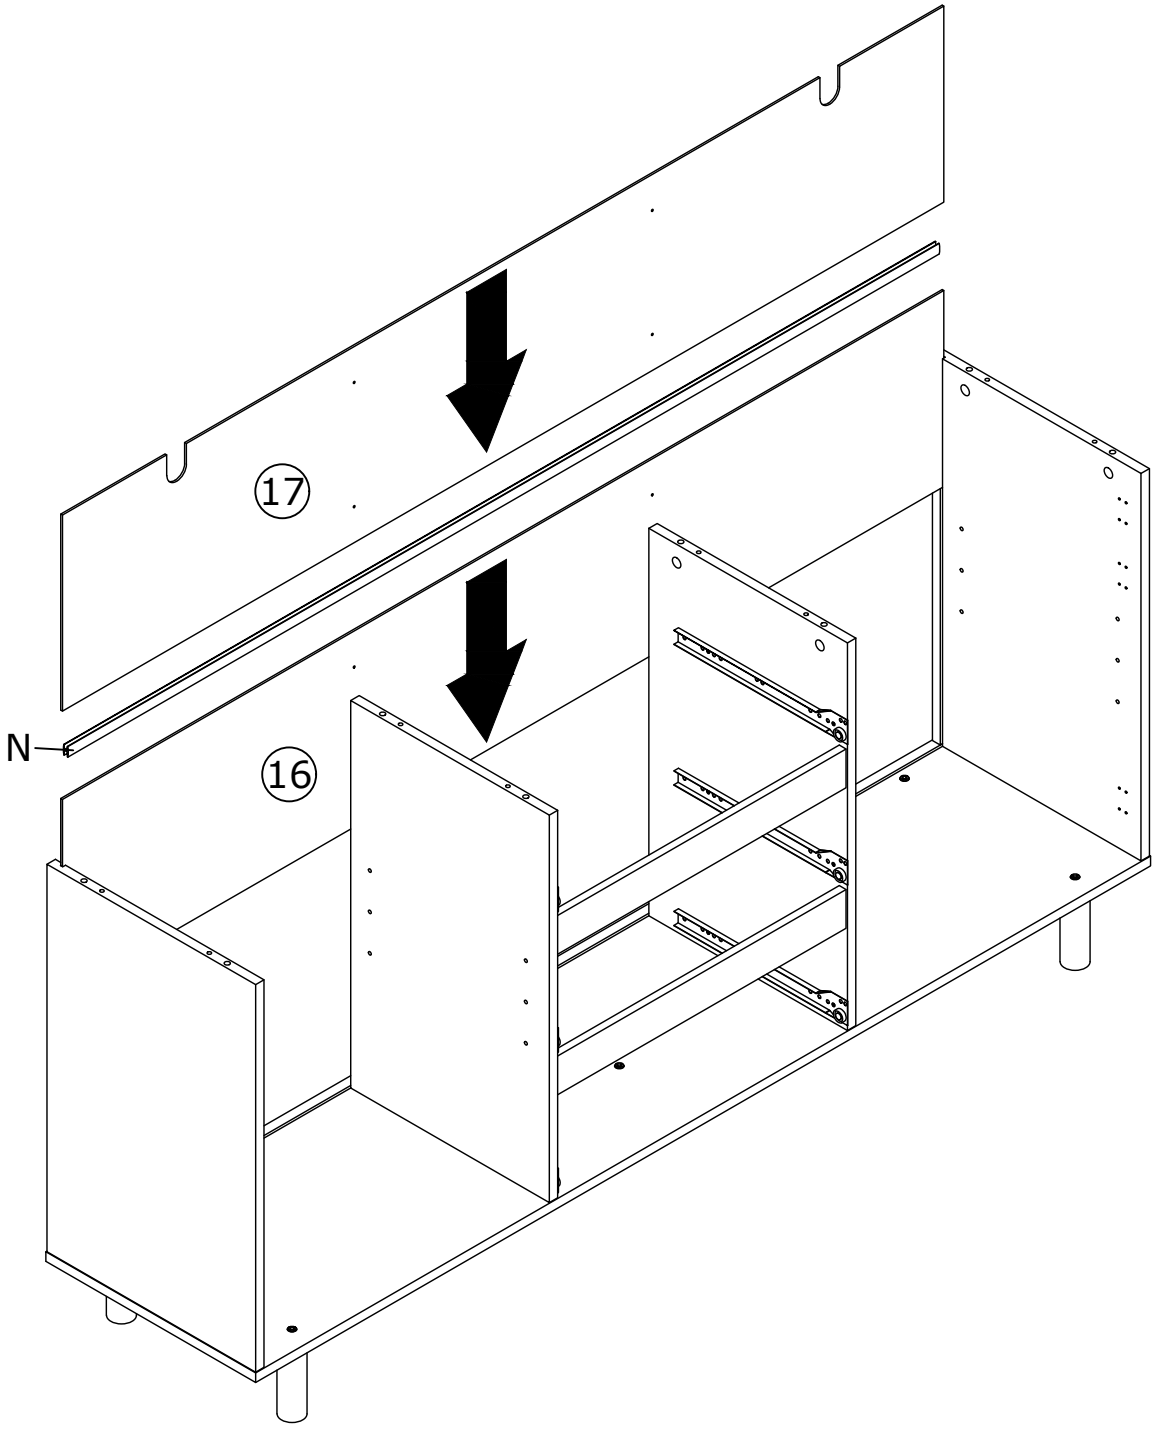


6

B x 8	E x 2	R x 2	
 CRA0635A	 CRD3512A		

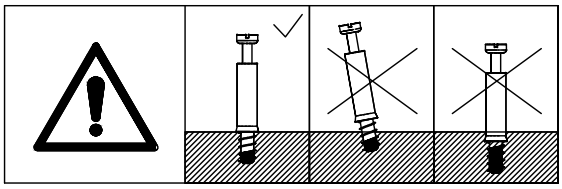


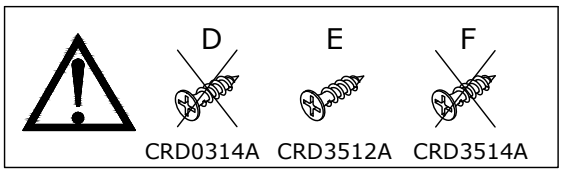



As shown in the figure, screw the self-tapping rod (B) into Panel 18.
Use the screw (E) to fix the component (R) to Panel 18.

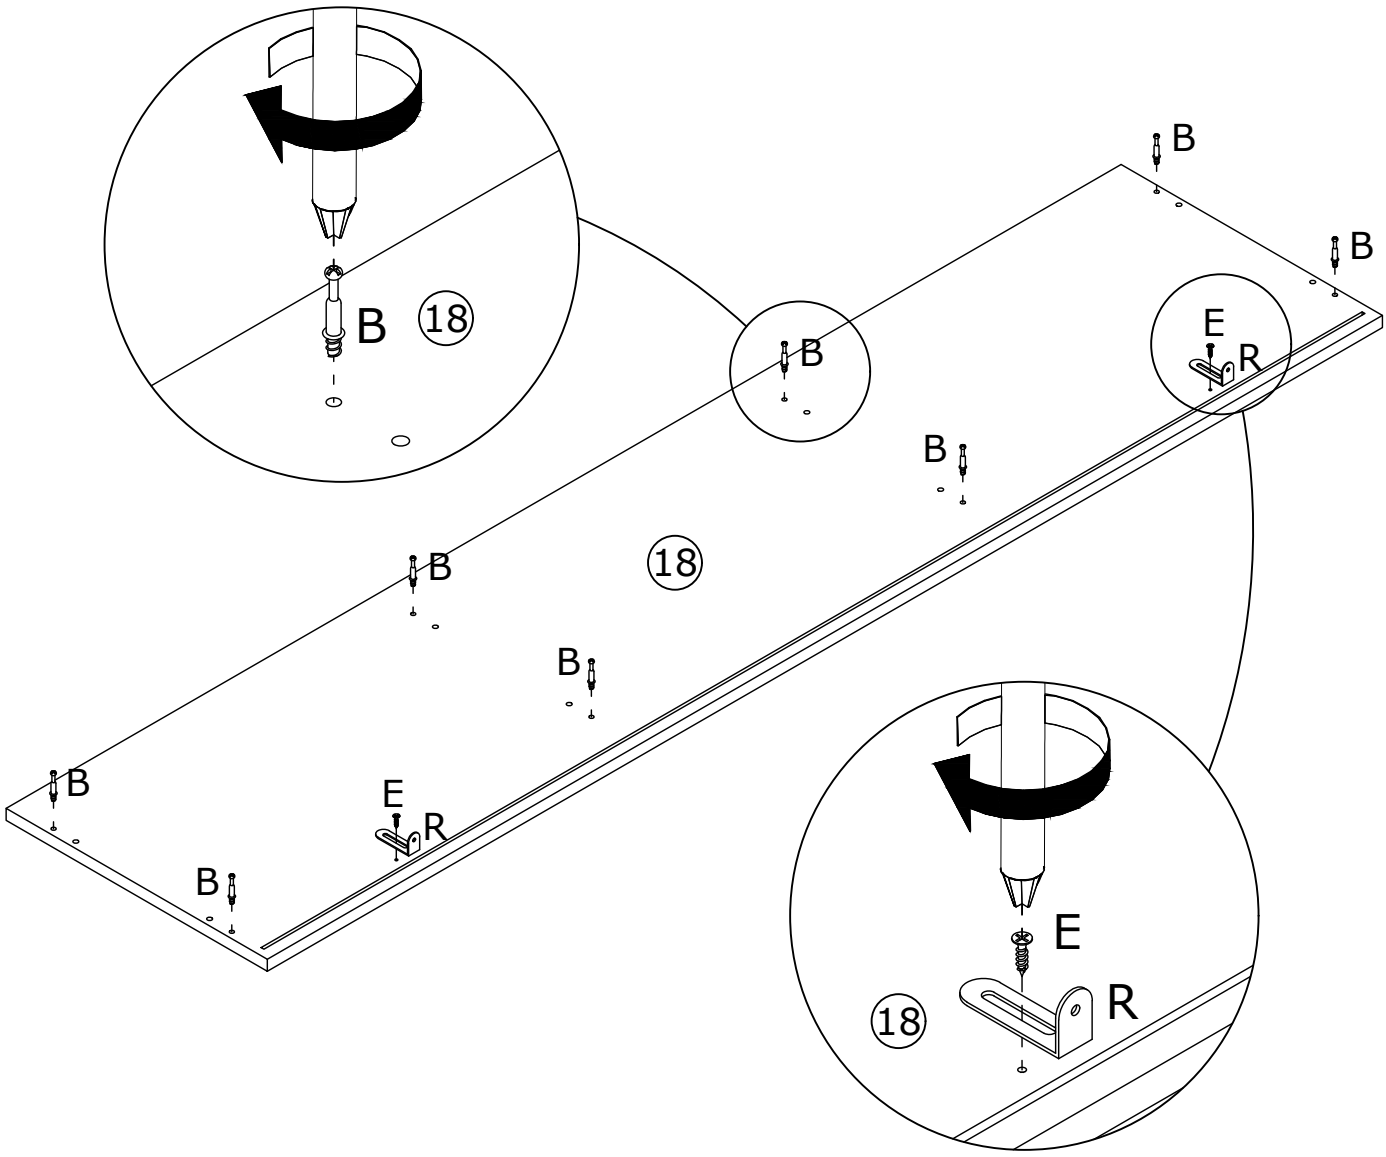


7

A x 8	C x 8	
 CRB1595A	 CRF0630A	


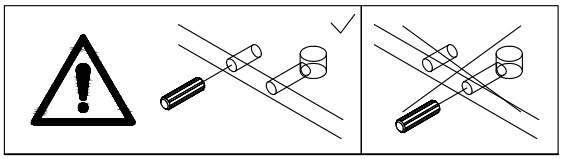


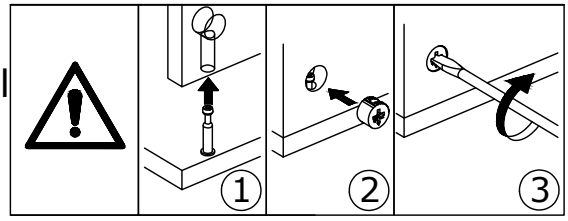


As shown in the figure, use the wooden dowel (C) to connect Panel 18 to the assembled unit, and then insert the eccentric wheel (A) and tighten it by rotating it clockwise.

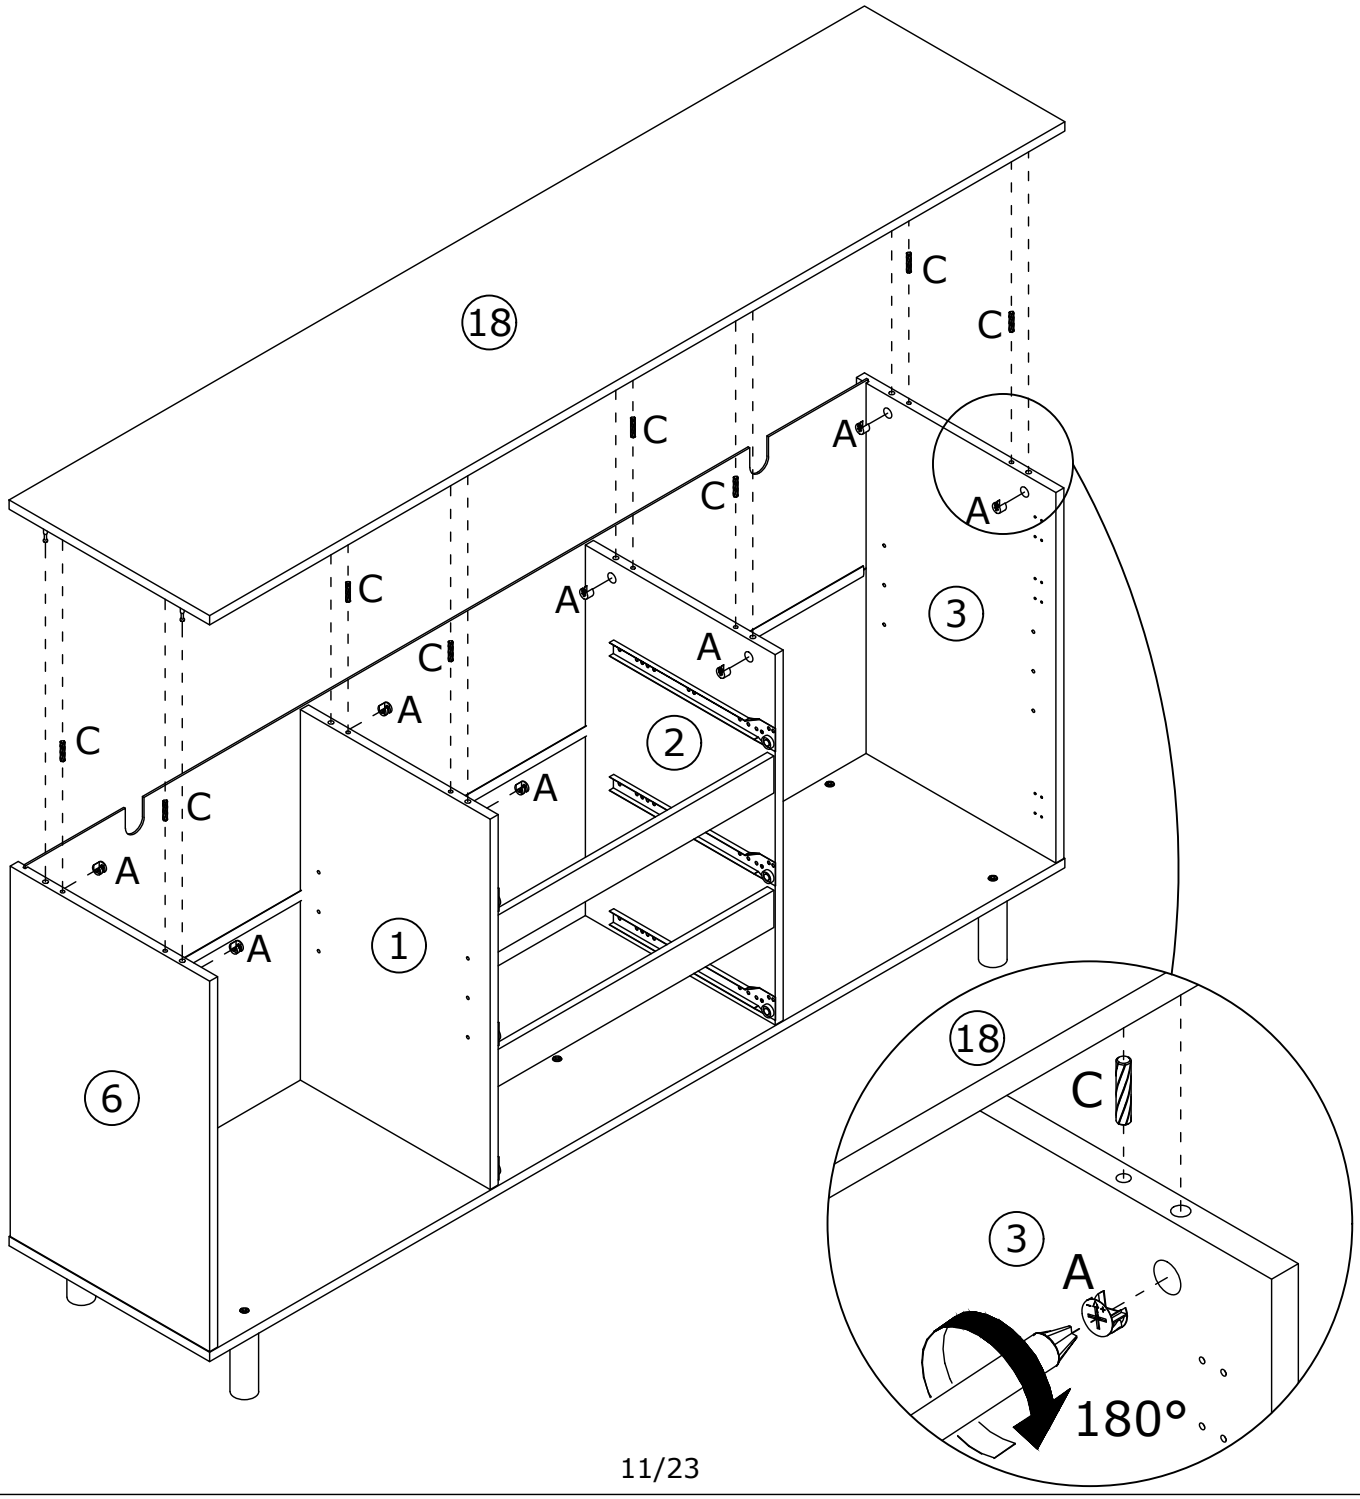


8

F x 12	M x 6	
 CRD3514A	 DGA861A	

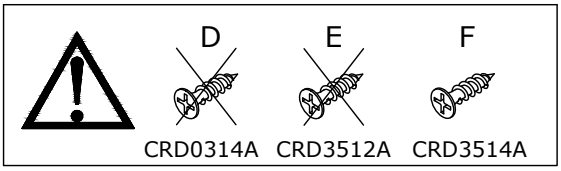

As shown in the figure, use the screw (F) to fix the hinge (M) to Panel 5 and 8.

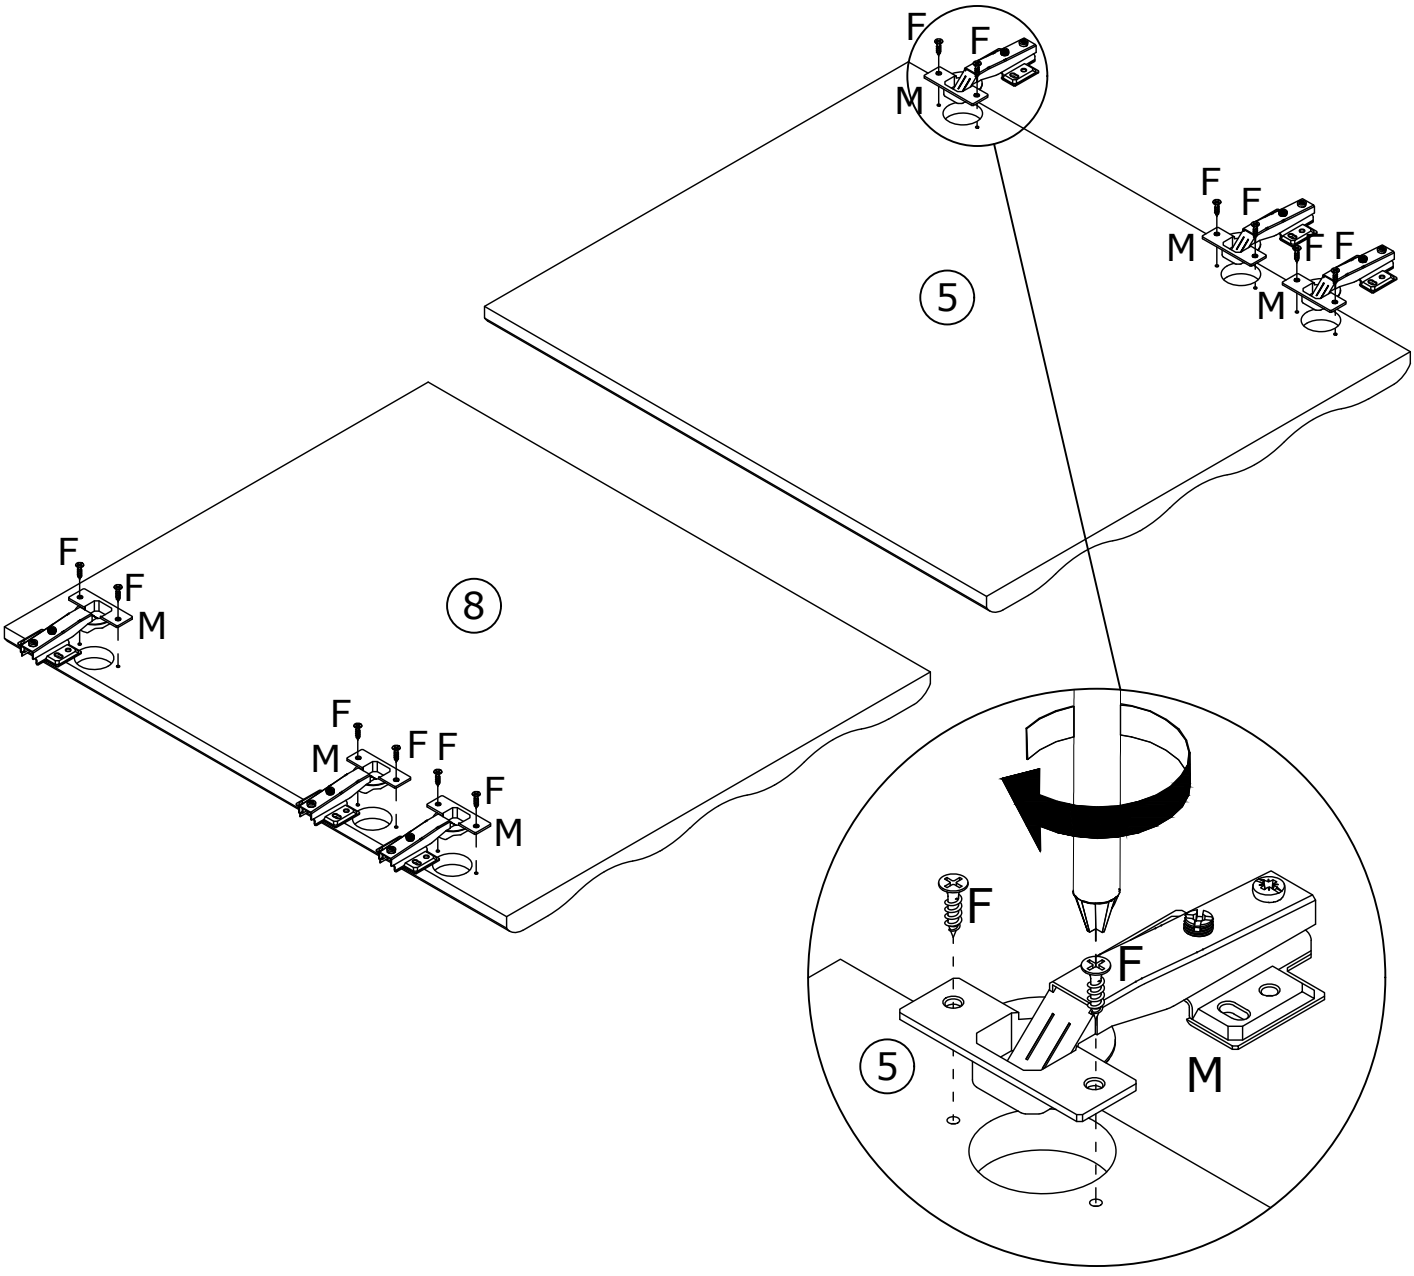

9


F x 24

CRD3514A



D E F

CRD0314A CRD3512A CRD3514A


As shown in the figure, use the screw (F) to fix the hinge (M) to Panel 3 and 6.

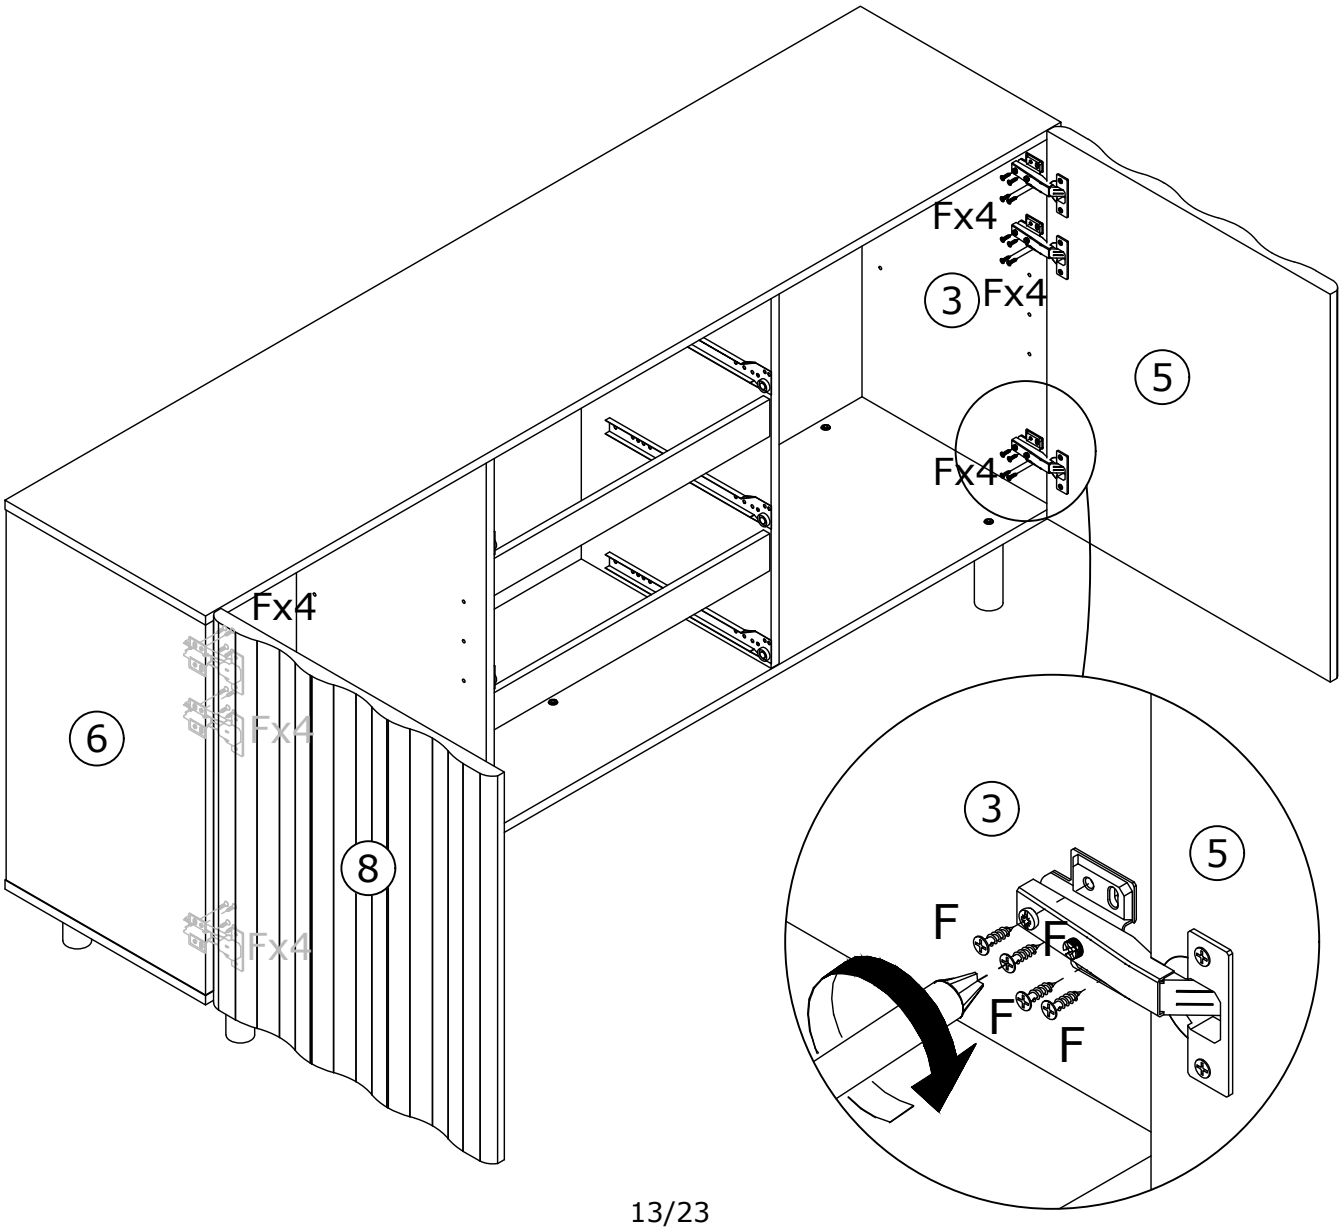


10

D x 12	P x 12	
 CRD0314A		

As shown in the figure, insert the component (P) into the slots and fix it with the screw (D).

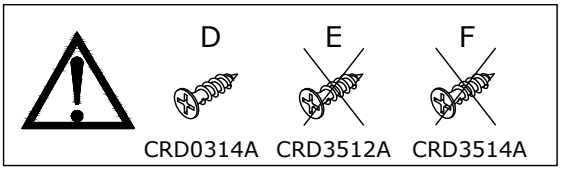

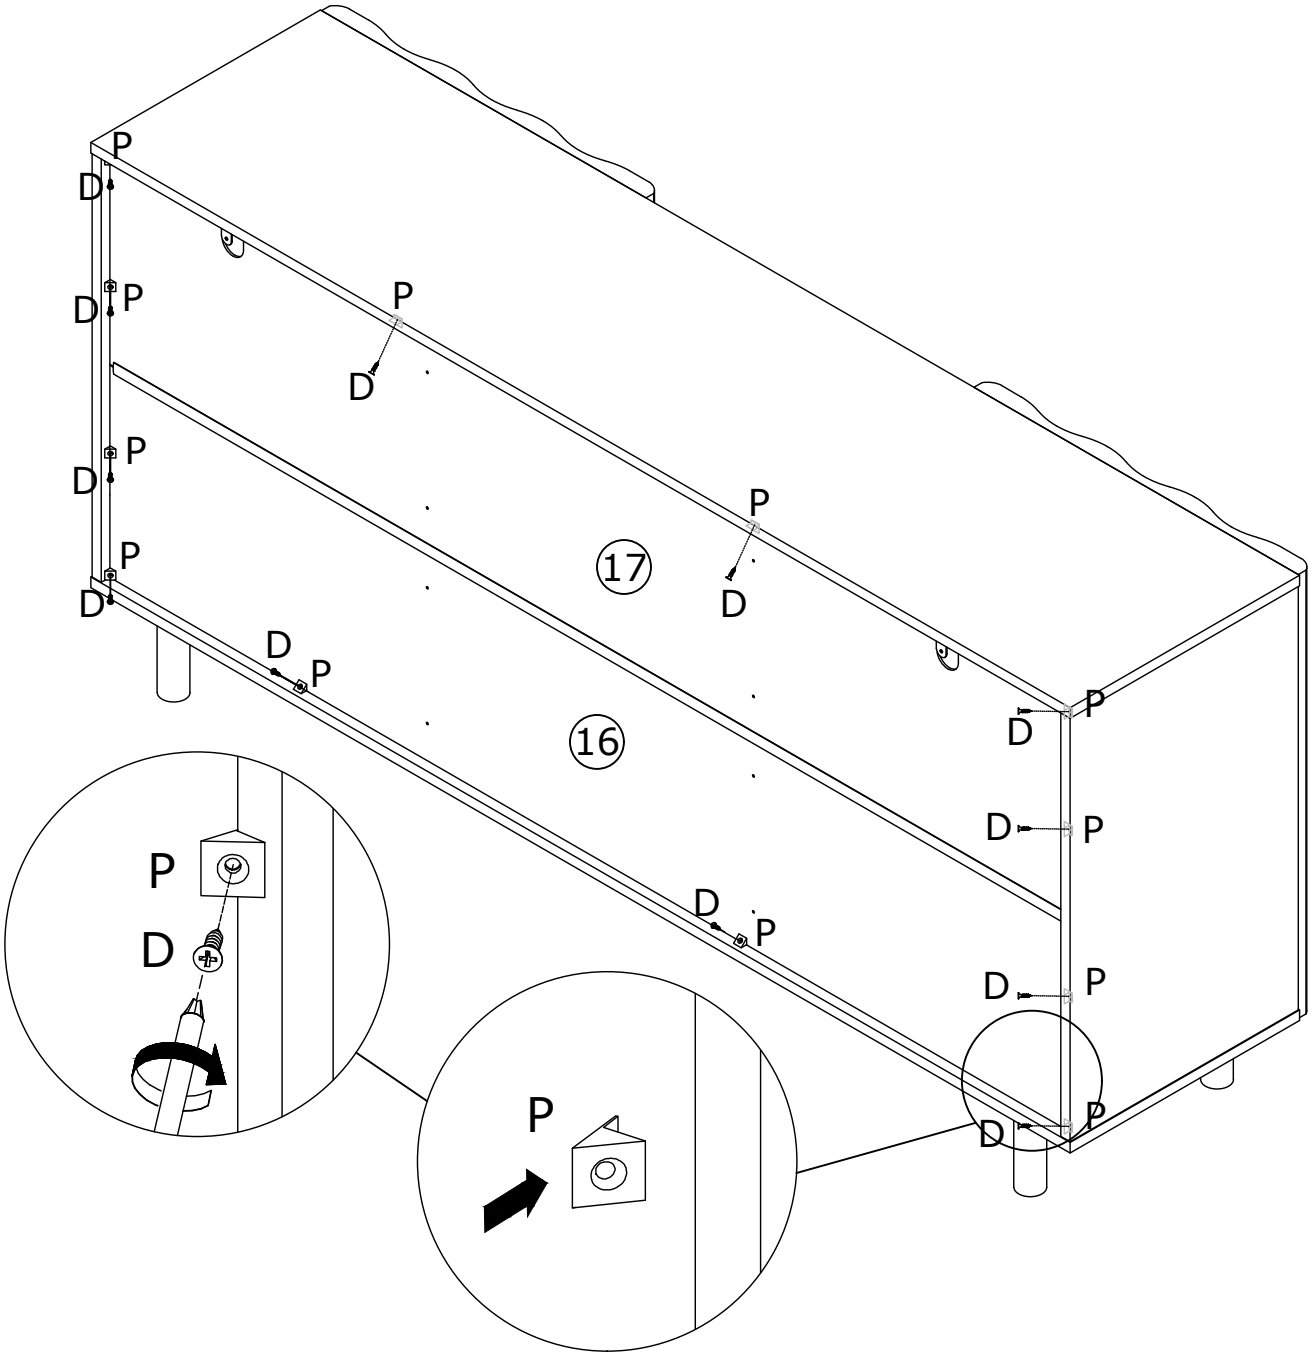


11


J x 8





CRE0314A




As shown in the figure, use the screw (J) to fix Panel 16 and Panel 17 to the main body part.

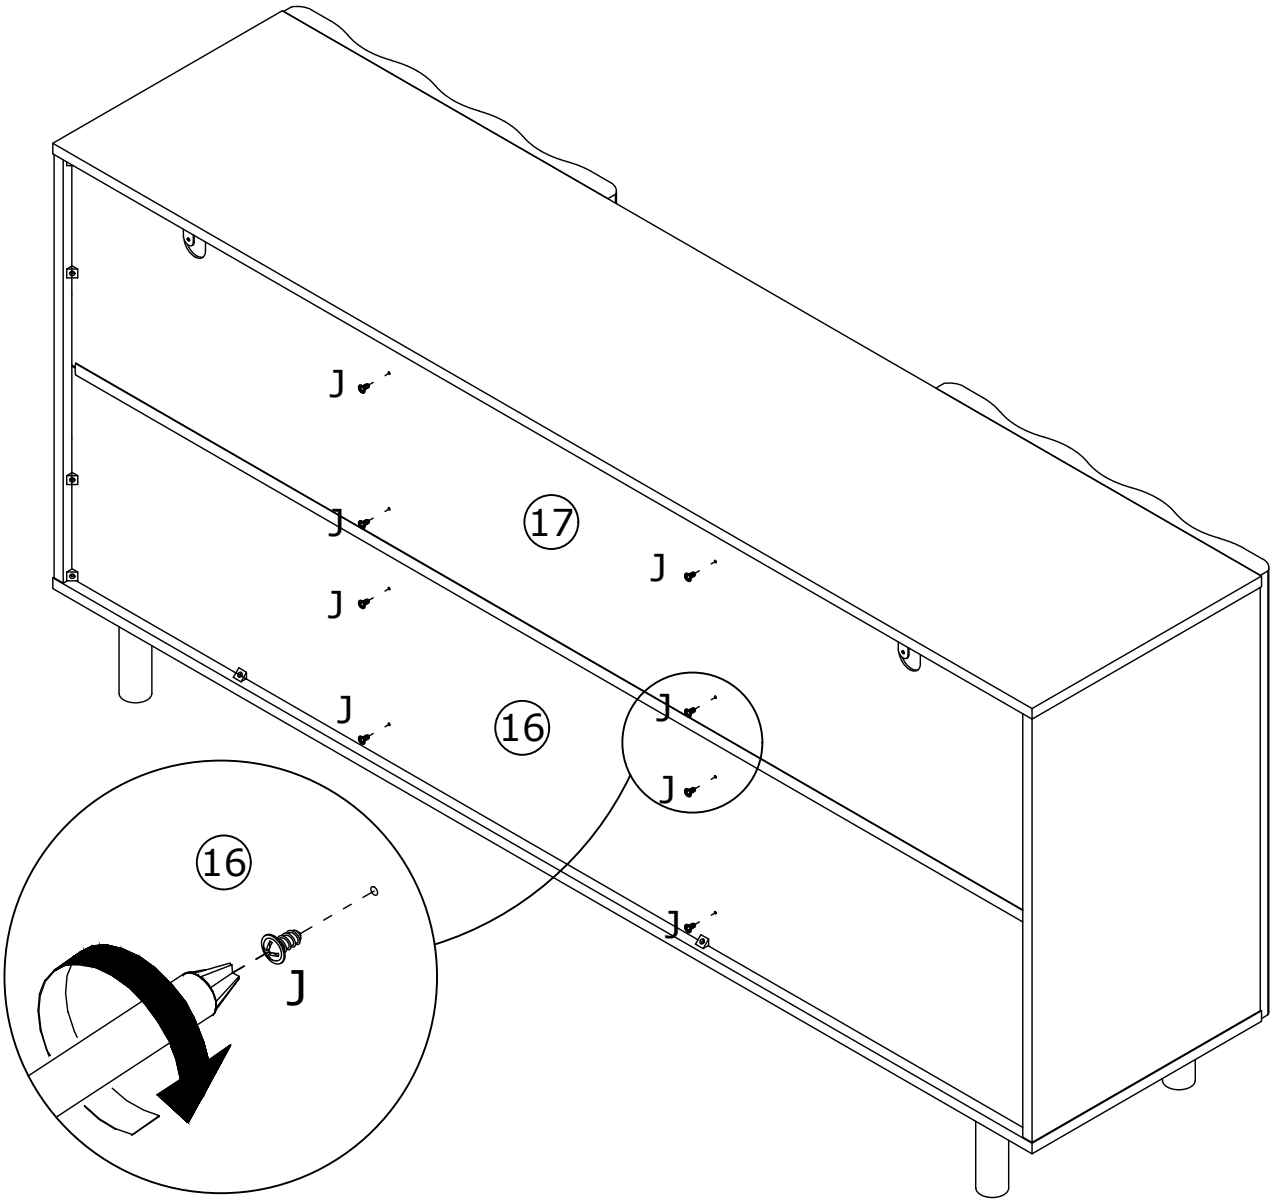


12

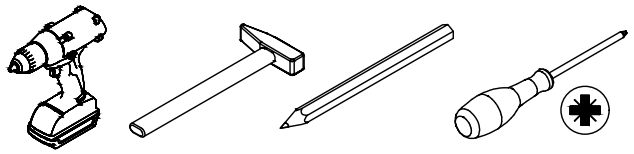G x 2	S x 2	
 CRD3535A		

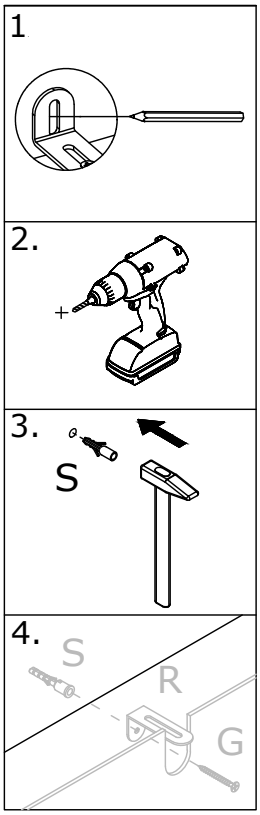

As shown in the figure, install the anti-tipping device.

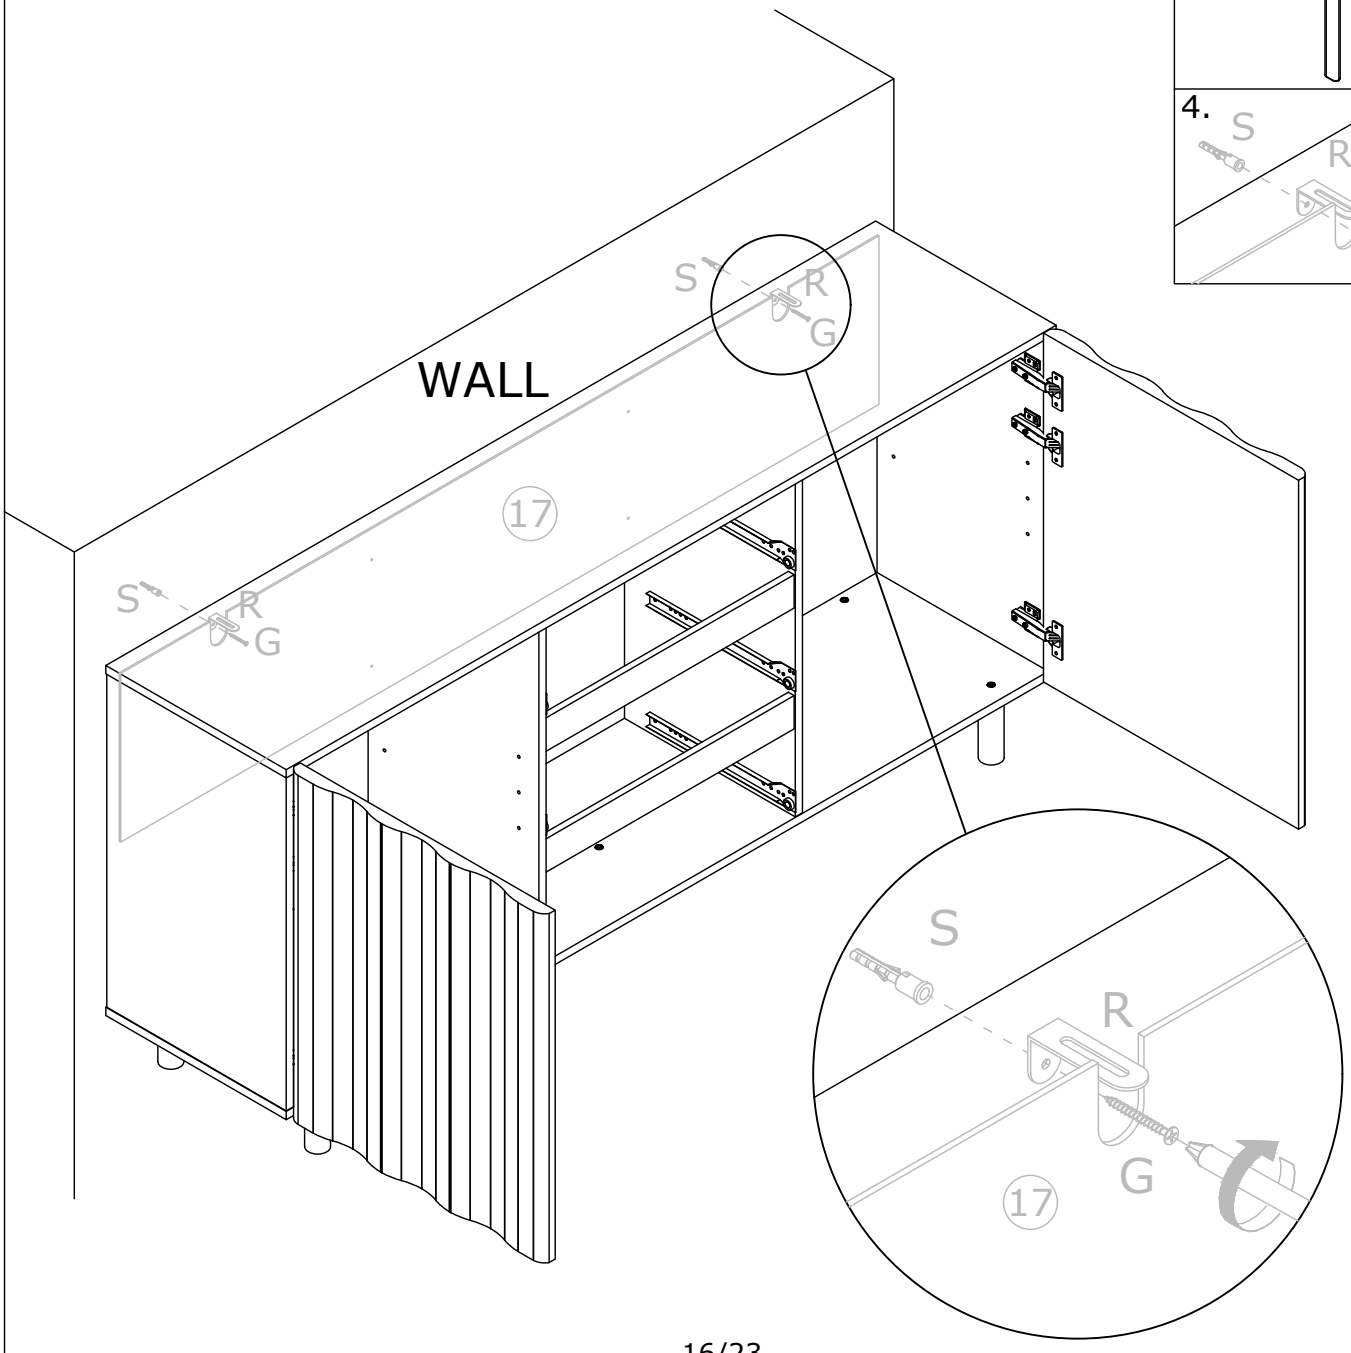


13


K x 8




As shown in the figure, insert the component (K) onto Panel 1, 2, 3 and 6.

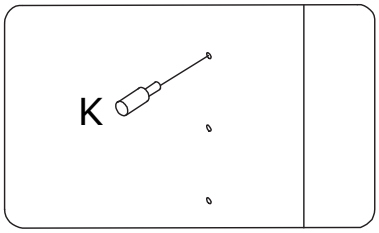


OR

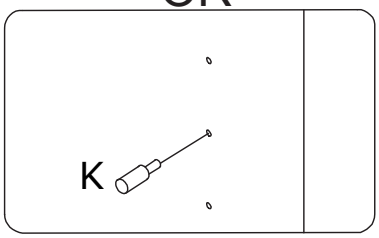


OR

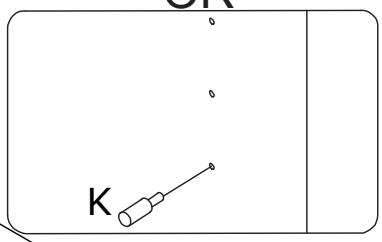


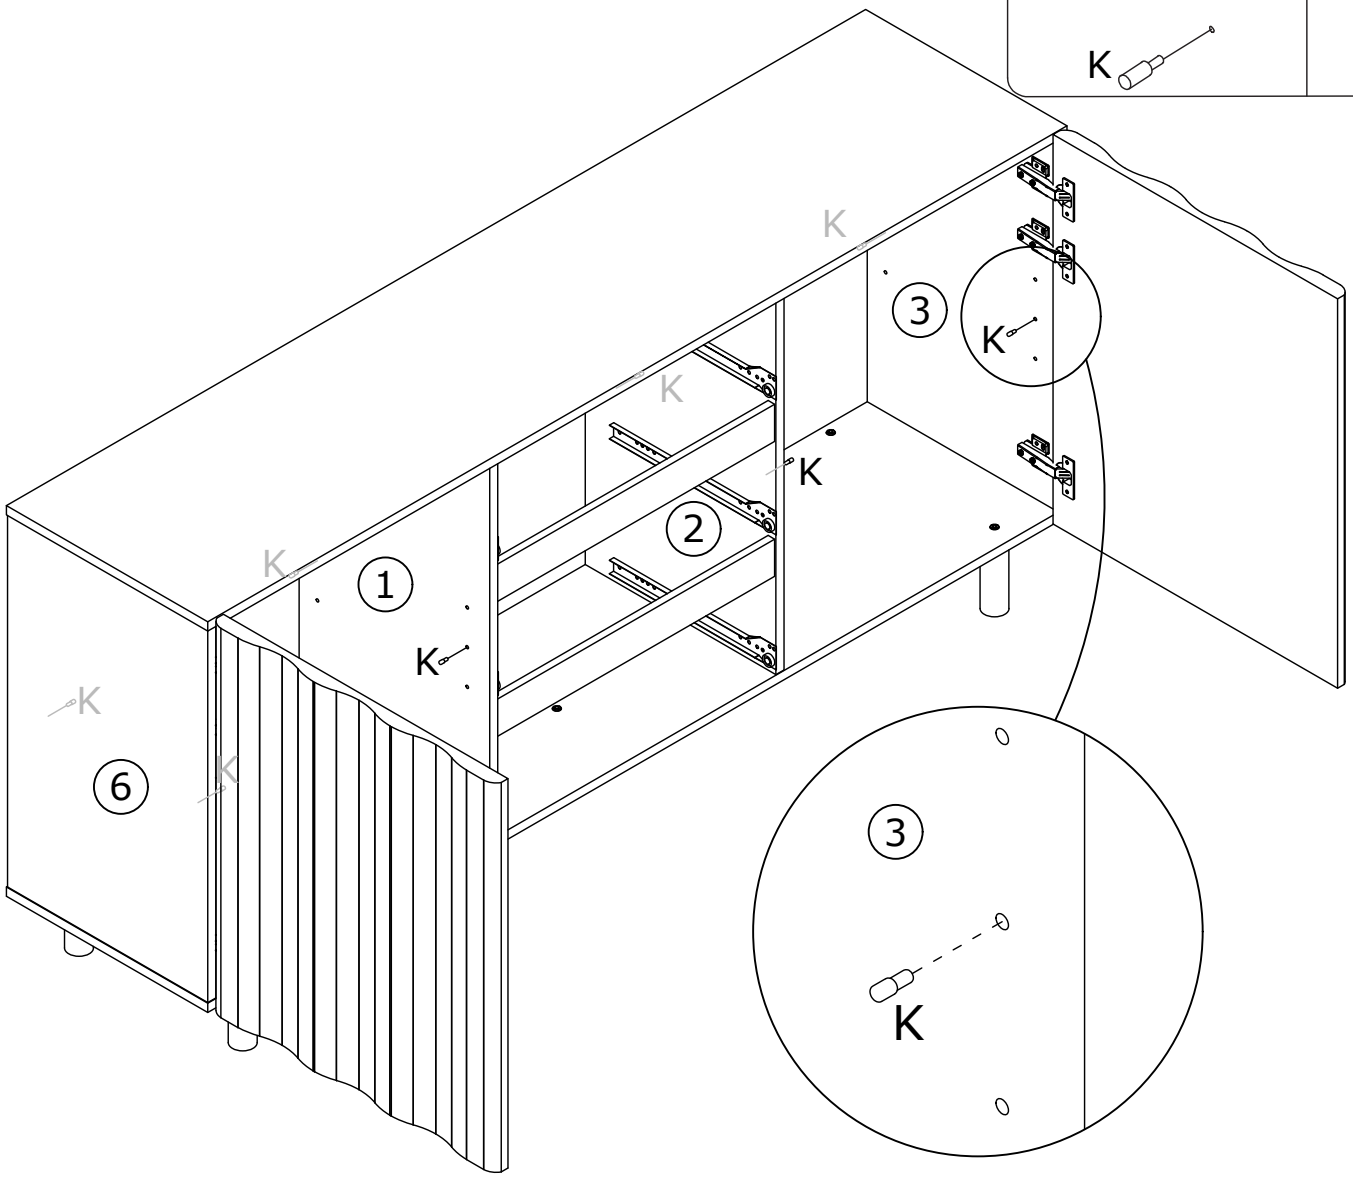


14


As shown in the figure, assemble Panel 14 to the main body part.

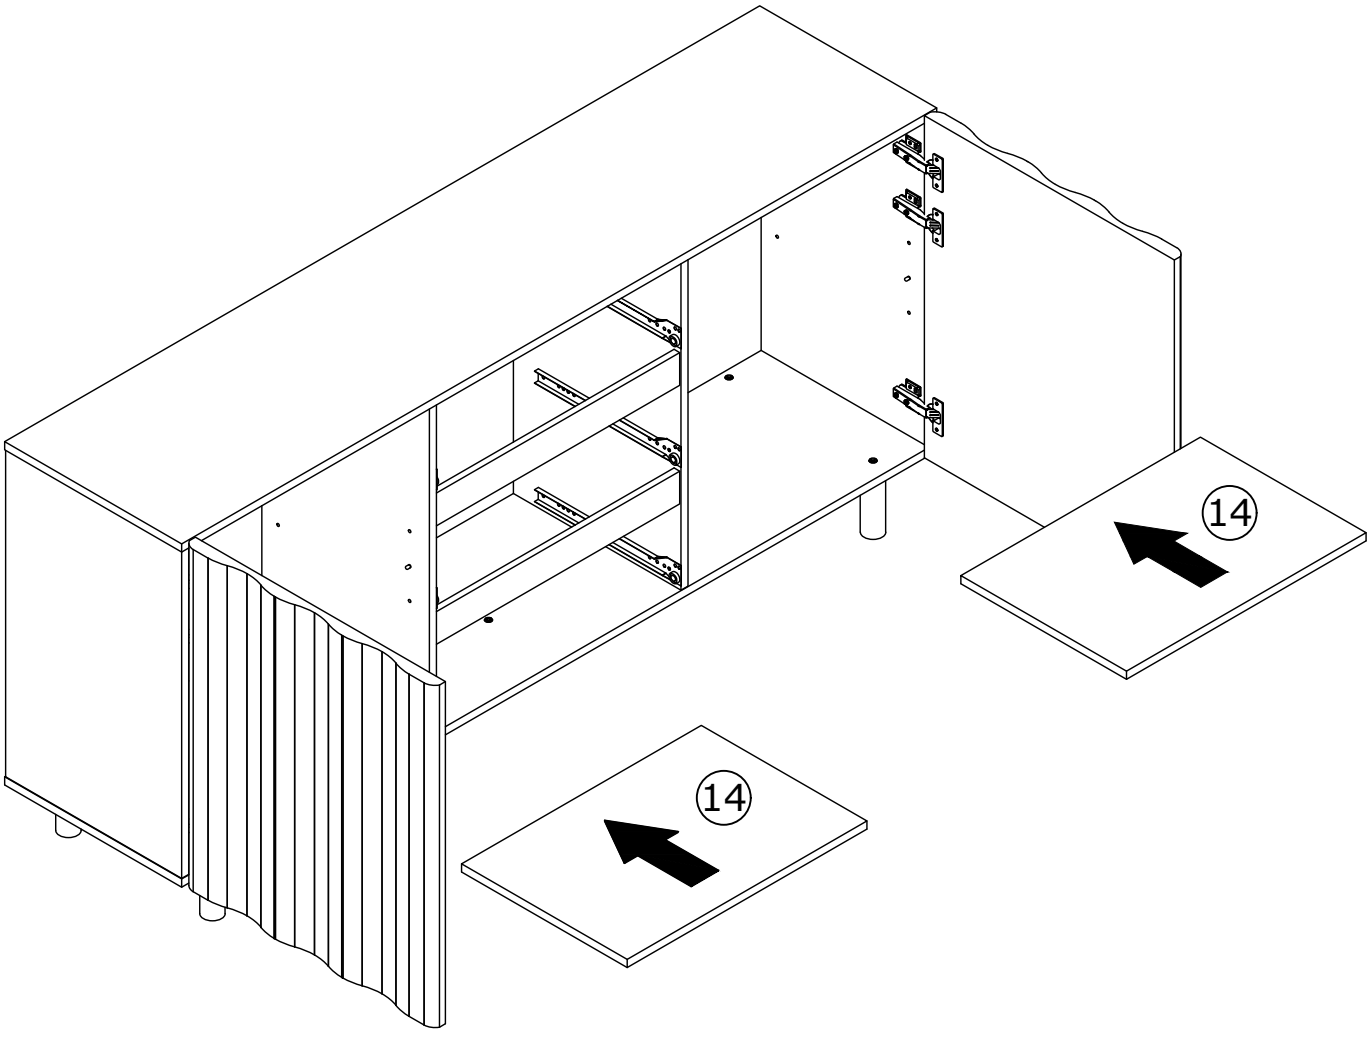


15

A x 15	B x 15	
 CRB1595A	 CRA0635A	

As shown in the figure, screw the self-tapping rod (B) into Panel 13.
Connect Panel 4,7 and 12 to Panel 13, and then insert the eccentric wheel (A) and tighten it by rotating it clockwise.

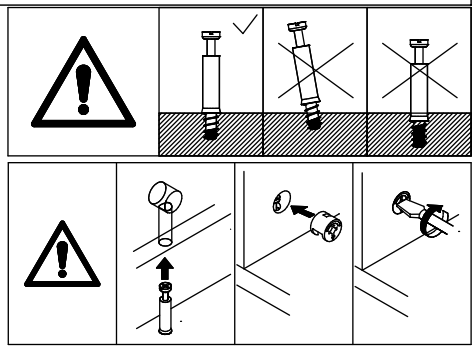

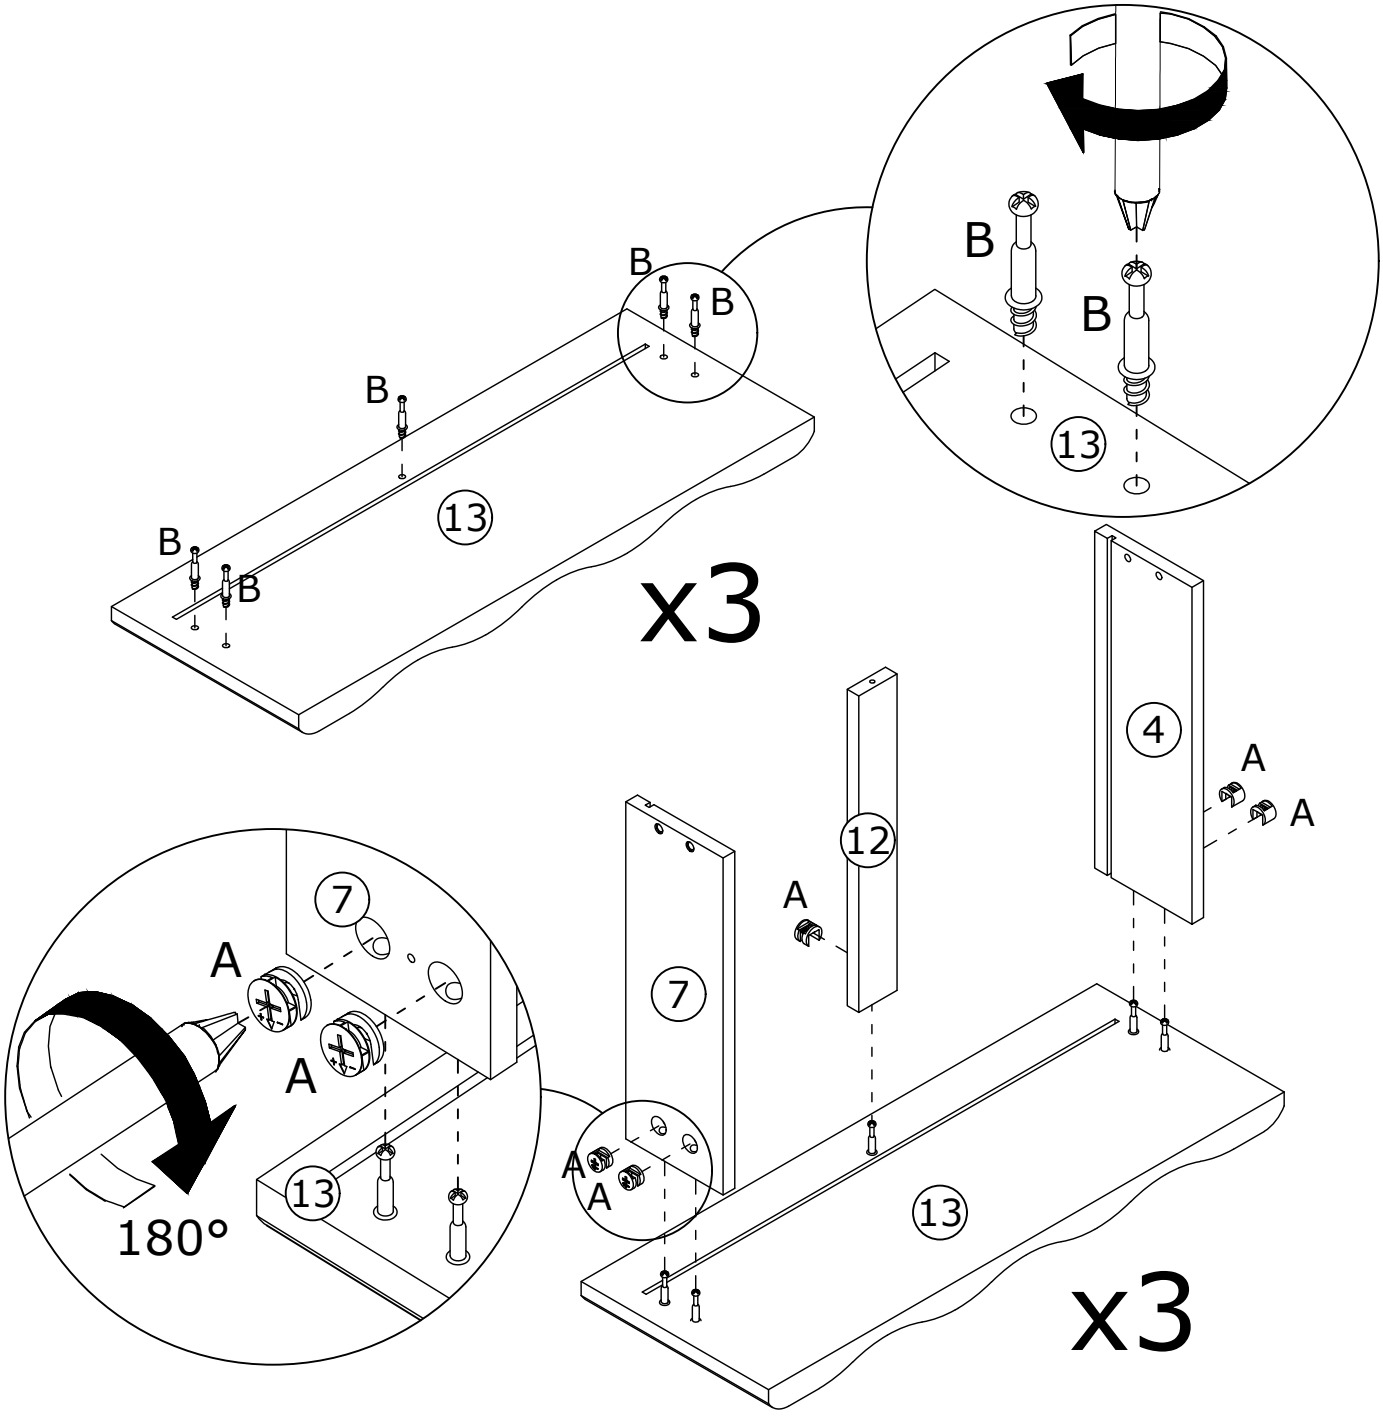


16


H x 15




CRC0540A




As shown in the figure, insert Panel 11 along the available slot. Use the screw (H) to connect Panel 4 and 7 to Panel 10.

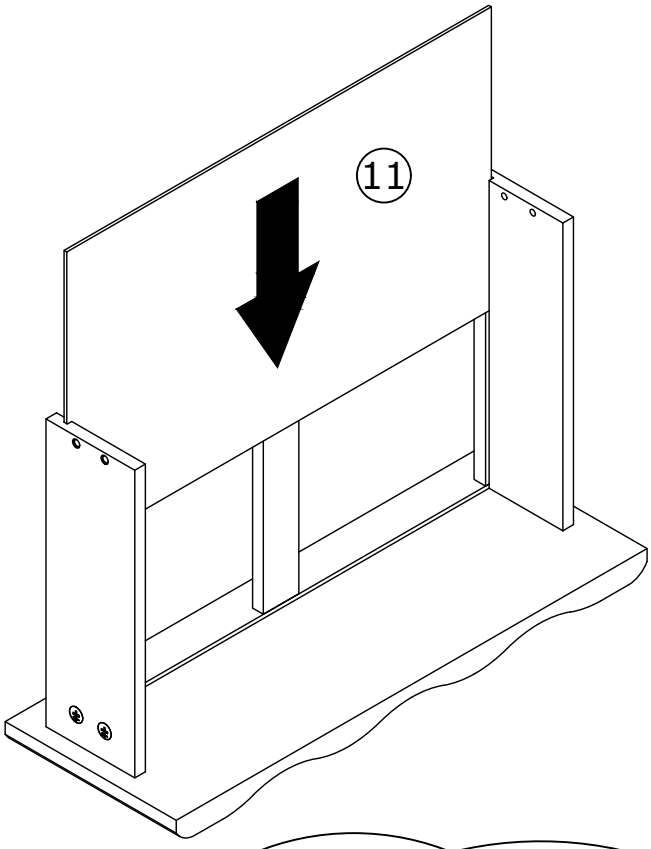



x3

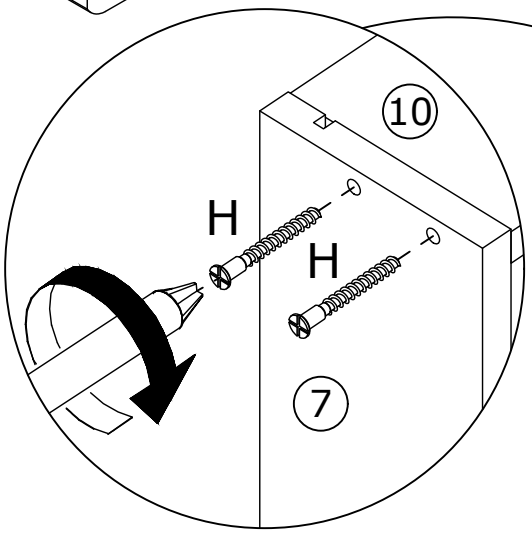

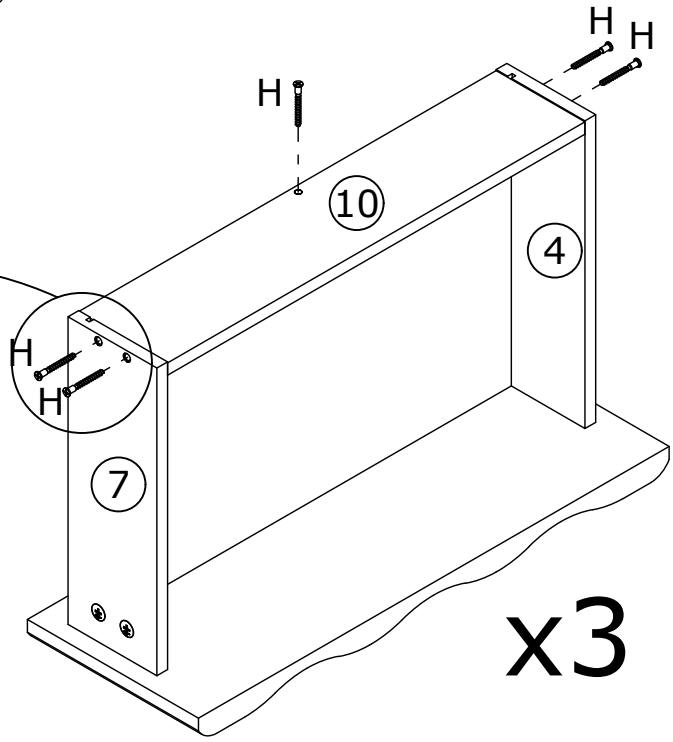



x3

17


E x 12	L x 3	
 CRD3512A	 WX1012A	

As shown in the figure, use the screw (E) to fix the sliding rails L (L-DL) and L (L-DR) to Panel 4 and 7.

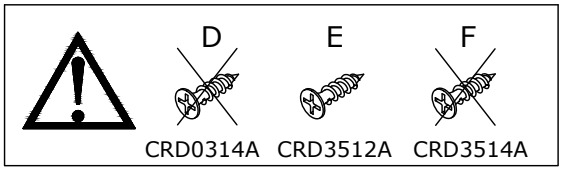

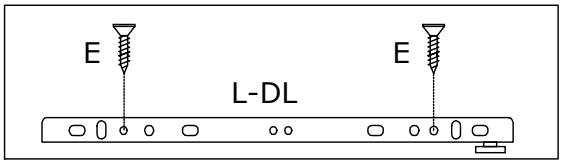




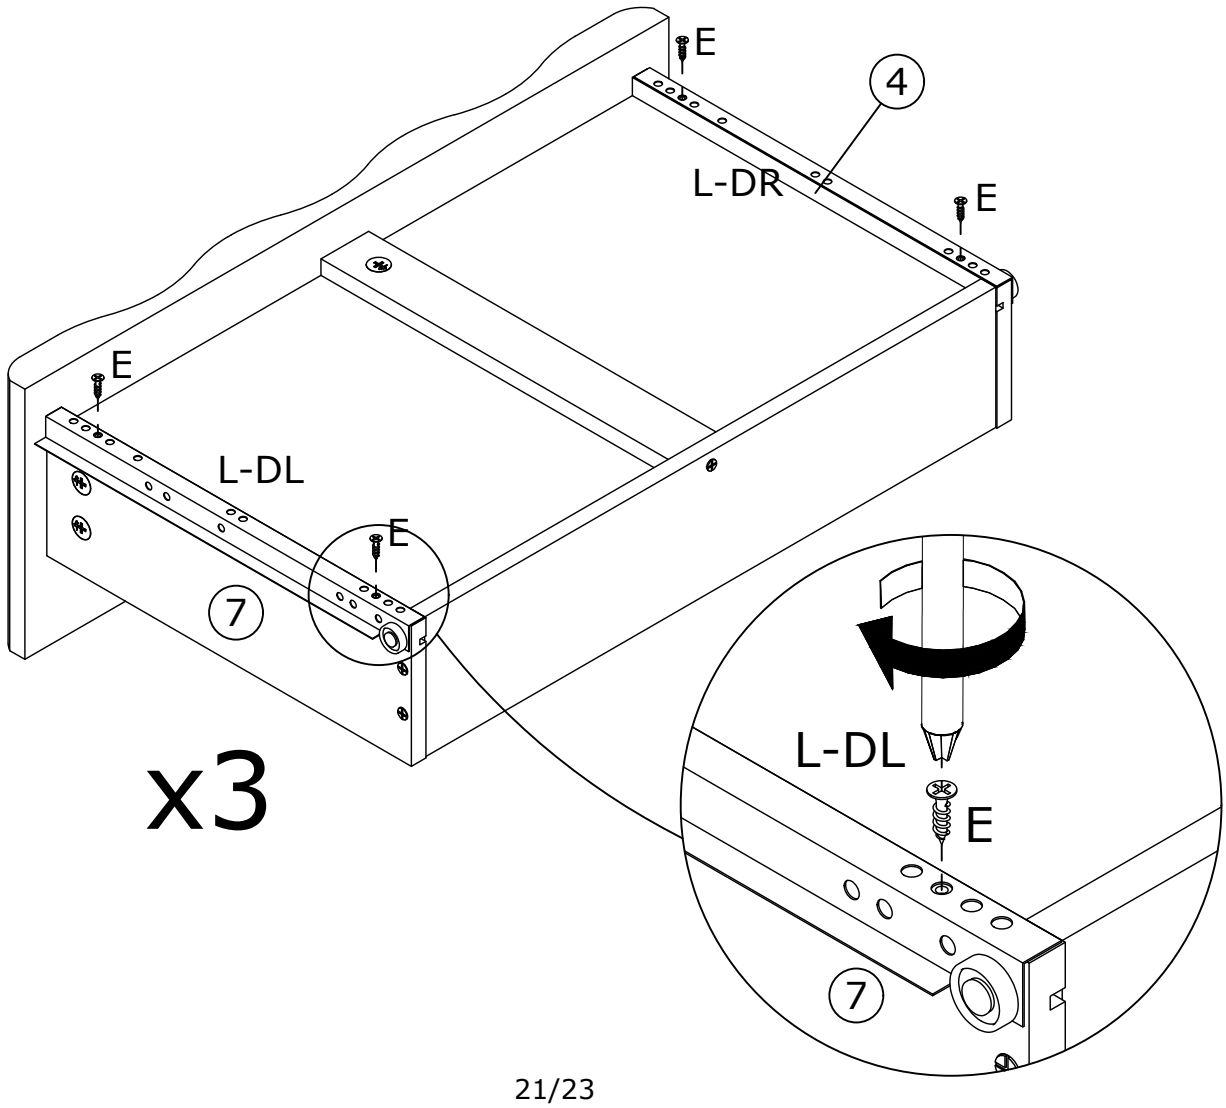

18


As shown in the figure, assemble the drawer to the main body part.

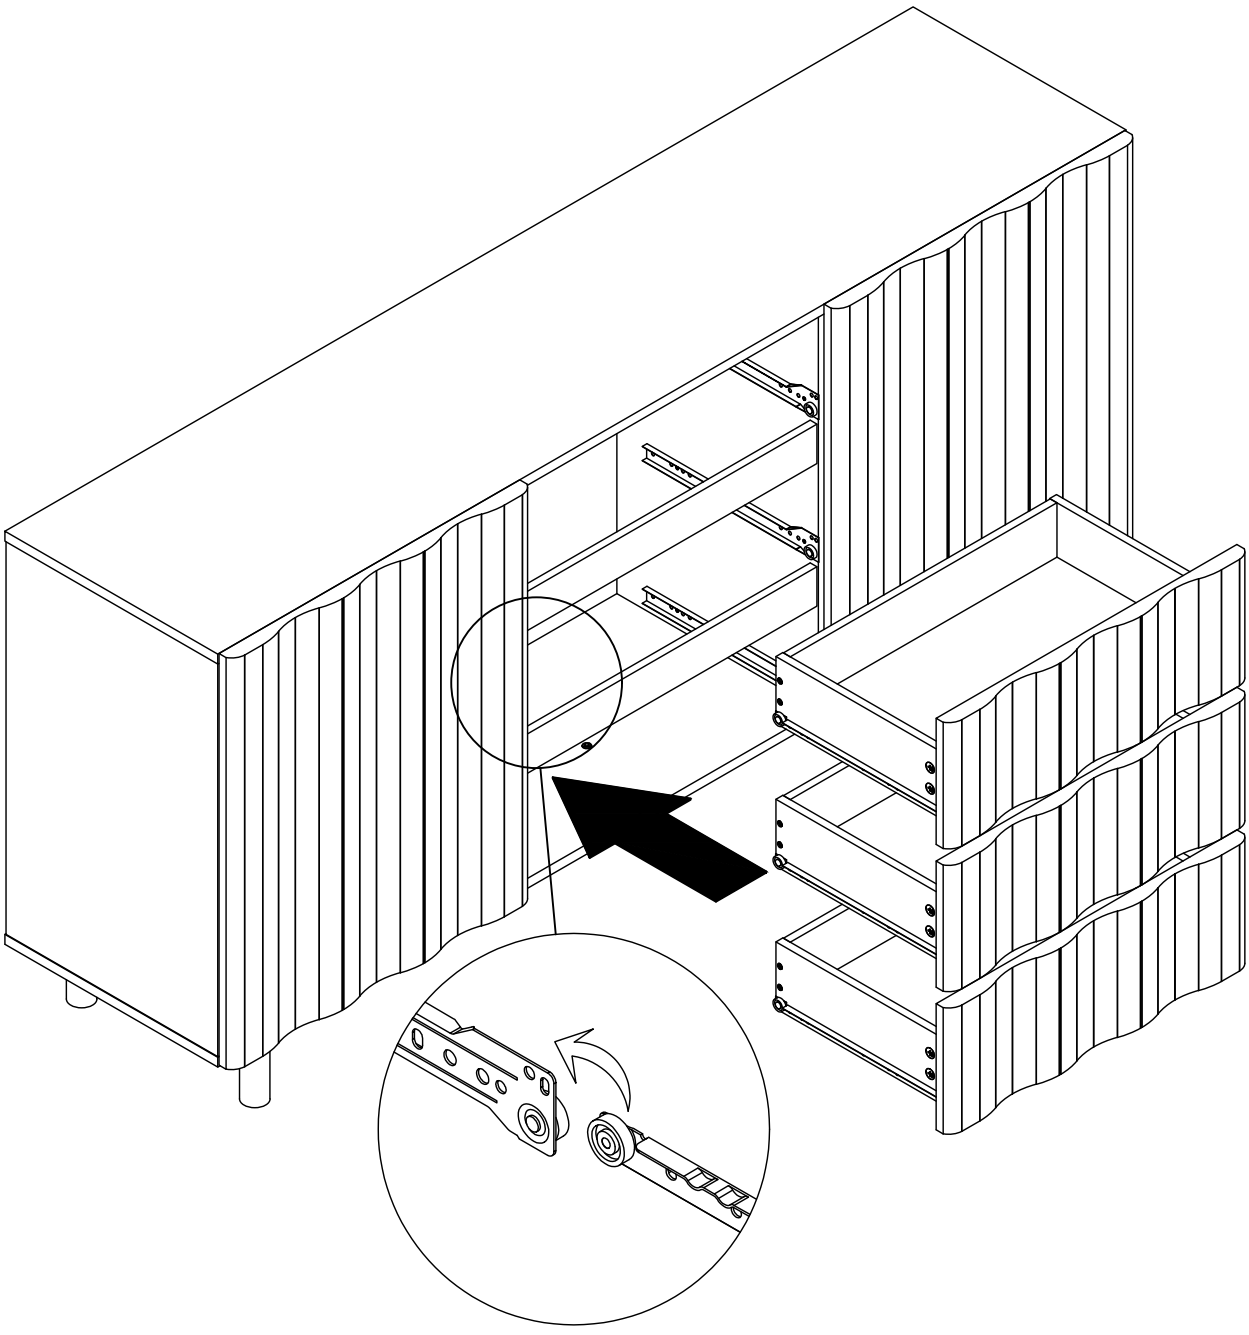


19

If doors are still not aligned if the hinges are properly correctly, please watch the video.

https://youtu.be/n0Lb36SoODM

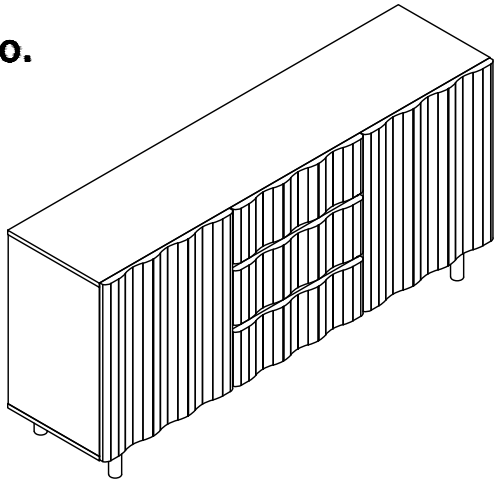

If there is misalignment after you install, adjust the screw to the best condition

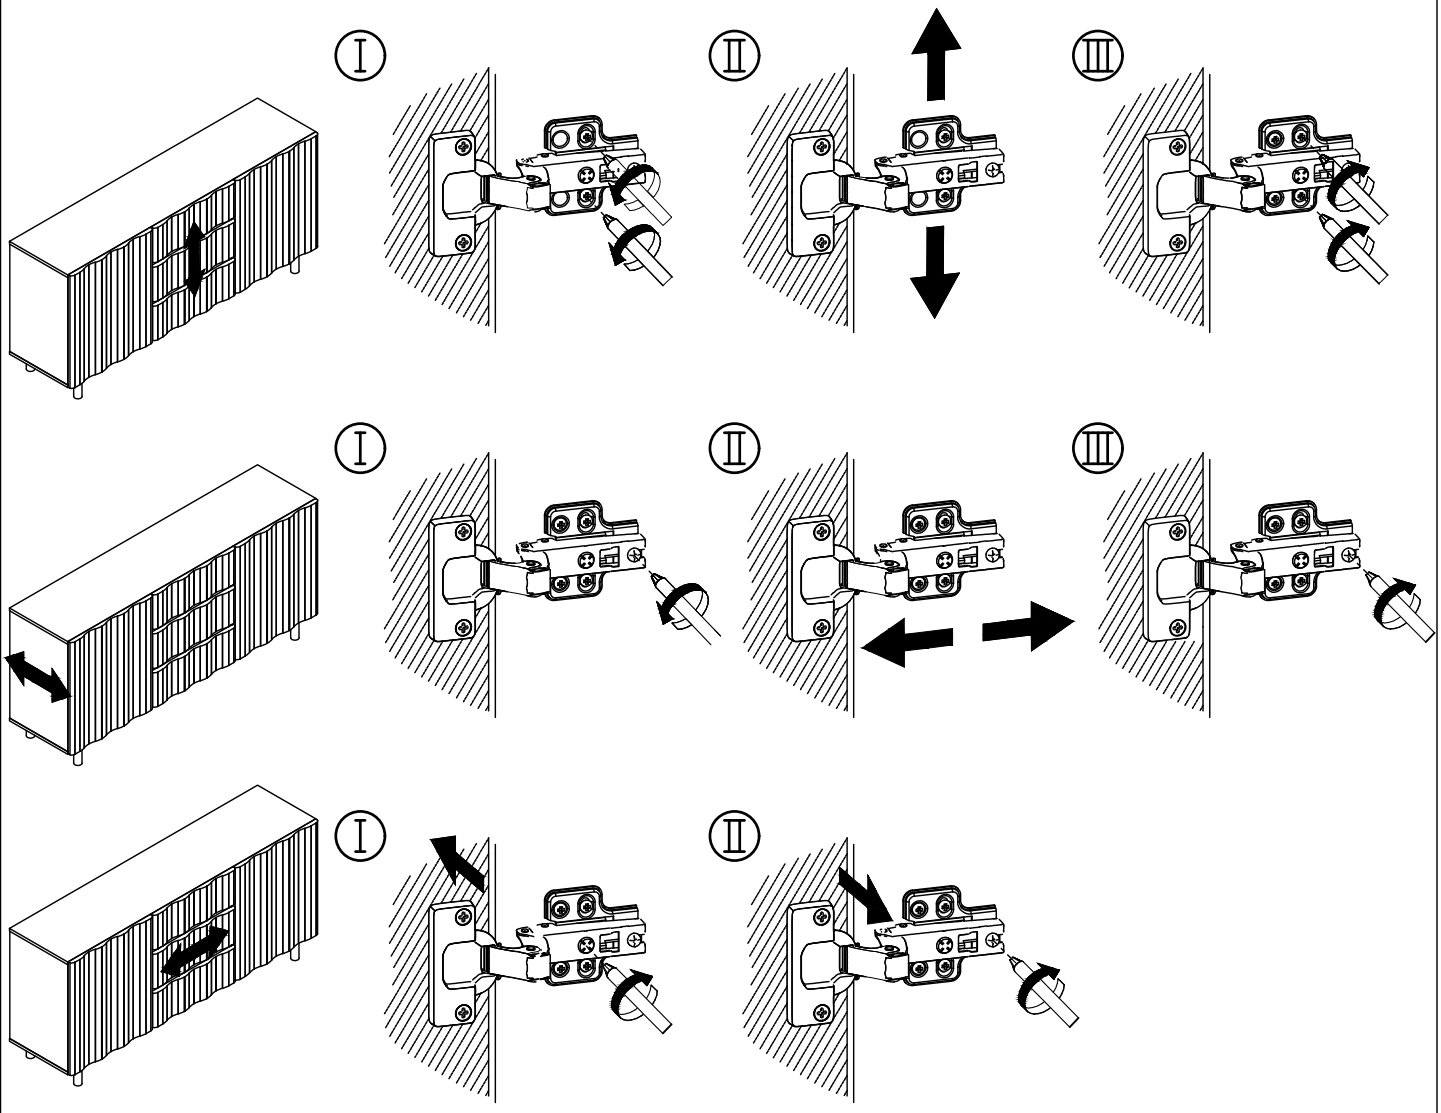

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT


adelahu@fufugaga.com


208-820-0068