

Popcorn Machine
Owner's Manual

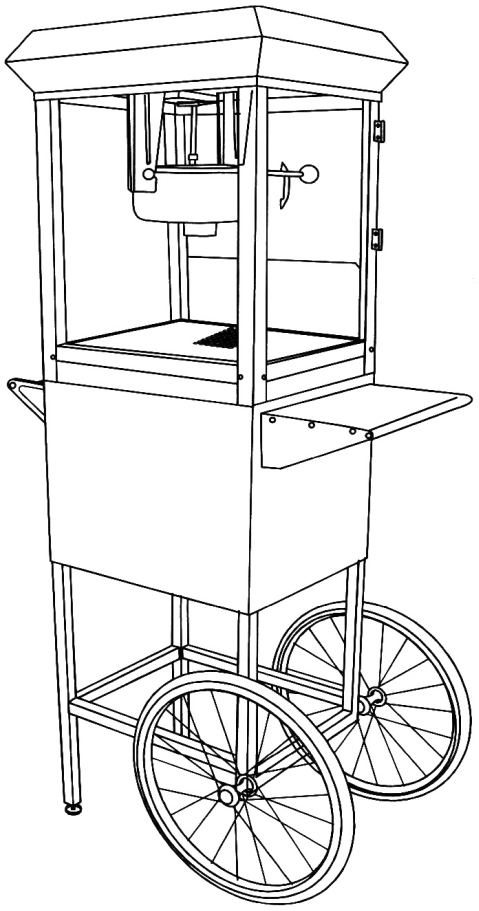

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- **READ ALL INSTRUCTIONS BEFORE USING YOUR POPCORN MACHINE.**
- Do not touch hot surfaces. *Always* use handles or knobs to operate.
- To avoid any risk of electrical shock, do not immerse cord or plug in water.
- Close supervision is necessary when being used near children.
- Unplug main power cord from outlet while not in use and before cleaning.
- Allow hot parts to cool down before moving or cleaning.
- Do not operate the appliance with a damaged cord or plug, or if the machine is malfunctioning or damaged. Send the unit to the nearest authorized service center for examination and repair. (ONLY technicians should open up the unit.)
- Using any accessories or attachments not provided or recommended by the manufacturer may result in injury.
- Do not pop kernels in a dry pot (without oil).
- Do not immerse the kettle in water.
- Pot surface may be ***HOT*** and should ***NOT*** be touched during the popping process or just after use.
- Unplug, clean and cover the unit then store in a dry, safe place while not in use.
- Do not leave the power cord hanging over edge of table or counter.
- ***DO NOT*** place the unit on or near a hot gas or electric burner or in a heated oven.
- Extreme caution must be used when moving any appliance containing hot oil or other hot liquids.
- Turn ALL switches to "OFF" position before disconnecting power plug from the outlet.
- Not recommended for outdoor use.
- Do not use appliance for anything other than the indicated usage.
- To avoid overheating, always have oil and kernels ready before operating.
- Extreme caution must be used when unloading popcorn, always use oven mitts. Be careful that residual hot oil or water does not come into contact with skin, as burns may occur.
- If you have purchased a bar style popper, or are using the full unit without the cart, always place the unit over a counter-top so that residual hot oil or water will not cause injury.
- ***KEEP OUT OF REACH OF CHILDREN.***
- **DO NOT CLEAN USING ANY ABRASIVE MATERIAL.**
- **NEVER FORCE ANY PARTS OR BRACKETS INTO POSITION.**
- **NO PARTS ARE INTENDED FOR THE DISHWASHER.**

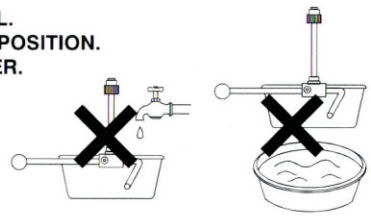


SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

ASSEMBLY INSTRUCTIONS

Popcorn Machine

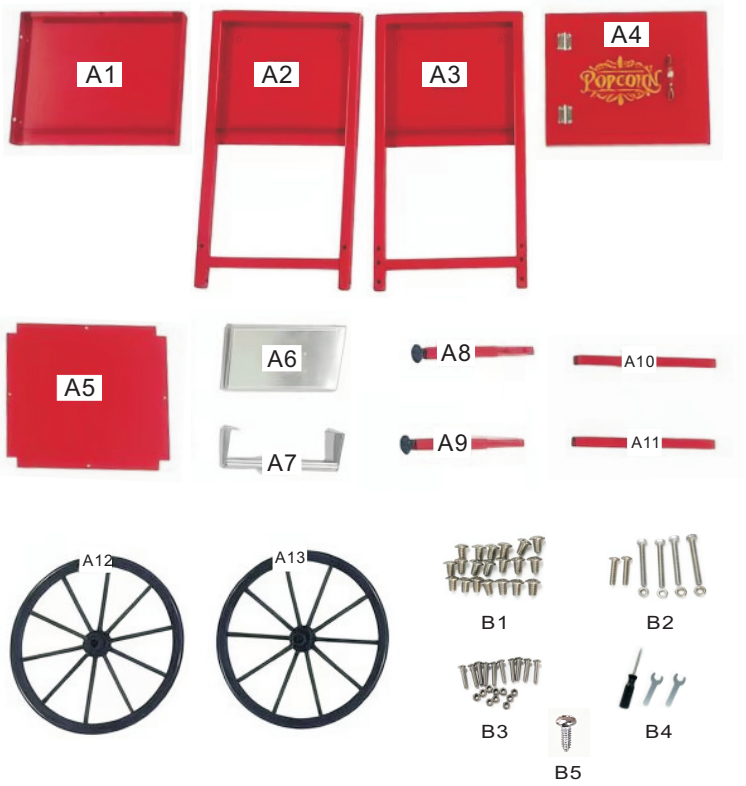

INSTALLATION STEPS

1. Assemble A1, A2, A3, and A4 and tighten them with B1 screws.
2. Stand up the shelf and put A5 into the box.
3. Assemble A6 onto the side of A2 and A7 onto the side of A3.
4. Assemble A8 and A9 onto A3 and fix them with B3 screws, then connect A10 and A11 to A2 and A3 with B3 screws.
5. Assemble the wheels of A12 and A13 and fix them on the A2 machine foot with B2 screws. Tighten with B4 tool, Popcorn machine handcart assembly completed.

CLEANING AND MAINTENANCE


CAUTION

- **After popping cycle is complete, the popping pot will be very hot. Use extreme care when handling.**
- **Remember to turn the heat switch to the OFF position after the finish of the pop cycle.**
- **Unplug unit *BEFORE* removing heat pot from hanger. Use caution not to bump heat lamp bulb during pot removal.**

- To maintain quality taste and popping conditions in your popper, we recommend that you thoroughly clean the heat pot after using 3 to 4 times or before prolonged periods of storage.
- Switch OFF (II & III). Pour 6 to 10 oz. of water (NO detergent is necessary) into inner pot.
- Switch ON the stirrer (II) and heater (III) to boil the water and allow the stirrer to rotate that will help remove debris on kettle surface. Pour out the water after about 1 to 2 minutes of boiling.

Caution: Hot kettle! Handle with oven mitts. Keep children at a safe distance from popper during procedure.

- Repeat the same procedure 2 to 3 times to get the best result.
- Switch OFF the machine and wait for the popping pot to cool. Clean the inside and outside of the pot by brush and wet towel. ***Caution:*** DO NOT immerse the heat pot in water.
- After using the popcorn machine, users should use wet towel to clean up the main unit, main body and glasses; we strongly recommend to tidying up the rubbish tray frequently so that there is no food spoilage left behind.

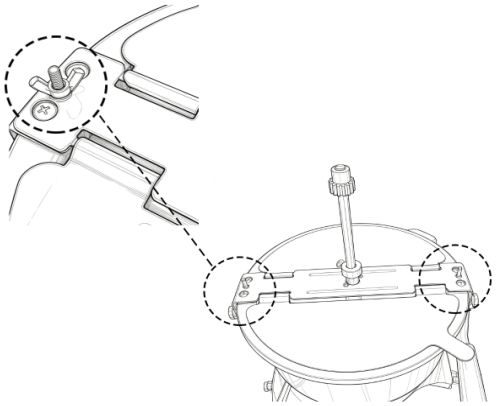


Cleaning the Pot:

1.Remove the fixing screws on both sides.
2.Lift the lid and take it off.
3.Reinstall and fasten securely after cleaning.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- **READ ALL INSTRUCTIONS BEFORE USING YOUR POPCORN MACHINE.**
- Do not touch hot surfaces. *Always* use handles or knobs to operate.
- To avoid any risk of electrical shock, do not immerse cord or plug in water.
- Close supervision is necessary when being used near children.
- Unplug main power cord from outlet while not in use and before cleaning.
- Allow hot parts to cool down before moving or cleaning.
- Do not operate the appliance with a damaged cord or plug, or if the machine is malfunctioning or damaged. Send the unit to the nearest authorized service center for examination and repair. (ONLY technicians should open up the unit.)
- Using any accessories or attachments not provided or recommended by the manufacturer may result in injury.
- Do not pop kernels in a dry pot (without oil).
- Do not immerse the kettle in water.
- Pot surface may be ***HOT*** and should ***NOT*** be touched during the popping process or just after use.
- Unplug, clean and cover the unit then store in a dry, safe place while not in use.
- Do not leave the power cord hanging over edge of table or counter.
- ***DO NOT*** place the unit on or near a hot gas or electric burner or in a heated oven.
- Extreme caution must be used when moving any appliance containing hot oil or other hot liquids.
- Turn ALL switches to "OFF" position before disconnecting power plug from the outlet.
- Not recommended for outdoor use.
- Do not use appliance for anything other than the indicated usage.
- To avoid overheating, always have oil and kernels ready before operating.
- Extreme caution must be used when unloading popcorn, always use oven mitts. Be careful that residual hot oil or water does not come into contact with skin, as burns may occur.
- If you have purchased a bar style popper, or are using the full unit without the cart, always place the unit over a counter-top so that residual hot oil or water will not cause injury.
- ***KEEP OUT OF REACH OF CHILDREN.***
- **DO NOT CLEAN USING ANY ABRASIVE MATERIAL.**
- **NEVER FORCE ANY PARTS OR BRACKETS INTO POSITION.**
- **NO PARTS ARE INTENDED FOR THE DISHWASHER.**

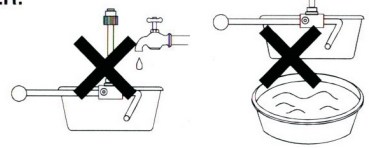

SAVE THESE INSTRUCTIONS


FOR HOUSEHOLD USE ONLY

INSTALLATION STEPS



Note: When pushing the cart, slowly lift the handlebar to prevent falling due to unstable balance.

8 OZ POPPER ASSEMBLY

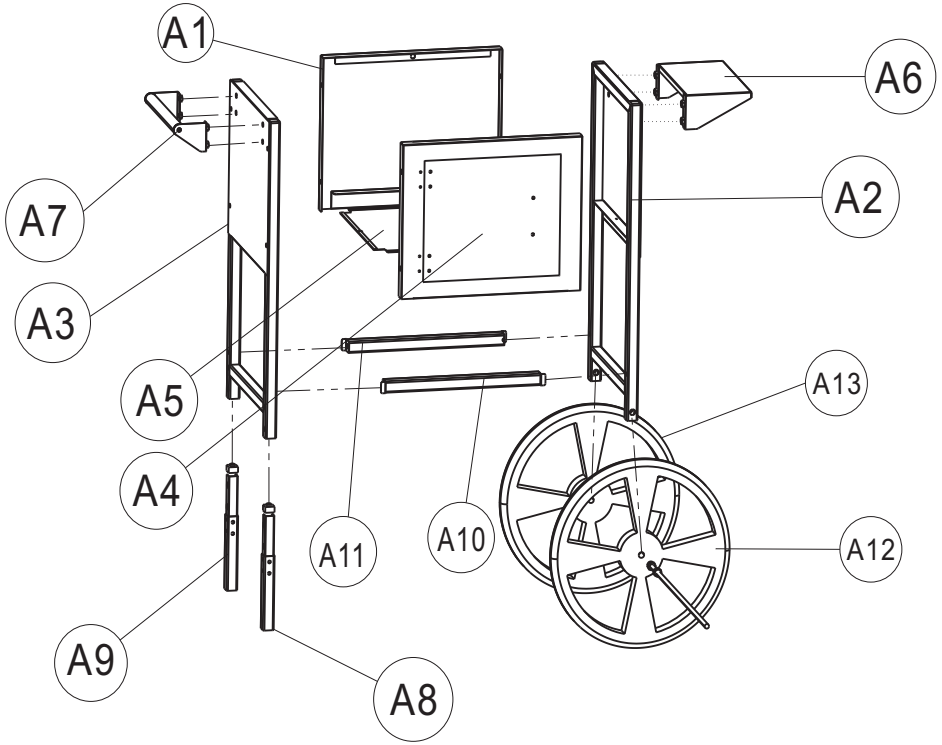

Install the pot







1.Insert the plug of the pot into the internal socket.
2.Clip both sides of the pot into the grooves of the side brackets. (If the brackets are deformed, installation may be difficult; simply straighten them.)
3.Installation complete.

OPERATING PROCEDURES

Please Note: If you are using your popper for the first time, clean the interior of the glass surfaces and wipe the inside of your popper with a clean damp sponge before heat is applied. Please follow these procedures for the best operating results and long machine life.

1. Place the corn popper on a dry, level surface. Protect from rain and other weather elements. Do not install near pool or water. Plug the unit into a suitable grounded electrical outlet. (Please check the electrical specs. Be sure that your power source matches the rating label specified next to the power cord).
2. The Main unit will have either 2 function switches or 3 function switches depending upon which model you have purchased. 8oz machines have 2 function switches.
3. Hook the stainless steel pot onto the hanger of the main unit. (***Note:*** Roller bar should be on the door side and also check to be sure that the gears between pot and ceiling are perfectly matched).
4. Plug in the power cord to the popcorn maker.
5. Switch the light and heater to ON (I & III) and then add a suitable amount of butter or oil (Fig. 1). While the amount is dependent upon your taste, please do not exceed 1/2oz.

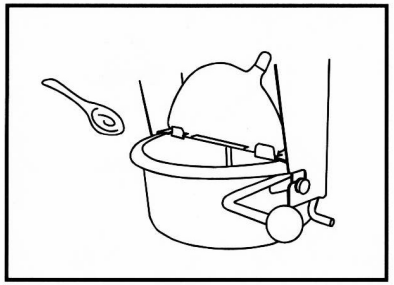


Fig.1

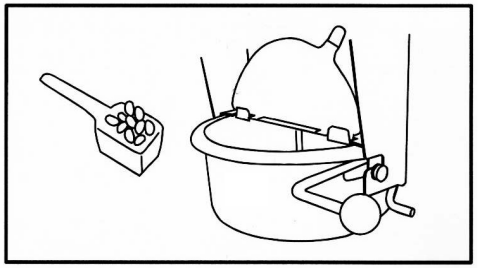


Fig.2

6. Preheat kettle for 3 to 4 minutes with oil added (until steam comes out from the pot). If using a pre-measured Gourmet Tri-Pak, cut off top of oil section on pouch and squeeze oil into pot.
   Please Note: DO NOT USE LIQUID SUGAR OR HONEY AS THIS MAY DAMAGE KETTLE AND CAUSE SMOKING AND/OR INJURY FROM HOT SUGAR.
7. Next pour popcorn and seasoning from Gourmet Tri-Pak pouch into pre-heated oil. (Fig, 2) If using bulk kernels, measure the amount of corn by using the measuring scoop provided. Use one scoop per batch. Open the lid and add the popcorn. ***Caution:*** Lid is hot; we recommend wearing oven mitts or potholders. Close lid.

Note: Stainless steel pots do not produce harmful substances and are healthier. However, it is important to avoid adding sugar to prevent the bottom from burning.