

ASSEMBLY INSTRUCTIONS


V-WD26-1399

PF056

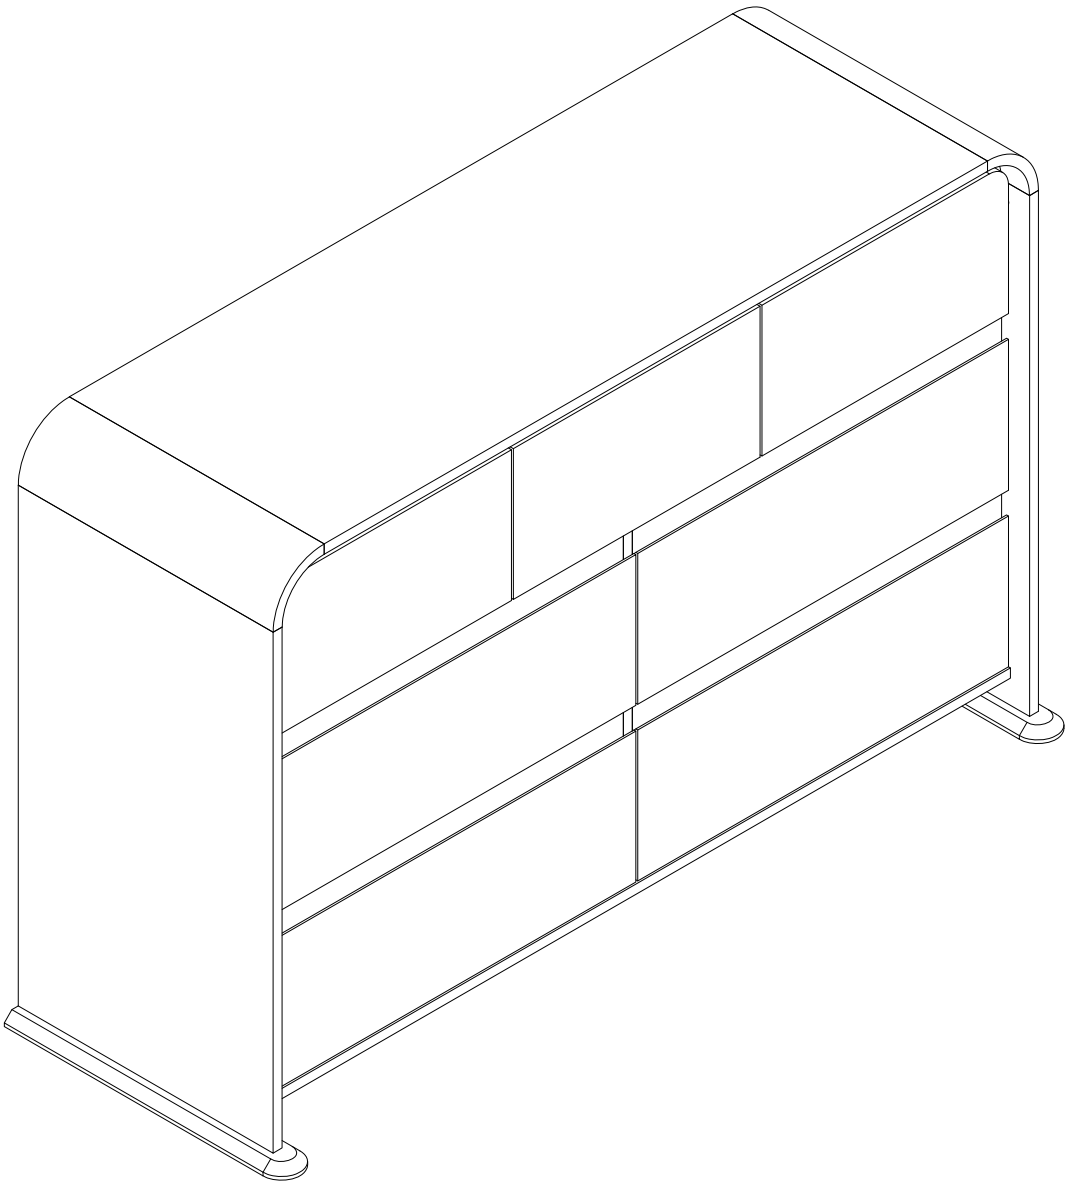


WARNING !

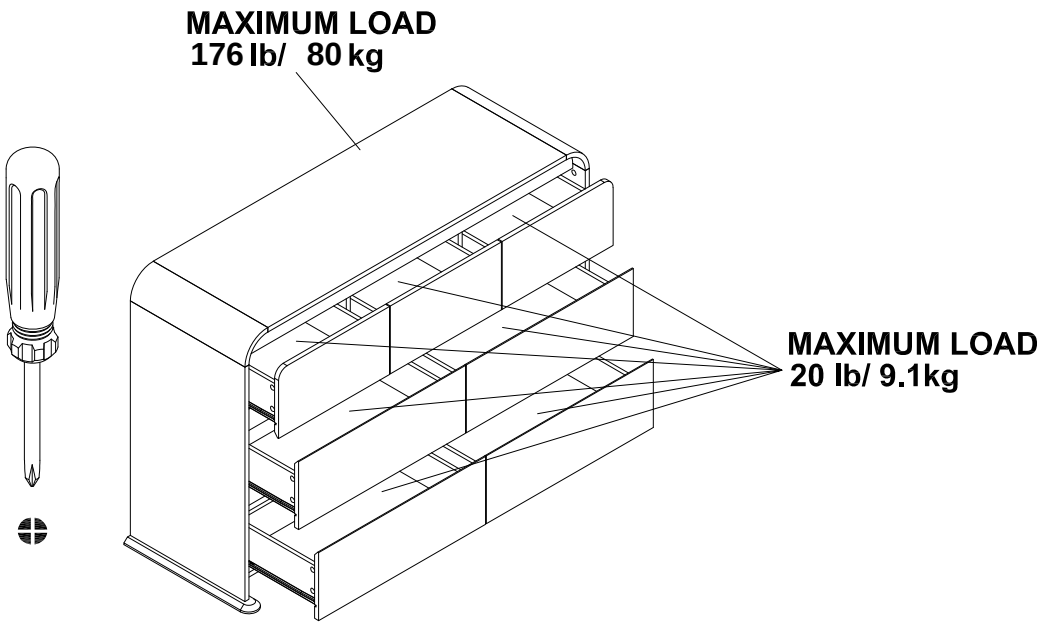

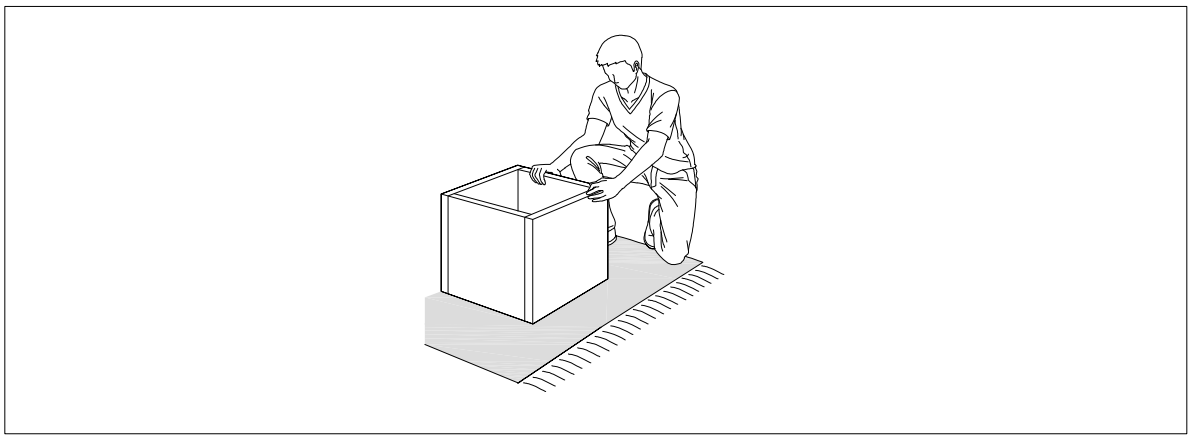

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

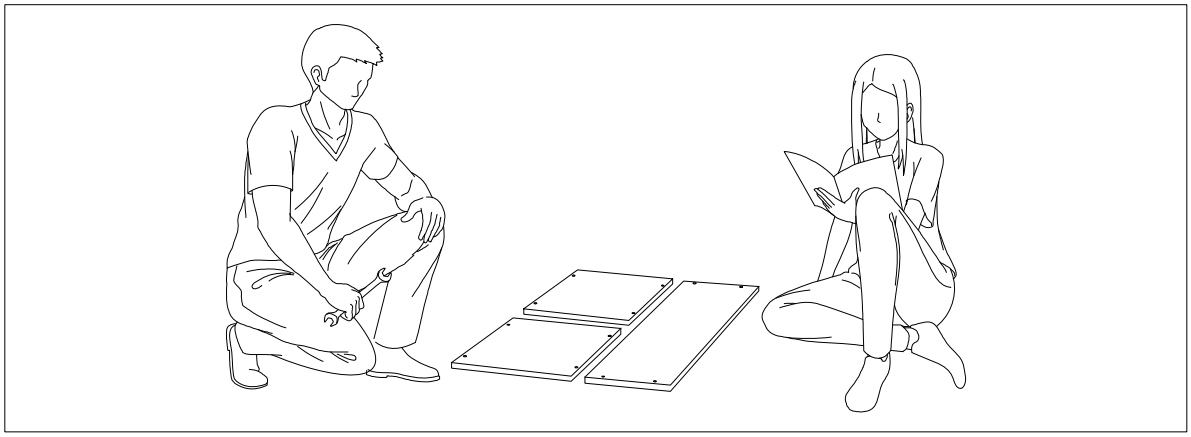


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.

PACKAGE CONTENT


Board Identification

Not actual size

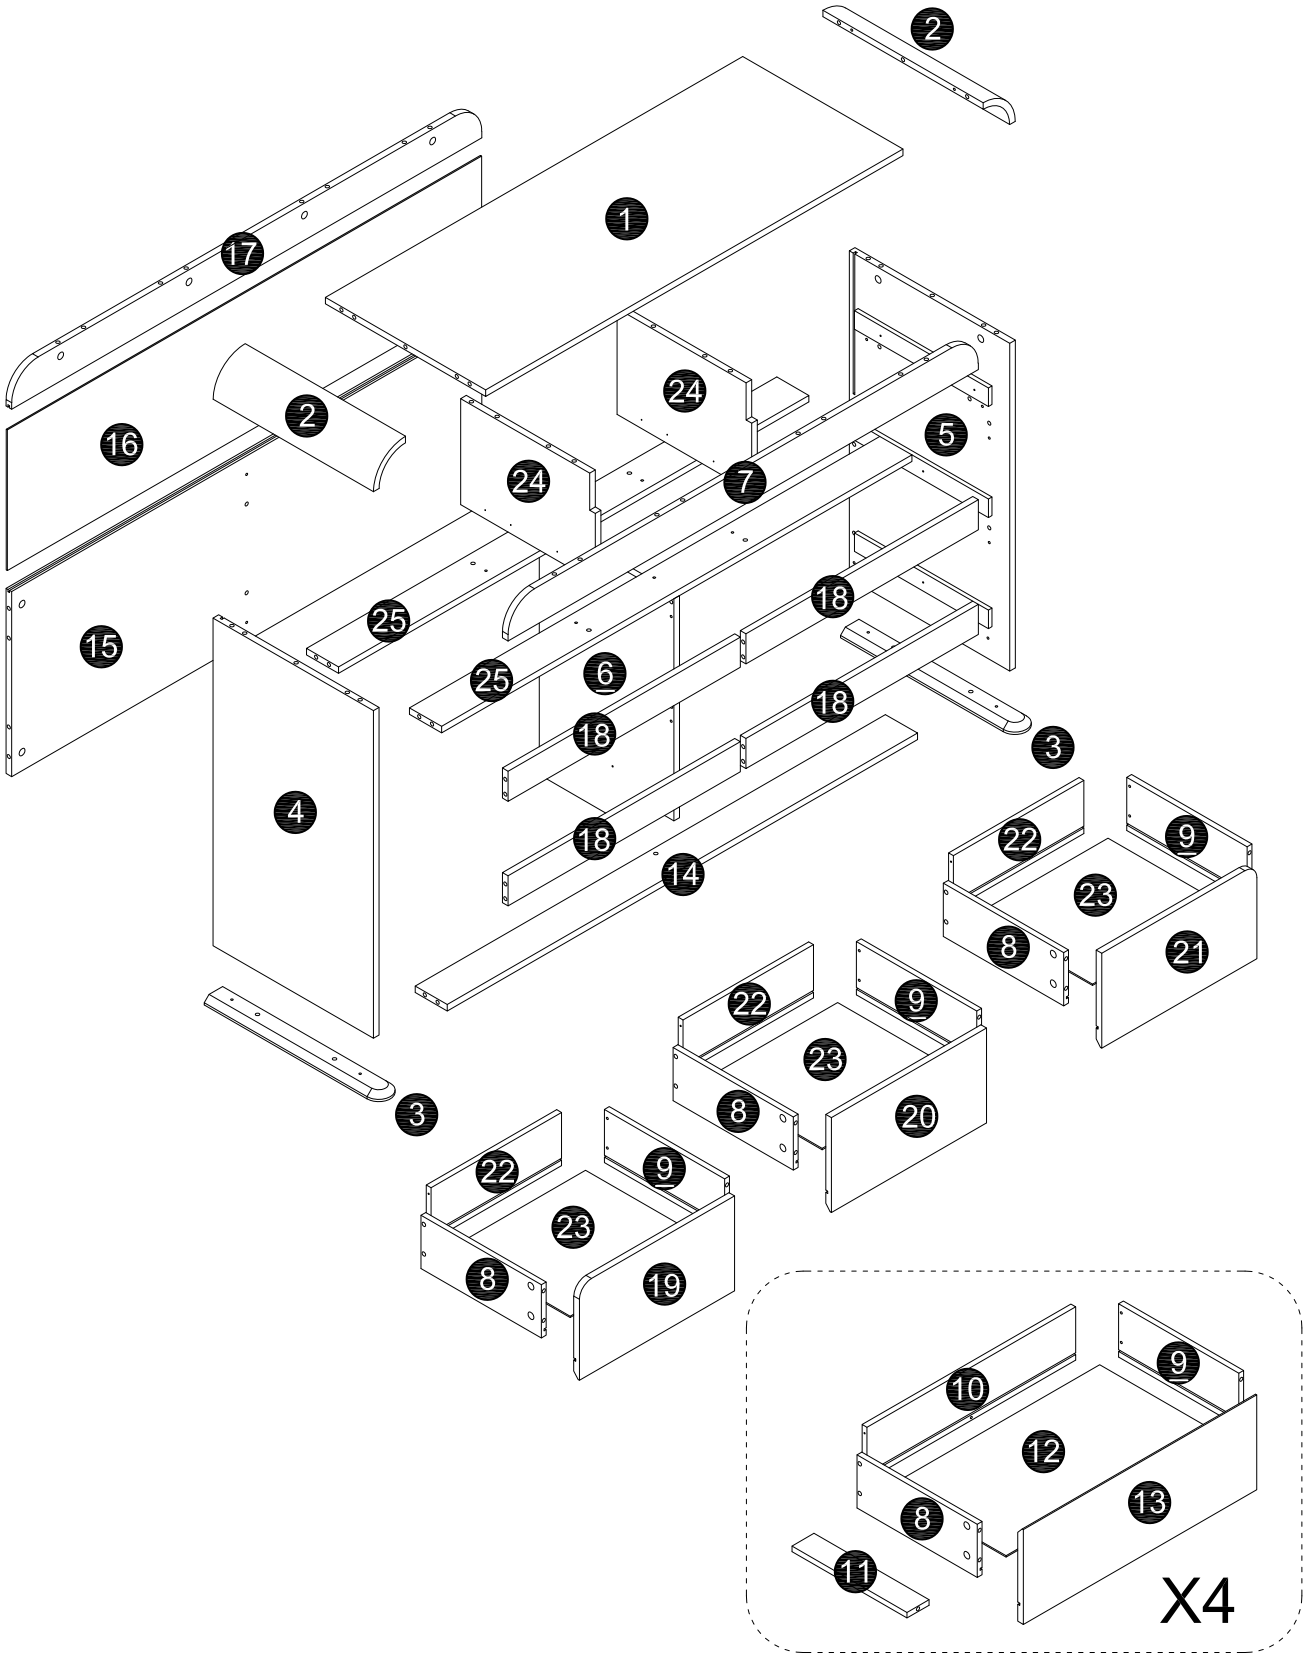


BOARD IDENTIFICATION


Not actual size

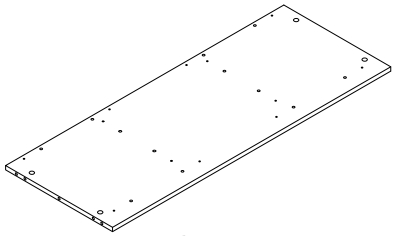


① x1




② x2




③ x2

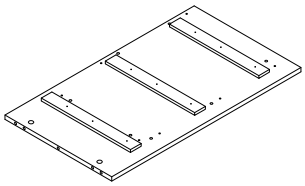


④ x1

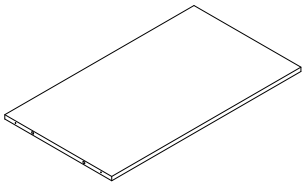


⑤ x1

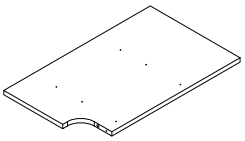


⑥ x1

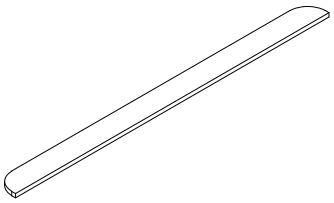


⑦ x1




⑧ x7




⑨ x7

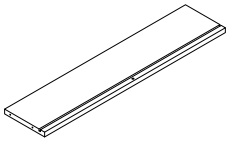


⑩ x4




⑪ x4

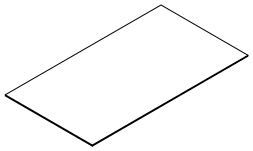


⑫ x4

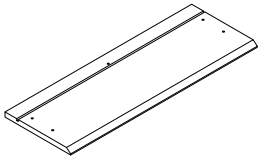


⑬ x4

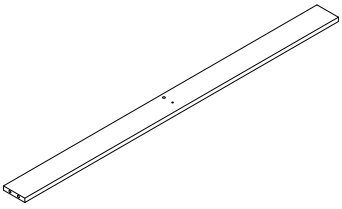

⑭ x1

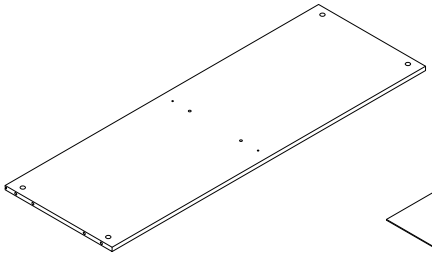


⑮ x1

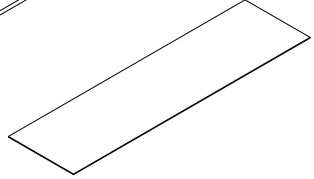


⑯ x1

BOARD IDENTIFICATION


Not actual size

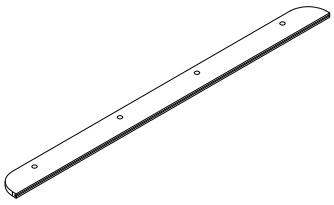


⑰ x1

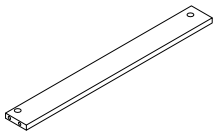


⑱ x4




⑲ x1

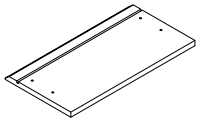


⑳ x1

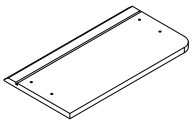


㉑ x1




㉒ x3

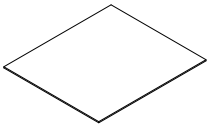

㉓ x3




㉔ x2

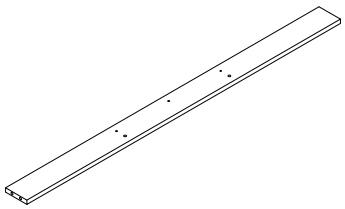


㉕ x2

HARDWARE LIST




A	x70+2



Ø15x9.5

B	x70+2




Ø6x30

C	x55+2




Ø4x32

D	x37+1




Ø3.5x12

E	x84+3




Ø3x15

F	x8

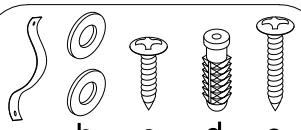

G	x2




H	x1




Ø5x48

I	x4+1




CL	x7



CR	x7




DL	x7



DR	x7


Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

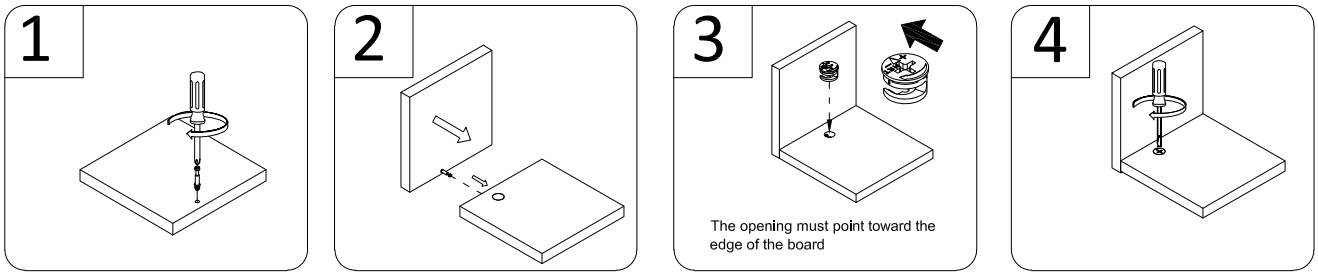



STEP 1

PF056





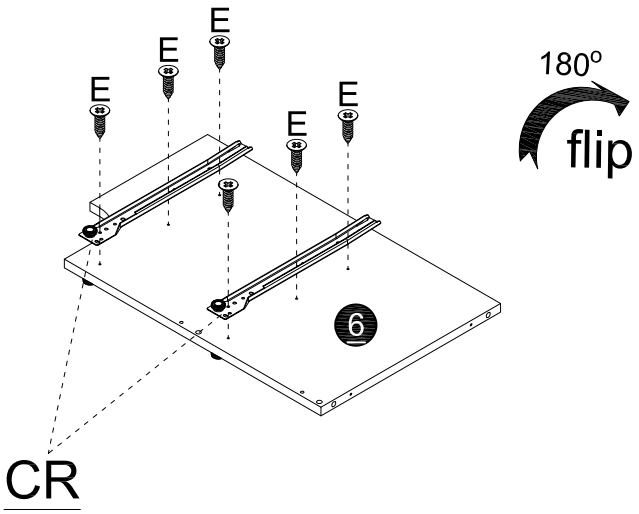

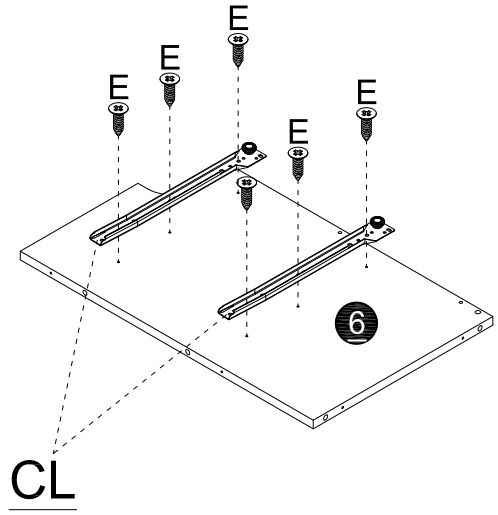




E	x 12





CL	x 2




CR	x 2


STEP 2

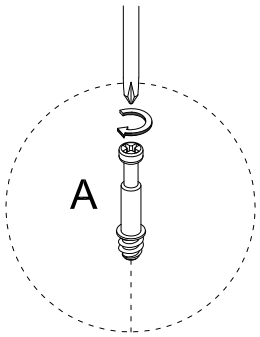

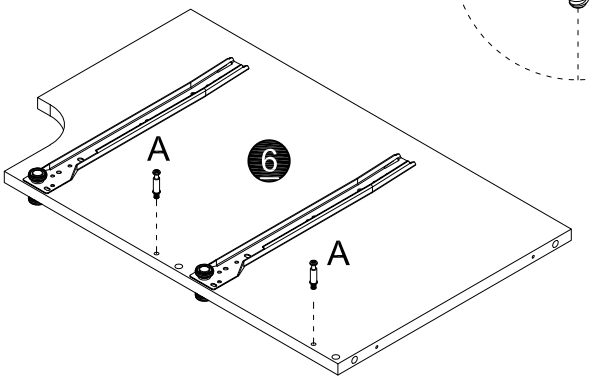

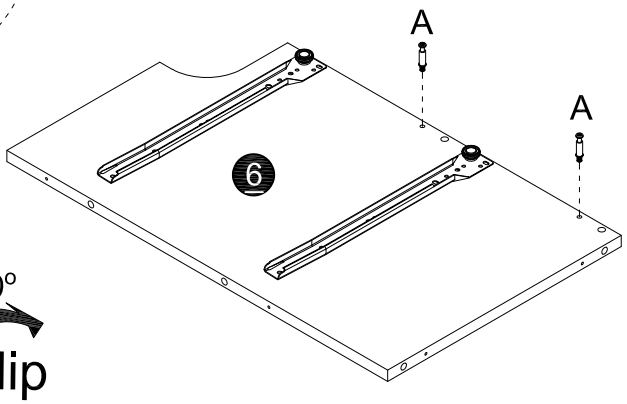


180°
flip



A	x 4

STEP 3

PF056

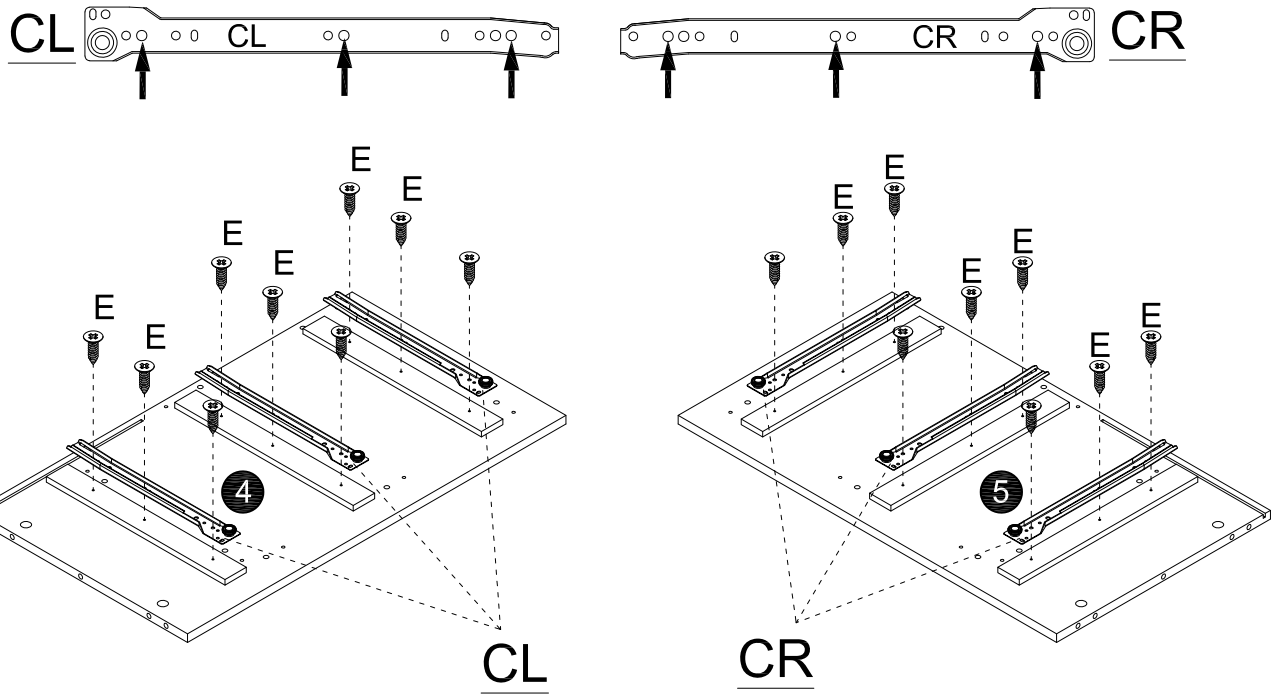


Ø3.5x12	
E	x 18

CL	
CL	x 3

CR	
CR	x 3


STEP 4

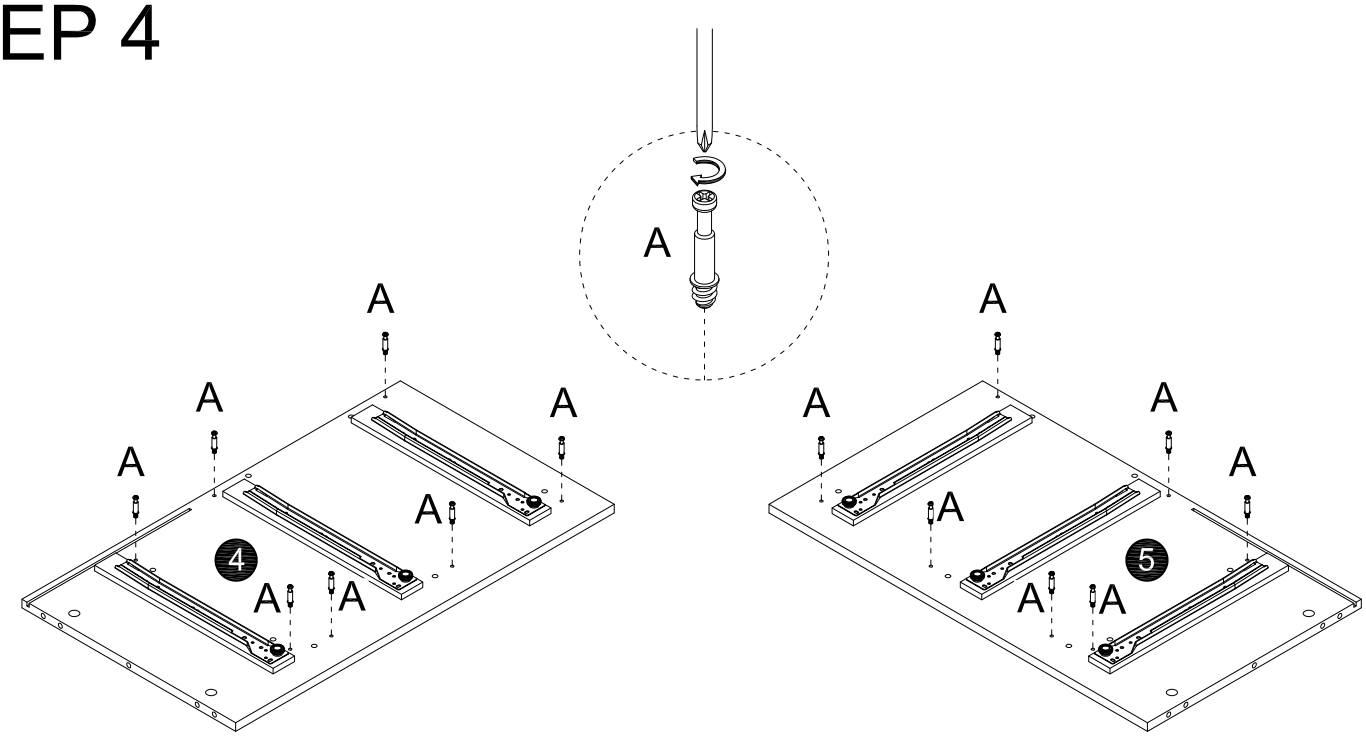


A	
A	x 14

STEP 5

PF056



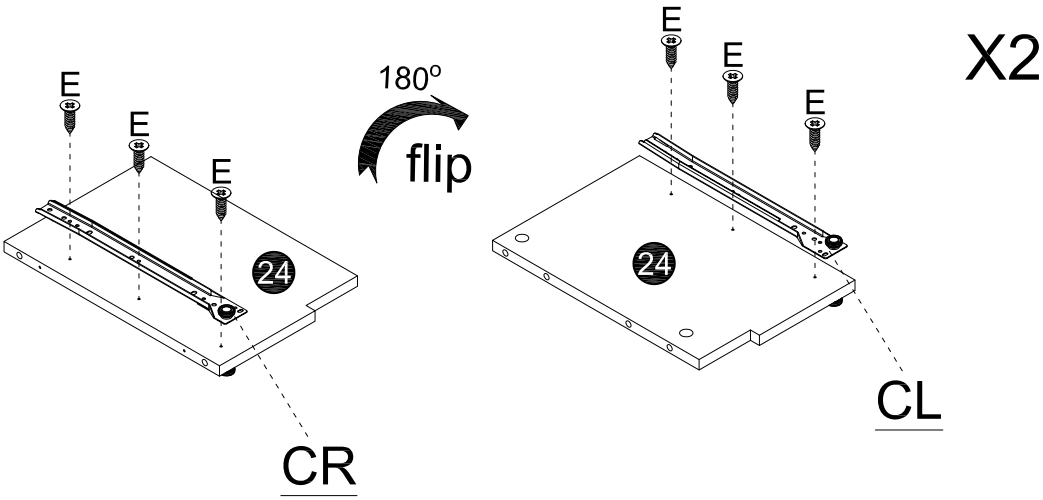


Ø3.5x12	
E	x 12

CL	
CL	x 2

CR	
CR	x 2

STEP 6

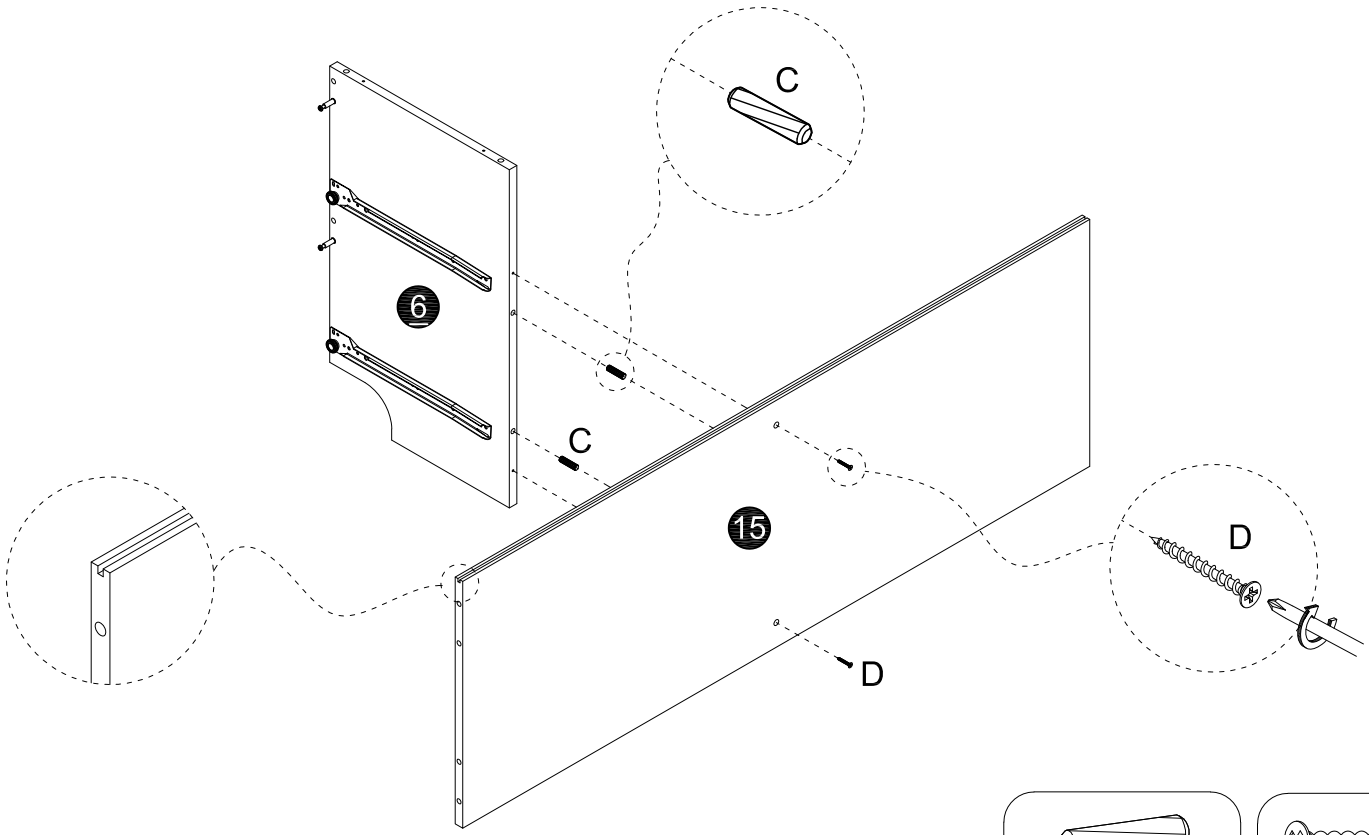


Ø6x30	
C	x 2

Ø4x32	
D	x 2

STEP 7


PF056

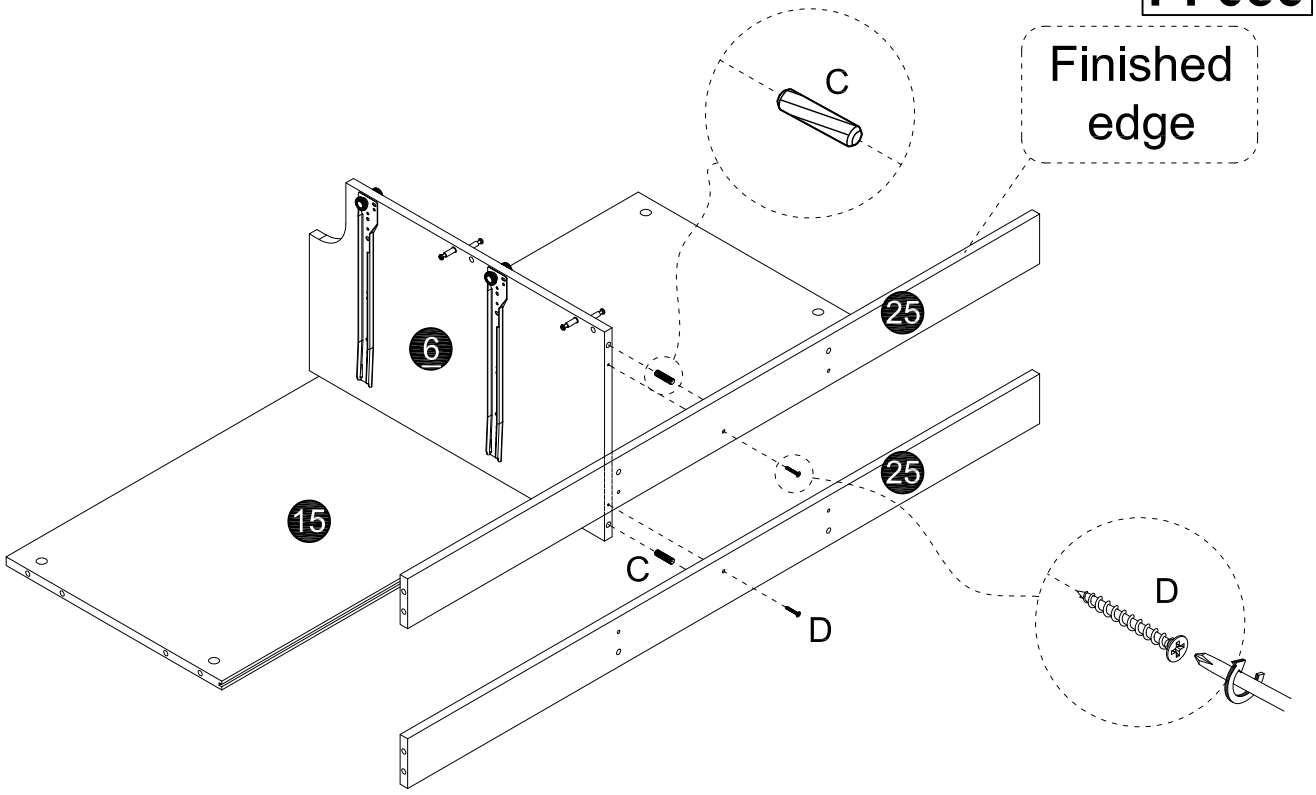

Ø6x30	
C	x 2

Ø4x32	
D	x 2

STEP 8

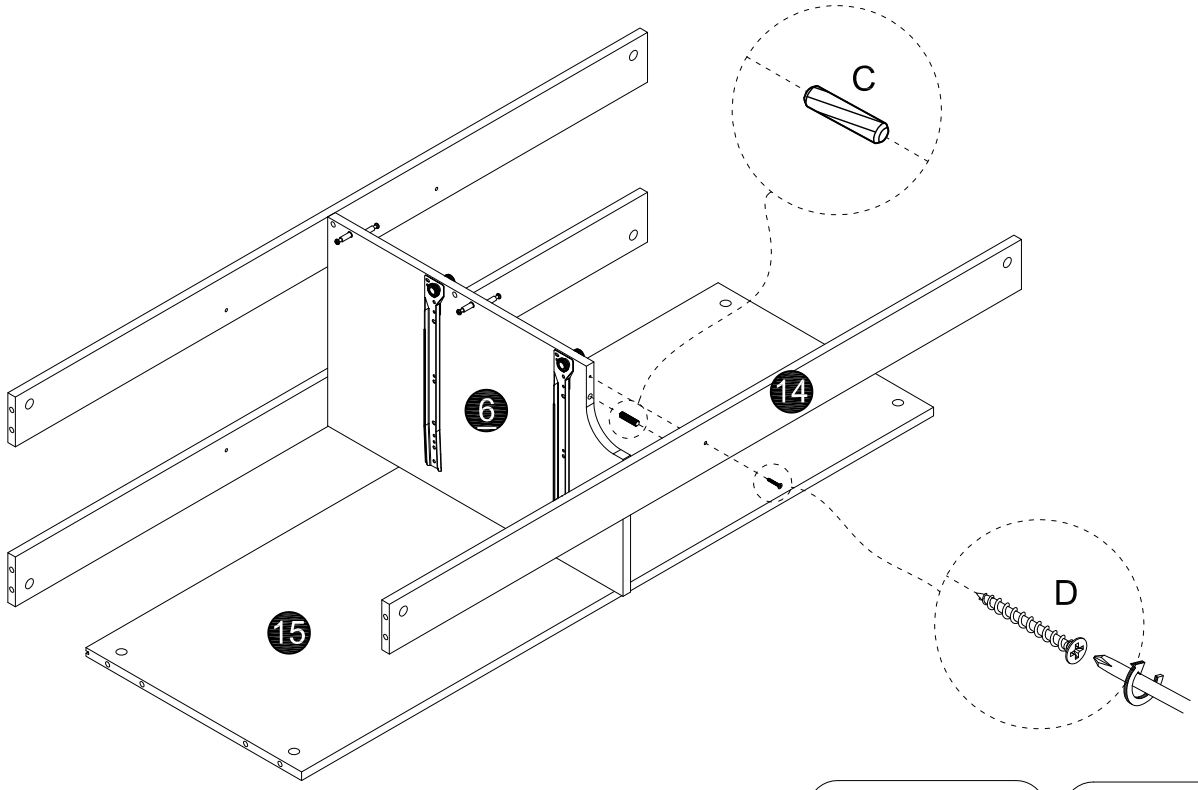


Ø6x30	
C	x 1

Ø4x32	
D	x 1

STEP 9


PF056

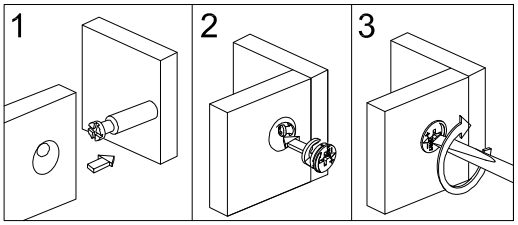


Ø6x30	
C	x 2

Ø15x9.5	
B	x 2

STEP 10

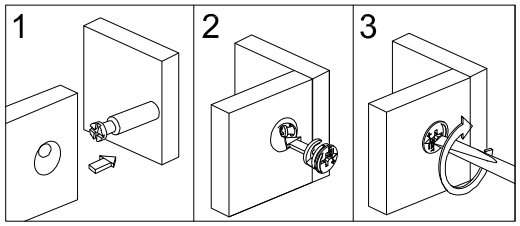

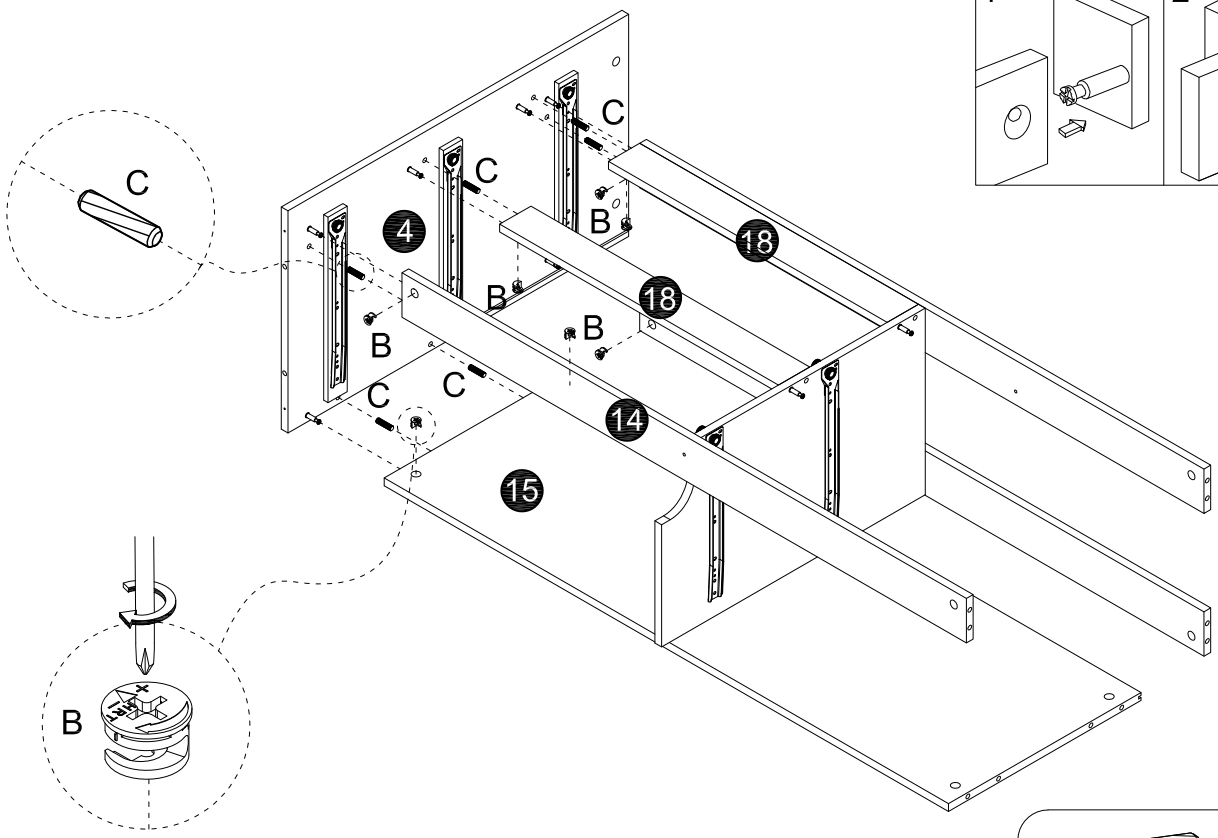


Ø6x30	
C	x 7

Ø15x9.5	
B	x 7

STEP 11


PF056

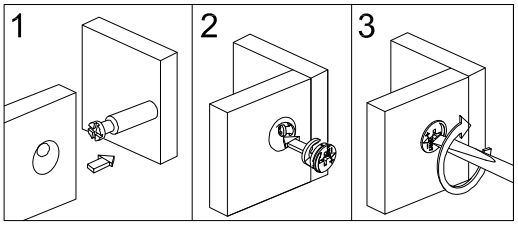


Ø6x30	
C	x 2

Ø15x9.5	
B	x 2

STEP 12

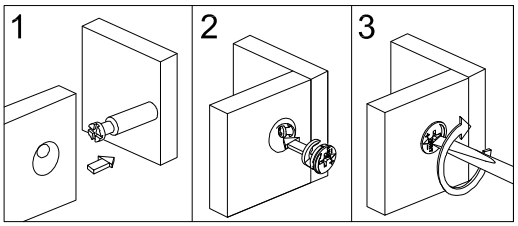

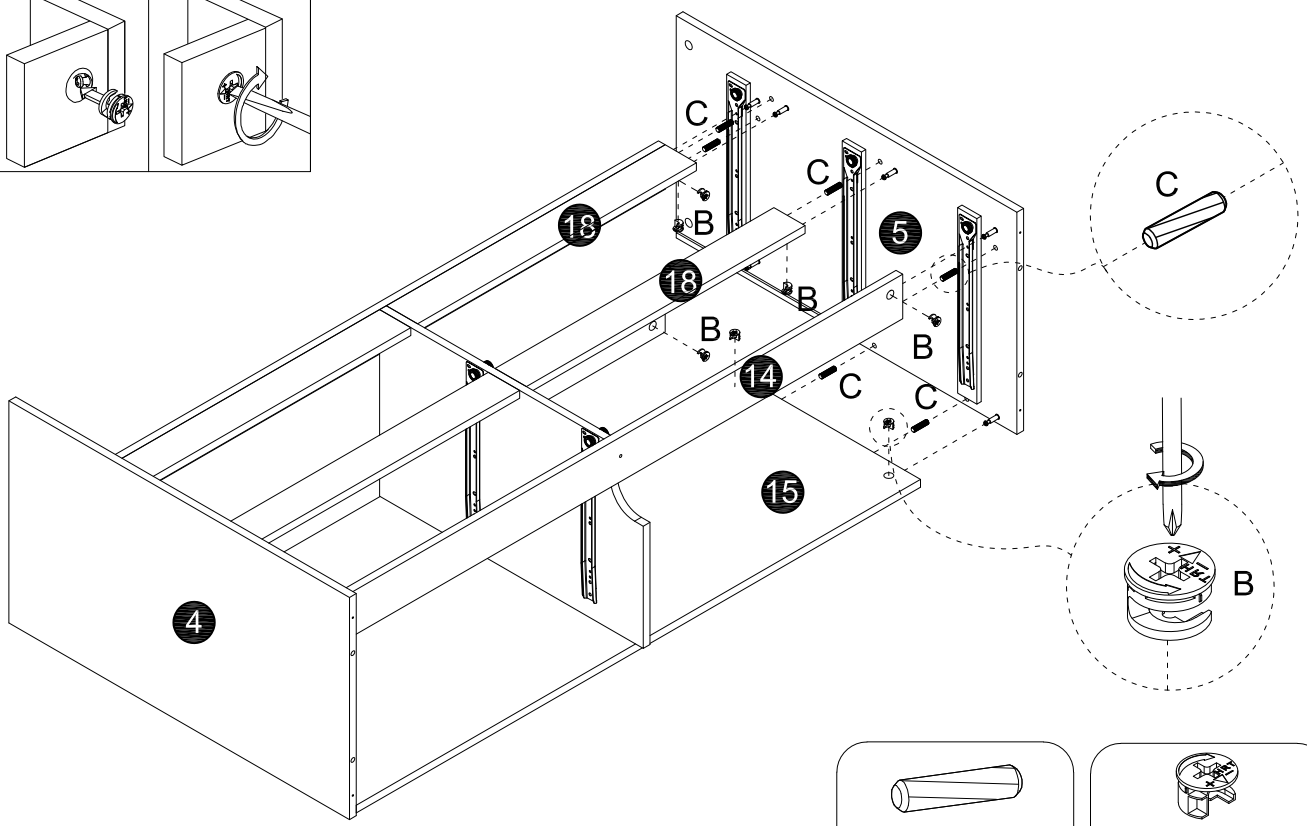



Ø6x30	
C	x 7


Ø15x9.5	
B	x 7

STEP 13


PF056

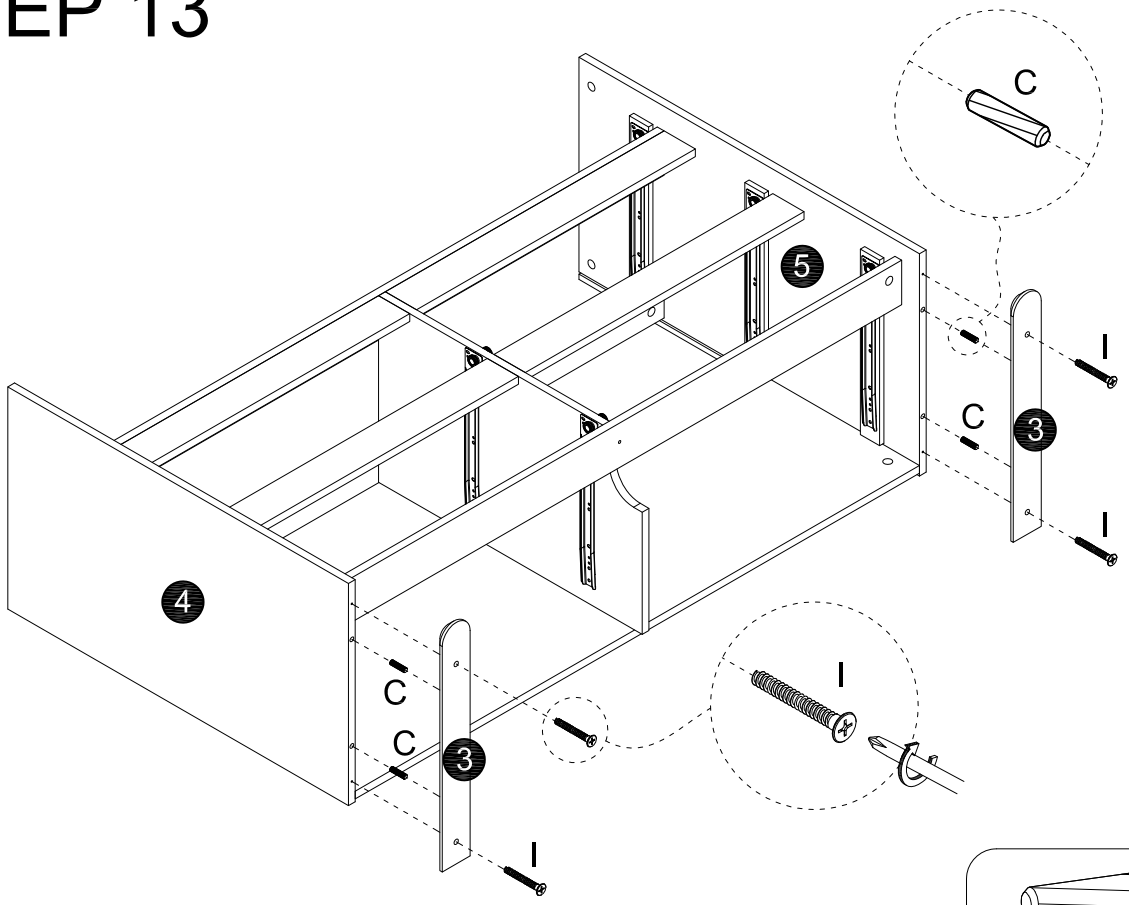


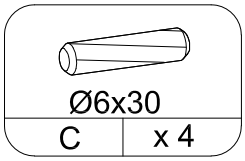


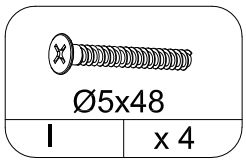

STEP 14

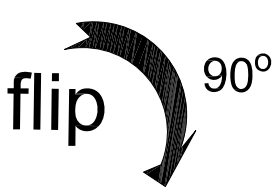


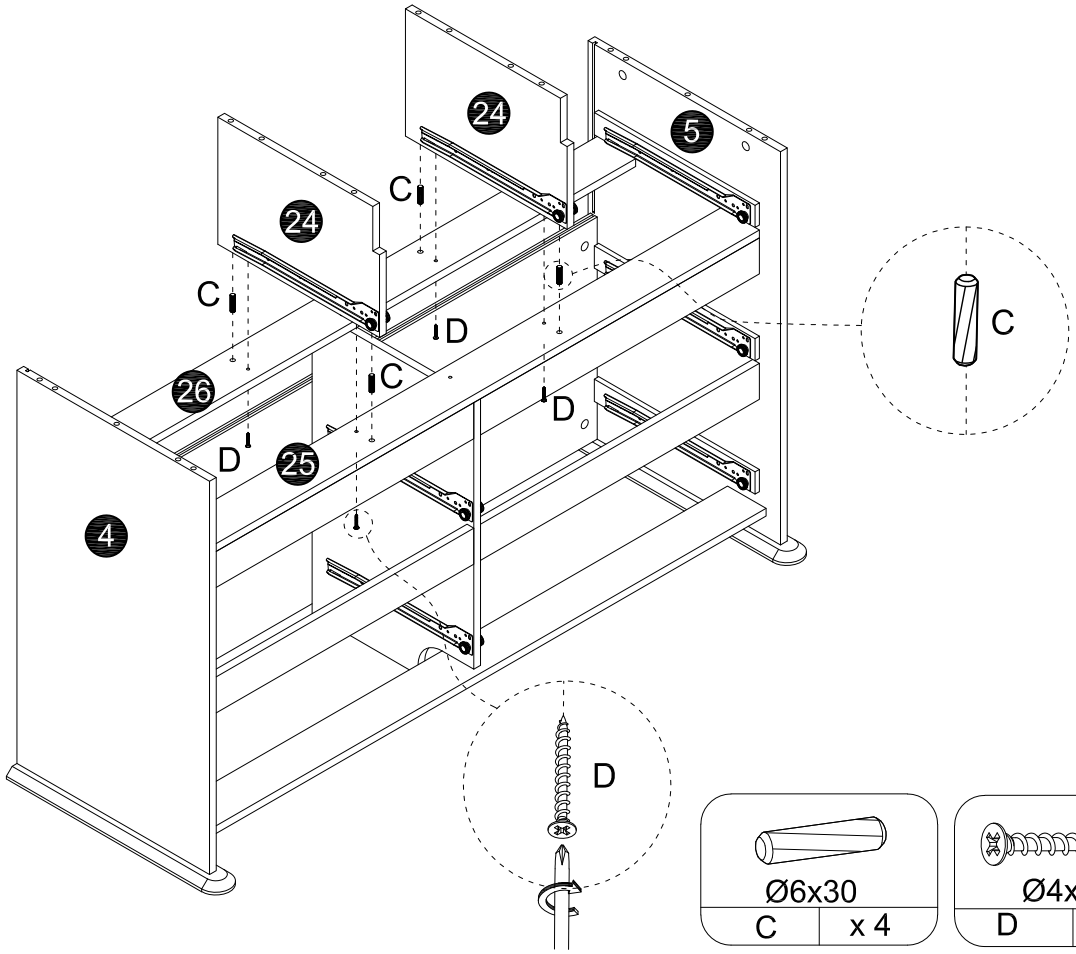

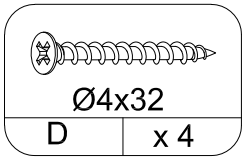



STEP 15

PF056

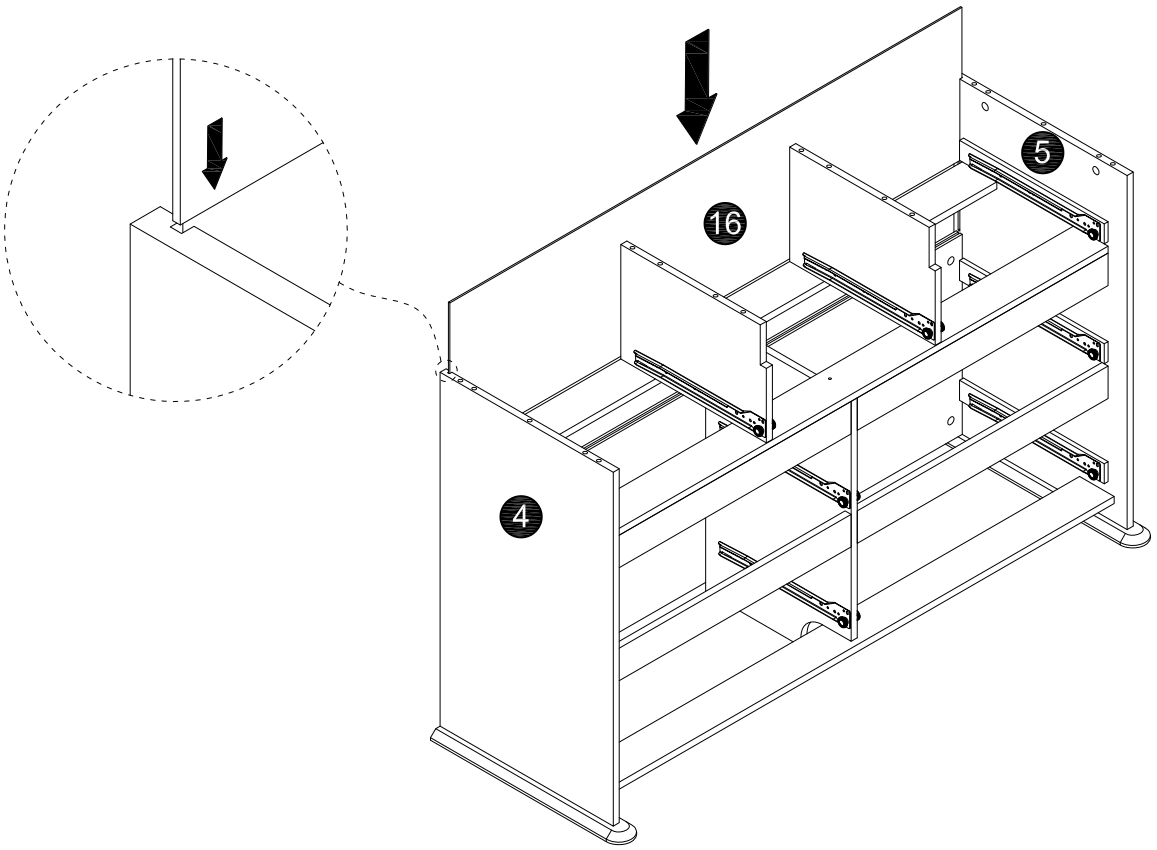


STEP 16

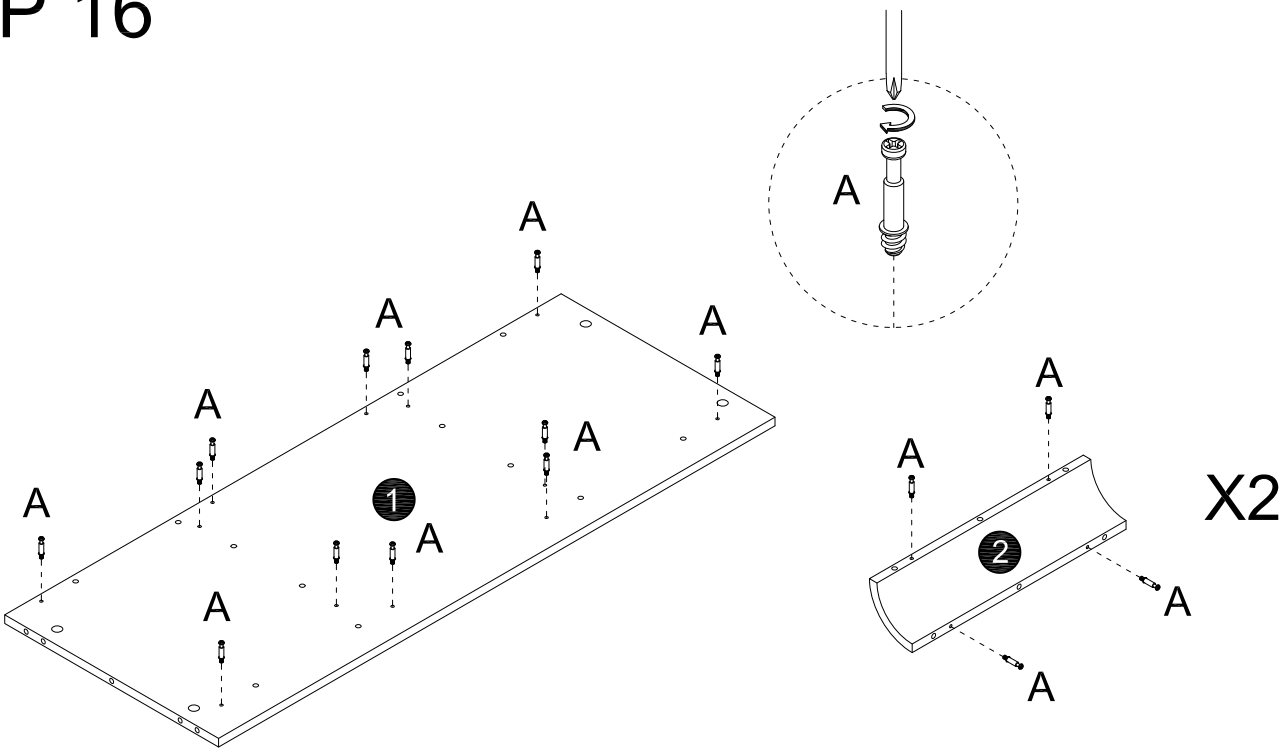


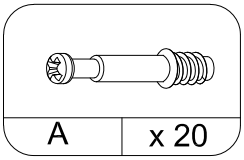


STEP 17


PF056

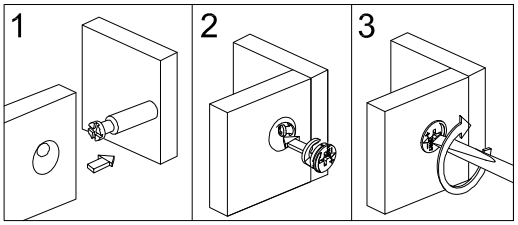


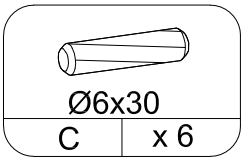


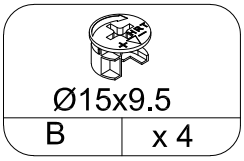

STEP 18

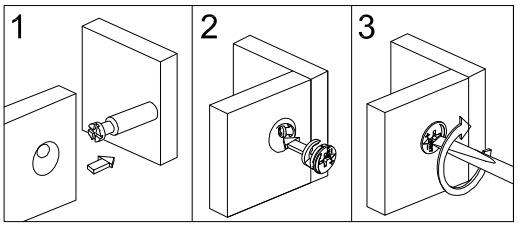


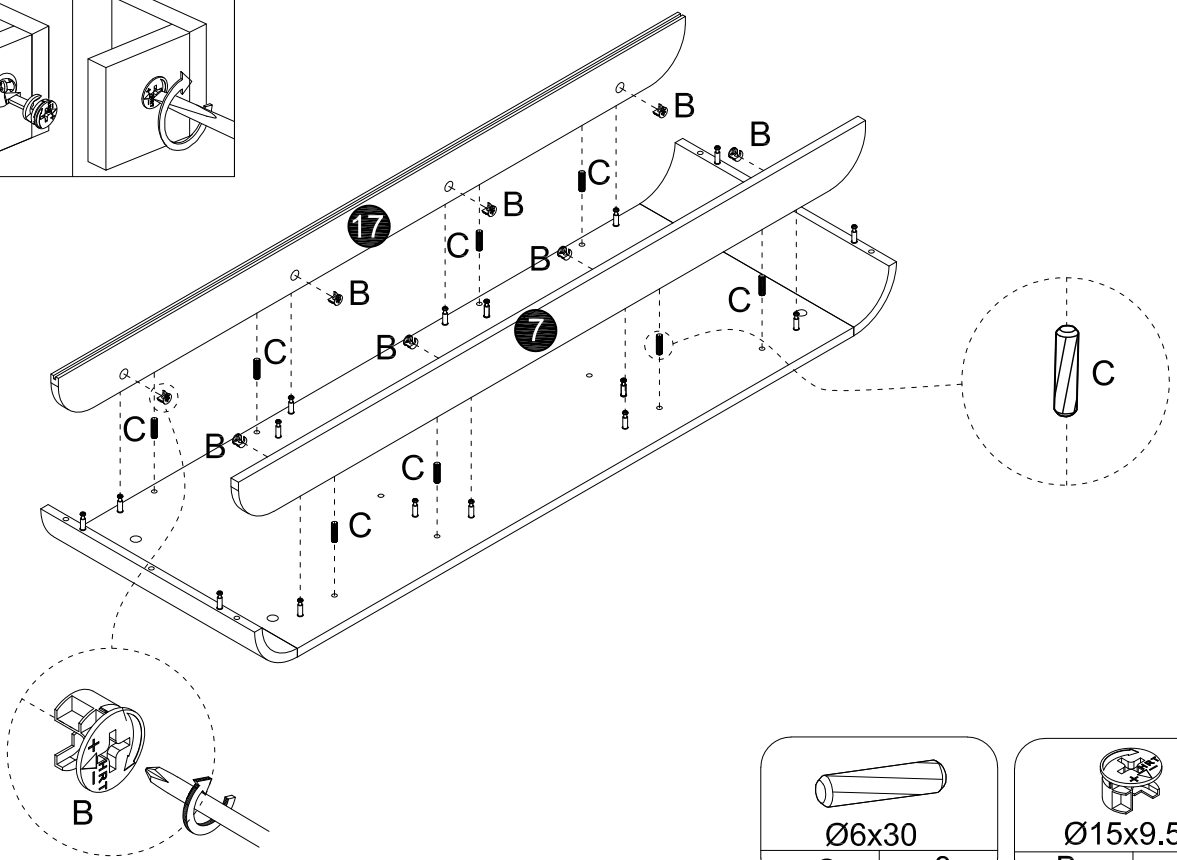


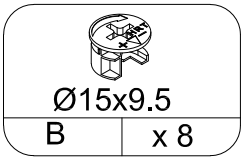

STEP 19

PF056

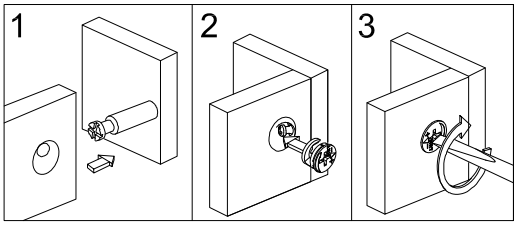


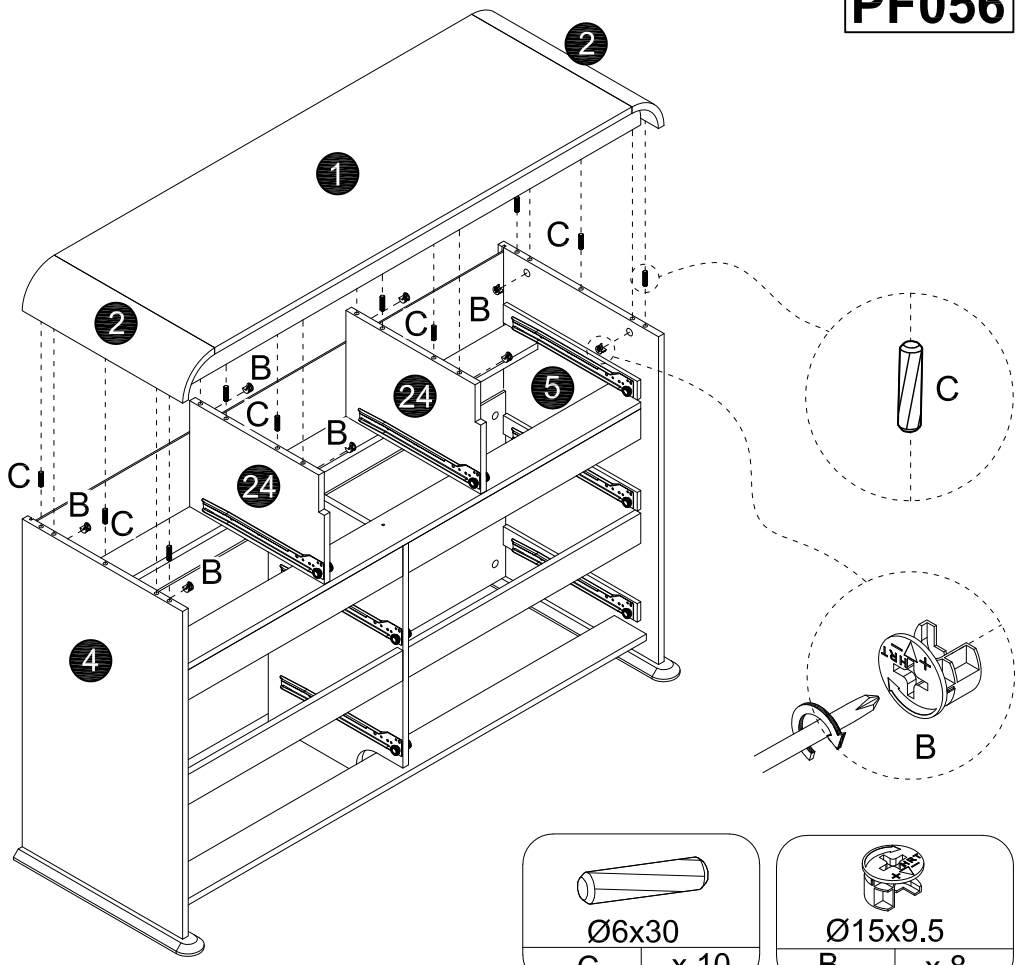

Ø6x30	
C	x 10

Ø15x9.5	
B	x 8


STEP 20

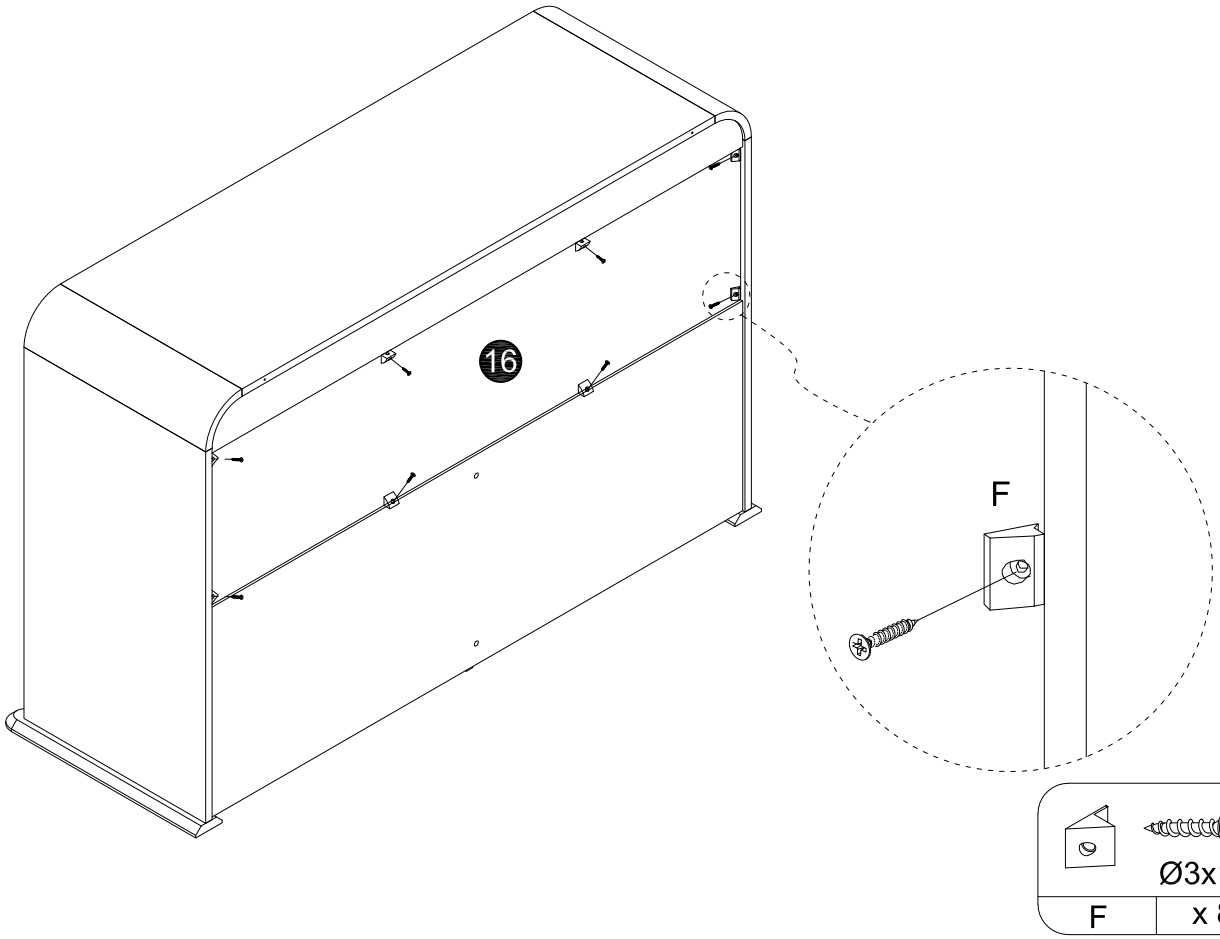


Ø3x17	
F	x 8

STEP 21

PF056

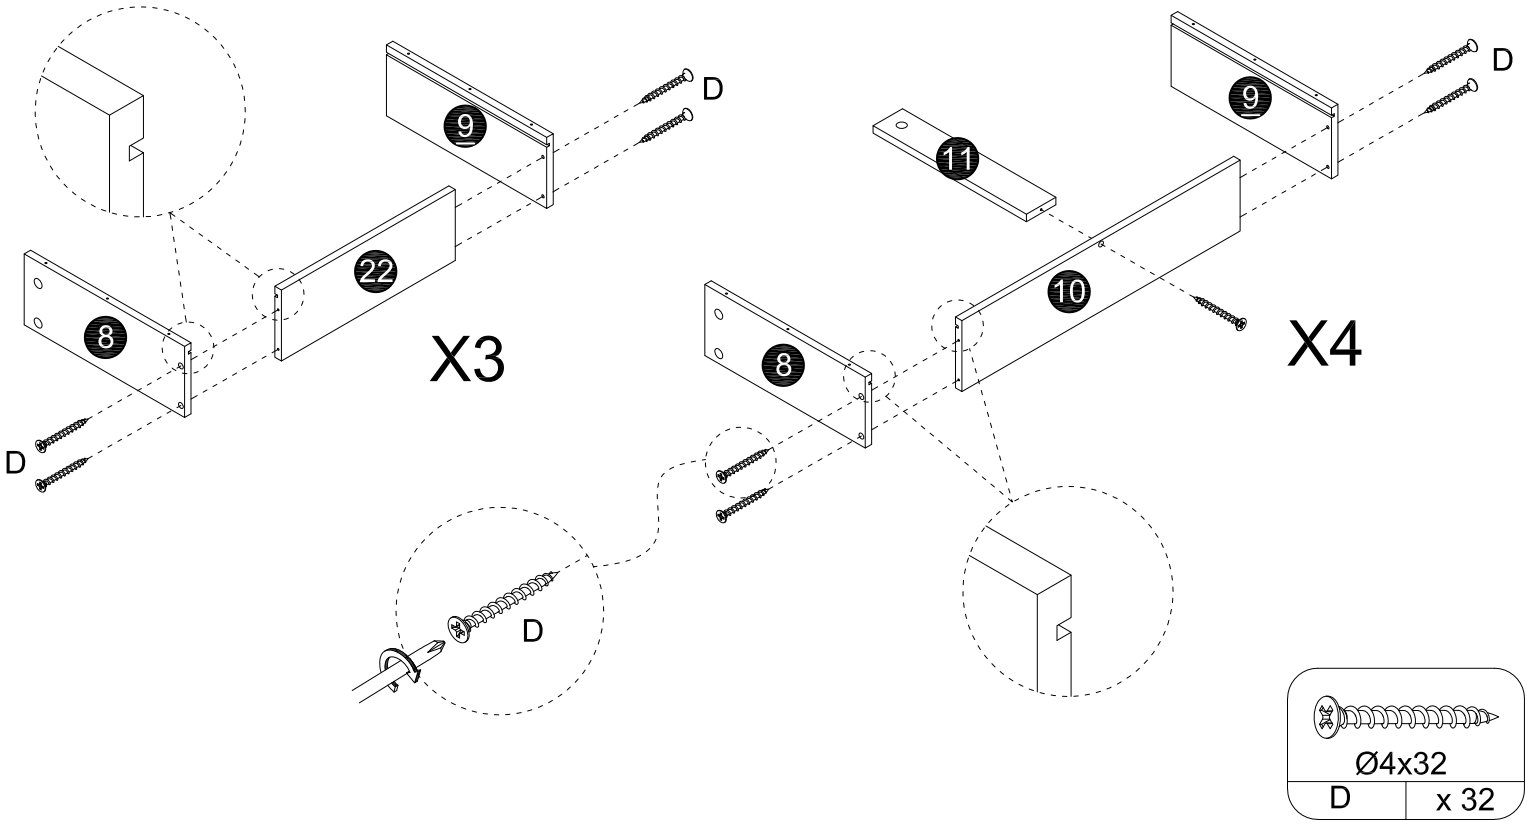



STEP 22

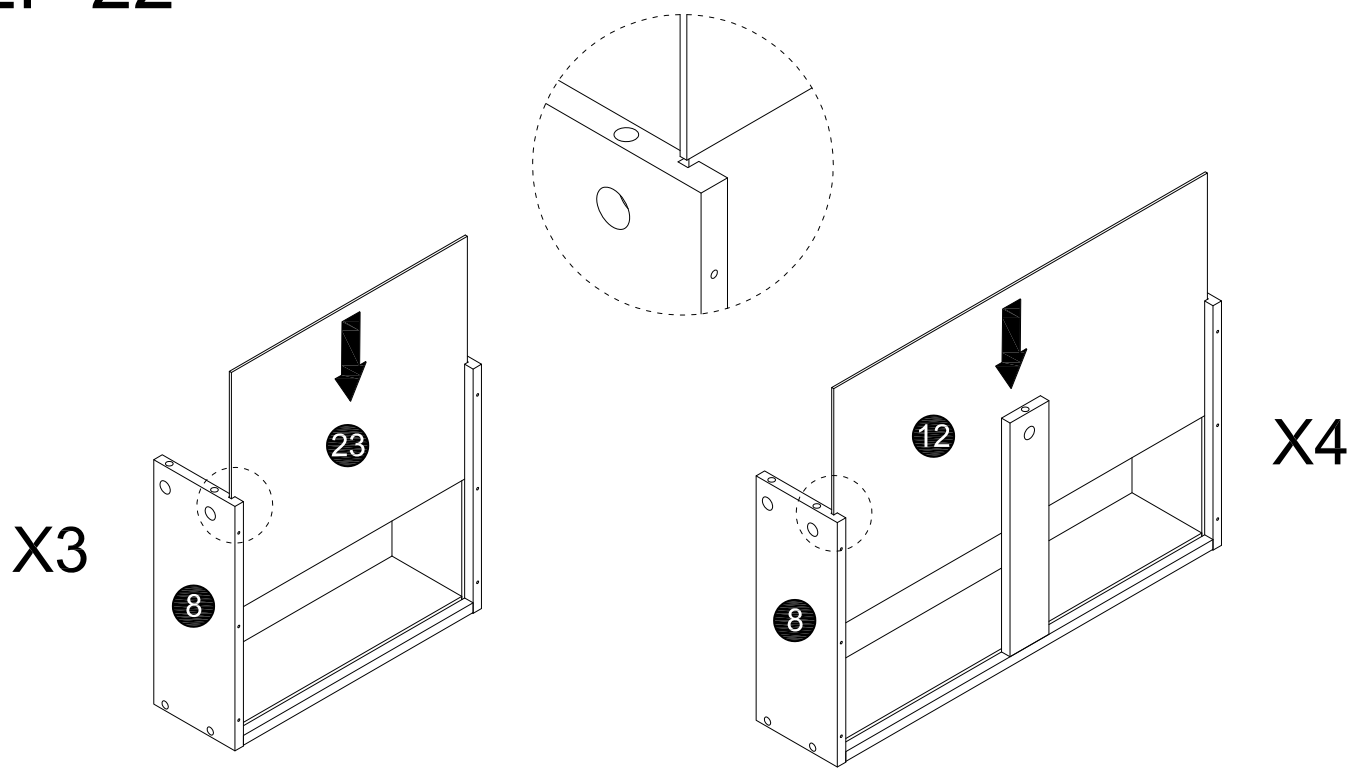


STEP 23


PF056

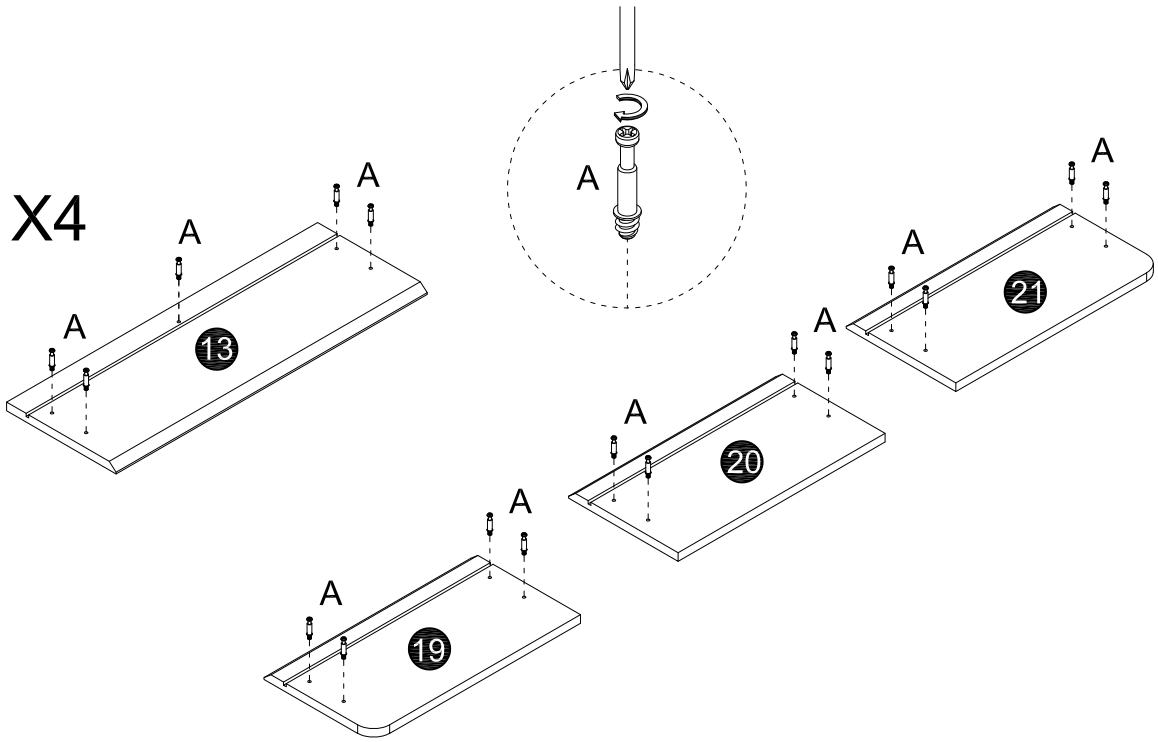

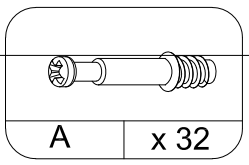


STEP 24

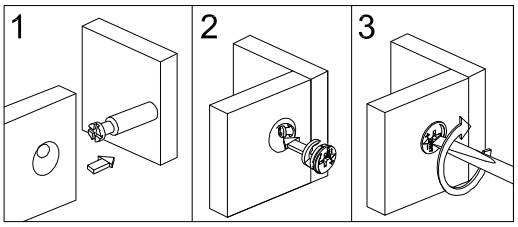


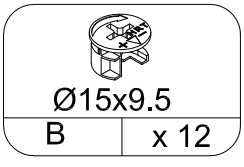


STEP 25


PF056

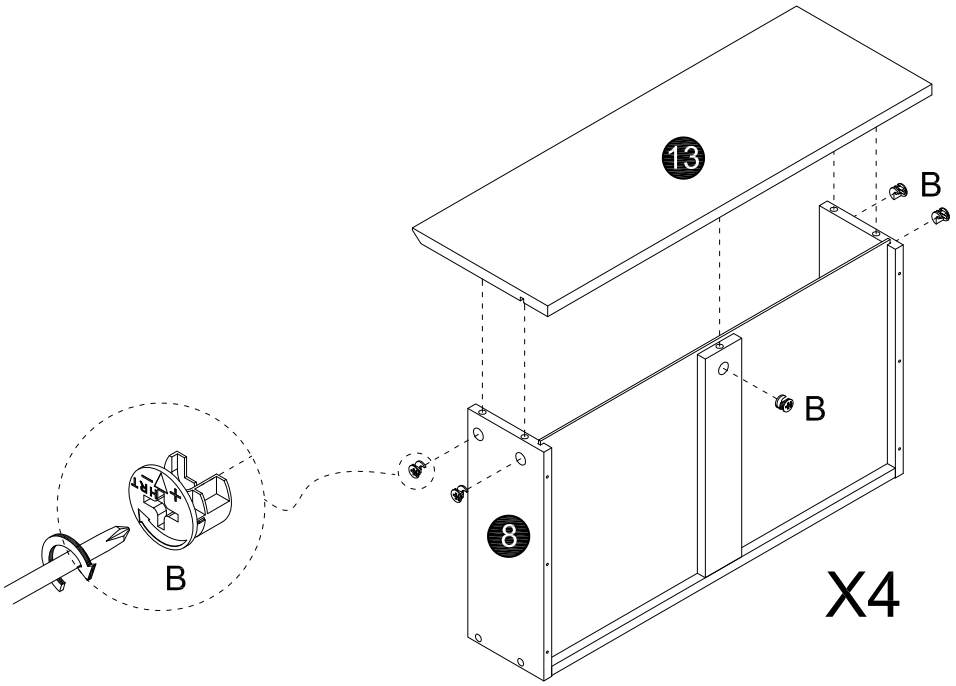

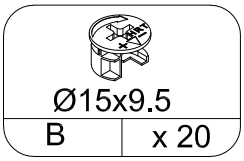


STEP 26

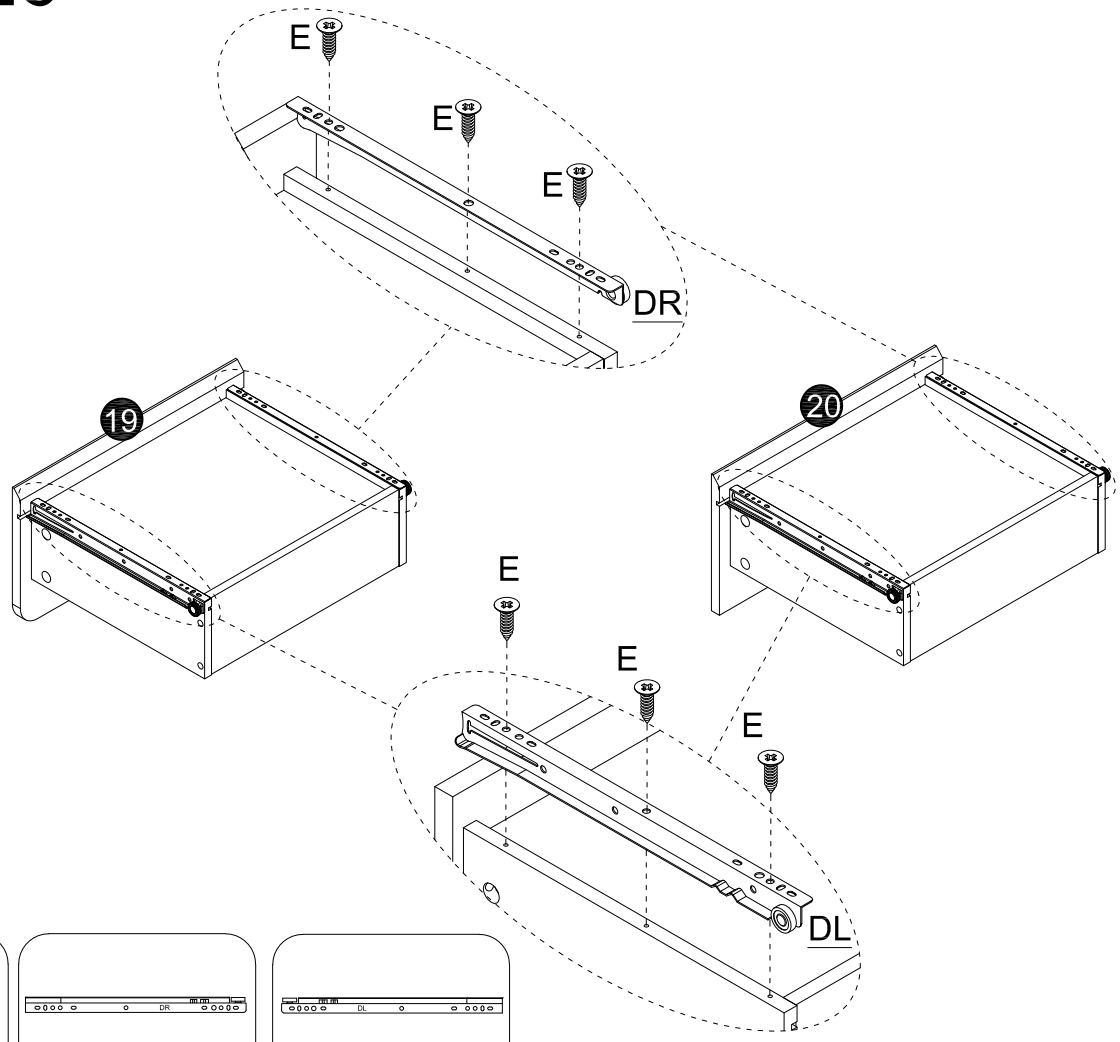

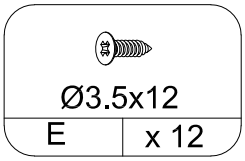


STEP 27

PF056

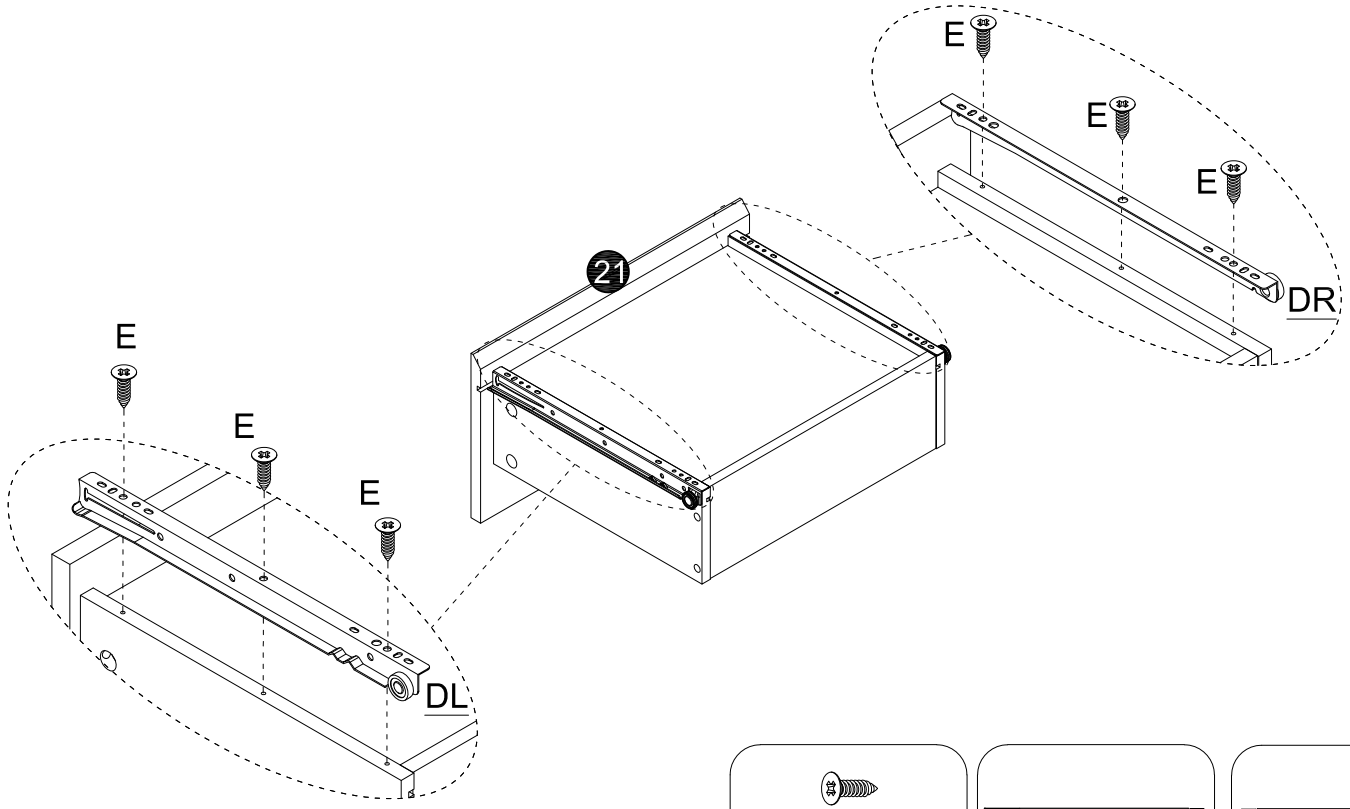

Ø3.5x12		DR		DL	
E	x 6	DR	x 1	DL	x 1


STEP 28

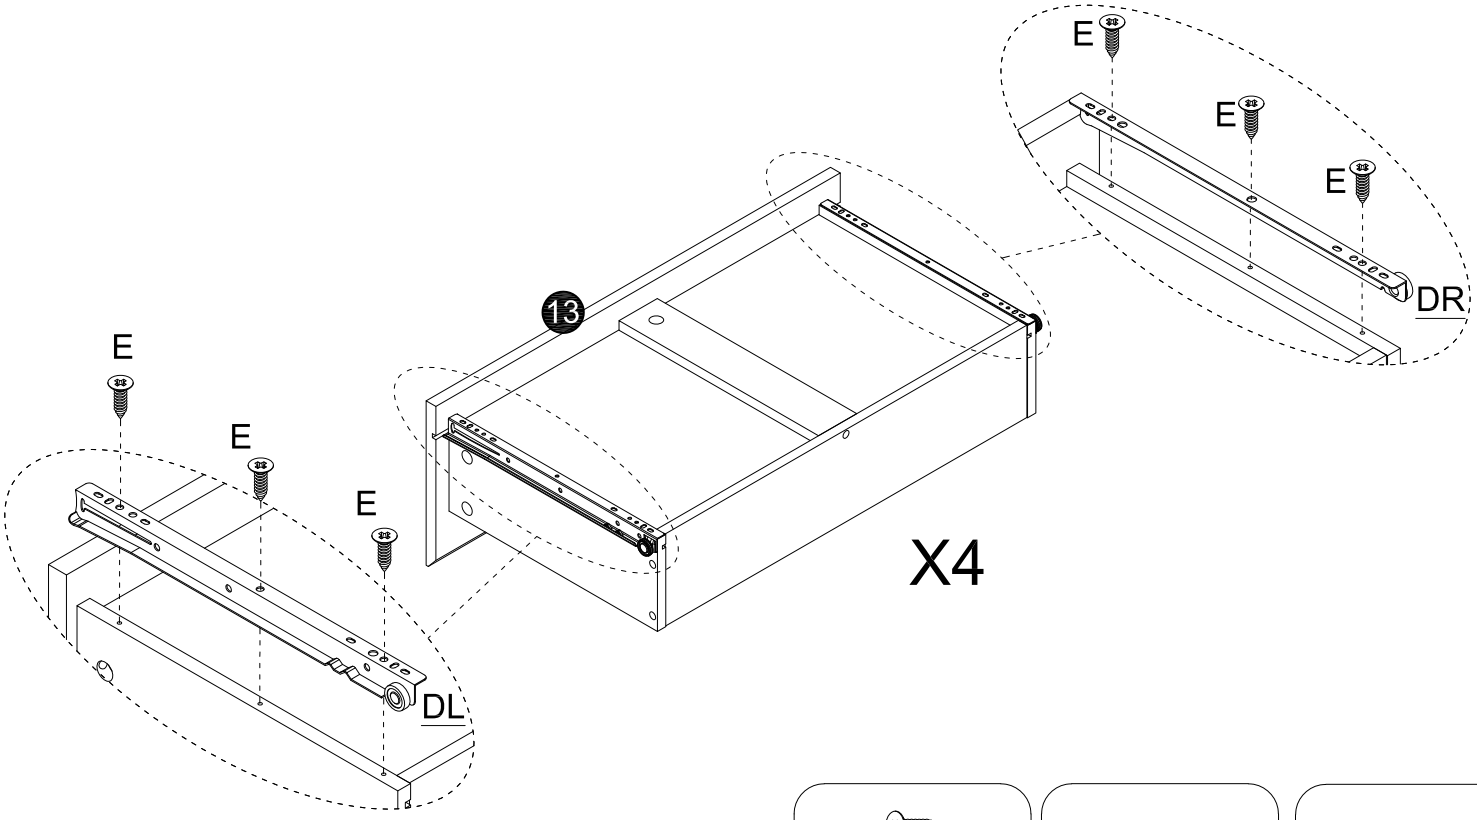


Ø3.5x12		DR		DL	
E	x 24	DR	x 4	DL	x 4

STEP 29


PF056

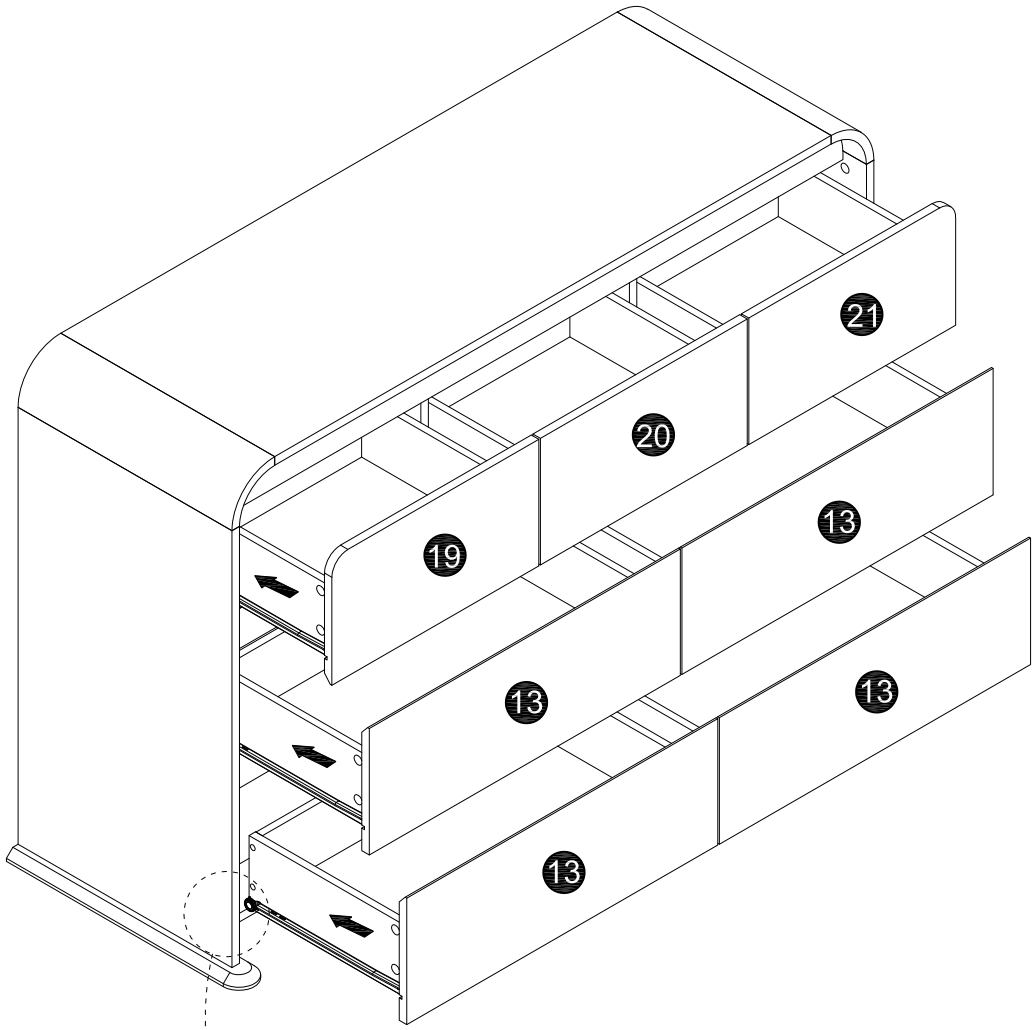


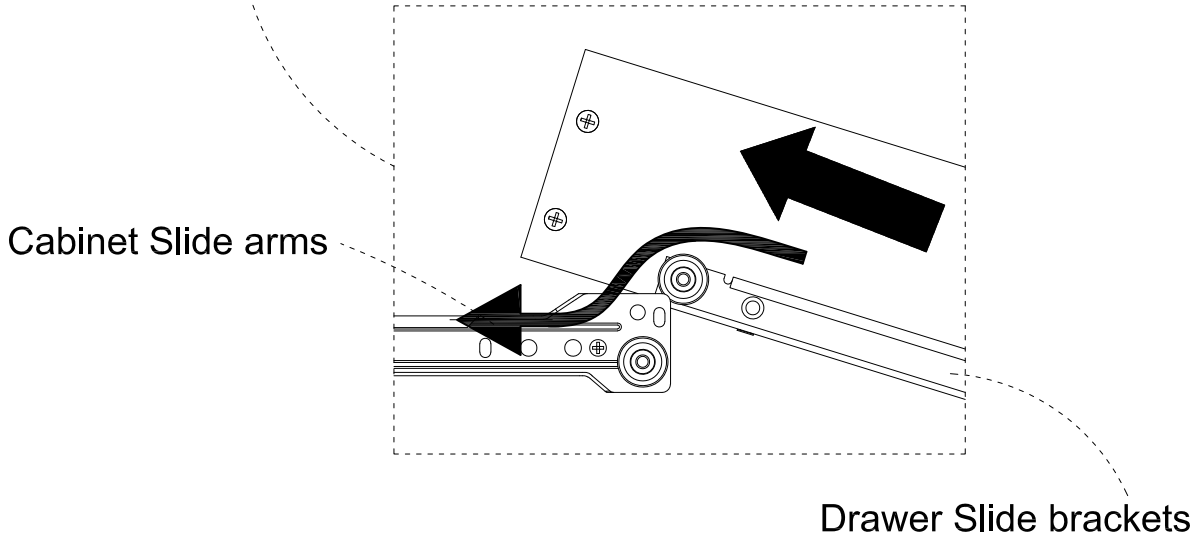

STEP 30


PF056

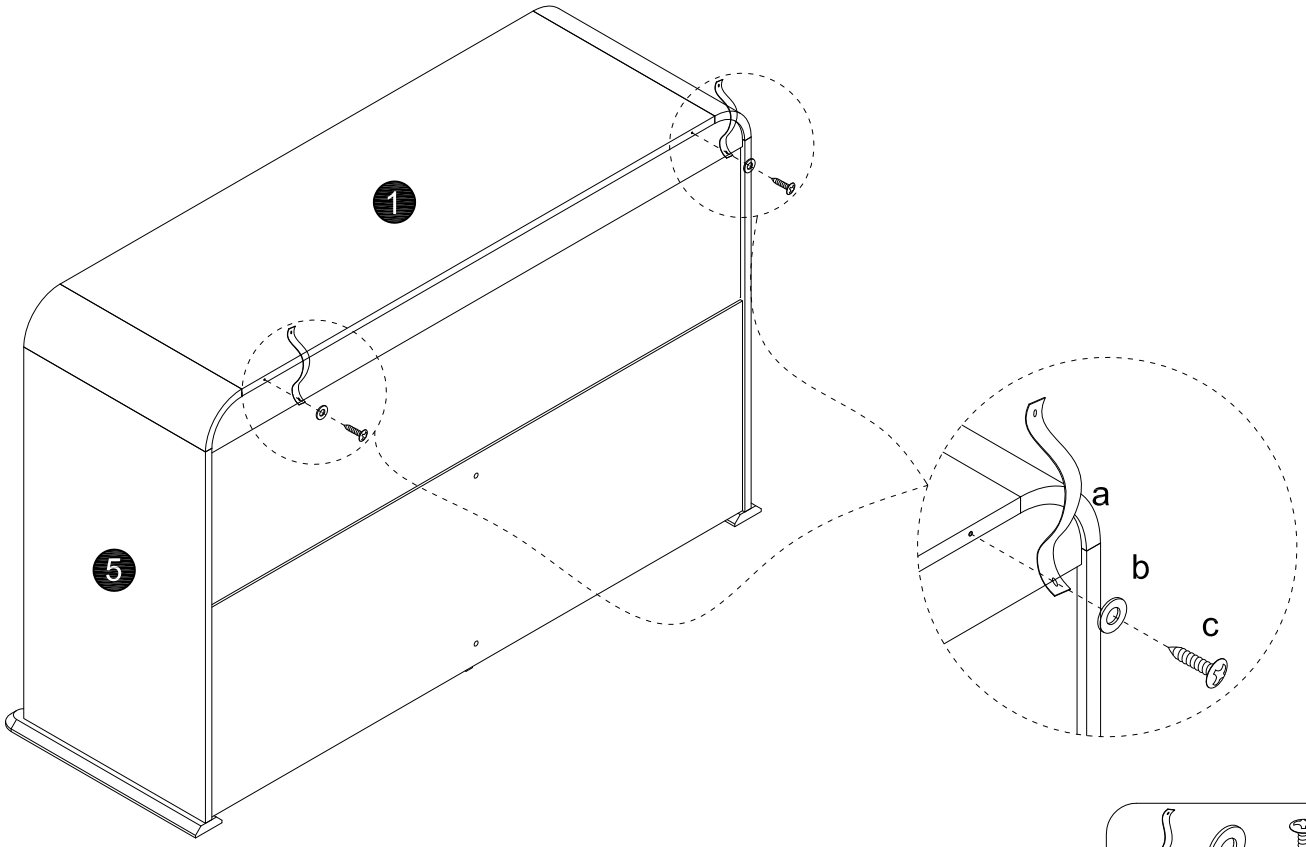


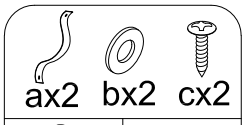

G

STEP 31

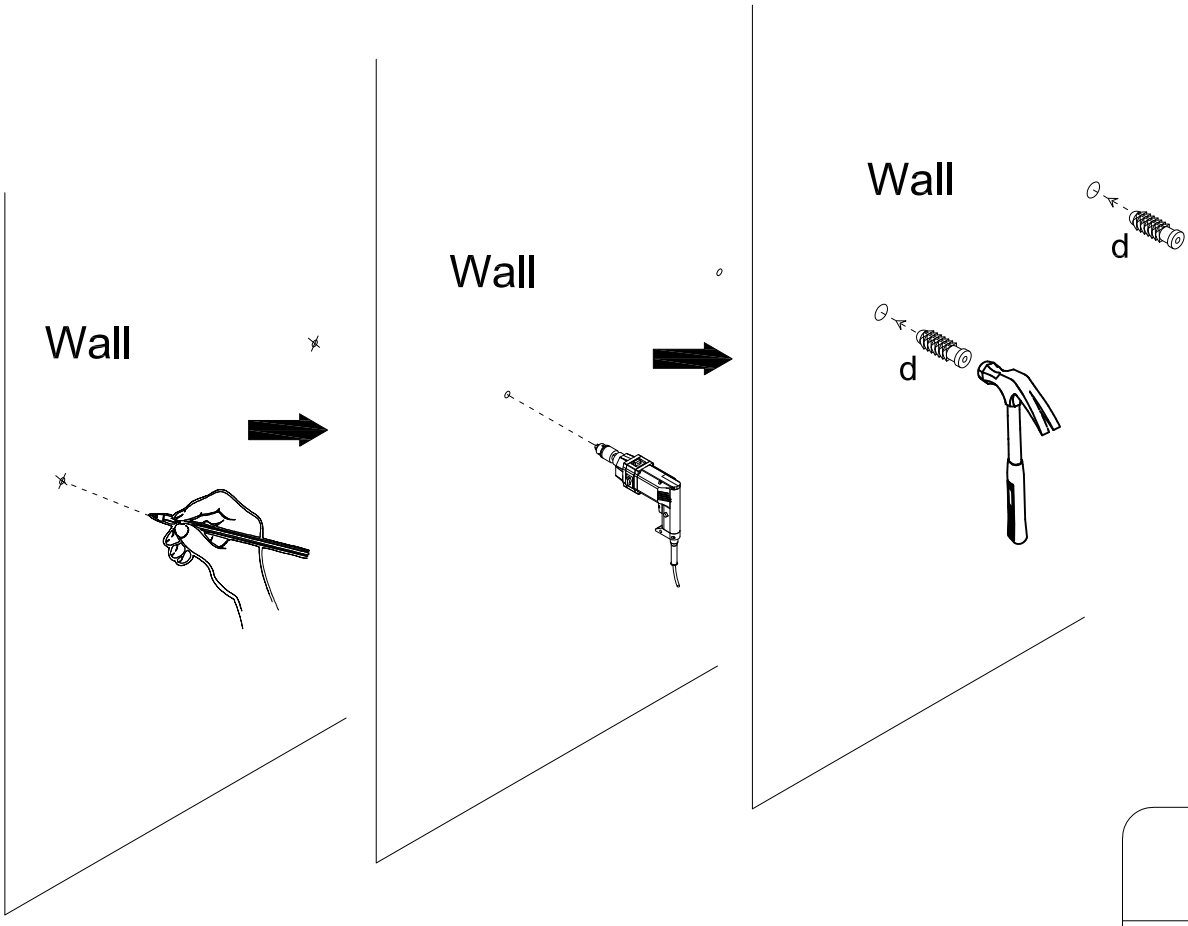




G

STEP 32

PF056

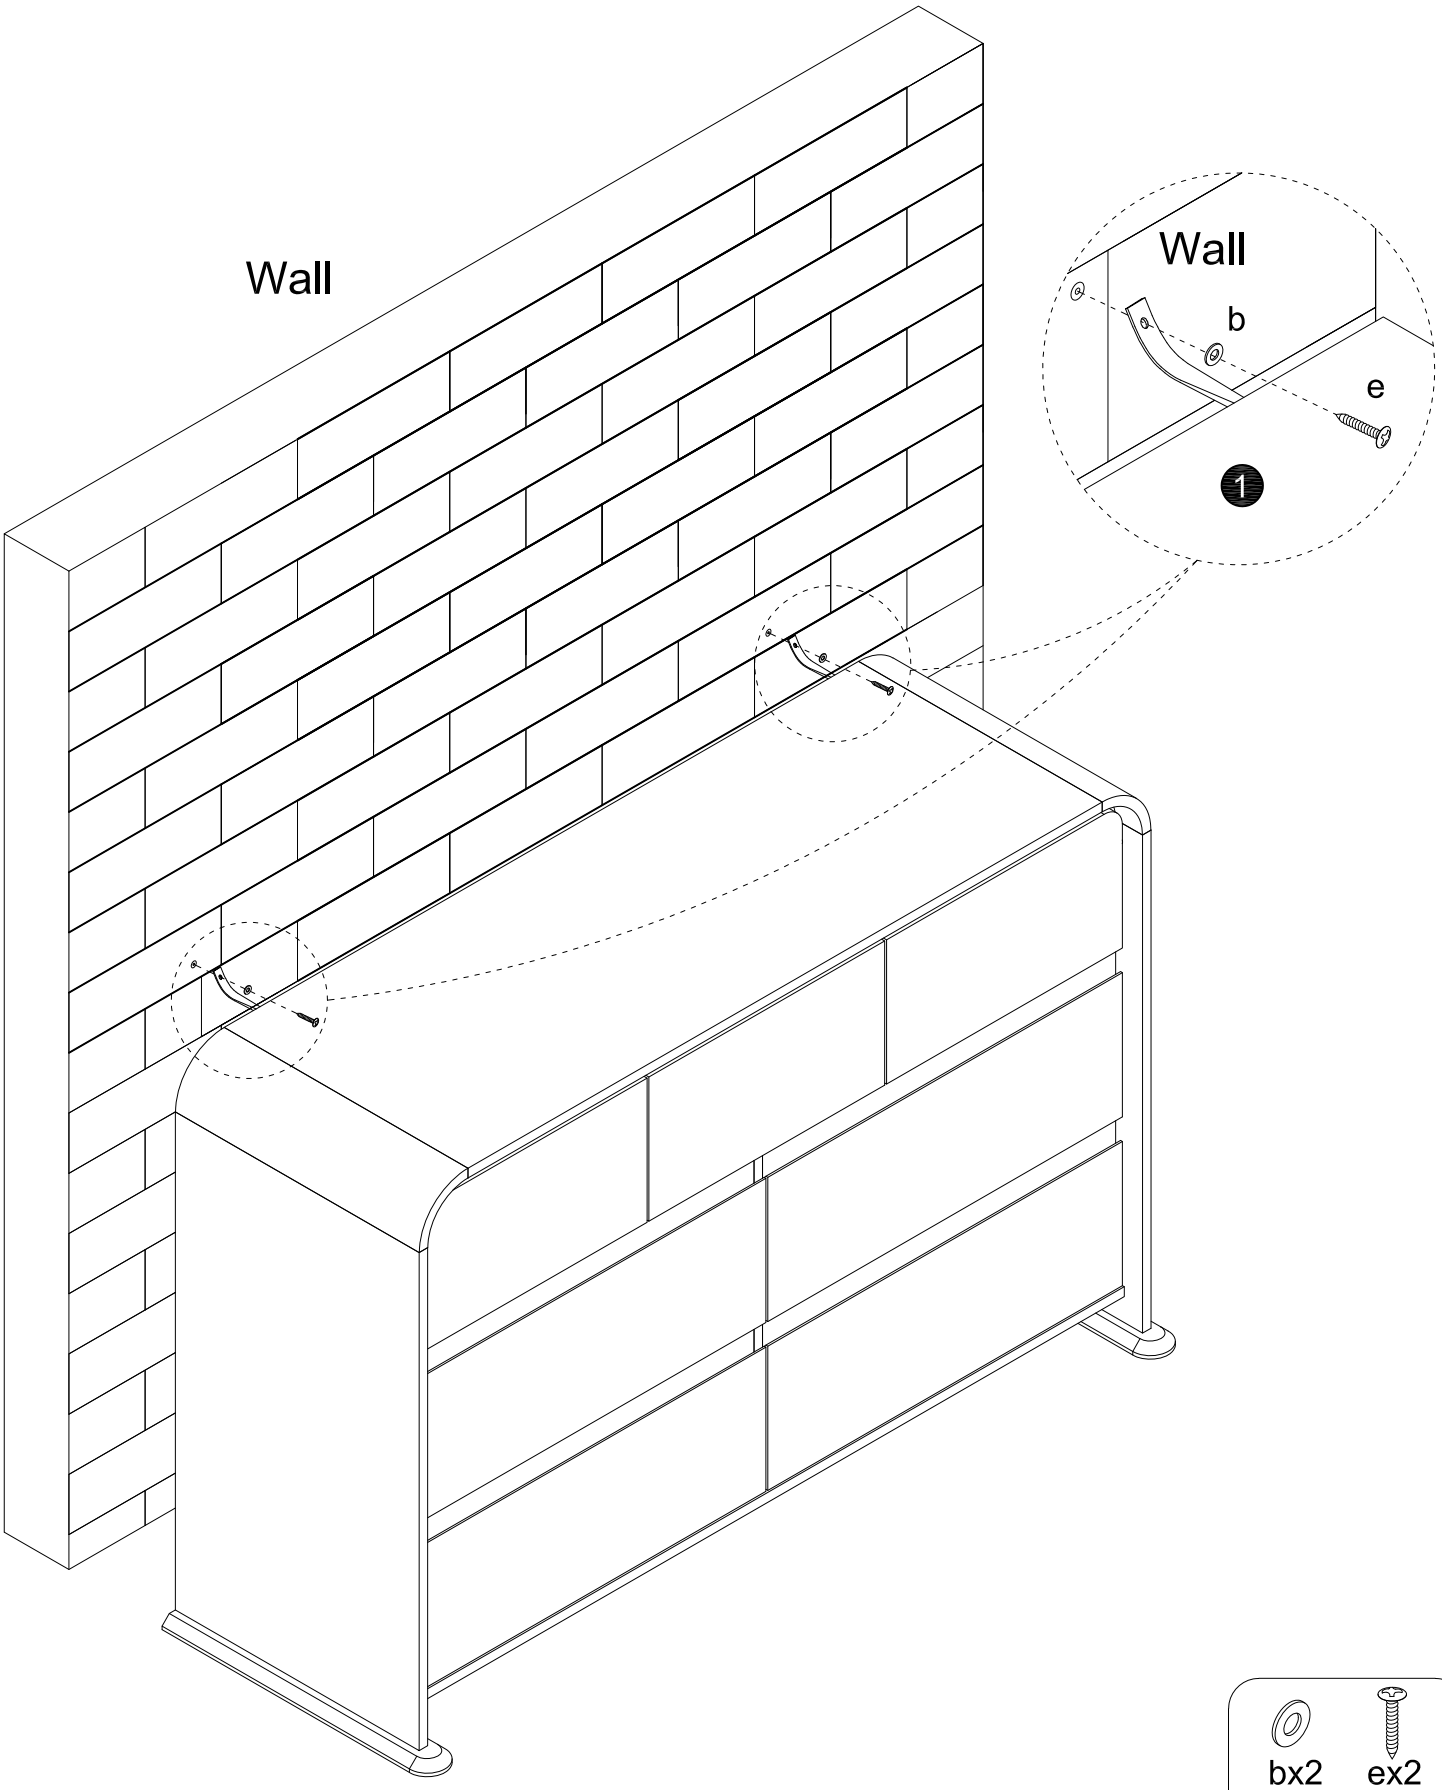

bx2	ex2
G	

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary
- **Dry the surface immediately after cleaning.**

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF and PB.
Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.
Make sure to dry the furniture immediately after cleaning