# Installation Instruction

Accessories Include

Ax2

Bx2

Cx2



Dx2

Ex2

Fx8

Gx8

Hx1

1

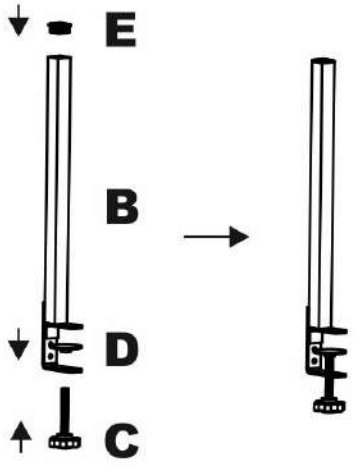


2

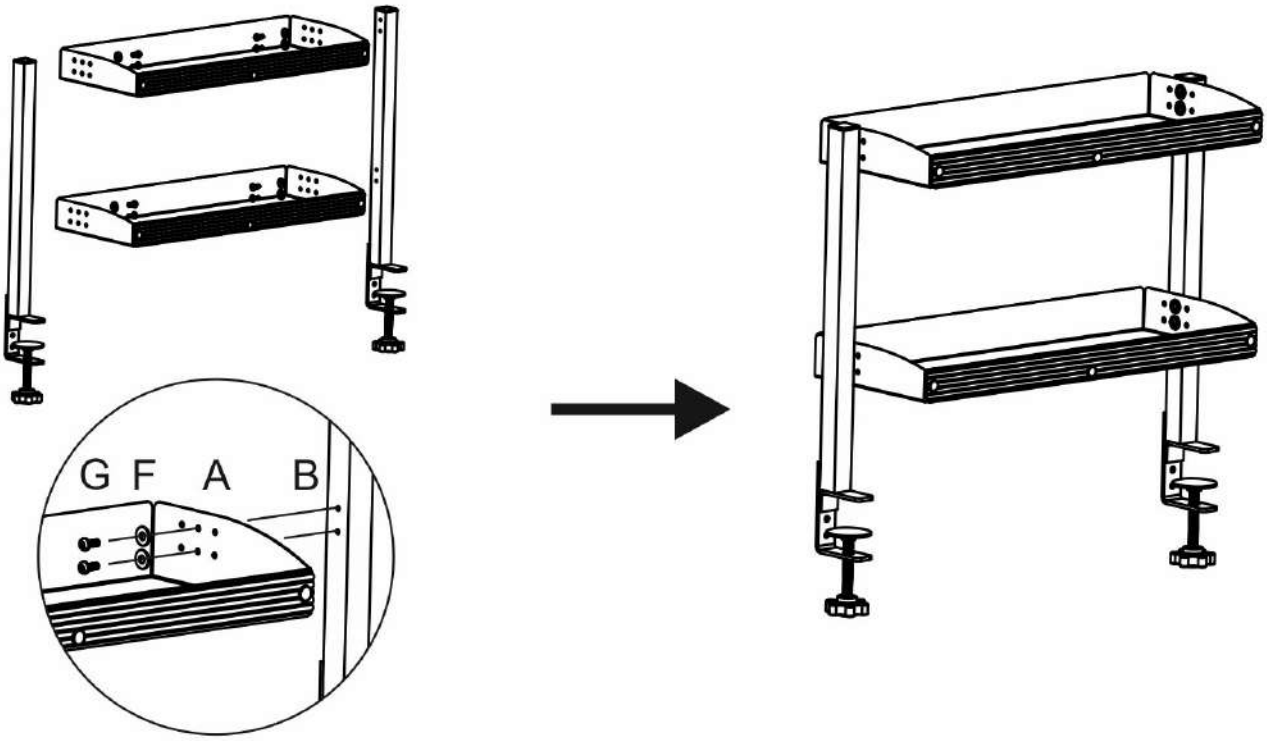

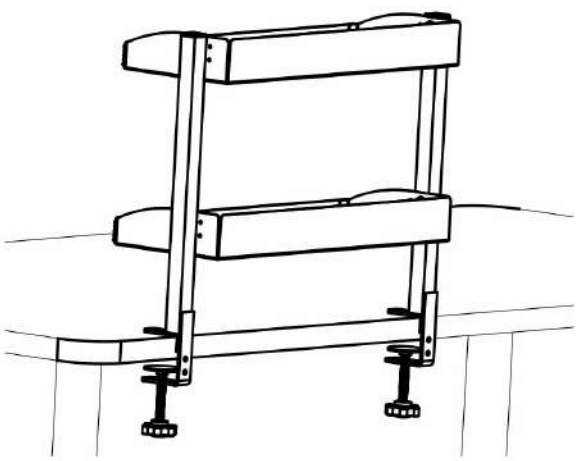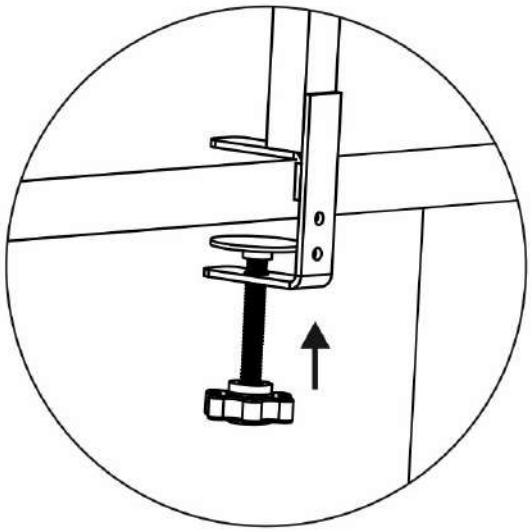
3