






A		1
B		1
C		1
D		1
X	 M6*32	13
Y		13


Corner Sofa

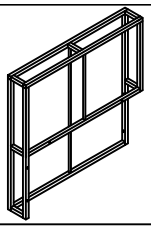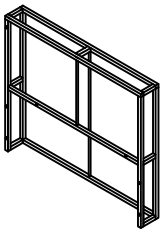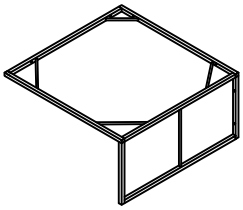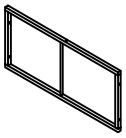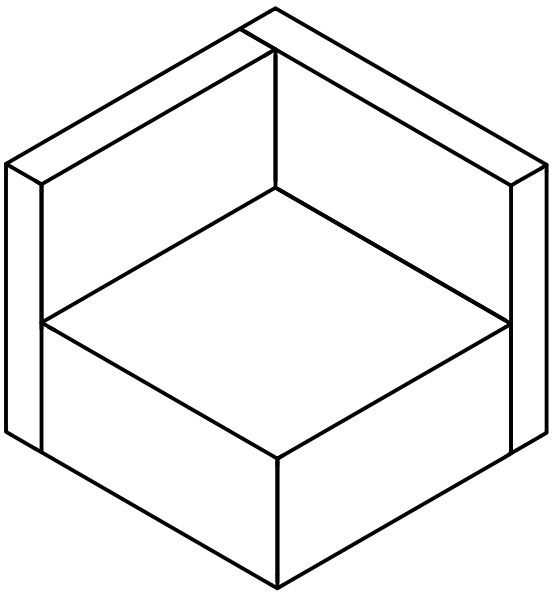


Step 1




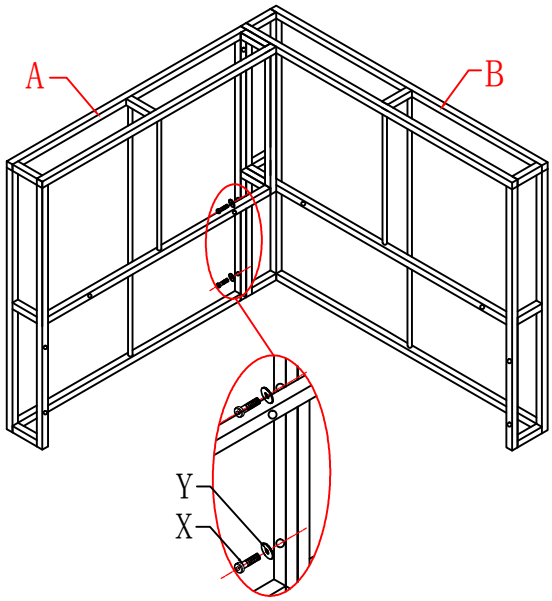


Step 2

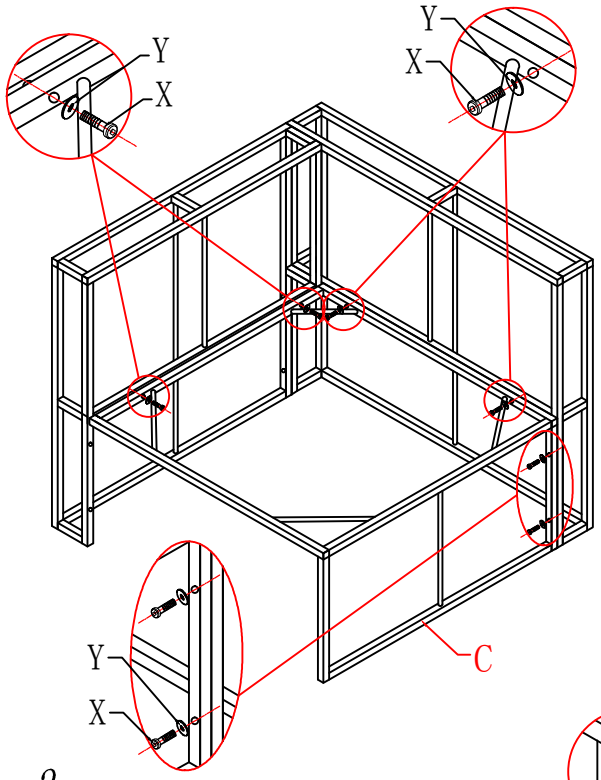


Step 3

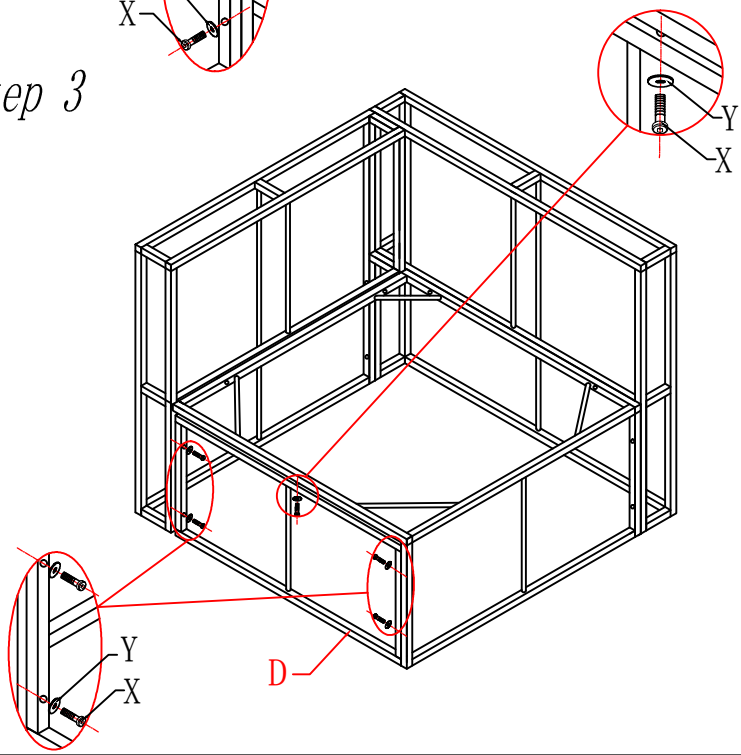


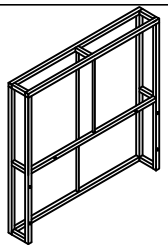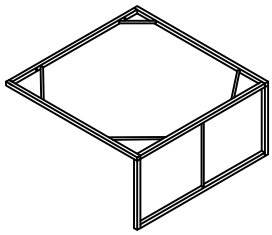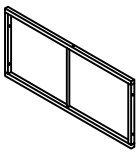E		1
F		1
D		2
X	 M6*32	12
Y		12
Z		1


Armless sofe

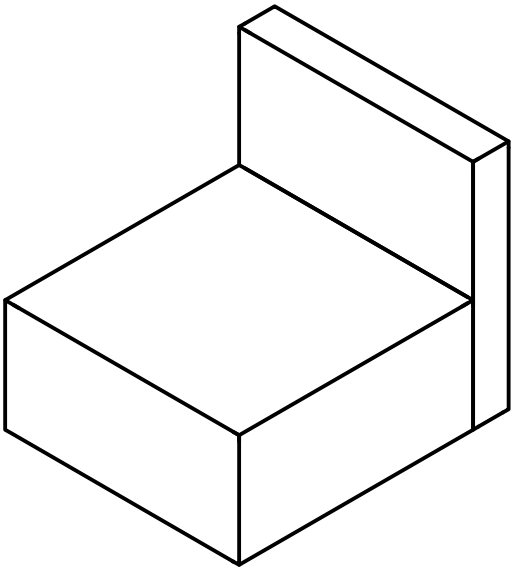


Step 1

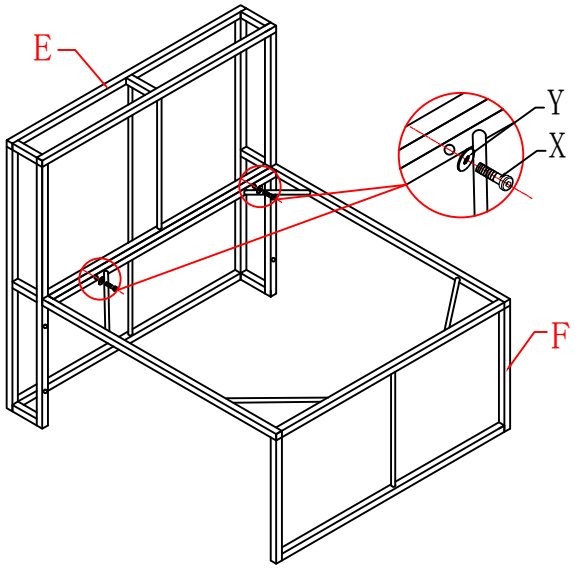

Step 2

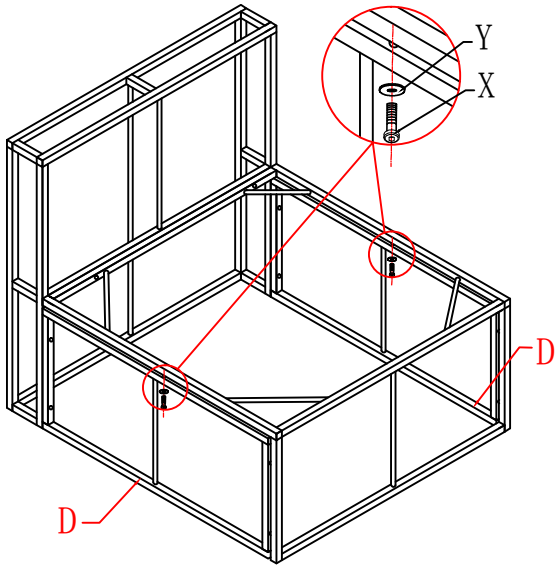

Step 3

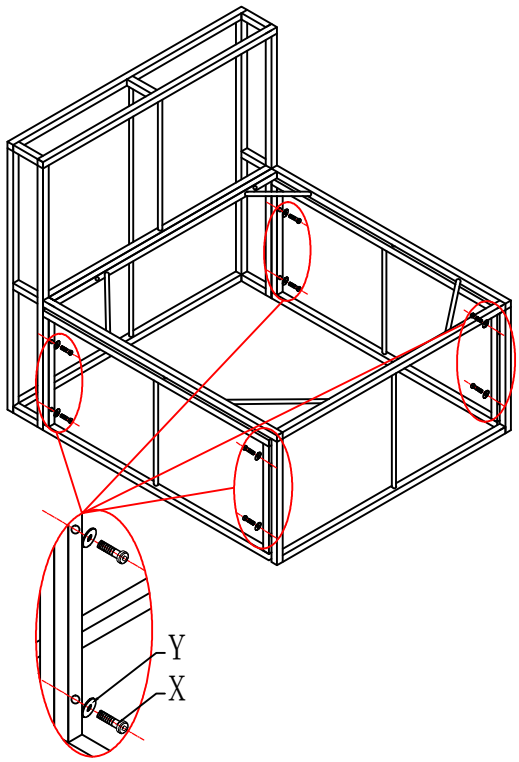

1

The cushion can be fastened to the rattan with the effective horn button.



2

Open the rattan and fasten the horn button to a chosen position.



3






Attached to a spare tape, the horn button allows the cushion to move freely.




4

Contact us for any further problems concerning the item.

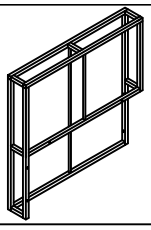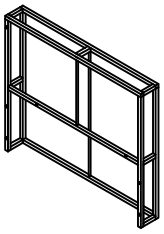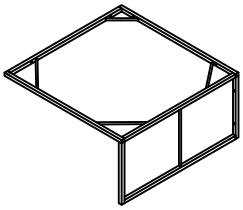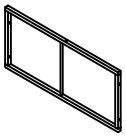


A		1
B		1
C		1
D		1
X	 M6*32	13
Y		13


Corner Sofa

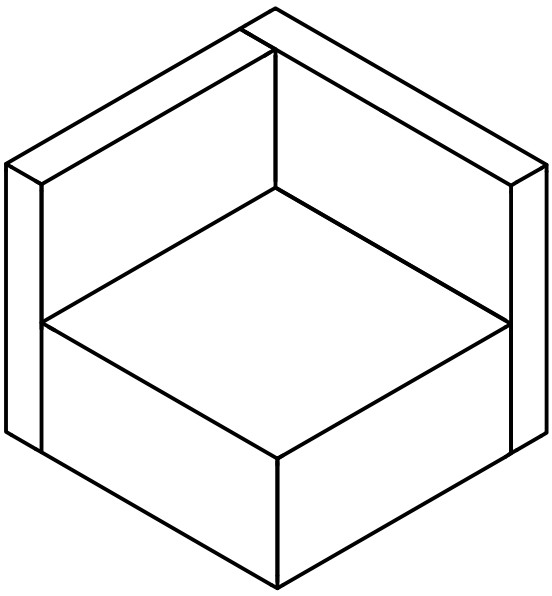


Step 1

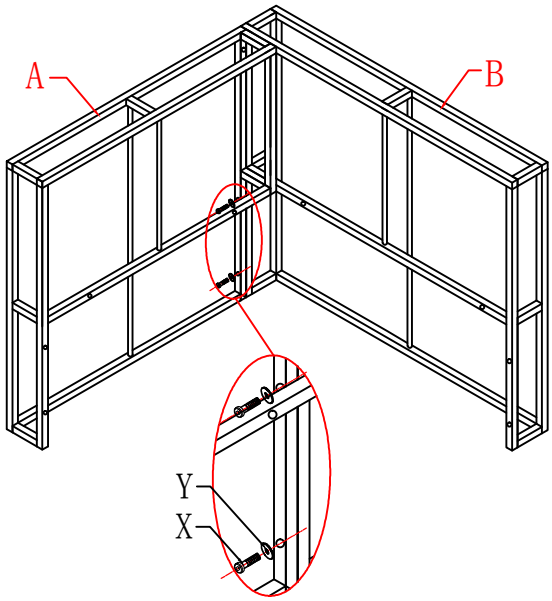





Step 2

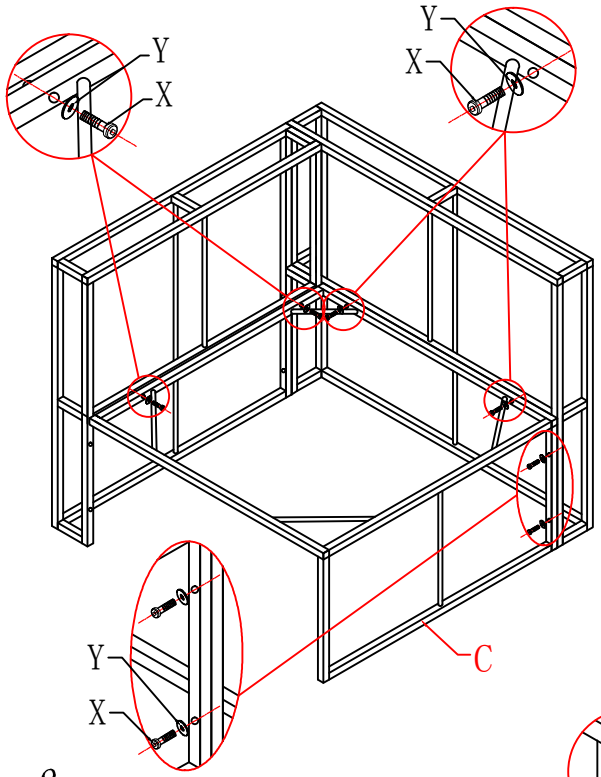


Step 3

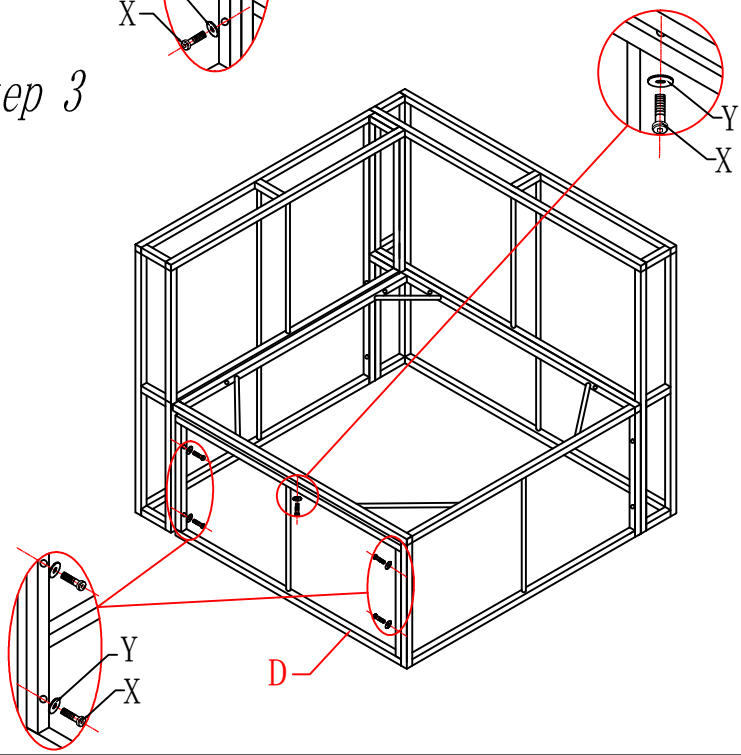


Ottoman

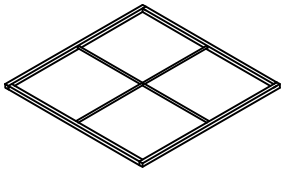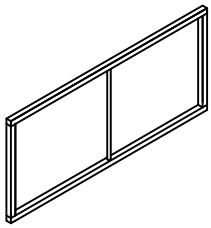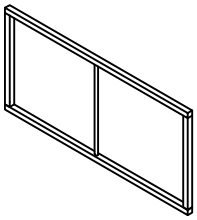G2		1
H		2
I2		2
X	 M6*32	12
Y		12

Step 1

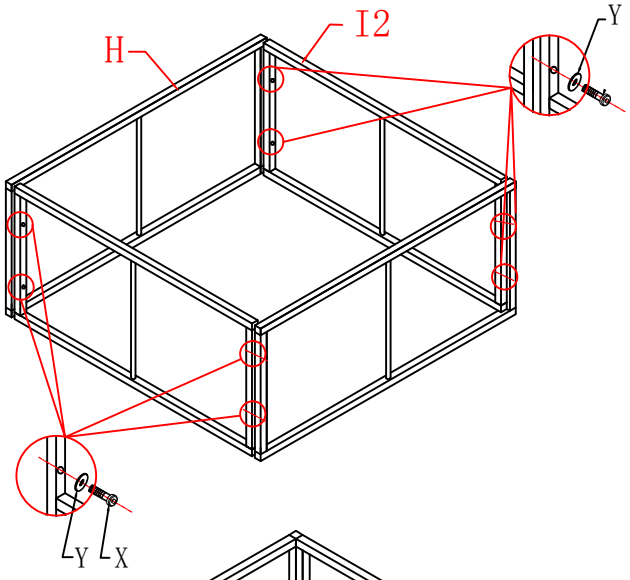



Step

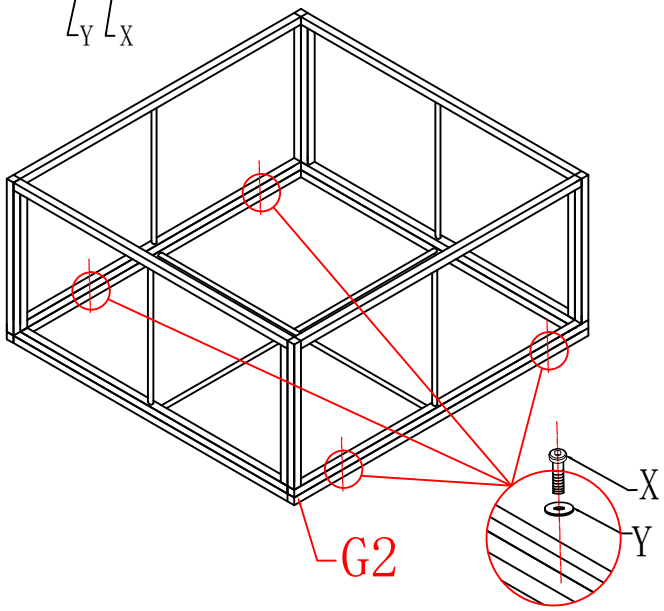





Ottoman

Step 3

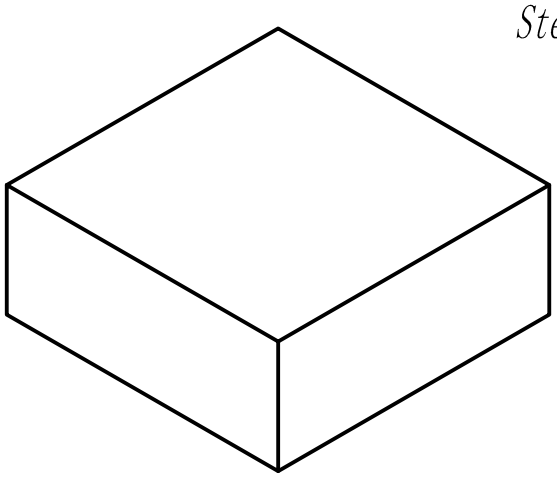


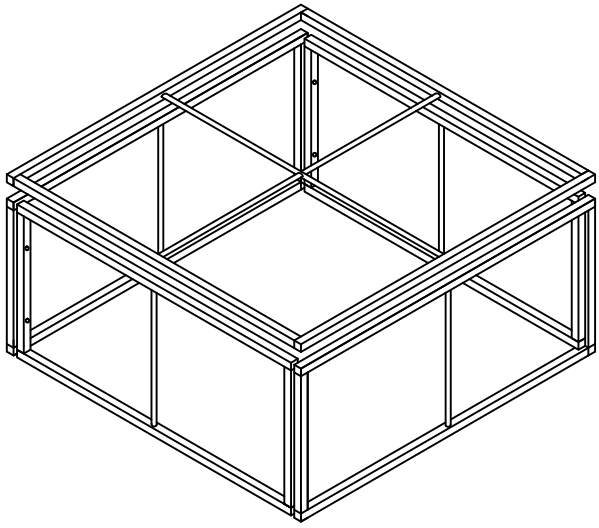


Coffee Table

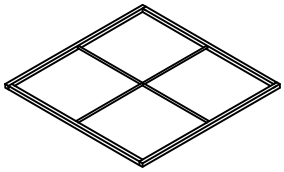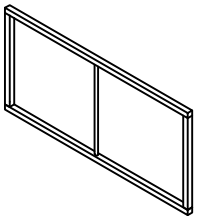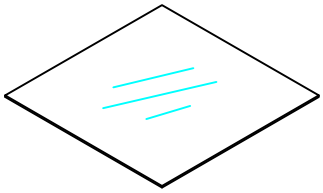J		1
K		2
L		2
M		1
X	 M6*32	12
Y		12
Z		1


Step 1

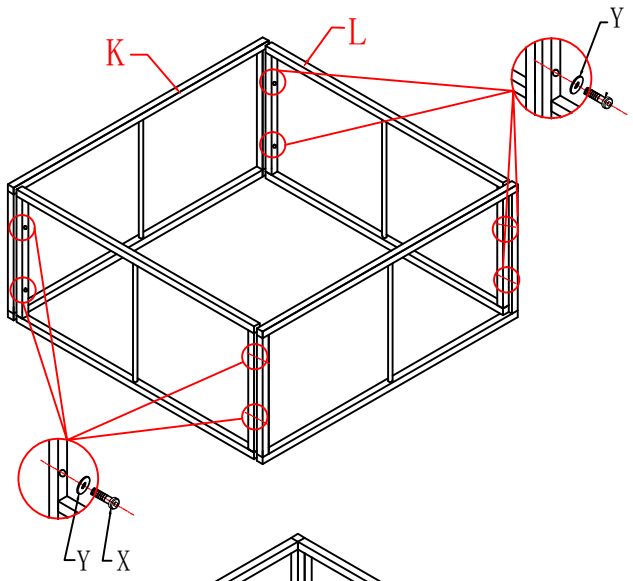


Step 2

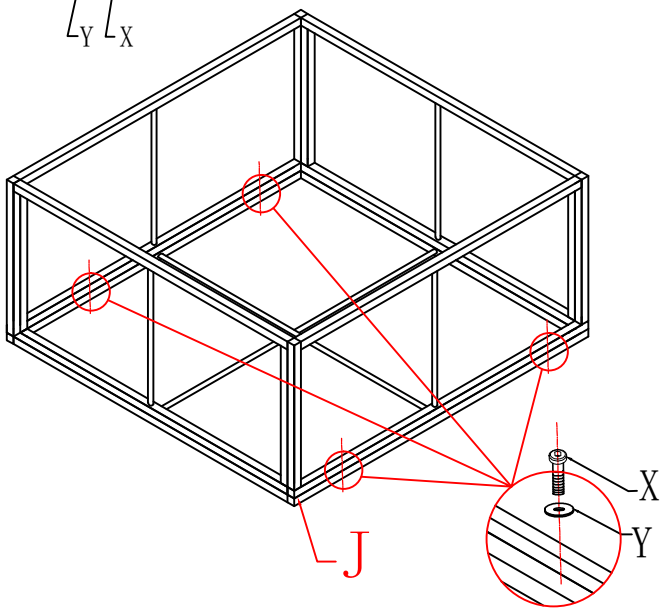


Step 3

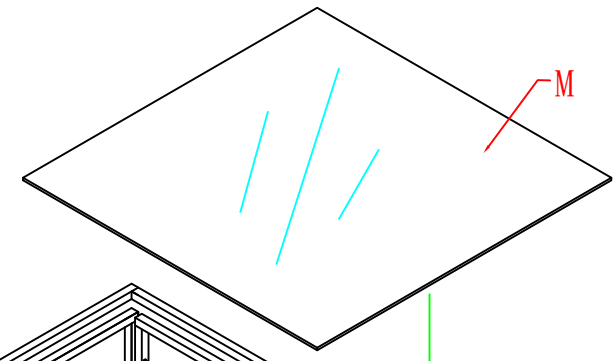

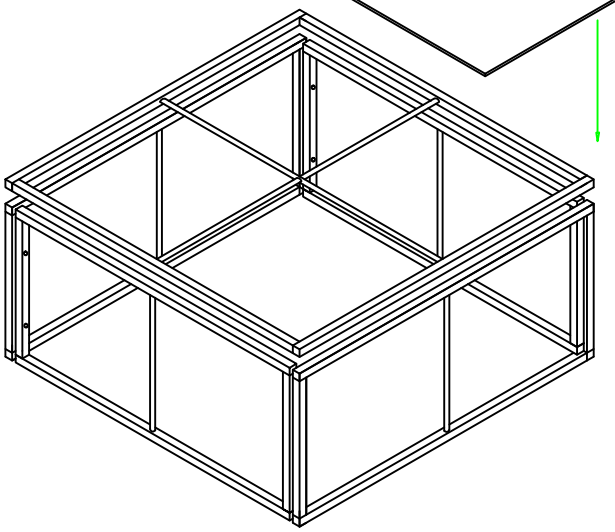

Coffee Table

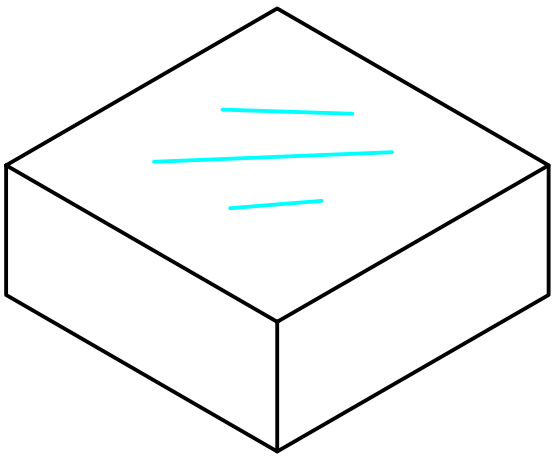

1

The cushion can be fastened to the rattan with the effective horn button.



2

Open the rattan and fasten the horn button to a chosen position.



3

Attached to a spare tape, the horn button allows the cushion to move freely.



4

Contact us for any further problems concerning the item.

