

INSTALLATION
Product Manual

Version:210390US-02-26A-AA

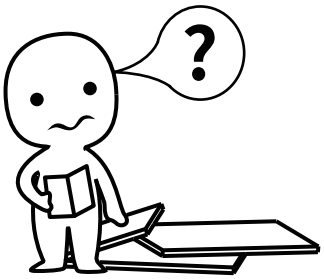


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

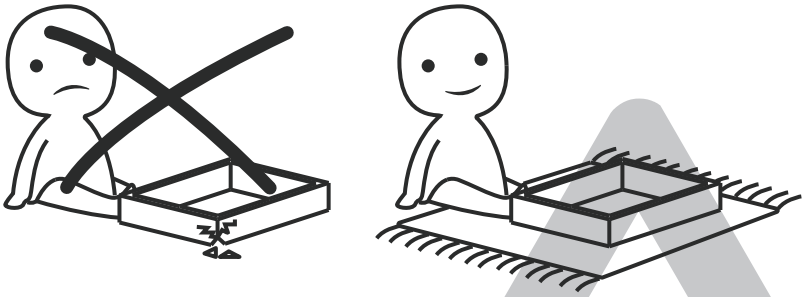


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

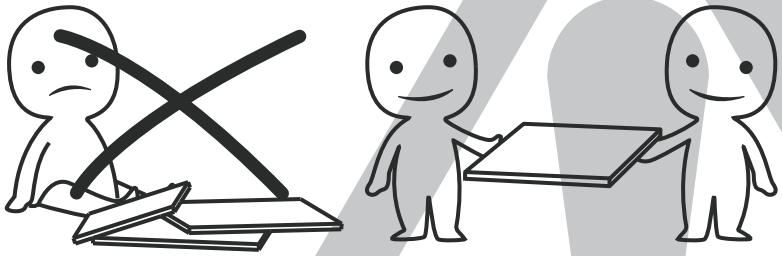

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

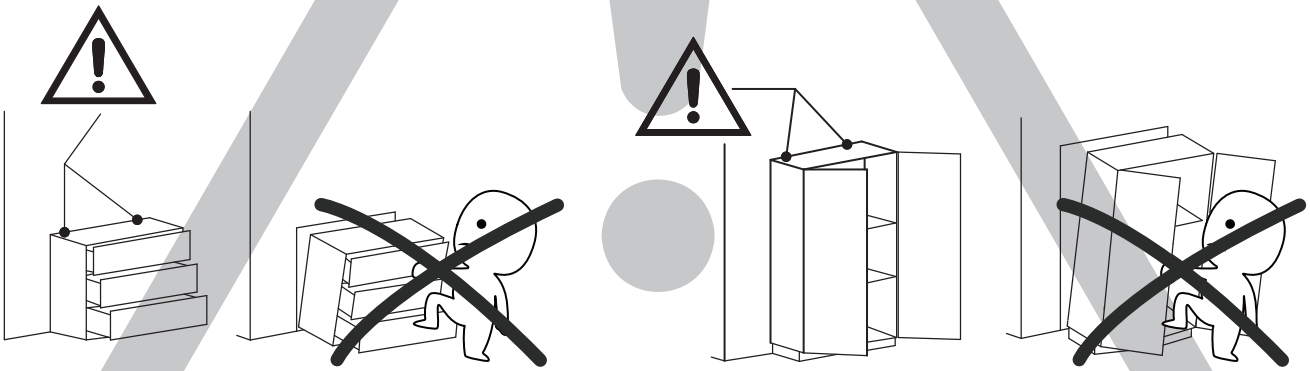

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.




For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.




Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




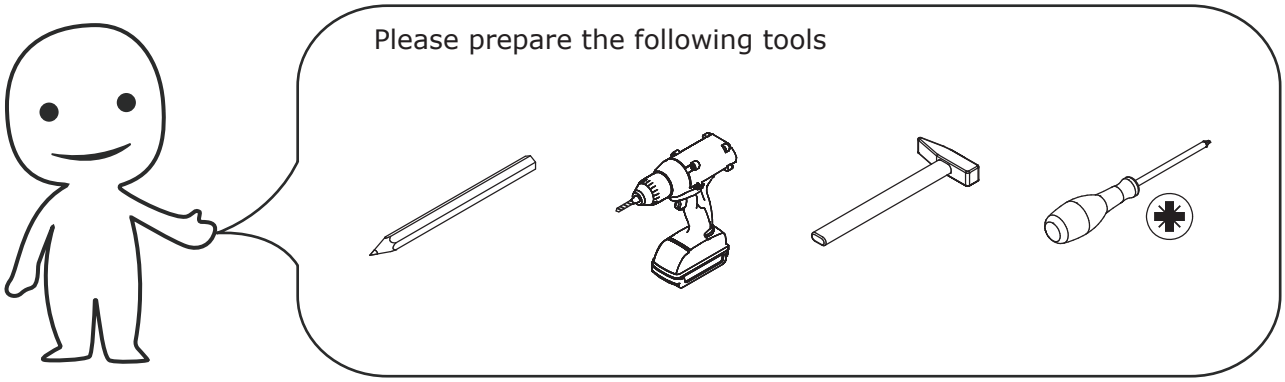









When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

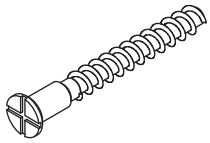
A x 6	B x 57	C x 2	D x 6
 CRE0418A			 CRC0540A

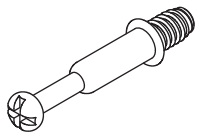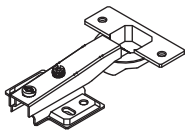E x 42	F x 72	G x 42	H x 8
 CRB1595A	 CRD0416A	 CRA0635B	 DGA861A

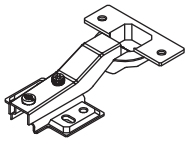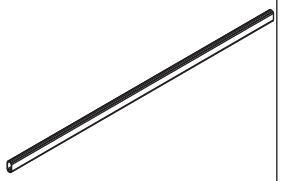I x 4	J x 3	K x 1	L x 15
 DGA861B	 224-400mm		

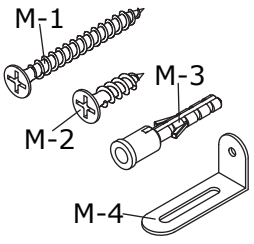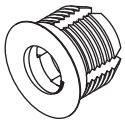M x 2	N x 4	P x 42	Q x 32
	 CRD3514A		 CRF0630A

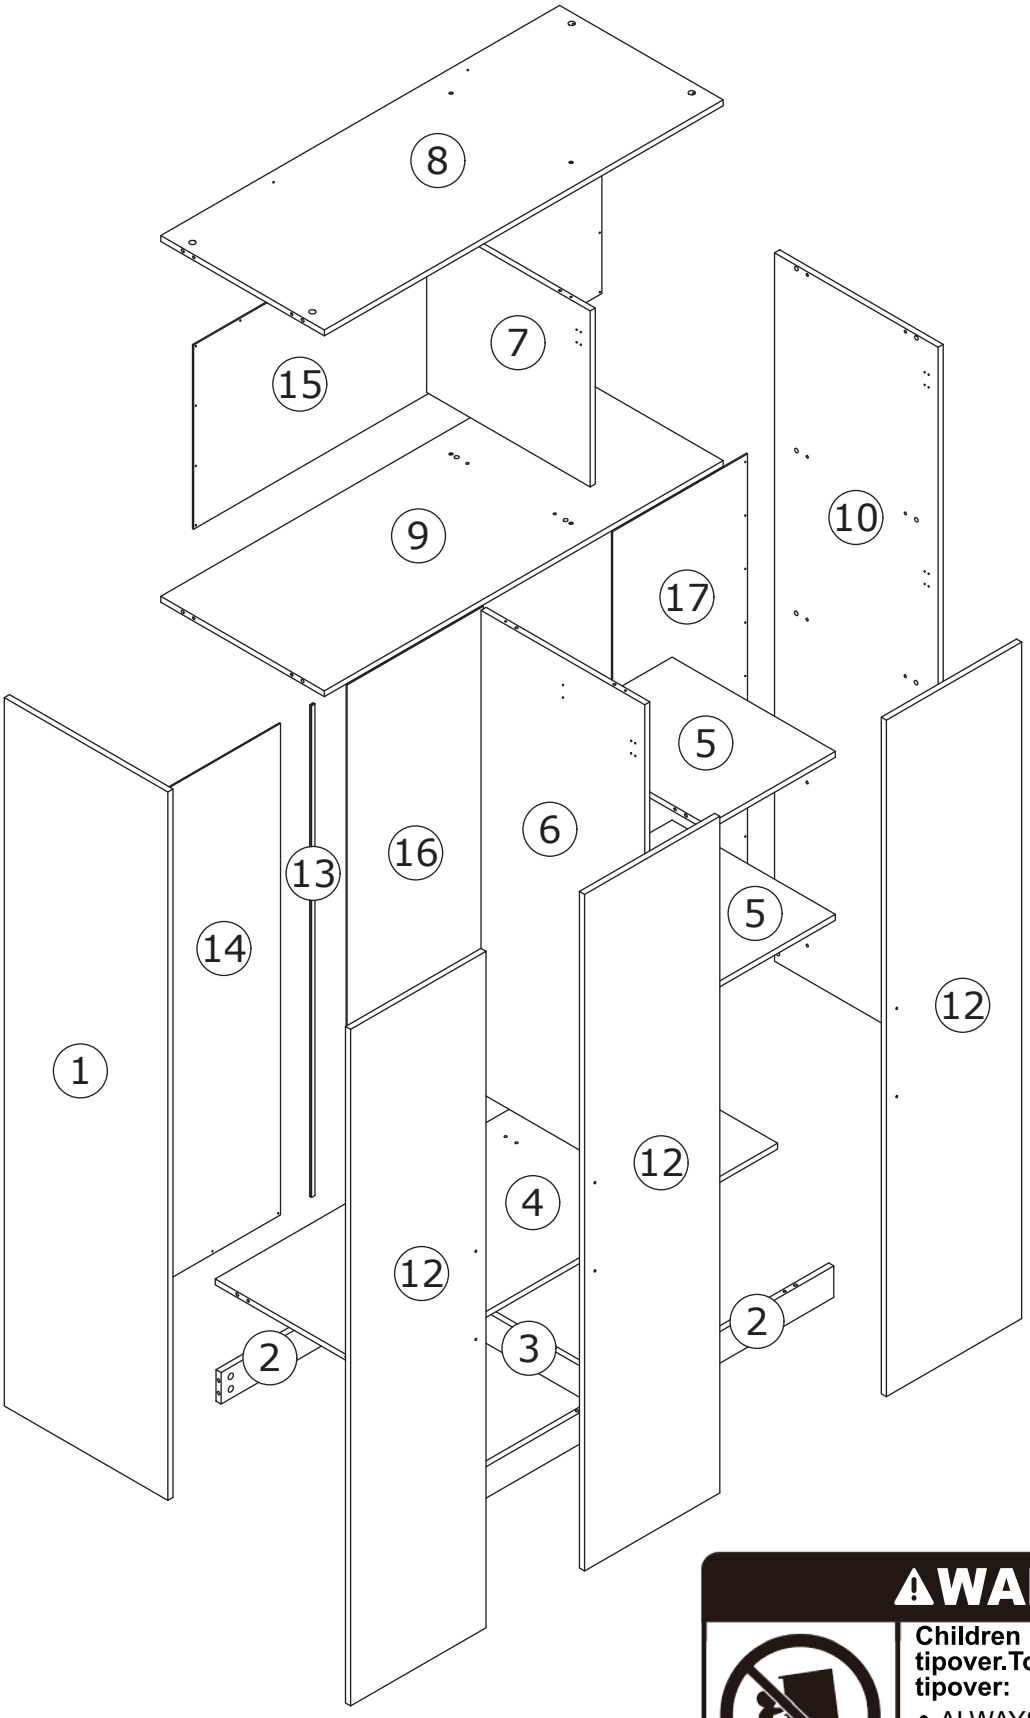

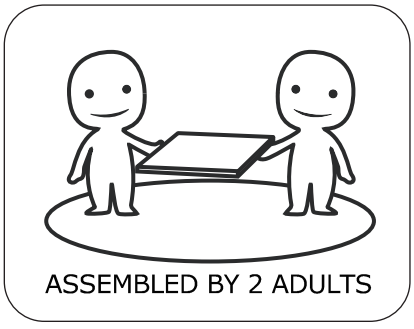

⚠WARNING








Children have died from furniture tipover.To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!

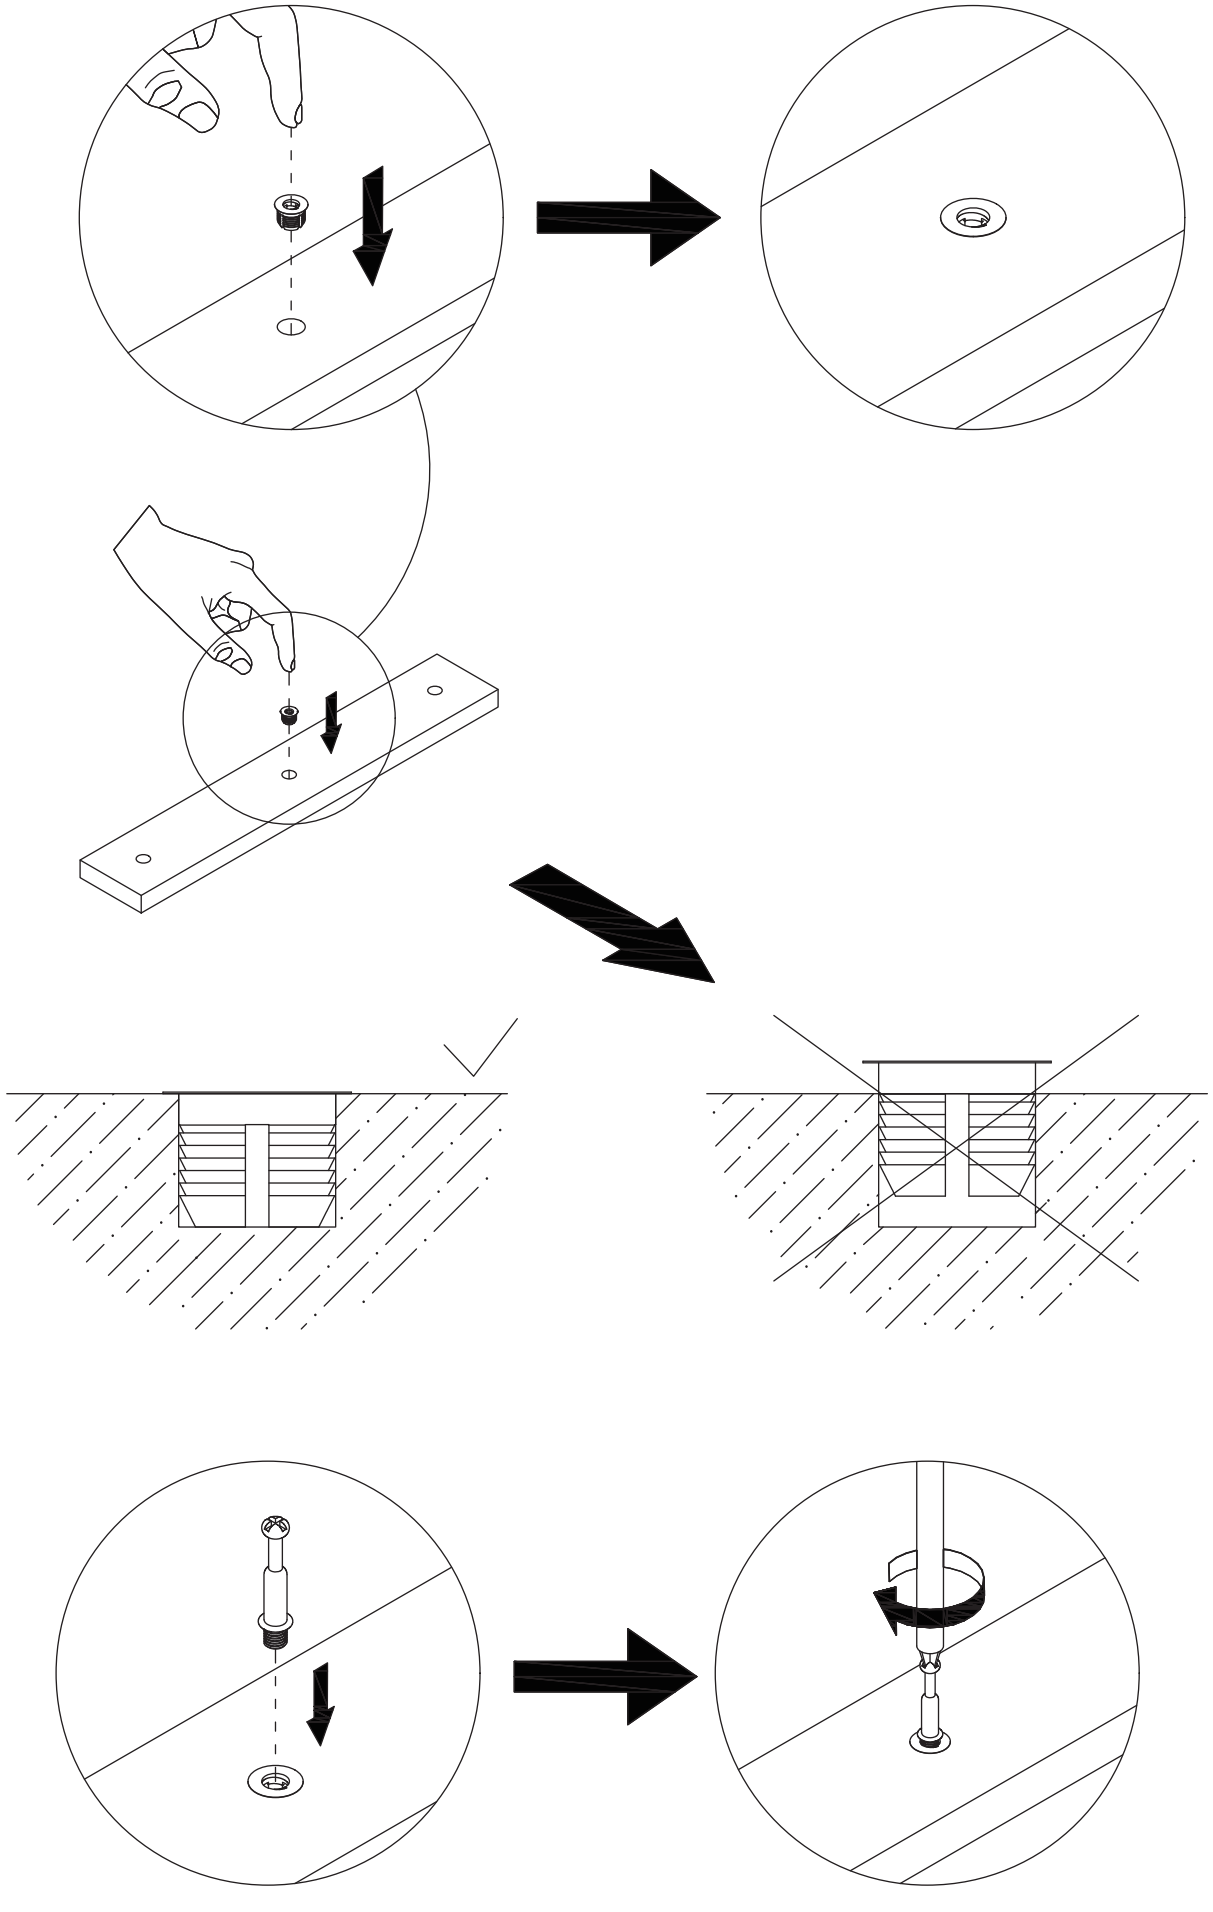


1



G x 4	P x 4	
 CRA0635B		

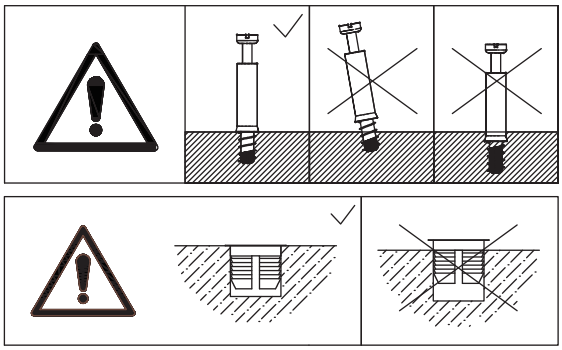


Insert plug (P) to panel 6, then screw self-tapping rod (G) onto.

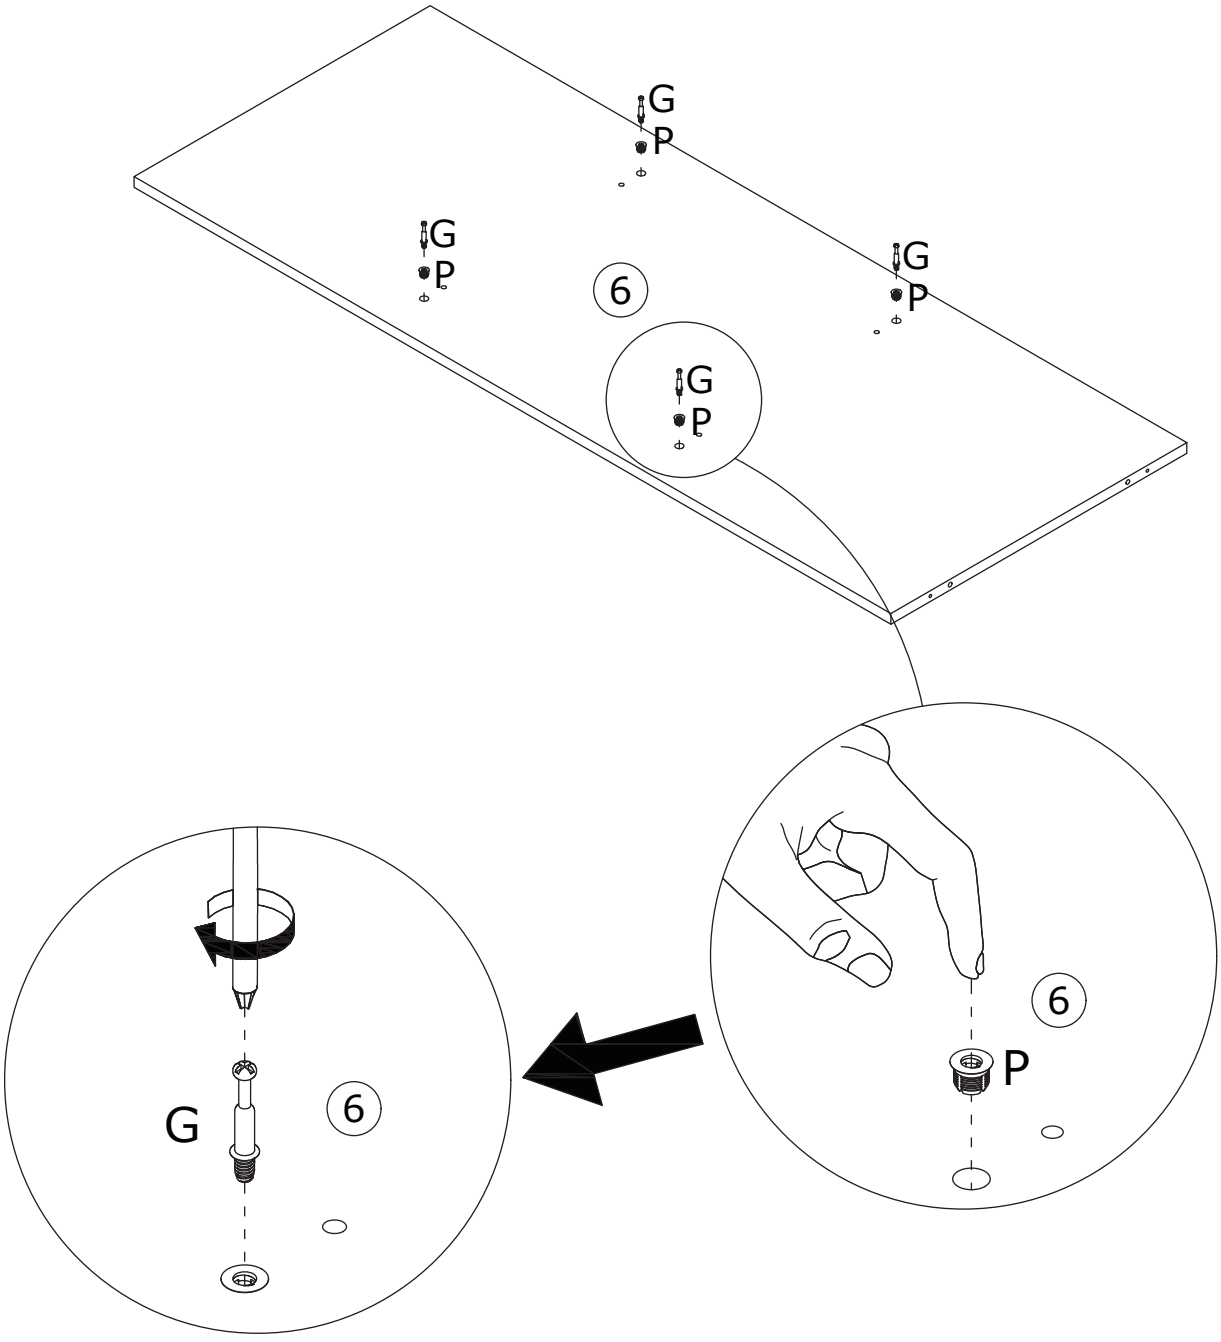


2



E x 4	Q x 4	
		
CRB1595A	CRF0630A	

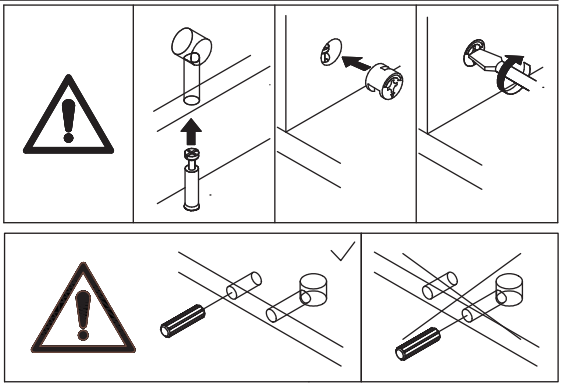


Connect panel 5 to panel 6 using wooden dowel (Q), then insert the eccentric wheel (E) and tighten it by turning clockwise.

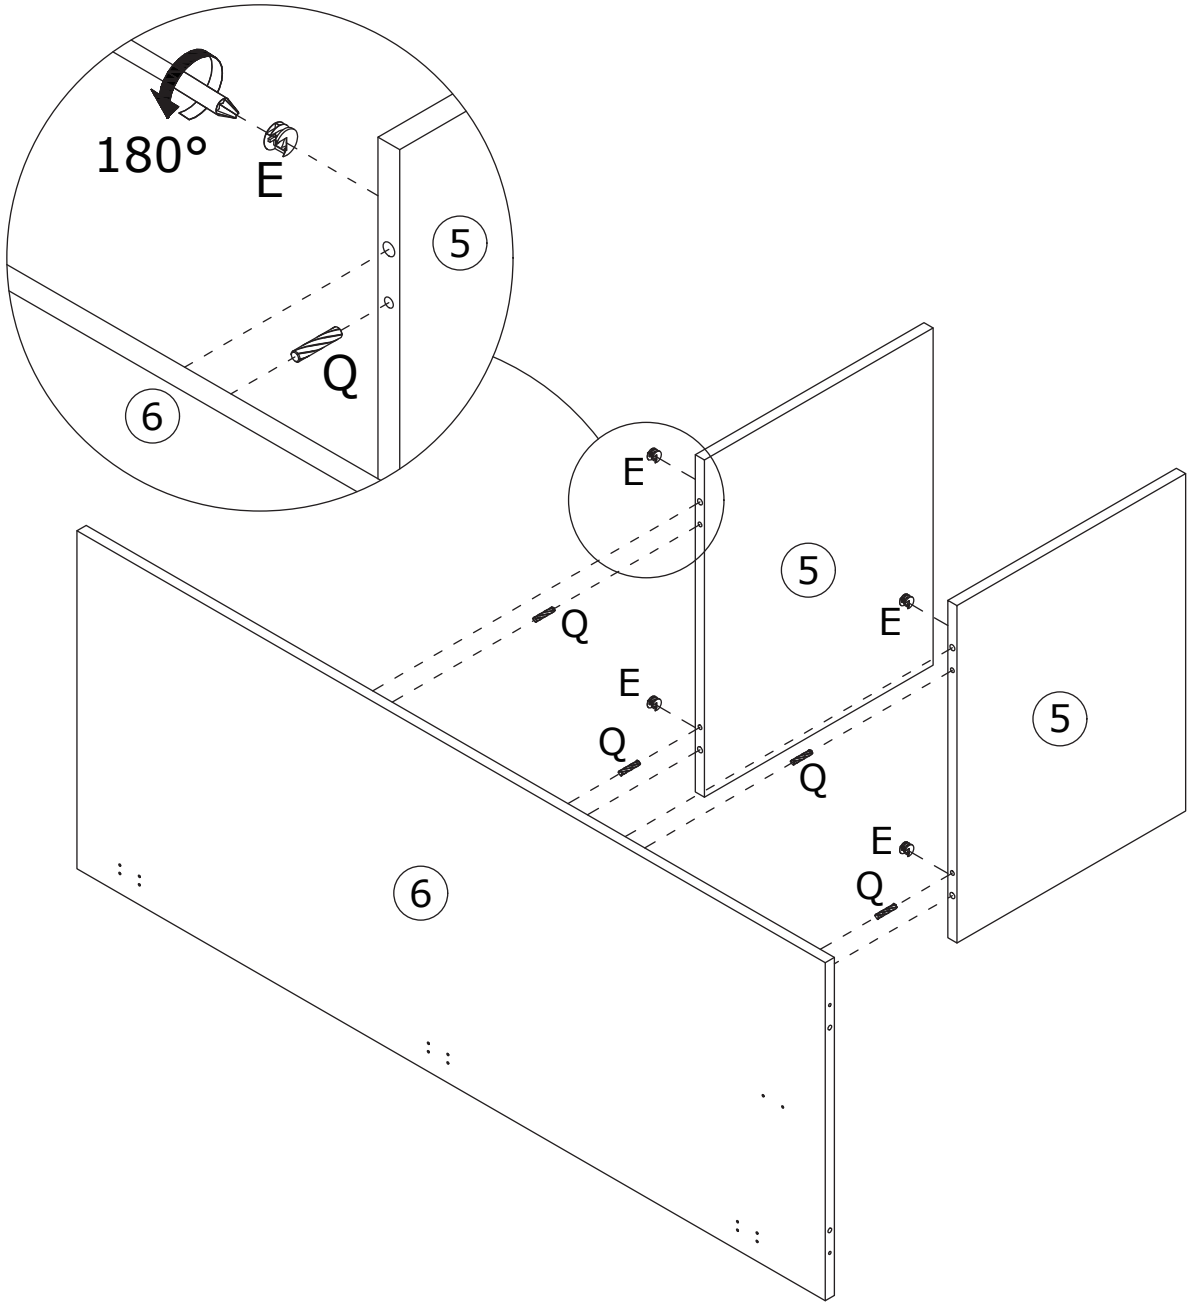


3

G x 12	P x 12	
 CRA0635B		

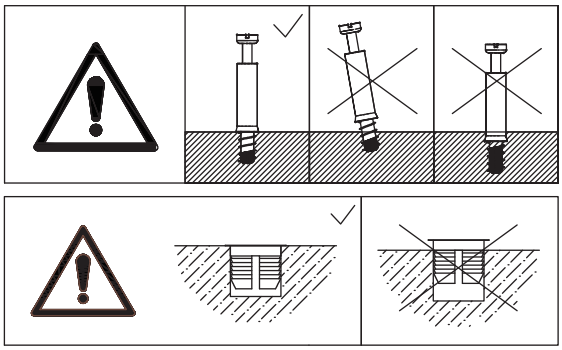

Insert plug (P) to panels 2 and 4,
then screw self-tapping rod (G) onto.

x2

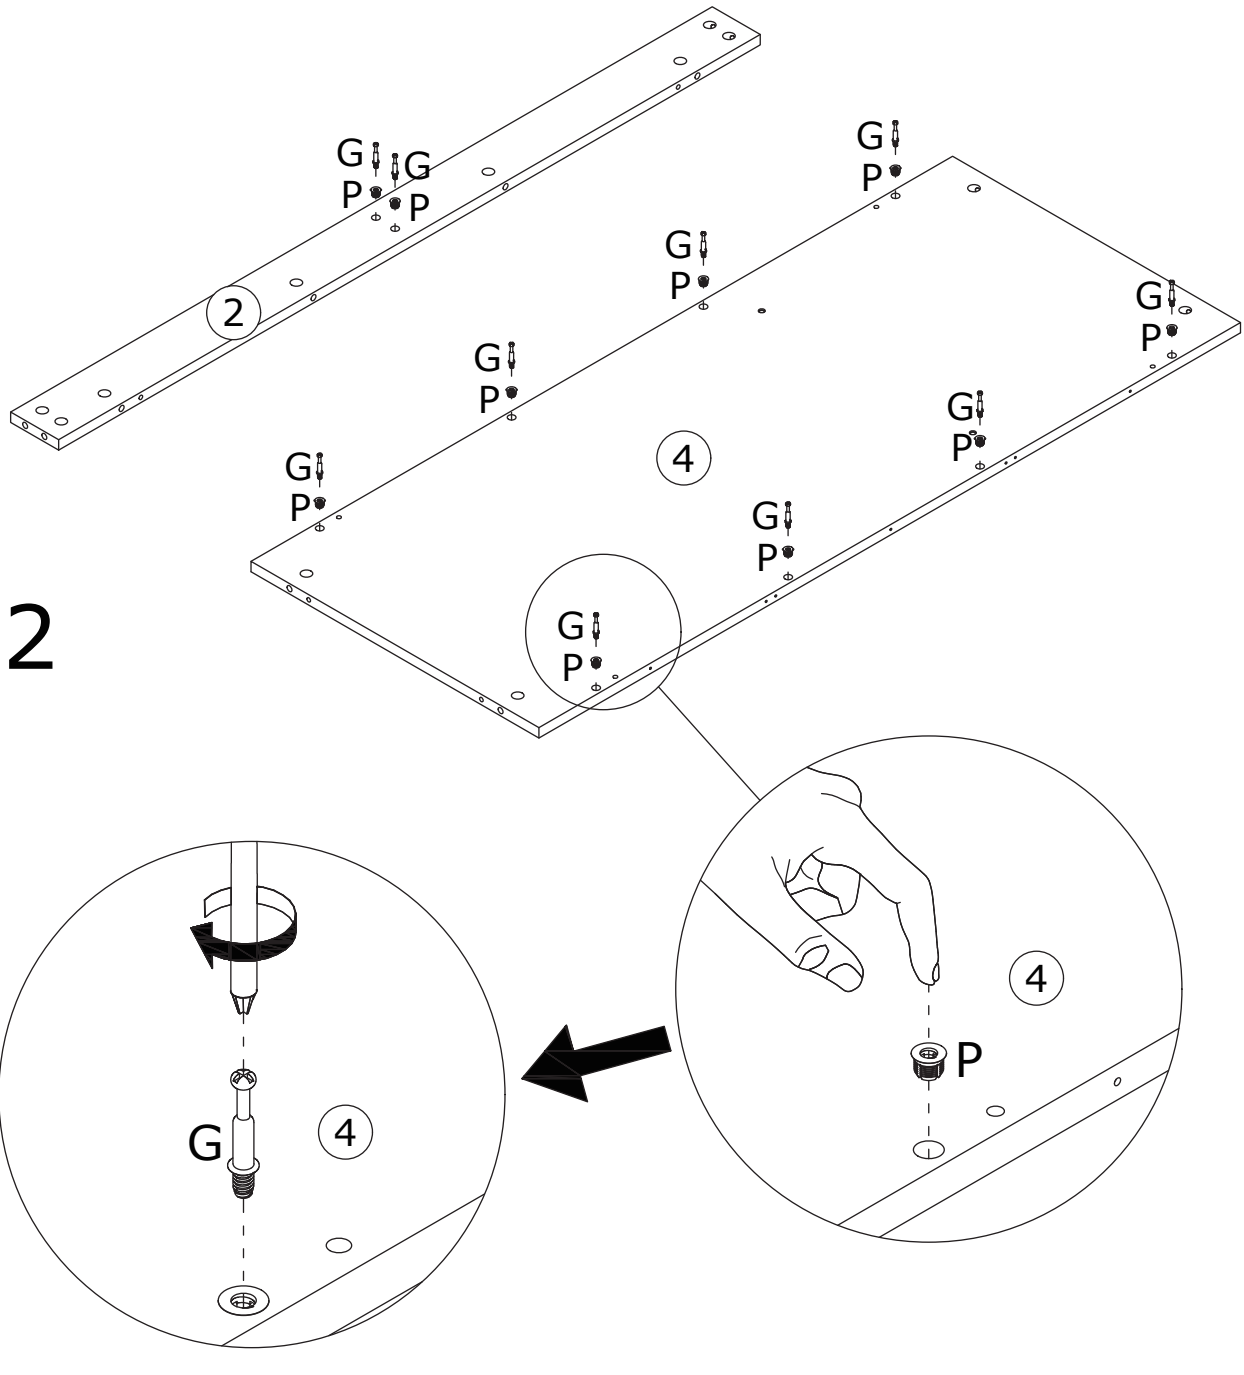



4

E x 4




CRB1595A





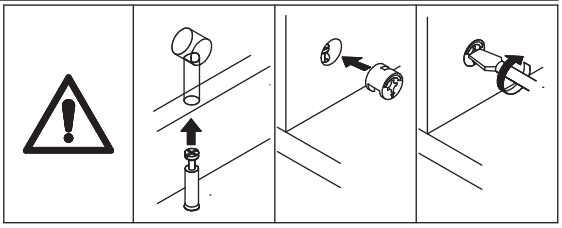


Connect panel 2 to panel 3, then insert eccentric wheel (E) and tighten it by turning clockwise.

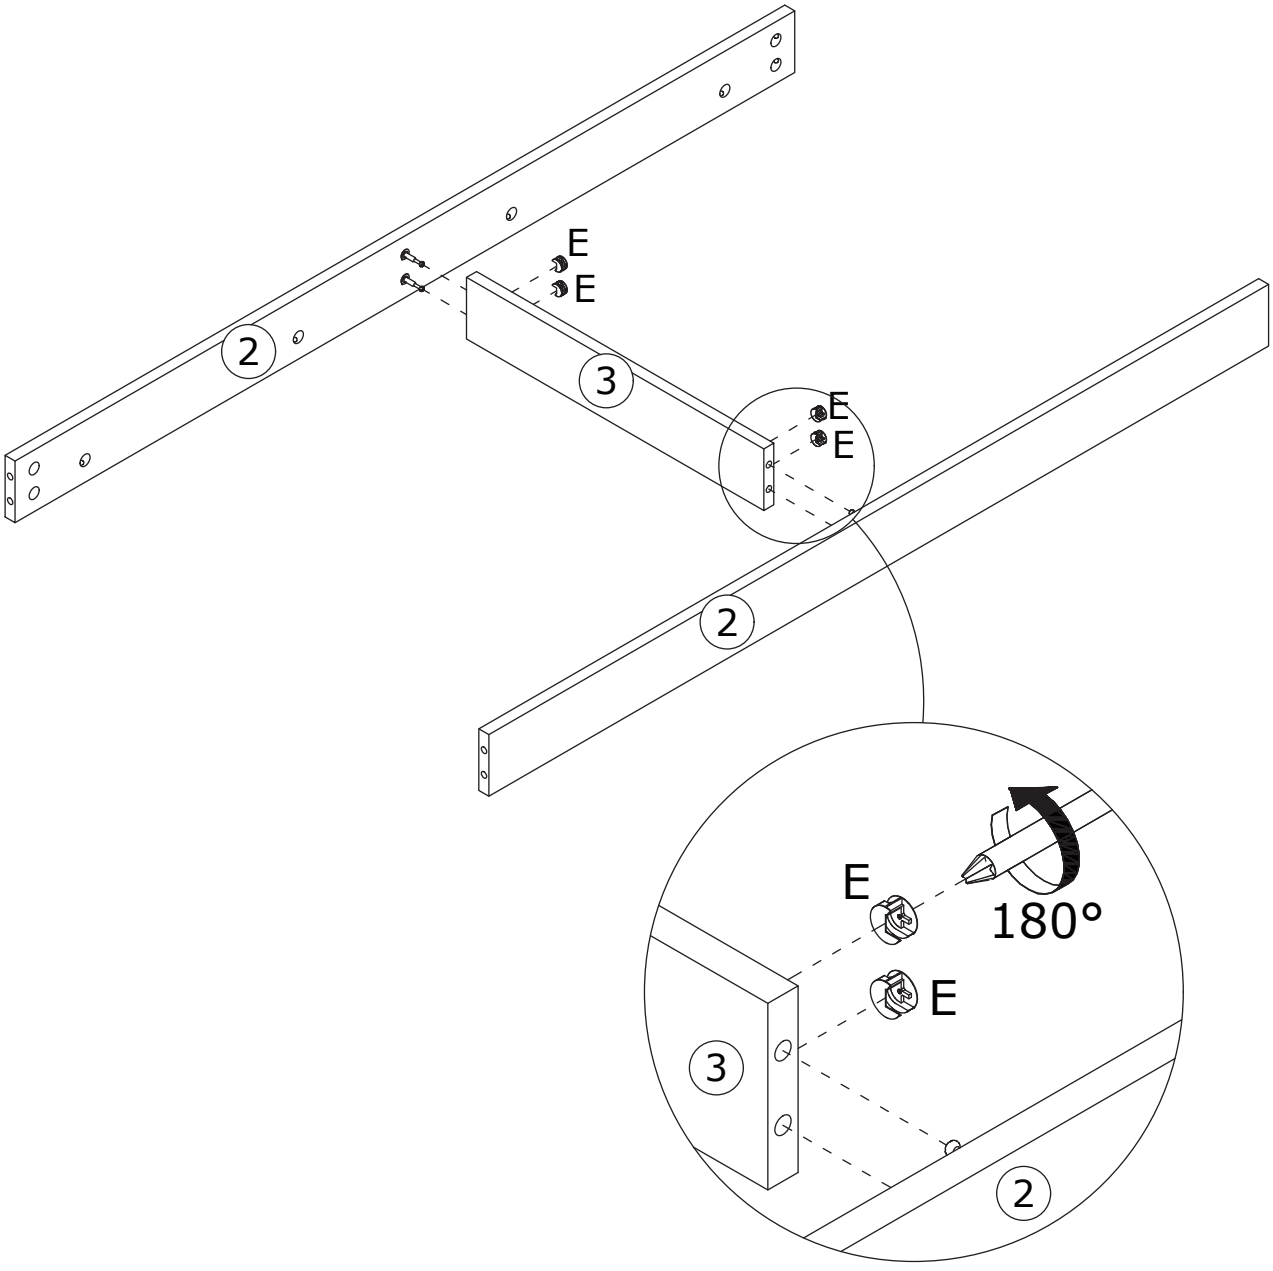


5




E x 8	Q x 4	
		
CRB1595A	CRF0630A	

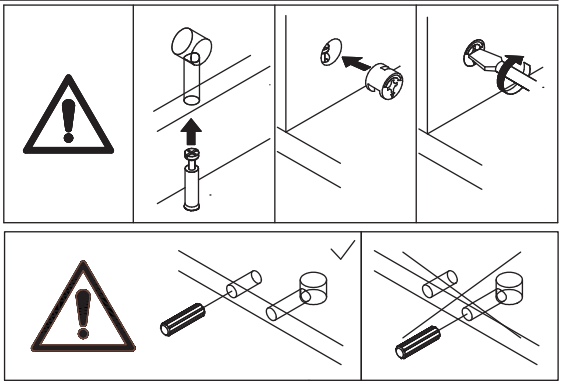


Connect panel 2 to panel 4 using wooden dowel (Q), then insert the eccentric wheel (E) and tighten it by turning clockwise.

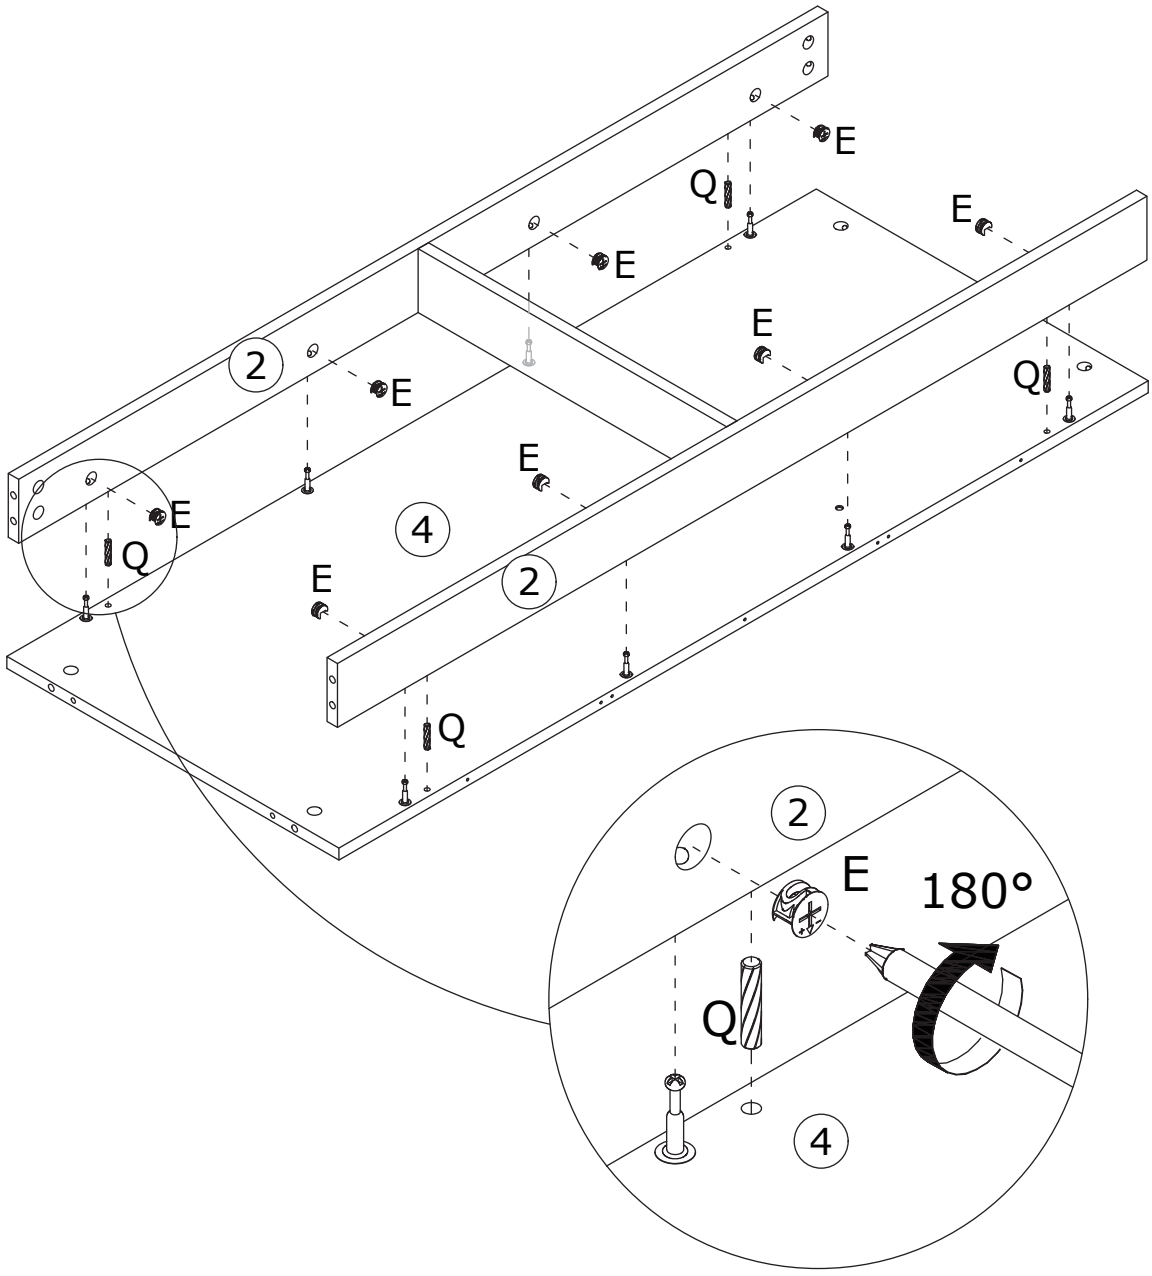


6



D x 2	Q x 2	
		
CRC0540A	CRF0630A	

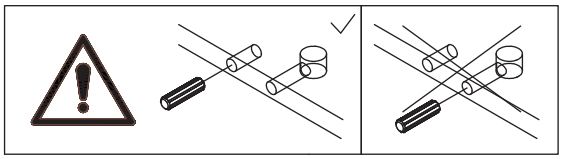


Connect panel 4 to panel 6 using dowel (Q) and secure with screw (D).

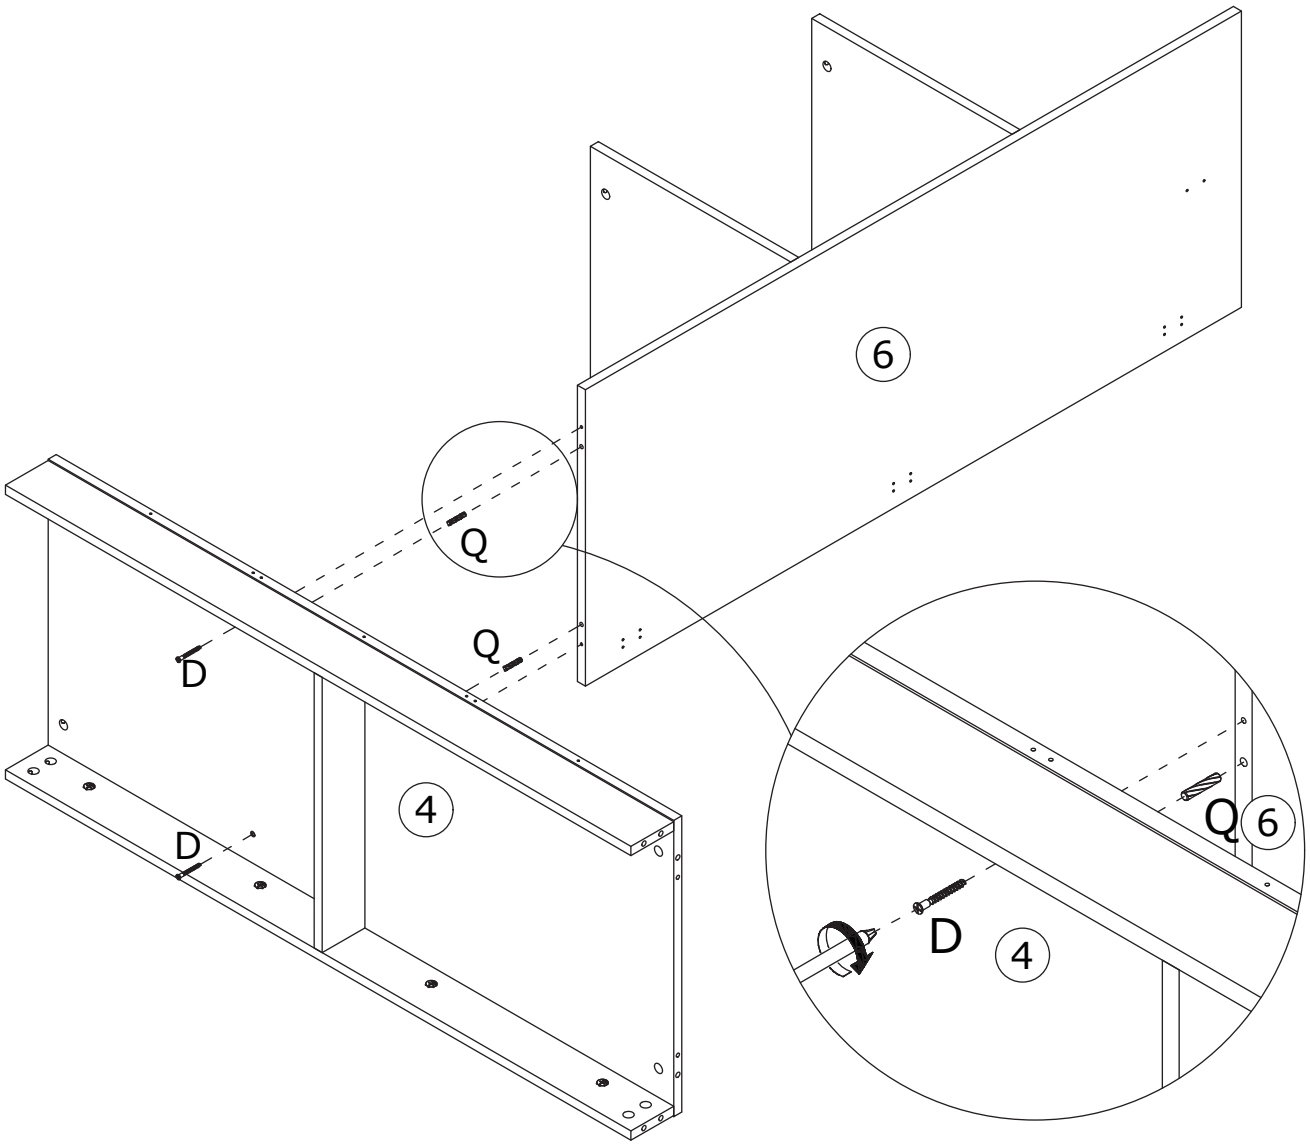


7




G x 2	P x 2	
 CRA0635B		

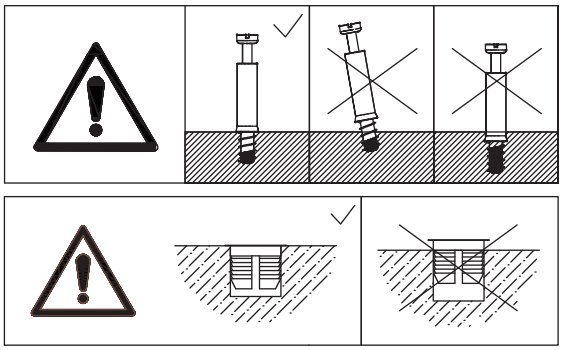


Insert plug (P) to panel 9, then screw self-tapping rod (G) onto.

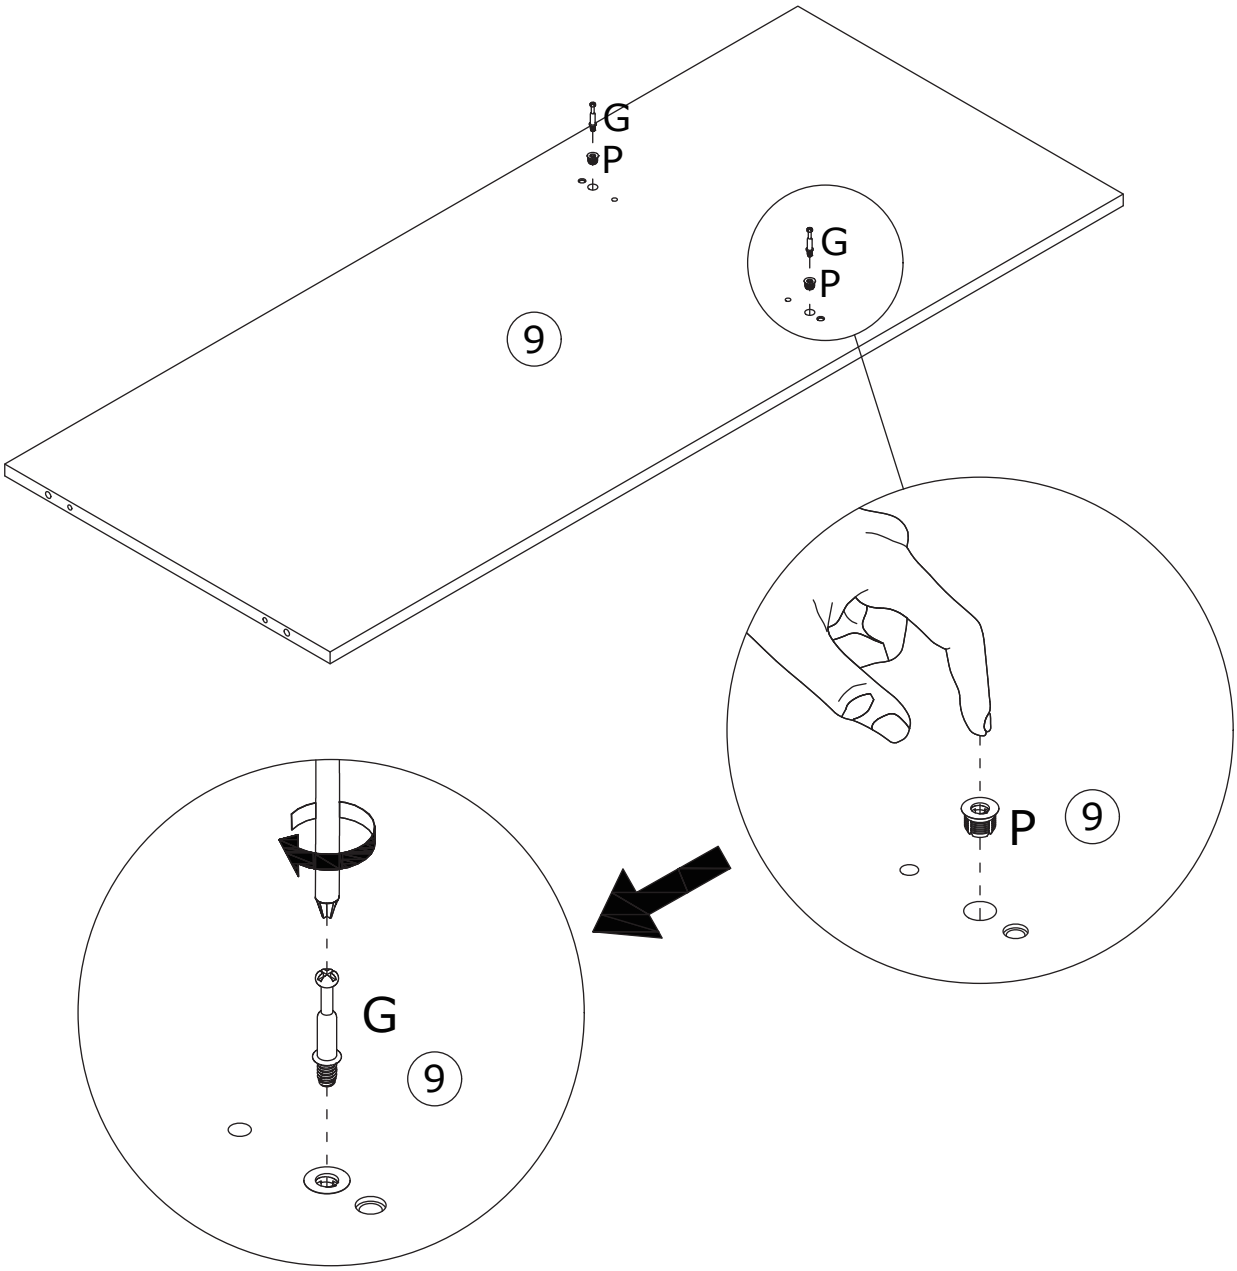


8



D x 2	Q x 2	
		
CRC0540A	CRF0630A	

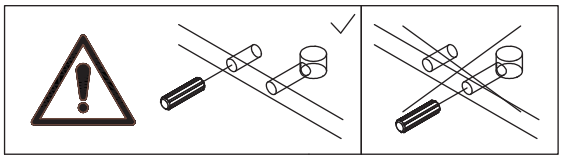


Connect panel 9 to panel 6 using dowel (Q) and secure with screw (D).

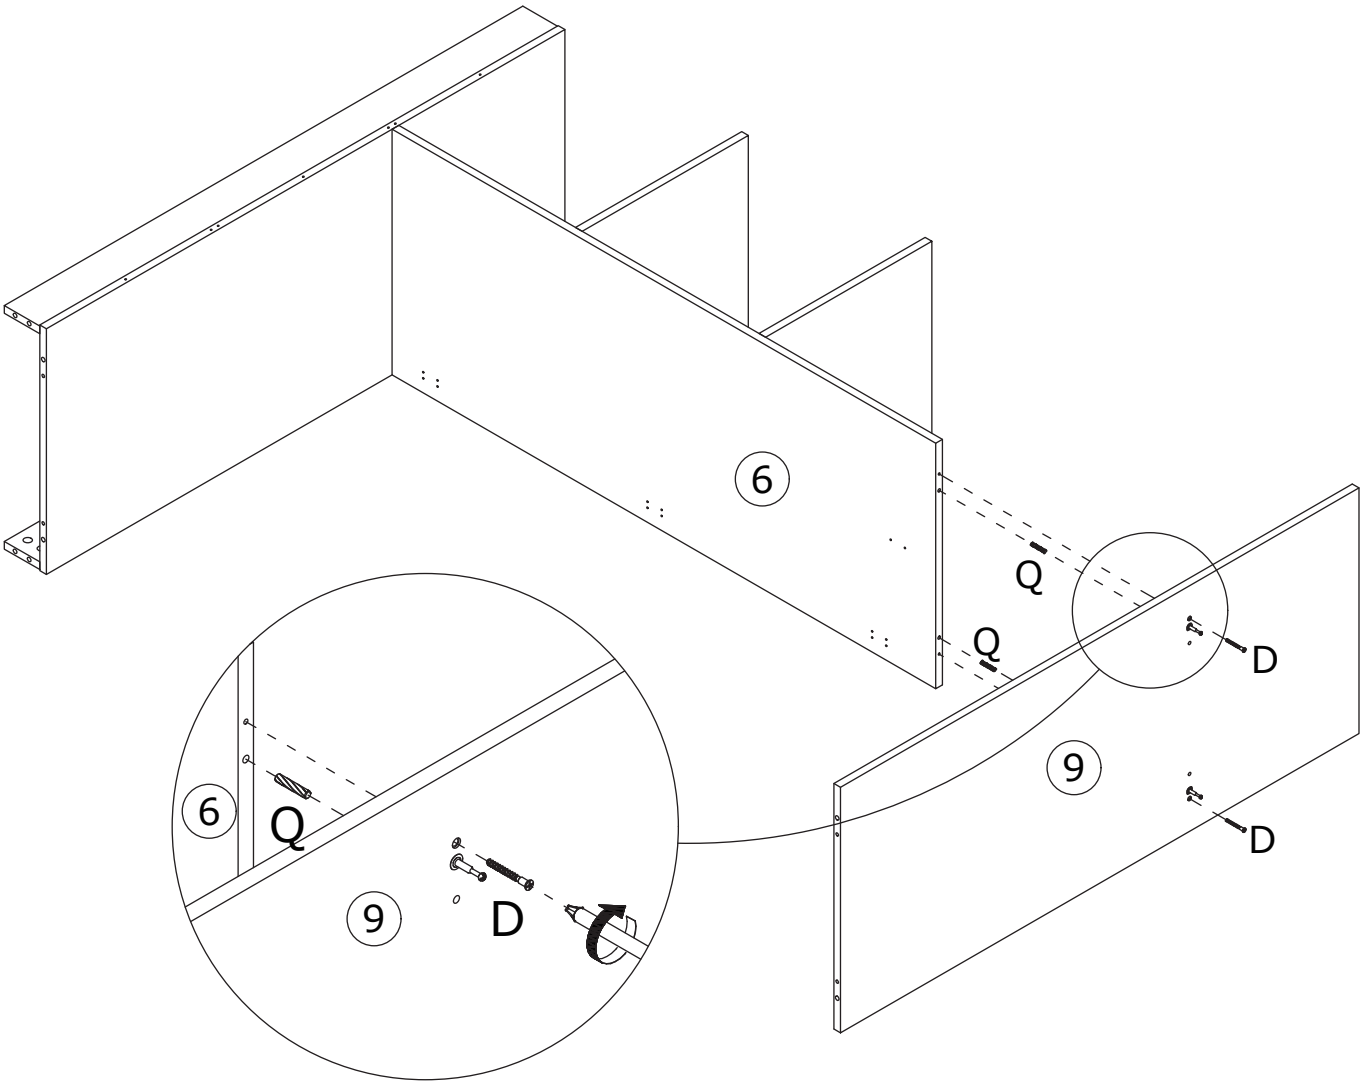


9




E x 2	Q x 2	
		
CRB1595A	CRF0630A	

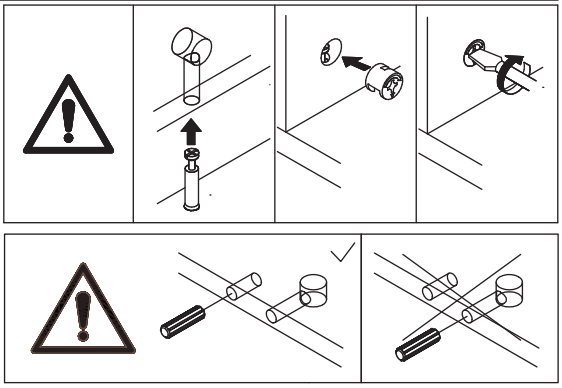


Connect panel 7 to panel 9 using wooden dowel (Q), then insert the eccentric wheel (E) and tighten it by turning clockwise.

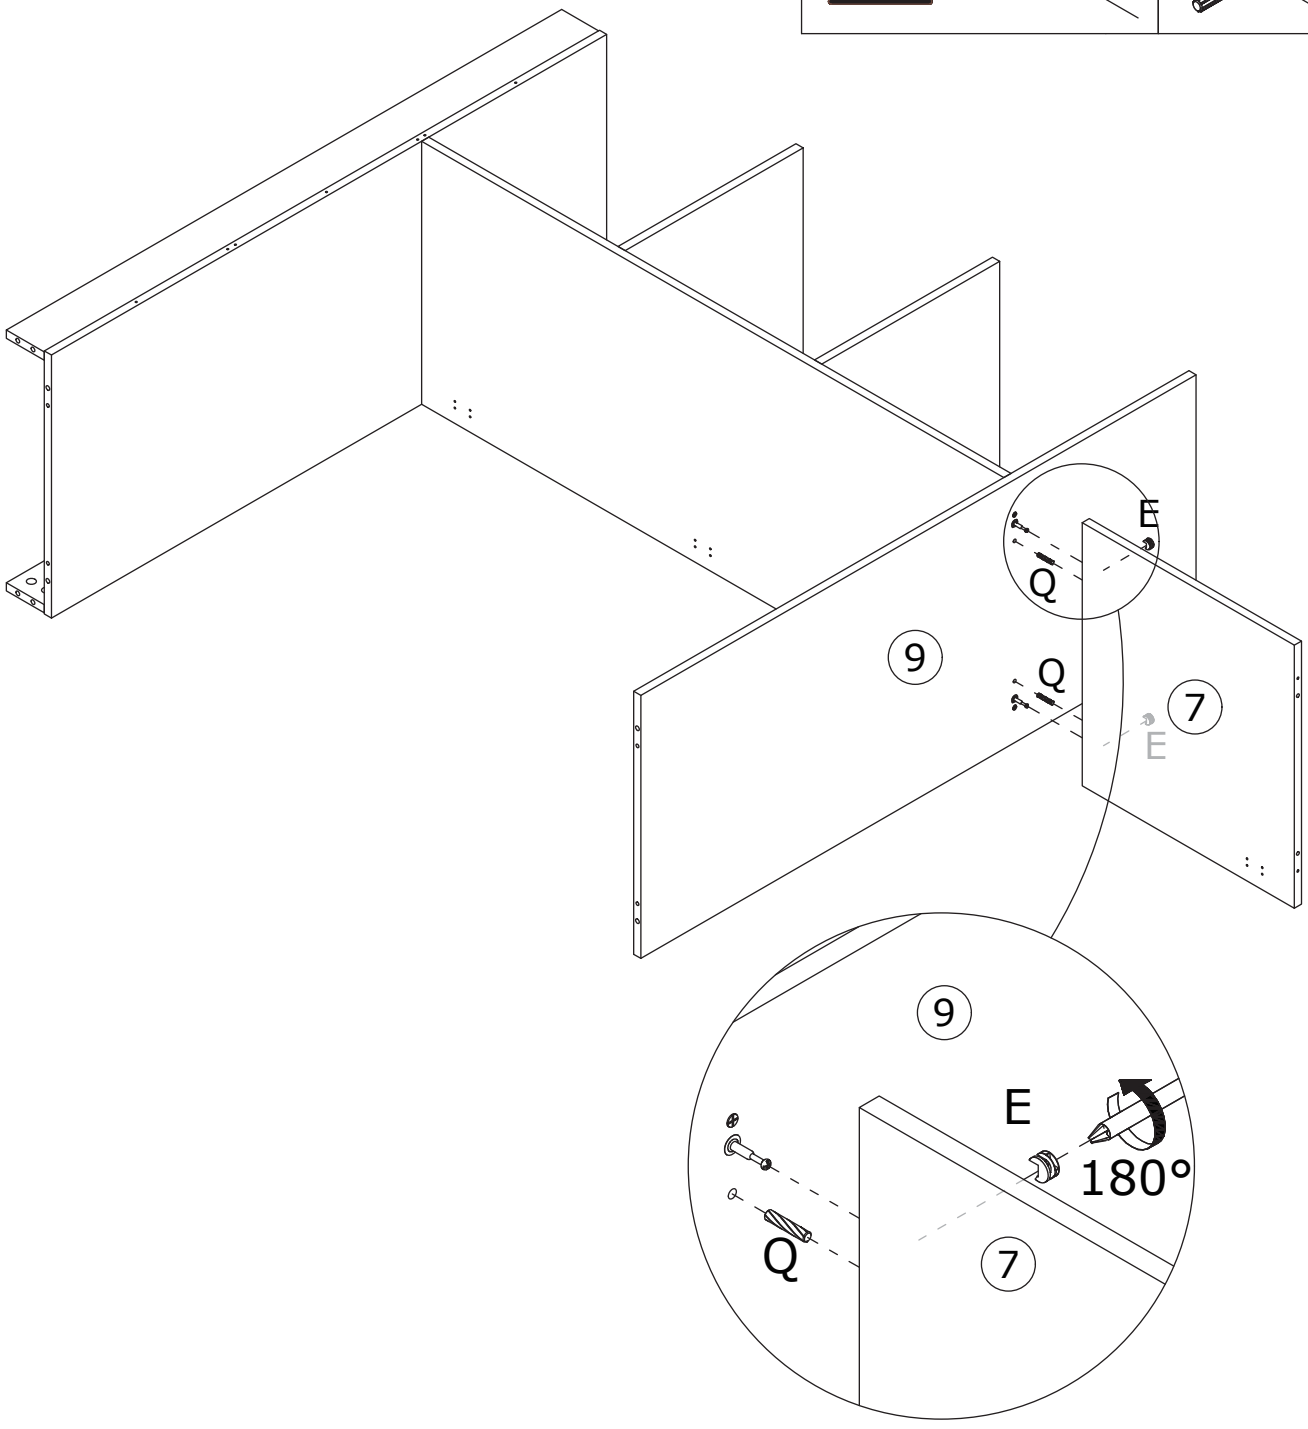


10



D x 2	Q x 2	
		
CRC0540A	CRF0630A	

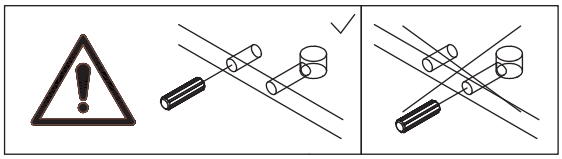


Connect panel 8 to panel 7 using dowel (Q) and secure with screw (D).

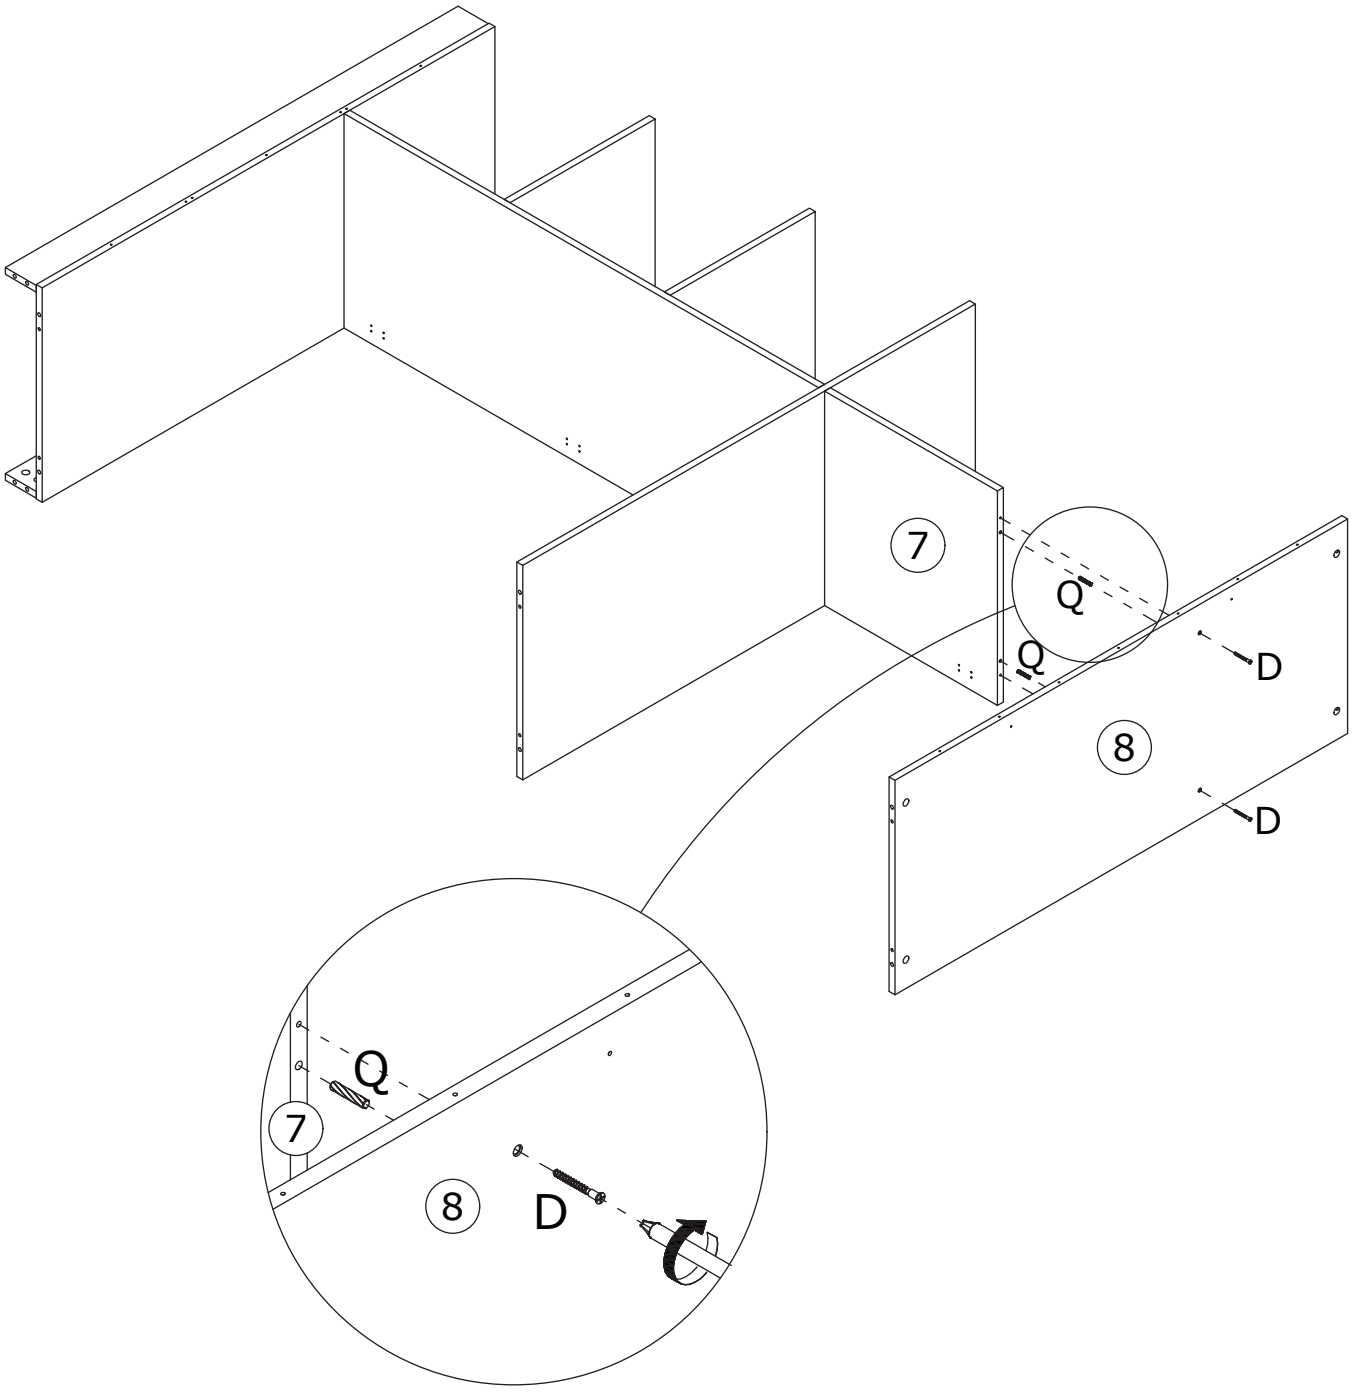



11

C x 1	G x 24	N x 2	P x 24	
	 CRA0635B	 CRD3514A		



Insert plug (P) to panels 1 and 10, then screw self-tapping rod (G) onto.
Secure clip (C) to panel 1 using screw (N).

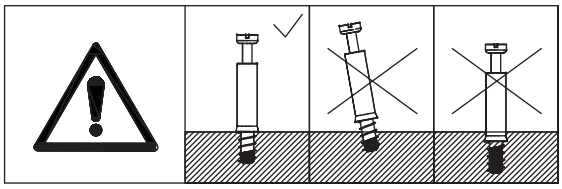


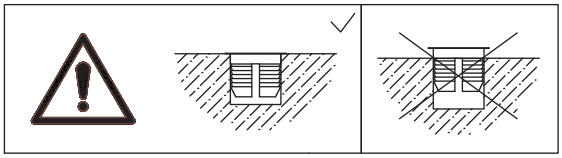

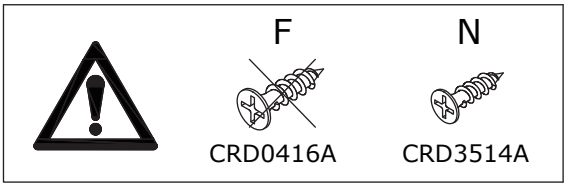


12



E x 10	Q x 6	
		
CRB1595A	CRF0630A	

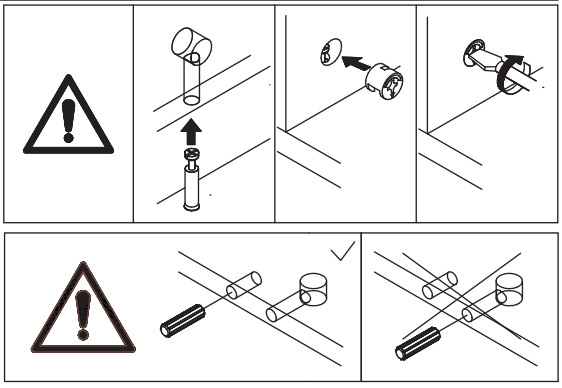


Attach panel 1 to the component using wooden dowel (Q), then insert the eccentric wheel (E) and tighten it by turning clockwise.

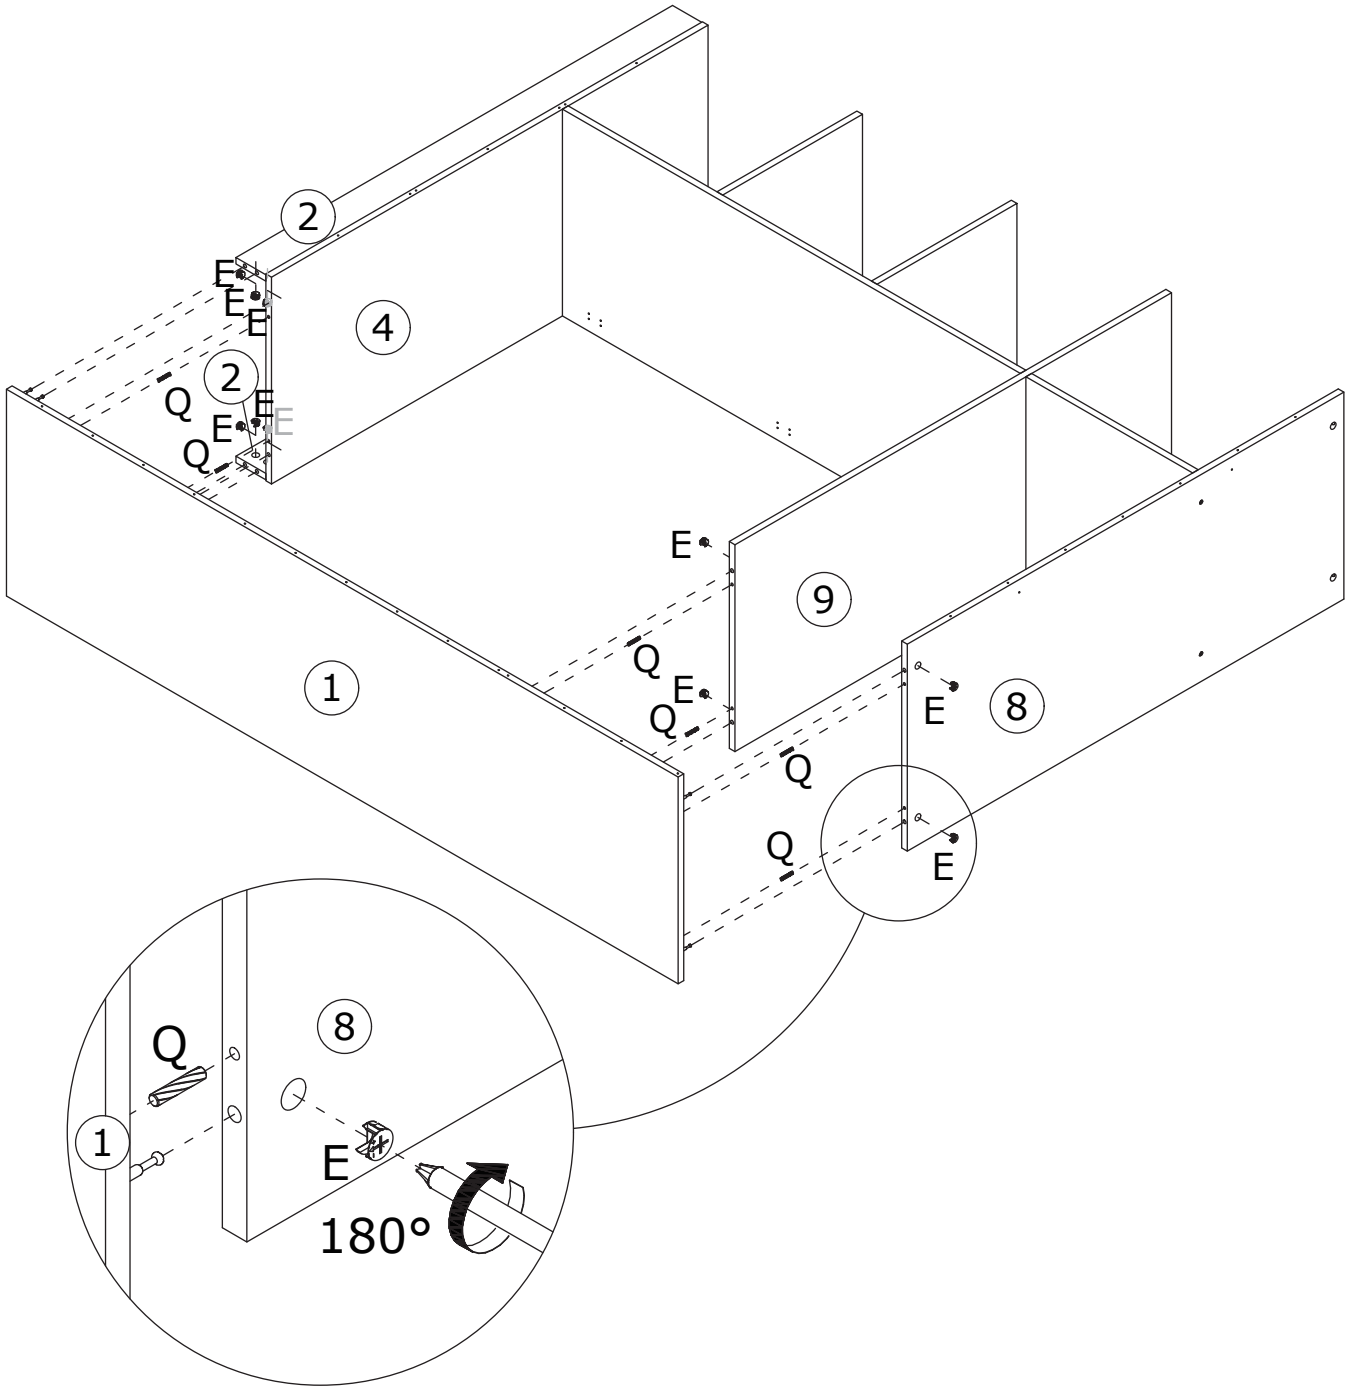


13


E x 14	Q x 10	
 CRB1595A	 CRF0630A	

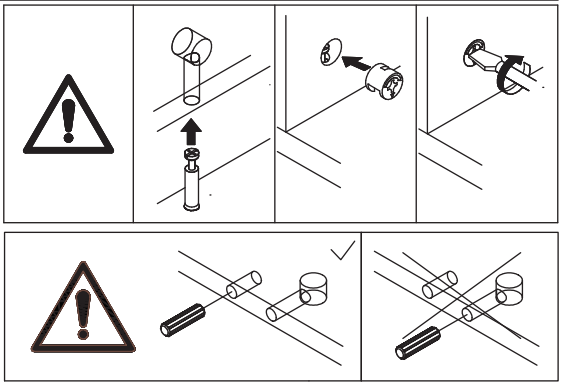


Attach panel 10 to the component using wooden dowel (Q), then insert the eccentric wheel (E) and tighten it by turning clockwise.

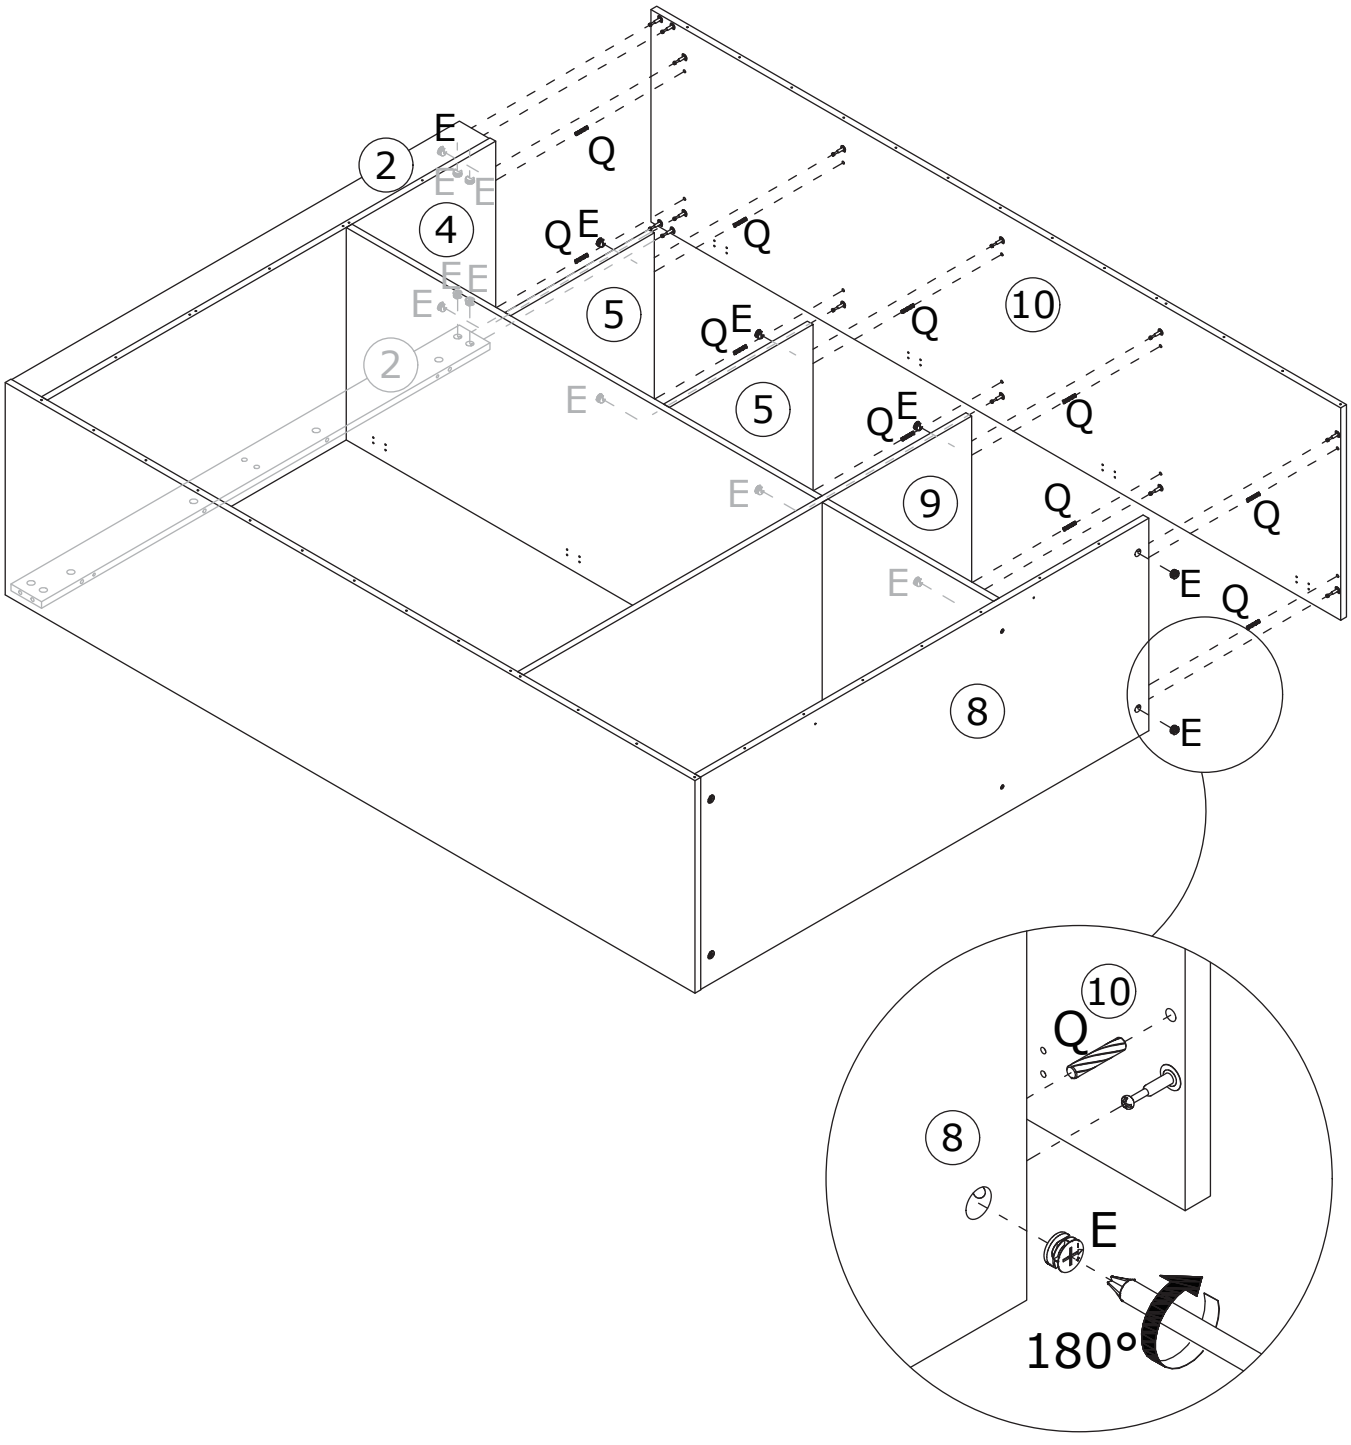


14

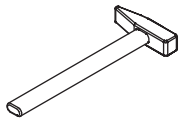B x 57	L x 15	
		

Connect panels 14 and 16 to strip 13 first.
Secure panels 14, 15, 16, and 17 to the mounting unit using screw (B) and iron sheet (L).

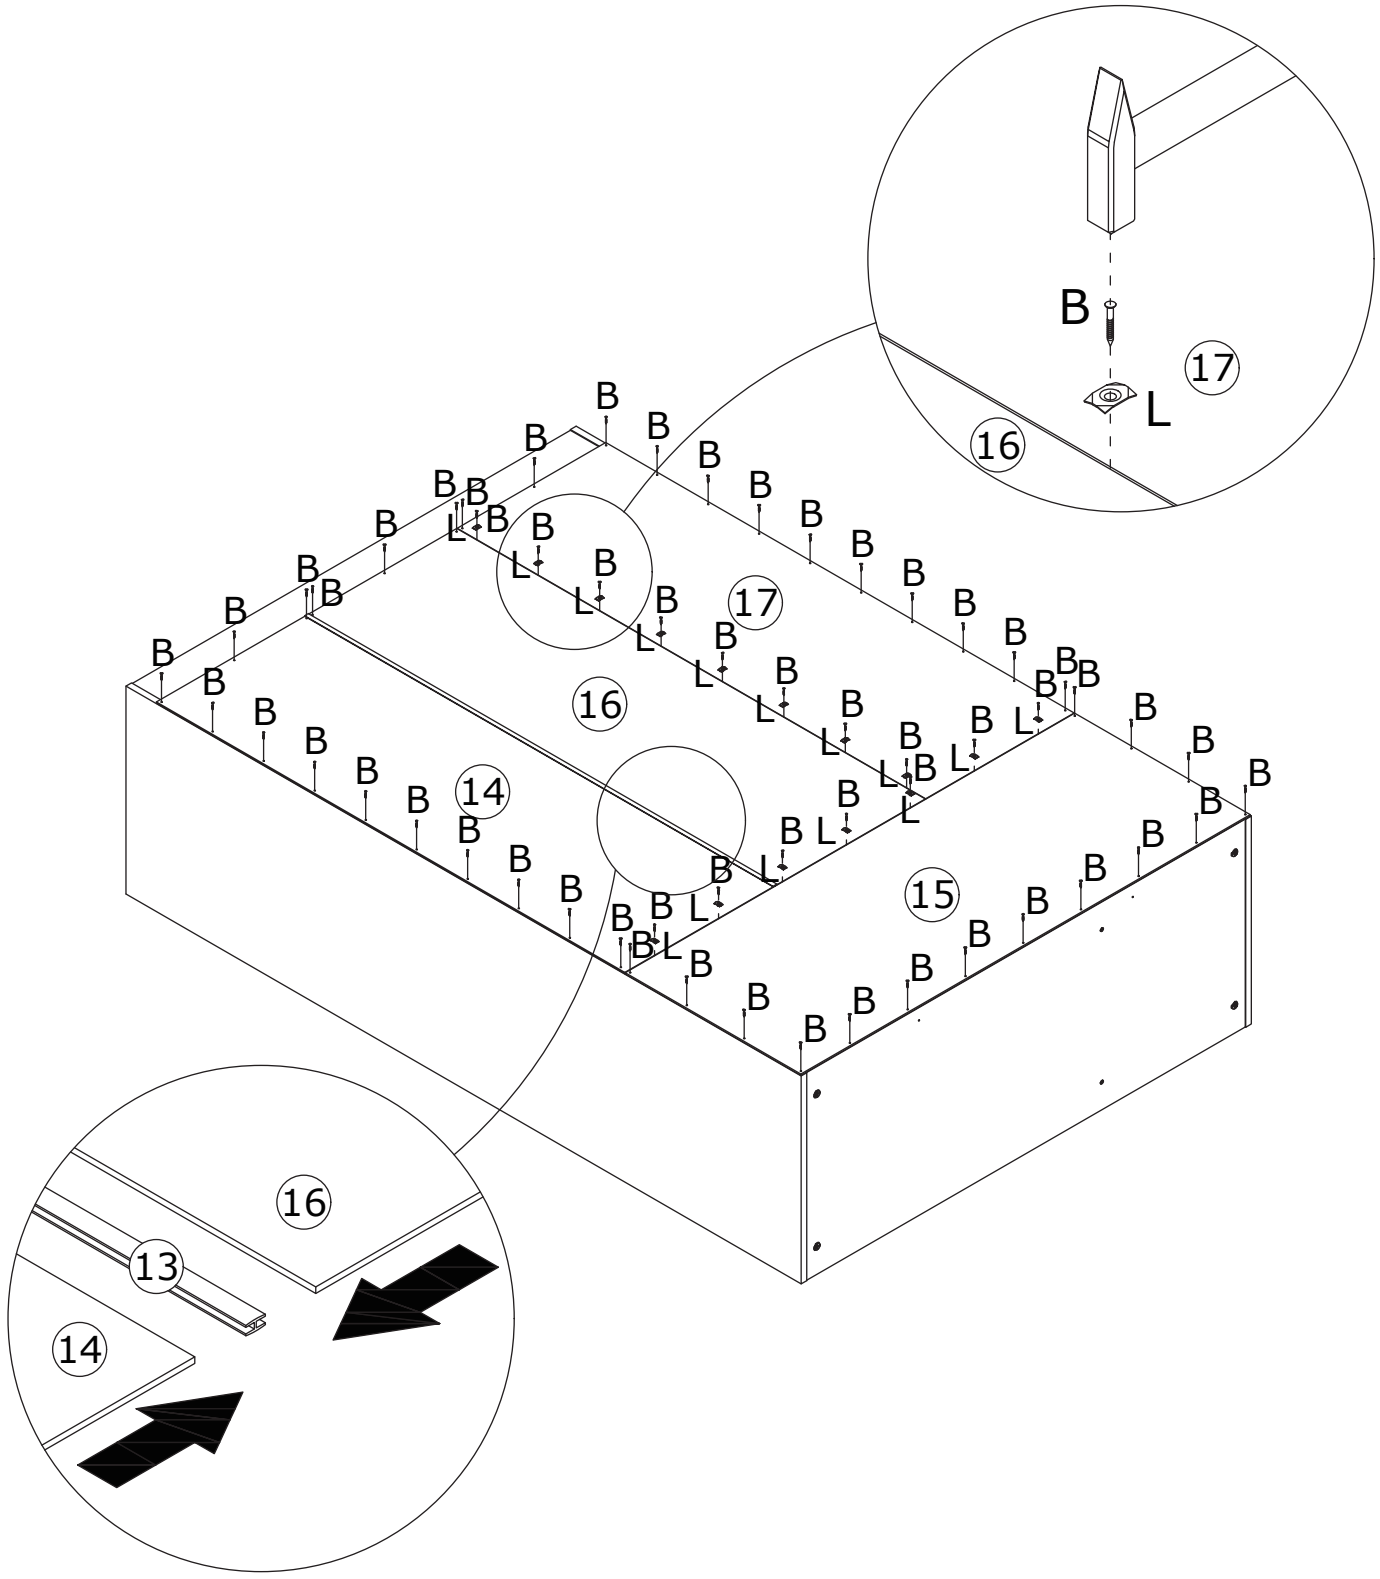


15


C x 1	N x 2	
	 CRD3514A	


	F	N
	 CRD0416A	 CRD3514A

Secure clip (C) to panel 6 using screw (Q).

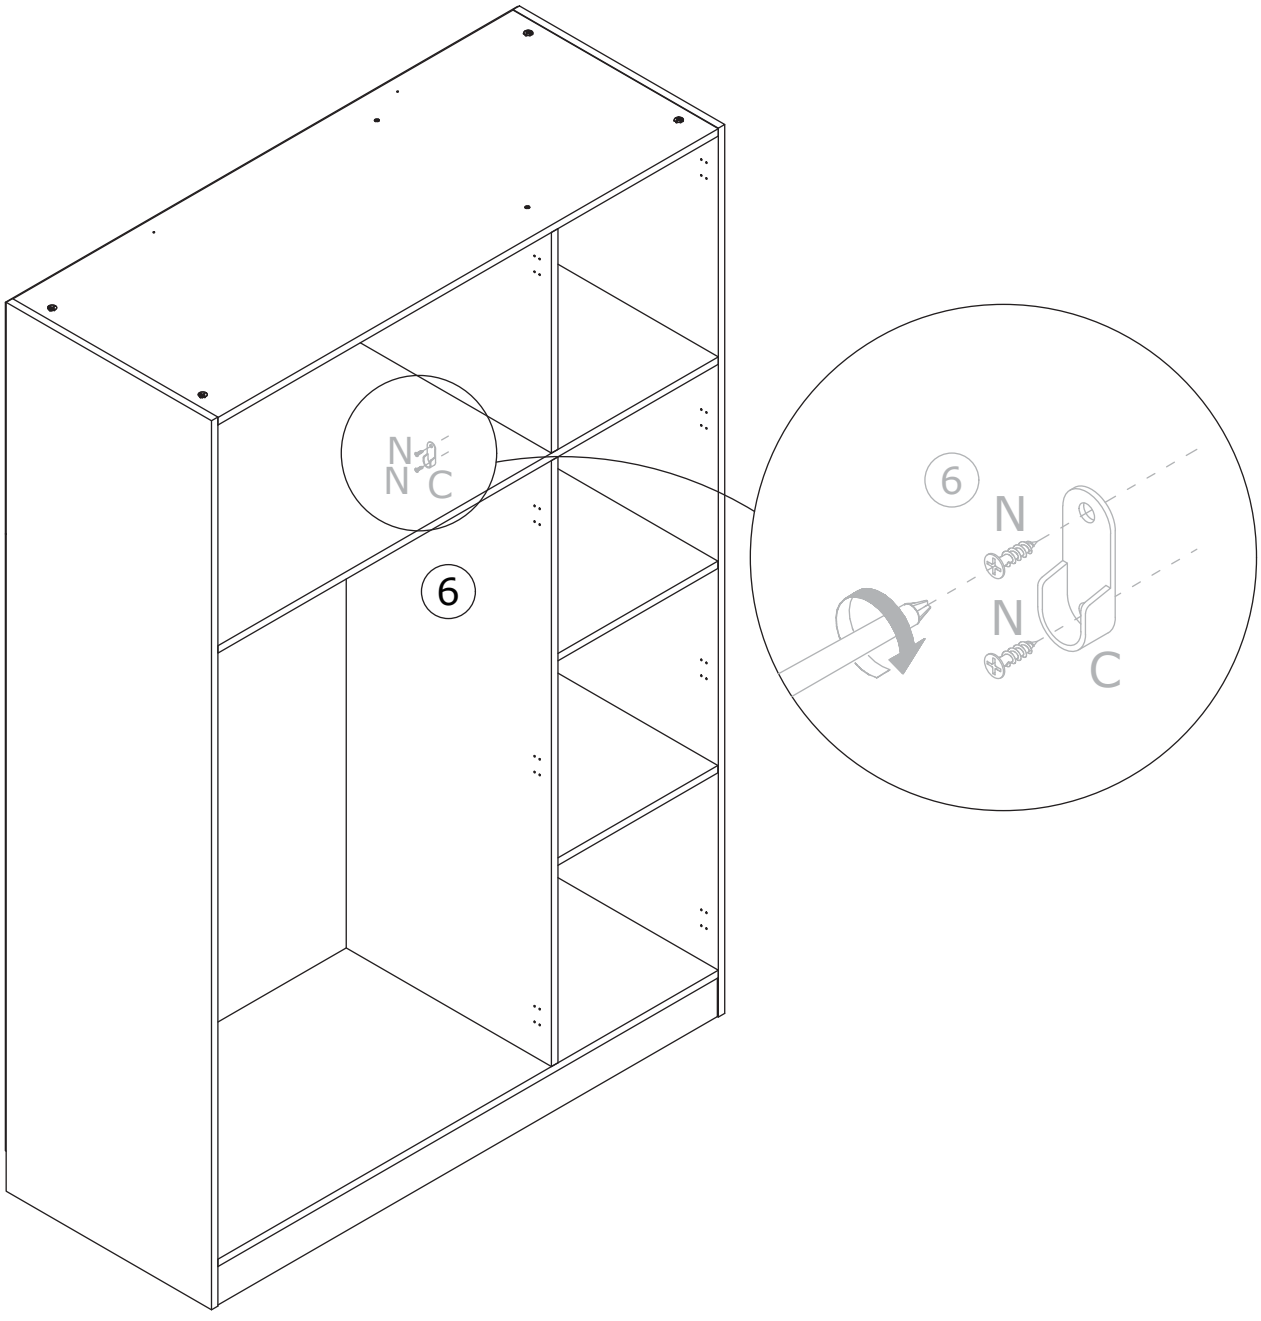


16

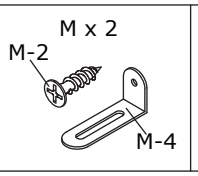





Secure bracket (M-4) to panel 8 using screw (M-2).

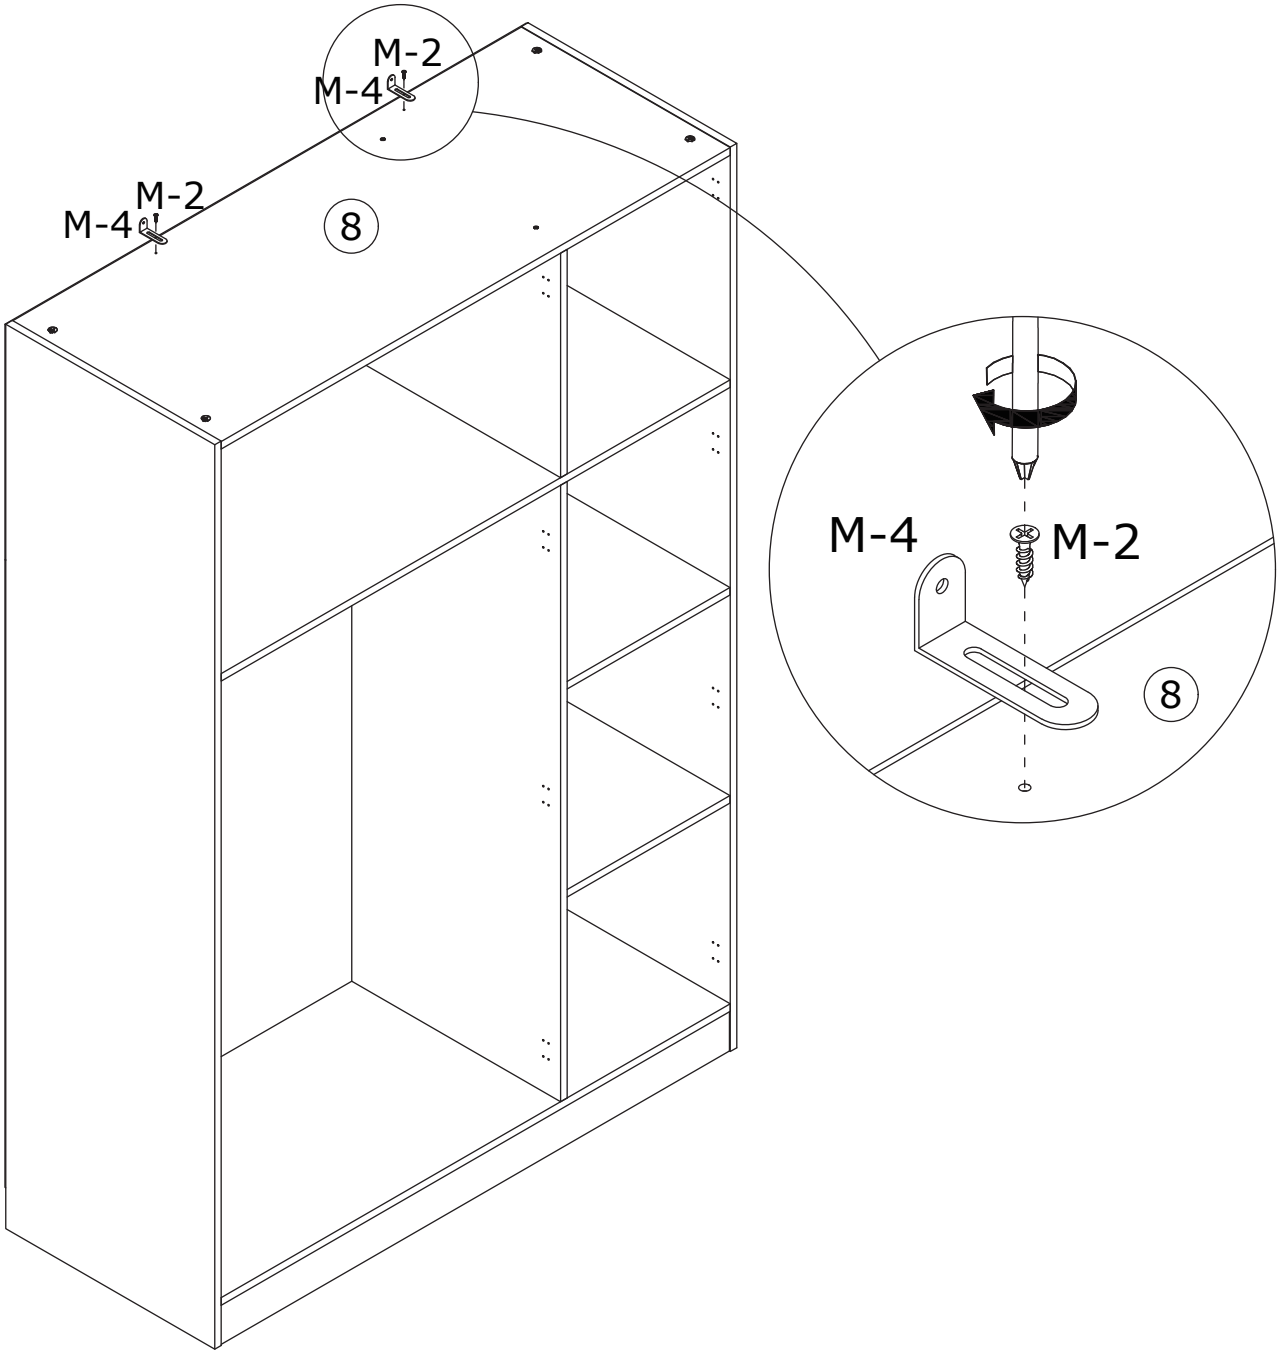


17

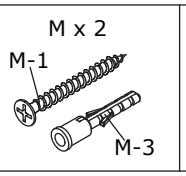

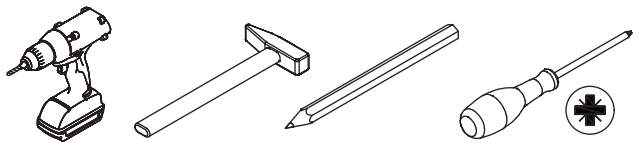


Drill small holes with a drill bit. Tap fitting (M-3) into the wall. Secure bracket (M-4) to the wall with screw (M-1).

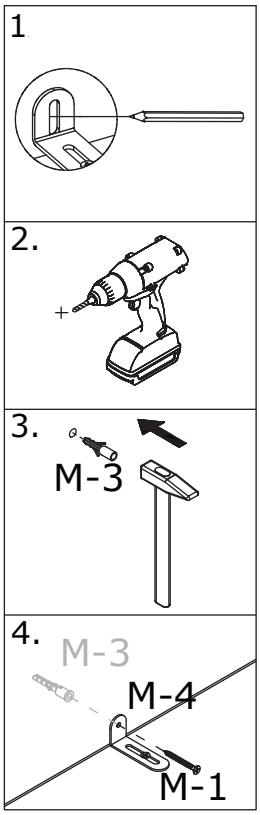


18

K x 1

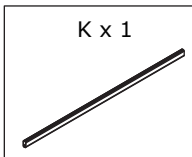

Install clothing rod (K) to the main body.

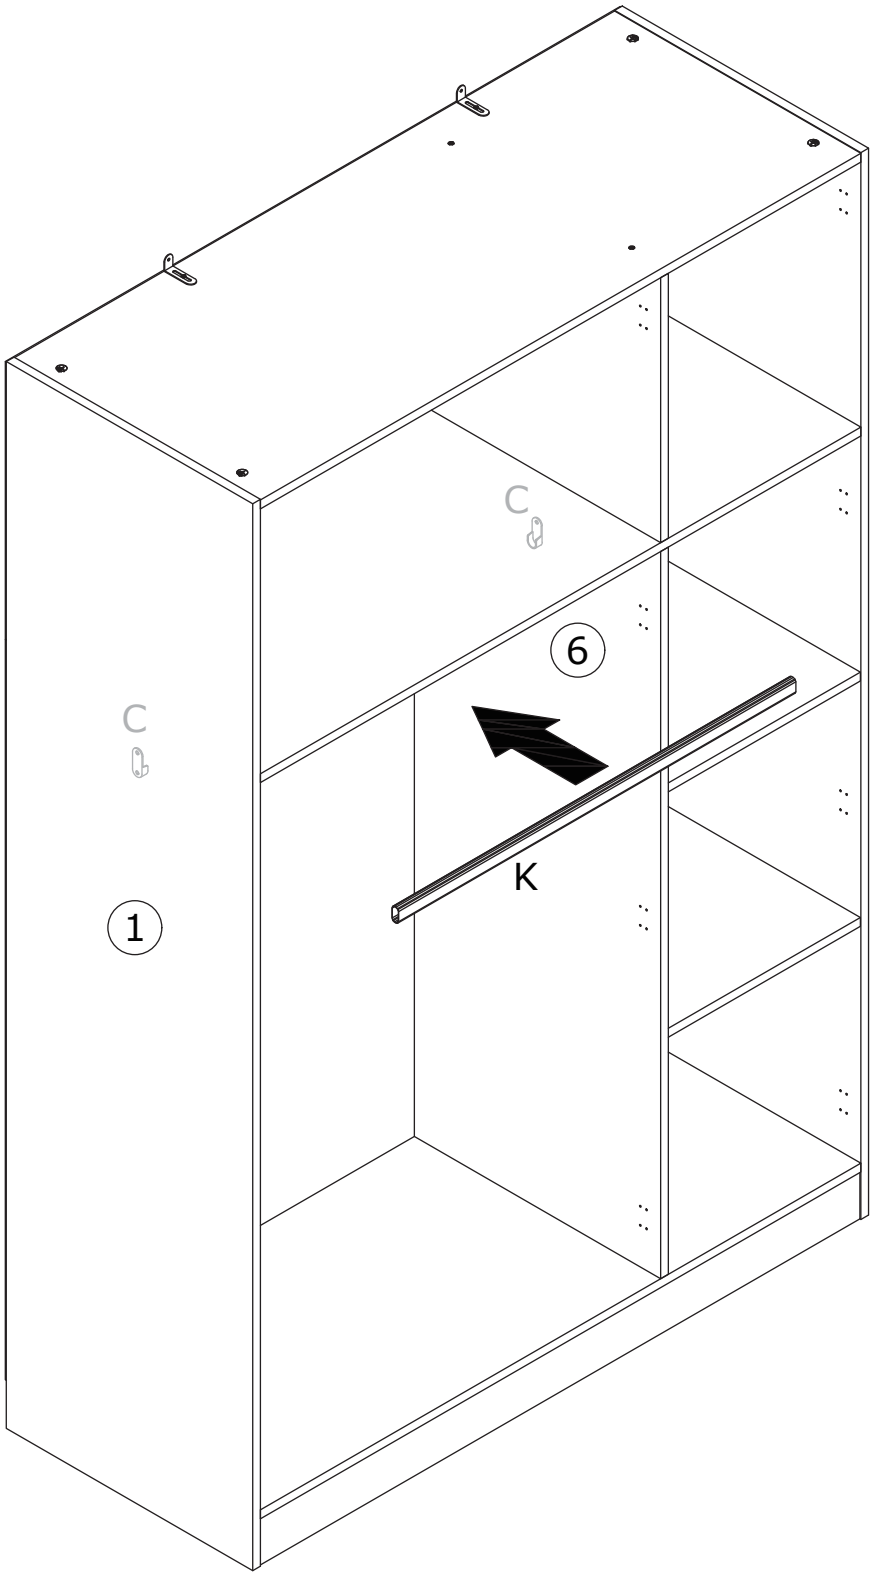


19


Pay attention to the difference between the middle parts of the two types of door hinges.

•The Butt hinge (H) is used on the outermost door plates.

•And the Offset hinge (I) is used on th middle door plates.



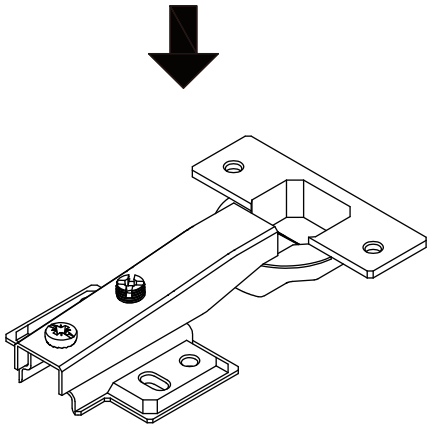


H

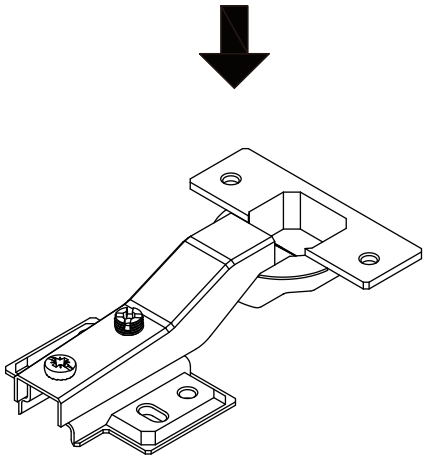

I

20


F x 16	H x 8	
 CRD0416A	 DGA861A	



F  CRD0416A


N  CRD3514A



H  DGA861A


I  DGA861B

Secure hinge (H) to panel 12 using screw (F)

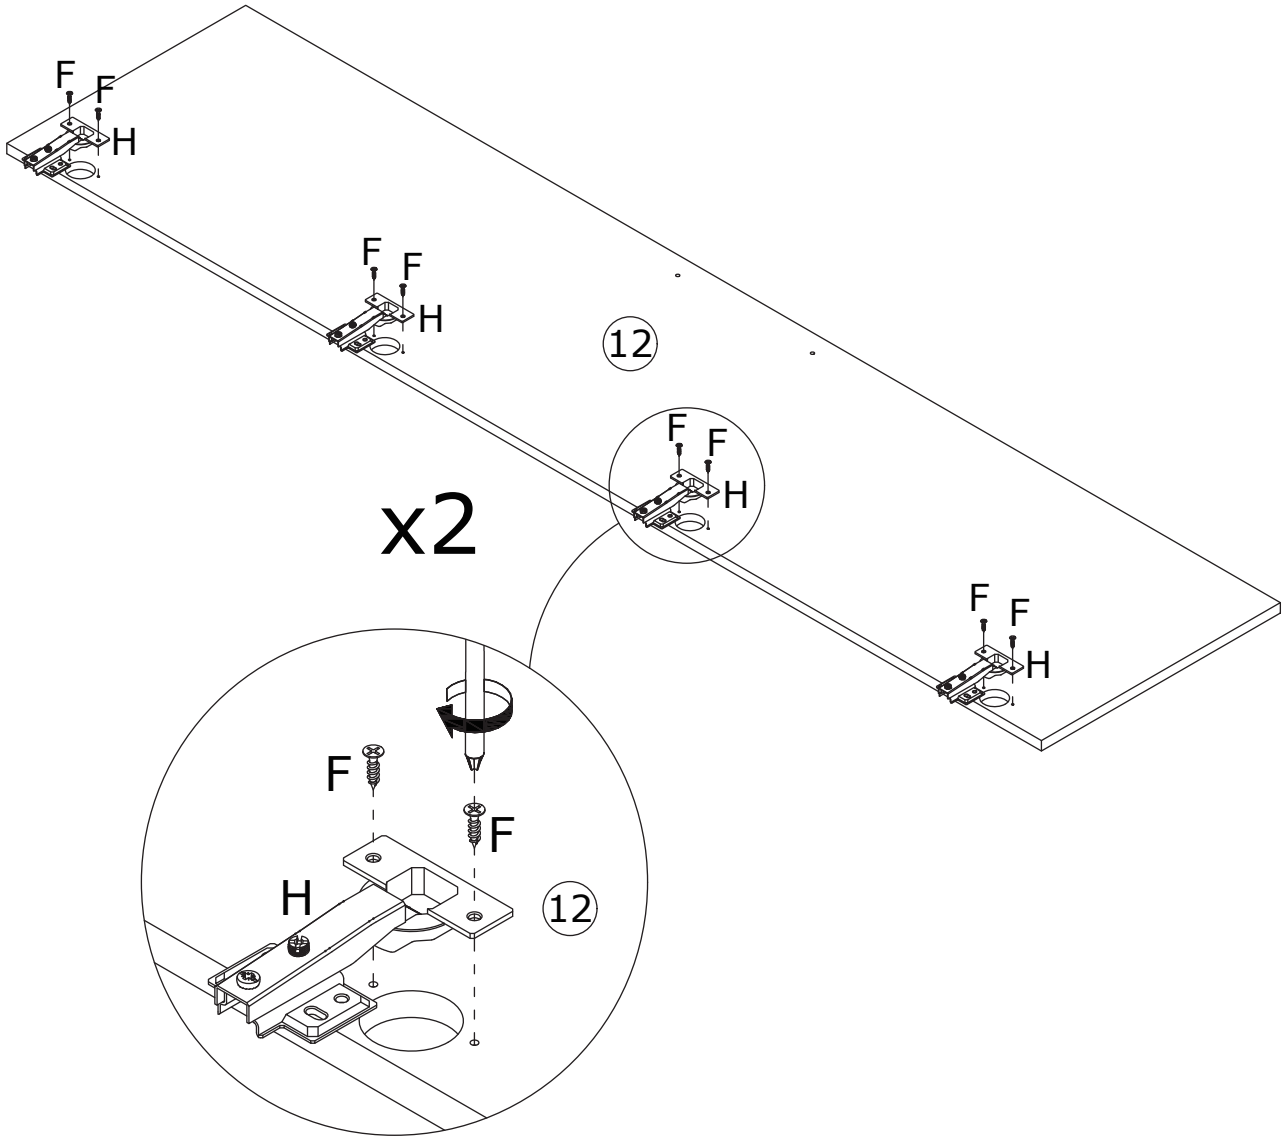


21

F x 32



CRD0416A





F




CRD0416A

N






CRD3514A


Secure panel 12 to panels 1 and 10 using screw (F).

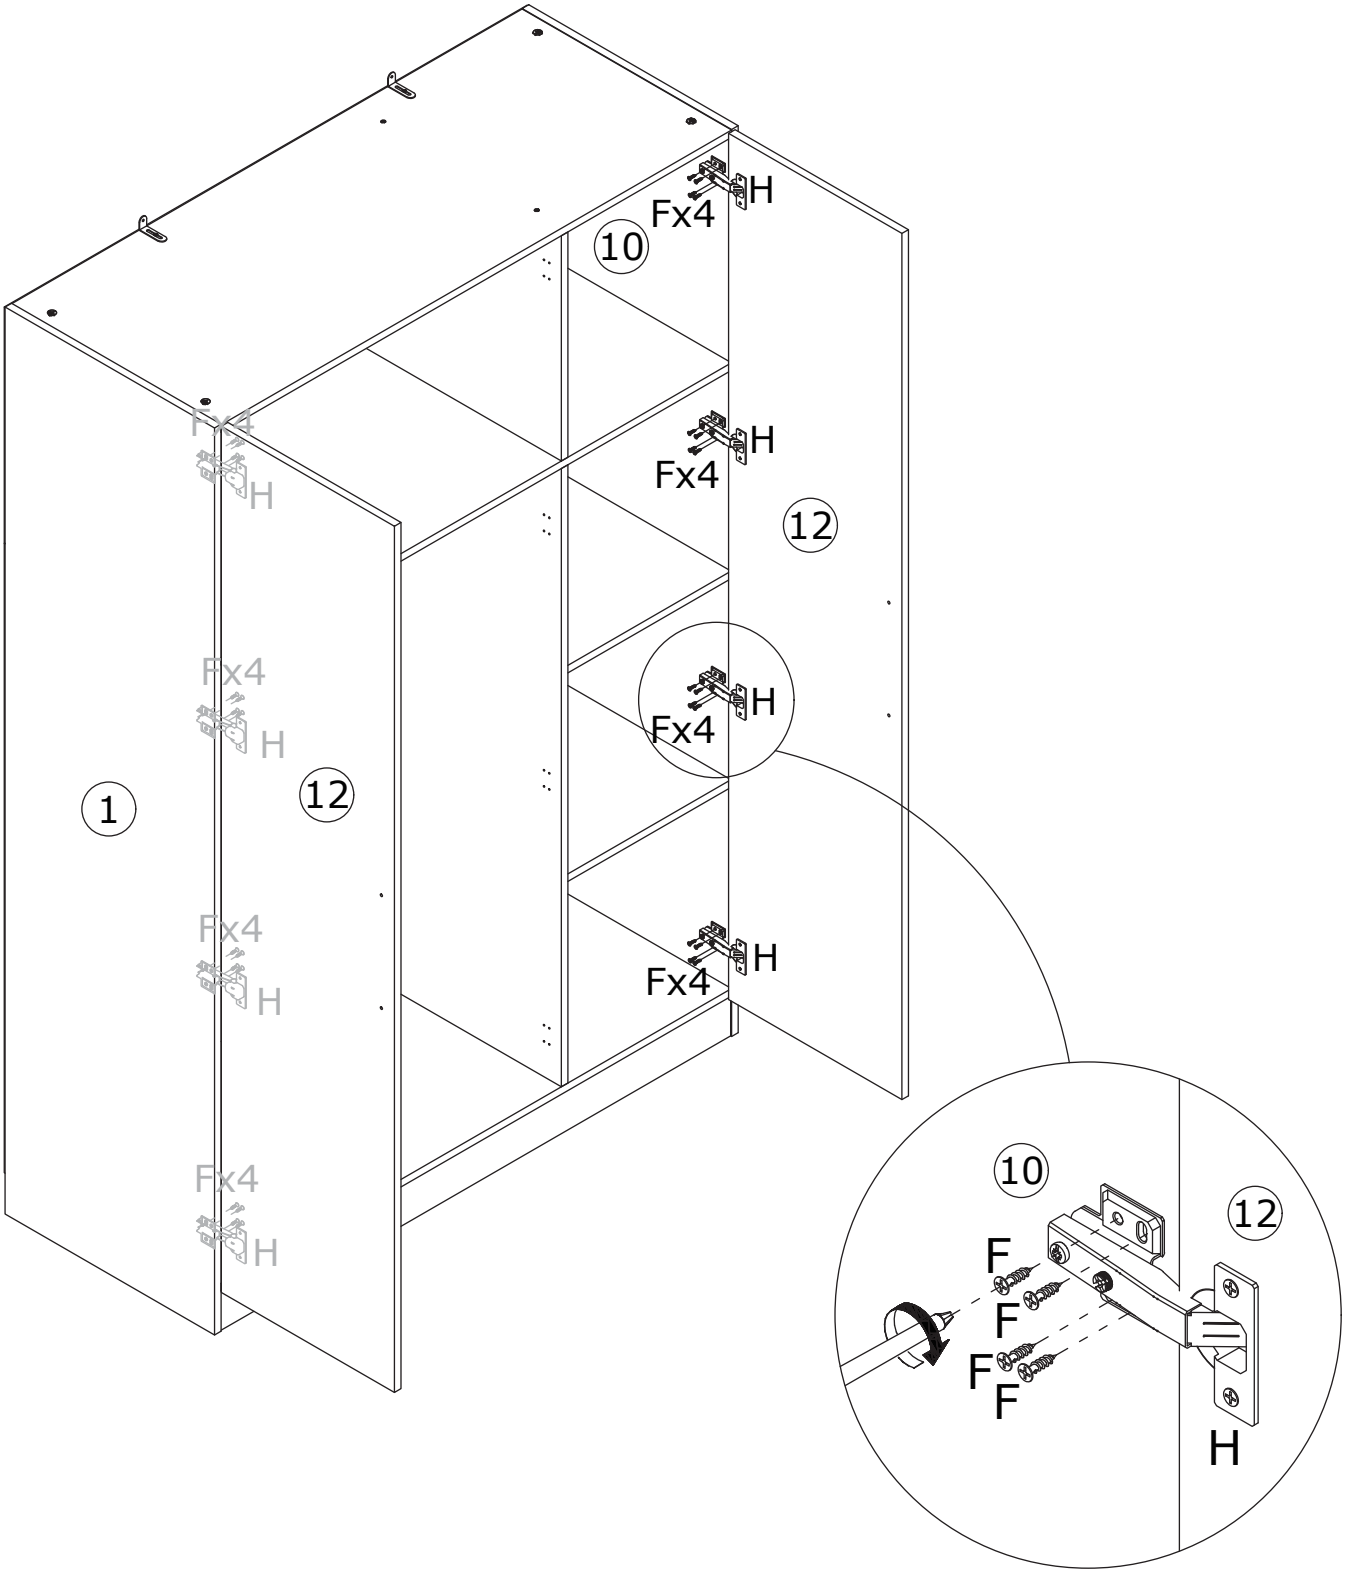




22

A x 4	J x 2	
		
CRE0418A	224-400mm	

Secure handle (J) to panel 12 using screw (A).

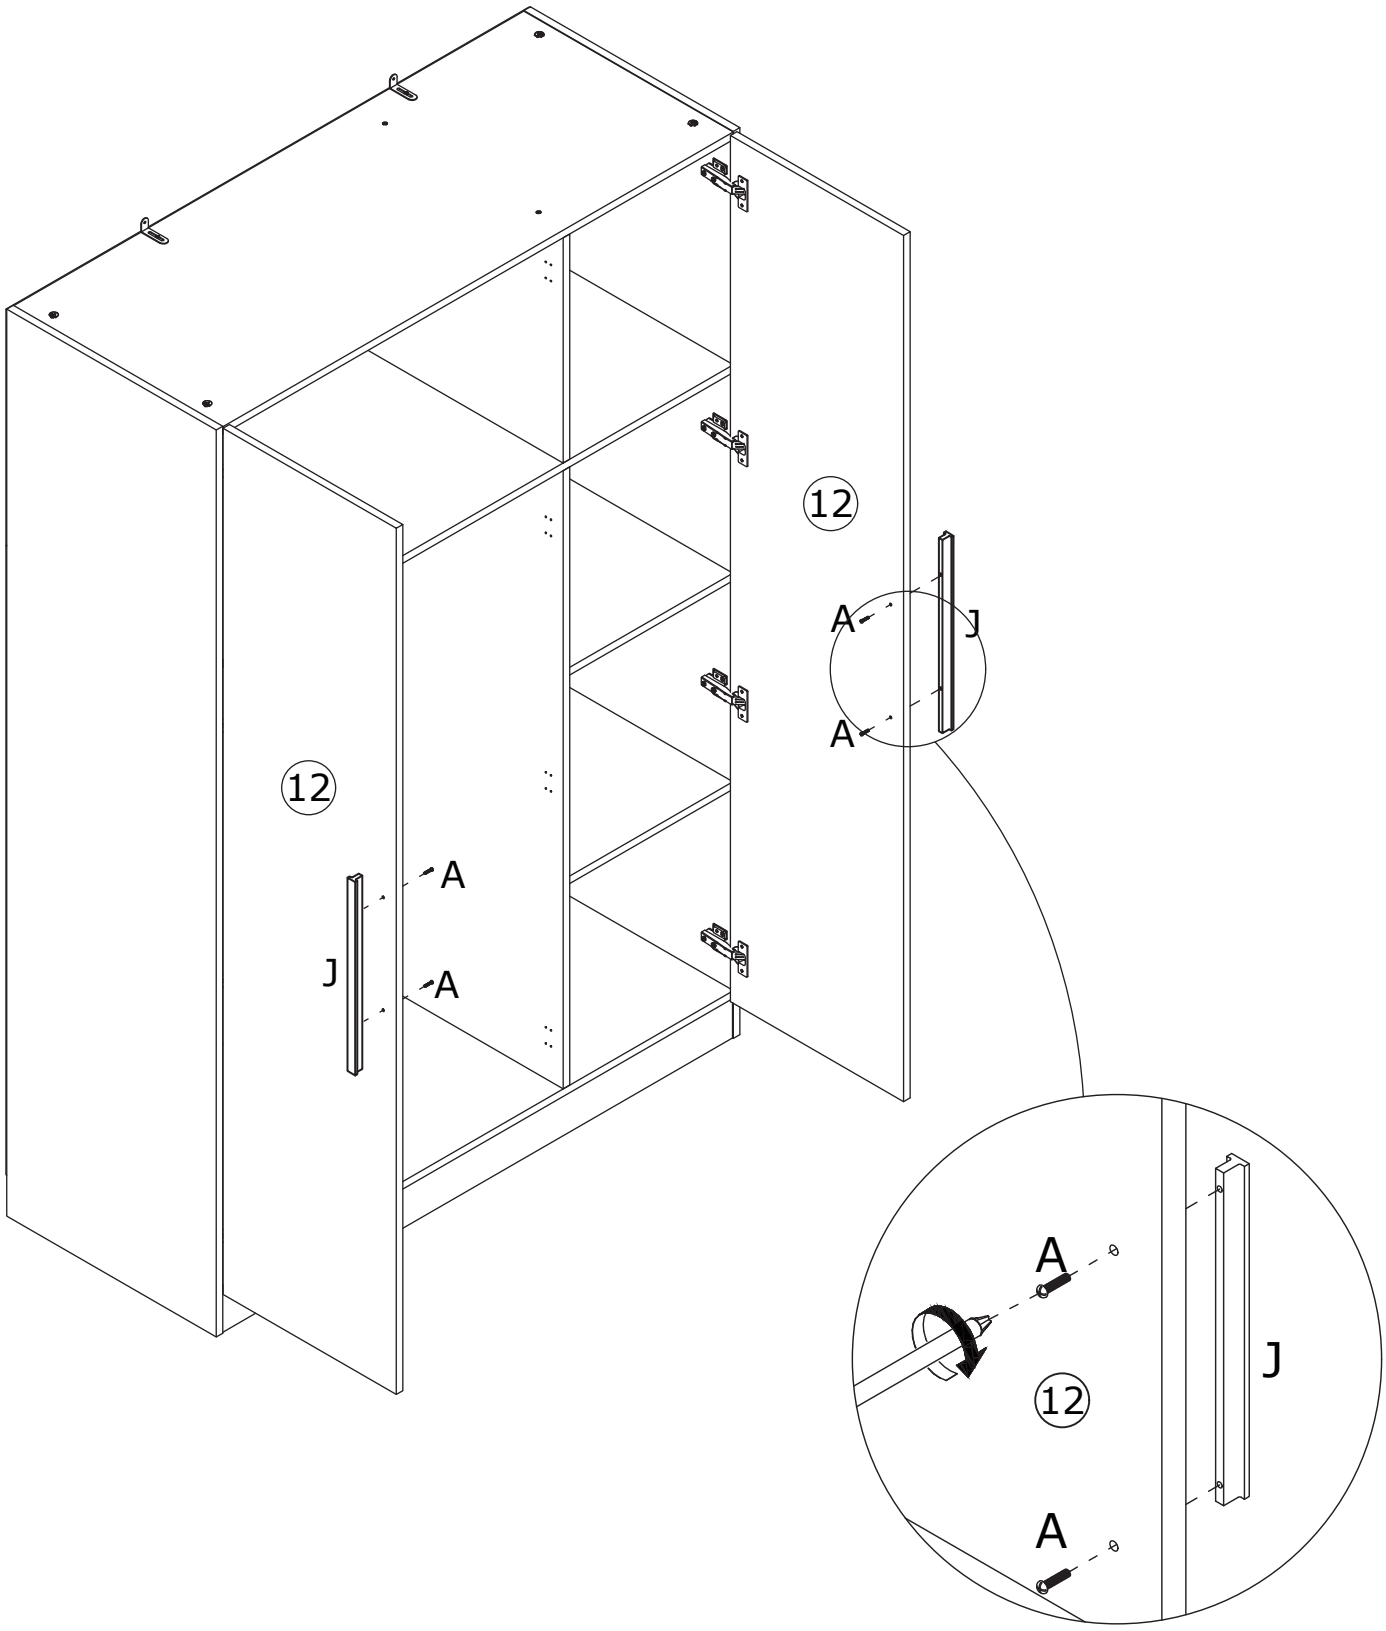

23

F x 8	I x 4	
 CRD0416A	 DGA861B	




F  CRD0416A


N  CRD3514A



H  DGA861A


I  DGA861B

Secure hinge (I) to panel 12 using screw (F).

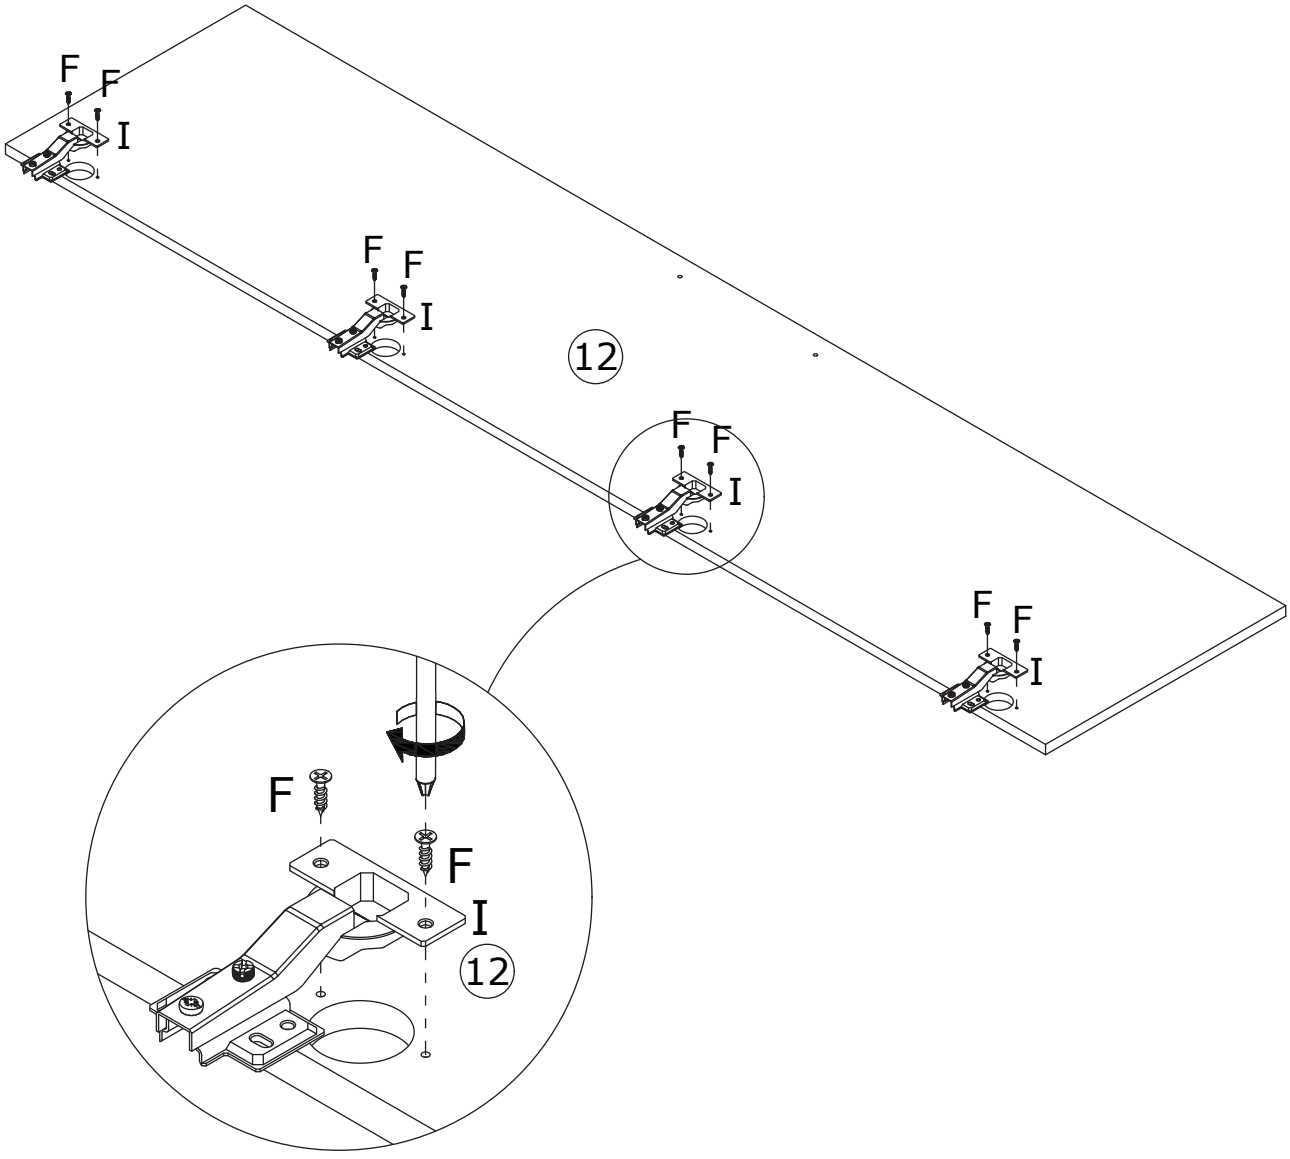


24

F x 16



CRD0416A





F




CRD0416A

N






CRD3514A


Secure panel 12 to panel 6 using screw (F).

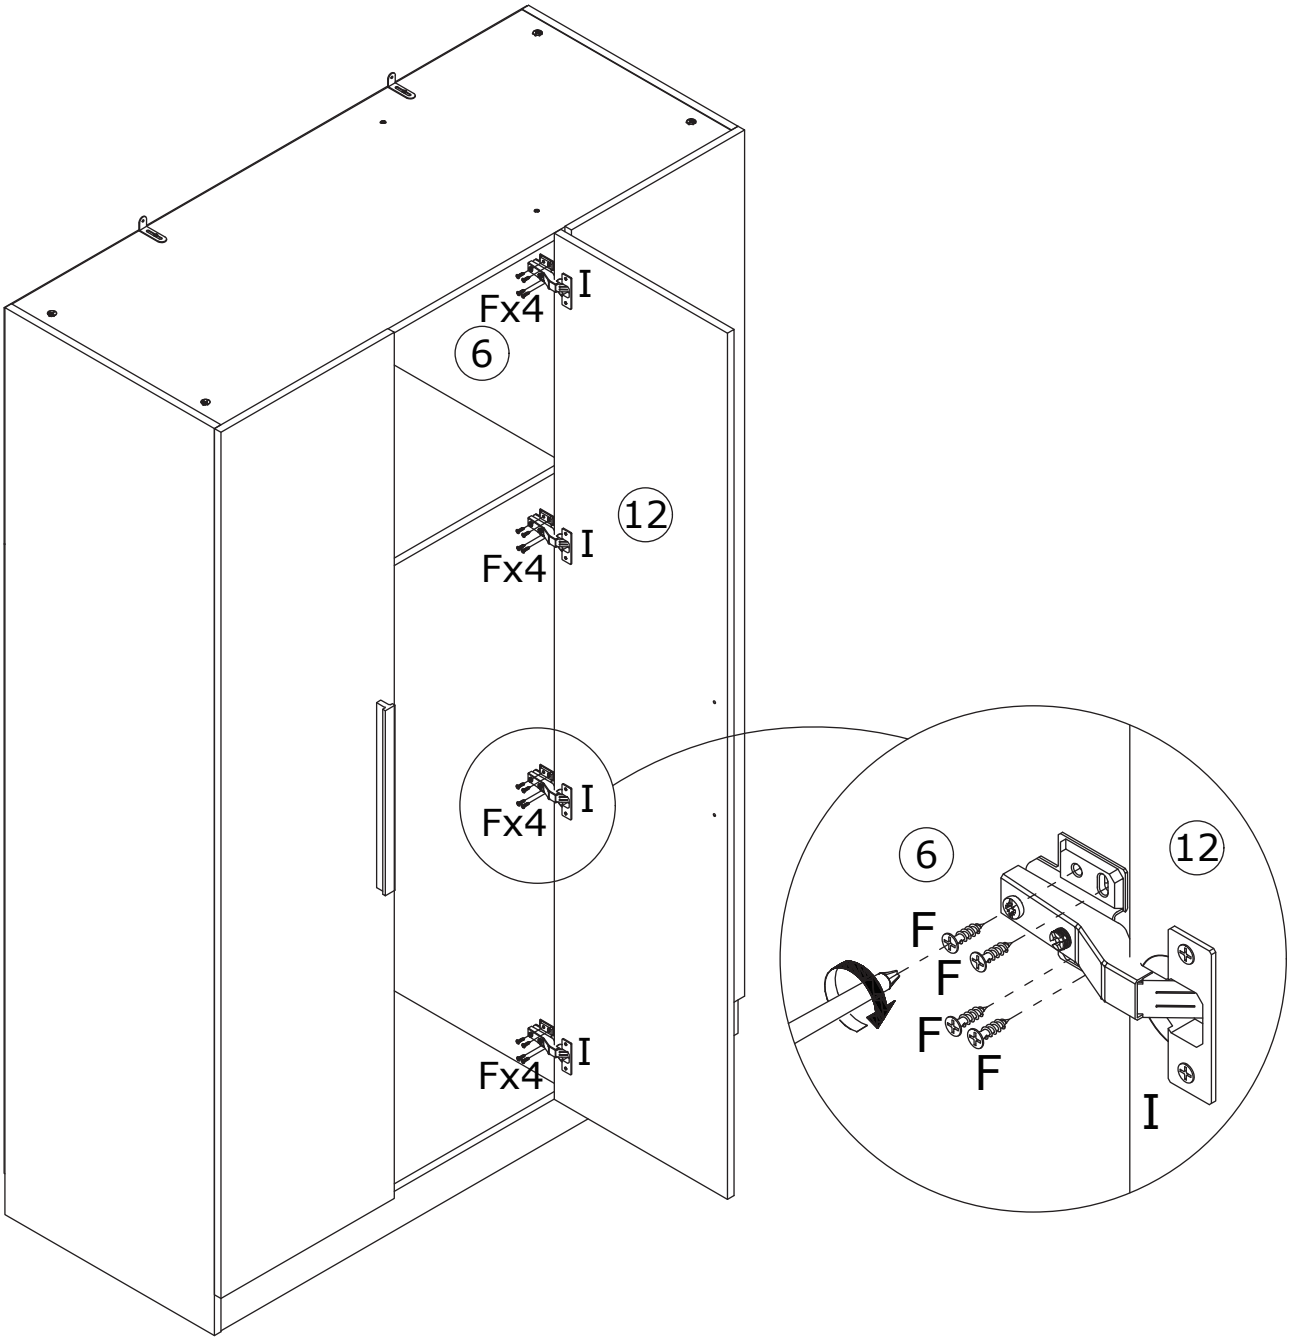


25


A x 2	J x 1	
		
CRE0418A	224-400mm	

Secure handle (J) to panel 12 using screw (A).

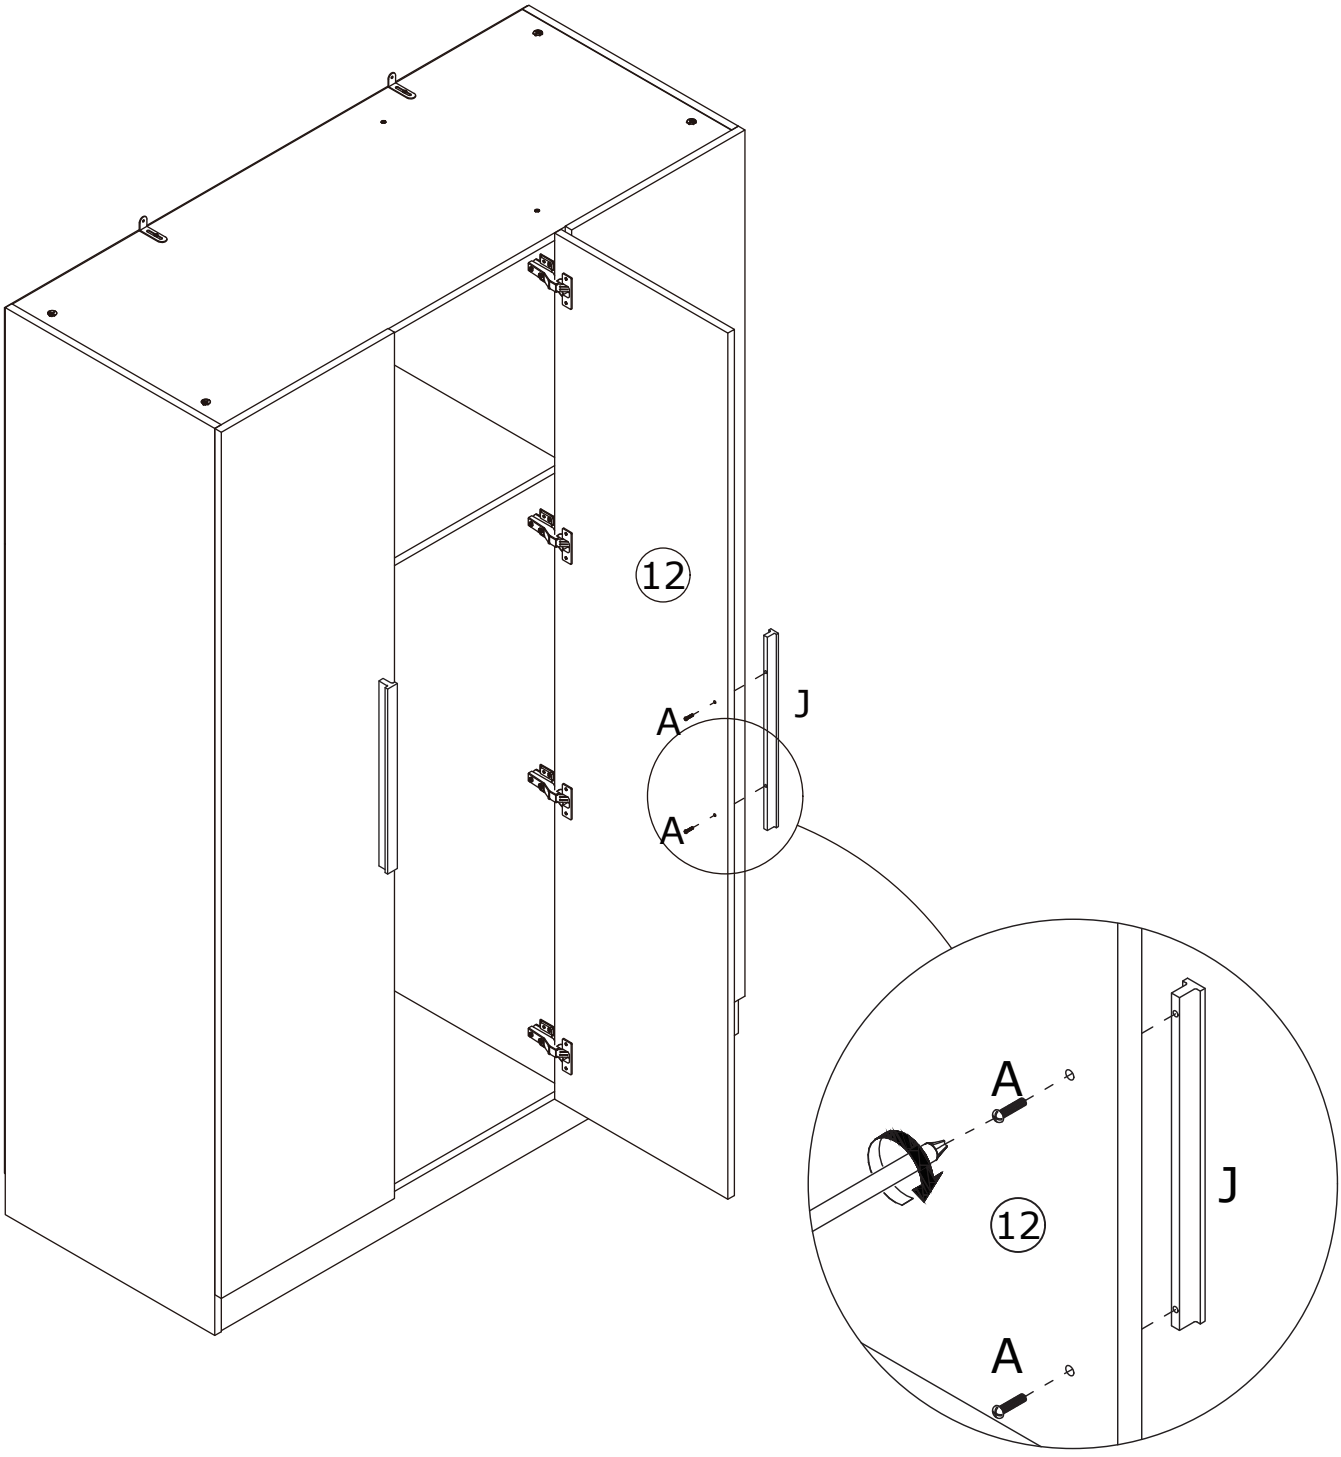


26



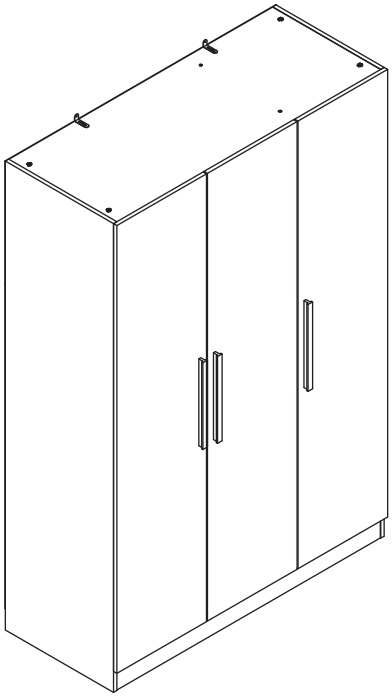

If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.
https://youtu.be/n0Lb36SoODM

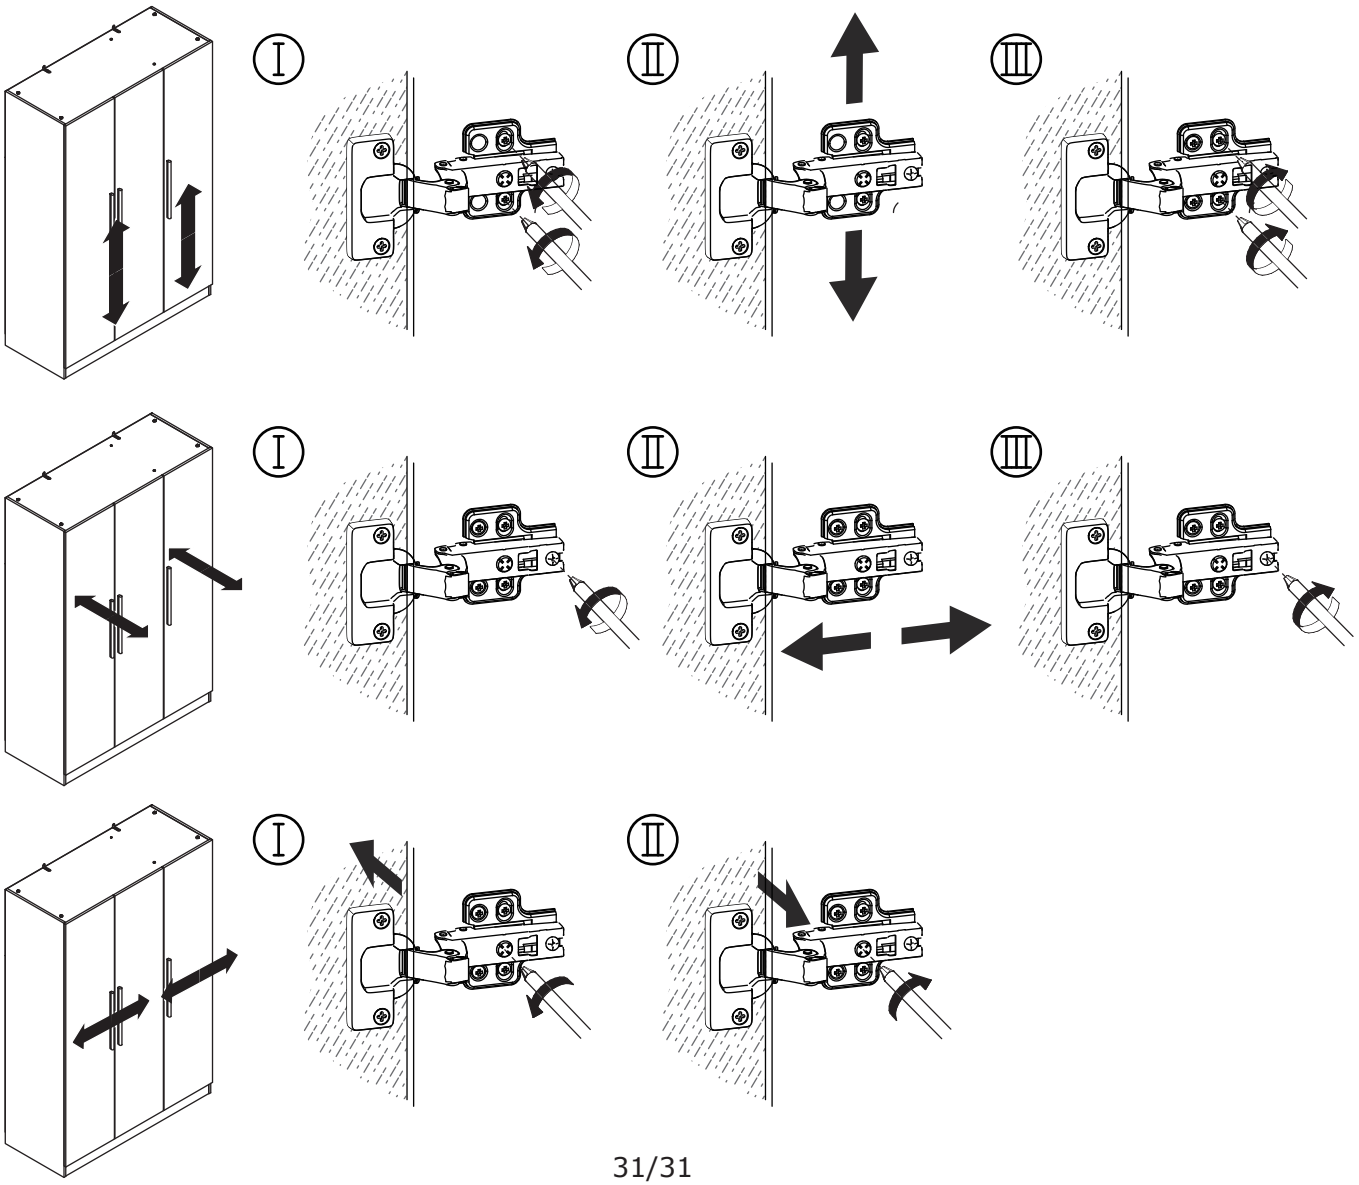

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

•If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

•If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

•If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068