


——User Manual


Size:

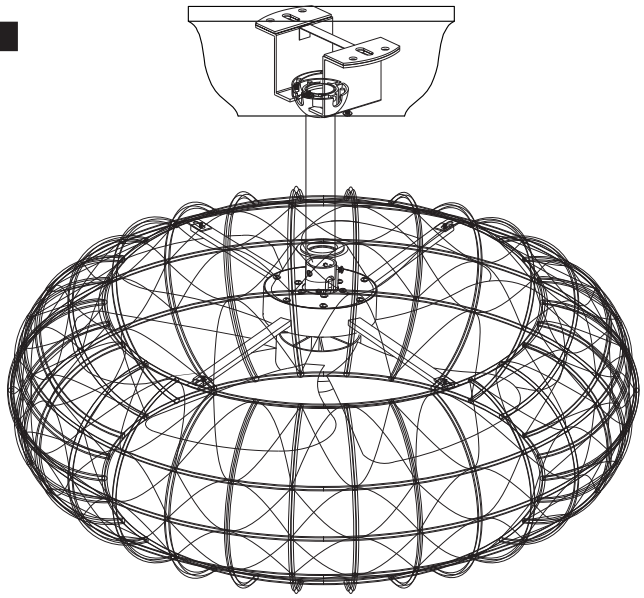

Installation instructions:

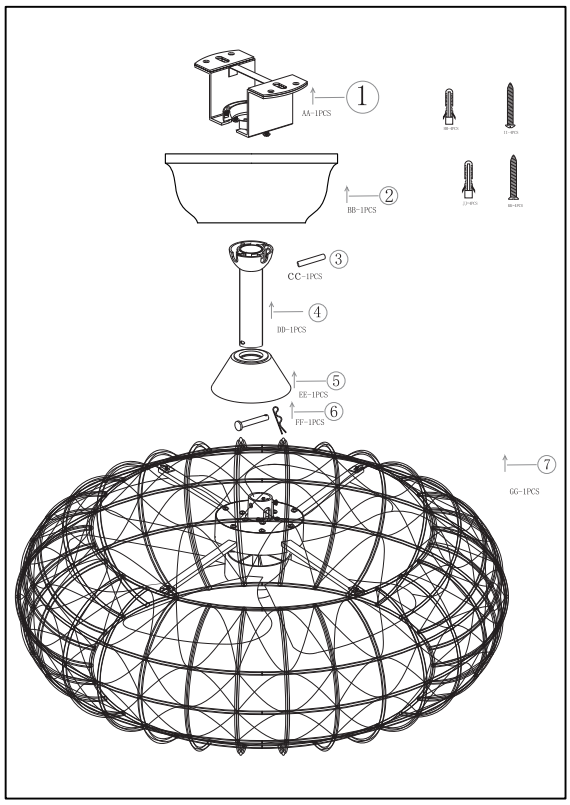

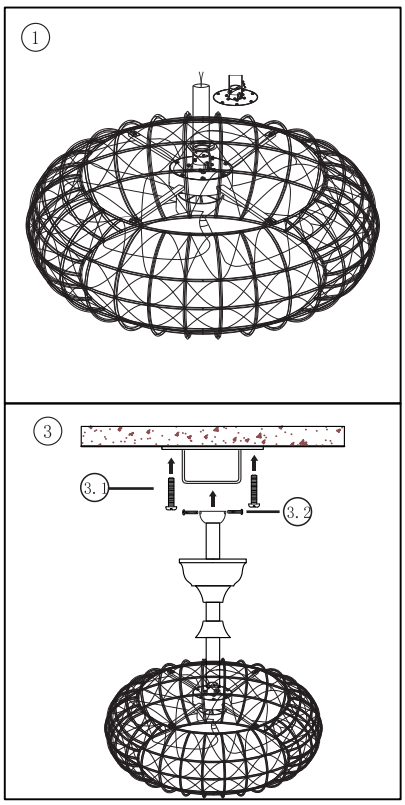

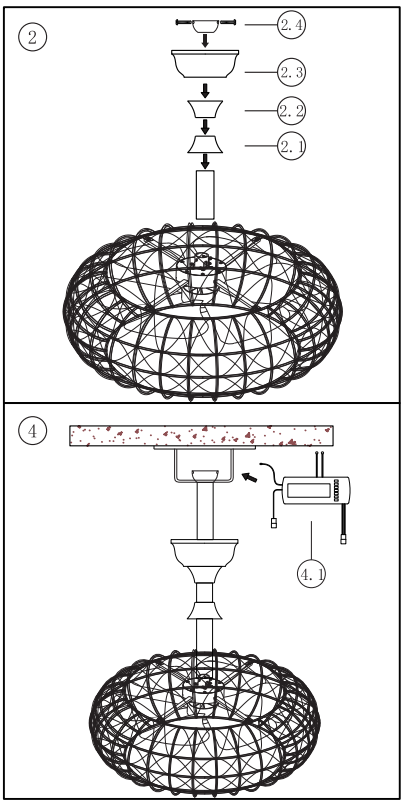

Precautions:

Do not disassemble and modity the goods by yoursef to avoid electric shock

Do not use the product in high temperature,high humidity or outdoor places.

Please clean the lamps with a dry soft cloth, and do not wipe the lamps with corrosive detergent.

Do not use multiple electrical appliances in the same socket at tha Same tima to avoid short circuit or fire.

During cleaning and maintenance,the operating instructions and precautions should be followed to avoid the danger of electricity.

Payattention to the condition ofceiling fan lights atany time.If there is dny malfunction. stop using them immediately and contact the maintenance station desipnated by the manuracturer for mainenance. Do not replace parts or disassembie and repair them by yourself and pay attention to regular maintenance to ensure safe uce.

ency treatment method:

Please immediately turn off the power supply and stop using it in the following situations:

When the main larmp is wet or comes into contact with liquid/rain

When the mein lamp falls and is damaged.

Smoke, sparks, etc. occur in the ontology iamps.

light source flashes abnormally or is damaged.

Packaging accessores:

Fan lamp body*1
Instructions (assembly instructions)
Remote control
Parts package

Warning:

This appliance is not intended to be used by users (including children) with insufficient physiology,awareness mental ability,experience or knowledge, unless it is safely used under the supervision or guidance of those responsible for the safety of women and children. erectrical appliances.

This appliance shouid be installed with fan lights according to the instructions,and adhesive is not allowed.

When installing electrical appliances,the fan blades should be more than 2.3m above the ground(for electric fans installed at high places).

Fan lamp remote control instructions

Remote control key function:

ALL OFF :Main switch

LIGHT ON/OFF :Light switch

F :rotation

:Natural wind

R :reversal

FAN/OFF :Fan off


:Fan gear key Gear 1-6 Forward

1H :Fixed time 1 hour

2H :Fixed time 2 hours+**pair key**

4H :Fixed time 4 hours

Remote control battery：No. 7 1.5V*2

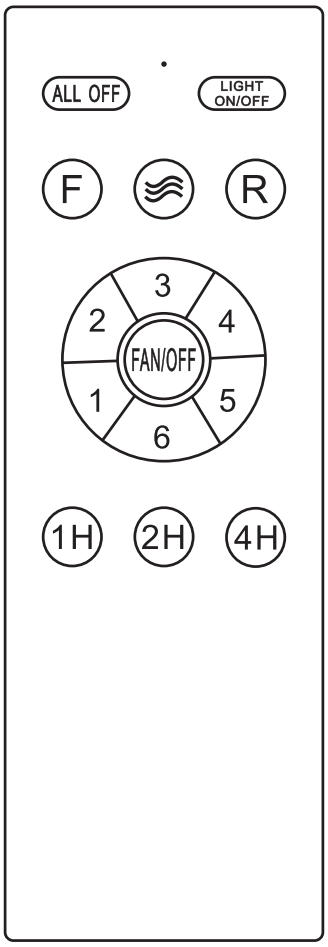

Product introduction：

1. This product adopts 433 wireless digital technology，

Remote control one-to-one control，

The workpiece can be controlled from any angle within the allowable space，

Not limited by direction，Simple and convenient operation，

Strong anti-interference ability。

2 . Remote control instructions：

① . If the remote control is not used for a long time，Please remove the battery。

② . Remote control matching code：

Turn on the power，

Press the pair code button within 5 seconds of the light on，

When you hear two"tick" sound or the light flashes, the code matches successfully。

If you need to match the code again，You need to wait 30 seconds before turning on the power and repeat the above operation。

warning：

This electronic switch product needs to be operated by professionals during installation。

Remote trigger electronic switch，

The radio frequency of the remote control transmitter is 433M

