

INSTALLATION MANUAL



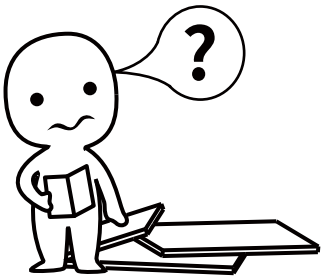


IMPORTANT INFORMATION!

Please read the entire manual before starting to assemble and/or using this product. Follow the manual thoroughly an d keep it for further reference.

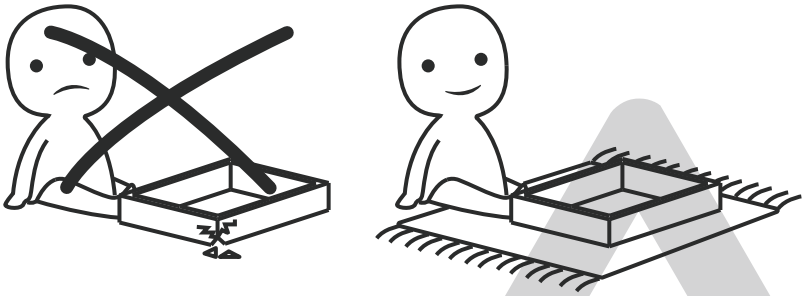


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

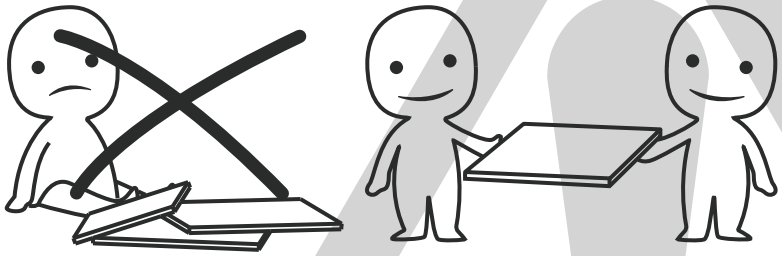

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

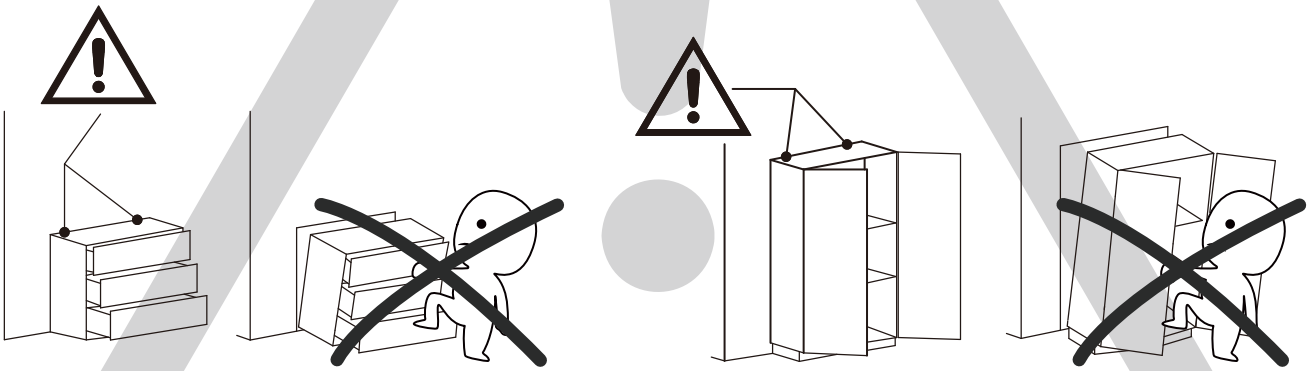

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.



Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


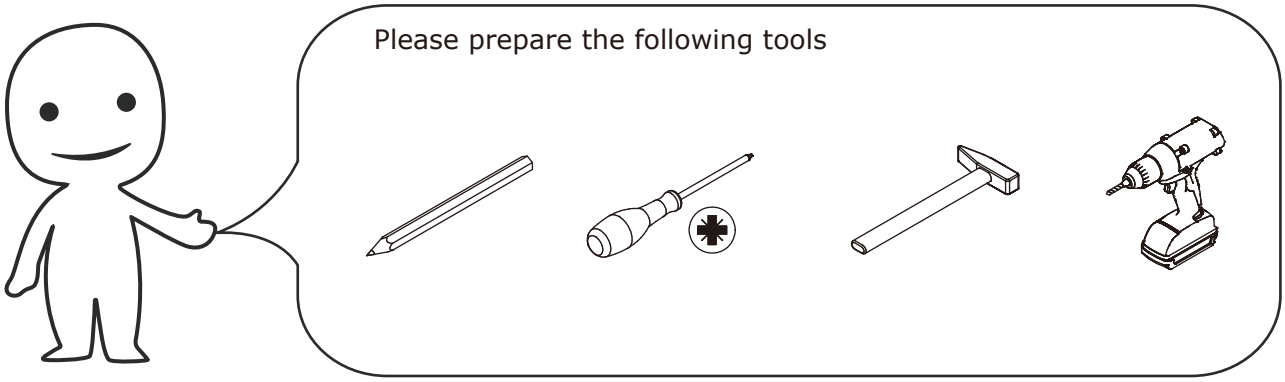





When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 55	B x 55	C x 14	D x 25	E x 40	G x 12
					
∅6 x 35 mm	∅15 x 9 mm	∅8 x 30 mm	∅4 x 30 mm	∅3 x 12 mm	∅3 x 16 mm

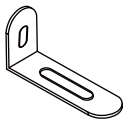H x 12	I x 1	J x 1	P x 1	Kx 1	CR x 5
					
	∅4 x 14 mm			∅4 x 35 mm	300mm

CL x 5	DR x 5	DL x 5
		
300mm	300mm	300mm

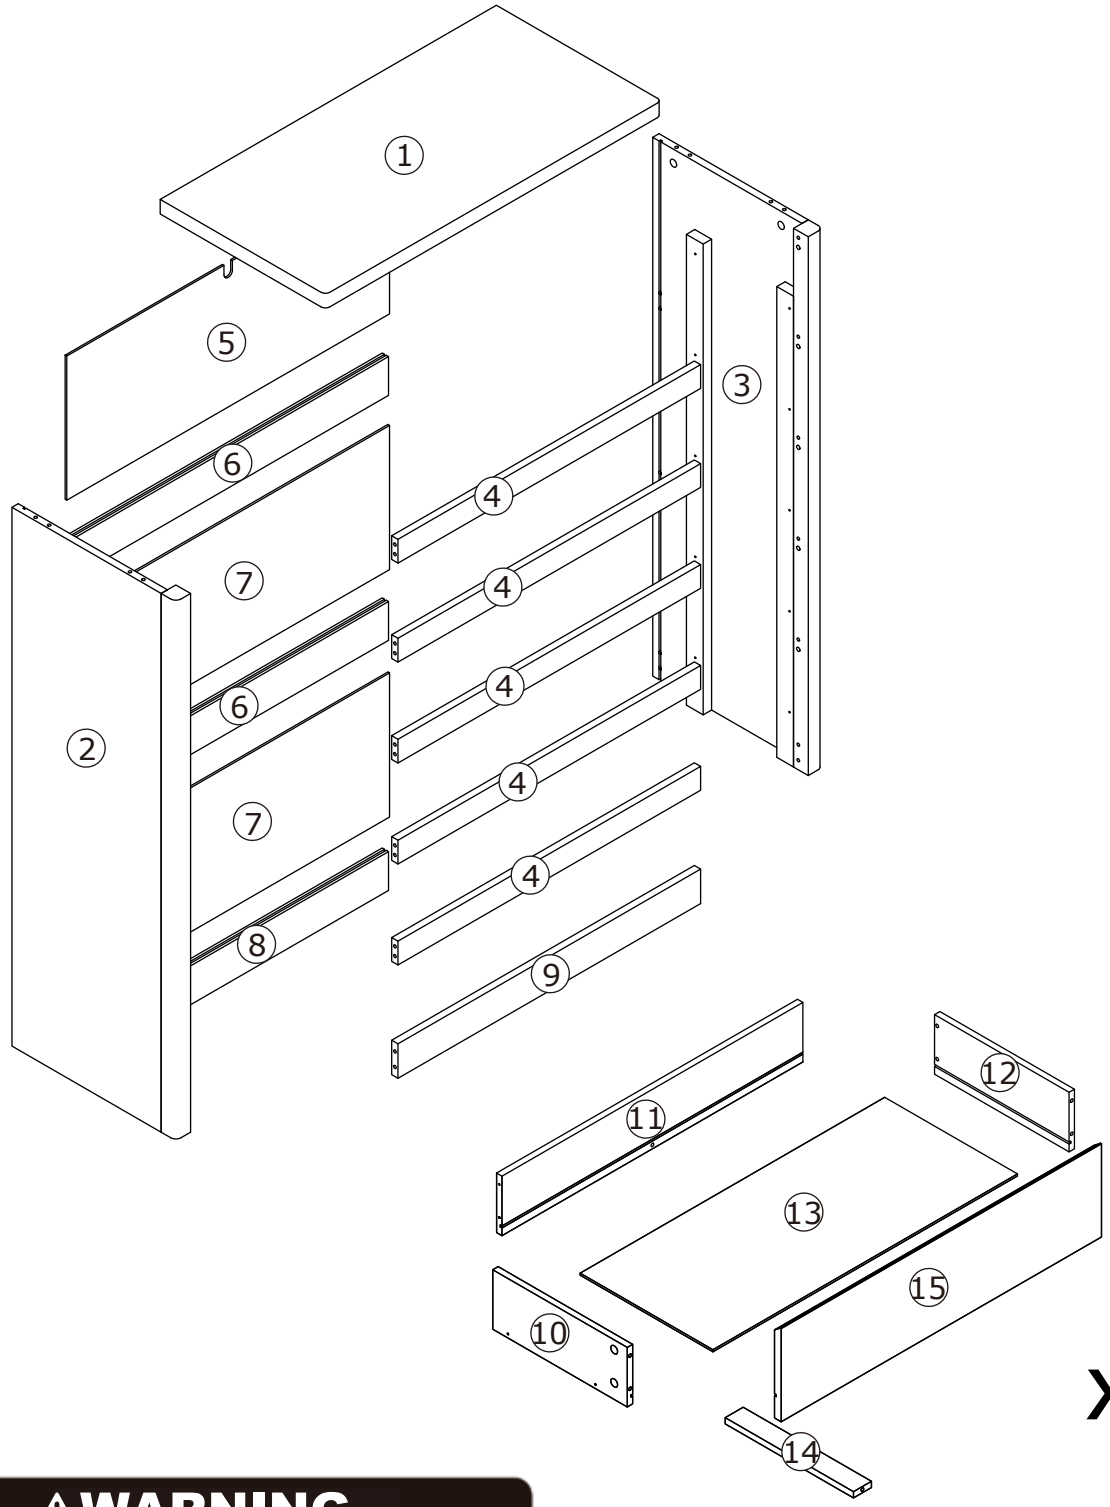

x5

⚠WARNING






Children have died from furniture tipover.To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


This is a permanent label.
Do not remove!

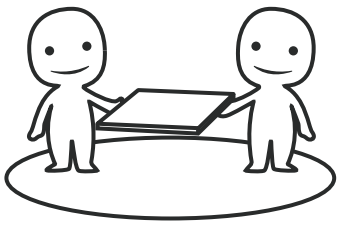



ASSEMBLED BY 2 ADULTS

1


E x 10	CR x 5	A x 13	
∅3 x 12 mm	300mm	∅6 x 35 mm	



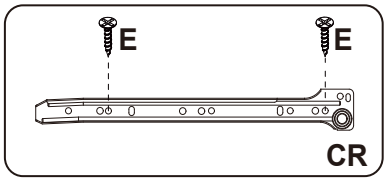

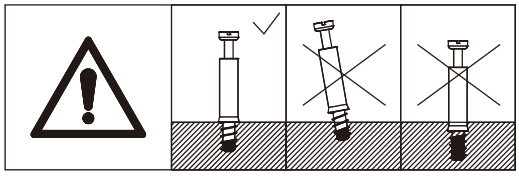



Fix right outer drwaer runner (CR) to part 3 using screws (E), as shown.
Insert quickfit screws (A) into part 3,as shown.

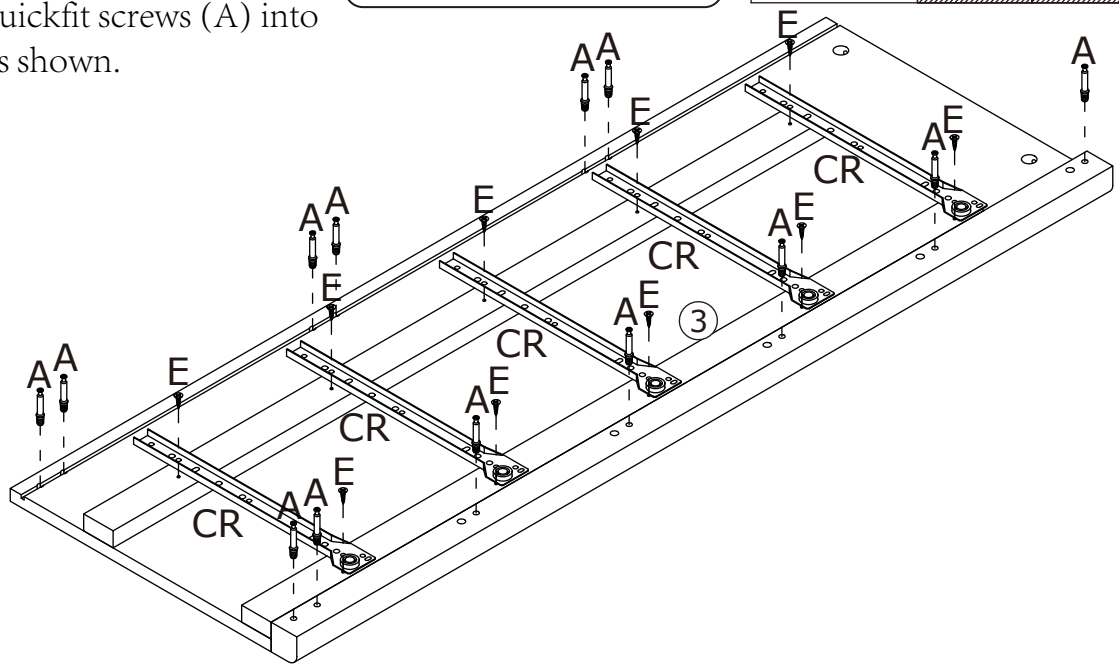



2

E x 10	CL x 5	A x 13	
∅3 x 12 mm	300mm	∅6 x 35 mm	



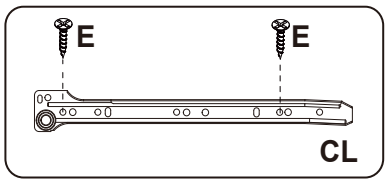


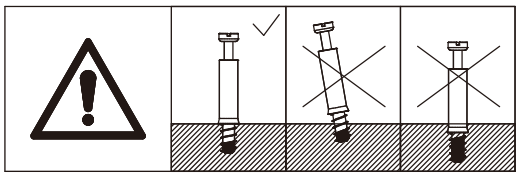


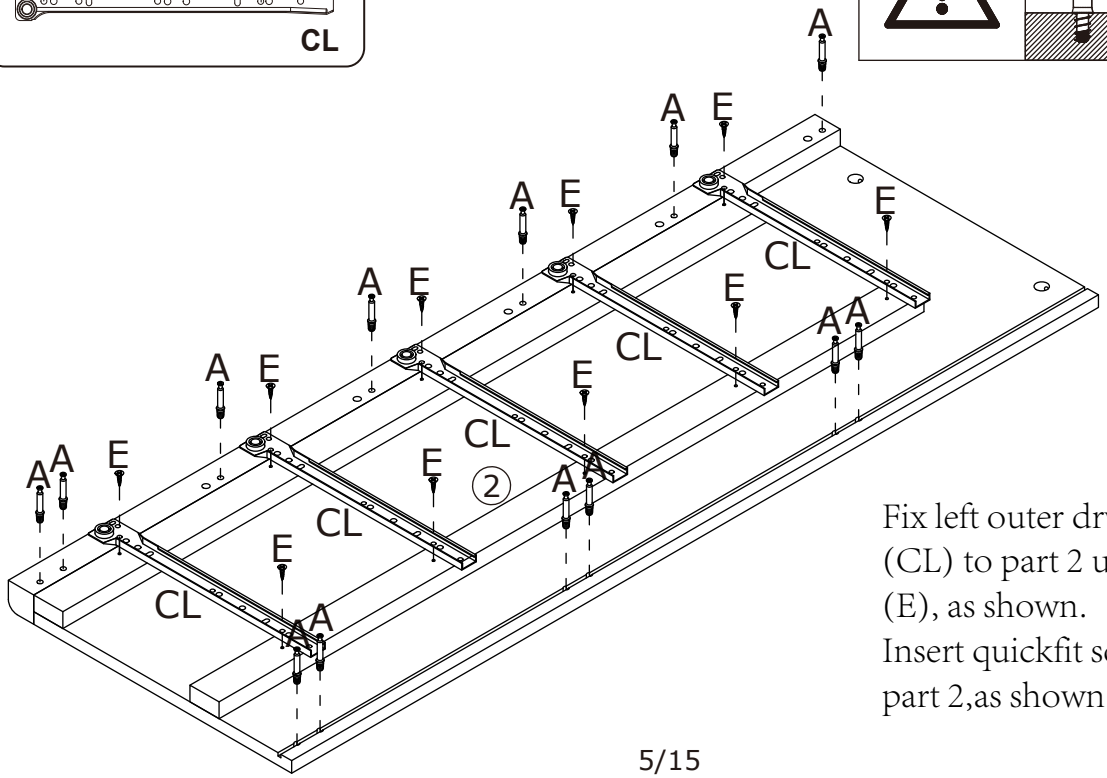


Fix left outer drwaer runner (CL) to part 2 using screws (E), as shown.
Insert quickfit screws (A) into part 2,as shown.

3

C x 5	B x 13	
		
∅8 x 30 mm	∅15 x 9 mm	

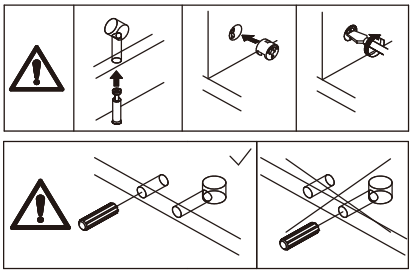


Attach part 4 to part 3 using wooden dowels (C),add camlocks (B) and turn camlocks clockwise to tighten, as shown.
Attach part 6/8/9 to part 3,add camlocks (B) and turn caklocks clockwise to tighten.

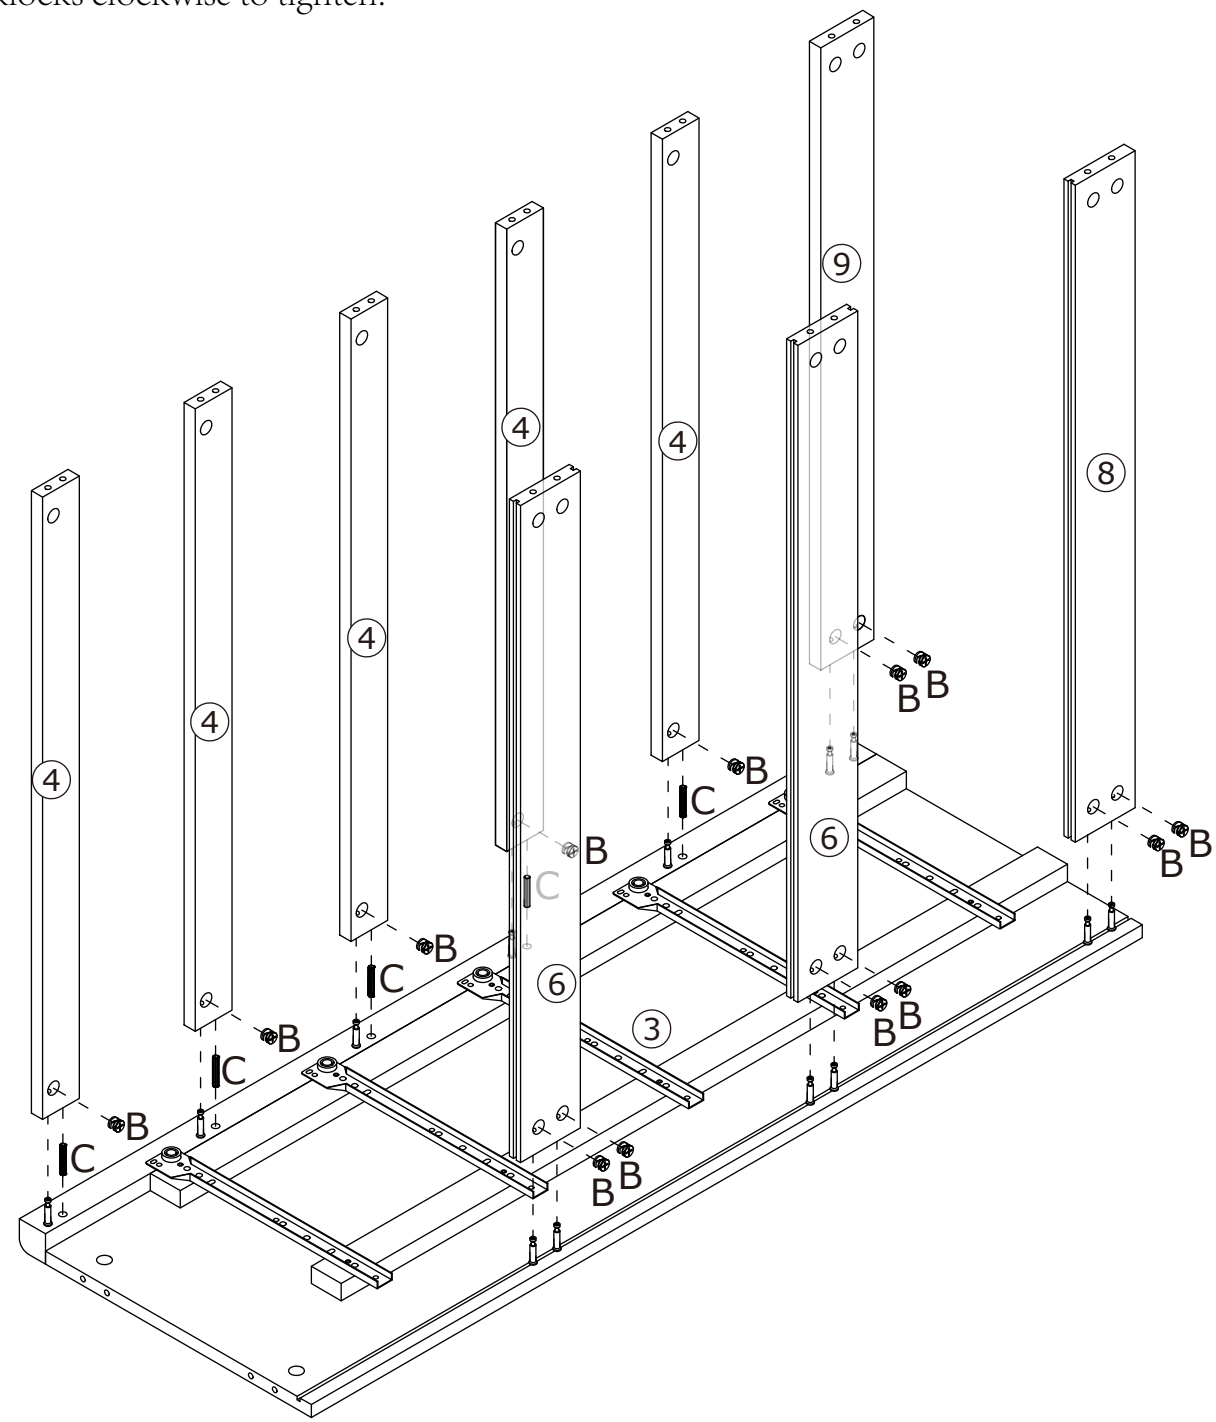


4

Slide part 7 into available slots,as shown.

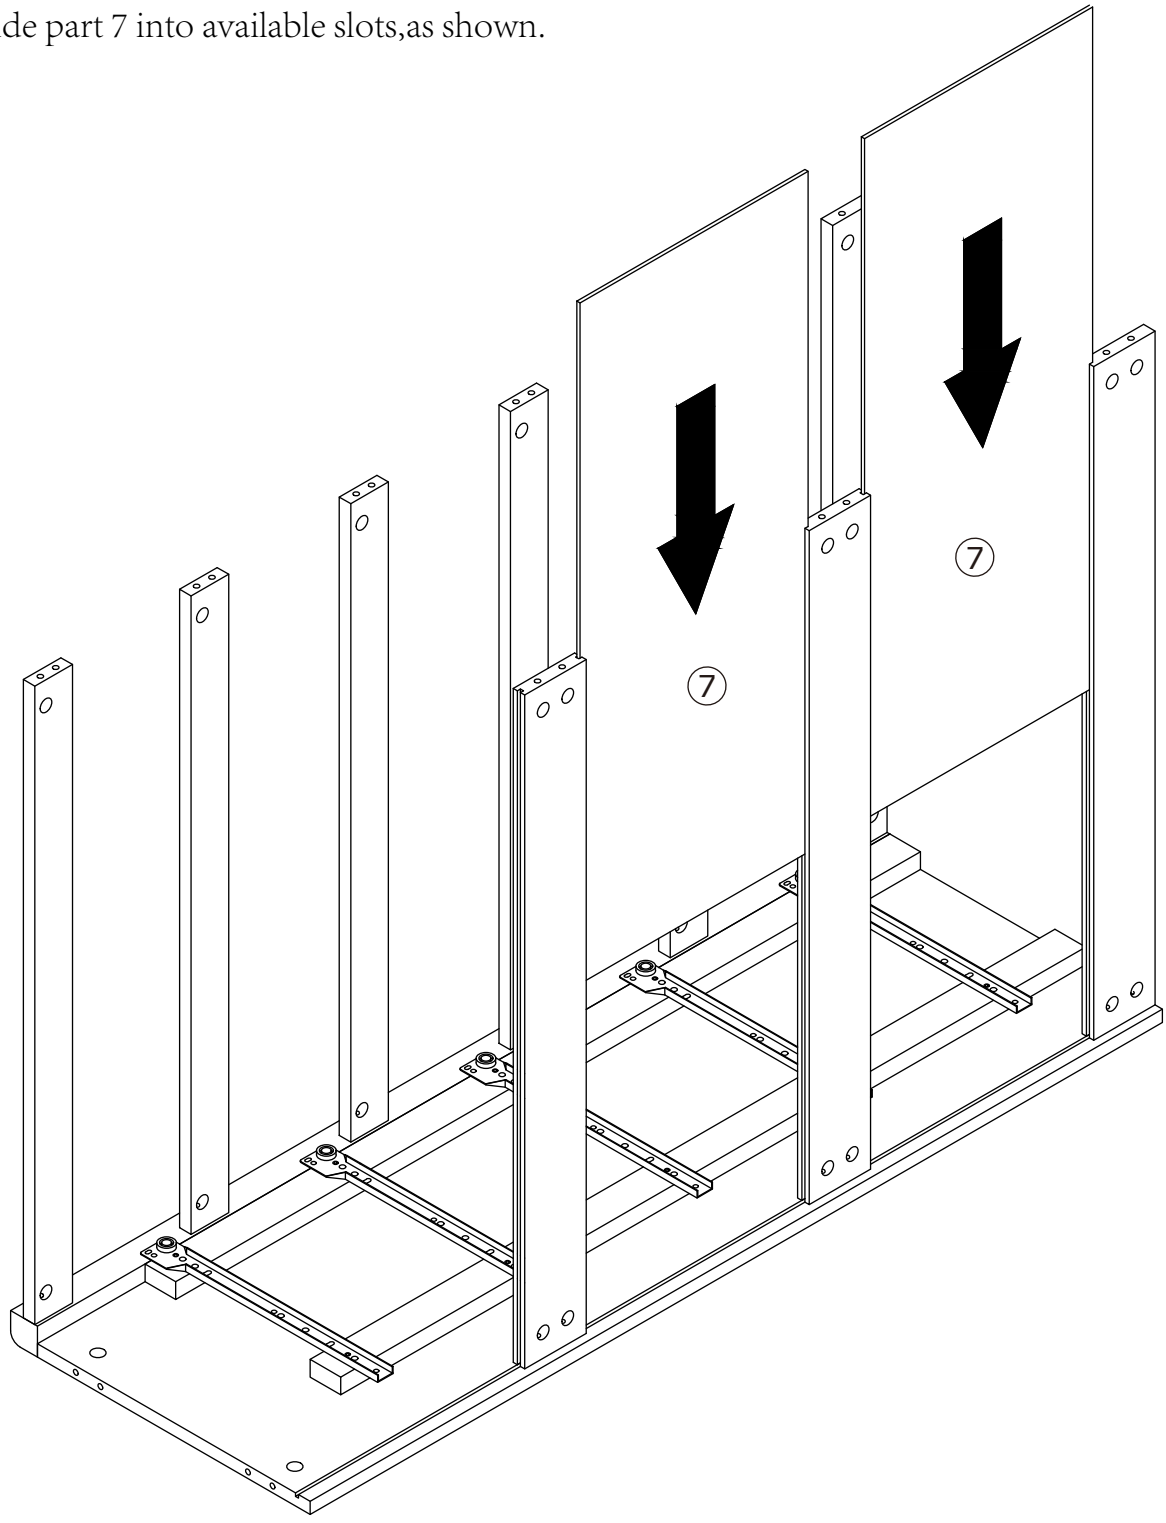


5

C x 5	B x 13	
		
∅8 x 30 mm	∅15 x 9 mm	

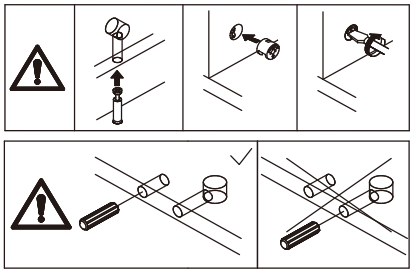


Attach part 2 to part 4/6/8/9 using wooden dowels (C), add camlocks (B) and turn camlocks clockwise to titghten, as shown.

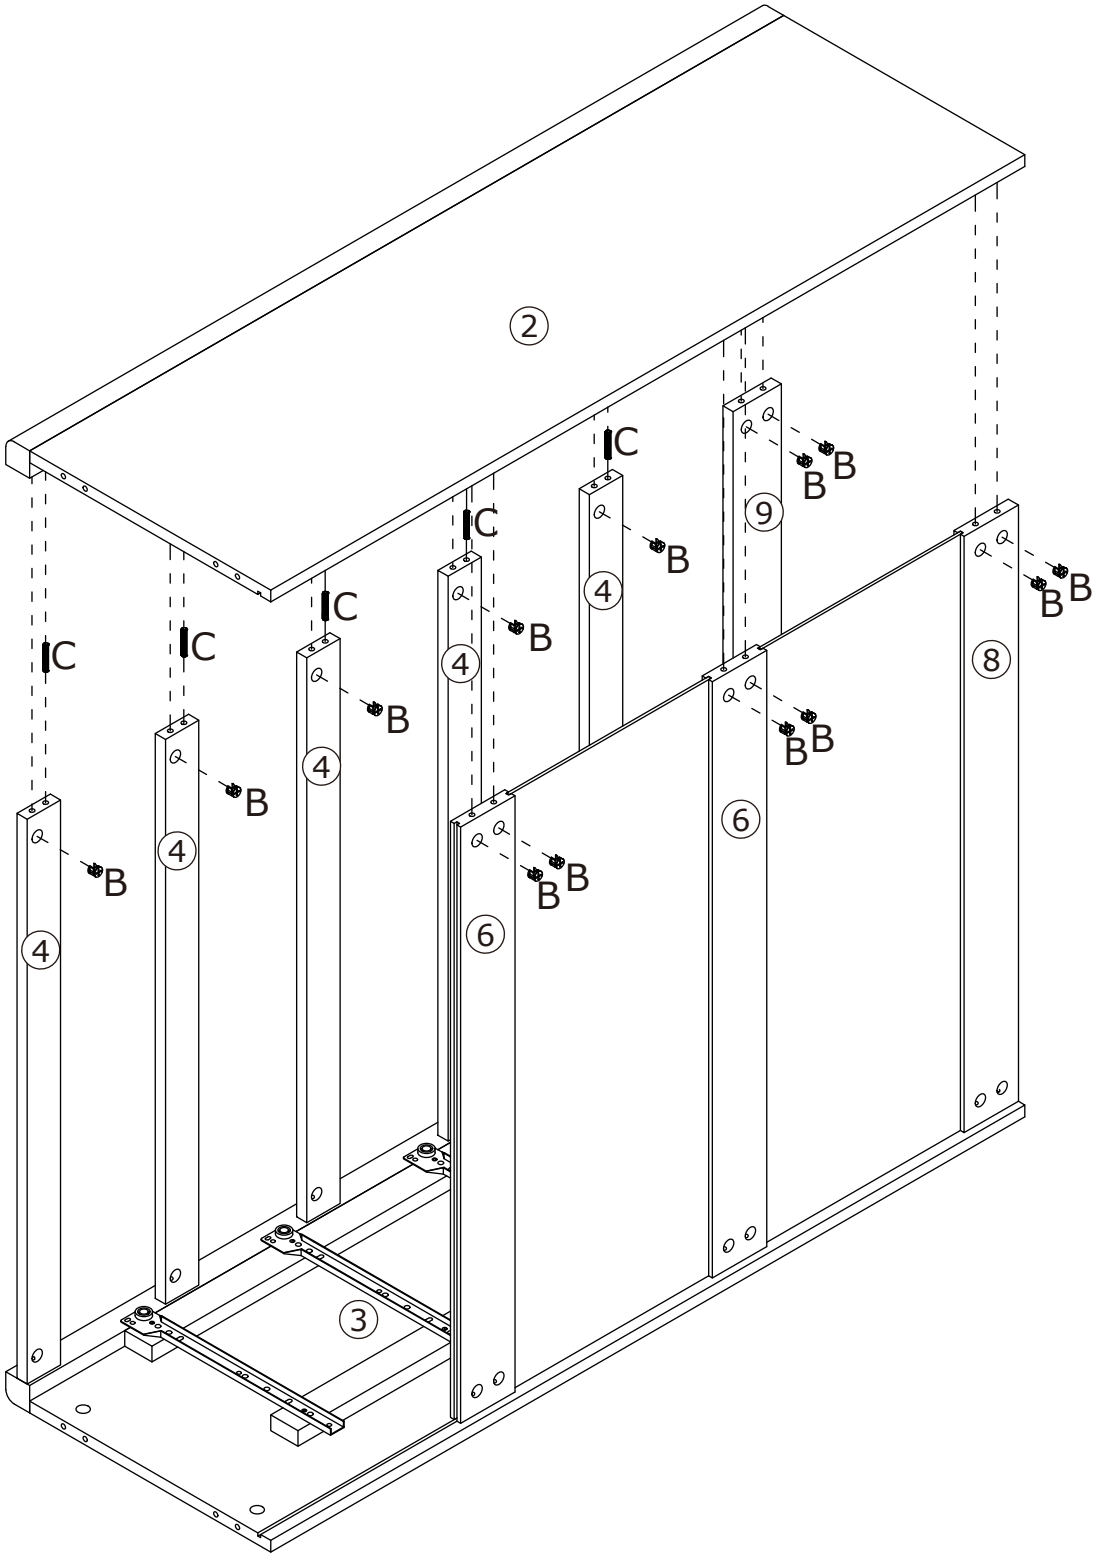


6


Slide part 5 into available slots,as shown.

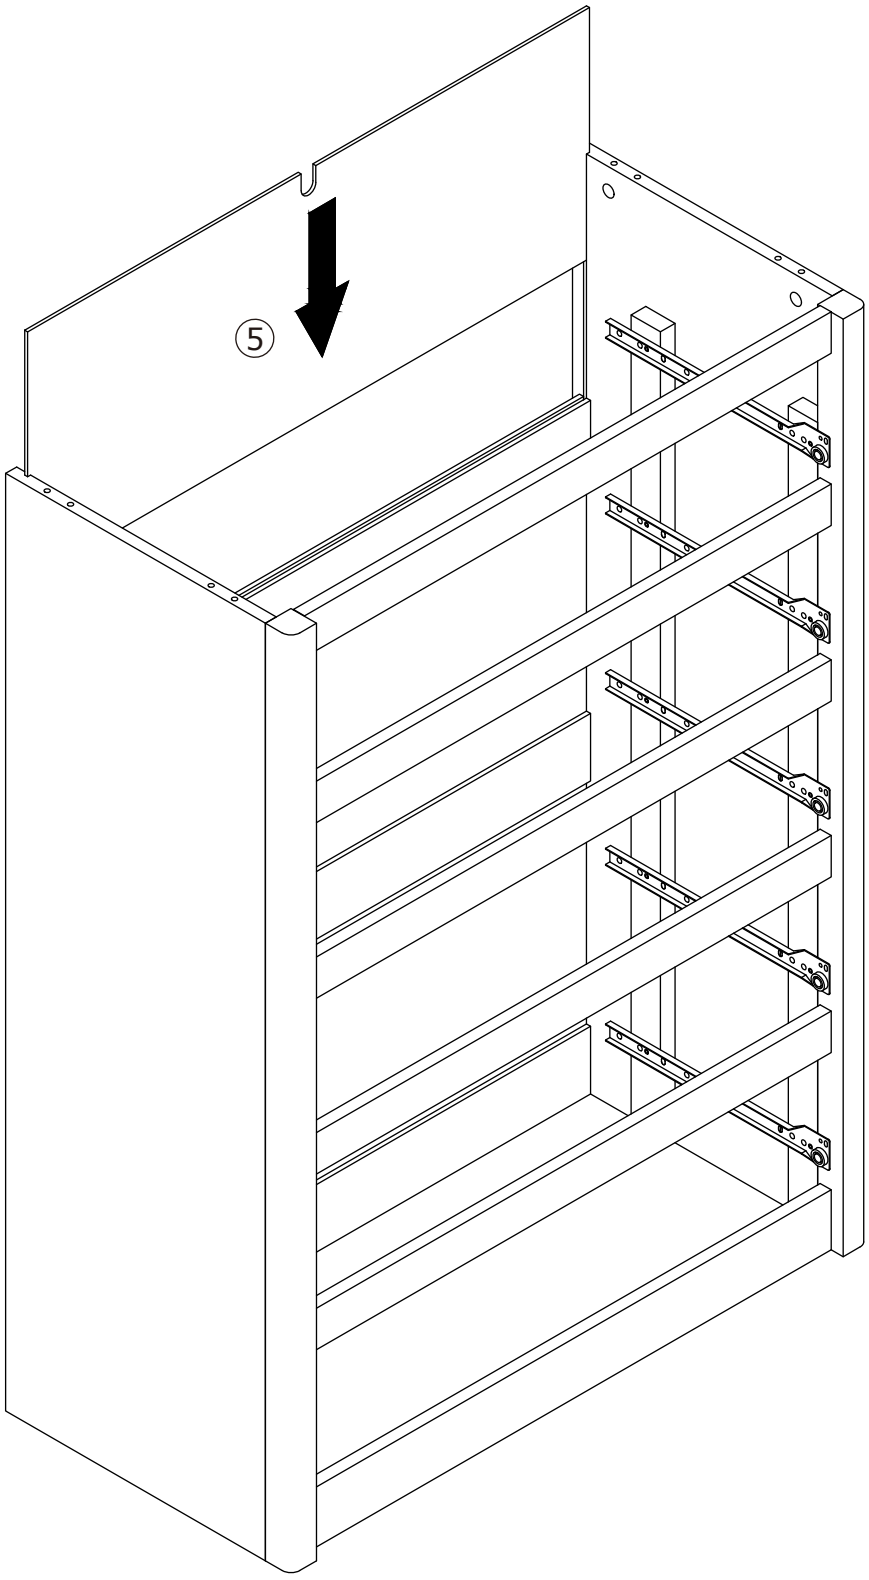


7

A x 4	C x 4	B x 4	J x 1	I x 1	
∅6 x 35 mm	∅8 x 30 mm	∅15 x 9 mm			

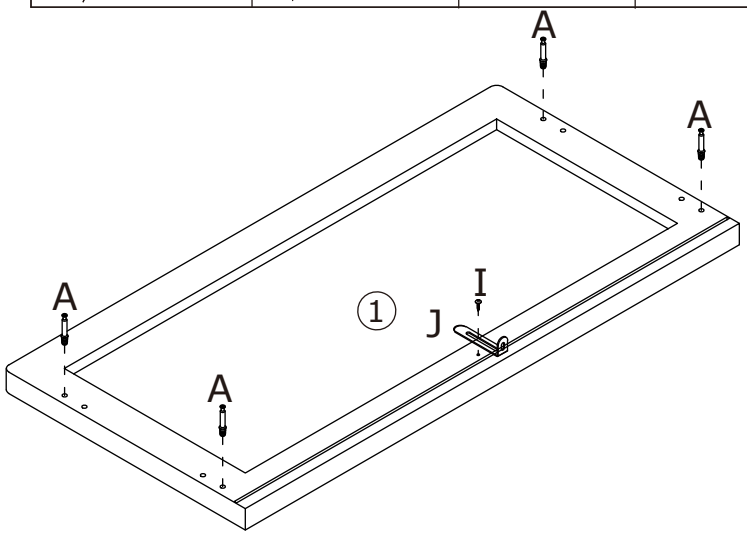

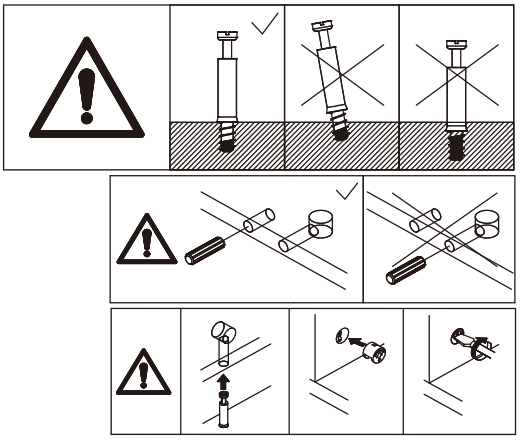

Fix part (J) to part 1 using screws (I).
Insert quickfit screws (A) into part 1.
Attach part 1 to part 2 & 3 using wooden dowels(C),
add camlocks (B) and trun camlocks clockwise to tighten, as shown.

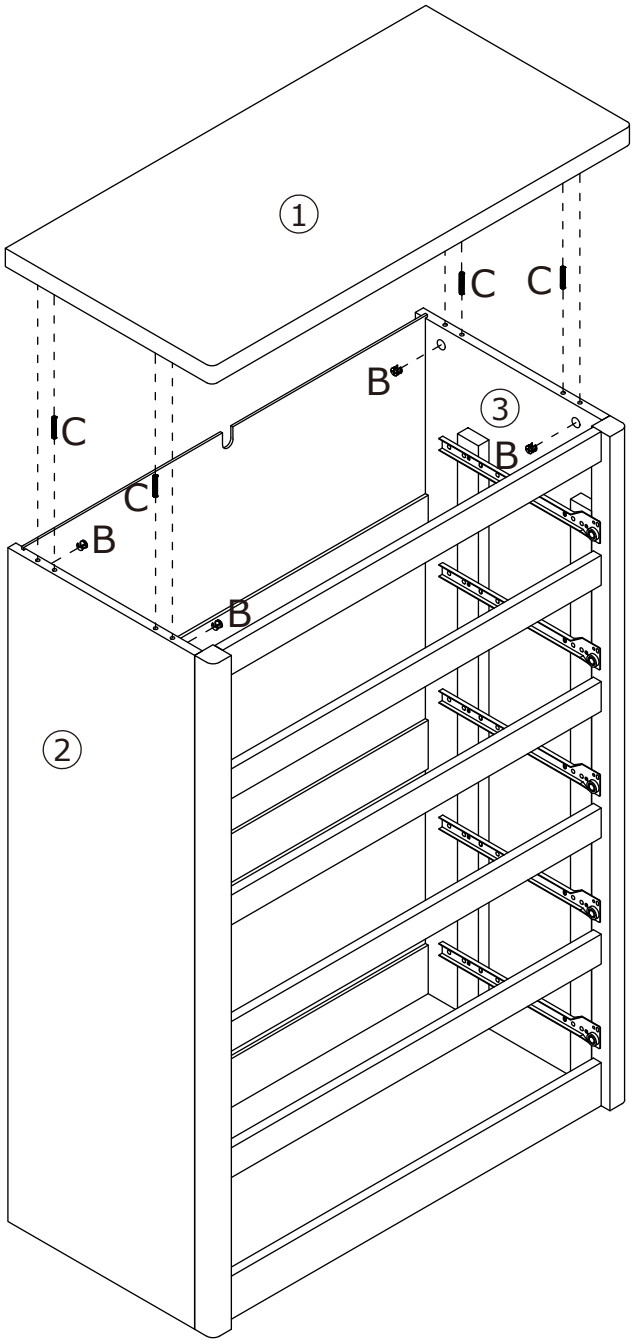


8


D x 25



∅4 x 30 mm




Fix part 10/12/14 to part 11 using screws (D),as shown.

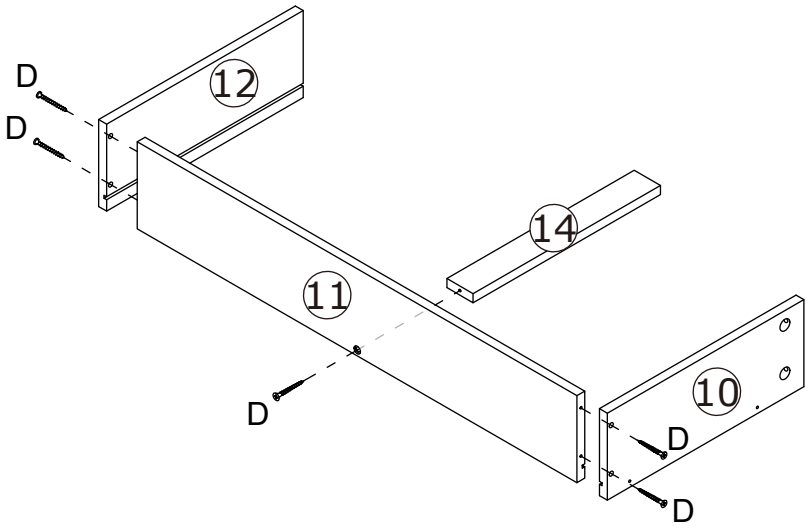

x5

9


Slide part 13 into available slots,as shown.

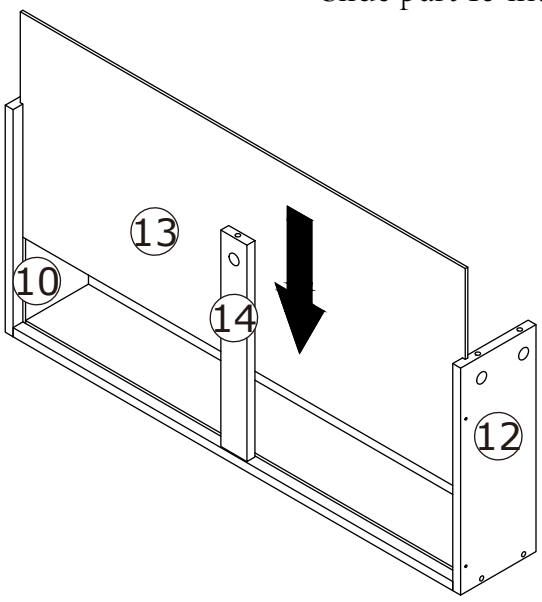


x5


10

A x 25




Ø6 x 35 mm



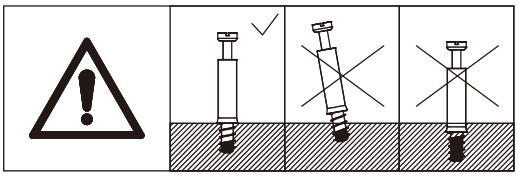

Insert quickfit screws (A) into part 15,as shown.

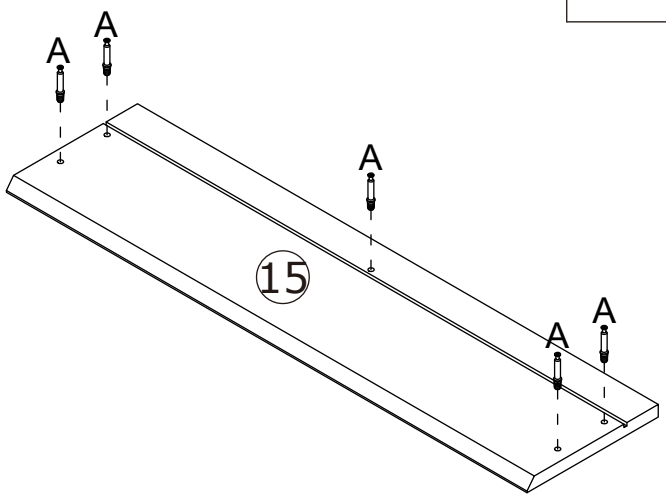


x5


11

B x 25




Ø15 x 9 mm




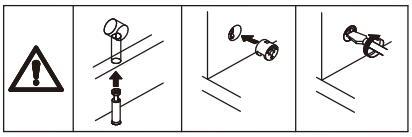



Attach part 15 to assembled units,add camlocks (B) and turn camlocks clockwise to tighten,as shown.

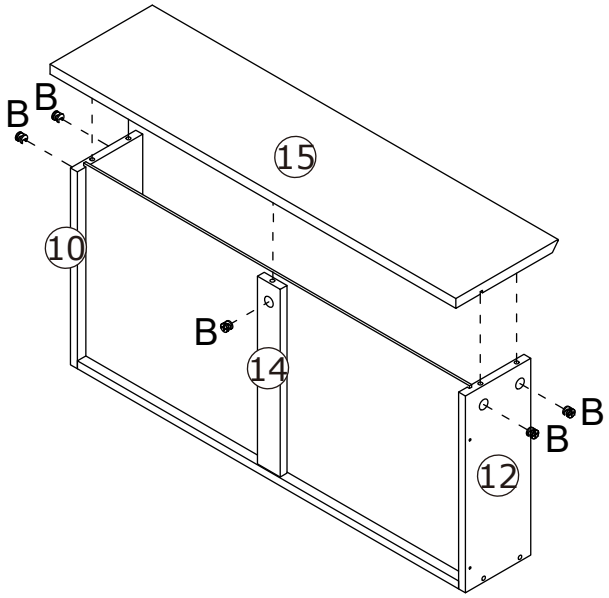

x5


12

E x 20	DR x 5	DL x 5	
			
∅3 x 12 mm	300 mm	300 mm	

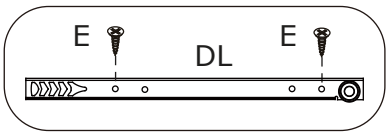






Fix left inner drawer runner (DL) to part 10 using screws (E),
Fix right inner drawer runner (DR) to part 12 using screws (E),
as shown.

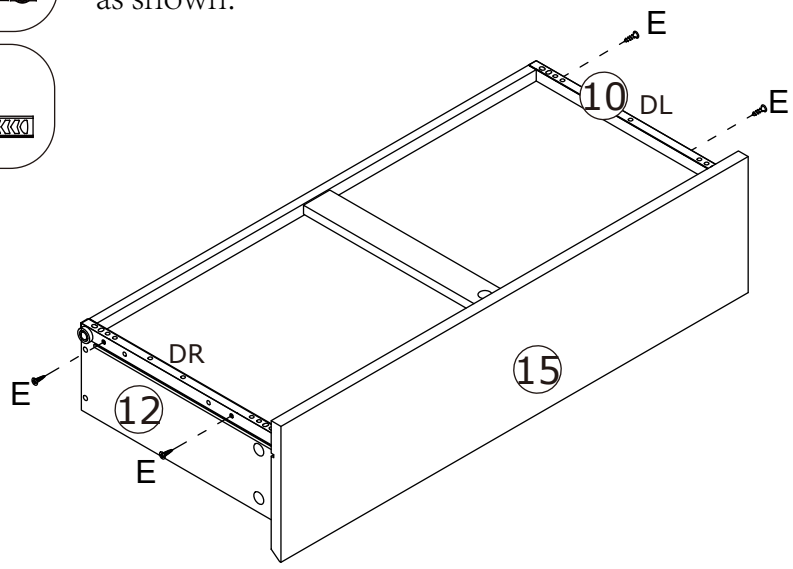

x5


13

G x 12	H x 12	
		
∅3 x 16 mm		

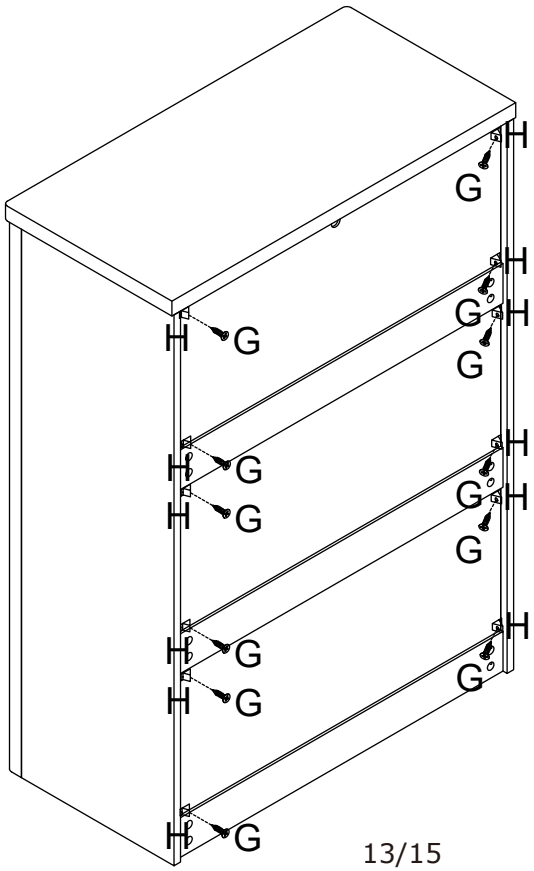


Fix back conor (H) to back
panel using screws (G),
as shown.

14


K x 1	P x 1	J x 1	
 ∅4 x 35 mm			


Fix expension screw (P) into the wall.
Fix part (J) to part (P) using screws (K),as shown,

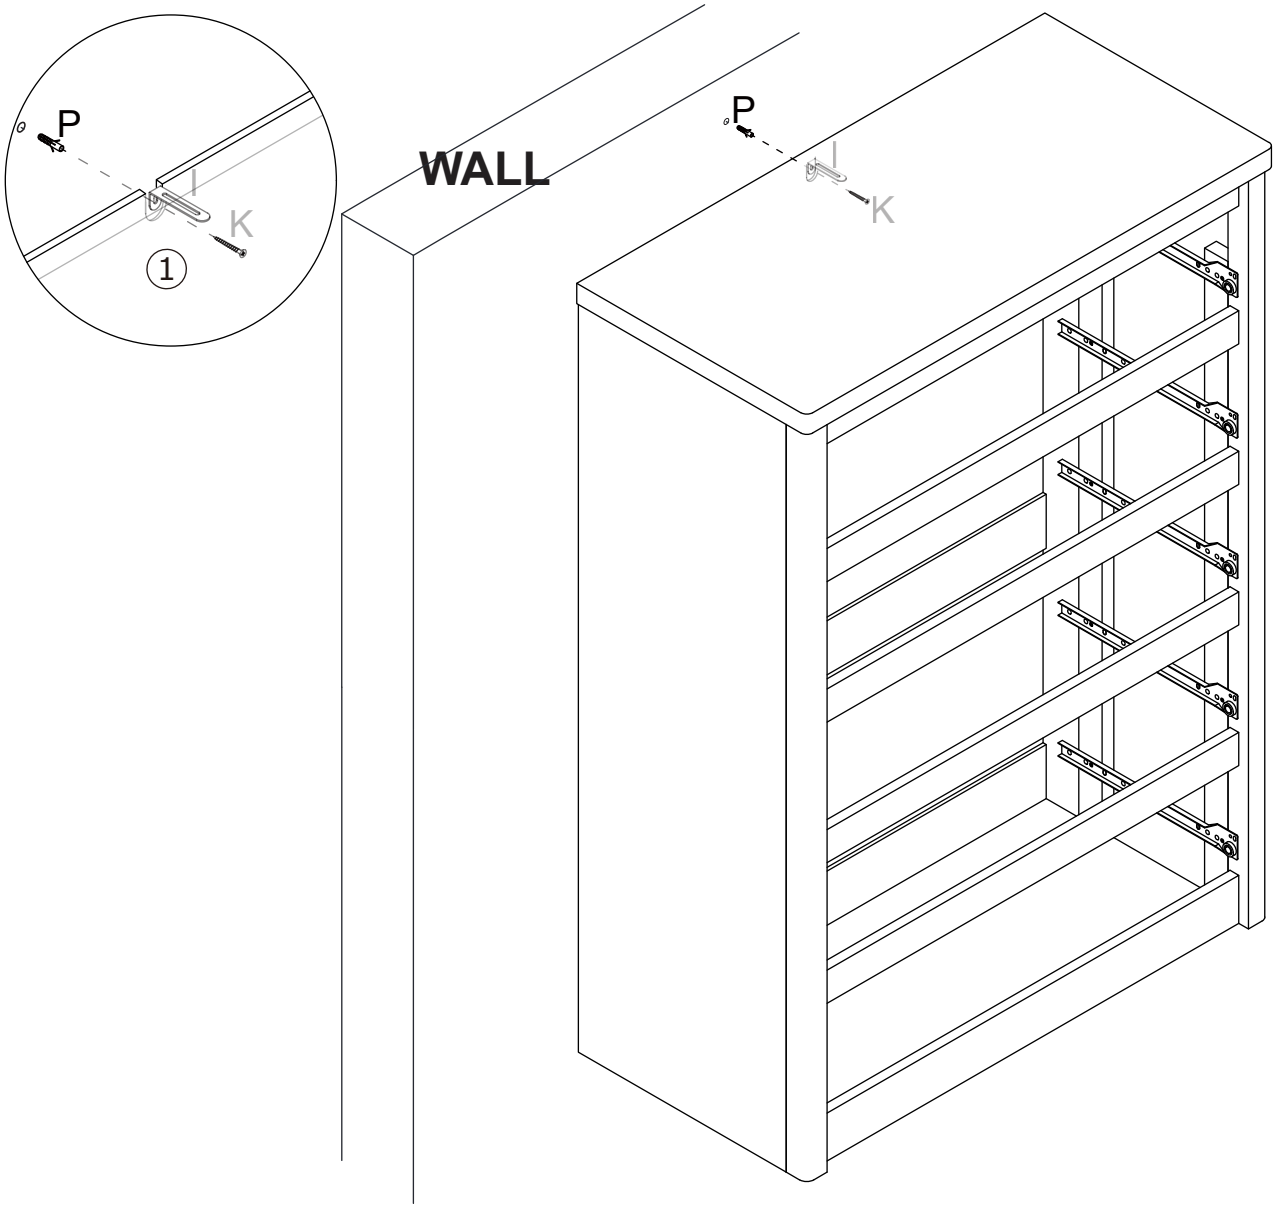


15

Align rails, insert all drawers in,as shown.

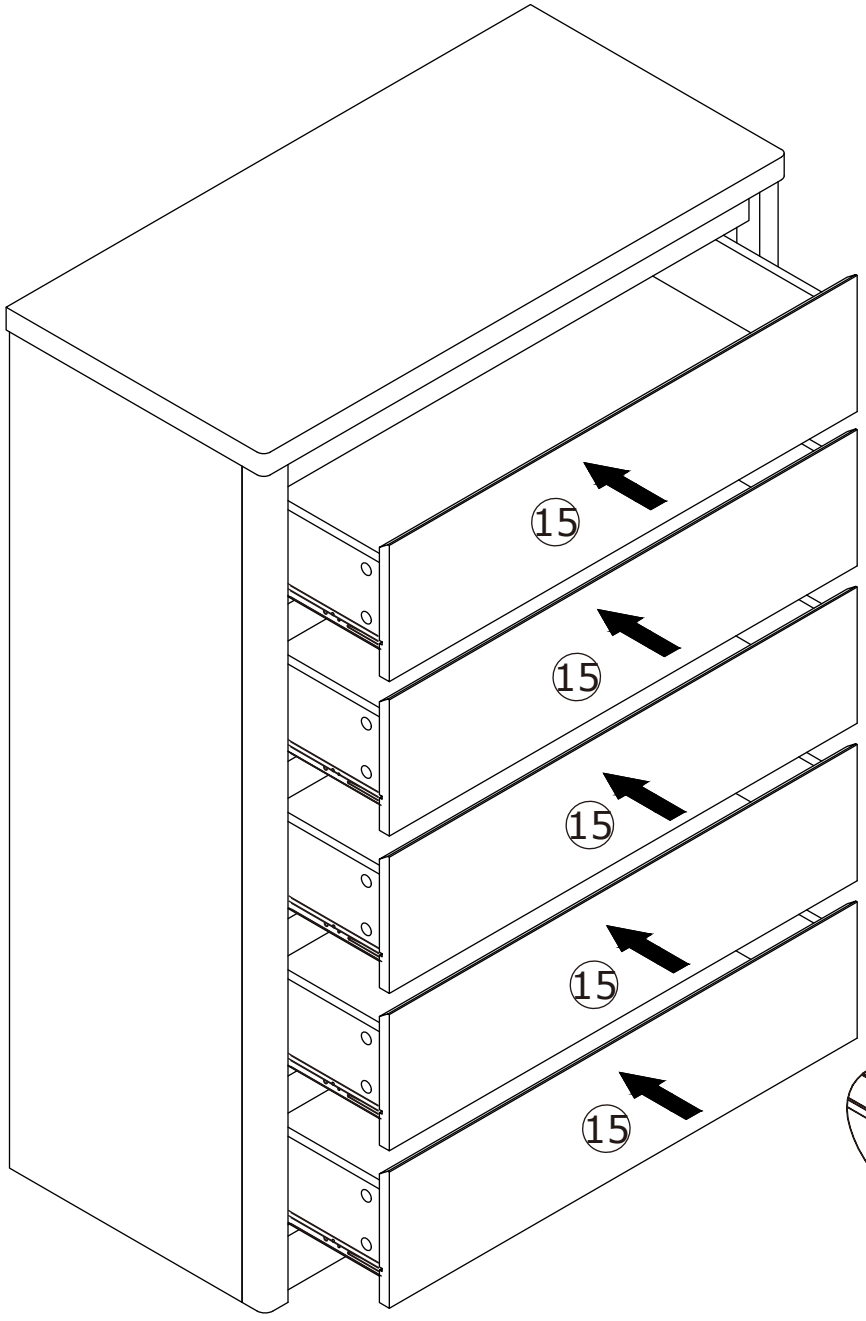

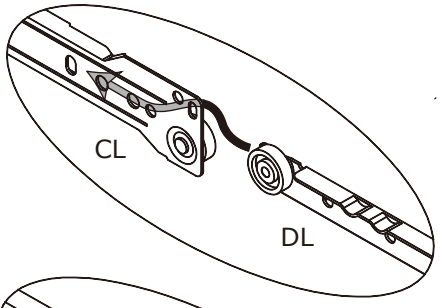

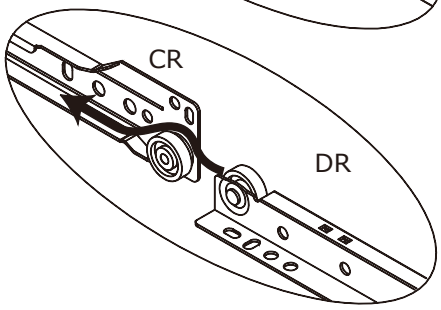

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply contact us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please contact us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order.
  Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.