

55"
















ASSEMBLY INSTRUCTION








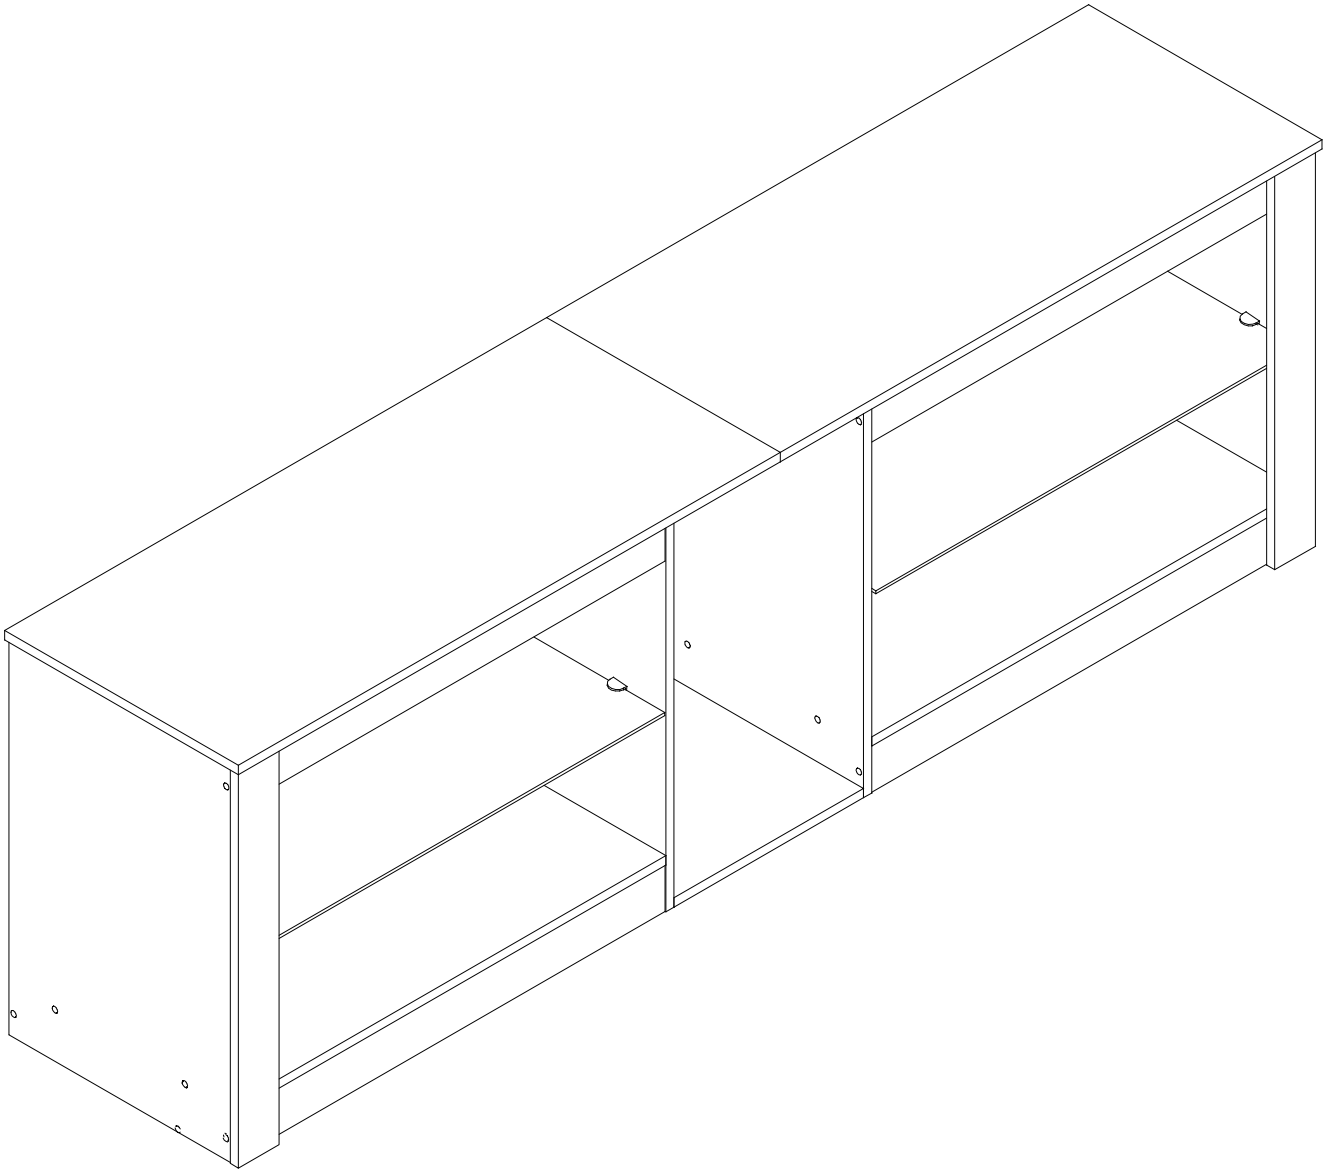
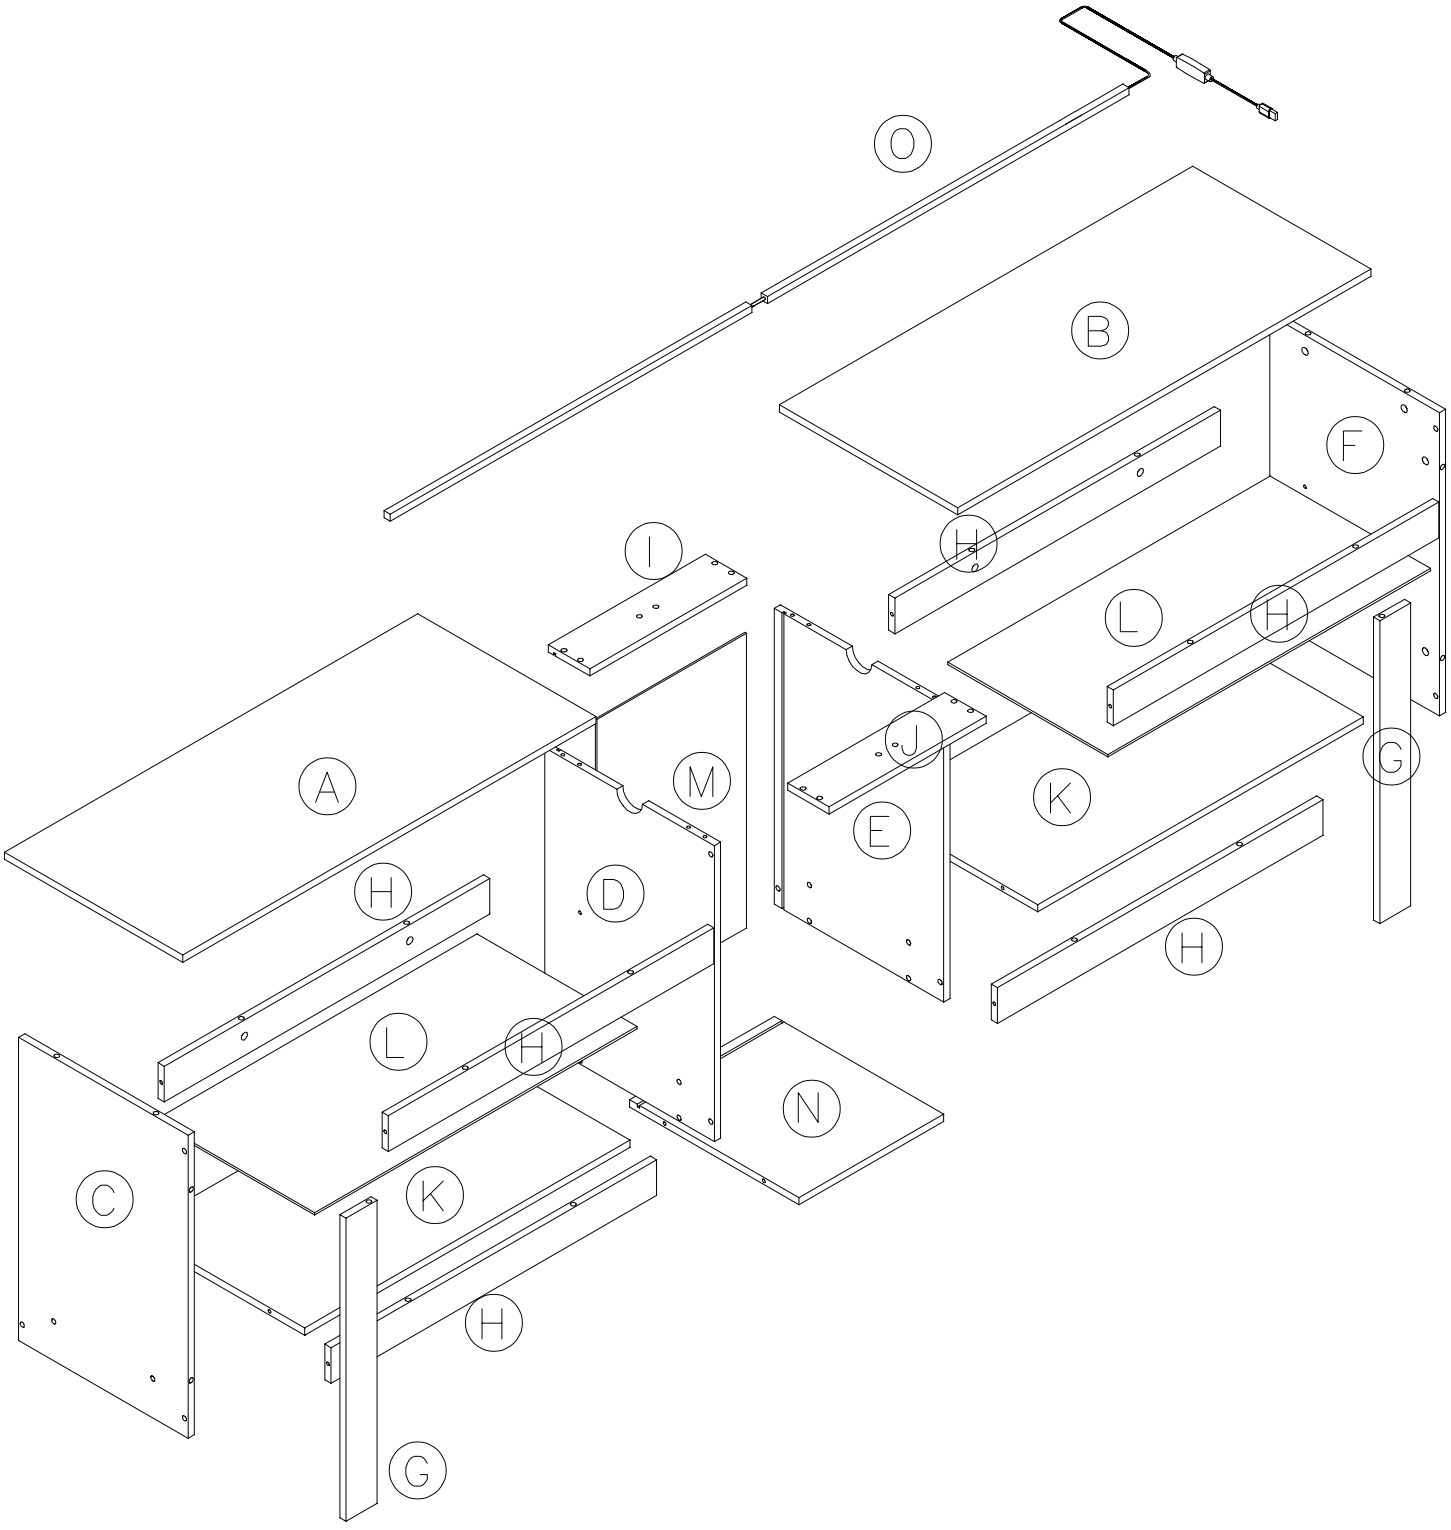


aft-sale-service@outlook.com


If you find any missing, faulty, or damaged parts upon receiving your order, please contact us immediately.
We take every concern seriously and will provide after-sales support tailored to your needs, ensuring your complete satisfaction.
For a smoother and safer assembly, we recommend having another person assist you.



O
B
F
I
H
L
H
A
M
J
G
K
E
H
D
H
L
H
N
C
K
H
G

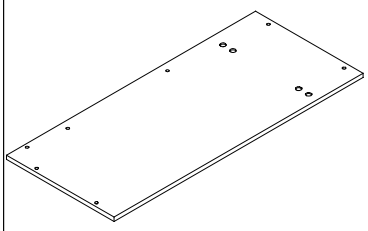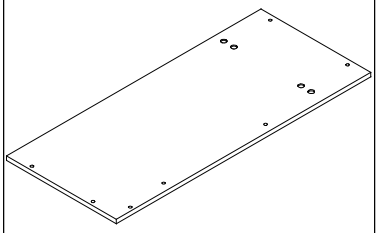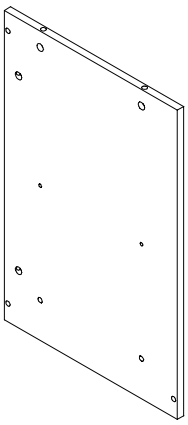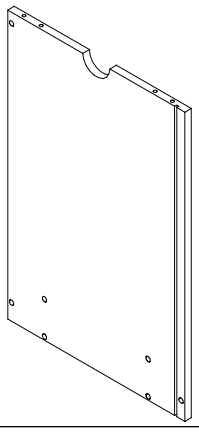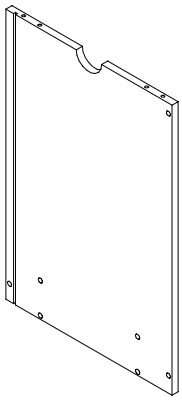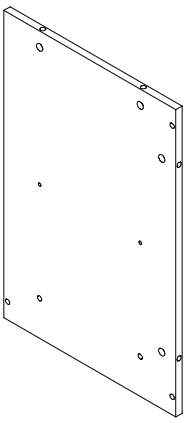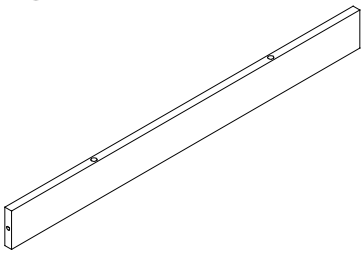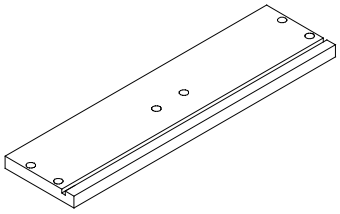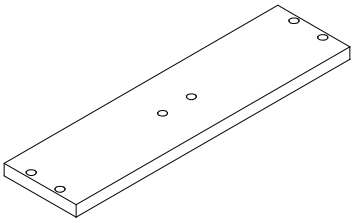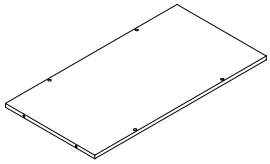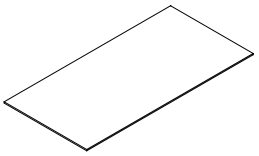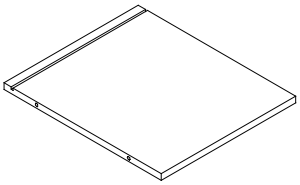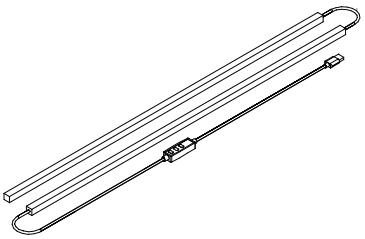
A  X1	B  X1	C  X1	D  X1
E  X1	F  X1	G  X2	H  X6
I  X1	J  X1	K  X2	L  X2
M  X1	N  X1	O  X1	

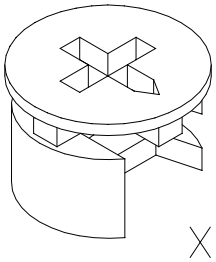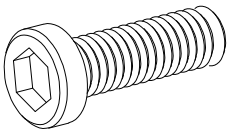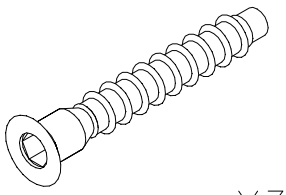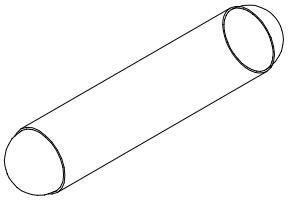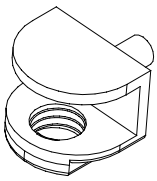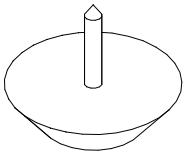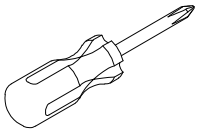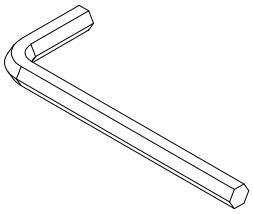①  X22 2Spares	②  X22 2Spares	③  X5 M6*23 1Spare	④  X35 M6.3*48 3Spares
⑤  X3 ø8*40 1Spare	⑥  X9 1Spare	⑦  X9 1Spare	⑧  X1
⑨  X2			


1

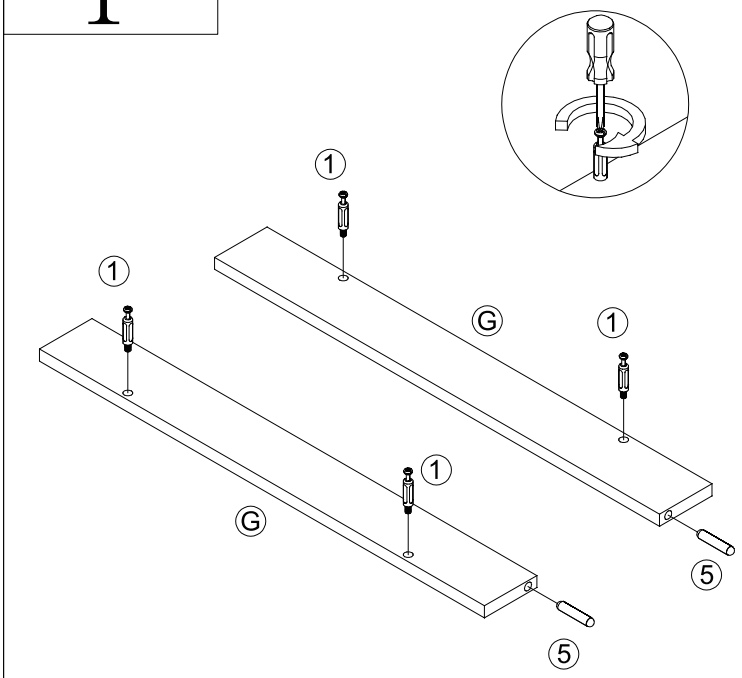


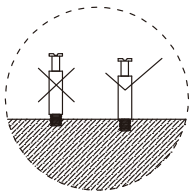


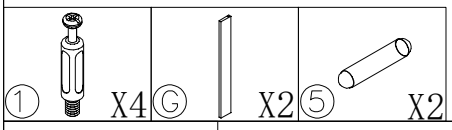


2

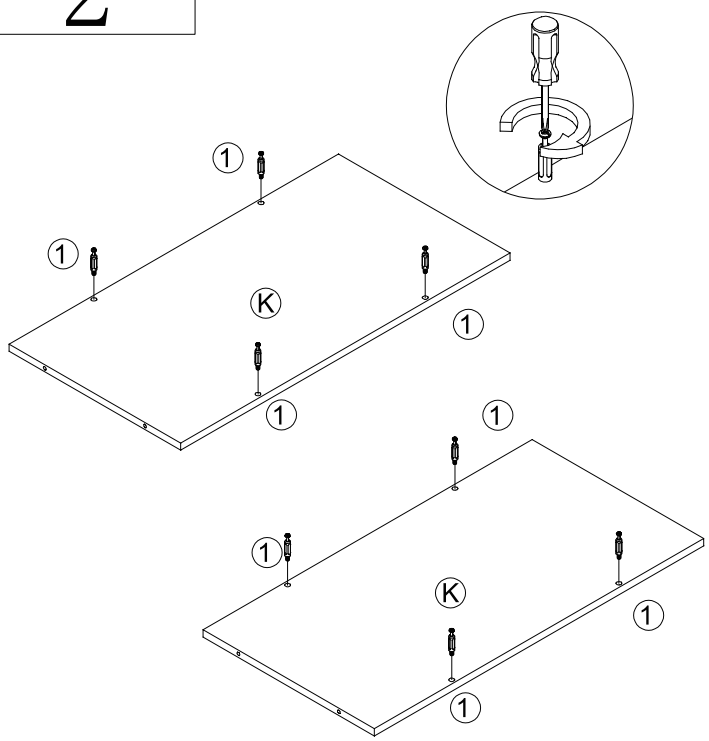


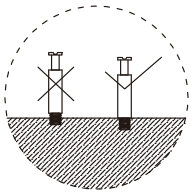


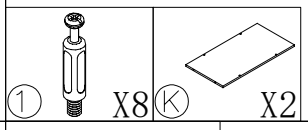


3

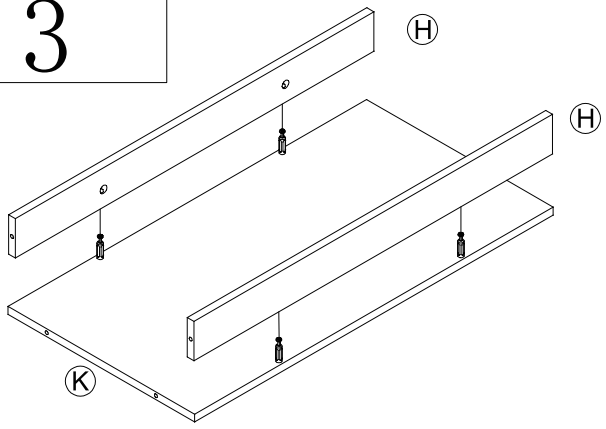


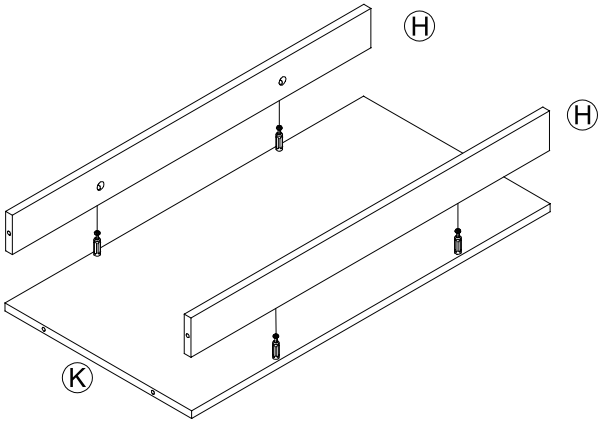


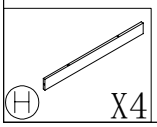


4

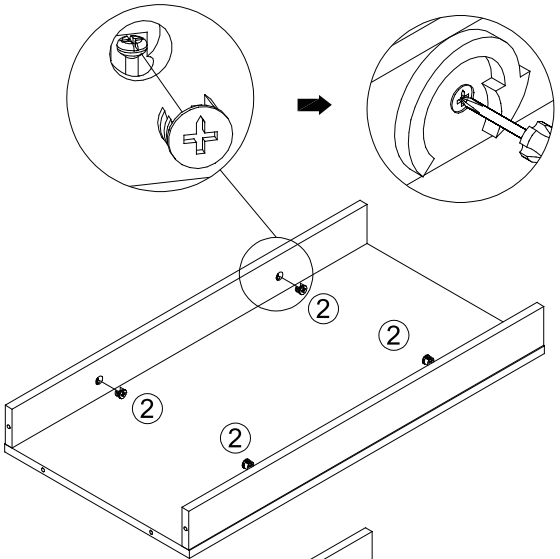

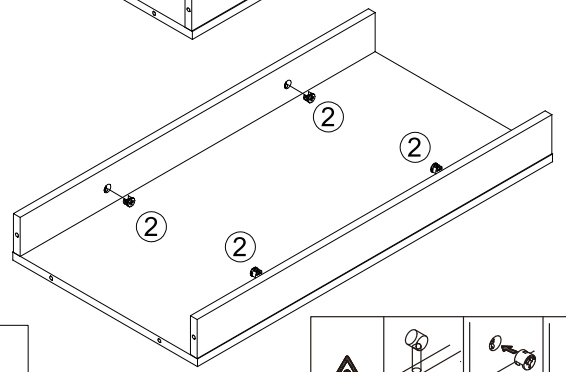


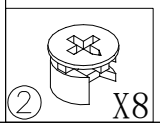

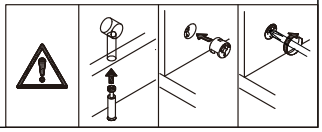


5


When installing Panel D, make sure the slot is facing the correct direction.

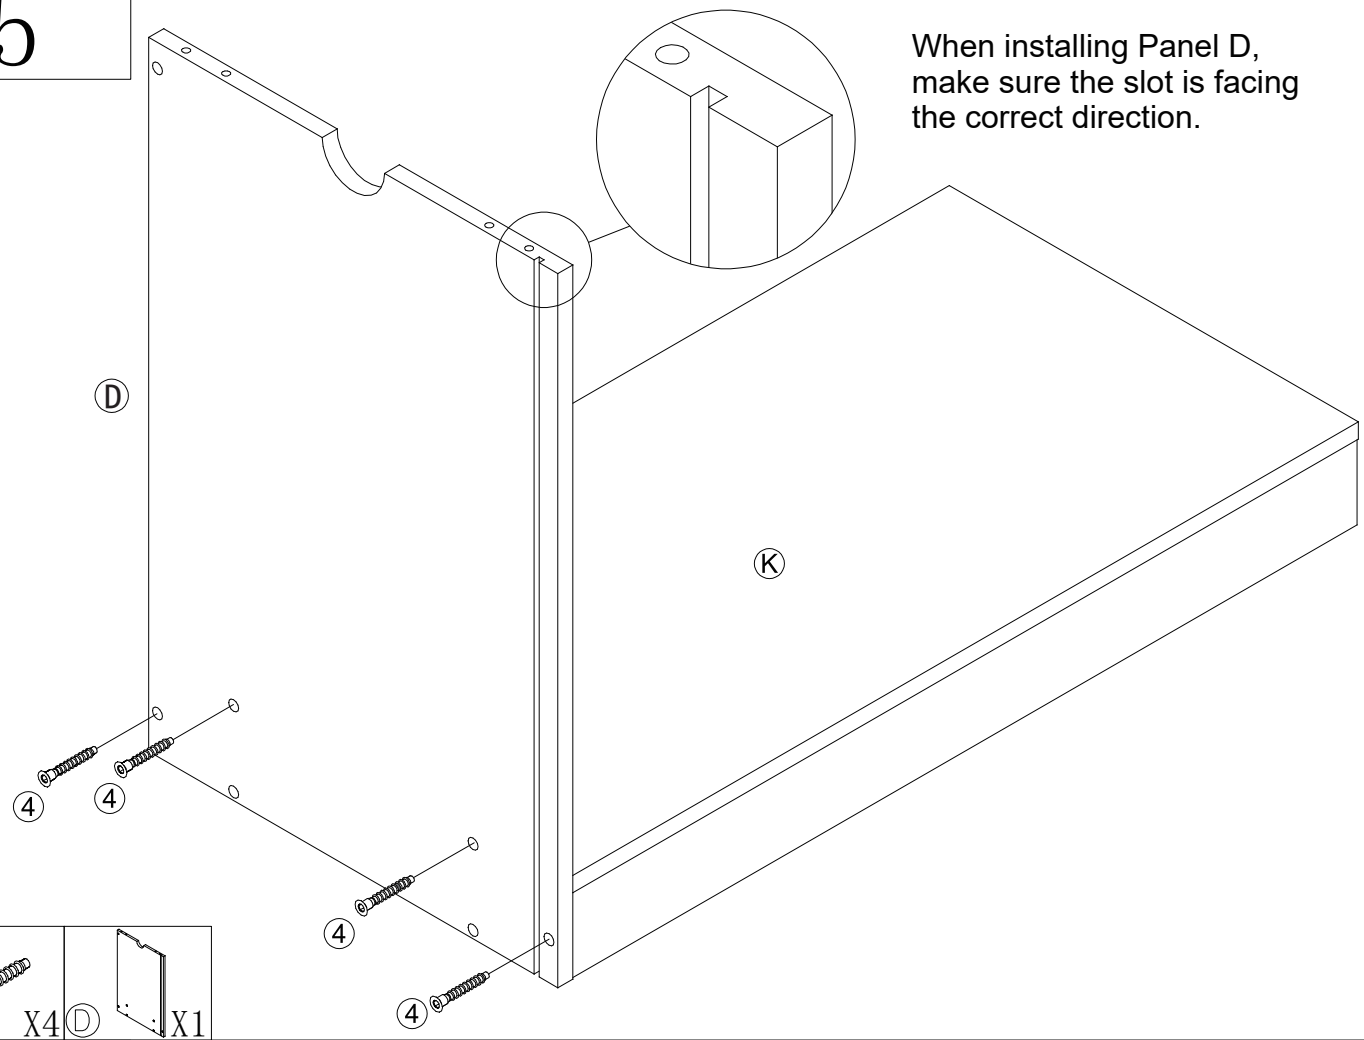

6


When installing Panels C and H, make sure they arefacing the correct direction.

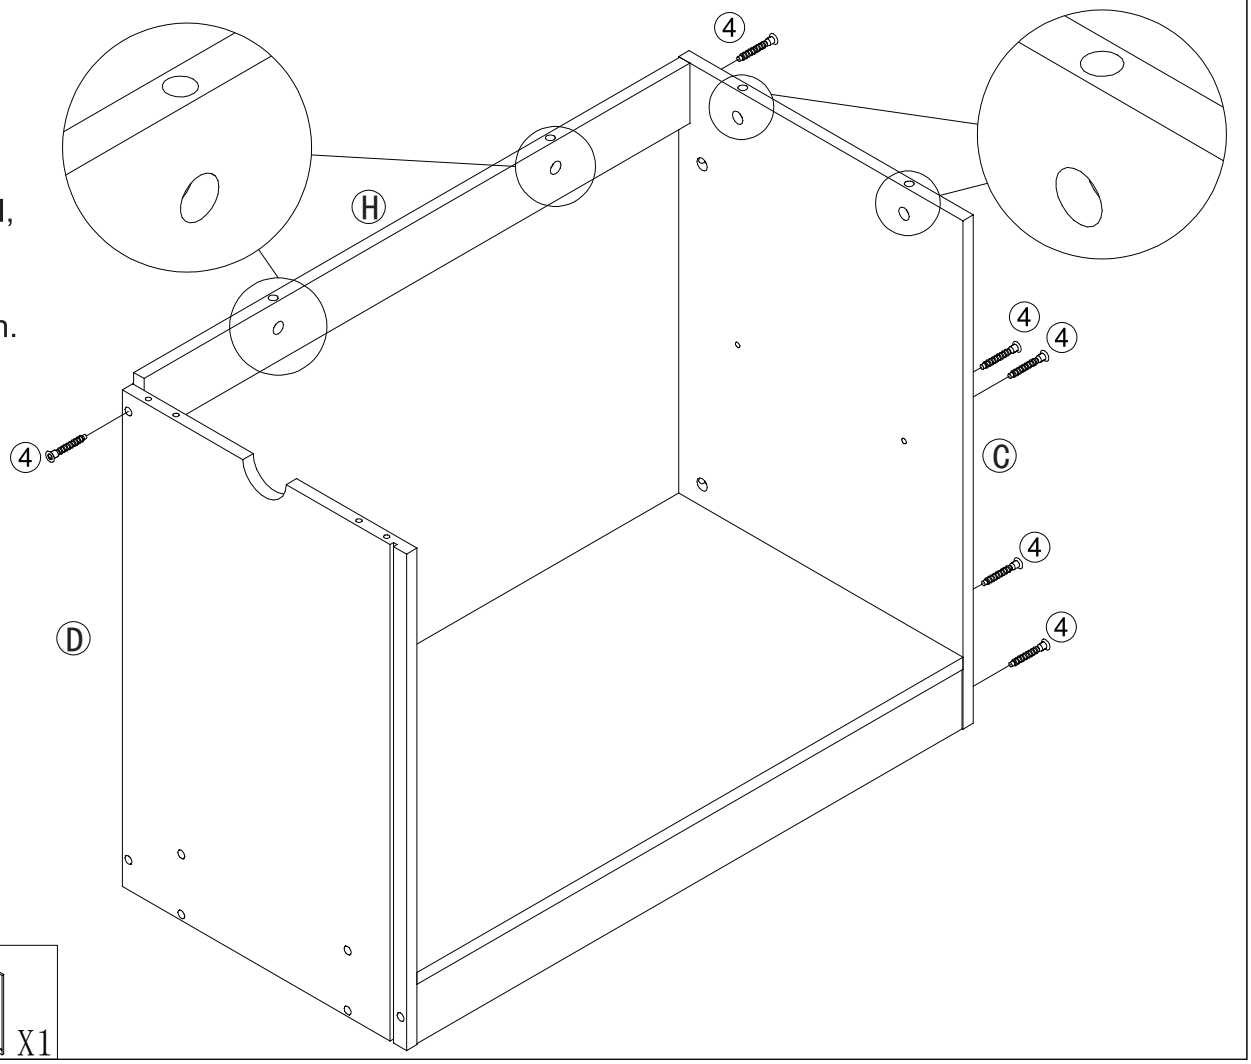

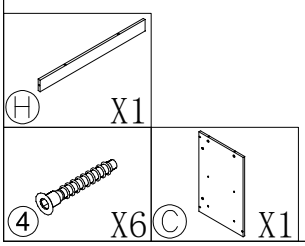


7


When installing Panel E, make sure the slot is facing the correct direction.

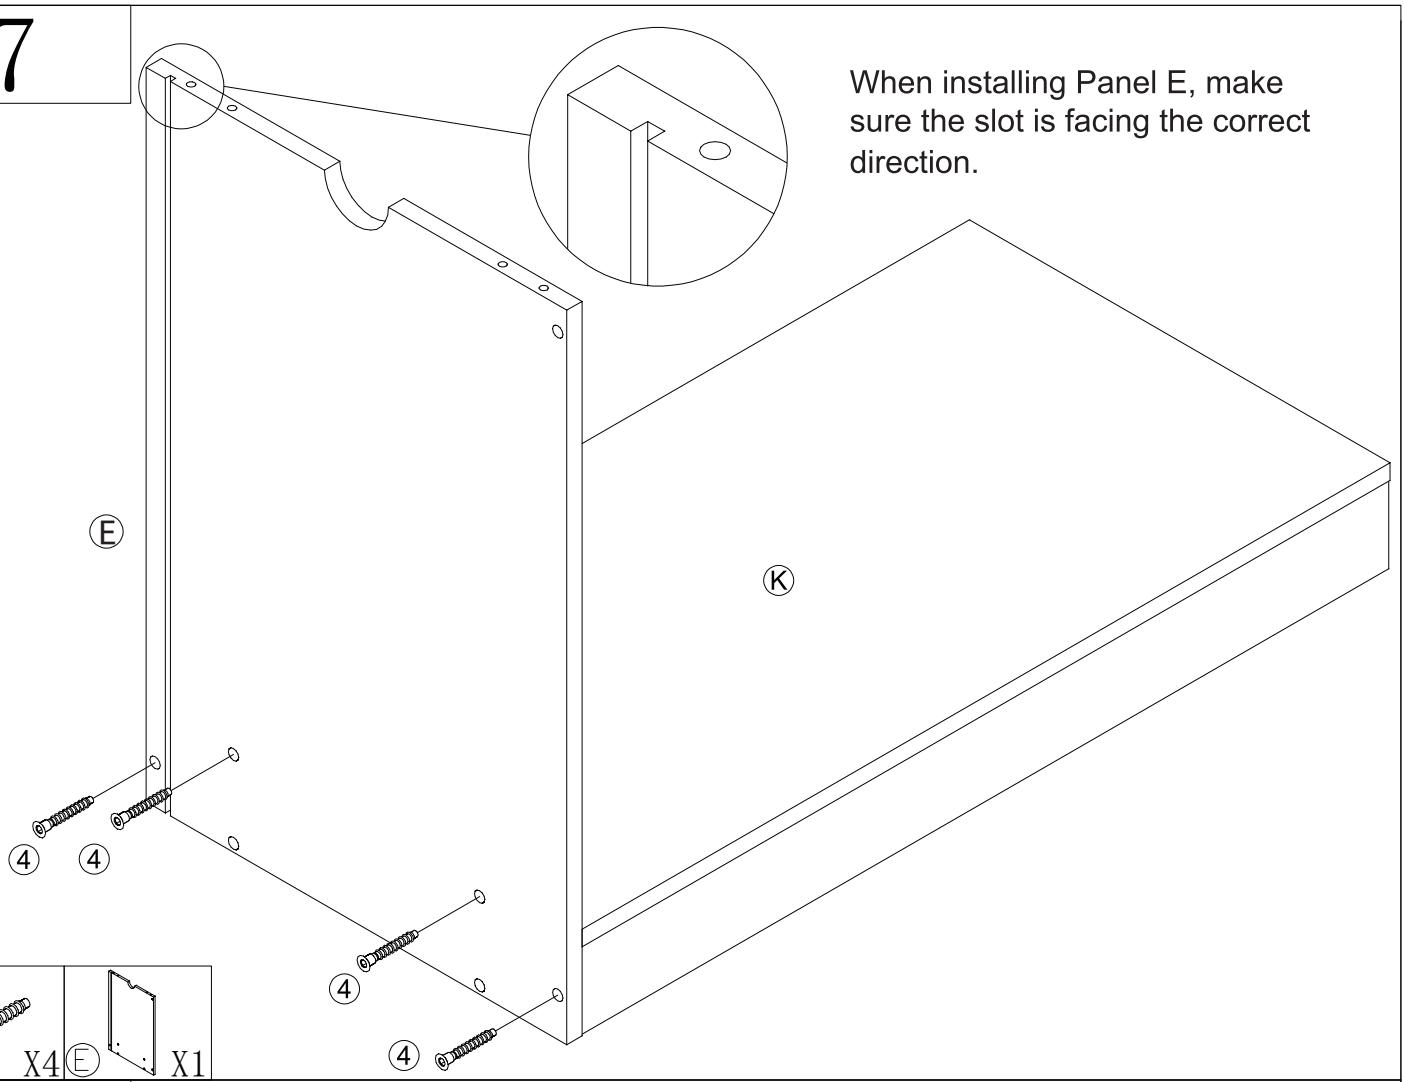


8

When installing Panels F and H, make sure they are facing the correct direction.

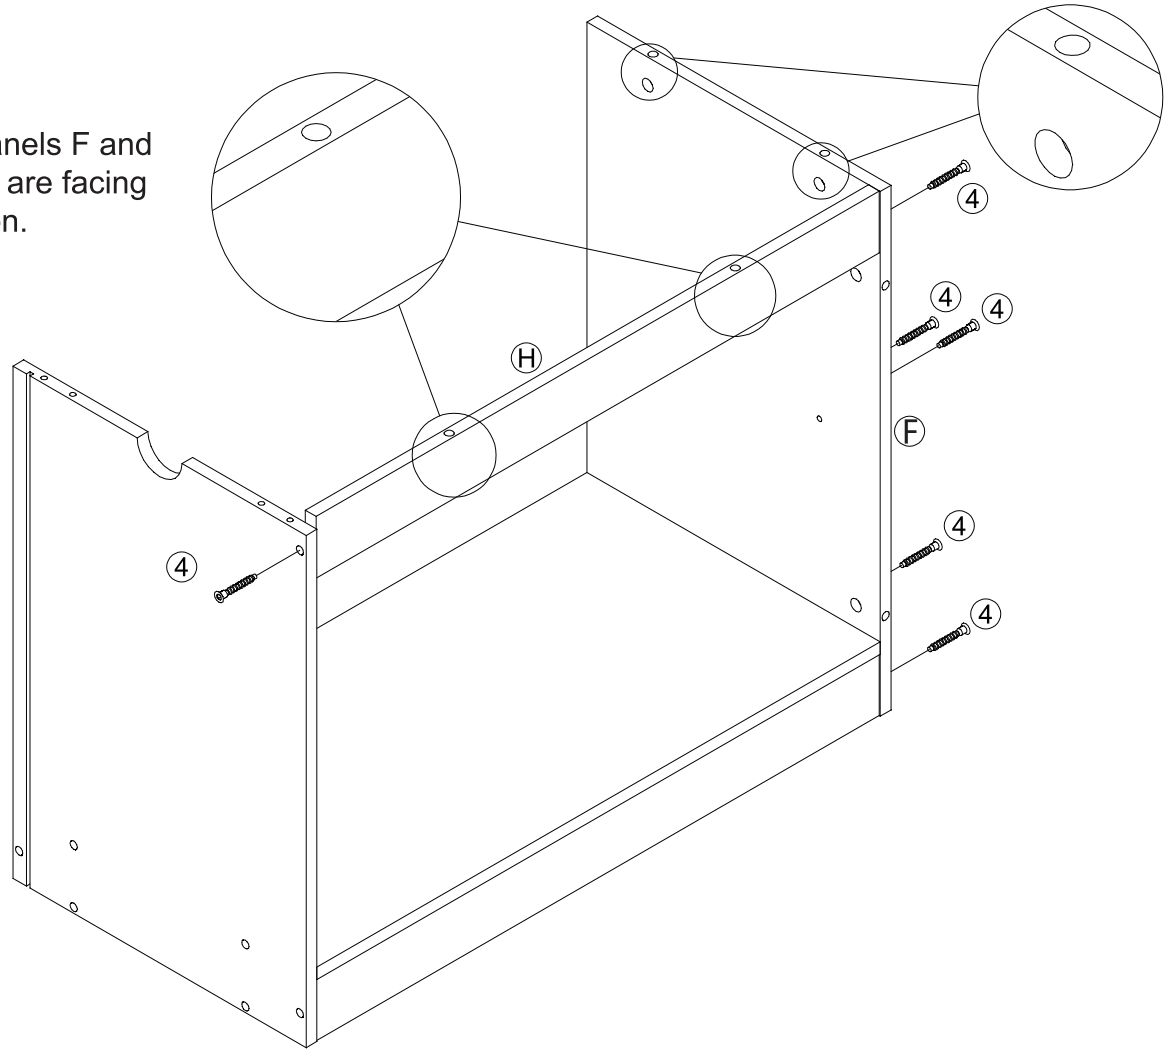


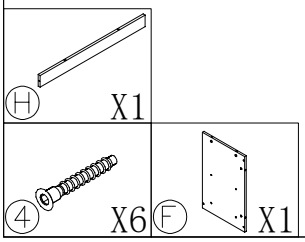


9

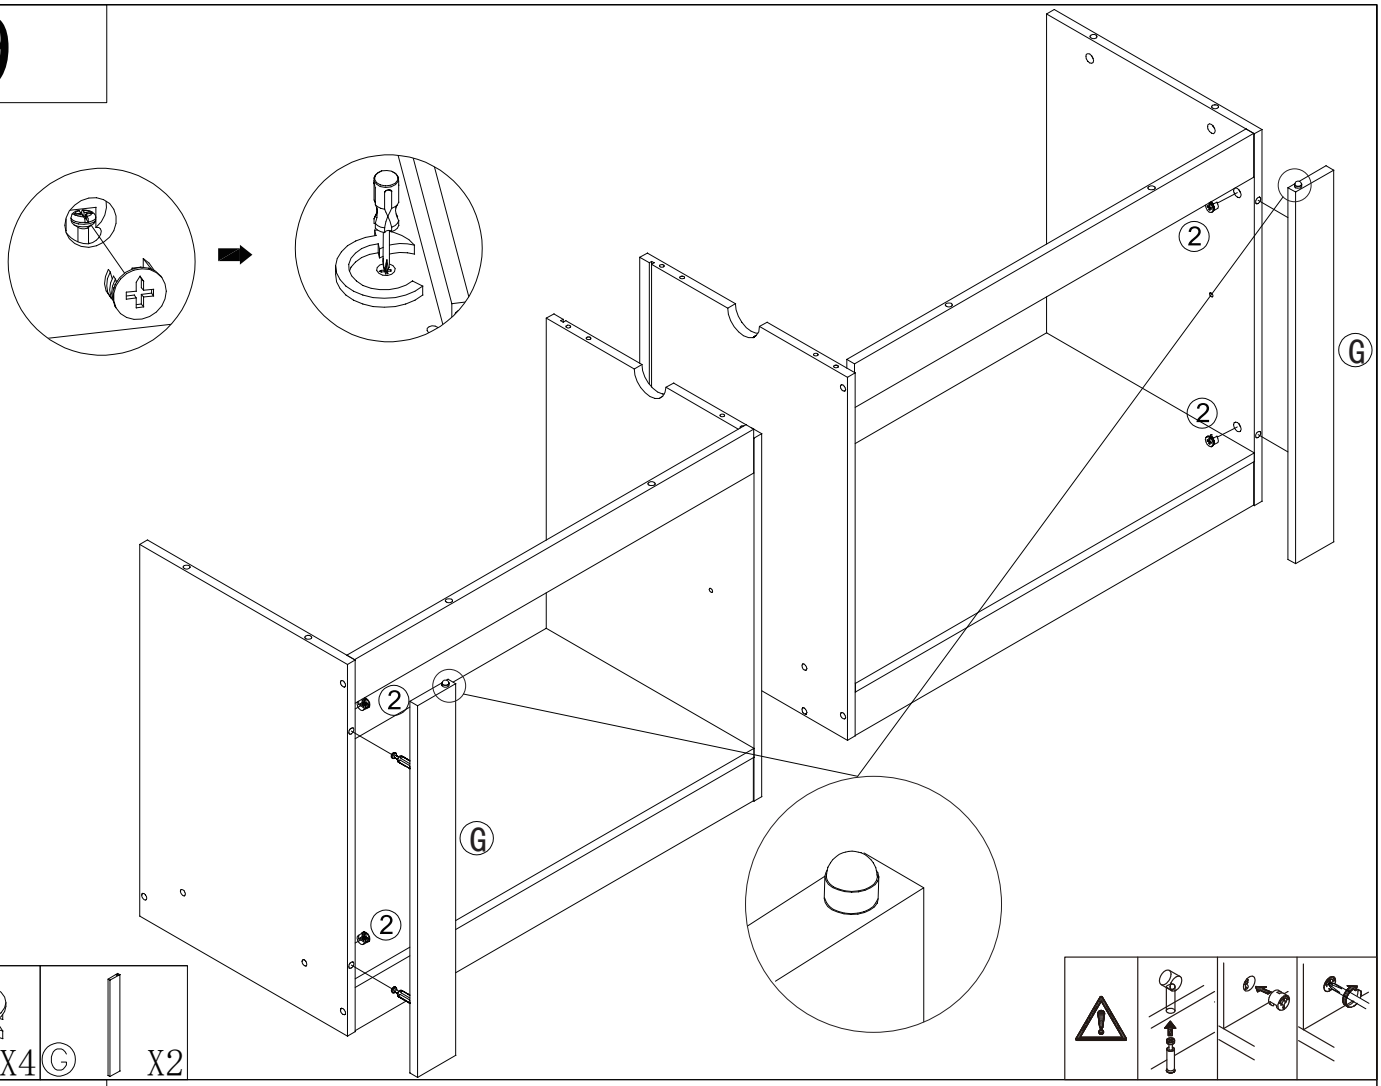


10

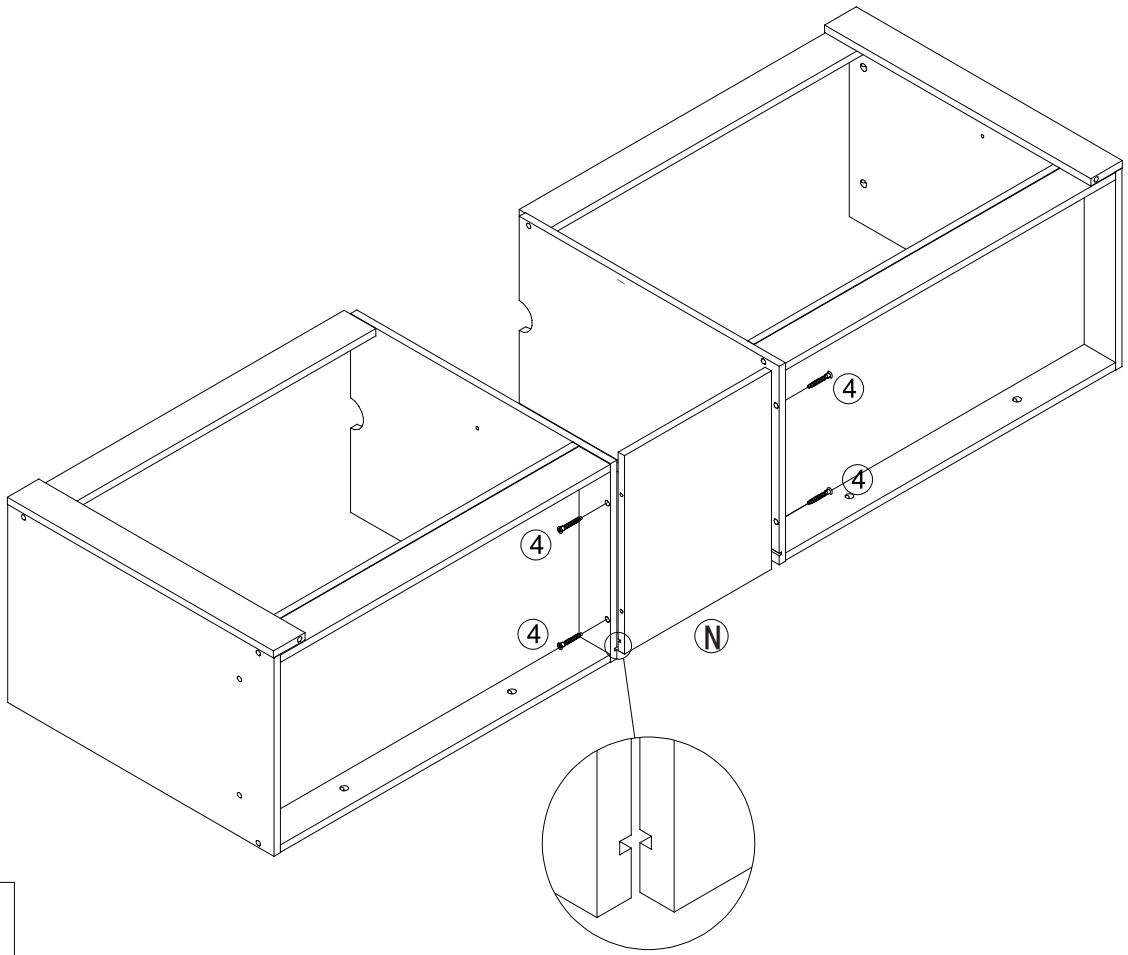

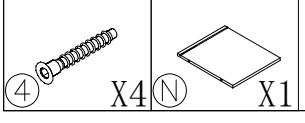


11

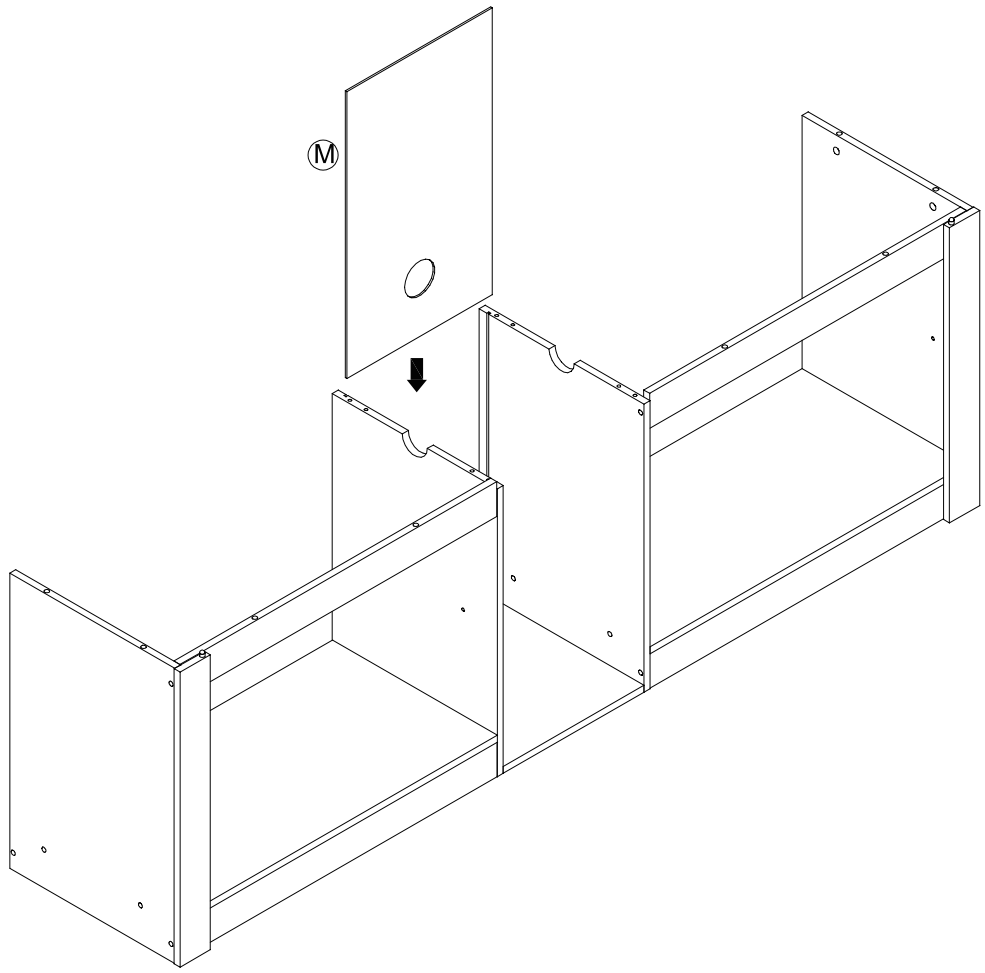

Ⓜ X1

12

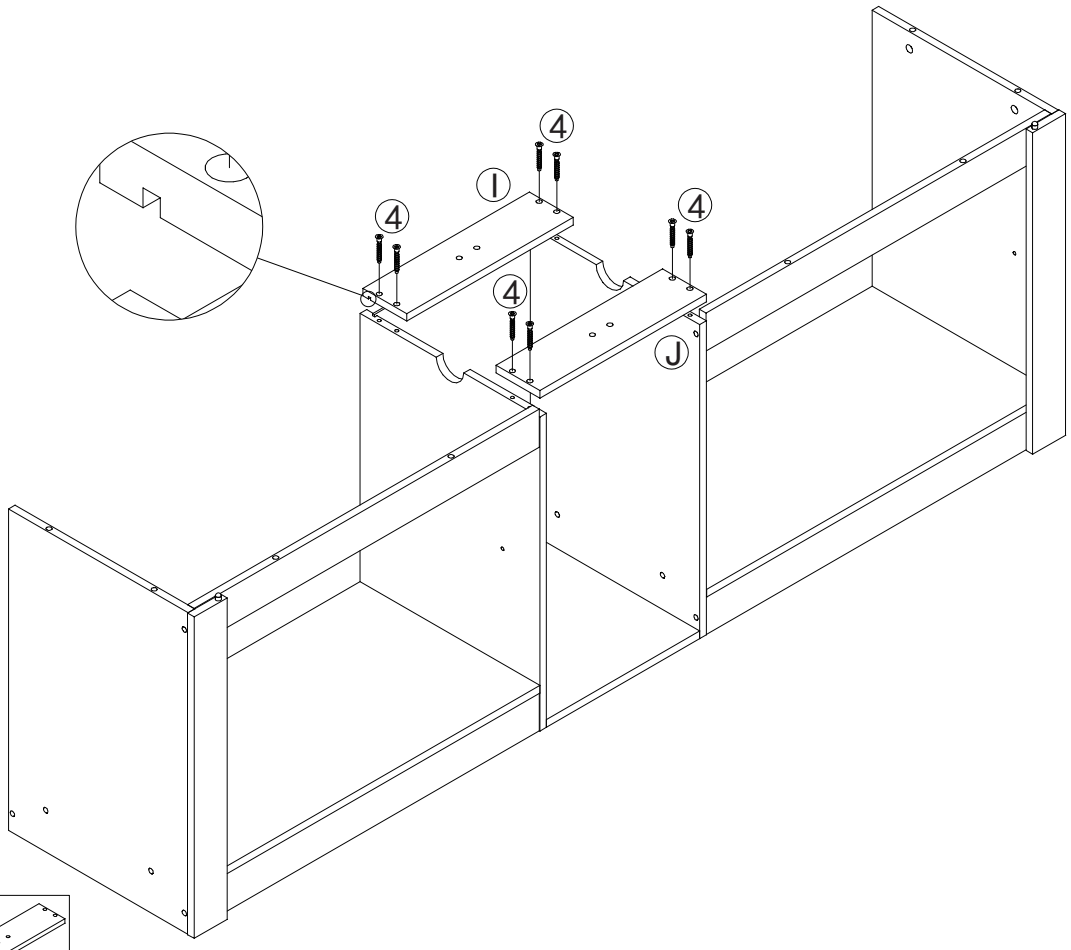


4 X8


Ⓘ X1

Ⓙ X1

13

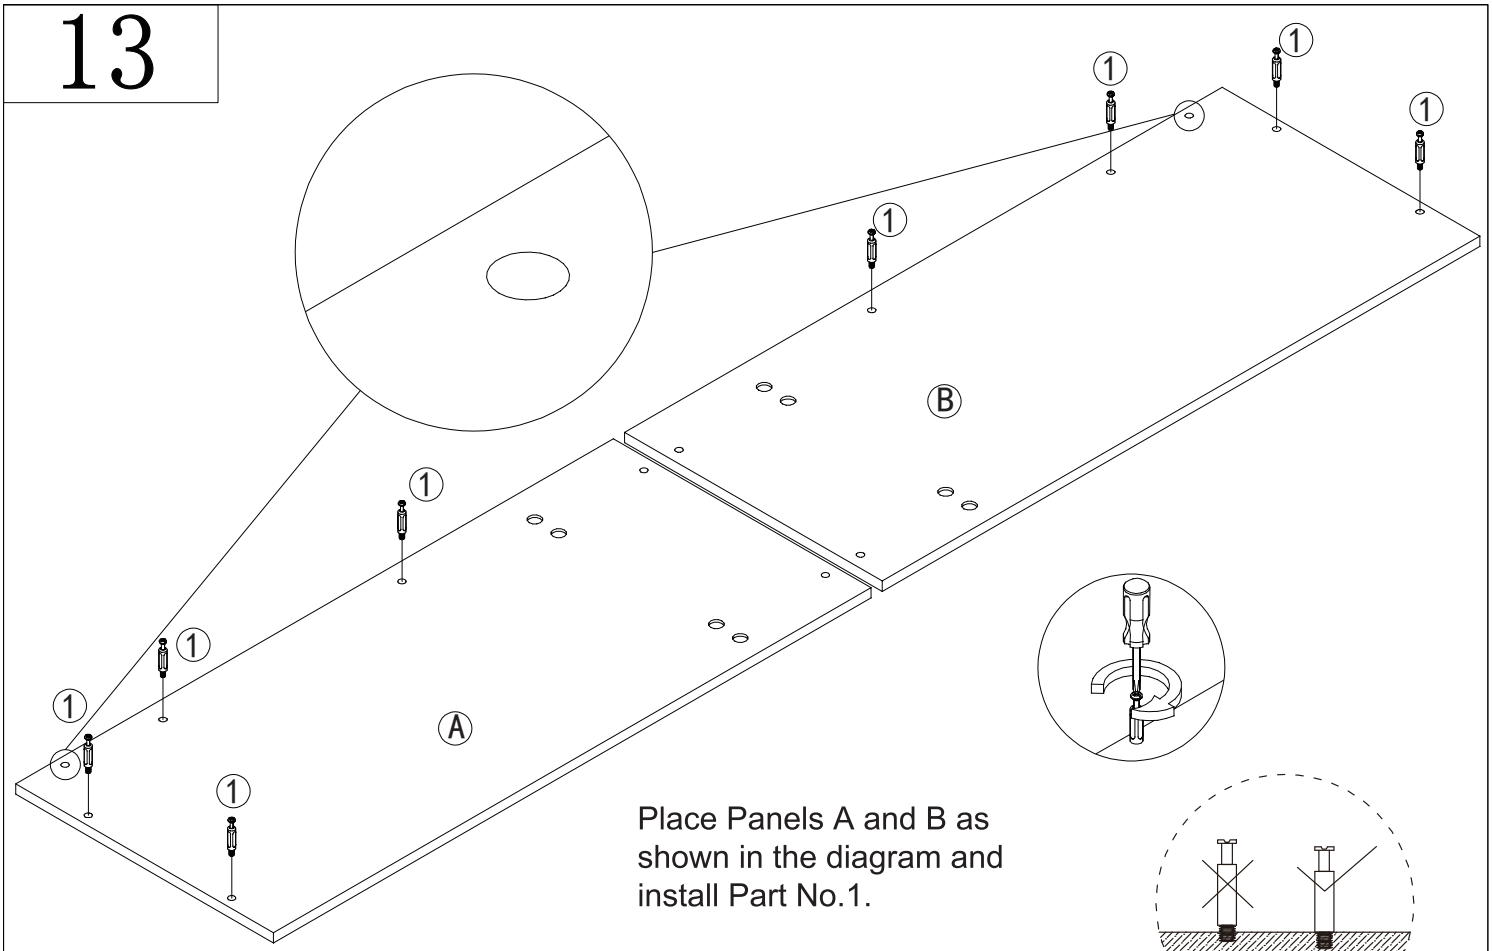



Place Panels A and B as shown in the diagram and install Part No.1.

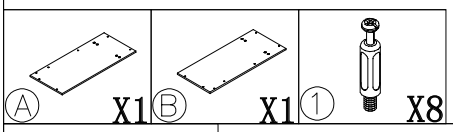


14


Adjust the gap between Part A and Part B to align them properly,
then fully tighten the screws.

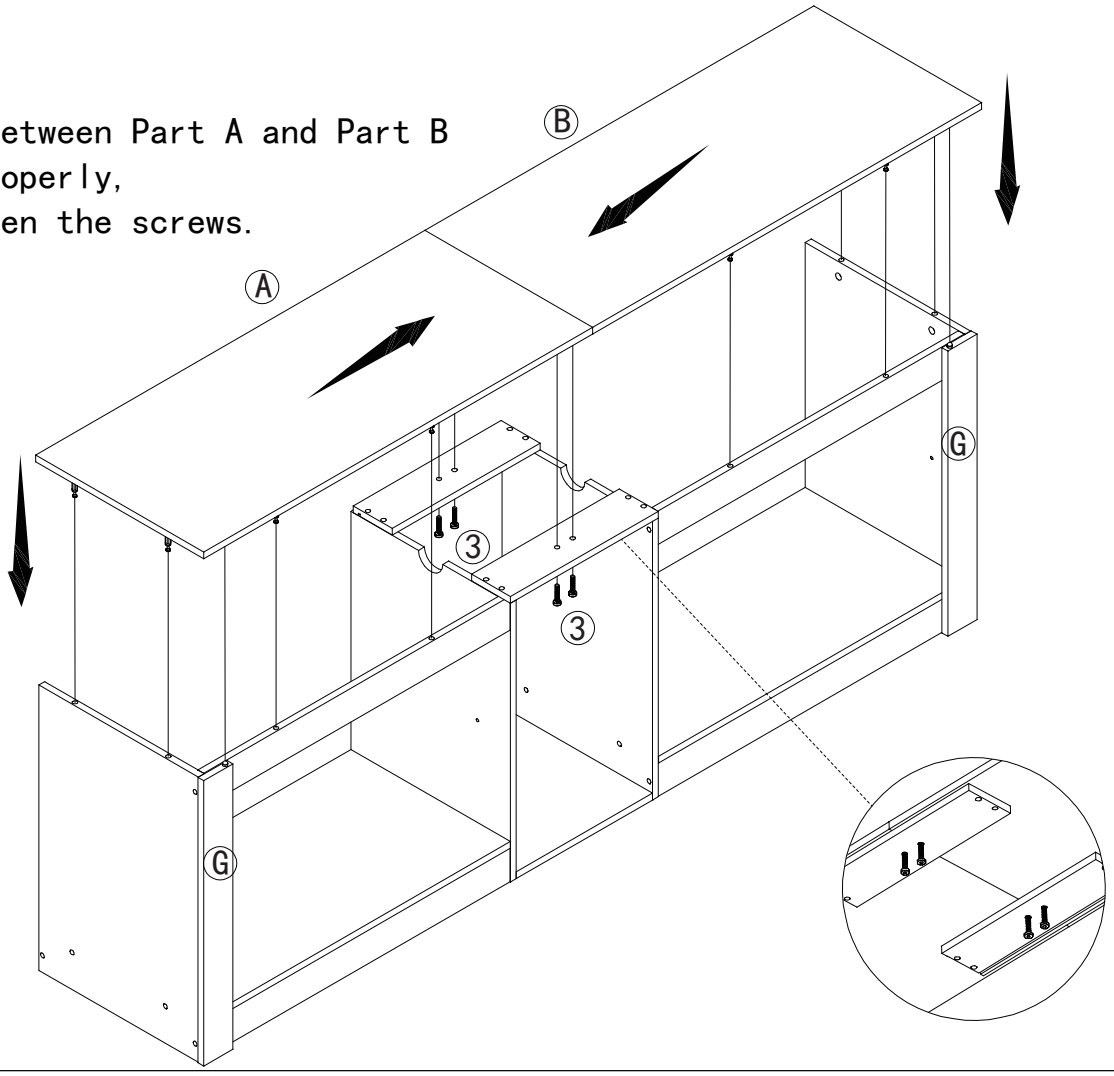

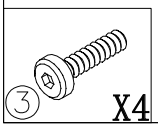



15

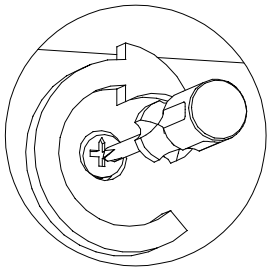

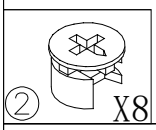


16

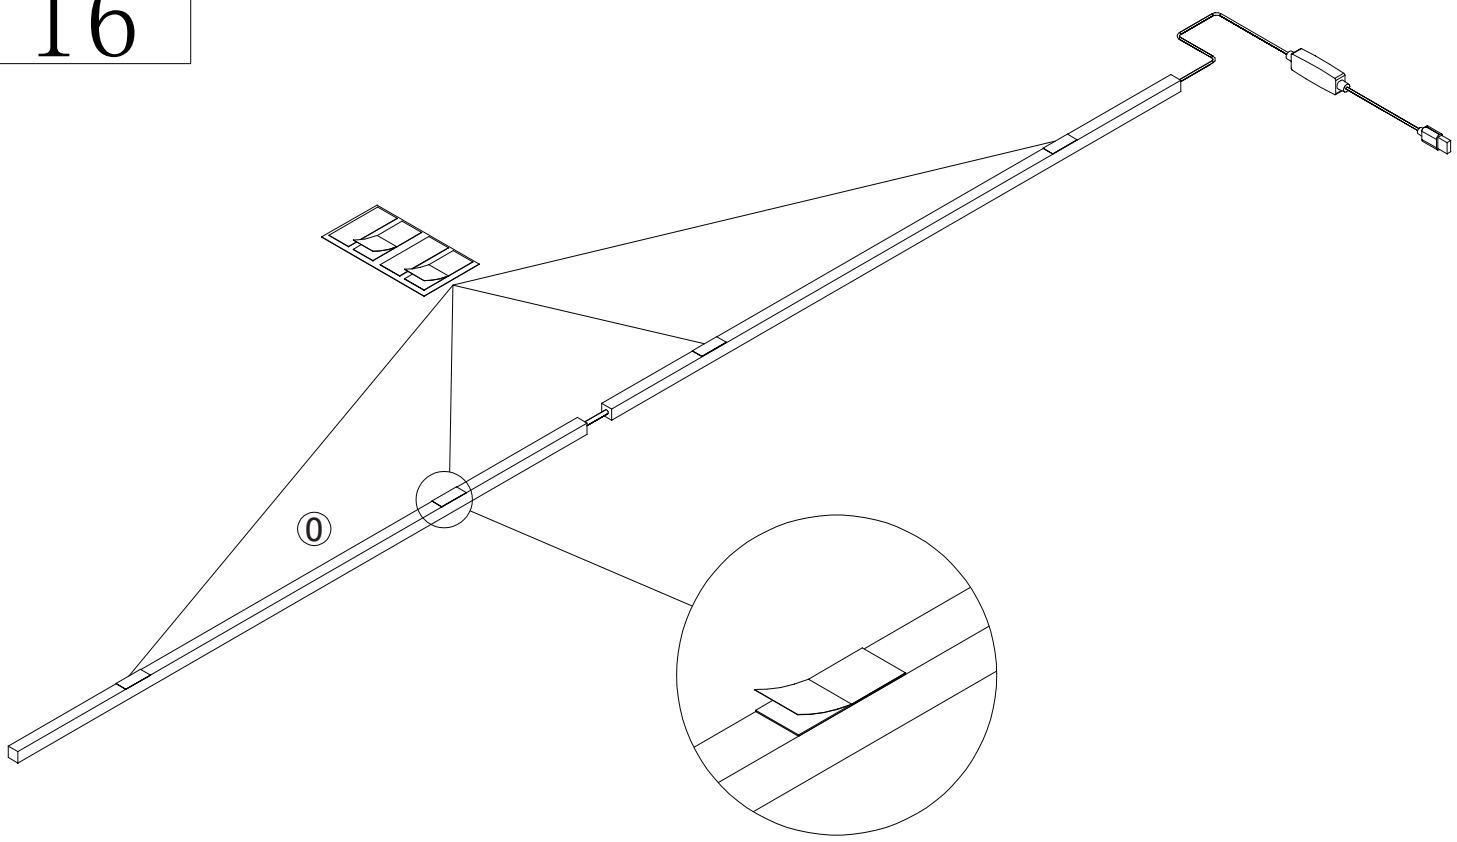


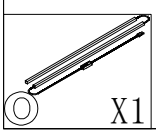


17


Decide the direction of the light strip installation according to the location of the power socket.

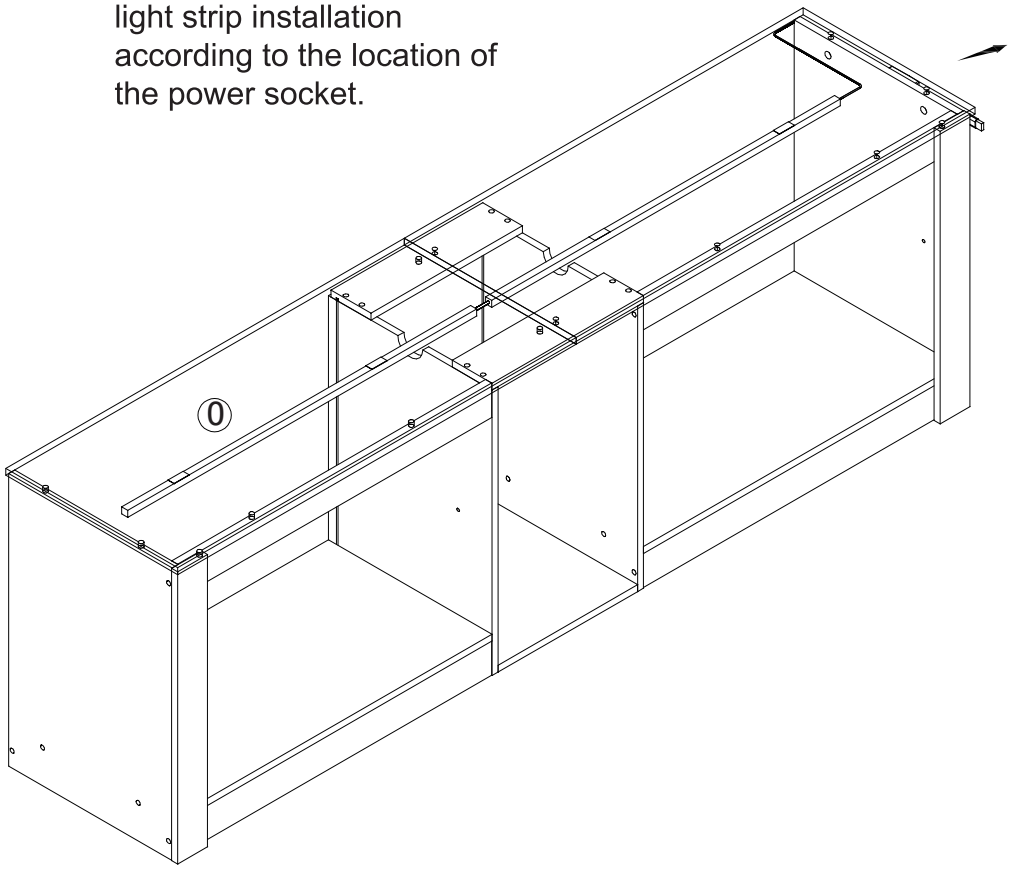

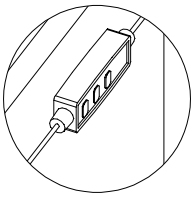


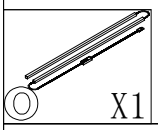


18

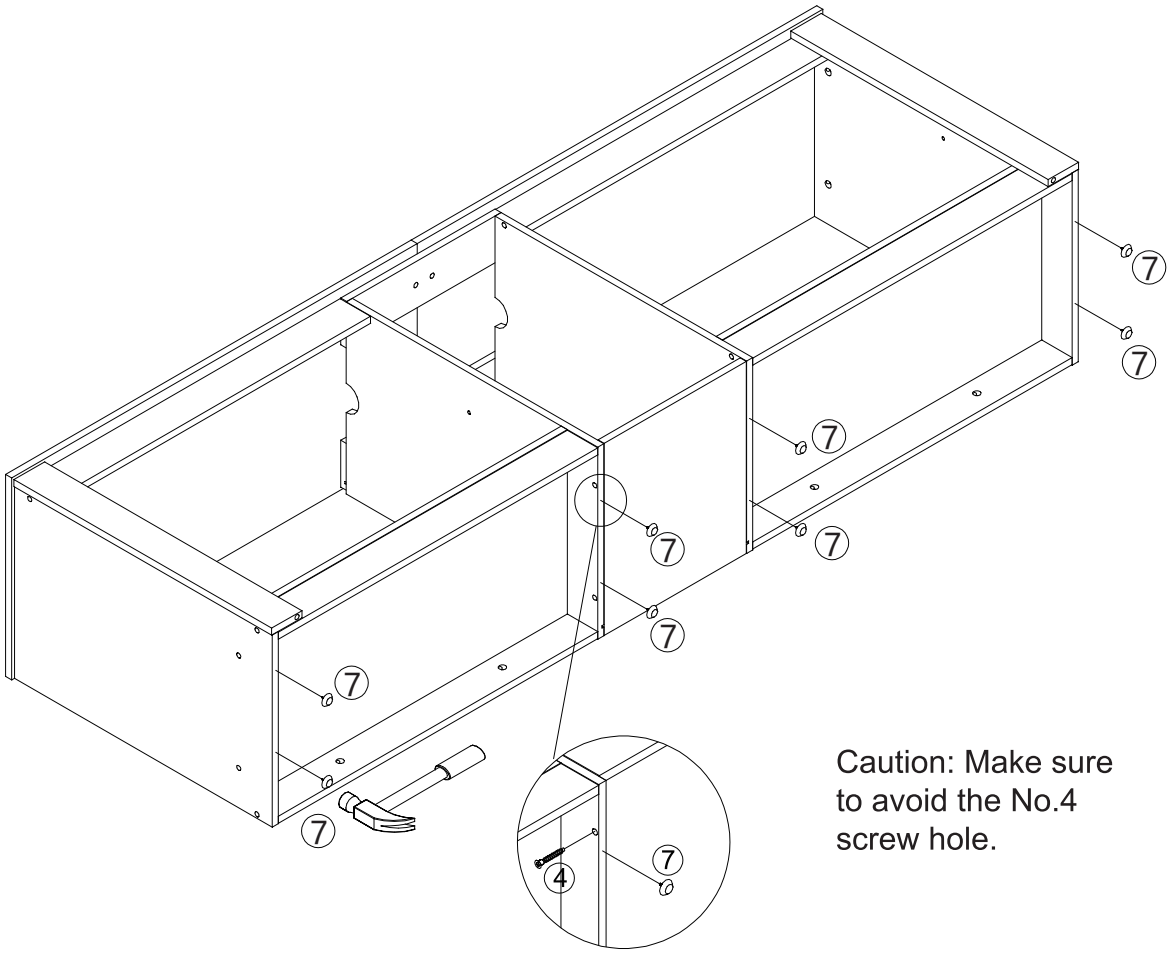


Caution: Make sure to avoid the No.4 screw hole.

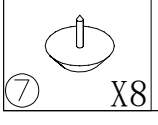



19

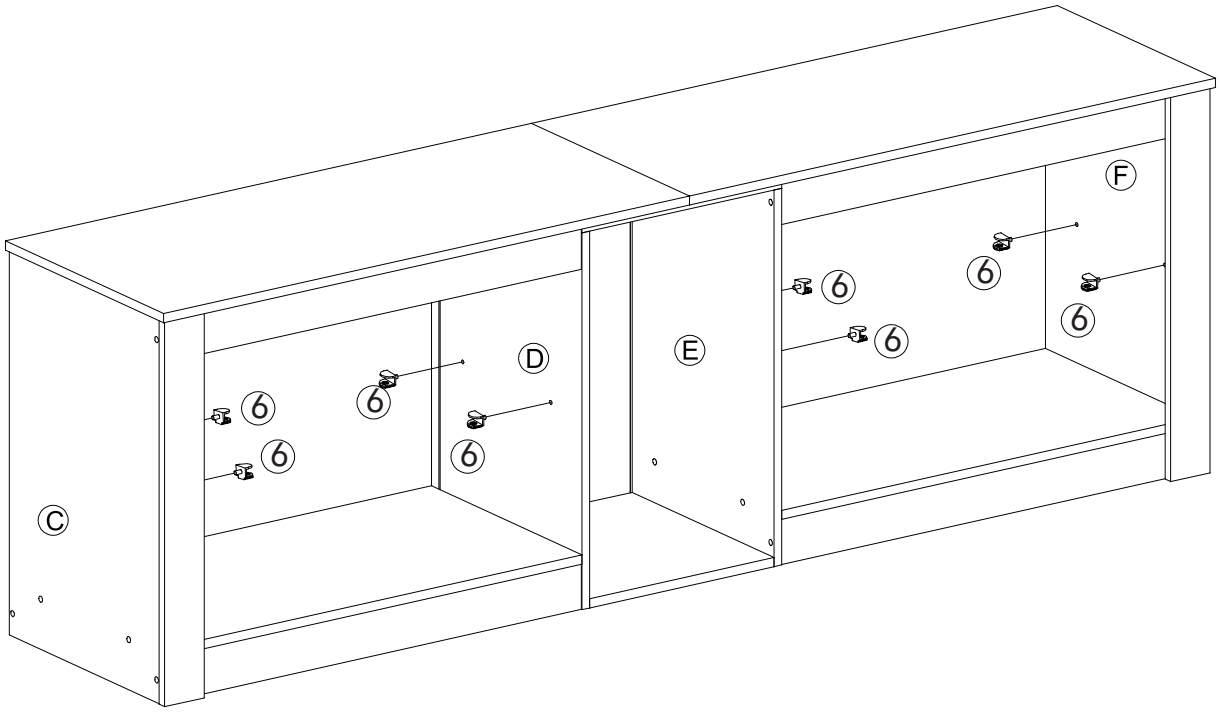
C
D
E
F
6
6
6
6
6
6
6

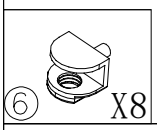

6
X8

20

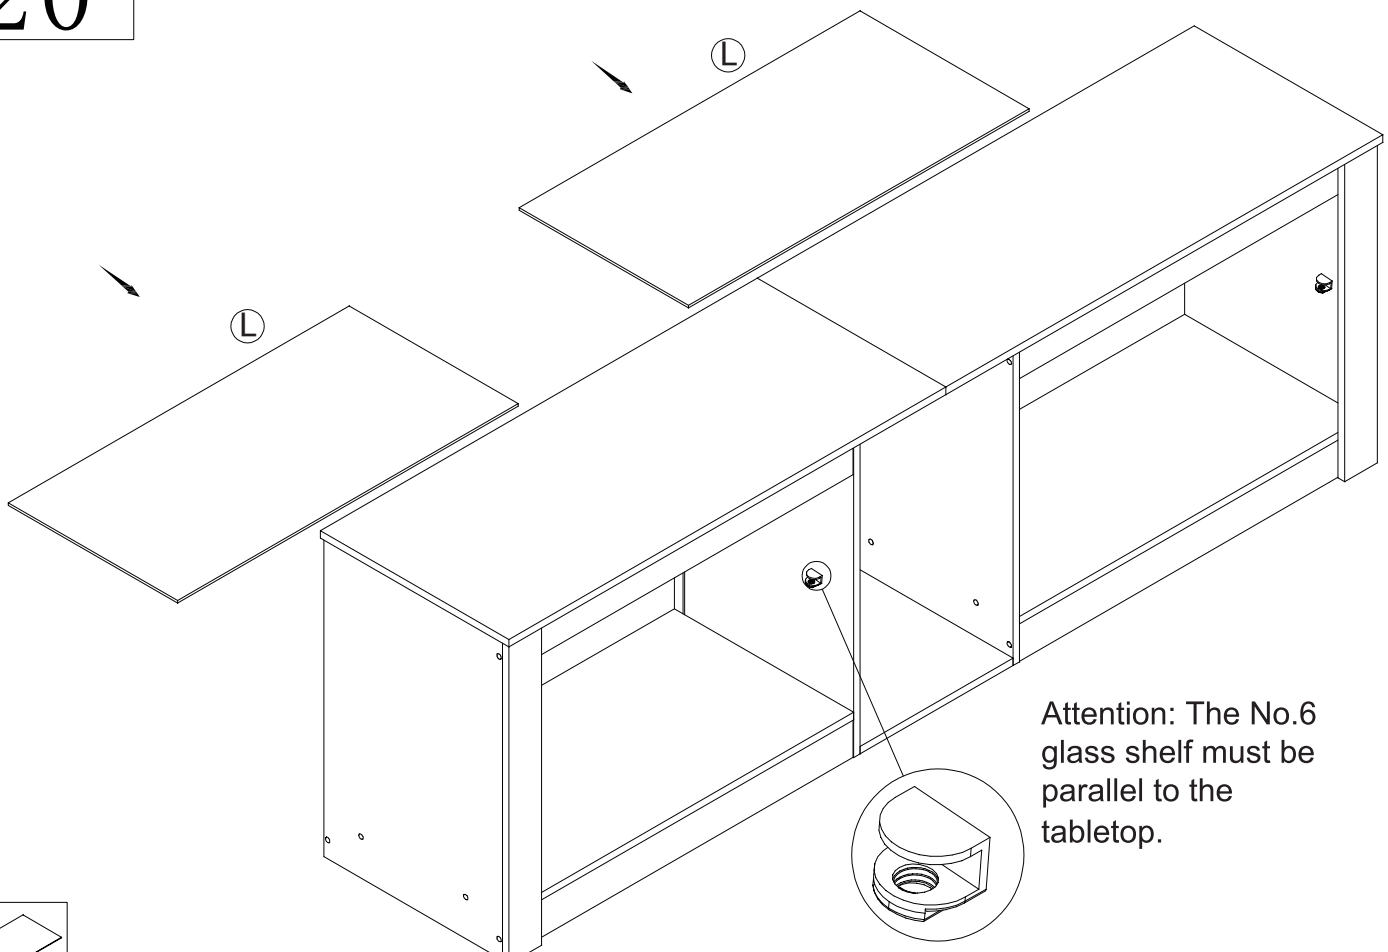
L
L
Attention: The No.6 glass shelf must be parallel to the tabletop.

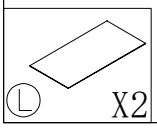
L
X2

21

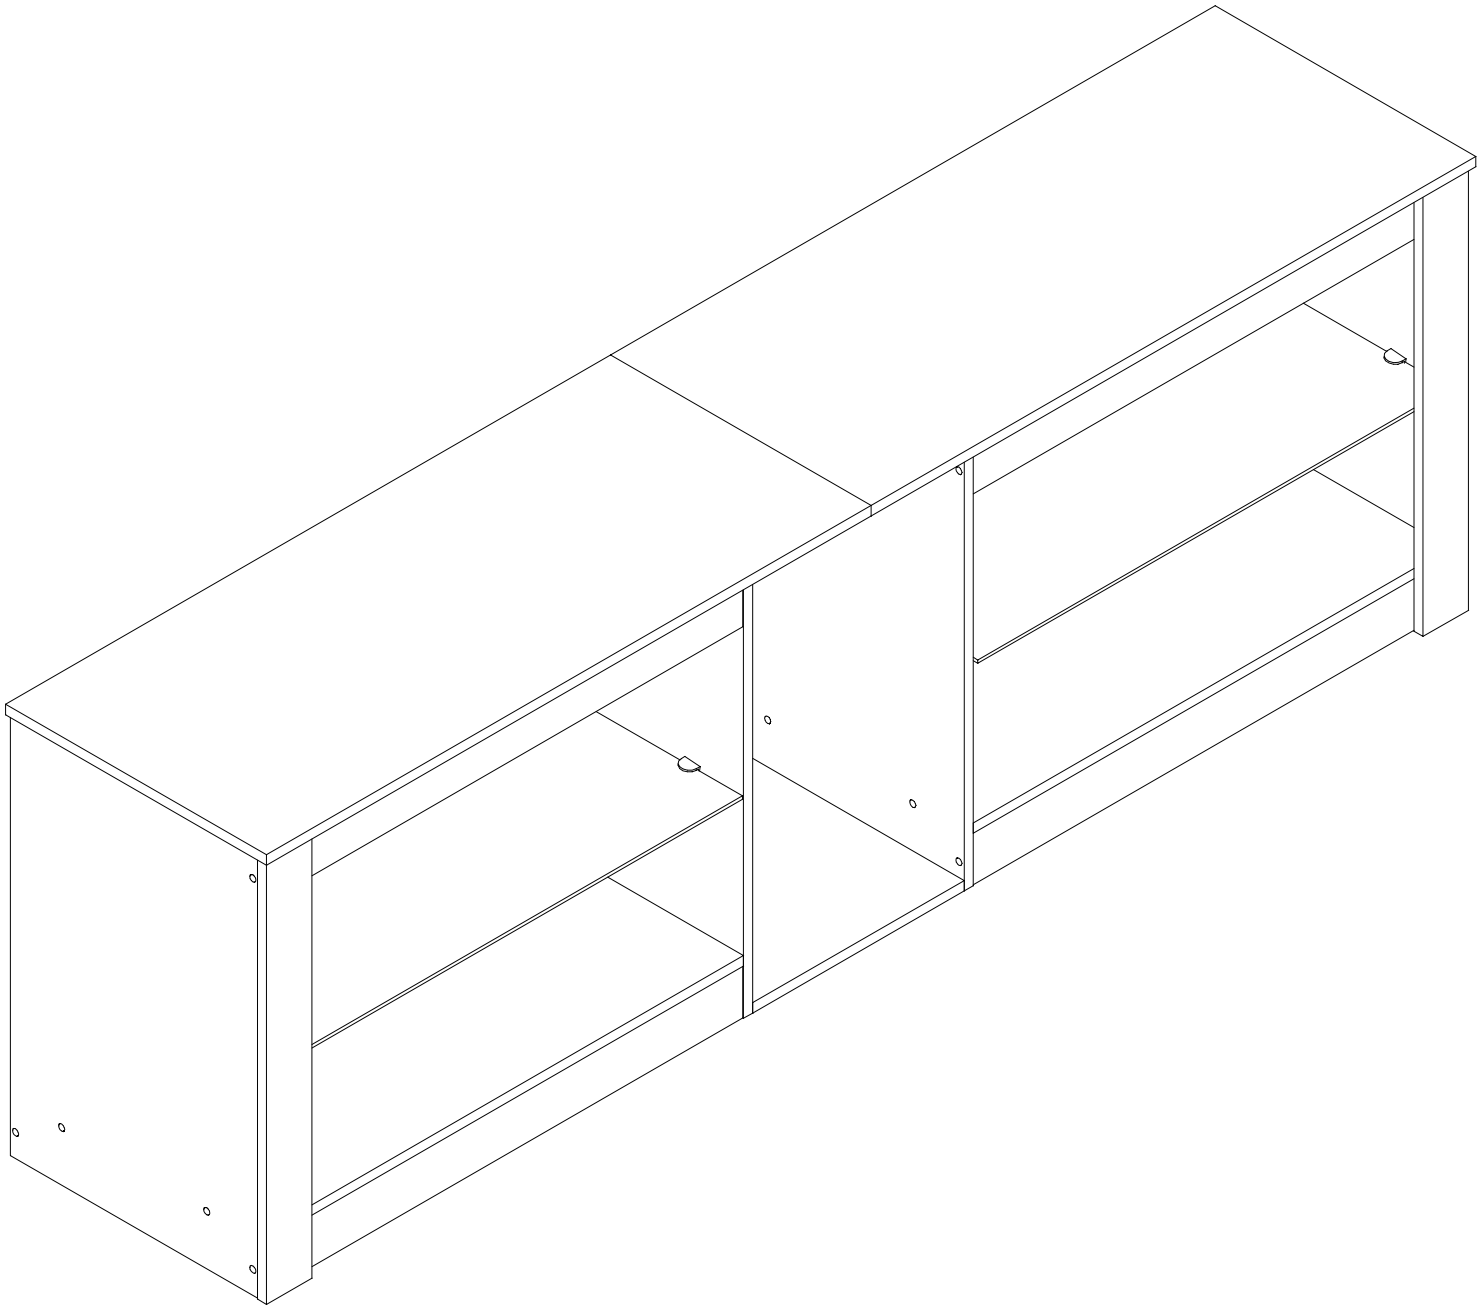

C


Static Color Button

M

Dynamic Mode Button

S / B

Speed & Brightness and Power Button

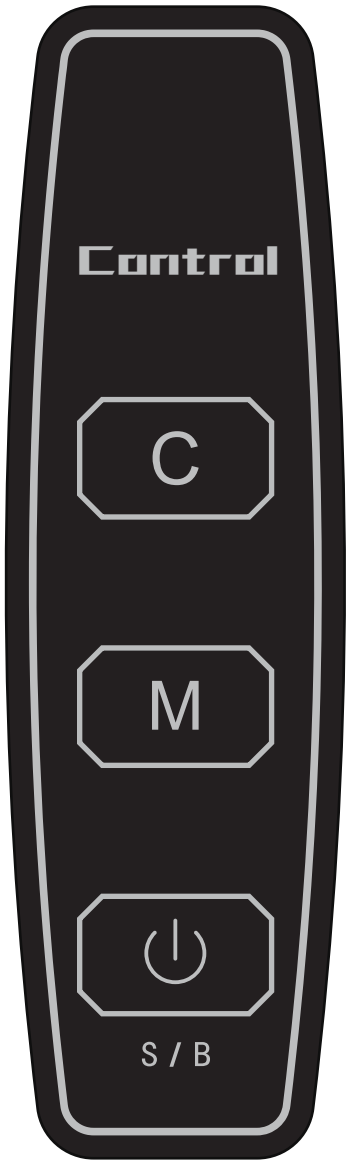

STATIC COLOR BUTTON

Press this button once to switch to the static color mode, and then each pressing can change the color.

DYNAMIC MODE BUTTON

Press this button once to switch to the dynamic mode effect, and then each pressing can change the dynamic mode.

Press this button for more than 2s to switch to the demo mode; In the demo mode, the strip will automatically cycle through various dynamic modes.

SPEED & BRIGHTNESS AND POWER BUTTON

A. In the static mode, press this button to adjust brightness of the light bar; each press can switch to a brightness level.

B. In the dynamic mode, press this button to adjust the dynamic mode speed; each press can switch to a speed level.

C. Press and hold this button to shut it down when the strip is on. Press this button to turn it on when the strip is off.

The product has a power-off memory function; the strip can restore the color, brightness, and mode in the next power-on.