
Wardrobe

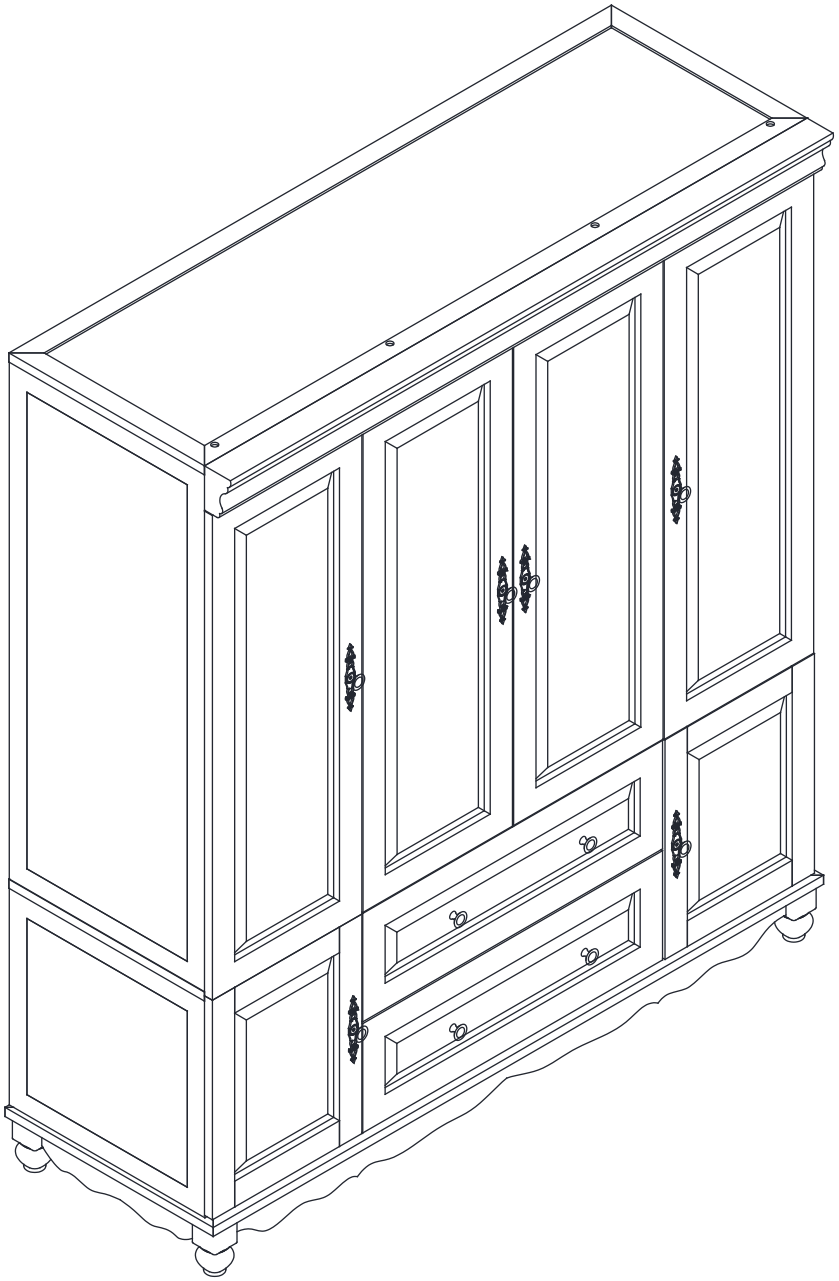

SKU: YG-SM-2-WH

MFSKU: GZWH-YG-SM-2

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

•If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

•If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please consult our FAQ section at ***wardrobe2023@163.com*** as there may be a simple solution to the issue.

DAMAGED ITEMS

•If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.

•In all circumstances, please save all packaging material and paperwork for the order.

•Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the retailer, you jeopardize your chances of making a claim, and you may not receive a credit for the return.

EMAIL: wardrobe2023@163.com

(Installation Video)

WARRANTY

WARRANTY CLAIMS

•There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

•The product must be used in accordance with the instructions provided. For health reasons.

•For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

•Failure to follow the furniture instructions will invalidate the warranty. Attention please.
•Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

•Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

•After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

•Sheet parts: 1 month from the date of purchase.

•Electrical parts: 1 month from the date of purchase.

IMPORTANT INFORMATION!

•please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

AVOID SCRATCHES!

•In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

IMPROVE EFFICIENCY !

•Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

IMPORTANT !


•It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.


•For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

•Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

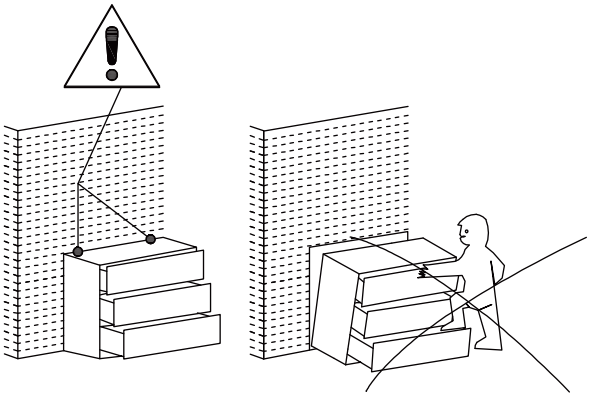

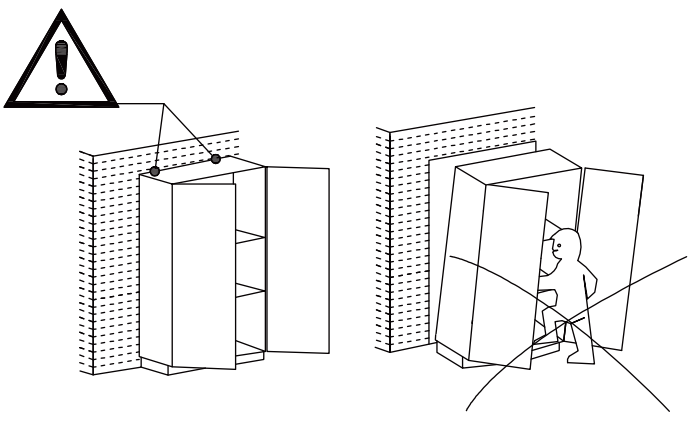


Installation Guide

Exploded Views






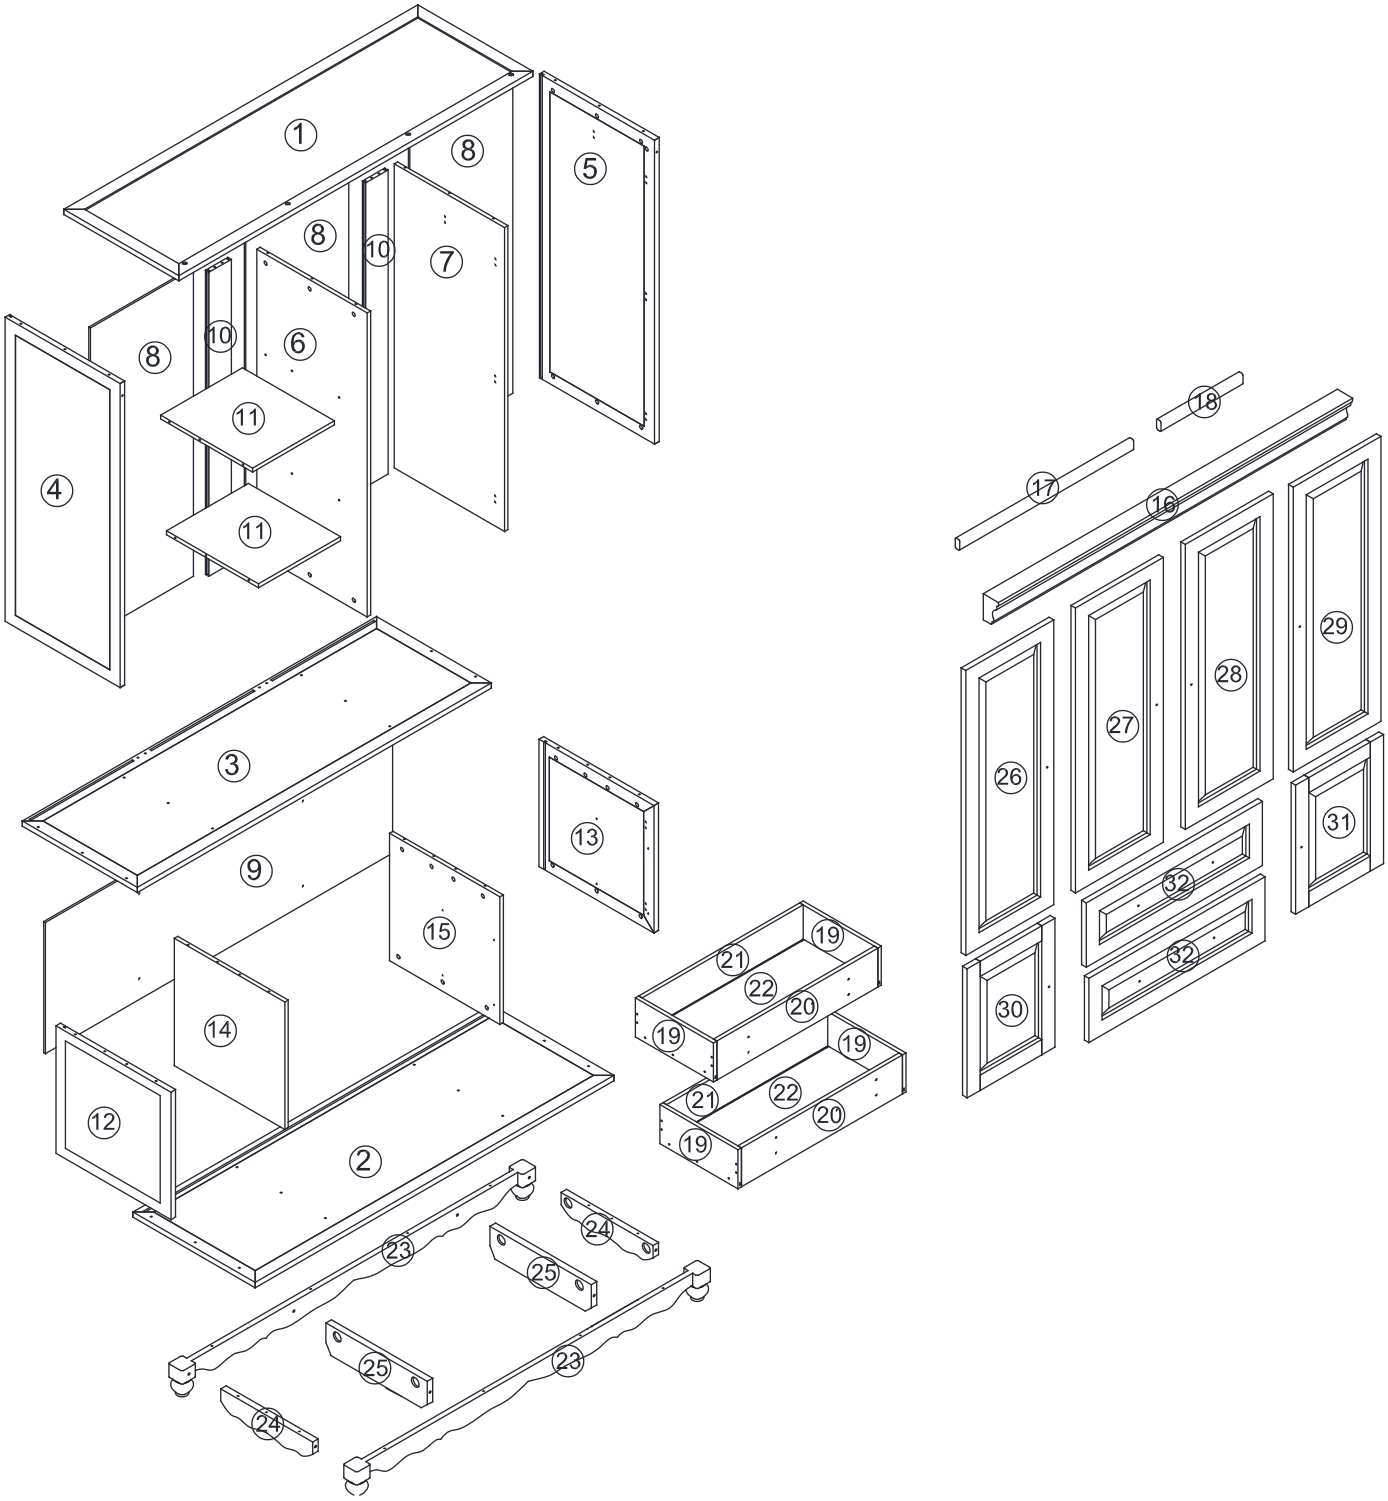


Please prepare the following tools

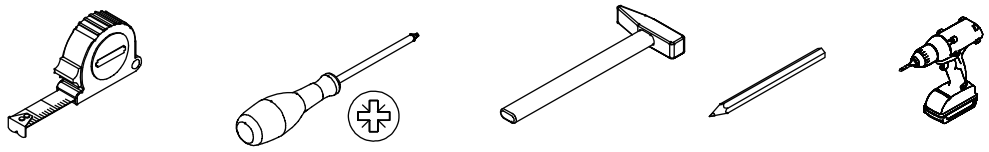



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

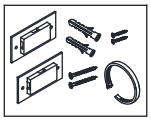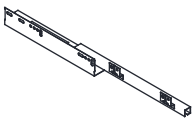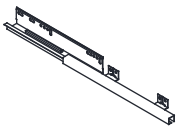
A x 78	B x 78	C x 8	D x 1	E x 20
				
Ø6 x 39mm	Ø15 x 10mm	Ø6 x 20mm	M4	Ø4 x 30mm
F x 8	**G x 2**	**H x 124**	**I x 4**	**J x 10**
				
Ø3.5 x 16mm		Ø3.5 x 14mm	Ø3.5 x 18mm	Ø30 x 25mm
K x 6	**L x 2**	**P x 4**	**Q x 6**	**R x 2**
				
152 x 23mm	350mm	Ø55 x 20mm	Ø3.5 x 22mm	350mm
S x10	**T x 6**	**U x 8**	**V x 8**	**W x 8**
				
40mm	40mm	Ø8x70mm	30x16x8mm	8mm
X x 1	**Y x 8**	**Z x 10**	**AAx 4**	
				
12mm	38mm	Ø4 x 35mm	Ø10 x 40mm	

Troubleshoot


Product Category	Fault	Cause Analysis	Handing Method
Wood furniture	Door opening is not flexible	The furniture is not leveled	Use items to level the furniture
		The door hinges should be adjusted properly.	Adjust door hinges and apply lubricating oil.
	Inflexible opening of drawer	Overload or deformation	Reduce weight,adjust guide rails, lubricate
	Loose component connection	Loose hinges or screws	The poke part should be coated with an appropriate amount of 502 glue, then re-install or tighten the screws.
	Minor scratches	friction with hard o sharp objects	Use a brush to apply similar pigment ink along wood grain to the scratches, then wipe off the excess.
	Corrosive stains	Accidentally stained with chemical solvents such as nail polish, nail polish remover, ect.	Wipe them with a dry cotton cloth immediately

Possible Issues During Assembly:

- The two boards can't be aligned at he same level.

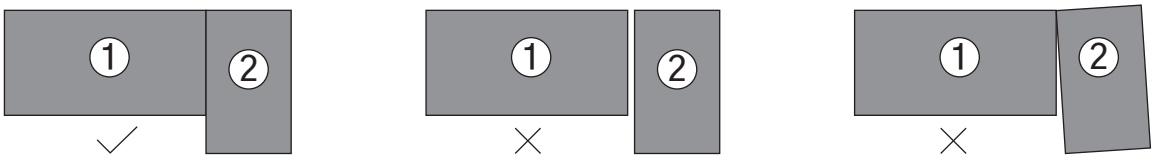


- Holes on the bards and poles are not aligned, so screws can't be installed.

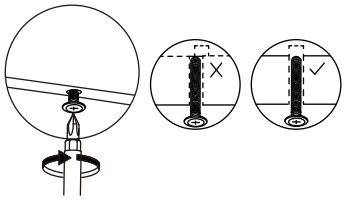

Recommended Solution:


- Please sightly loosen all screws and adjust the bards. Because the diameter of the holes on the pipes 23 mm lager than that of bots, the position of the boards can be adjusted.

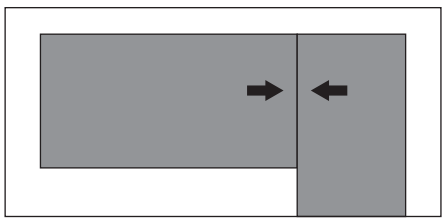

- If it is still doesn't work after adjustment, please contact us for more solutions.


1


Ux8	Vx8	Wx8	Xx1
Ø8x70mm	30x16x8mm	8mm	12mm

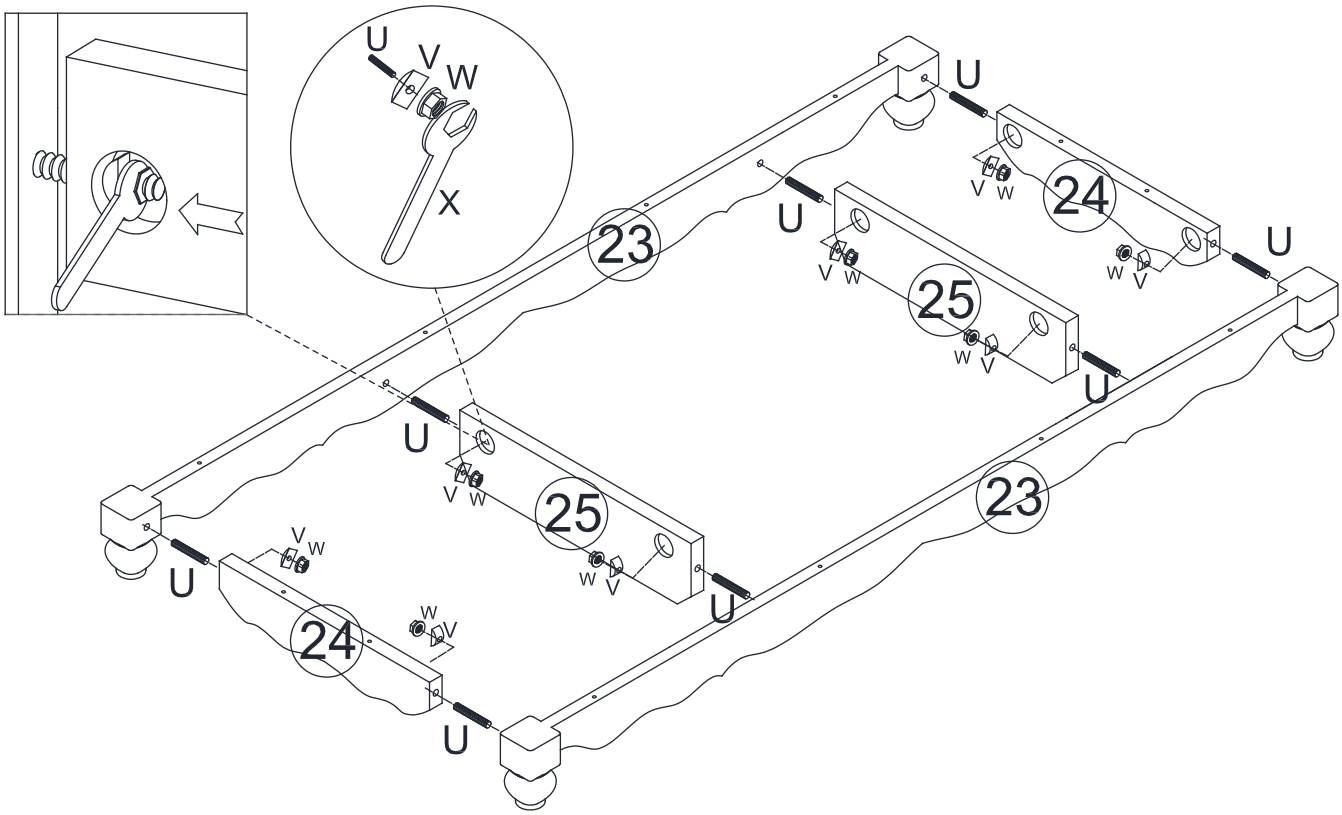

2

AAx4
Ø10x40mm



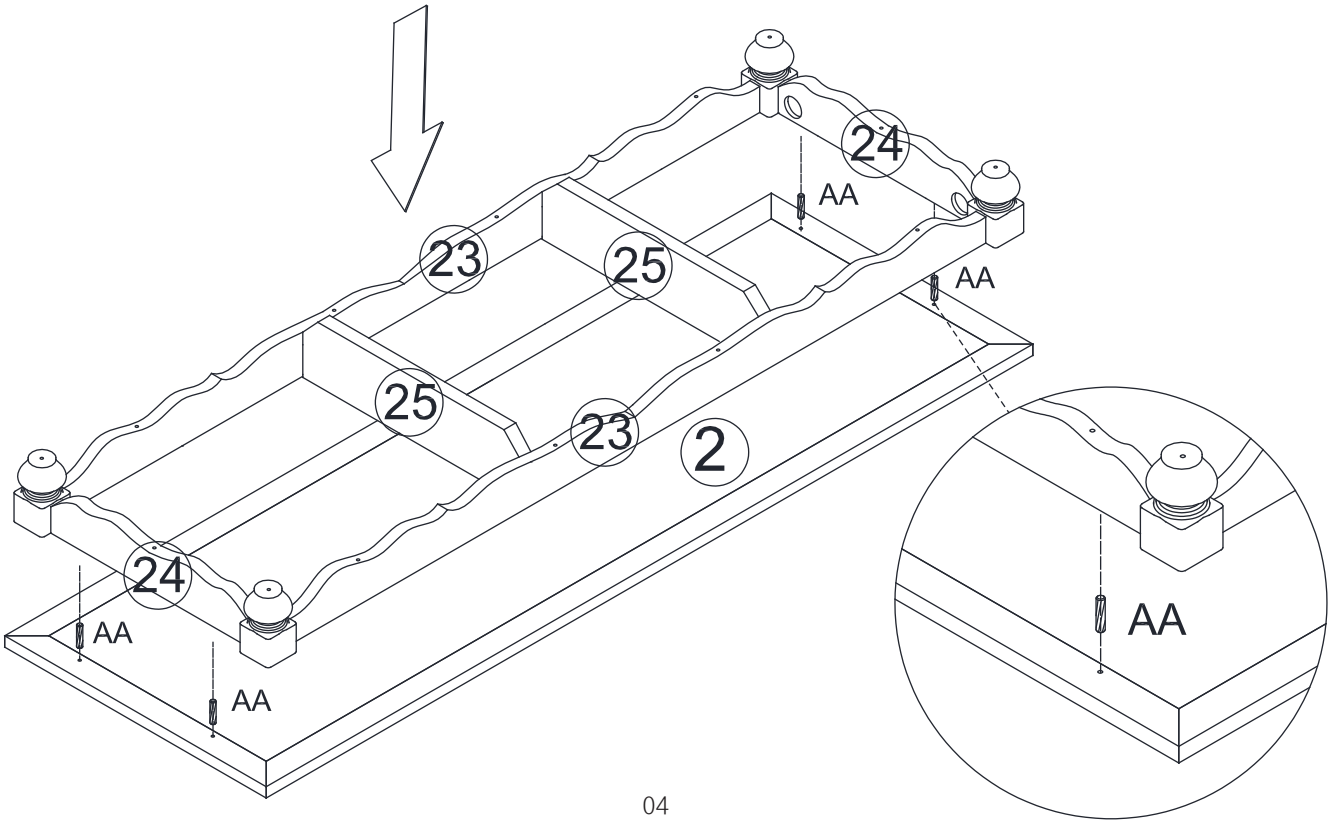



3

Zx10



Ø4x35mm




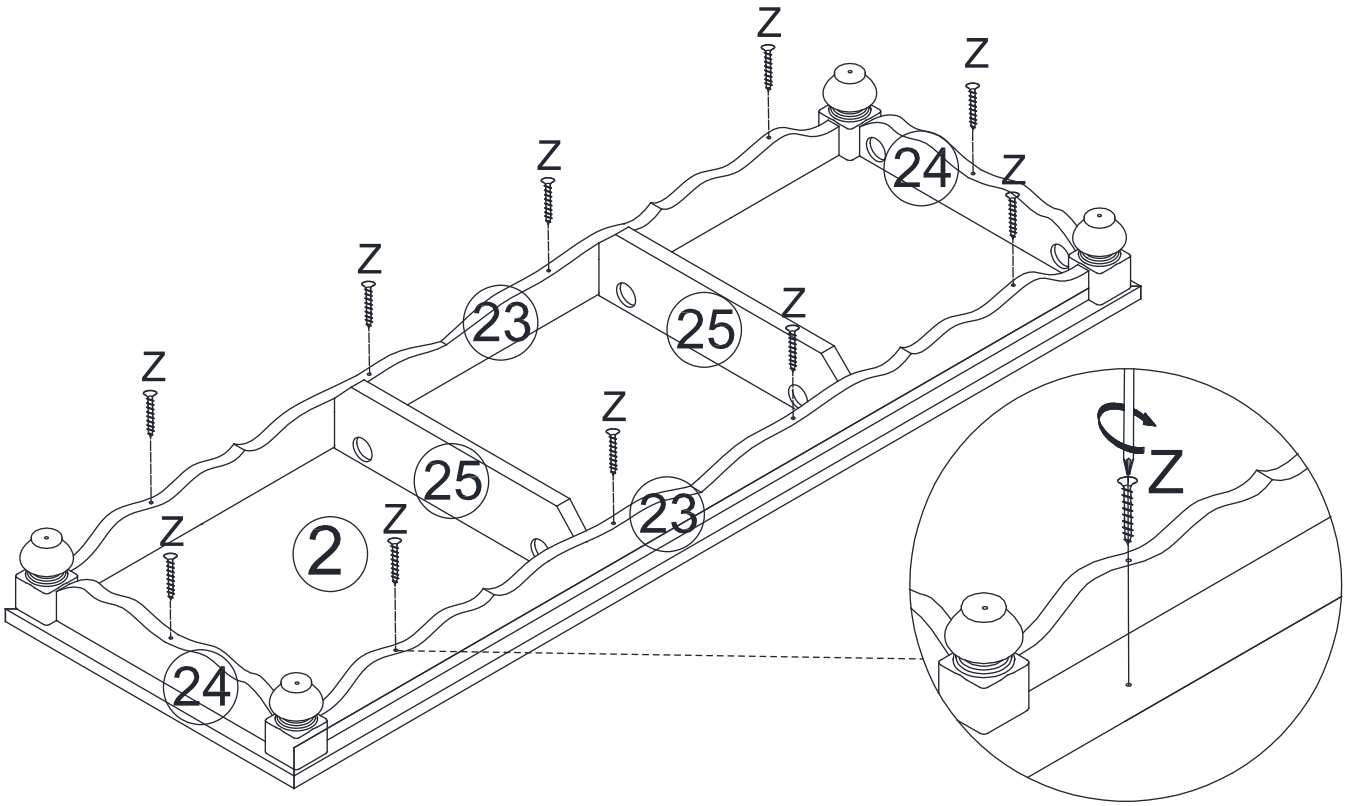

4

Yx8

38mm

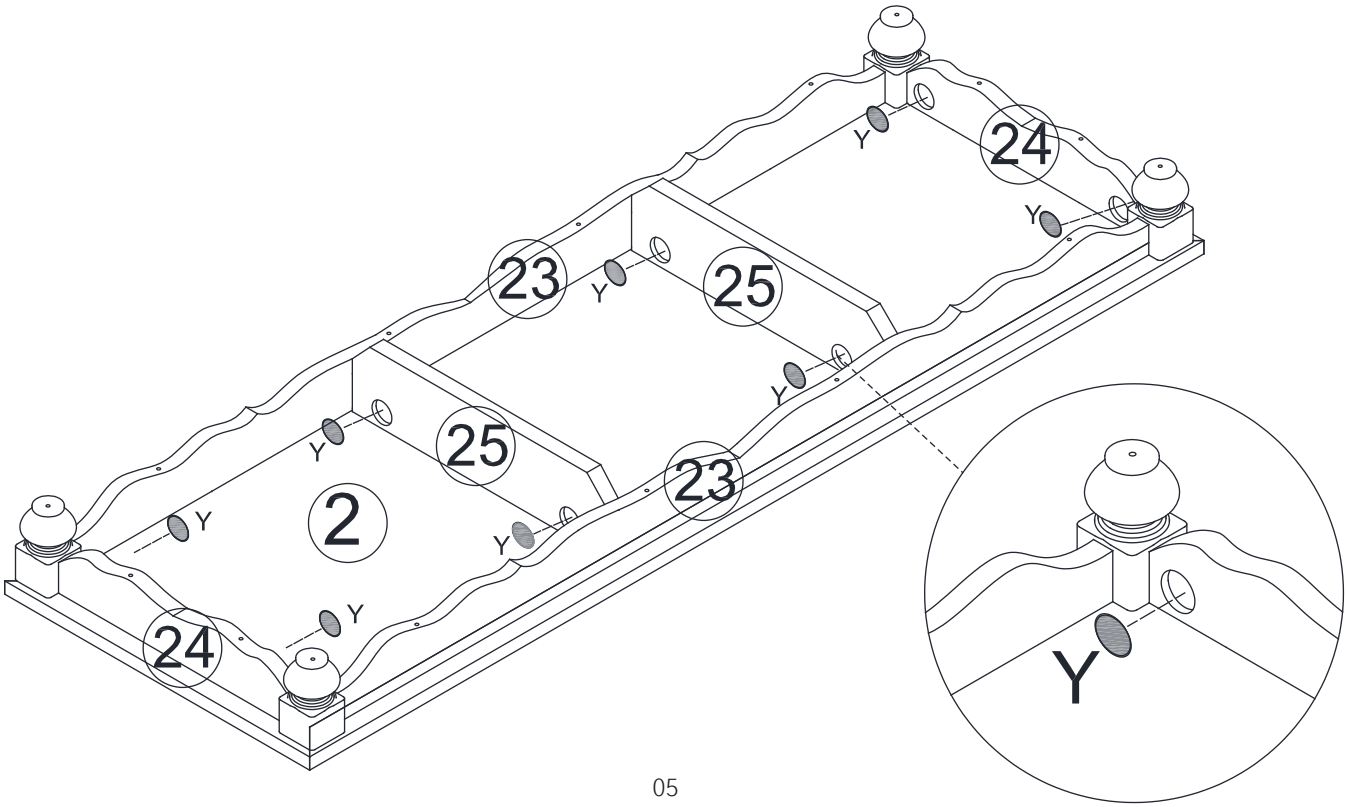



5

Ax12




Ø6x39mm





6

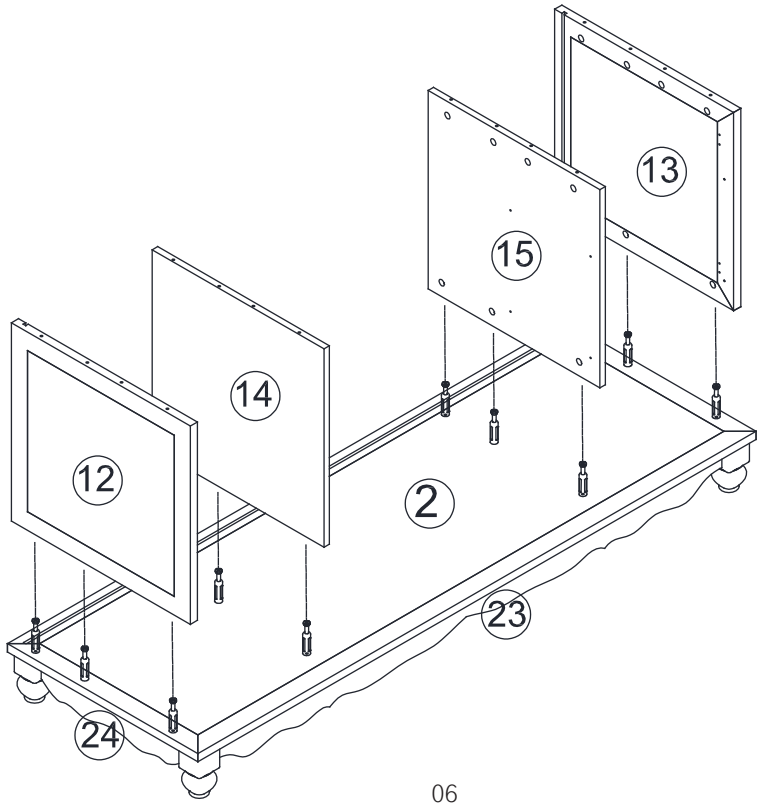



7

Bx12



Ø15x10mm







8


Ax16



Ø6x39mm





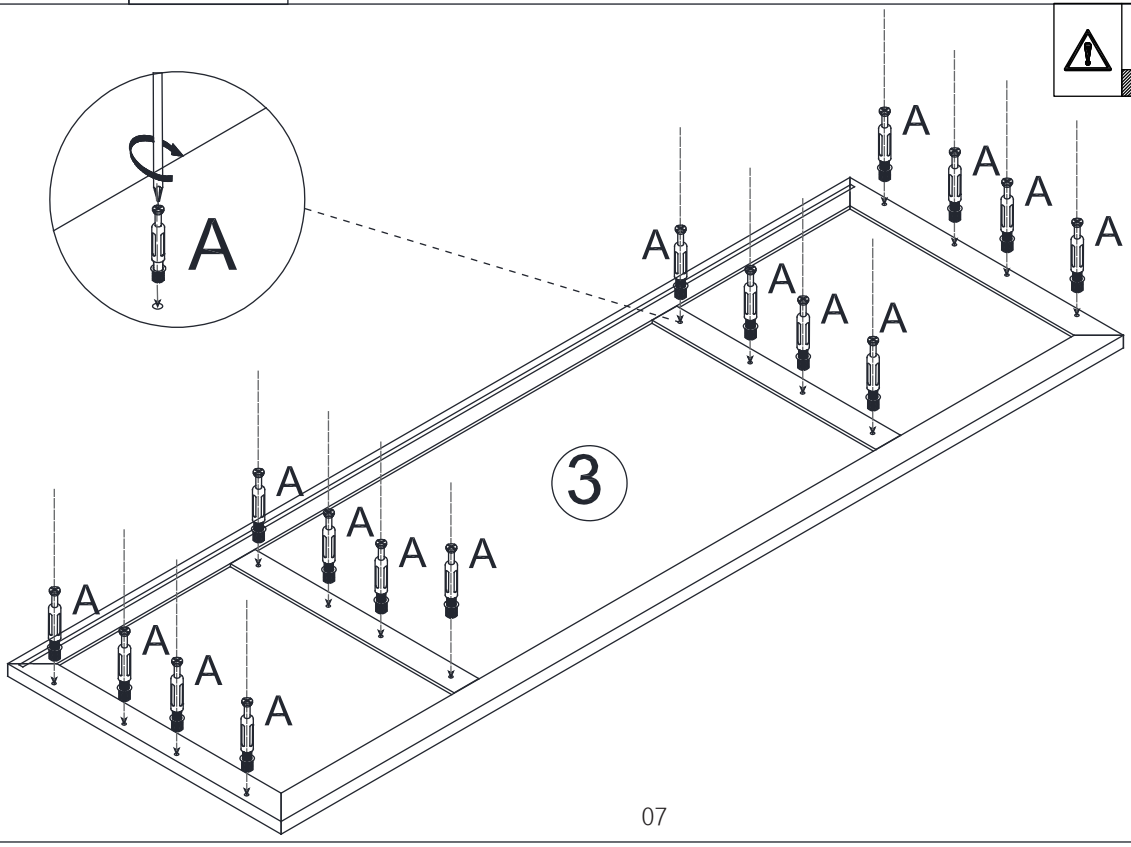



9

Bx16



Ø15x10mm







10


Ax16



Ø6x39mm







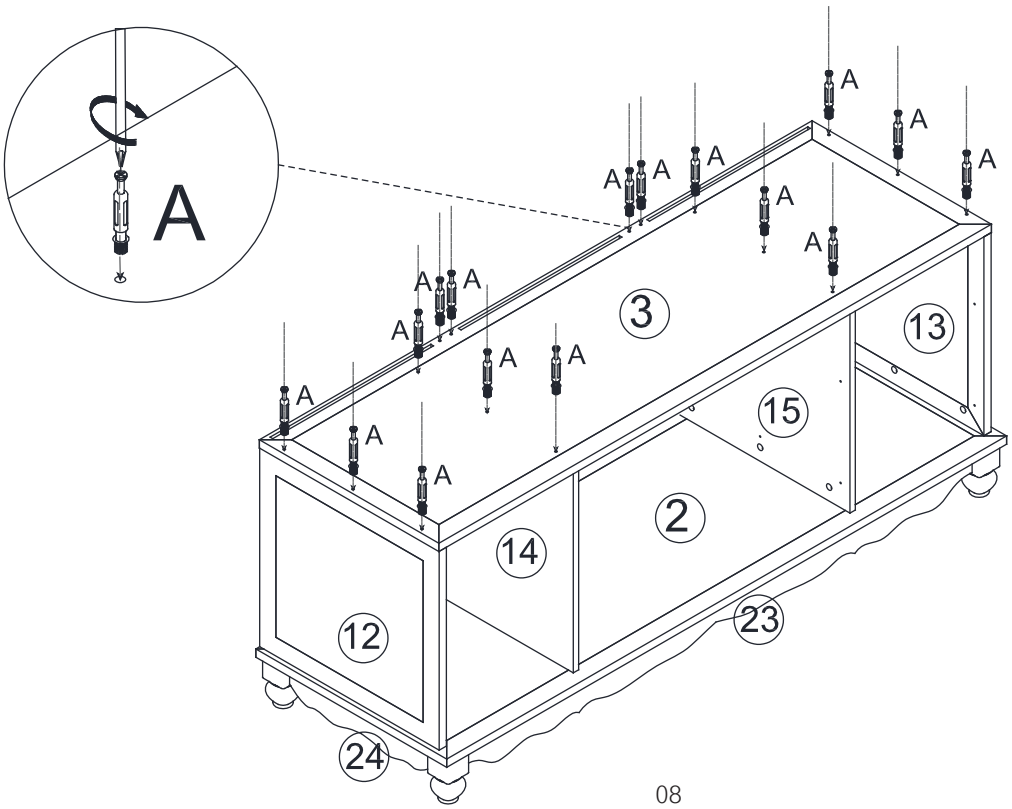


11

Ax6	Fx2	Px1
Ø6x39mm	Ø3.5x16mm	Ø55x20mm





12

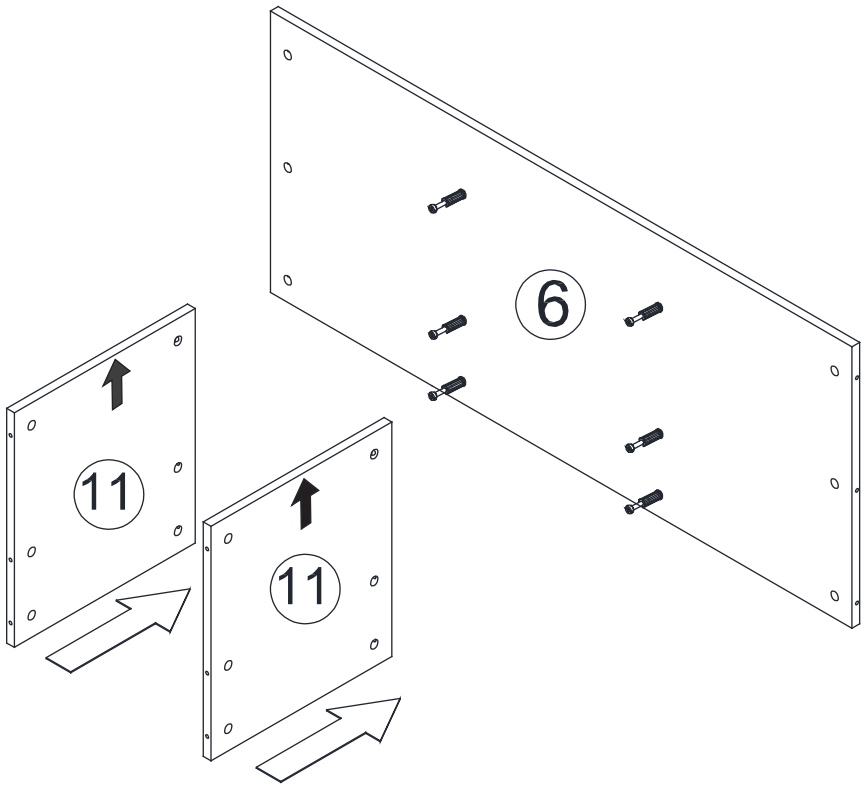



13


Bx6



Ø15x10mm





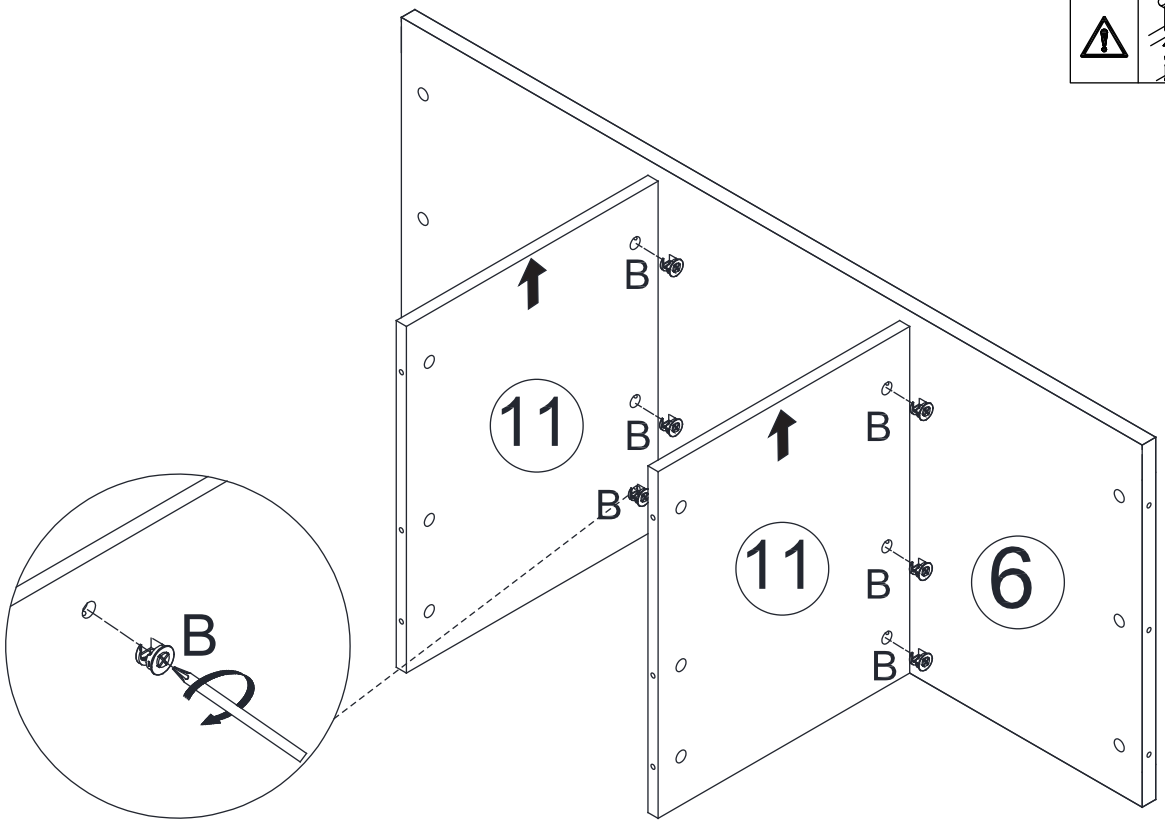



14


Ax6



Ø6x39mm





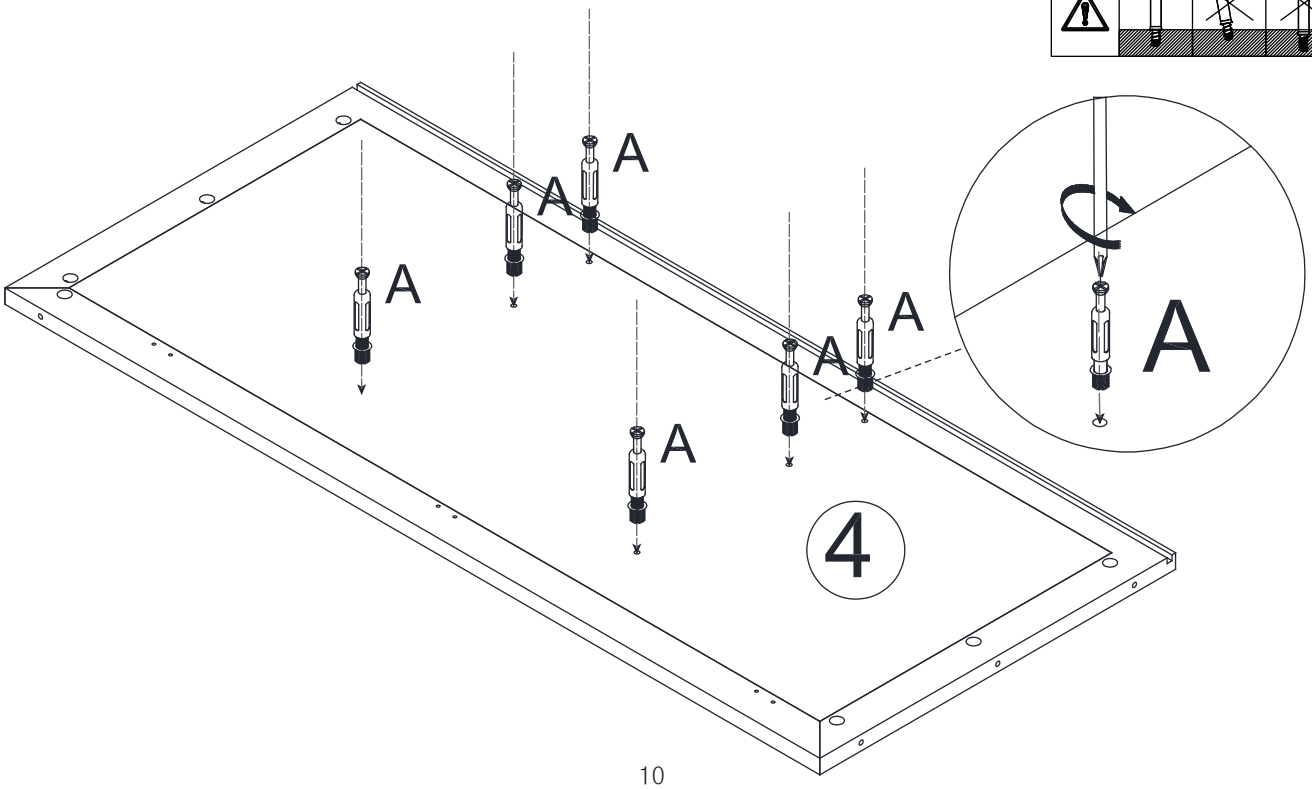



15


Bx6




Ø15x10mm





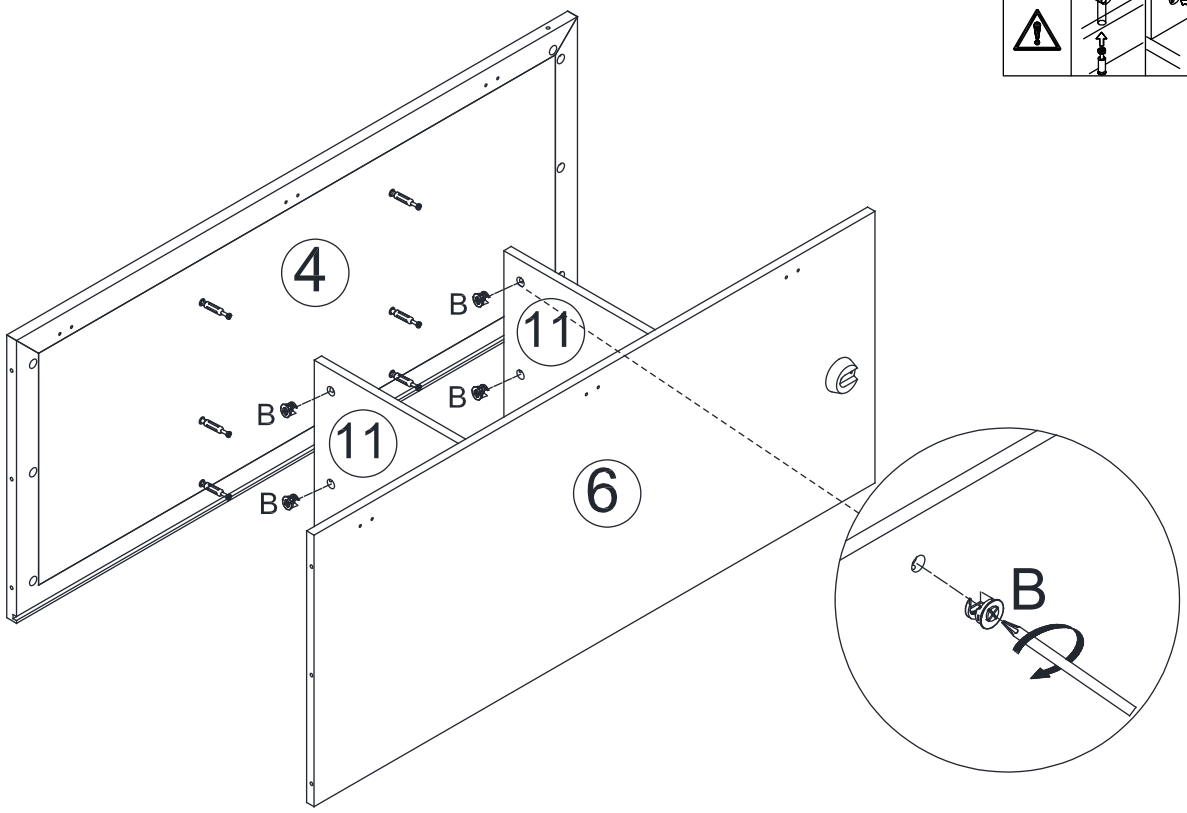

16

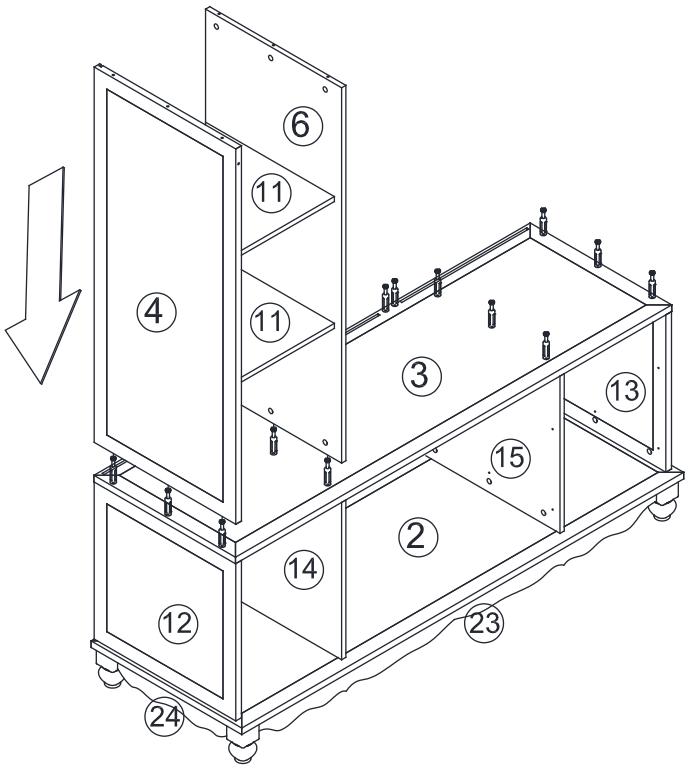



17

Bx6



Ø15x10mm





18

Fx6





Ø3.5x16mm

Lx3



Ø55x20mm



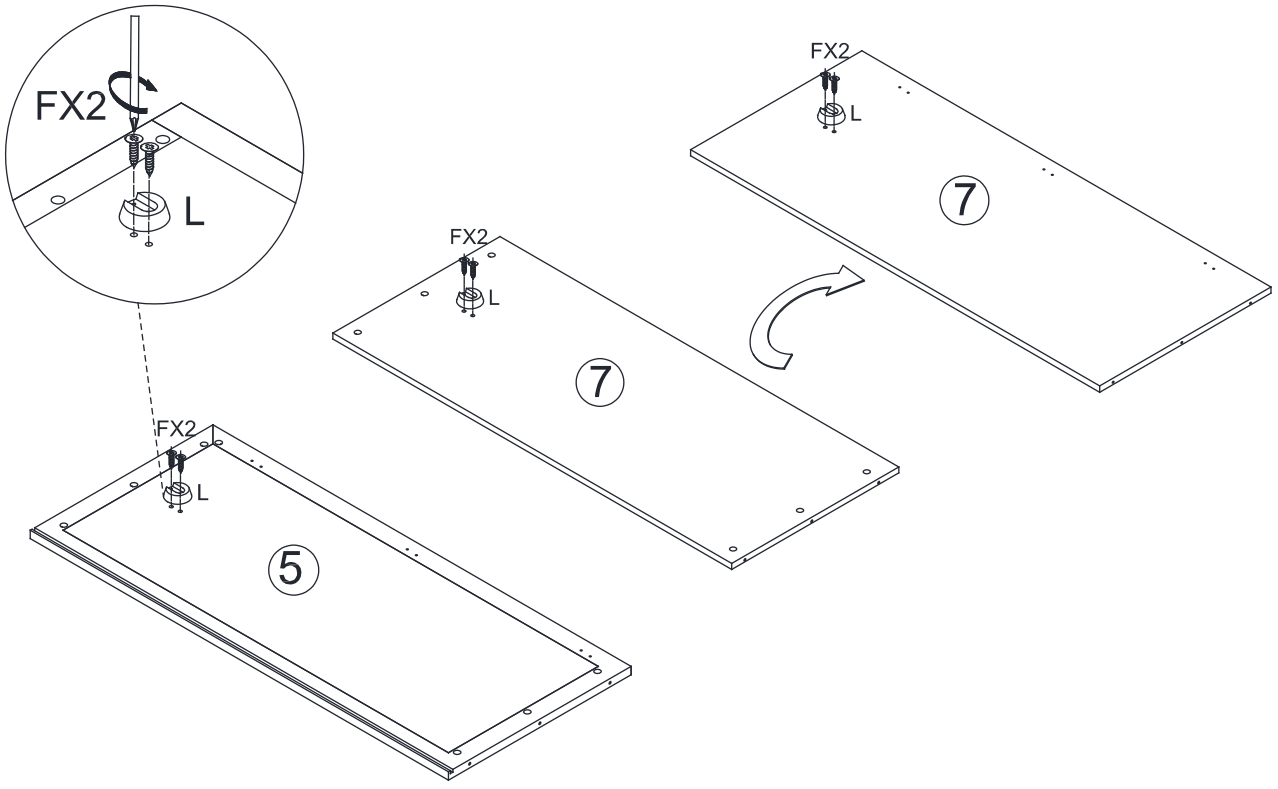



19


Bx6



Ø15x10mm





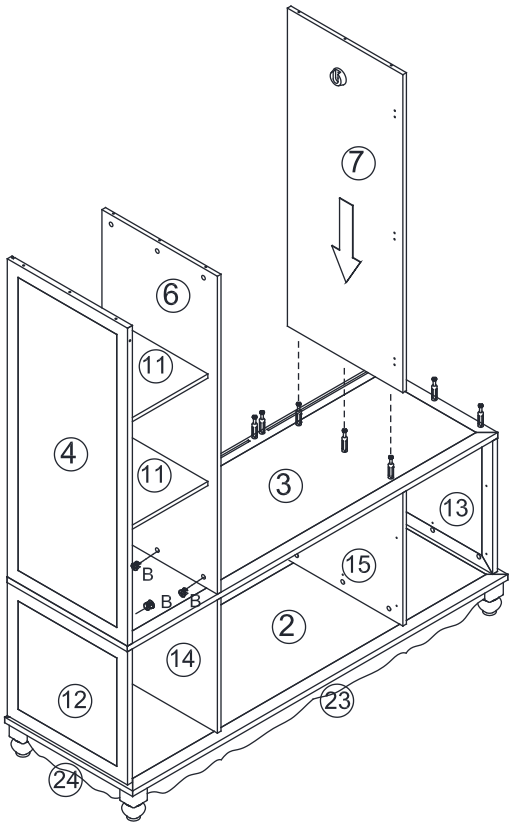


20

Bx3



Ø15x10mm

Ensure all panel grooves are perfectly aligned beforeassembly.

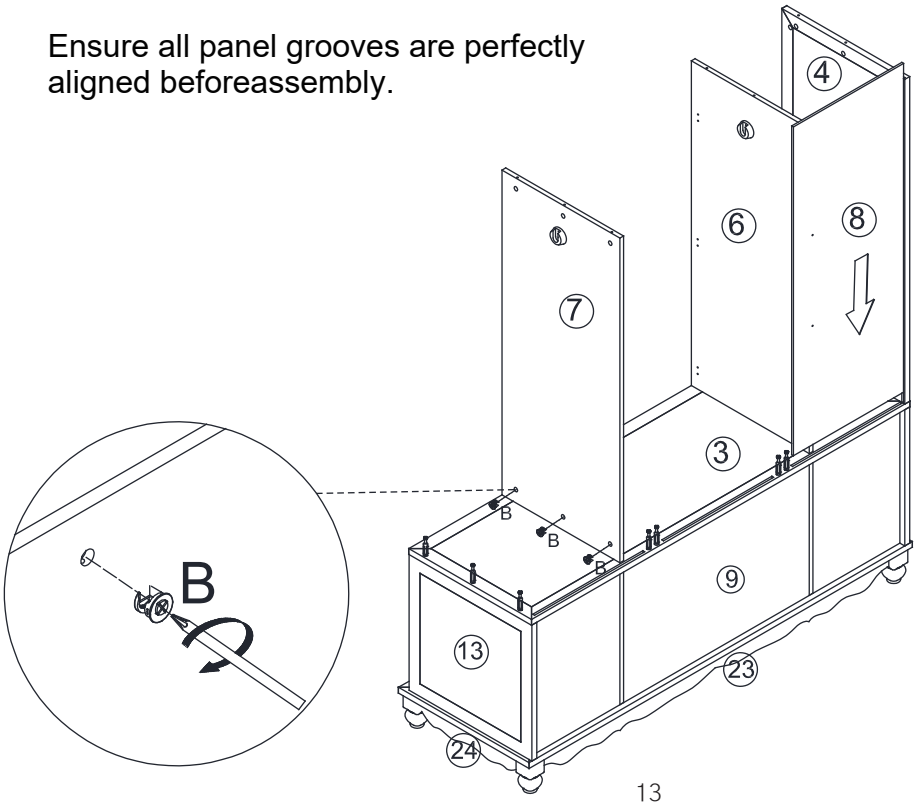



21


Bx2




Ø15x10mm






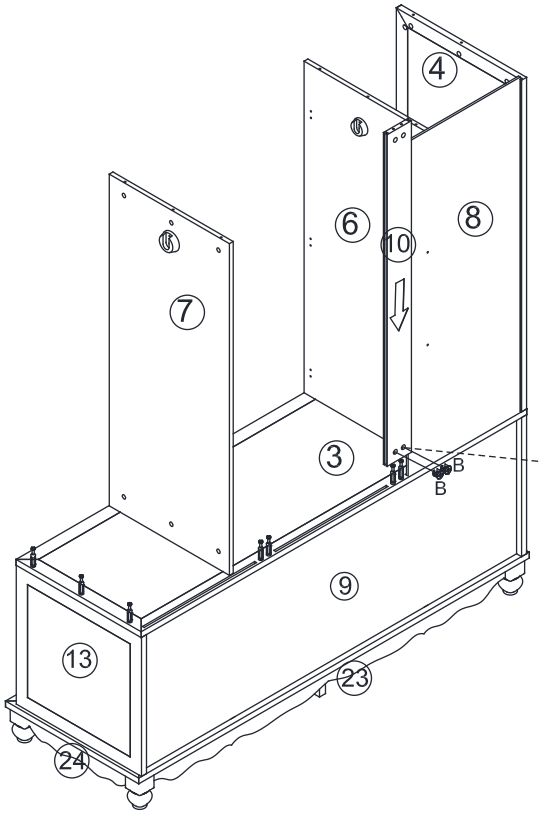

Ensure all panel grooves are perfectly aligned beforeassembly.

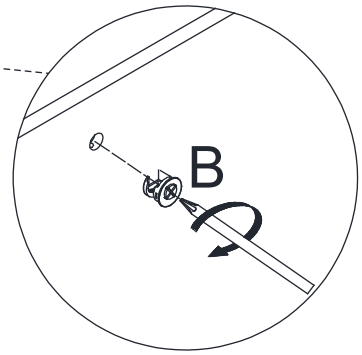

22

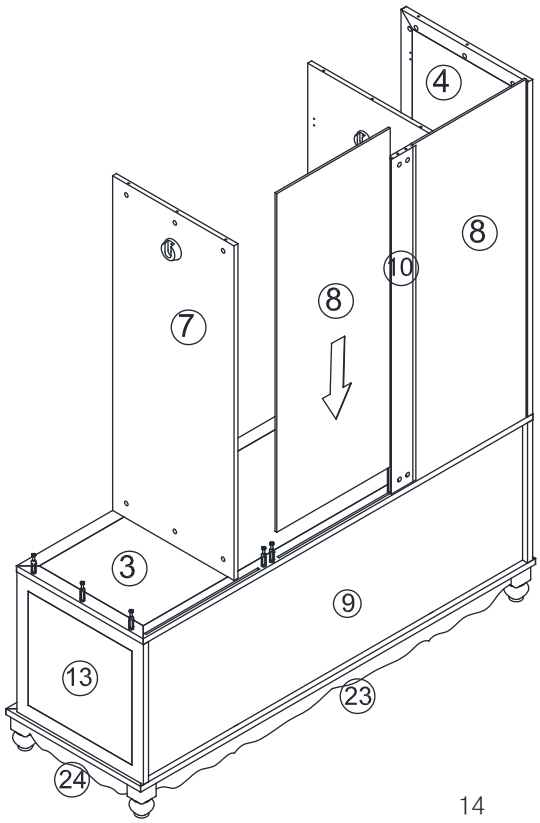


Ensure all panel grooves are perfectly aligned beforeassembly.


23

Bx2



Ø15x10mm






Ensure all panel grooves are perfectly aligned beforeassembly.

24

Ensure all panel grooves are perfectly aligned beforeassembly.

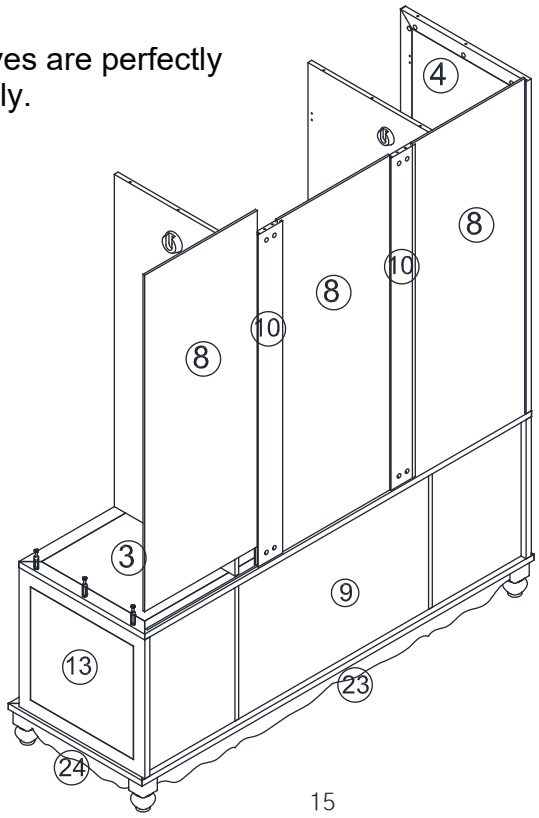



25

Bx3




Ø15x10mm





Ensure all panel grooves are perfectly aligned beforeassembly.

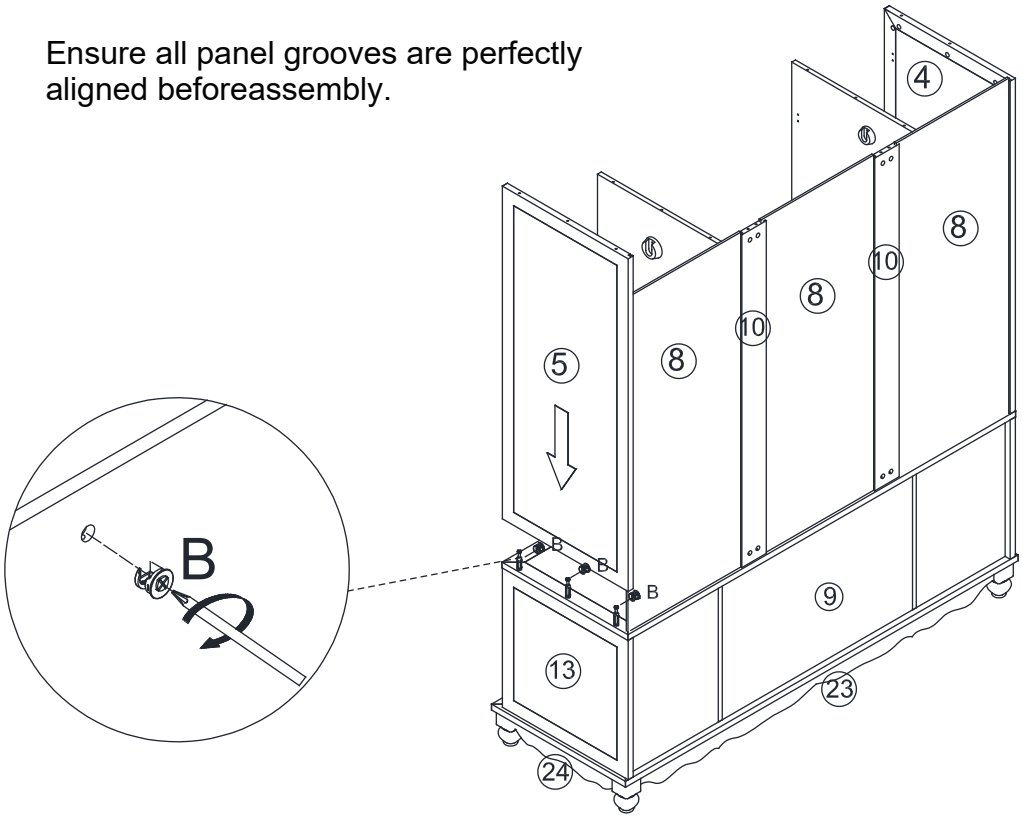



26

Ax16



Ø6x39mm







27

Bx16



Ø15x10mm






When installing Panel 1, gently tap it to ensure proper alignment and smooth installation.


28

Ex4




Ø4x30mm




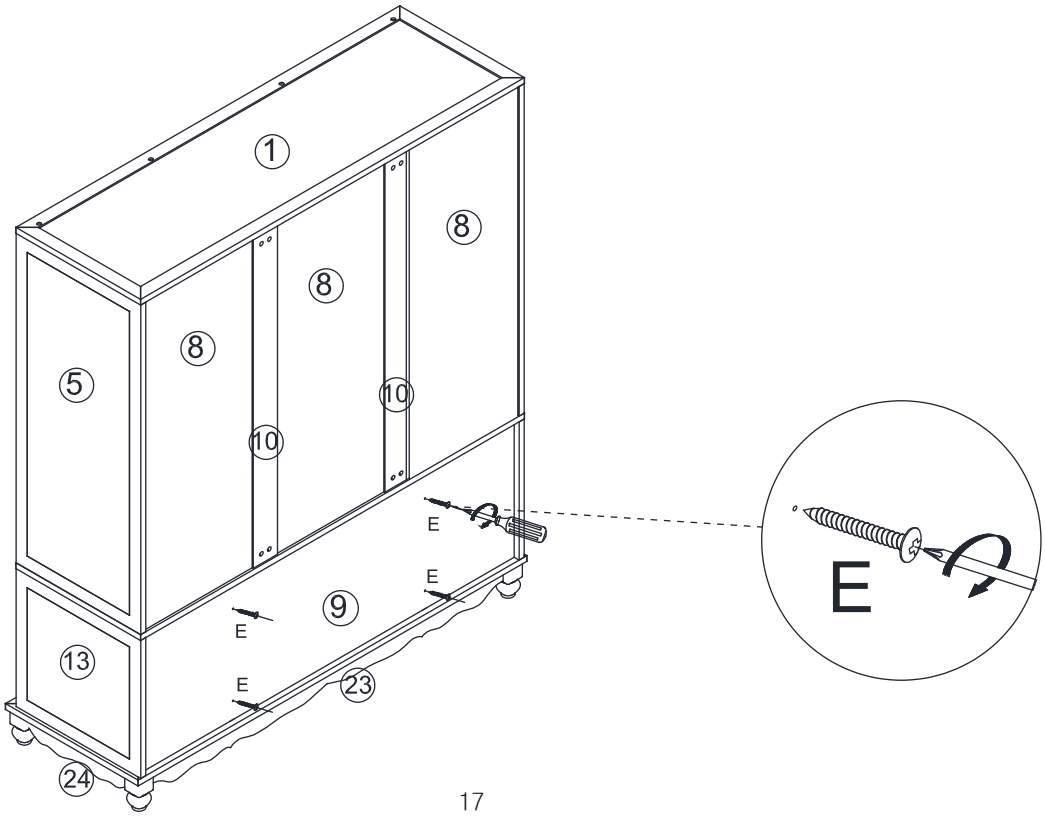


29

Ax6	Bx6
	
Ø6x39mm	Ø15x10mm




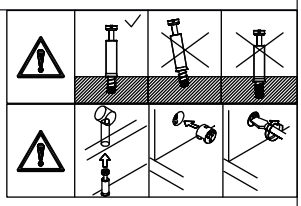


30

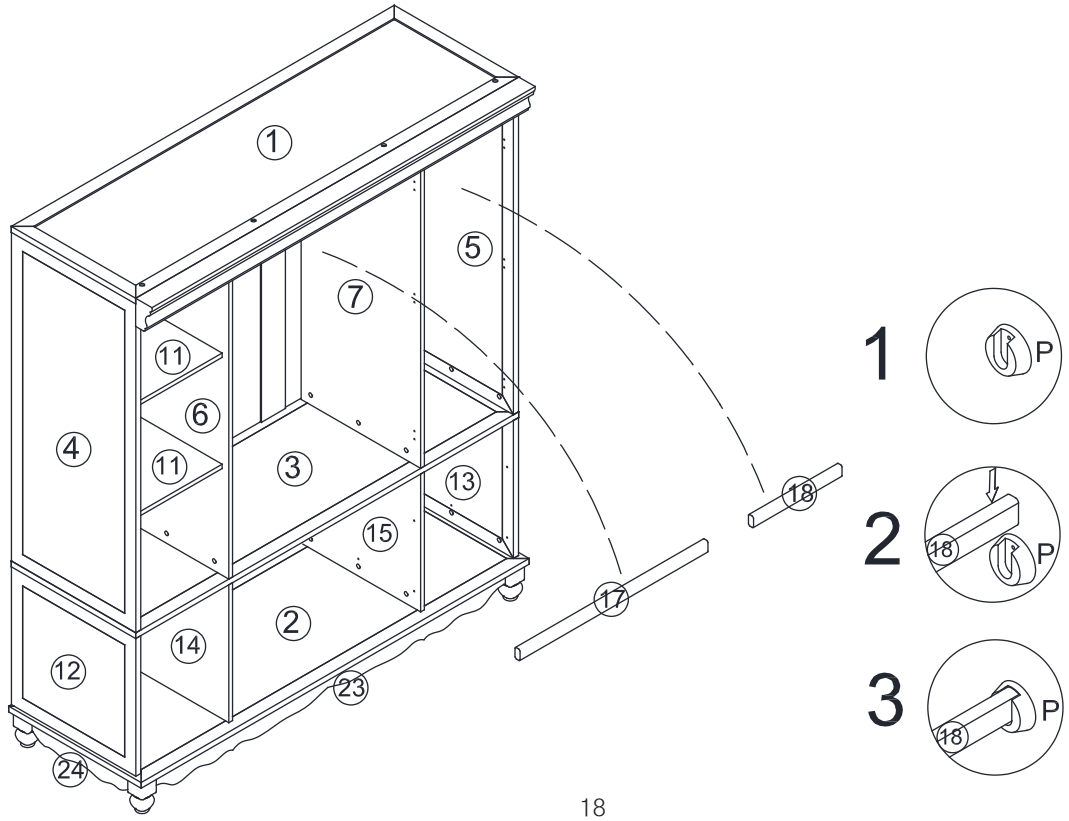


drawer slide Instruction

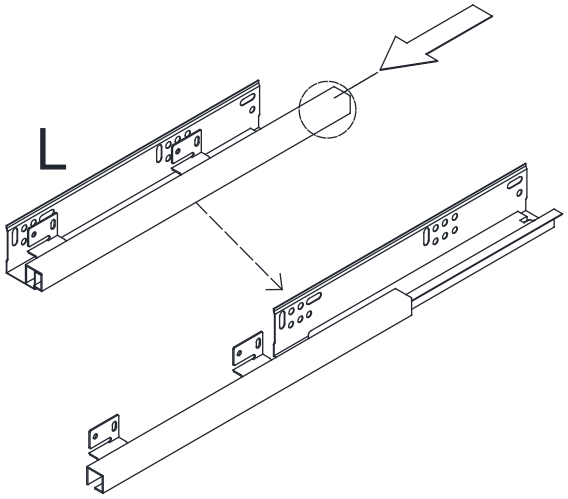


① Push the slide rail at this end outwards.

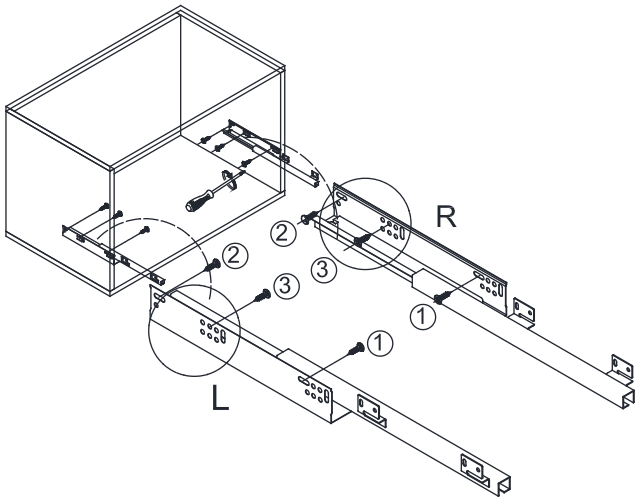

② Fix the slide rail at this end onto the cabinet body with screws.

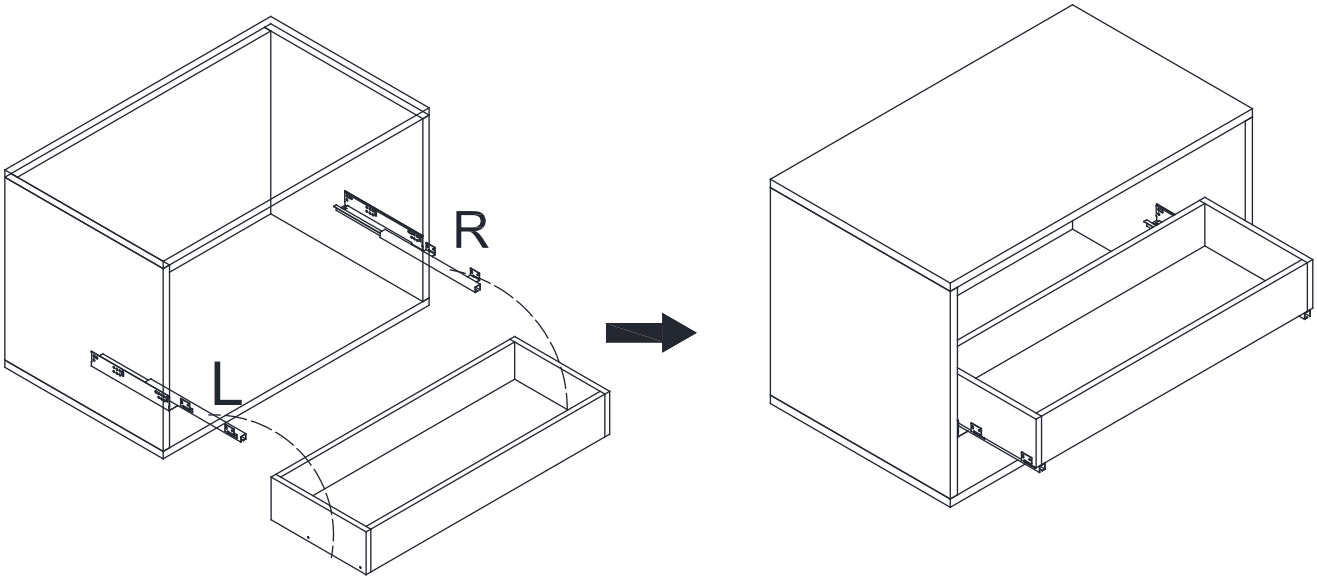


③ Place the drawer on the slide.

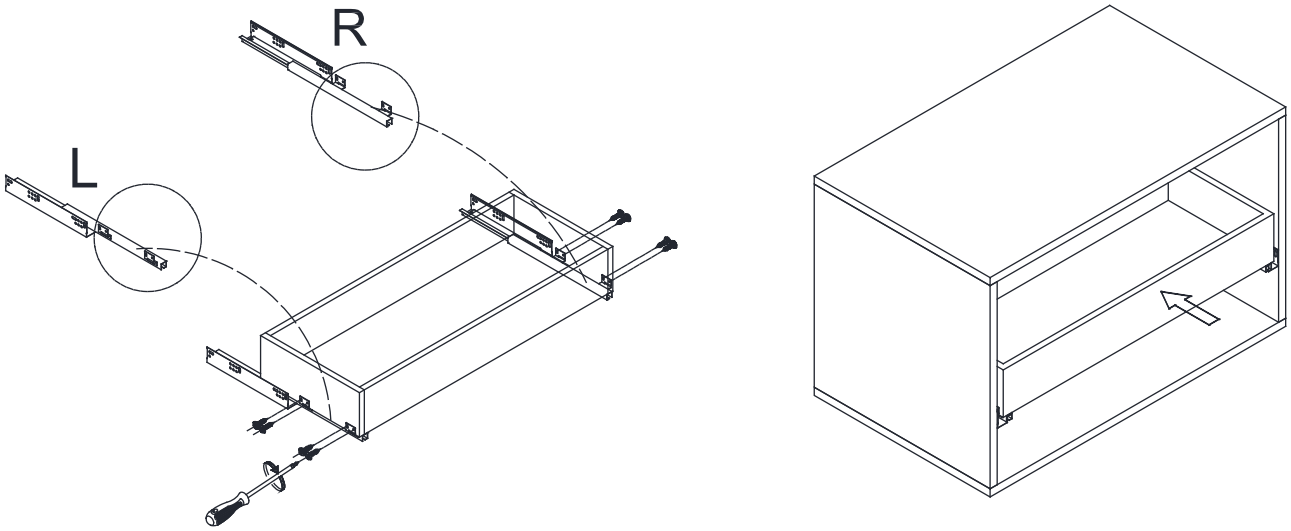


④ Secure this end of the slide track with screws and attach the drawer.


⑤ Once installed, the drawer can be pulled out and pushed in freely.


31	Hx6	Lx2
	Ø3.5x14mm	350mm



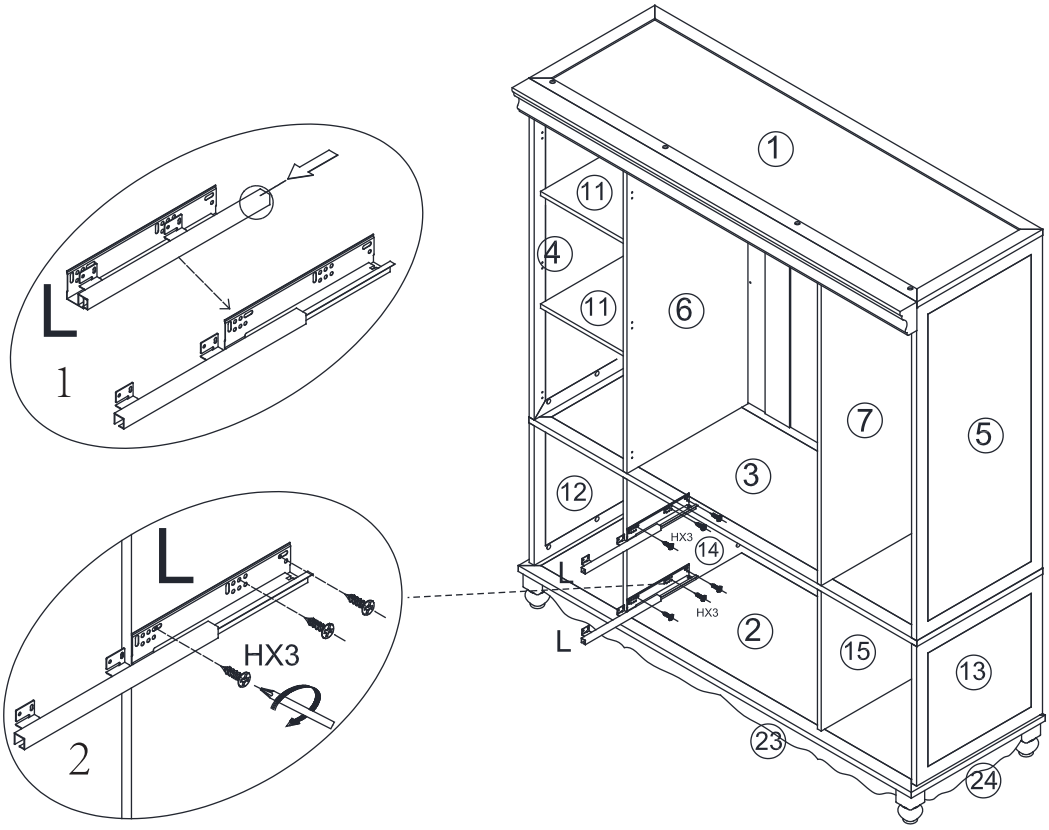

32	Hx6	Rx2
	Ø3.5x14mm	350mm




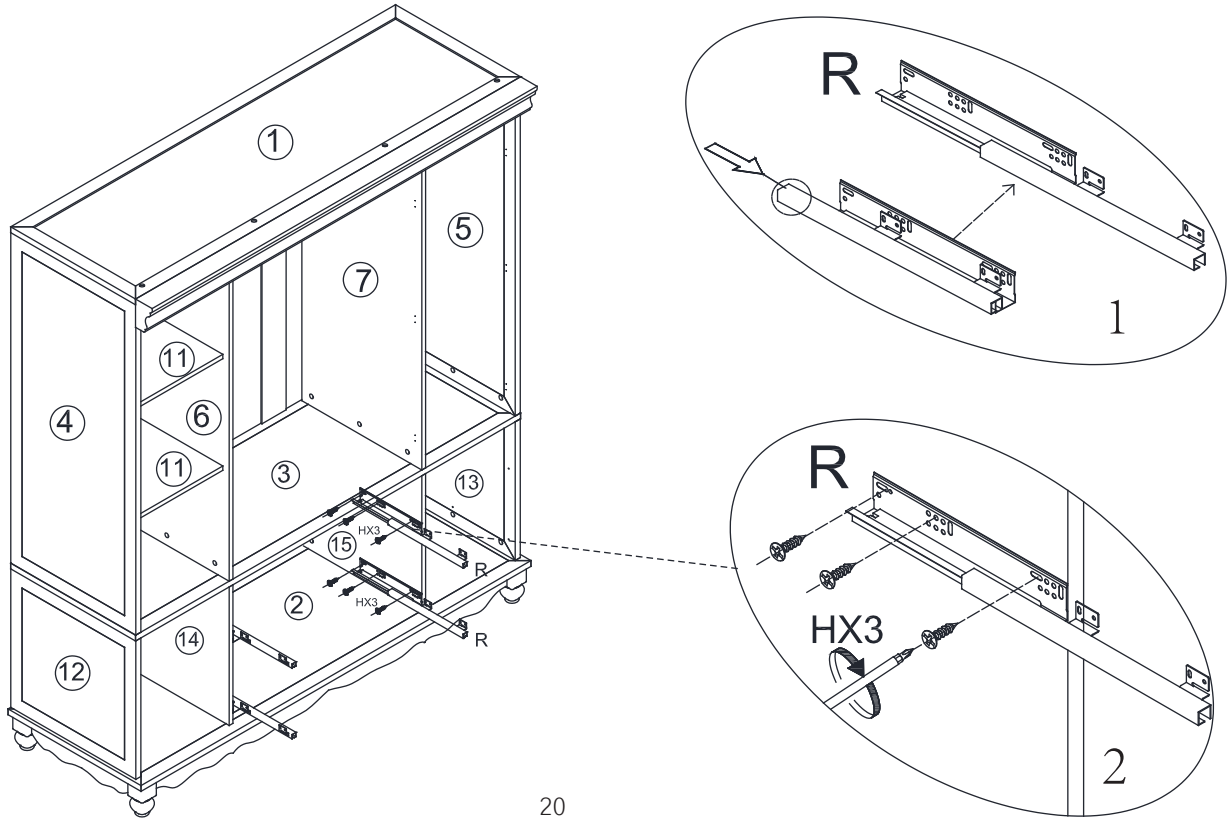


33

Ex16


Ø4x30mm




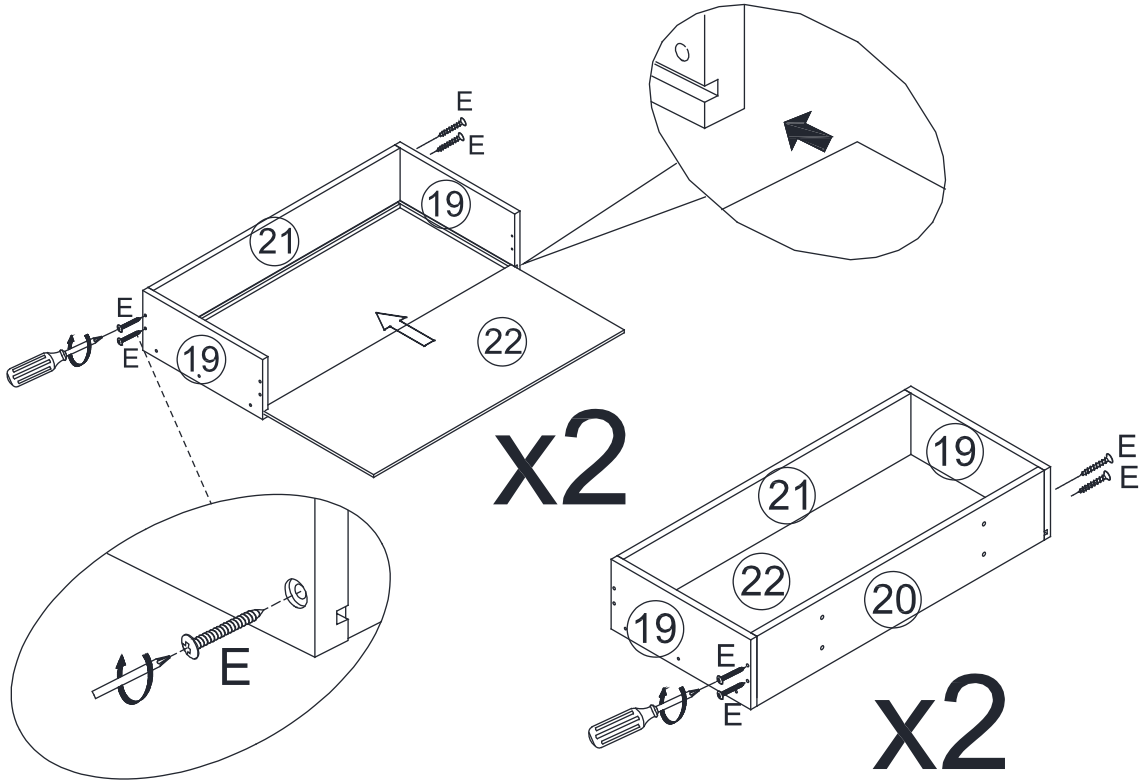

34

Cx8	Dx1	Ix4	Jx4
			
Ø6x20mm	M4	Ø3.5x18mm	Ø30x25mm




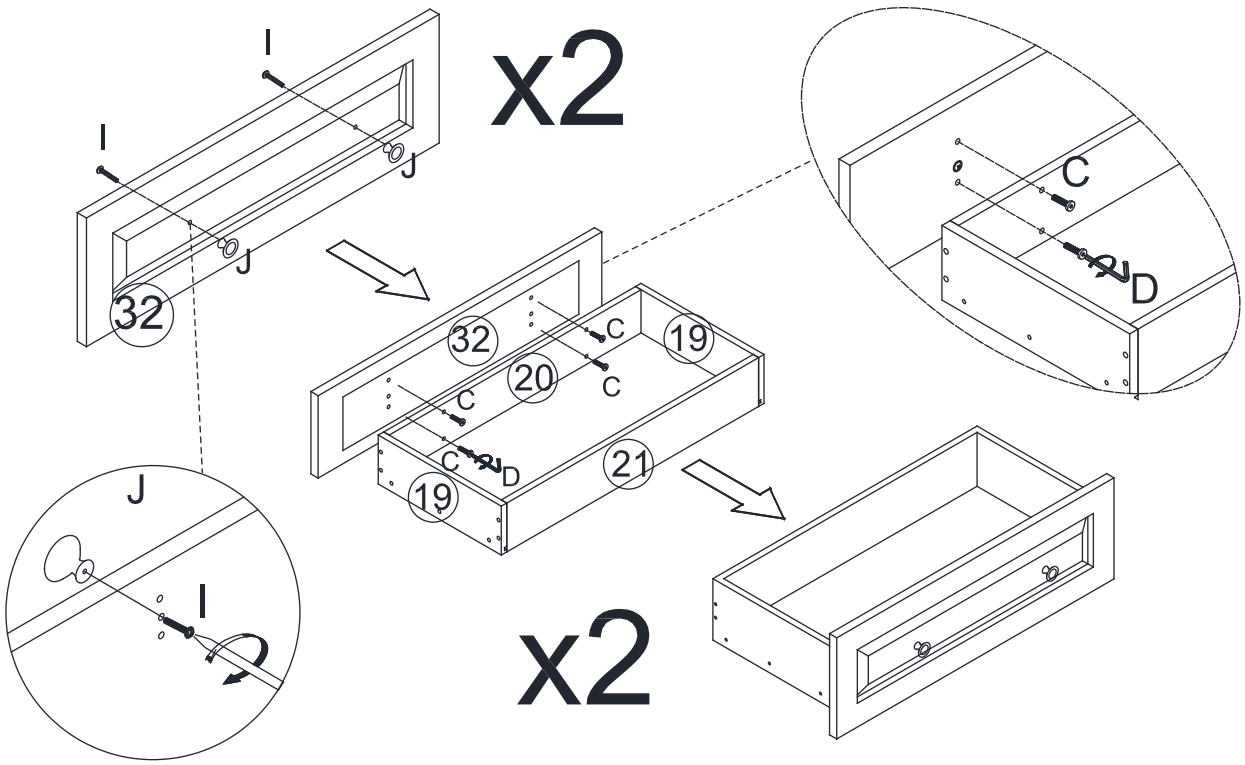


35

Hx16

Ø3.5x14mm



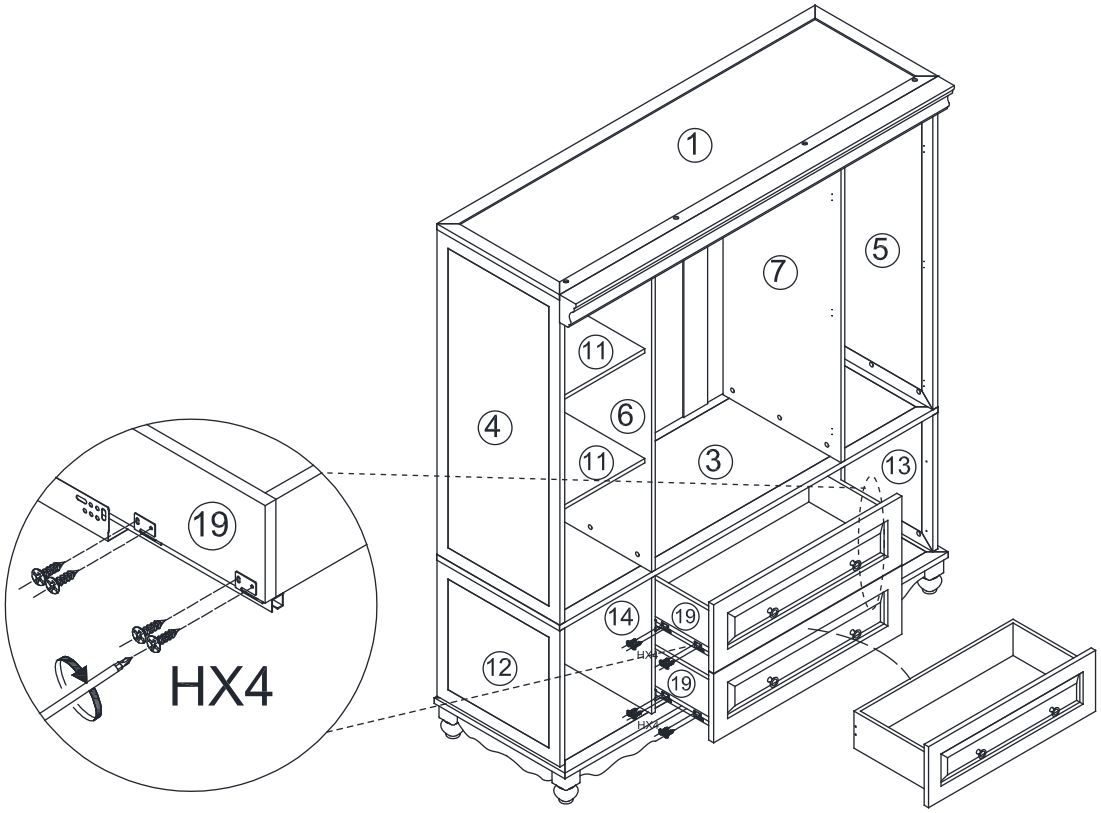


36


Hx8

Ø3.5x14mm


Sx4

40mm




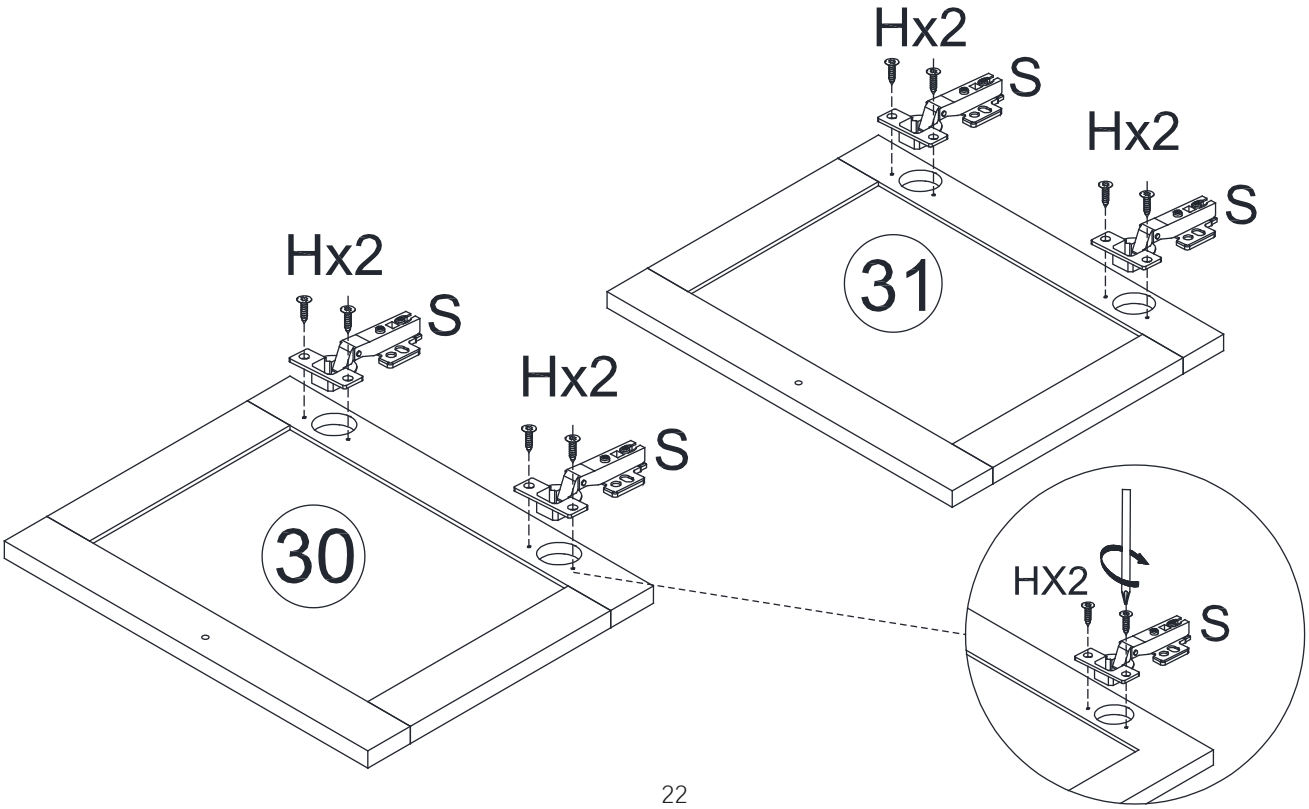


37	Hx12	Sx6	
	Ø3.5x14mm	40mm	

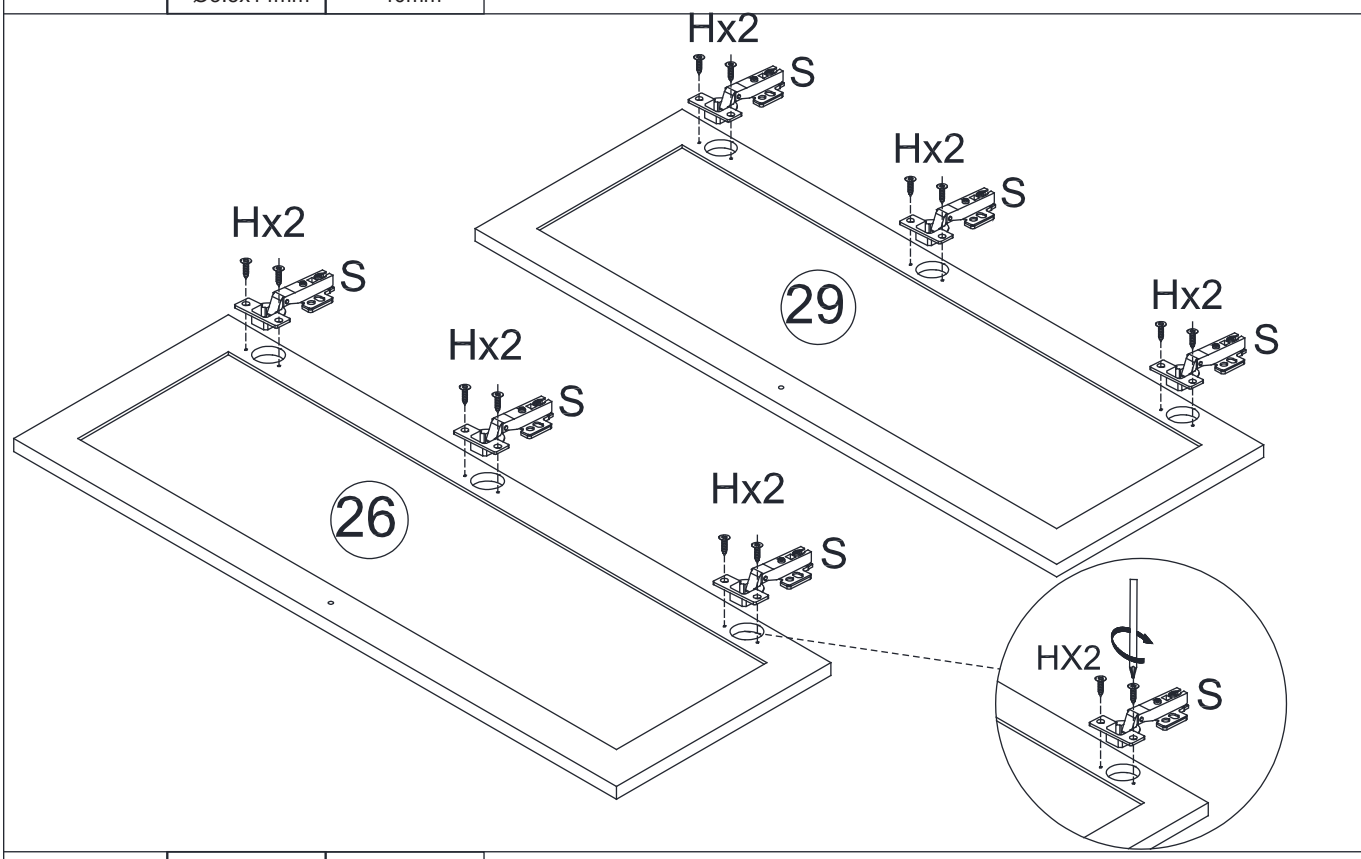


38	Hx12	Tx6	
	Ø3.5x14mm	40mm	

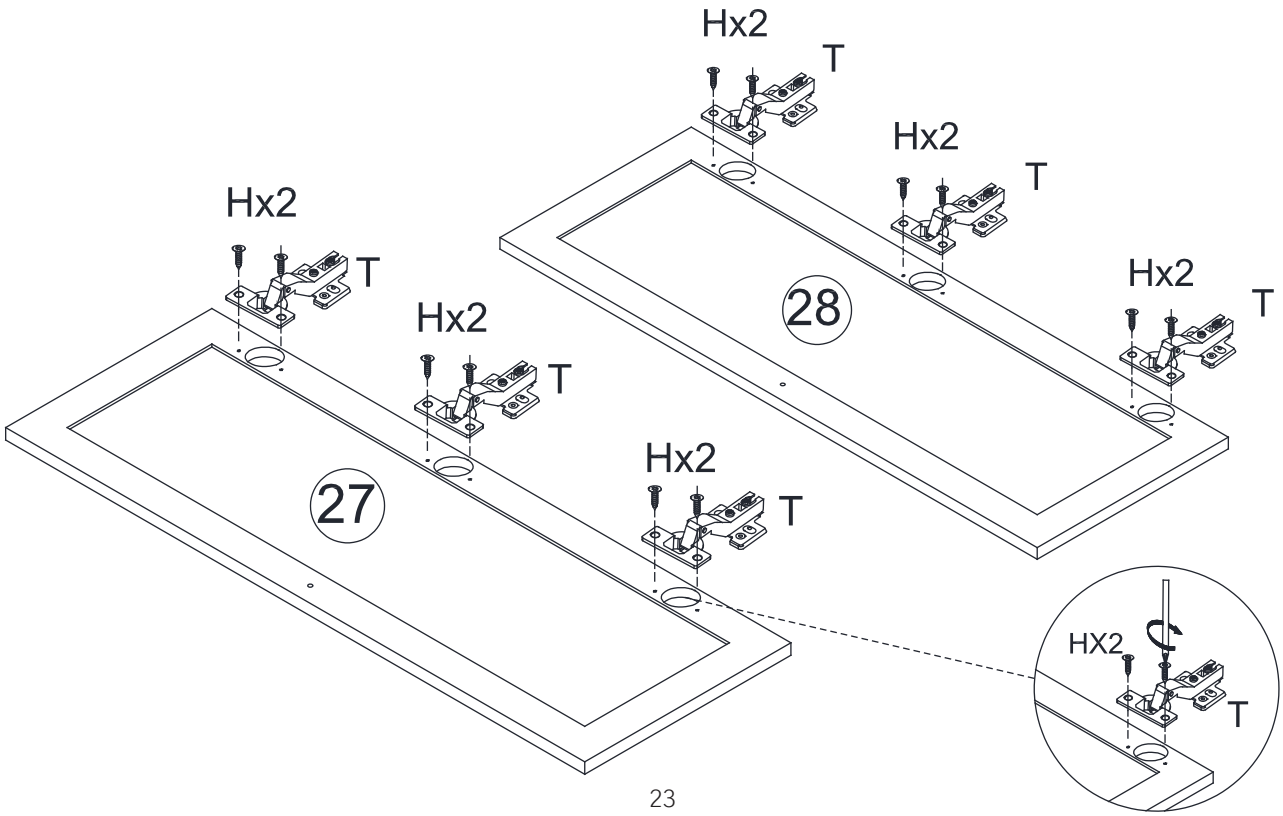



39	Hx32	Jx3	Kx3	Qx3	
	Ø3.5x14mm	Ø30x25mm	152x23mm	Ø3.5x22mm	



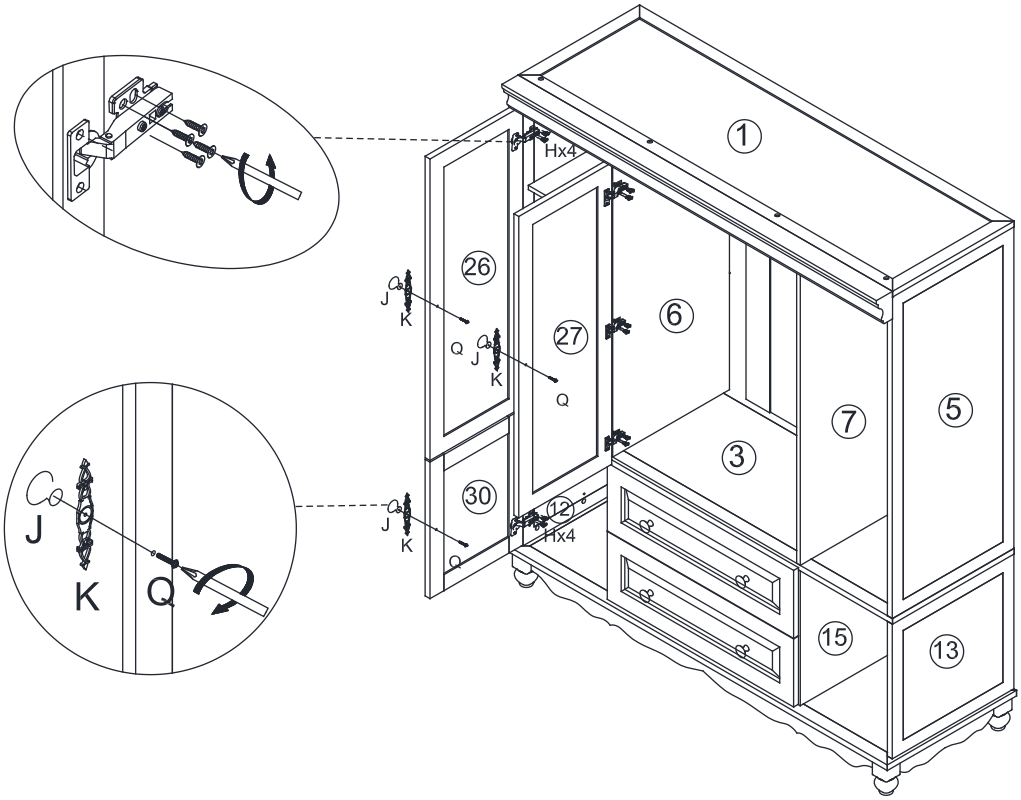

40	Hx32	Jx3	Kx3	Qx3	
	Ø3.5x14mm	Ø30x25mm	152x23mm	Ø3.5x22mm	




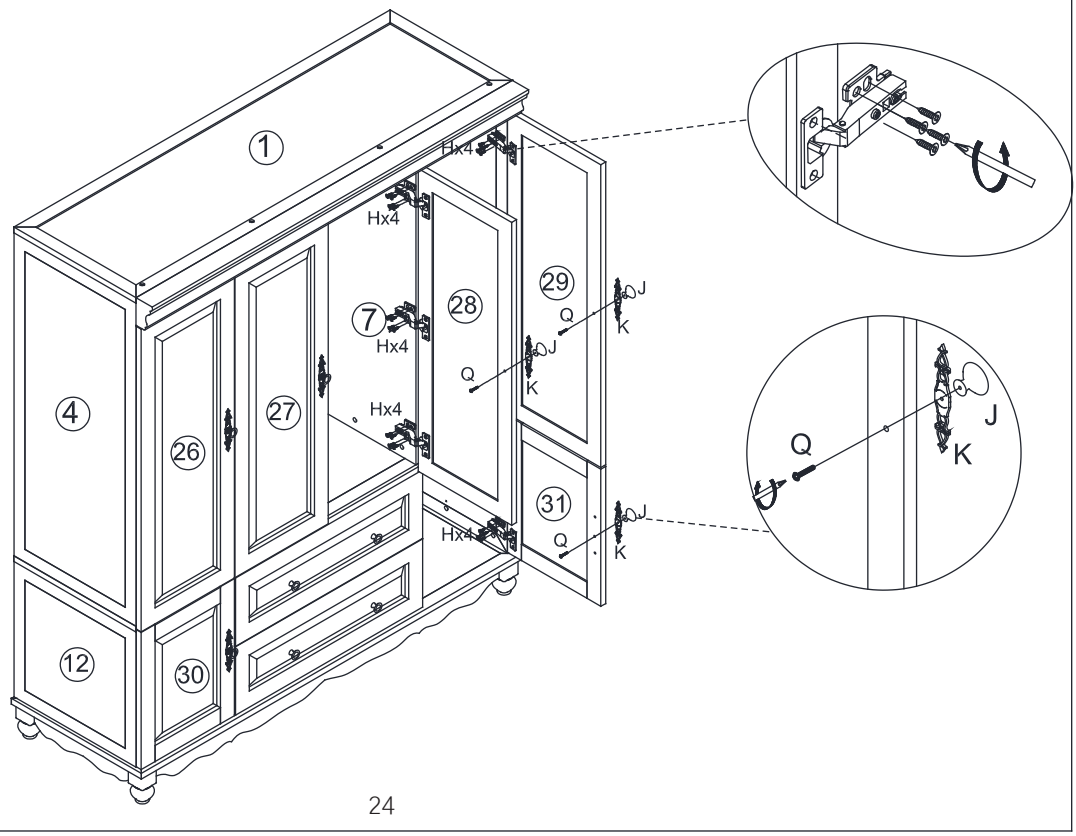


41


Gx2





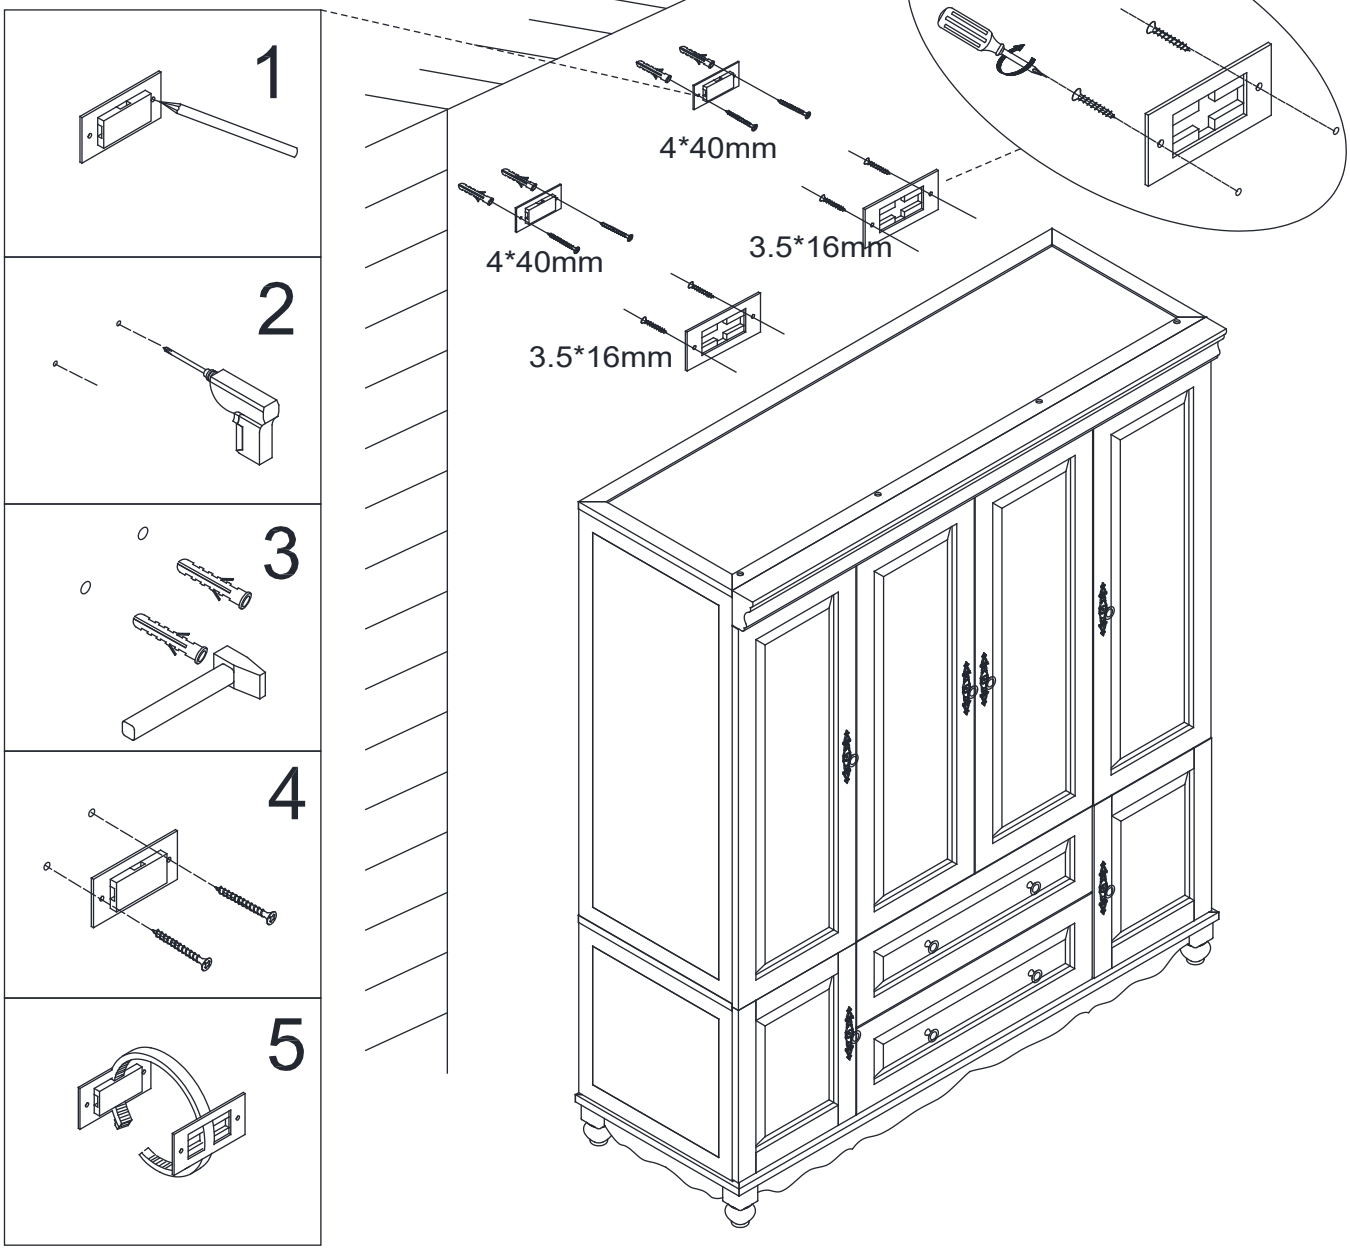


Door Panel Adjustment Instruction

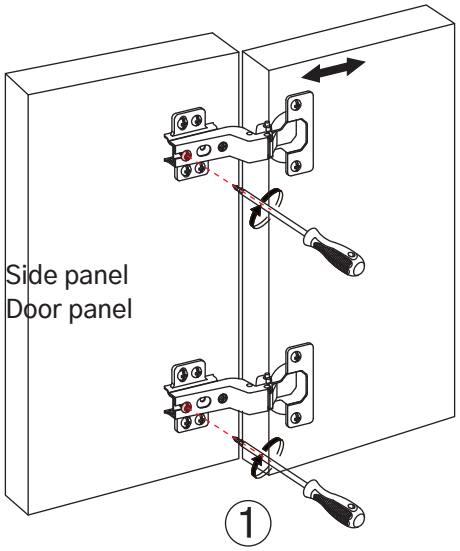

Front-to-Back Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved front-back.


Adjustment range: 4mm

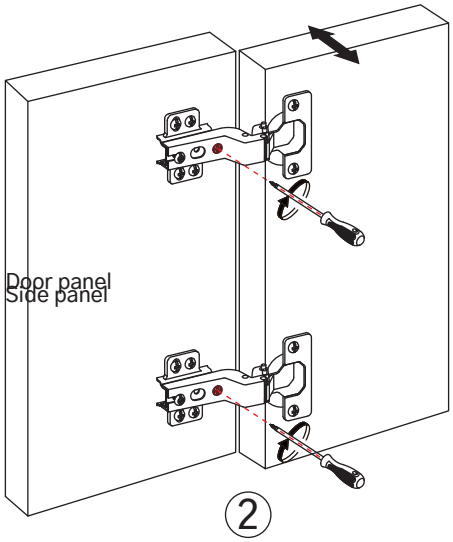

Left-Right Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved left-right.

Adjustment range: 3mm

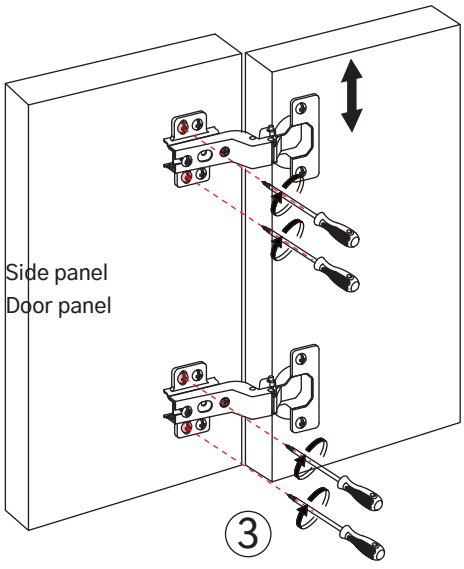


Up-Down Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved up-down.

Adjustment range: 4mm


Door Panel Adjustment Instruction

Common Door Panel Issues:

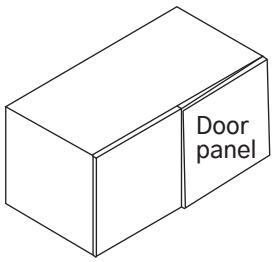



Door panel is not straight

Adjust the door hinges

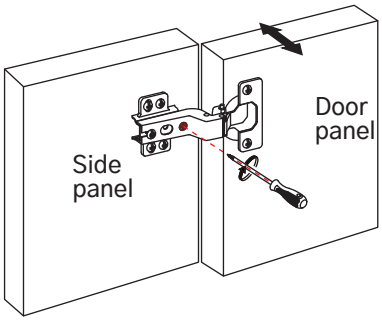


Finished

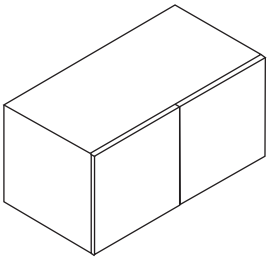

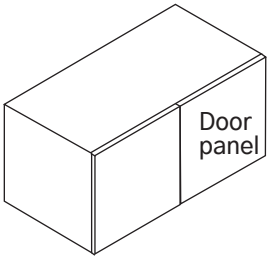



The gap between door panels is too large

Adjust the door hinges

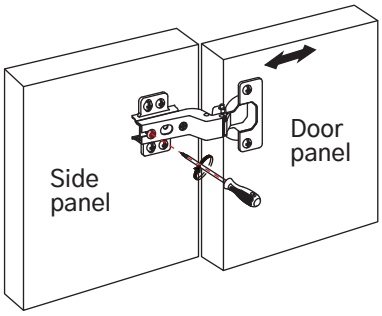


Finished

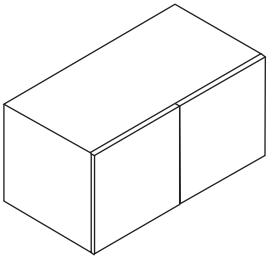

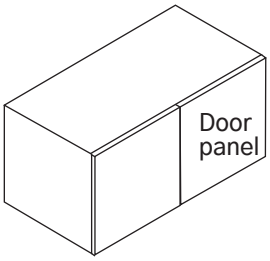



The door panels are not coplanar

Adjust the door hinges

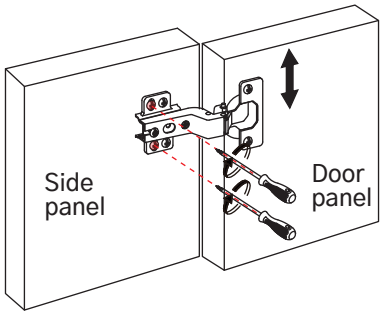

Finished

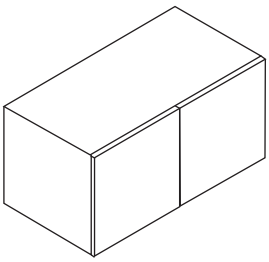

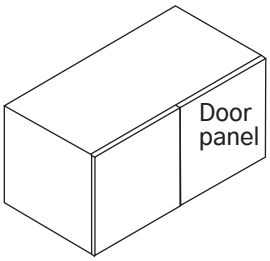

The two door panels are not at the same height

Adjust the door hinges

Finished