













Installation & Assembly

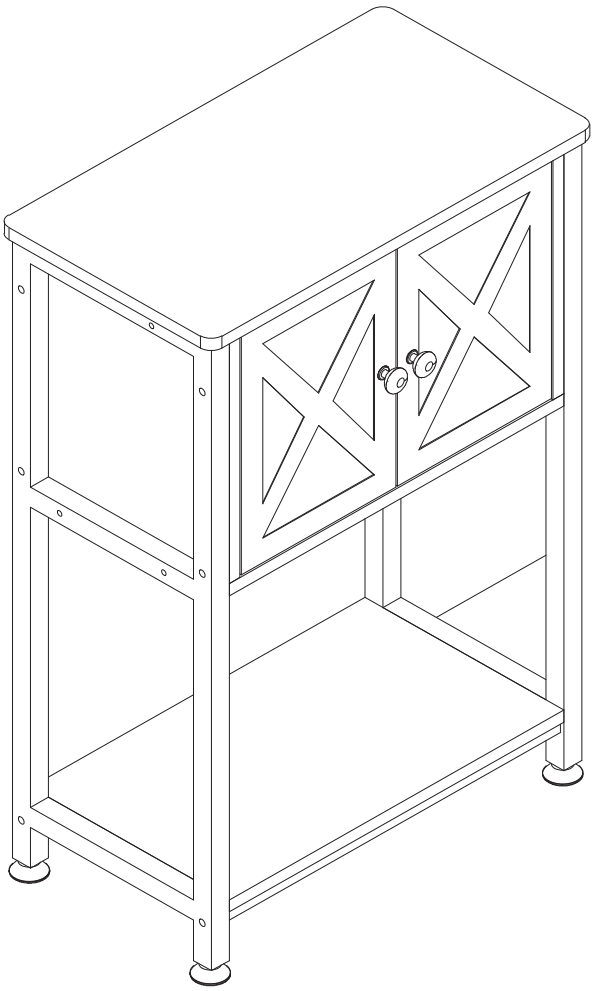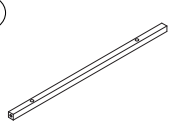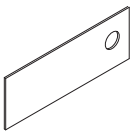
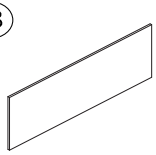
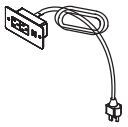




Panel Display Stand


Part List

If any of the following accessories are missing, please take a photo and send an email t**o us**, our after-sales team will handle it as soon as possible


①  1PC	②  2PCS	③  1PC	④  1PC	⑤  1PC
⑥  1PC	⑦  2PCS	⑧  1PC	⑨  1PC	⑩  1PC
⑪  1PC	⑫  1PC	⑬  1PC	⑭  1PC	


Item no.	Reference Image	Qty
A	 M6* 20mm	4
B	 M6*30mm	12
C	 M6*60mm	6
D		4
E	 ST5.5*50mm	4
F	 ST3*12 mm	10
G	X1  M4* 18mm X1 	2


Item no.	Reference Image	Qty
H	 M6	4
I		2
J		4
K	X2  X2  X2  X2  X1 	1
L		4
M	  ST3.5*14mm	4
N		4
	 	1

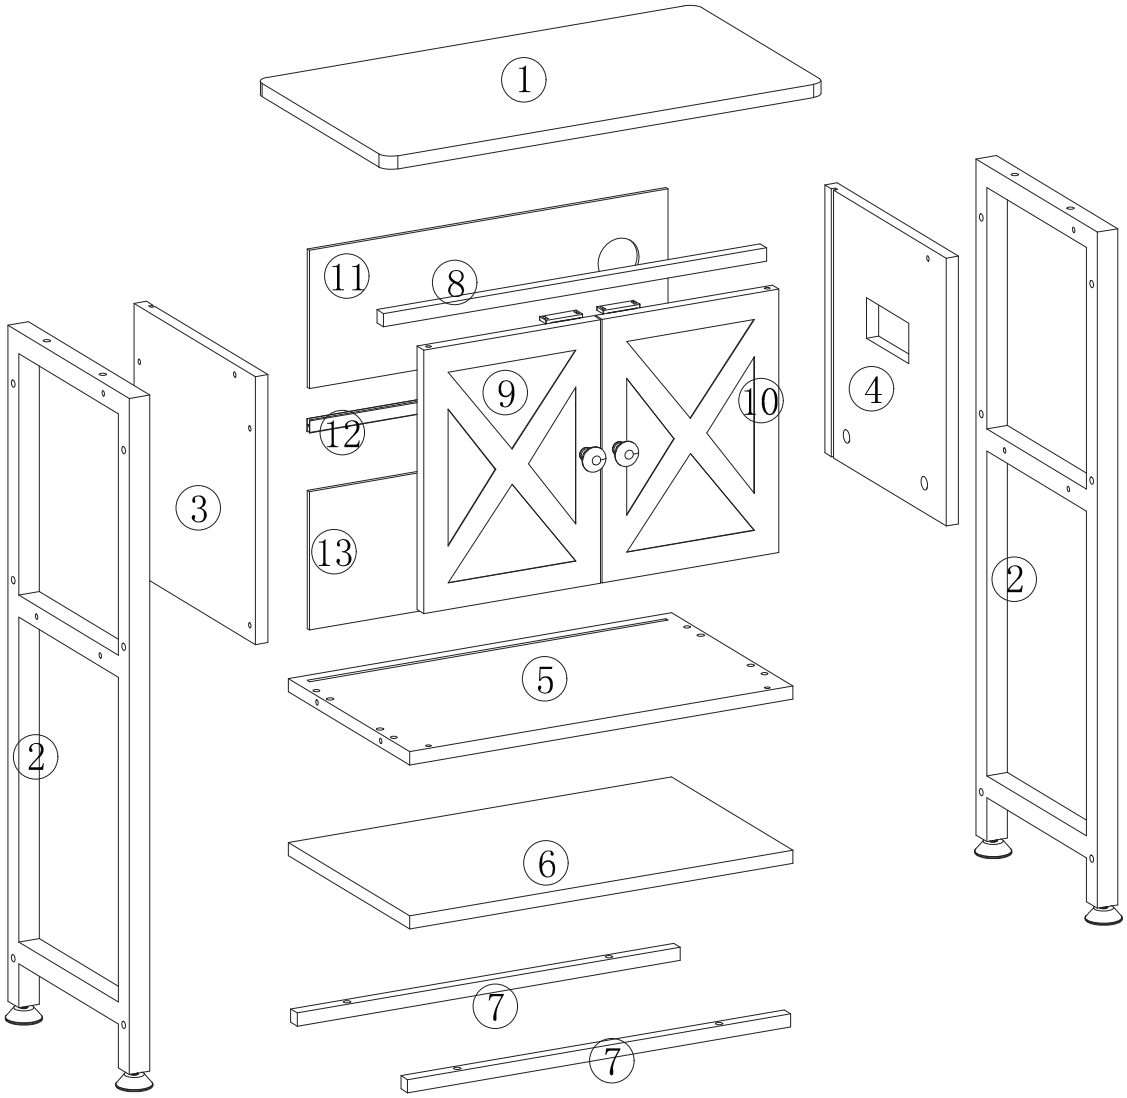
1
11
8
9
10
12
3
13
4
2
5
2
6
7
7


1

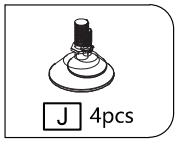


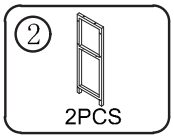


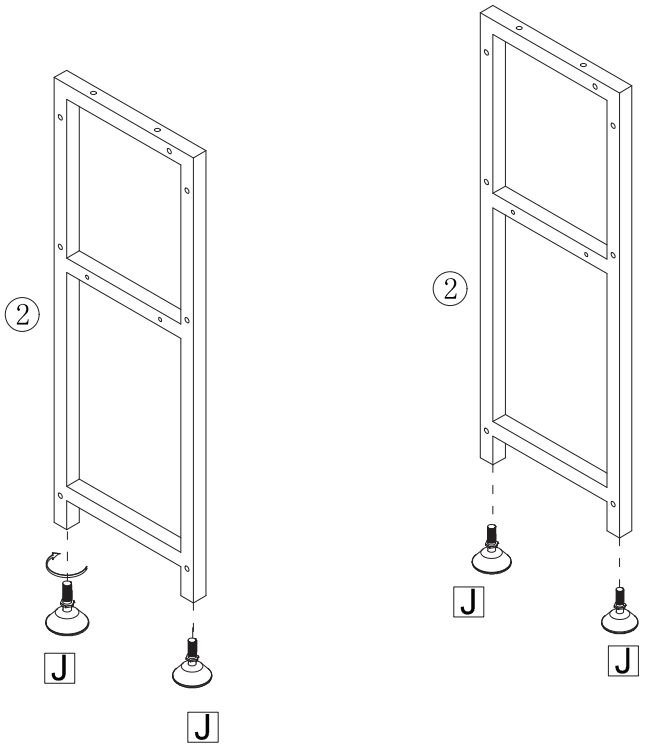

2

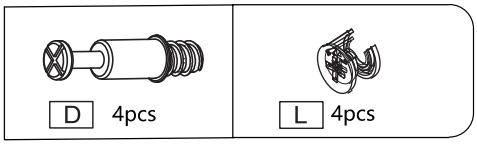

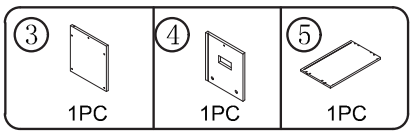

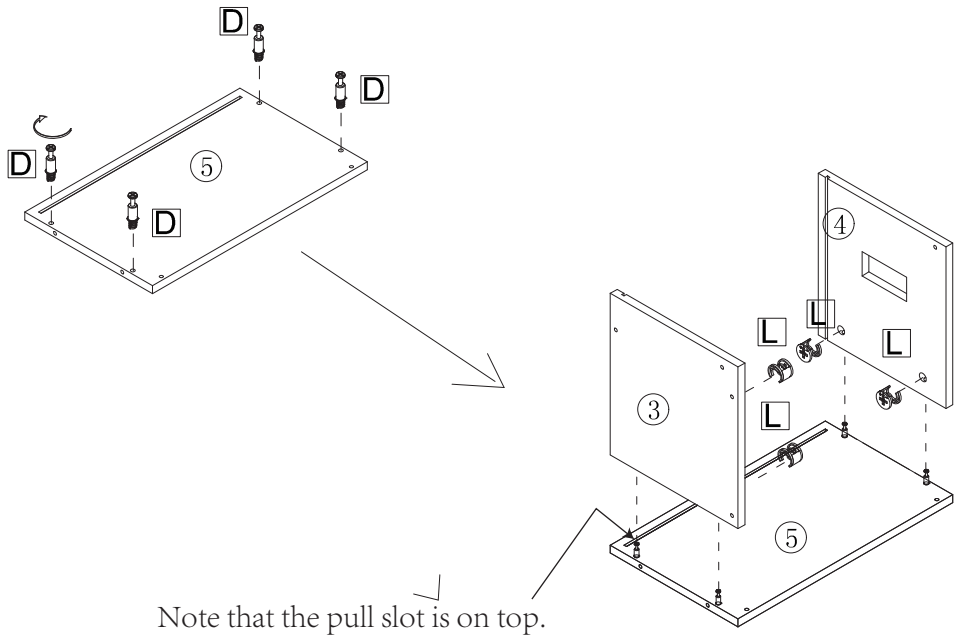

Note that the pull slot is on top.


3

M6* 22mm

A 4pcs

⑥ 1PC

⑦ 2PCS

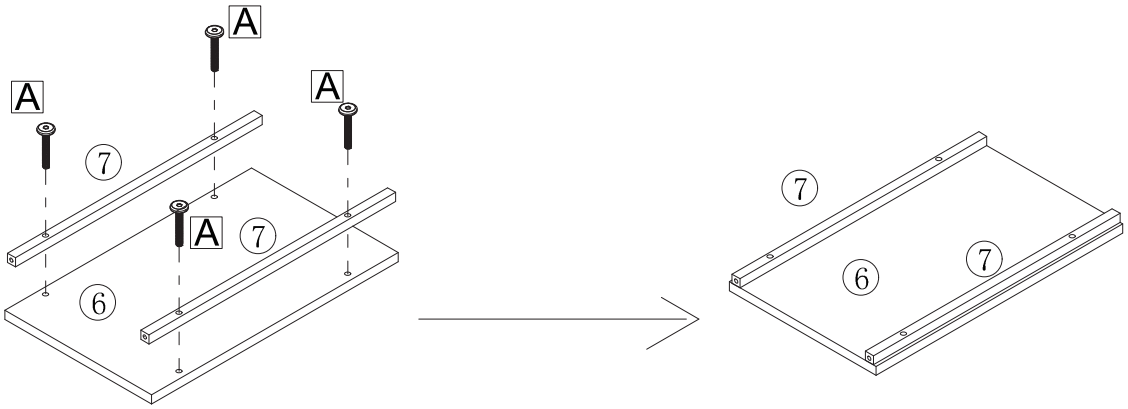

4

4

M6*30mm B 4pcs

M6*60mm C 2pcs

ST5.5*50mm E 2pcs

N 4pcs


② 1PC

③ 1PC

⑤ 1PC

⑦ 2PCS

Note: This hole faces forward.

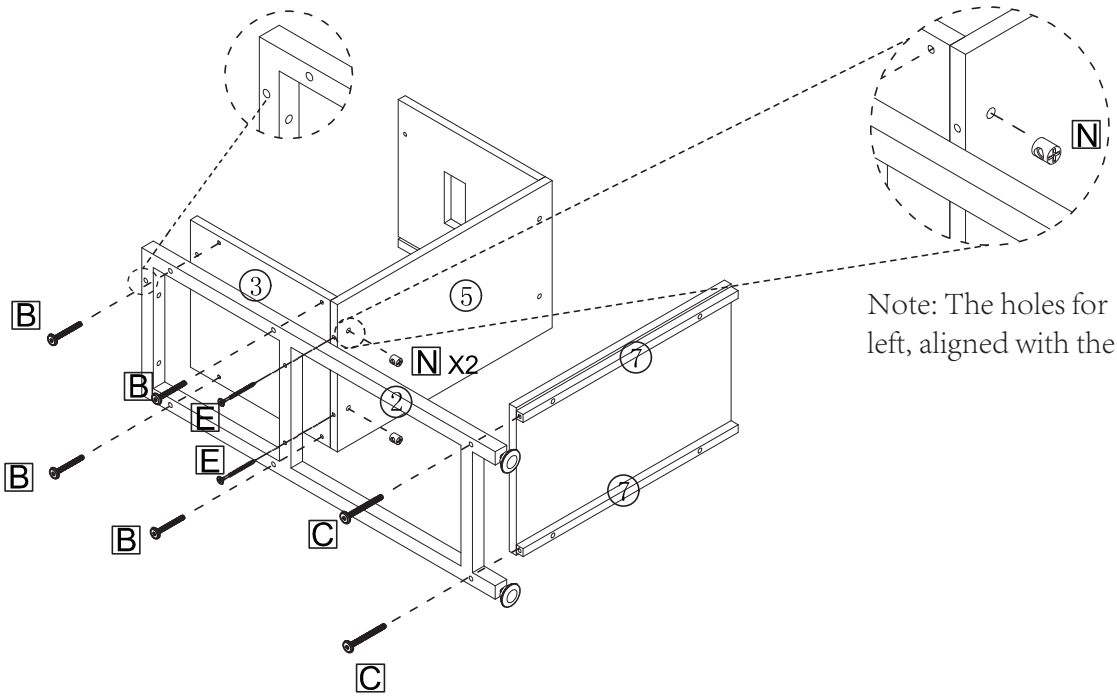

Note: The holes for “N” face left, aligned with the plate holes.


5

M6* 30mm	M6*60mm	ST5.5*50mm	
B 4pcs	C 2pcs	E 2pcs	N 4pcs

②	④	⑤	⑦
1PC	1PC	1PC	2PCS

Note: This hole faces forward.


First: The holes for “N” face right, aligned with the plate holes.

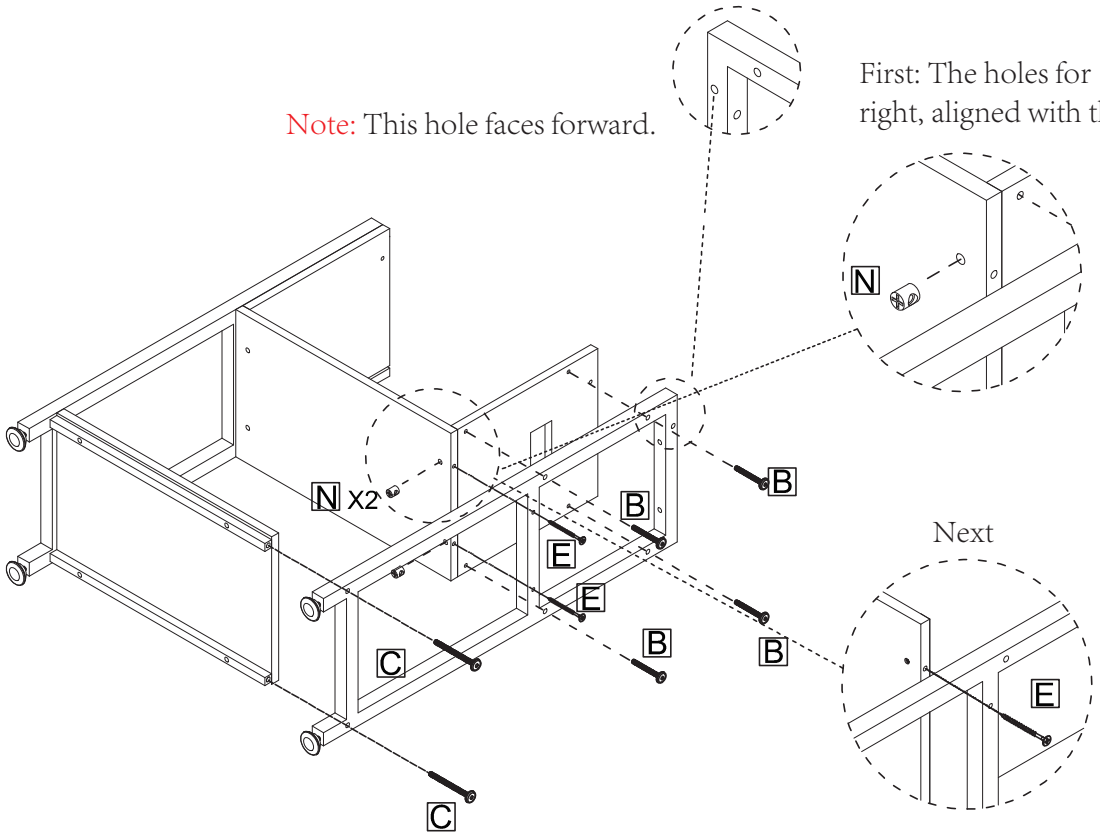


6


M6*60mm
C 2pcs

⑧
1PC

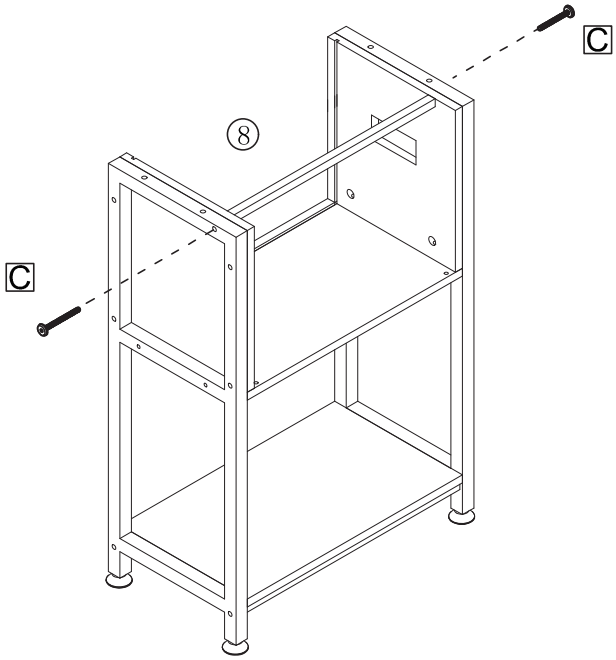



7

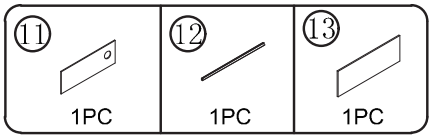

⑪
1PC
⑫
1PC
⑬
1PC

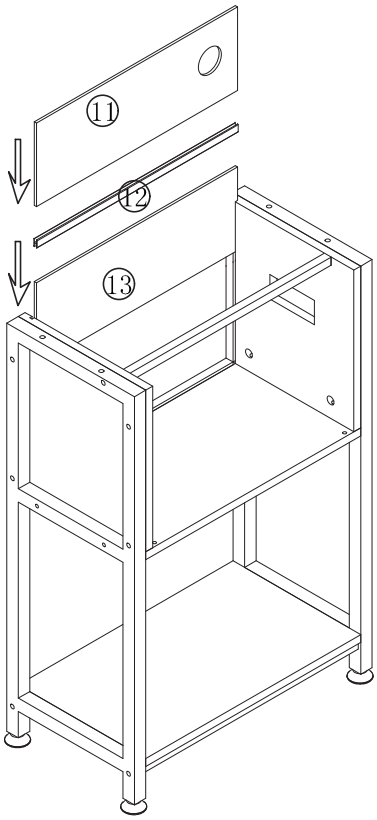
⑪
⑫
⑬

8

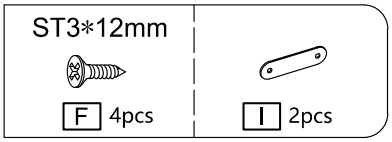
ST3*12mm
F 4pcs
I 2pcs

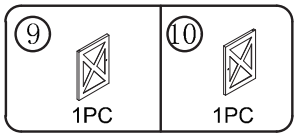
⑨
1PC
⑩
1PC

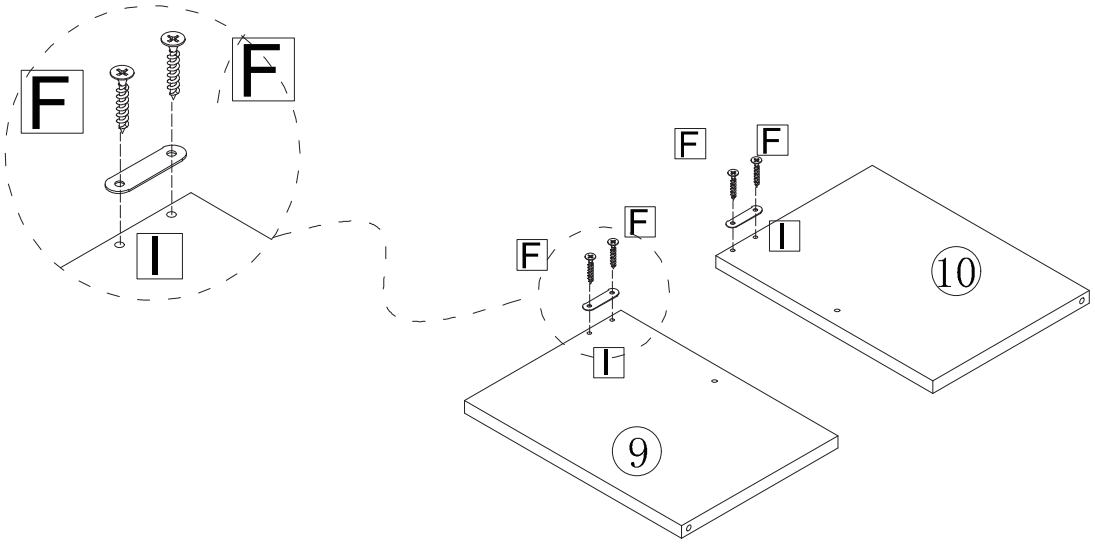

F
F
I
F
F
F
I
⑩
I
⑨


9



M4∗ 18mm

G 2pcs

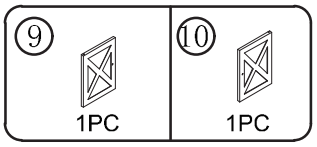

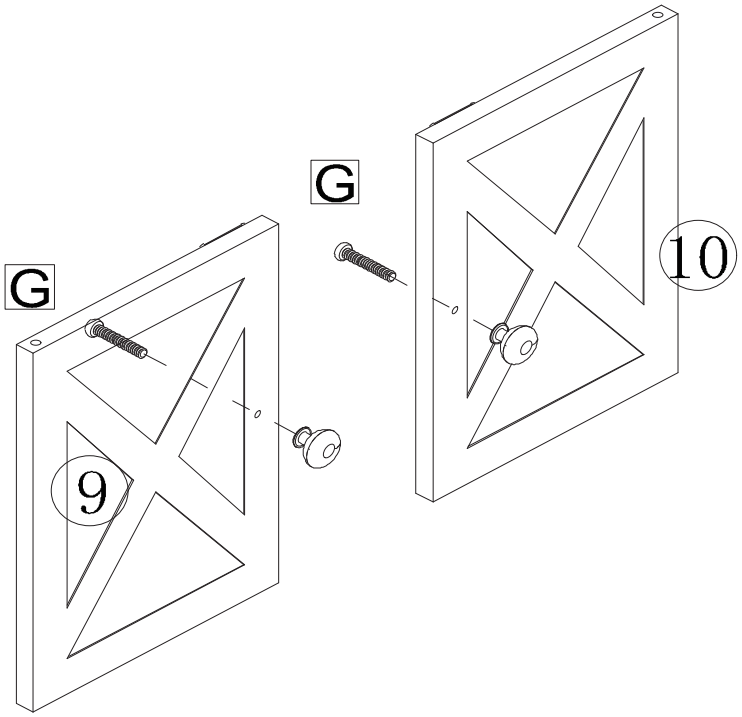

10


ST3∗12mm




F 4pcs





I 2pcs

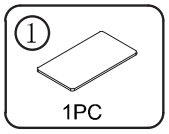

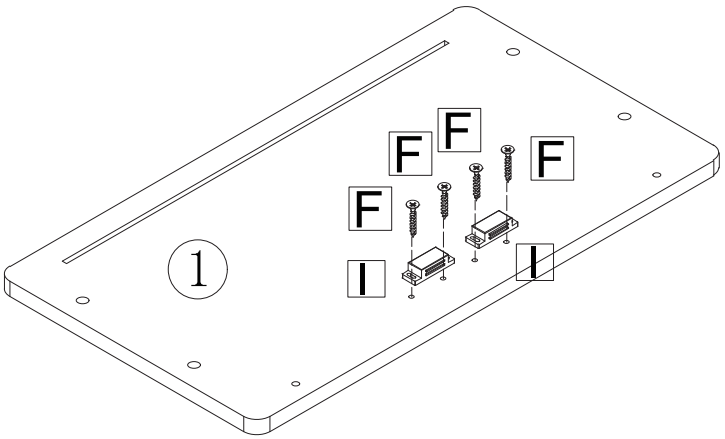


11

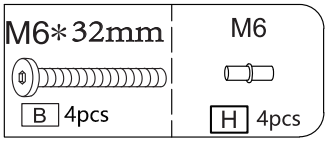


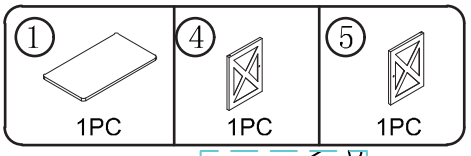



Note: Insert H first into 5 and then into 1.
After aligning and placing it securely, lock b tightly.

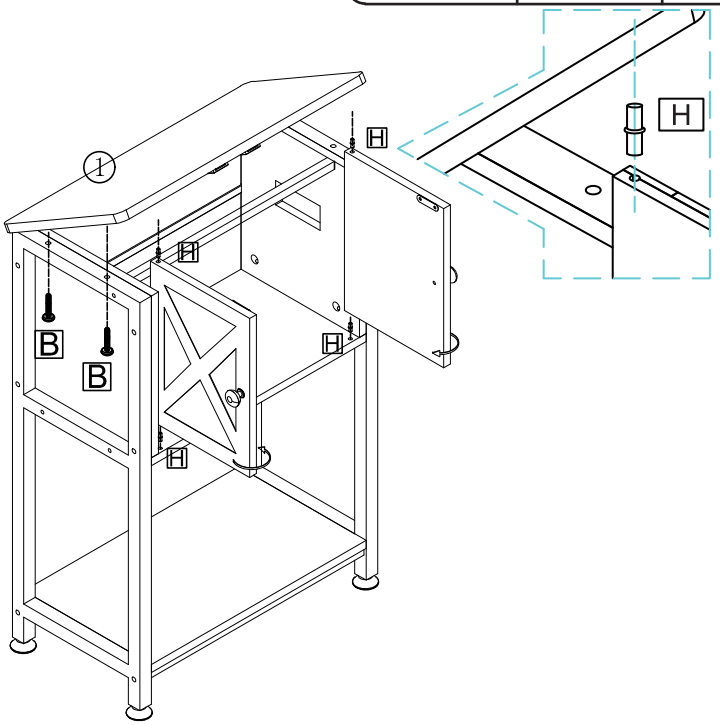


12

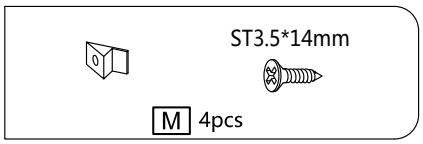


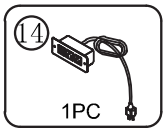

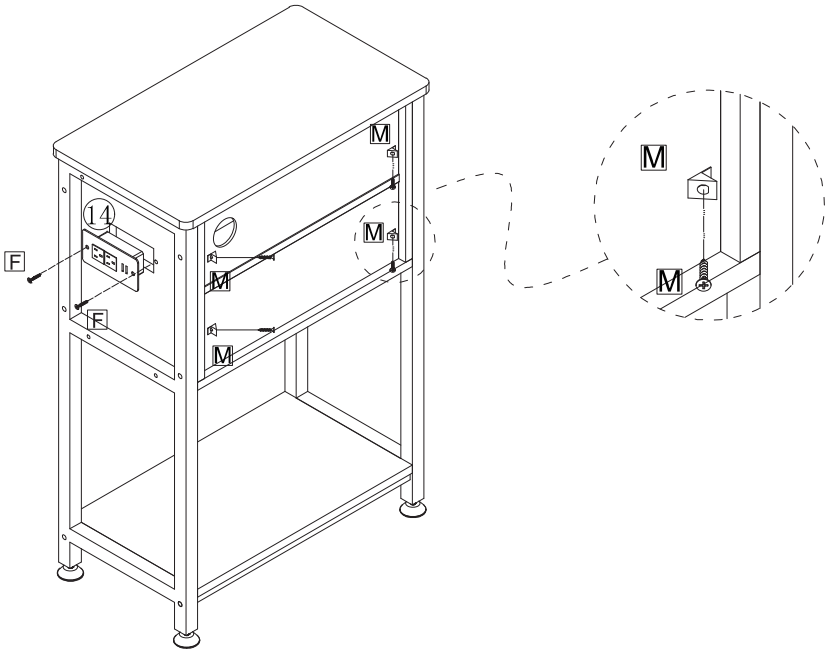


13



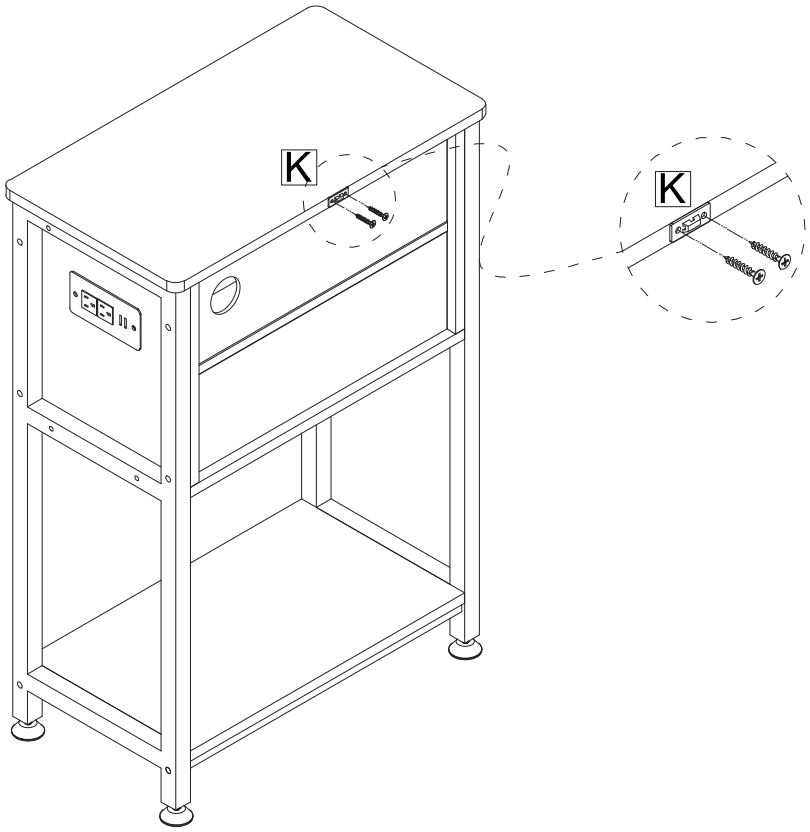


14

Note:Hole diameter 8mm, depth 40mm.
The distance between the two holes is 30mm.

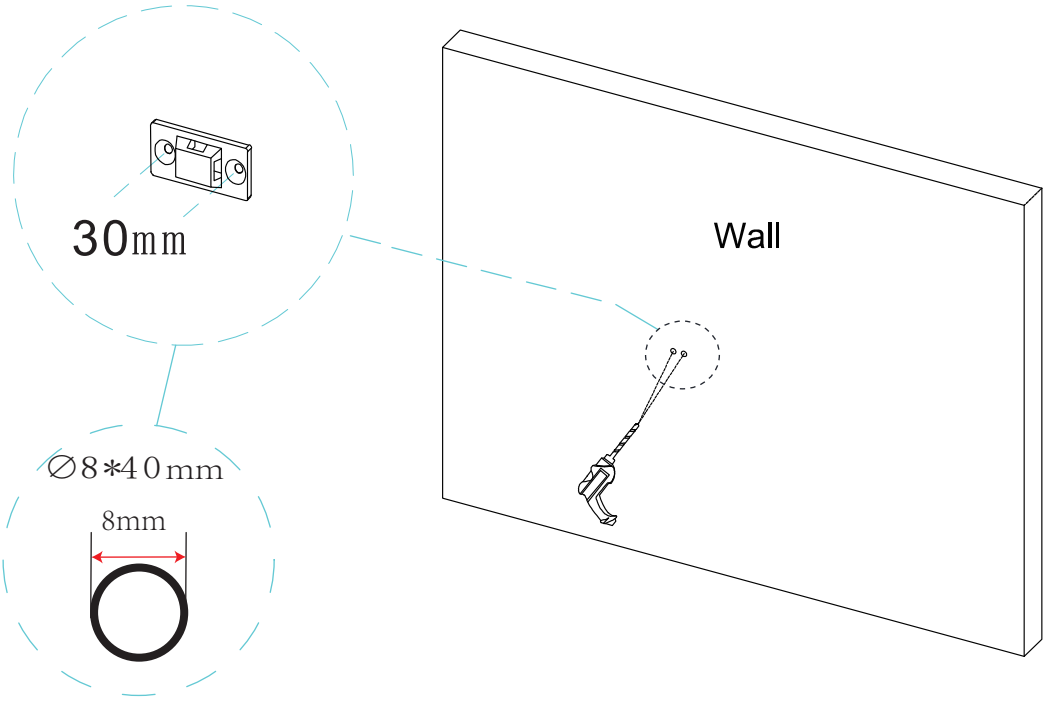



15



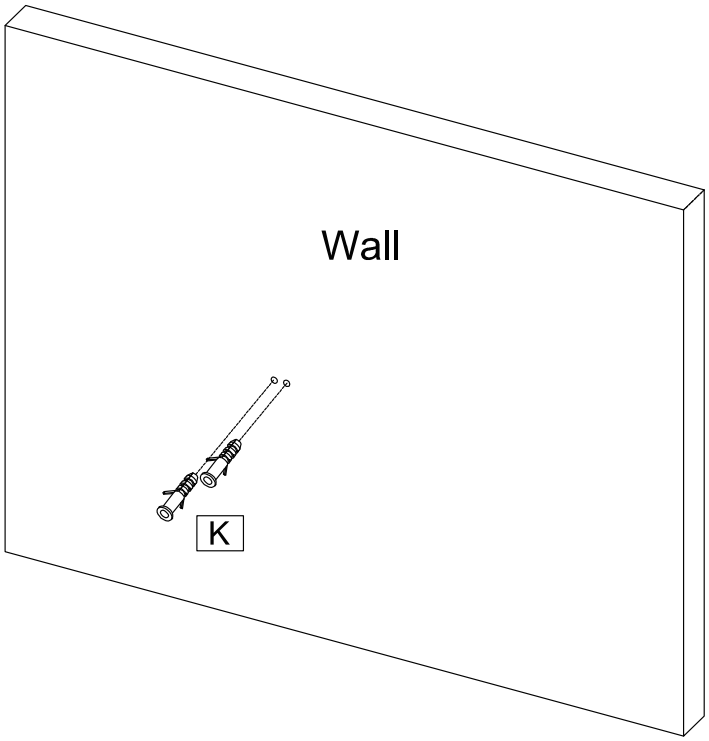

16

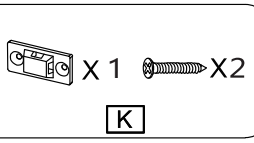

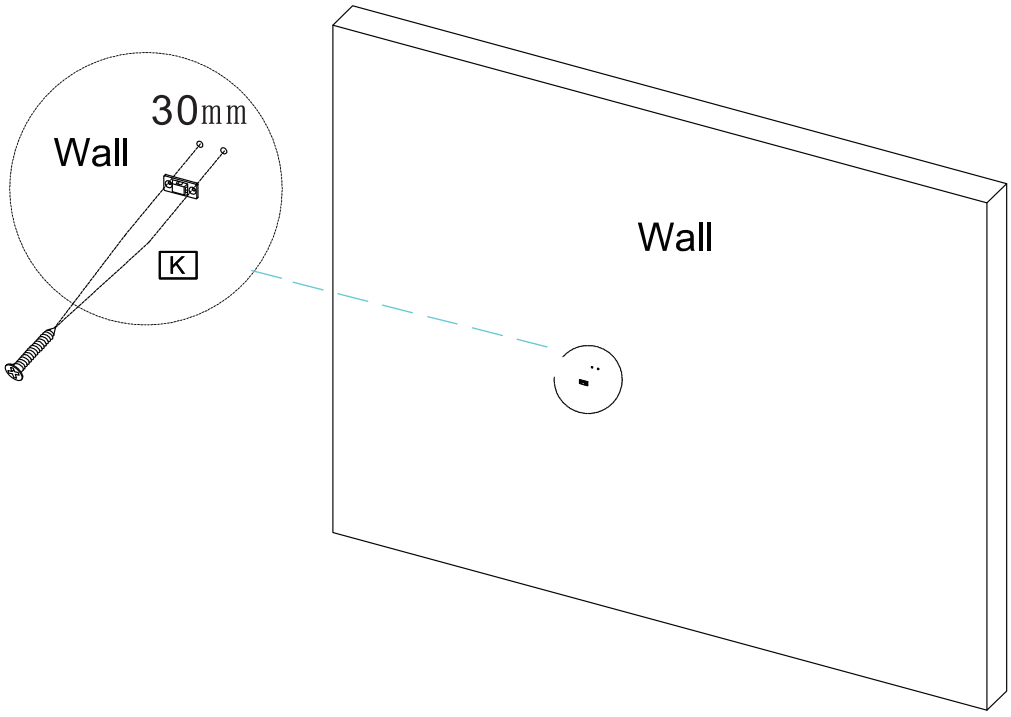

17

X1

K

