

PAPROOS

Model:FDYWC011WE FDYWC011BK

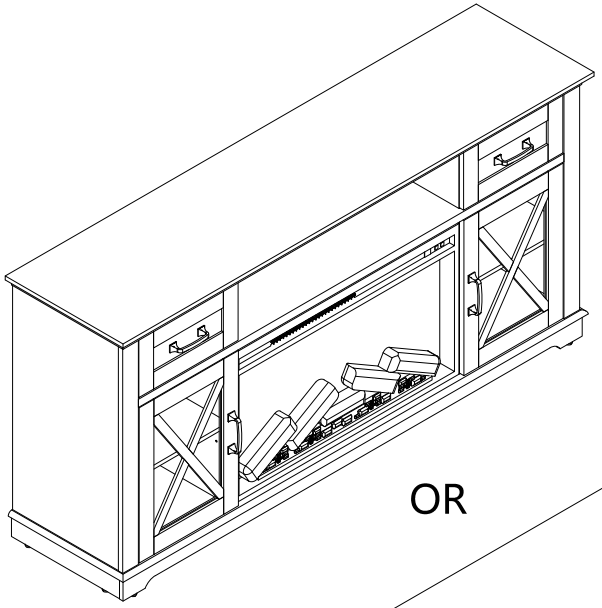


OR

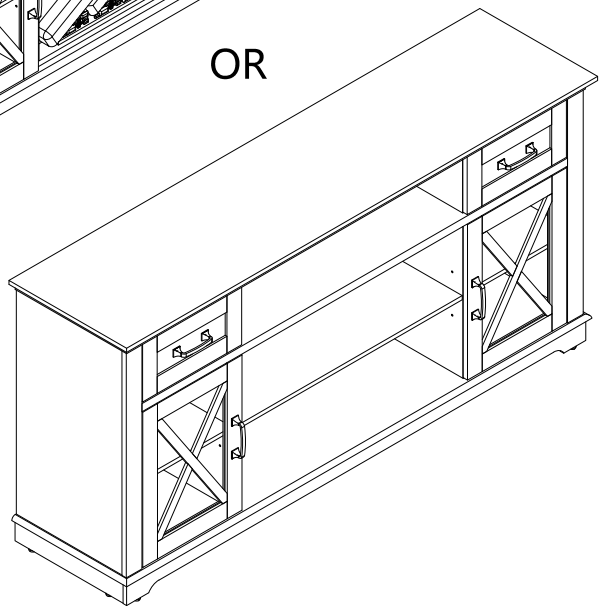

info@serviceprohelp.com

PLEASE READ CAREFULLY

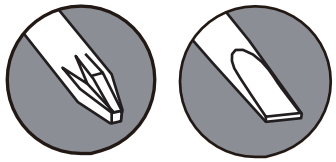

TOOLS REQUIRED

Two people are required for assembly.


Move this piece of furniture gently with two people.



Read this assembly manual carefully, and verify that you have all the parts listed before you begin.
Keep your assembly manual for future reference.



Do not place very hot/cold objects on top of any surface.
Always use a coaster or mat. Never leave liquids on the surface.
Clean immediately with a mild soap and a damp cloth.
Never use scouring powder based cleanser.

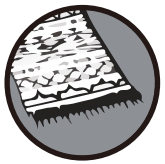

Protect finishes by placing furniture pieces on a soft carpeted surface during assembly.

SAFE INFORMATION

WARNING: To prevent serious injury or death from furniture tip-overs.

- **NEVER** allow children to climb, stand, or play on any furniture.
- **ALWAYS** supervise children around furniture.
- **KEEP** remote controls, toys, and other attractive items out of reach from the tops of furniture.

WARNING: ALWAYS anchor furniture to the wall.


- Anchoring is **ESSENTIAL** to prevent tip-overs.
- Anchor **DIRECTLY** to wall studs or masonry using appropriate hardware.
- **CONSULT** a qualified professional if you are uncertain about your wall construction or how to install anchors properly.
- **REFER** to your television and furniture owner’ s manuals for model-specific instructions.
- **NEVER** remove wall anchors without first emptying all items from the furniture.

CAUTION: Use only furniture designed for TVs.


- Placing a TV on furniture **NOT** designed for it (e.g., dressers, bookcases) creates a top-heavy, unstable hazard.
- **USE ONLY** furniture specifically designed and rated to support the weight and size of your television.
- **FOLLOW** all manufacturer instructions for installation and weight limits.


➡ For more details, visit https://www.anchorit.gov/


EXPLODED VIEW

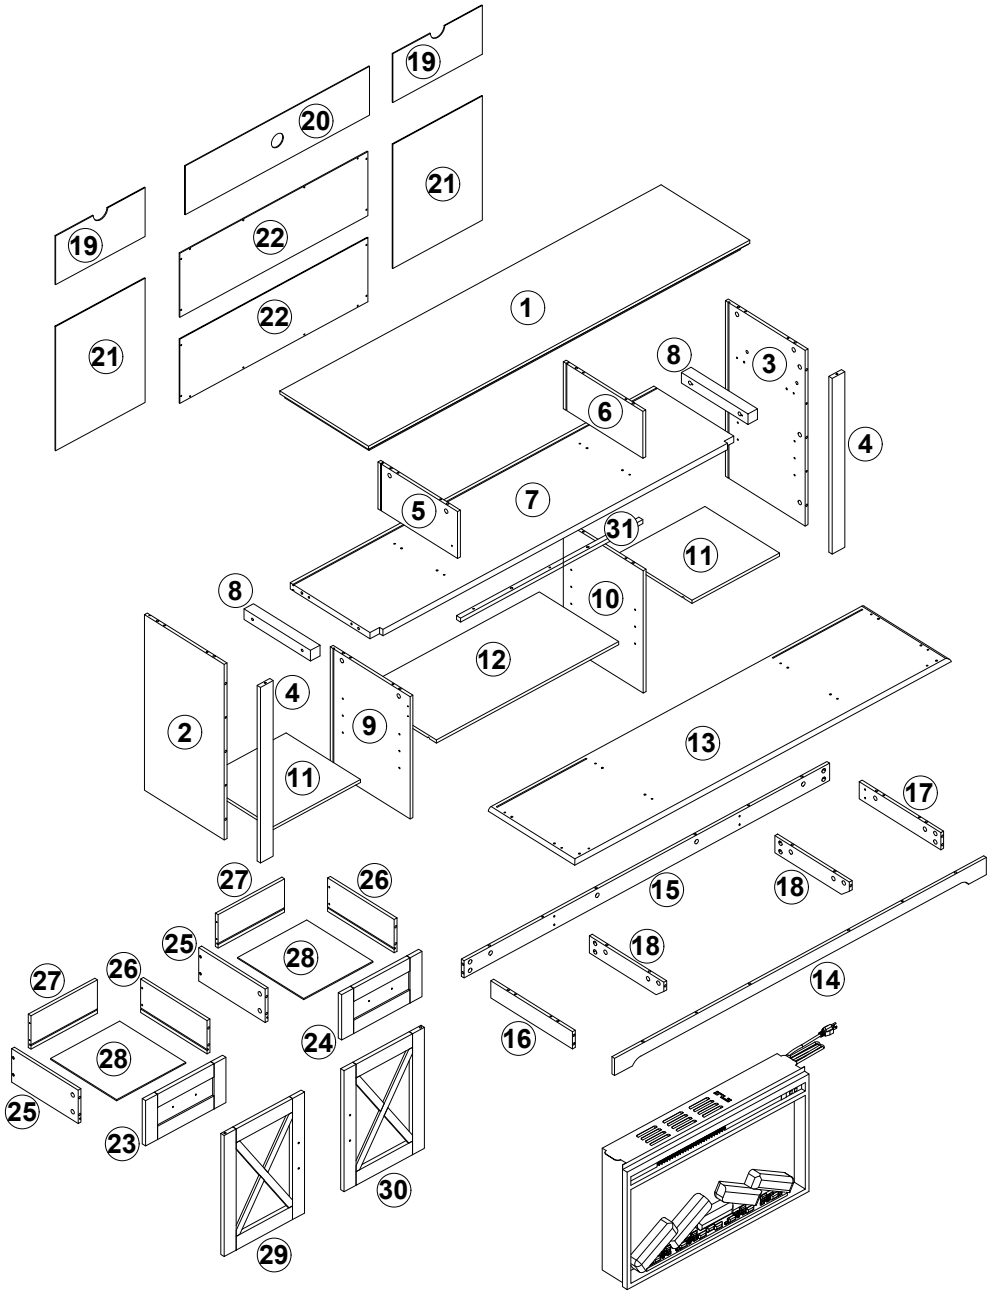



PARTS

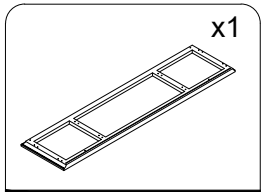


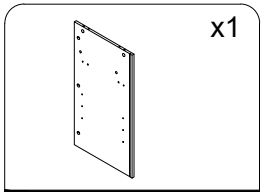


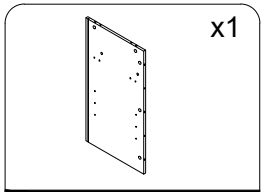


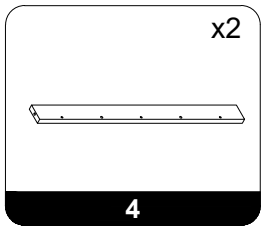


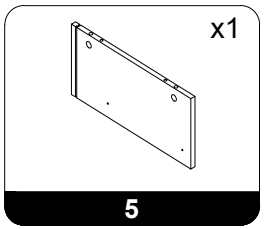


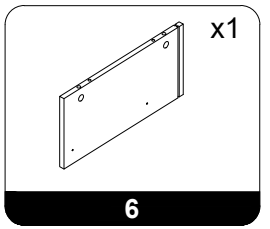


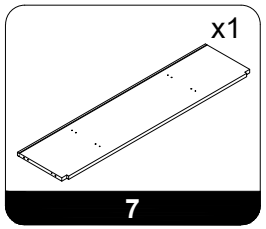


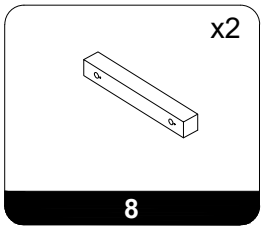


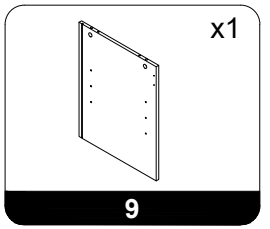


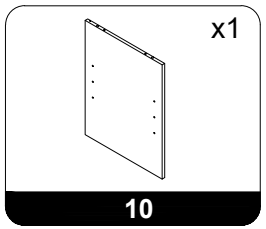


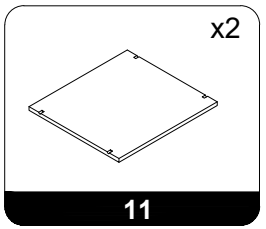

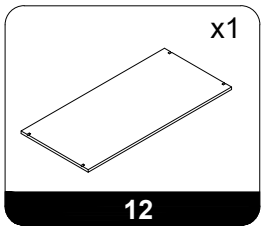


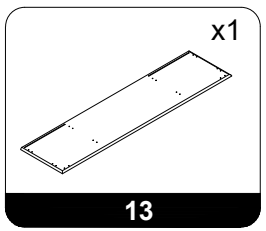


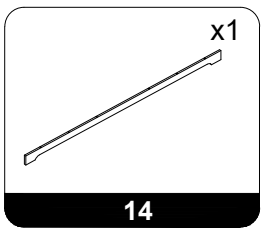


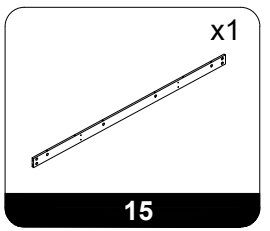



PARTS

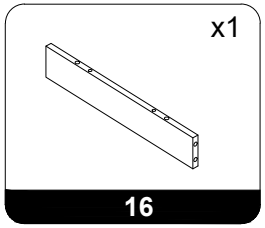

x1
16

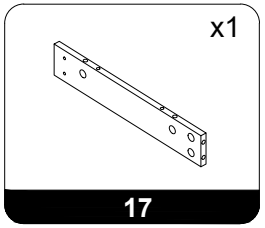

x1
17

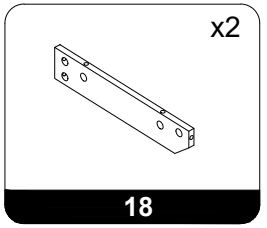

x2
18

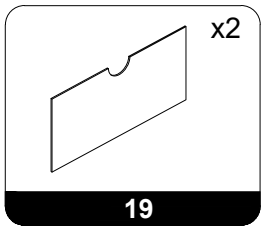

x2
19

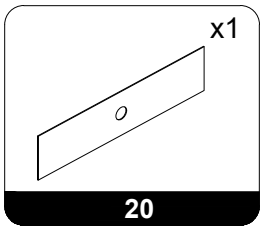

x1
20

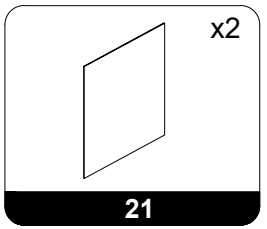

x2
21

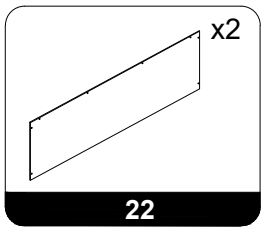

x2
22

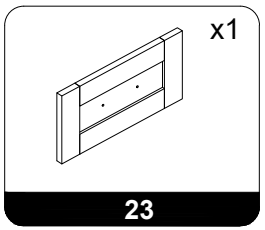

x1
23

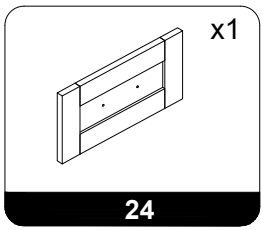

x1
24

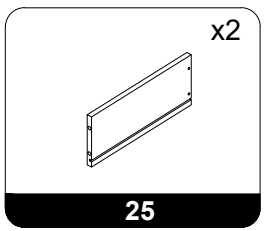

x2
25

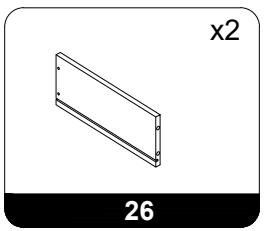
x2
26

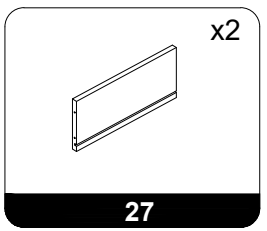

x2
27

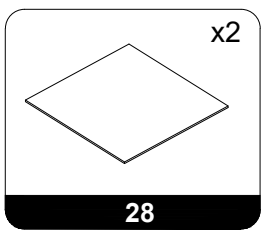
x2
28

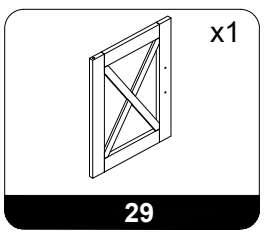

x1
29

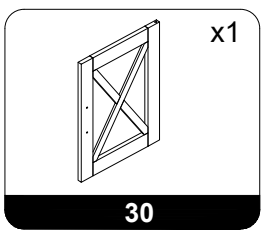
x1
30

PARTS

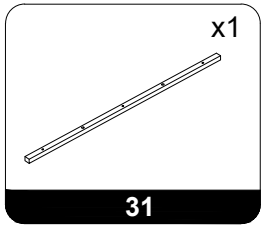
x1
31

HARDWARE


x60

A


x60

B

x46

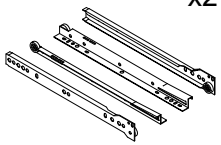
C


x2

D


x11

E

x20

F

x12

G

x12

H

x2

I

x30


J

x26

K

x4

L

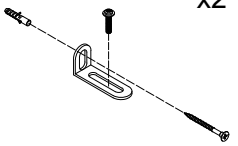x2

M

x2

N


x2

O

HARDWARE


x4

P

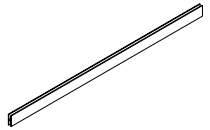x1

Q

x16


R


x1


ASSEMBLY INSTRUCTIONS


Do not tighten the screws until all of them are fastened into the holes.


STEP 1

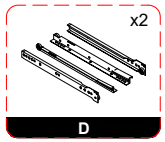


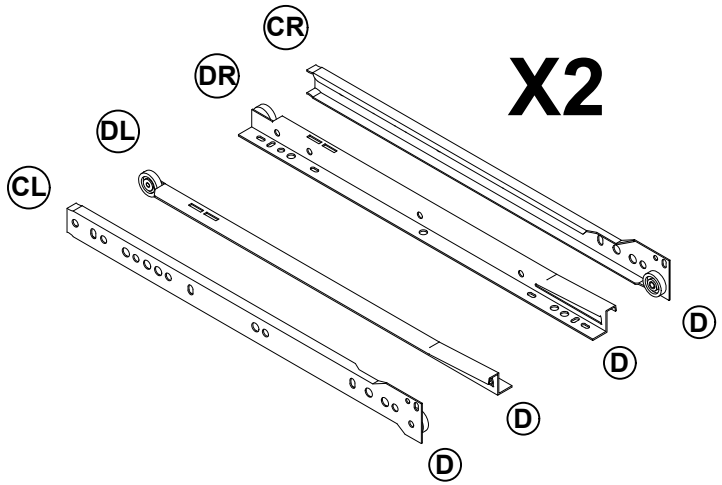


STEP 2

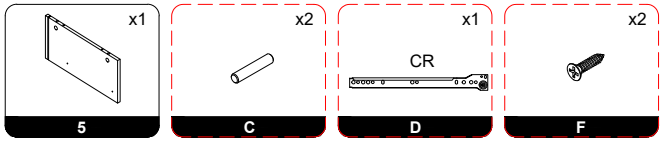


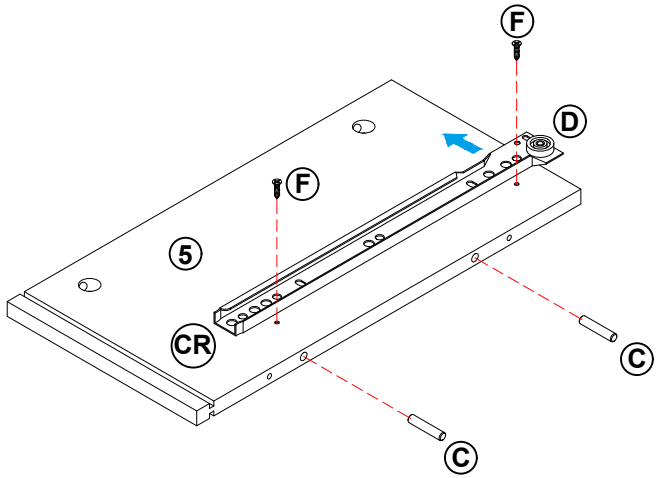


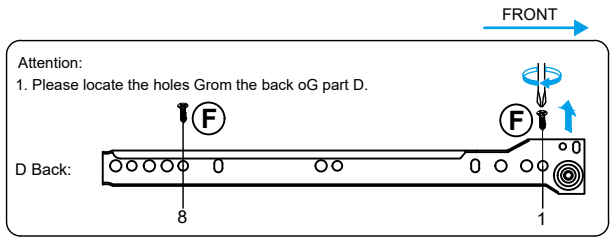


STEP 3

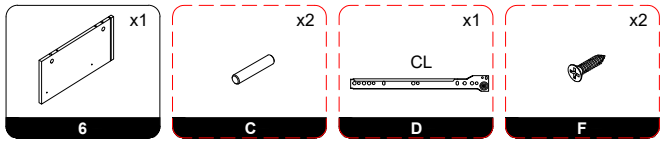

x1
6
x2
C
x1
CL
D
x2
F

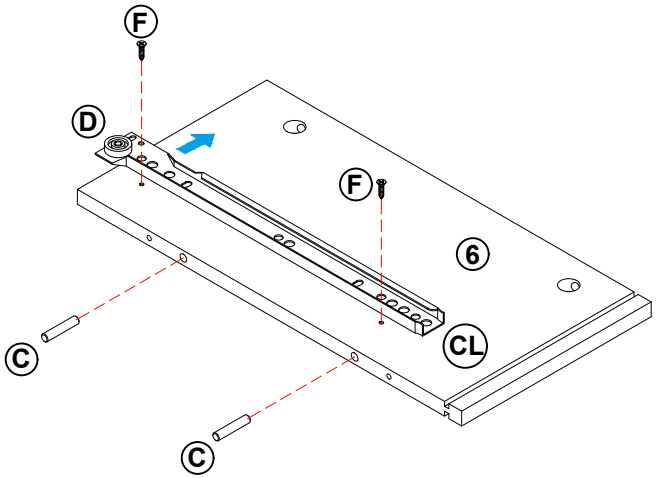

F
D
F
6
C
CL
C

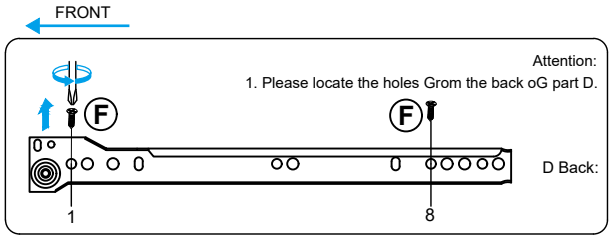
FRONT
Attention:
1. Please locate the holes Grom the back oG part D.
F
F
D Back:
1
8


STEP 4

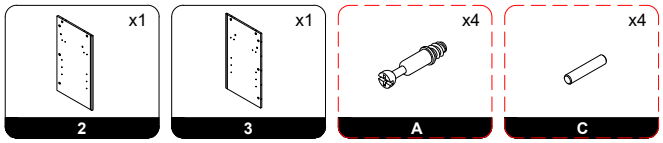

x1
2
x1
3
x4
A
x4
C

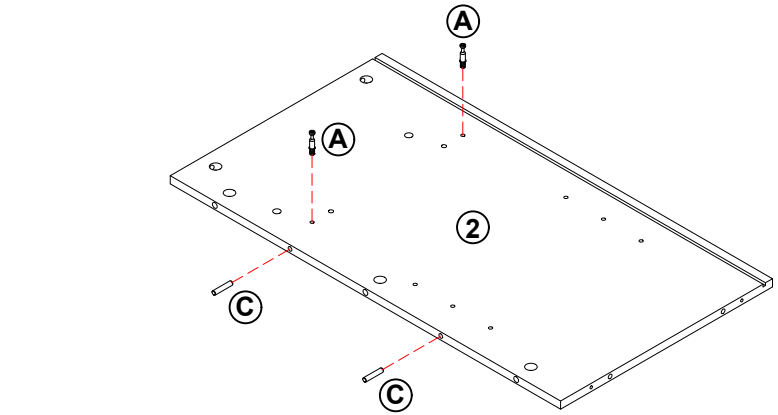
A
A
2
C
C

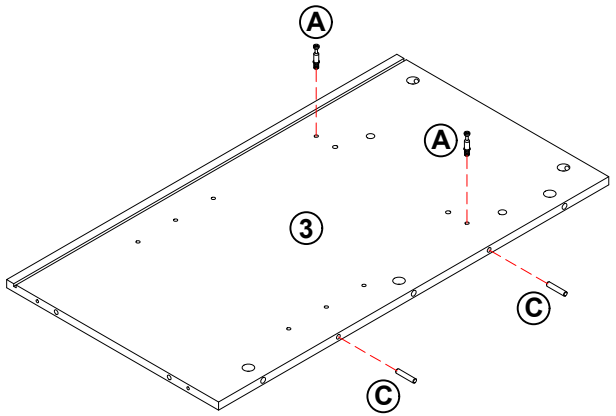
A
A
3
C
C


STEP 5

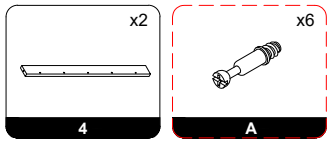


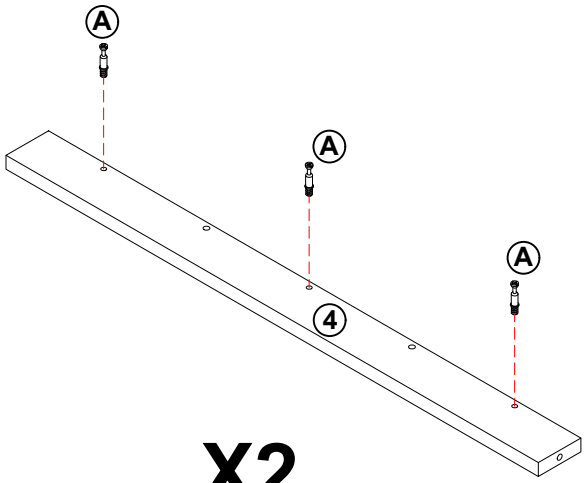



X2

STEP 6

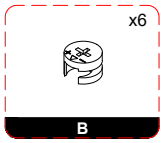

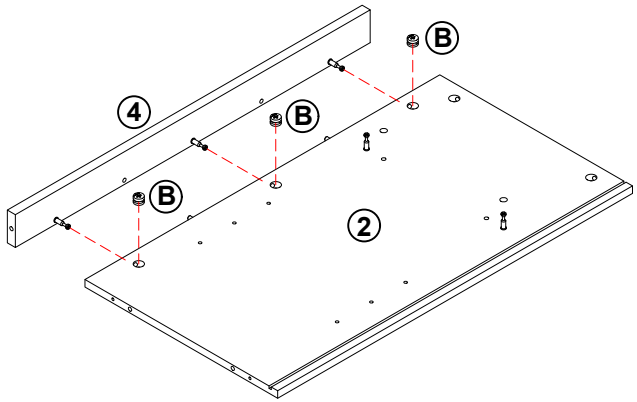


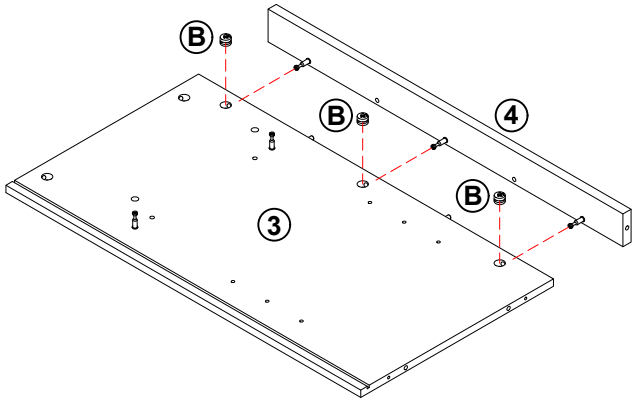




Note: the direction of the arrow.


STEP 7

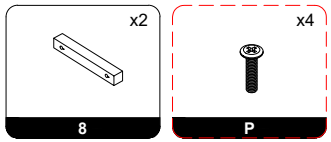

x2
8


x4
P

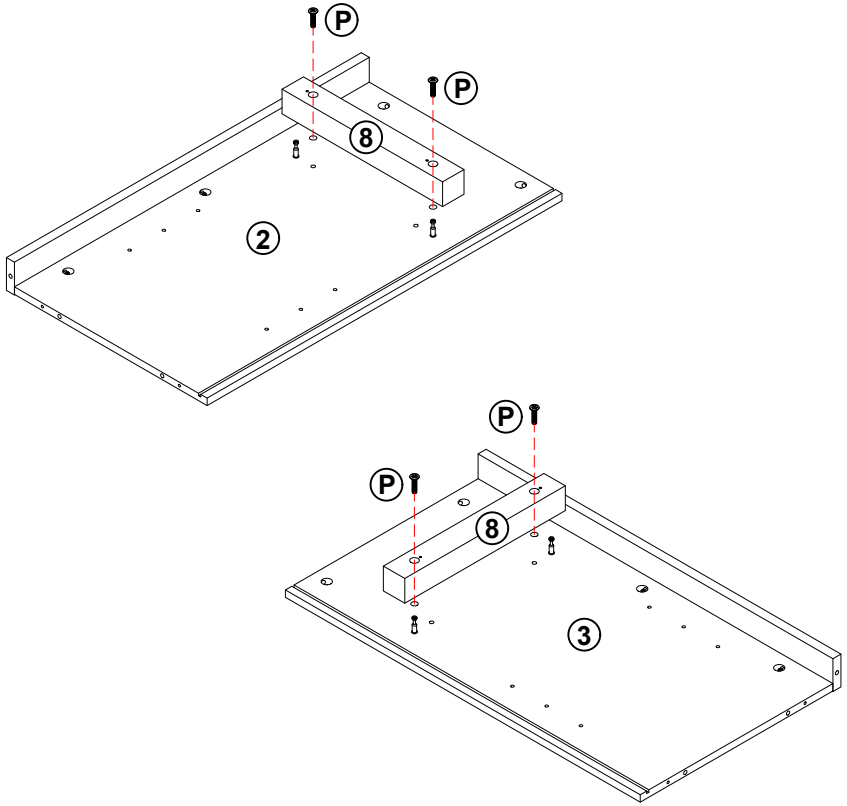

P
P
8
2
P
P
8
3

STEP 8

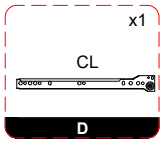

x1
CL
D

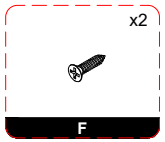

x2
F

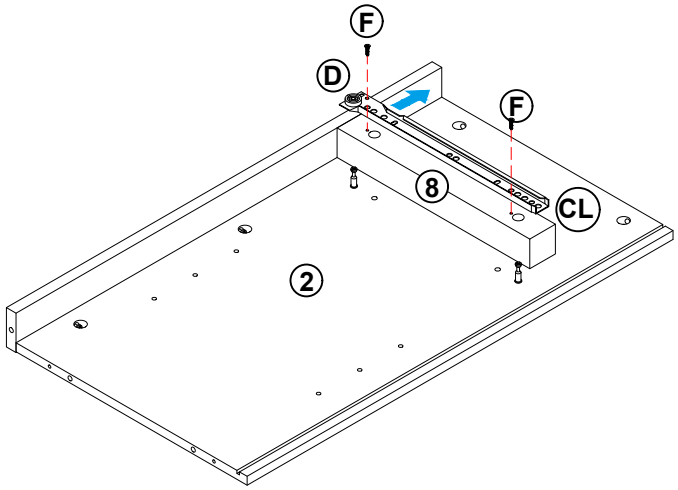

F
D
F
8
CL
2

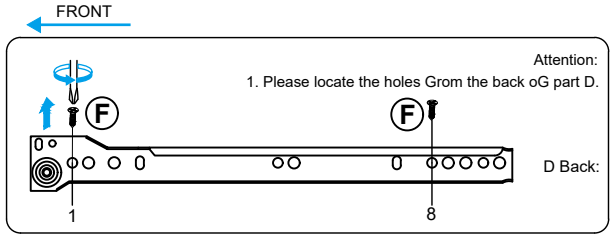
FRONT
Attention:
1. Please locate the holes Grom the back oG part D.
F
F
D Back:
1
8


STEP 9

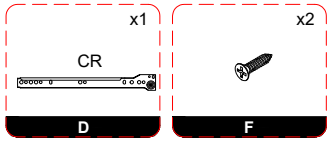


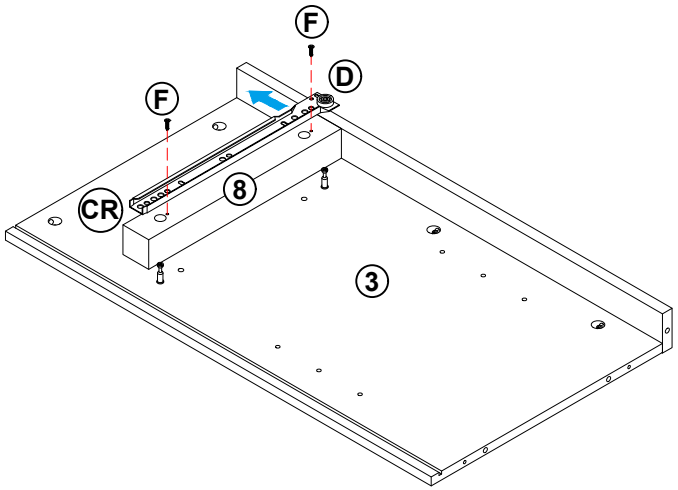


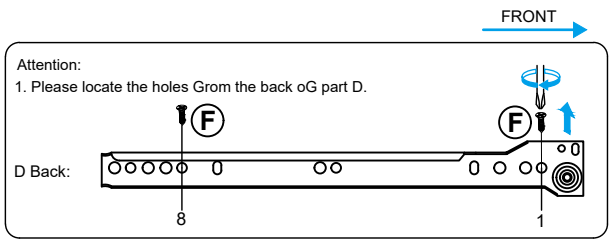


STEP 10

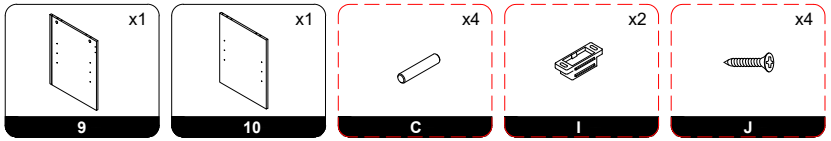


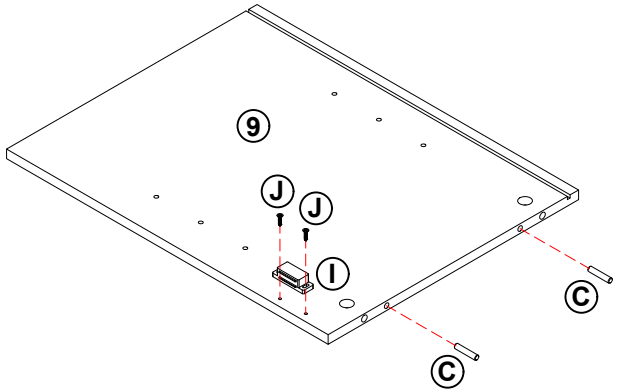

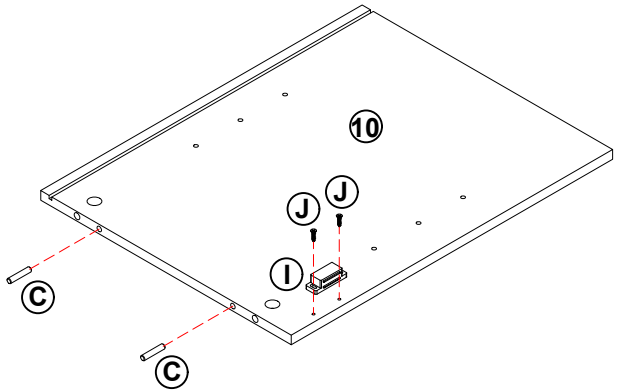



STEP 11

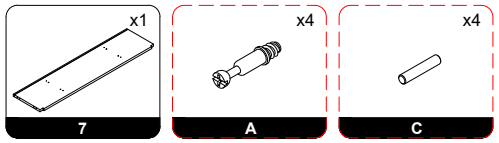

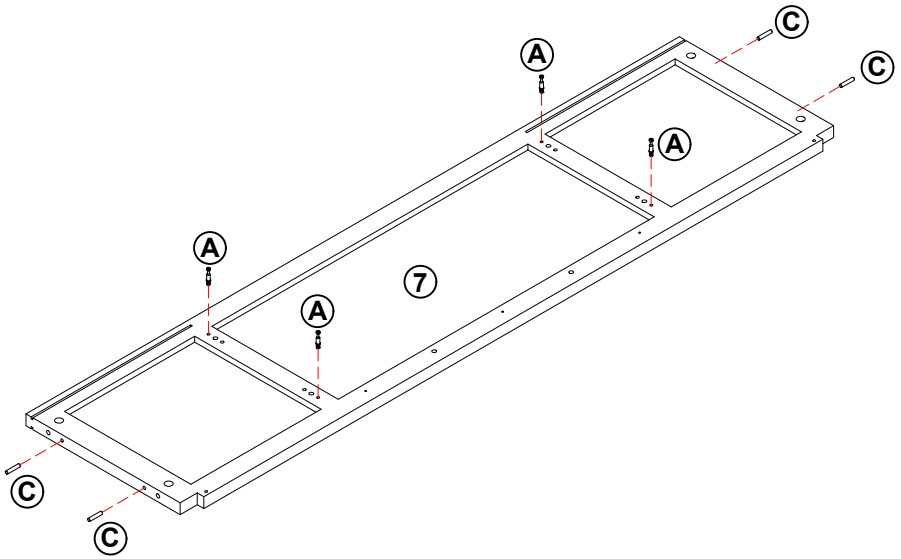



STEP 12

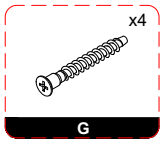


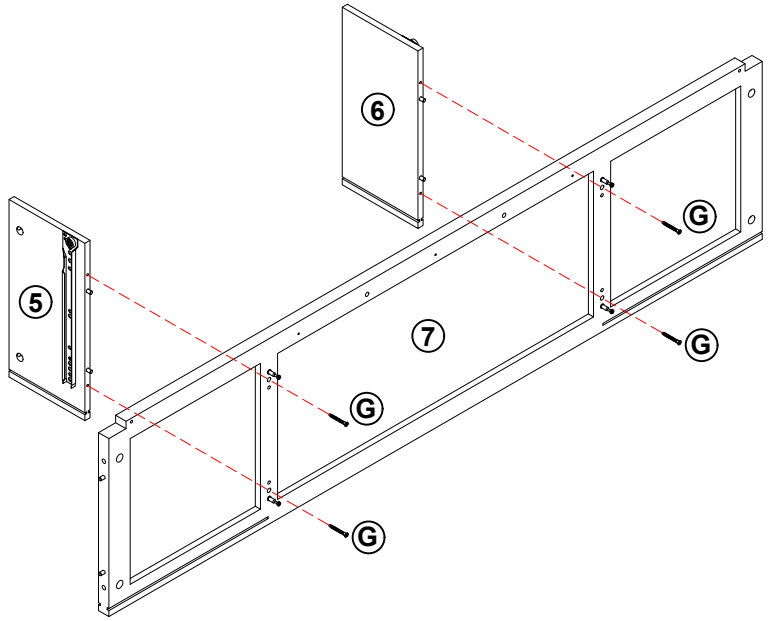

STEP 13

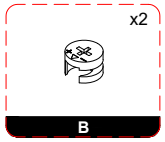


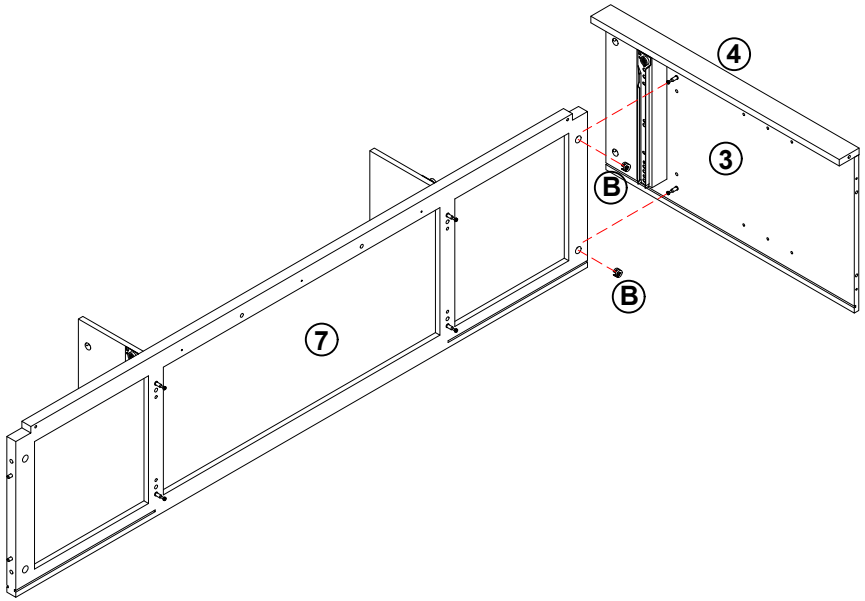





Note: the direction of the arrow.

STEP 14

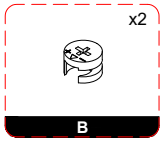


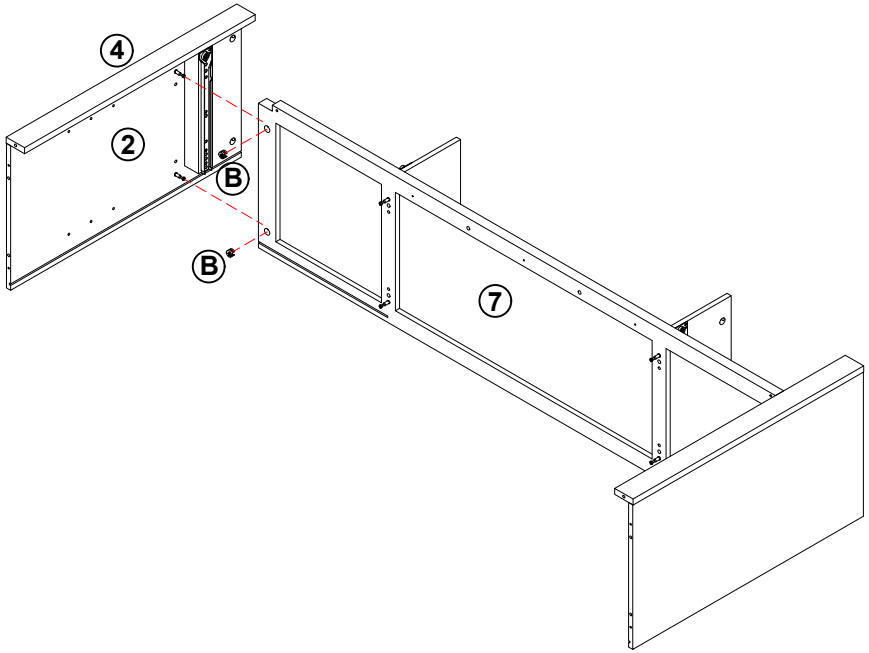






Note: the direction of the arrow.

STEP 15

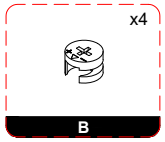

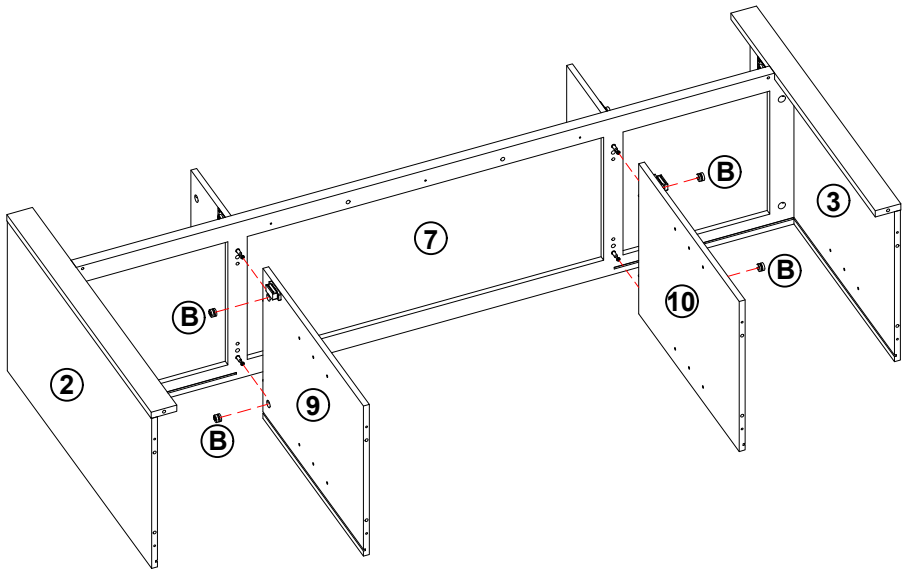








Note: the direction of the arrow.


STEP 16

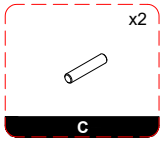

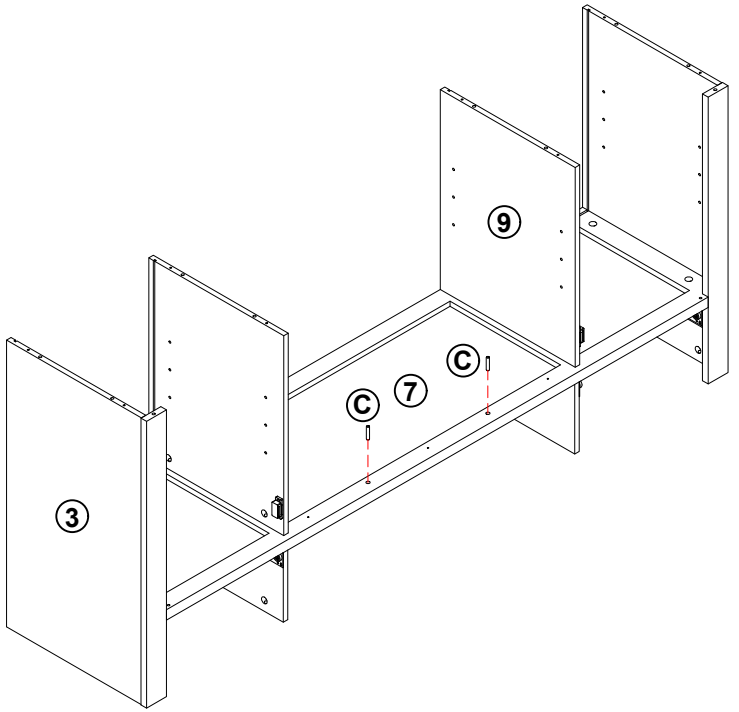



STEP 17

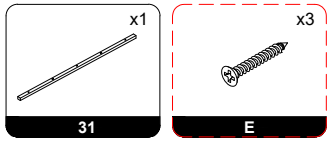

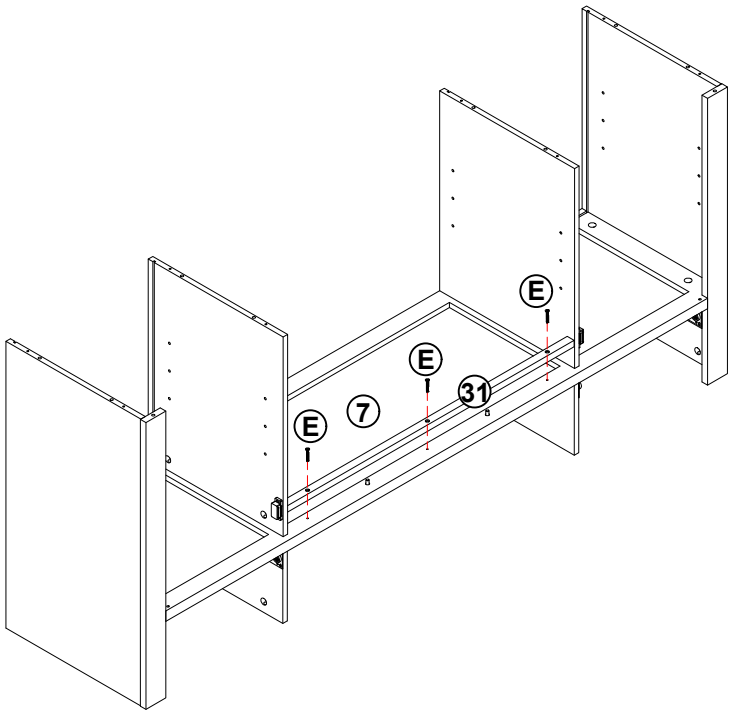



STEP 18

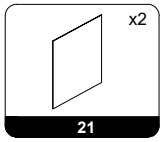

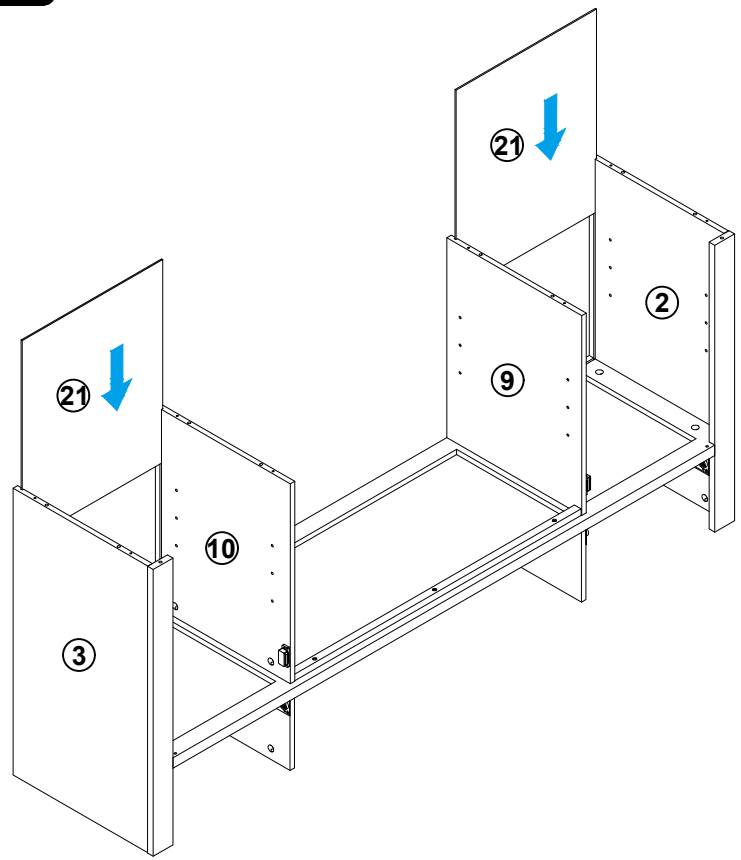



STEP 19

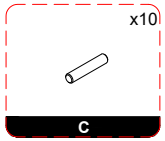


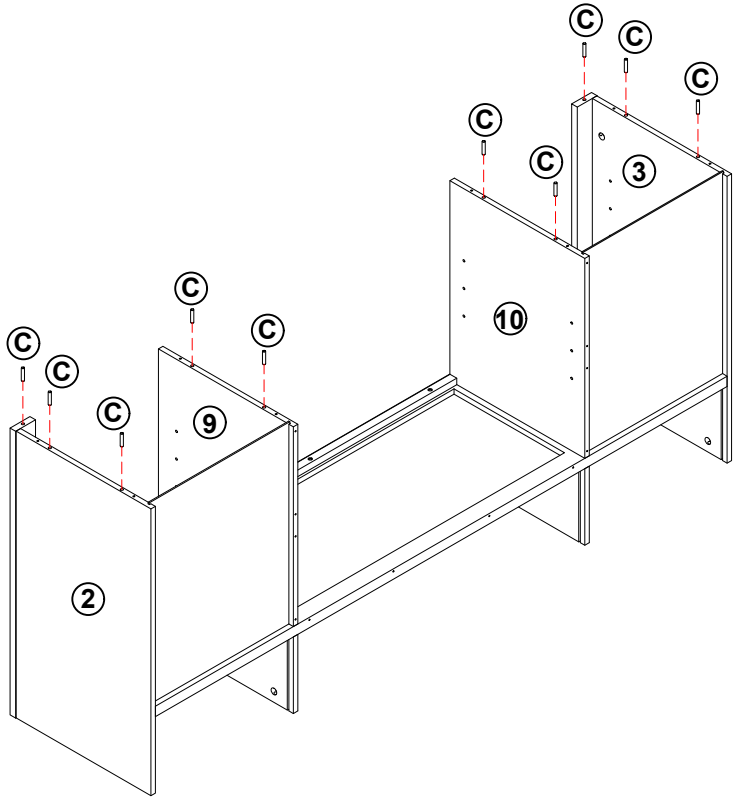


STEP 20

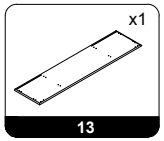


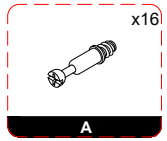

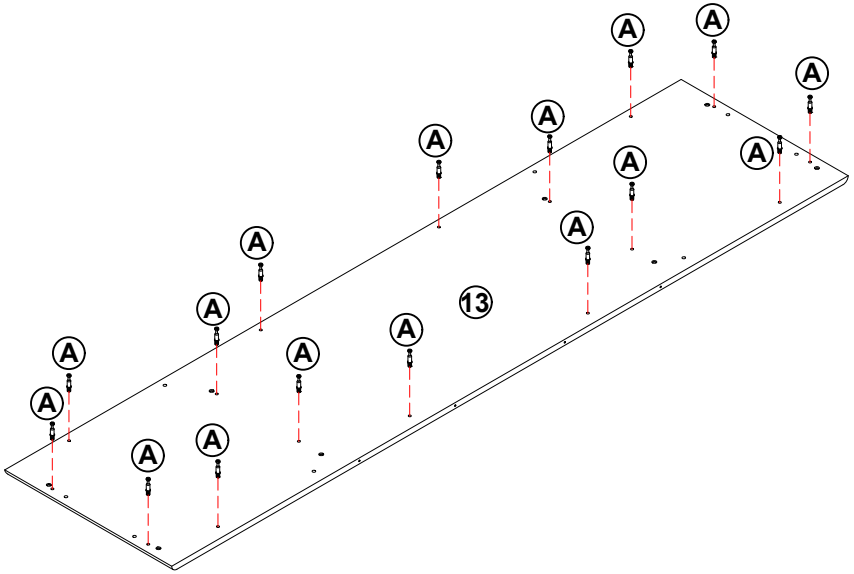



STEP 21

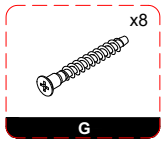

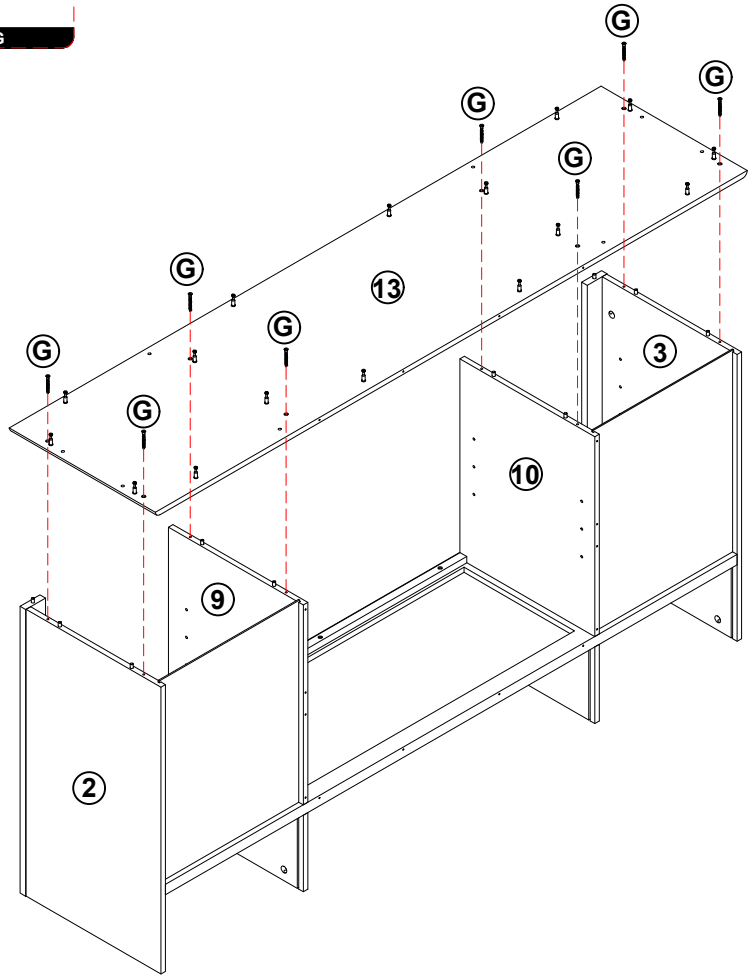



STEP 22

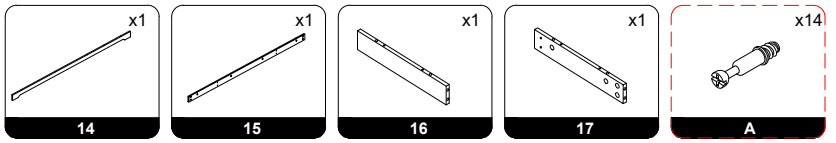


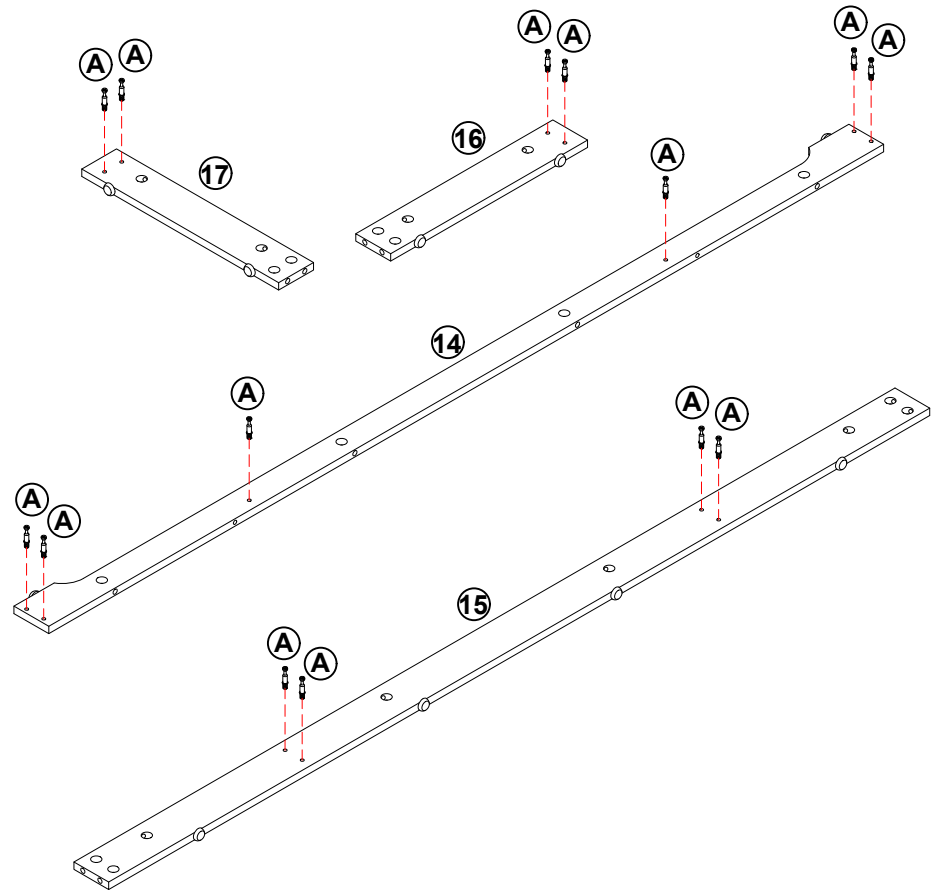

STEP 23

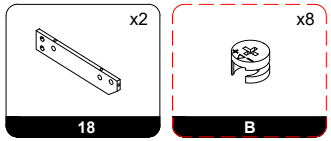


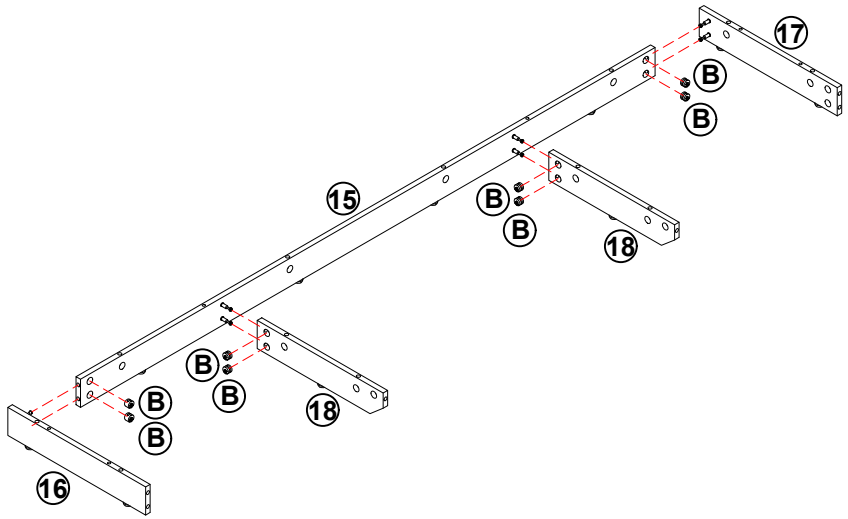





Note: the direction of the arrow.

STEP 24

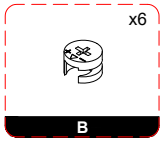


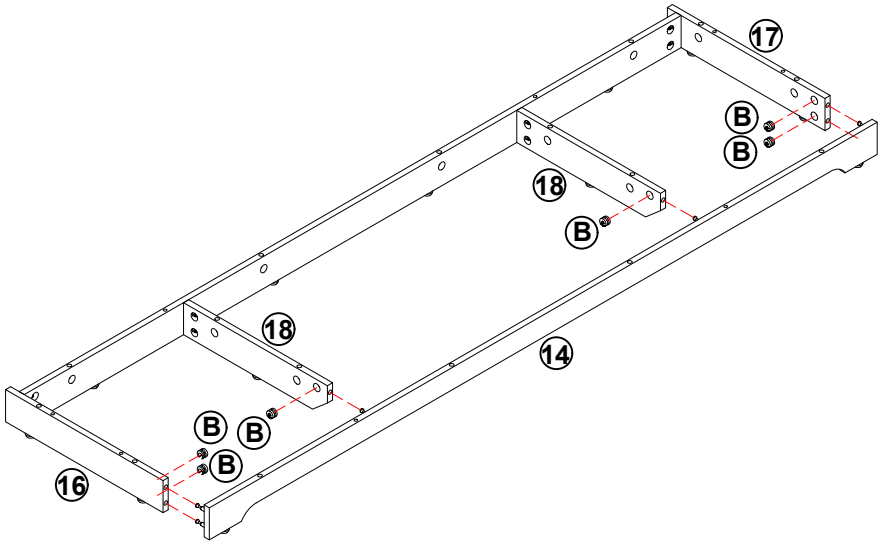





Note: the direction of the arrow.


STEP 25

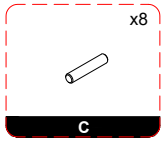


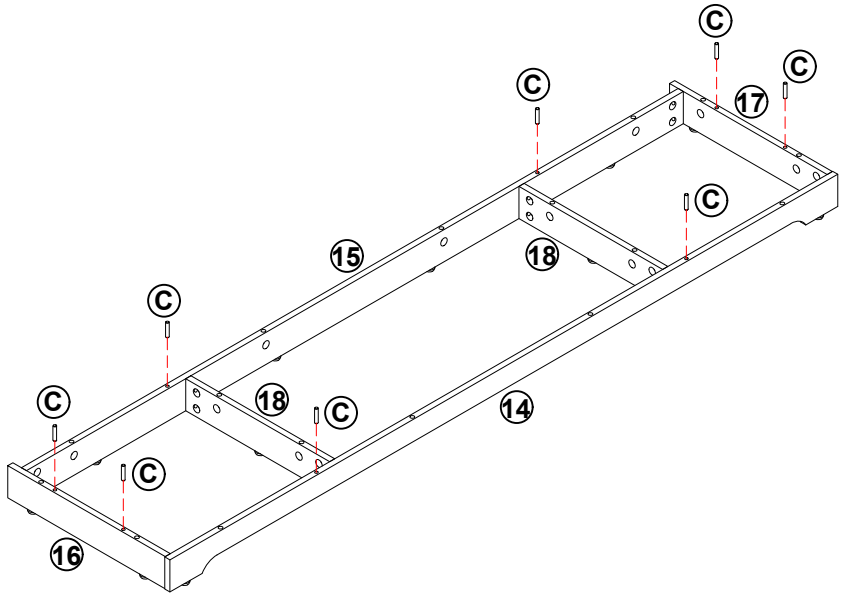


STEP 26

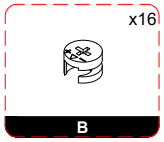

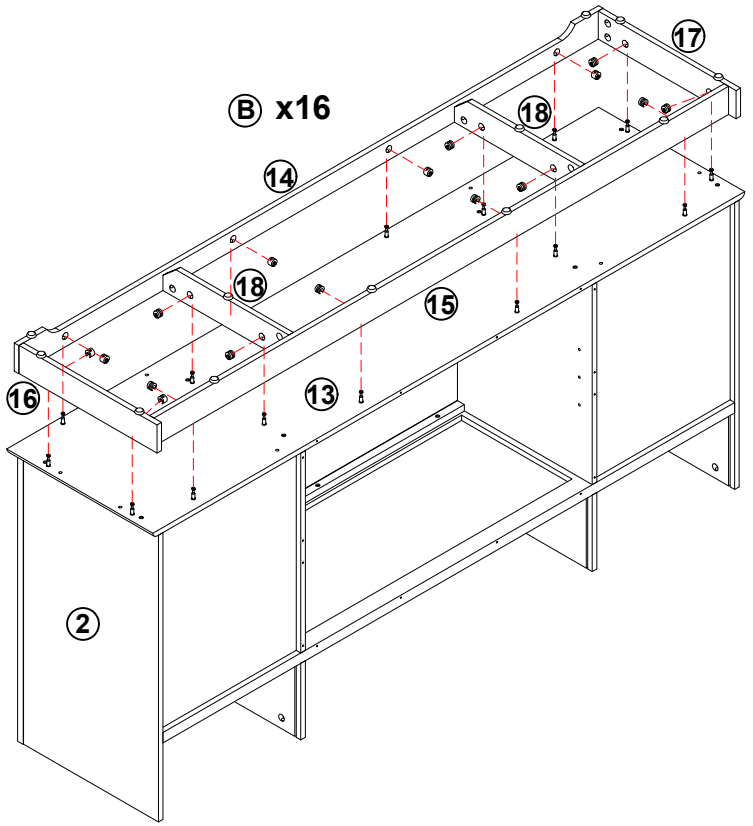








Note: the direction of the arrow.


STEP 27

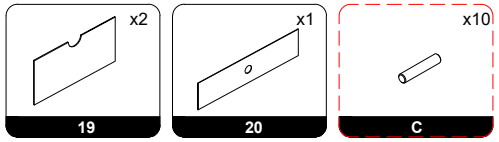

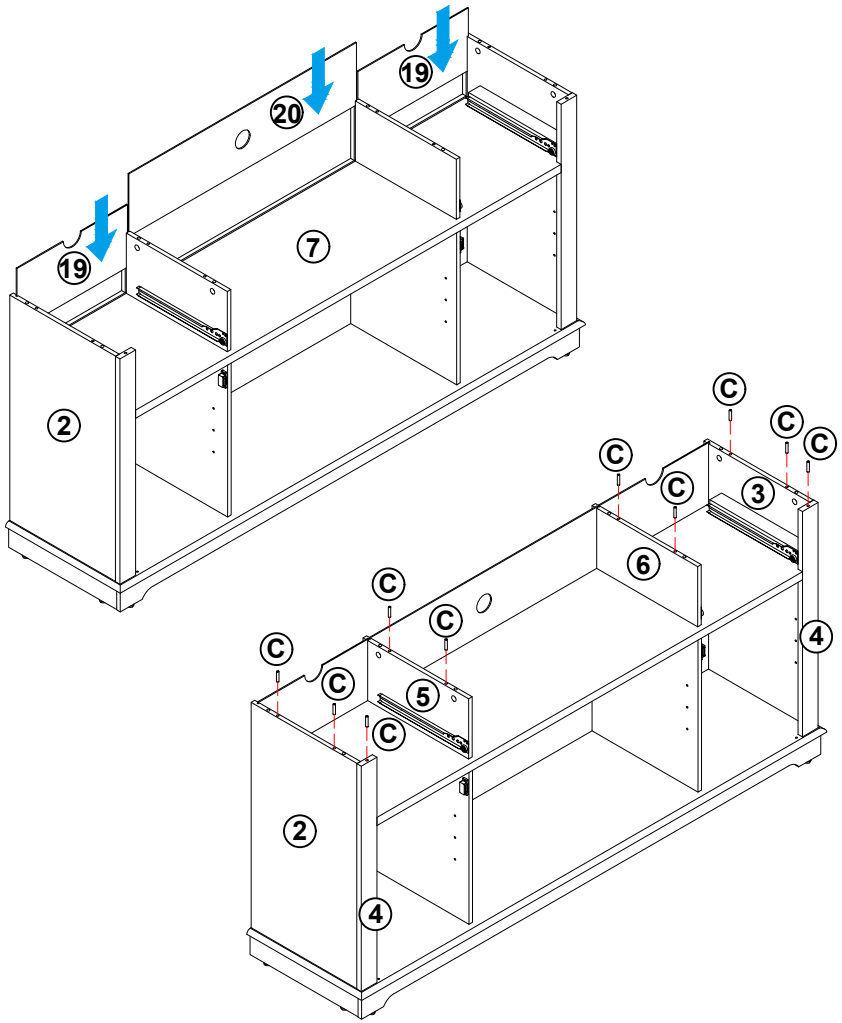



STEP 28

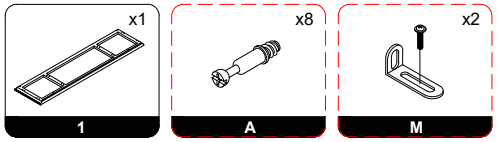


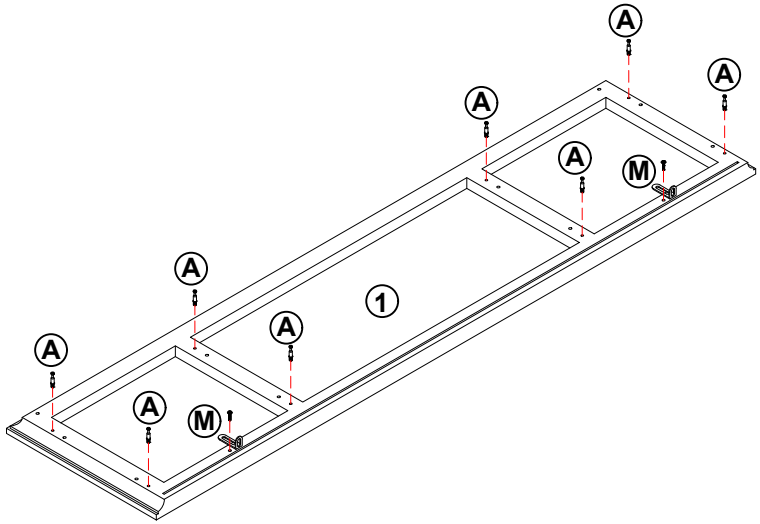

STEP 29

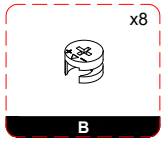


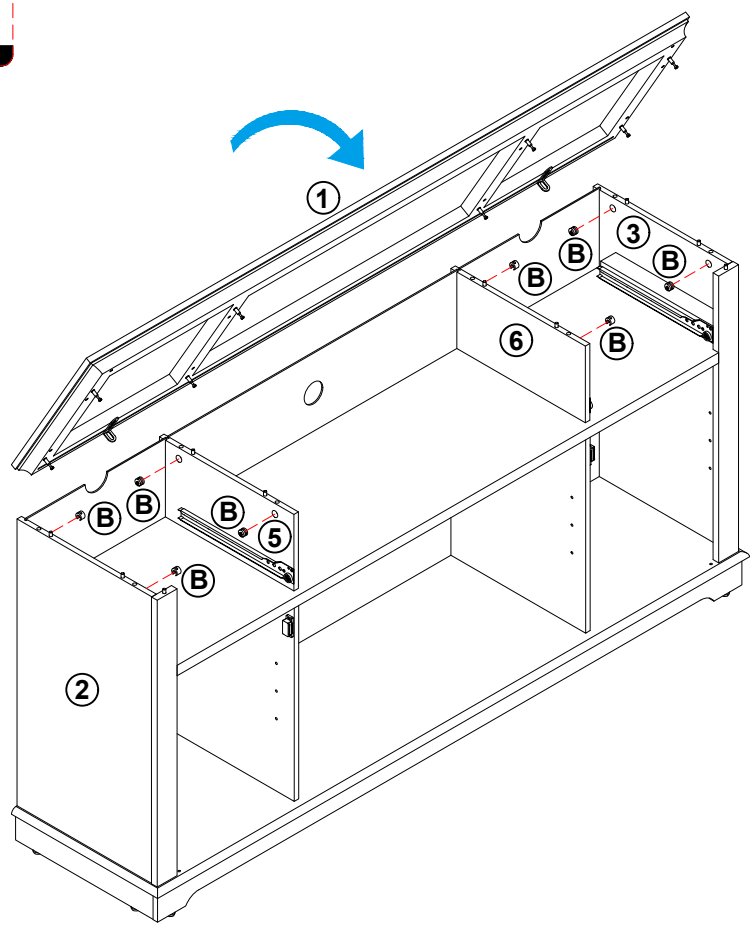






Note: the direction of the arrow.

STEP 30

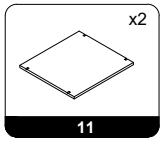


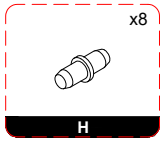


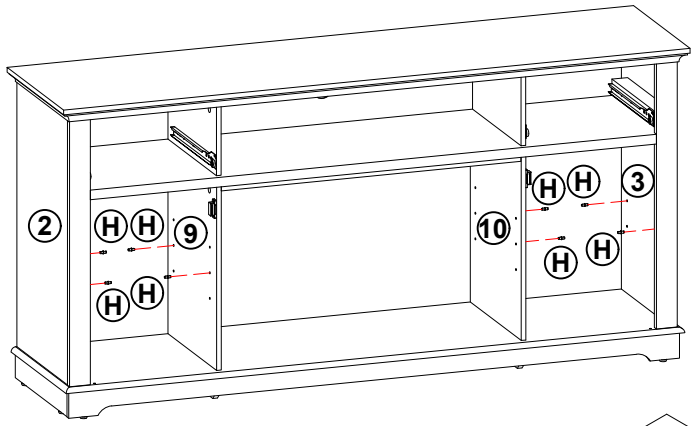

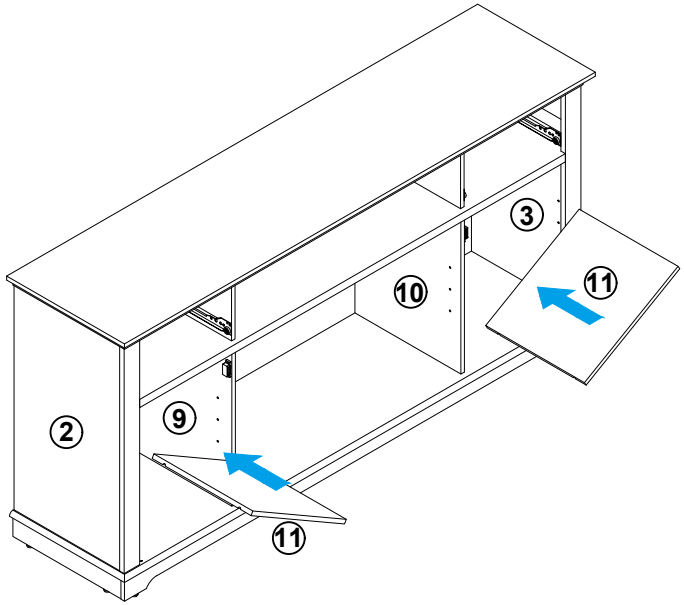



STEP 31

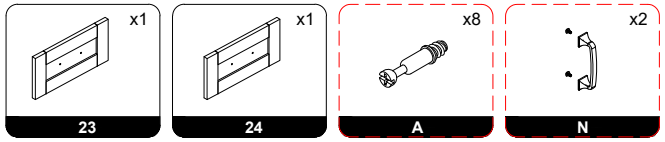

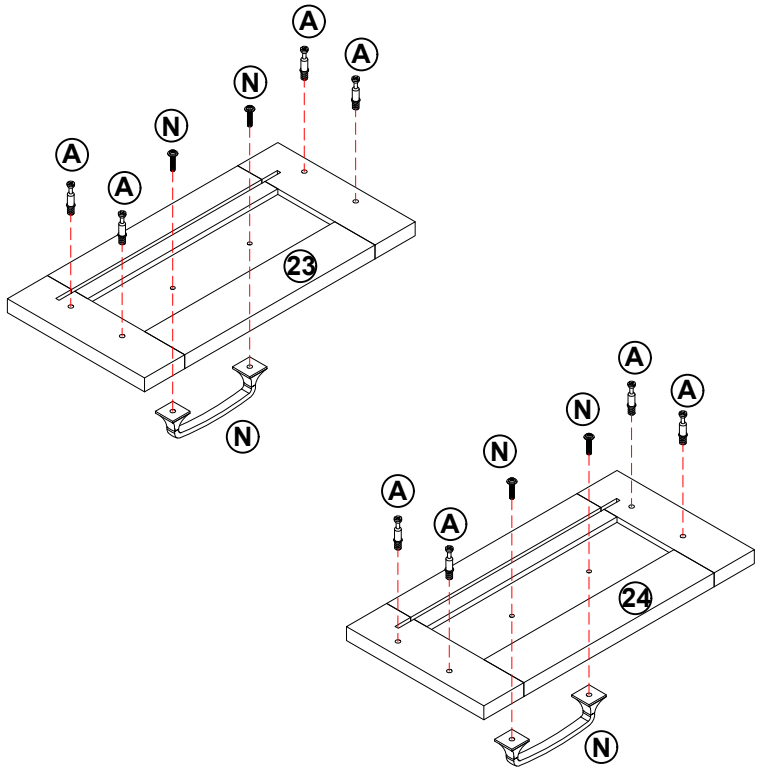


STEP 32

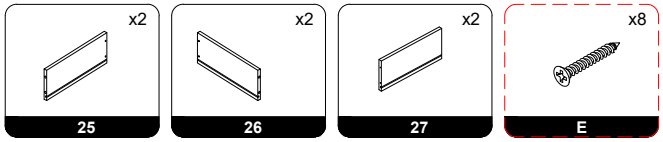


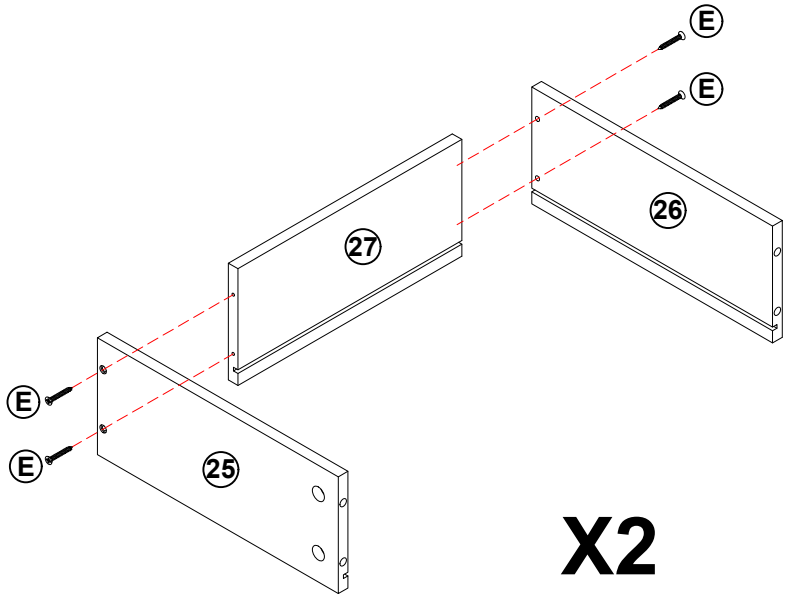

X2


STEP 33

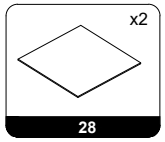


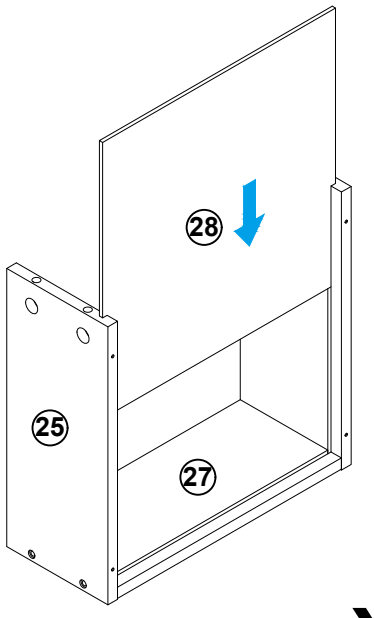


X2

STEP 34

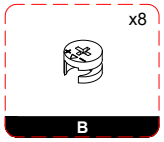


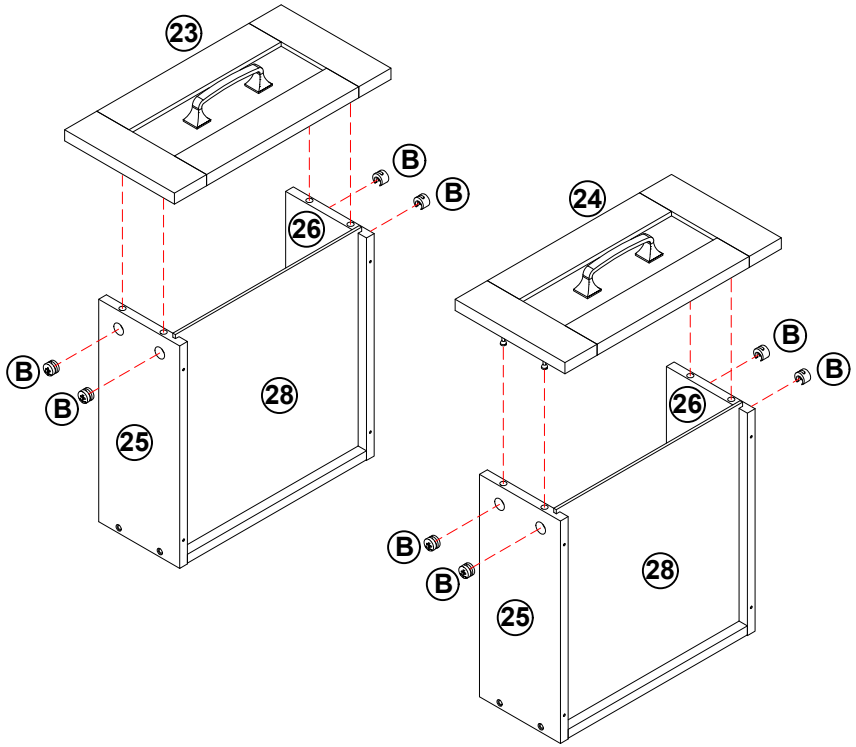




Note: the direction of the arrow.


STEP 35

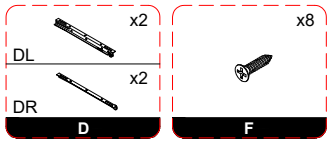

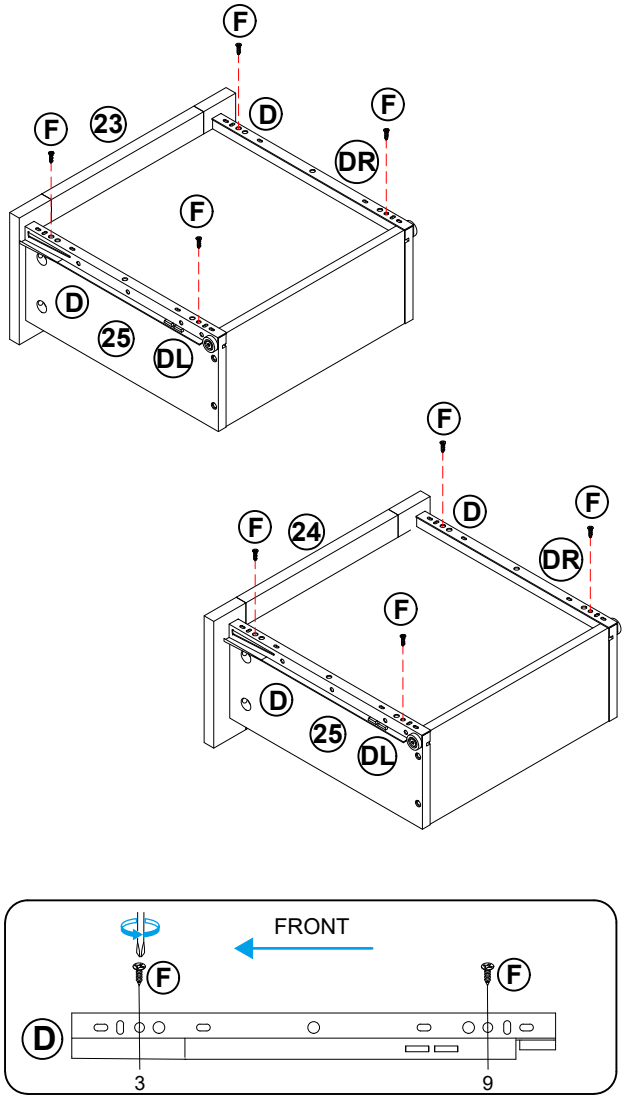



Note! Please select the subsequent installation steps based on the version you purchased:
1. Install the fireplace TV stand (from STEP 36 to STEP 41)
2. Install the TV stand (from STEP 42 to STEP 48)


STEP 36

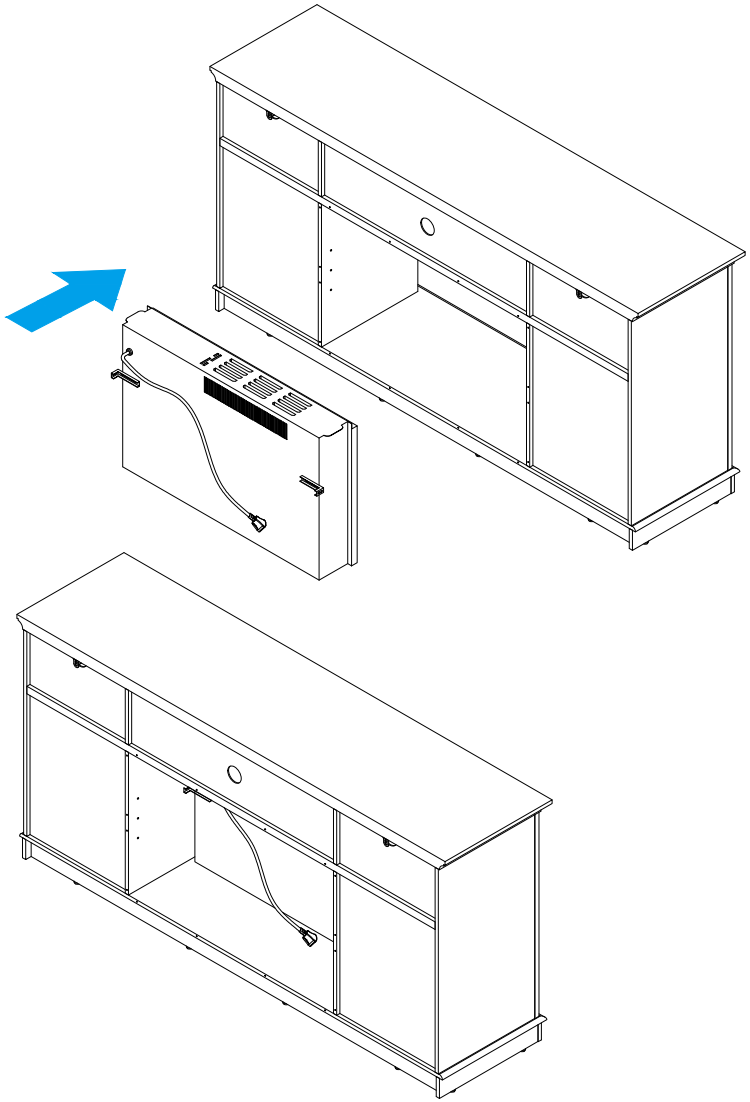


STEP 37

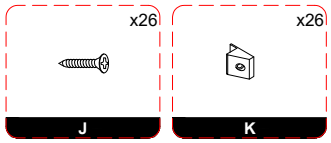


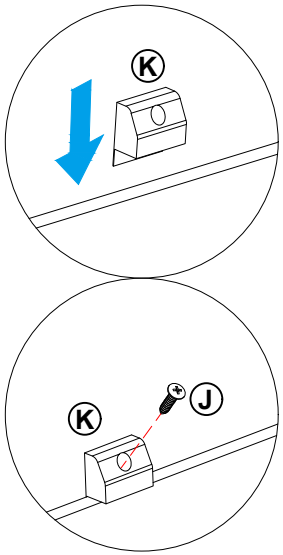

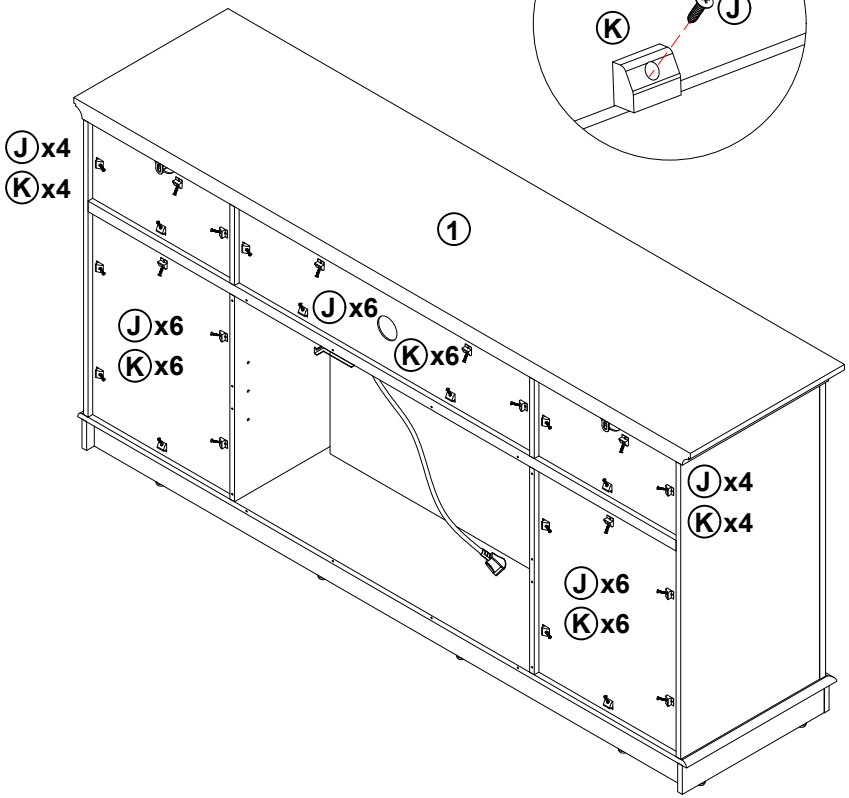

STEP 38

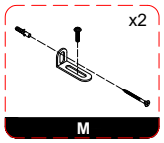

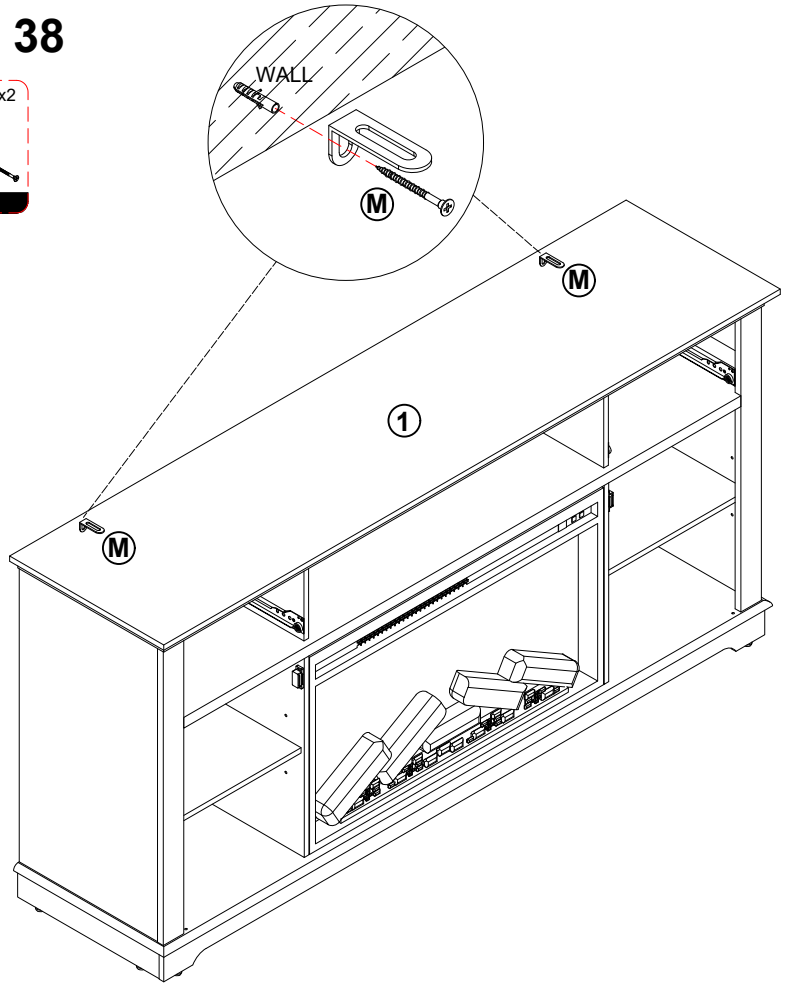

Wall Mounting Instructions


CAUTION — Risk of Furniture Tip-Over. Always anchor this furniture securely to the wall.

- Using the screws provided and a screwdriver, secure the mounting plate(s) to the back of the product .
- Noting the location of the product's mounting plate(s), mark the corresponding positions on the wall for the wall-mounted plate(s). Drill pilot holes at the marked locations into a wall stud.


NOTE:If wall studs are not available, drill holes slightly smaller than the drywall anchors. Insert each anchor until its flange is flush with the wall.


- Using a screwdriver, secure the mounting bracket(s) to the wall stud or to the drywall anchors using the screws provided.
- Place the product in its final position. Secure one end of the "L"-shaped anti-tip hardware to the wall mounting hole and the product mounting plate, adjusting to remove any slack. Do not overtighten.


STEP 39

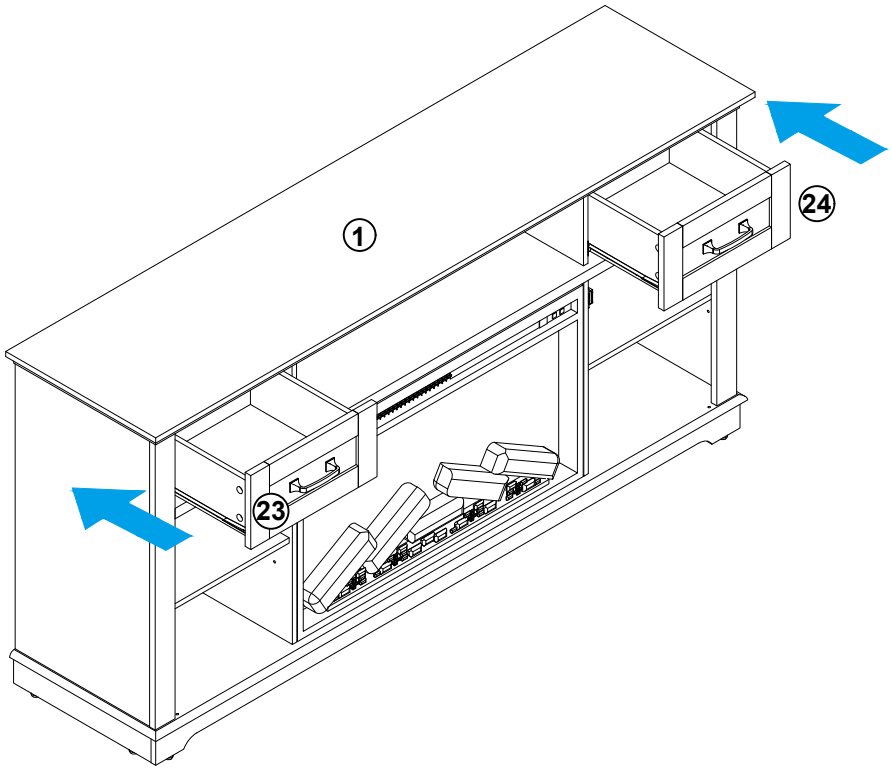


STEP 40

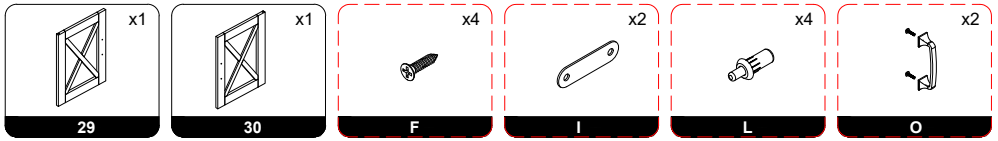

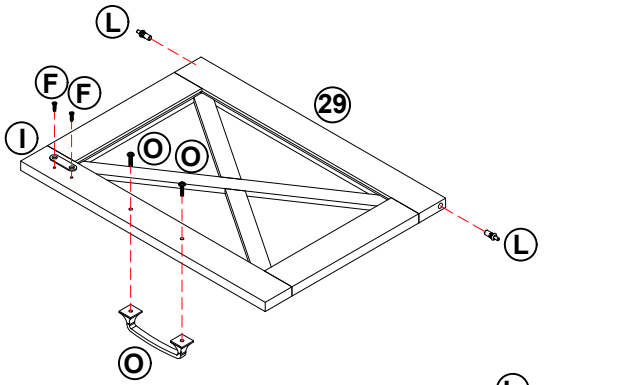


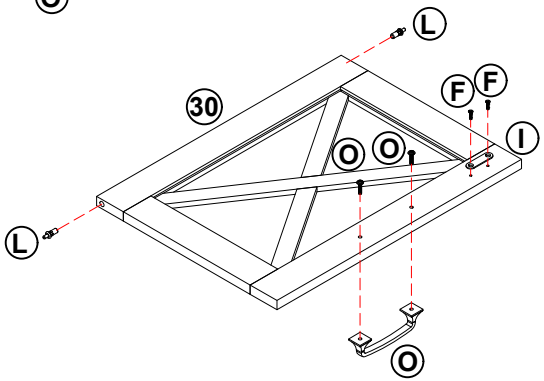


STEP 41

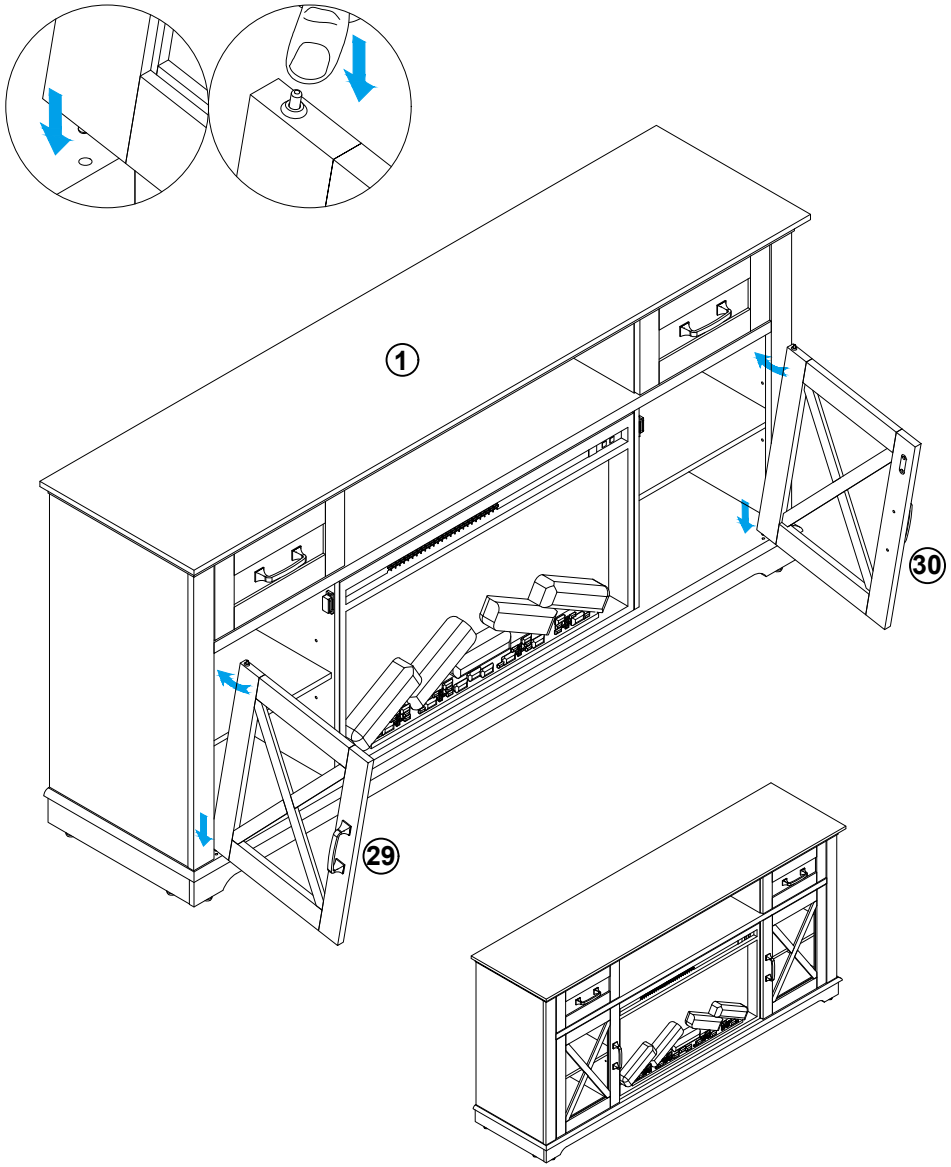



STEP 42

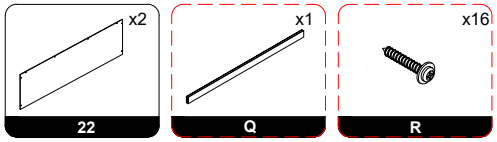


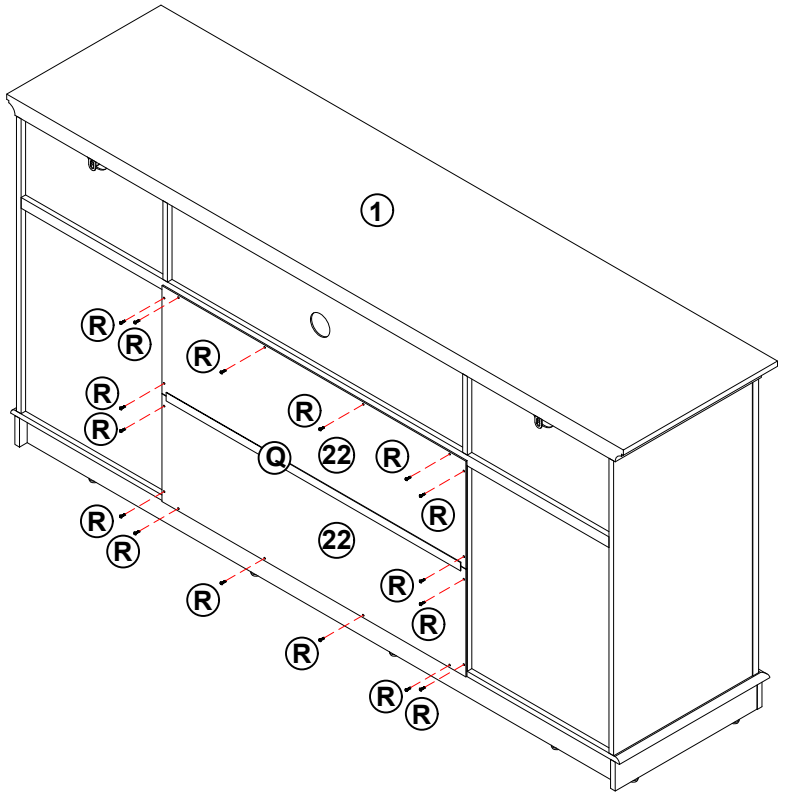


STEP 43

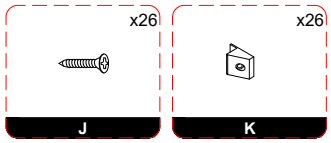


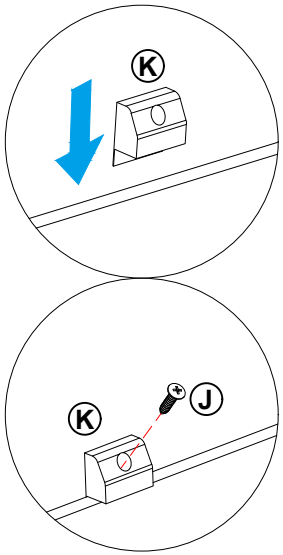

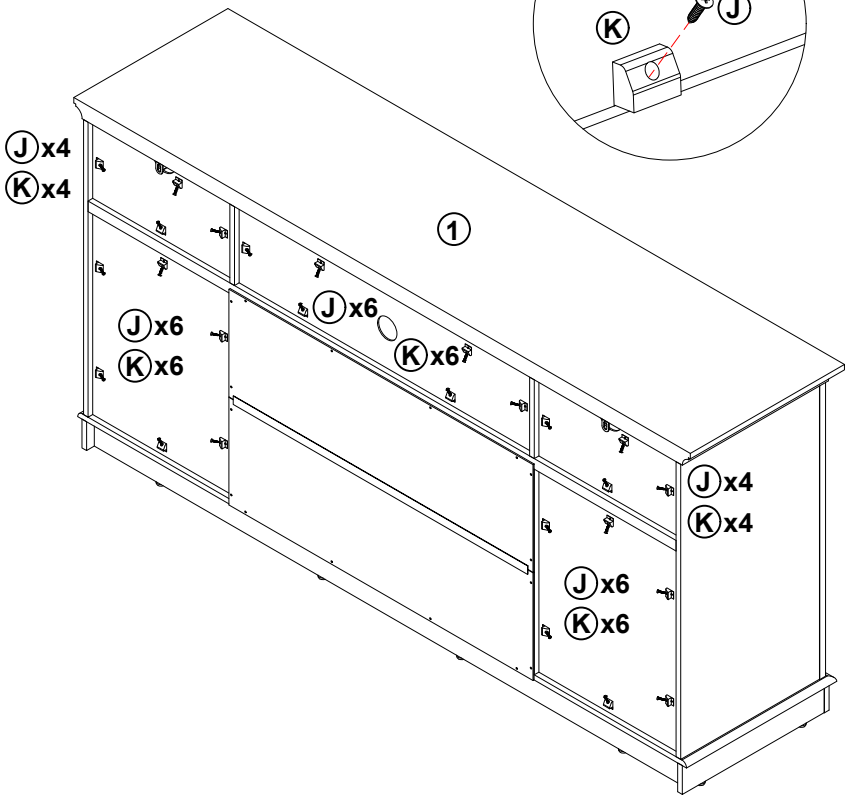

STEP 44

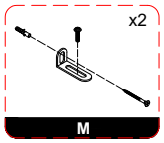

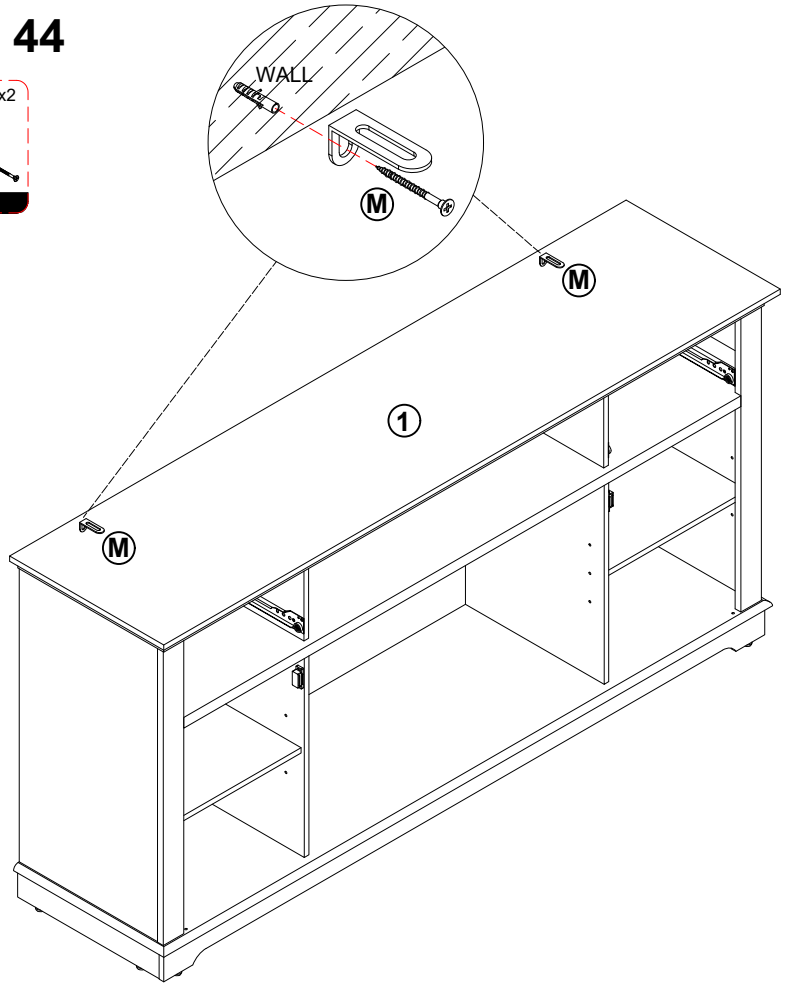

Wall Mounting Instructions


CAUTION — Risk of Furniture Tip-Over. Always anchor this furniture securely to the wall.


- Using the screws provided and a screwdriver, secure the mounting plate(s) to the back of the product .
- Noting the location of the product's mounting plate(s), mark the corresponding positions on the wall for the wall-mounted plate(s). Drill pilot holes at the marked locations into a wall stud.

NOTE:If wall studs are not available, drill holes slightly smaller than the drywall anchors. Insert each anchor until its flange is flush with the wall.


- Using a screwdriver, secure the mounting bracket(s) to the wall stud or to the drywall anchors using the screws provided.
- Place the product in its final position. Secure one end of the "L"-shaped anti-tip hardware to the wall mounting hole and the product mounting plate, adjusting to remove any slack. Do not overtighten.

STEP 45

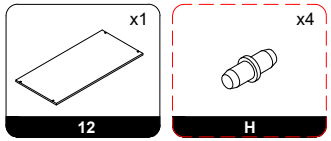


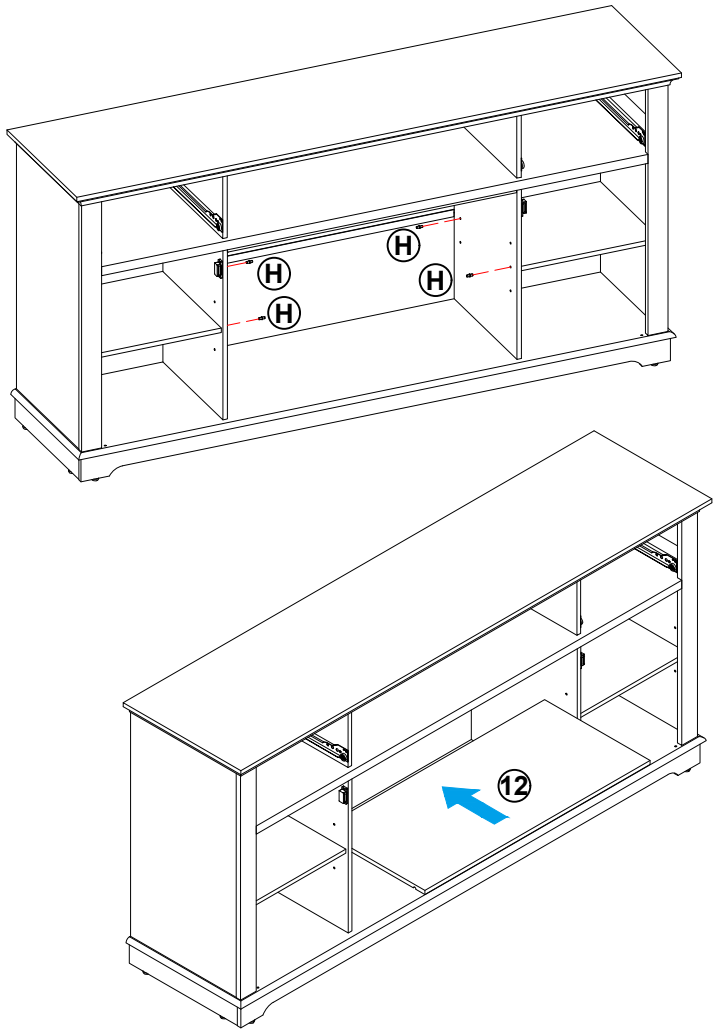



STEP 46

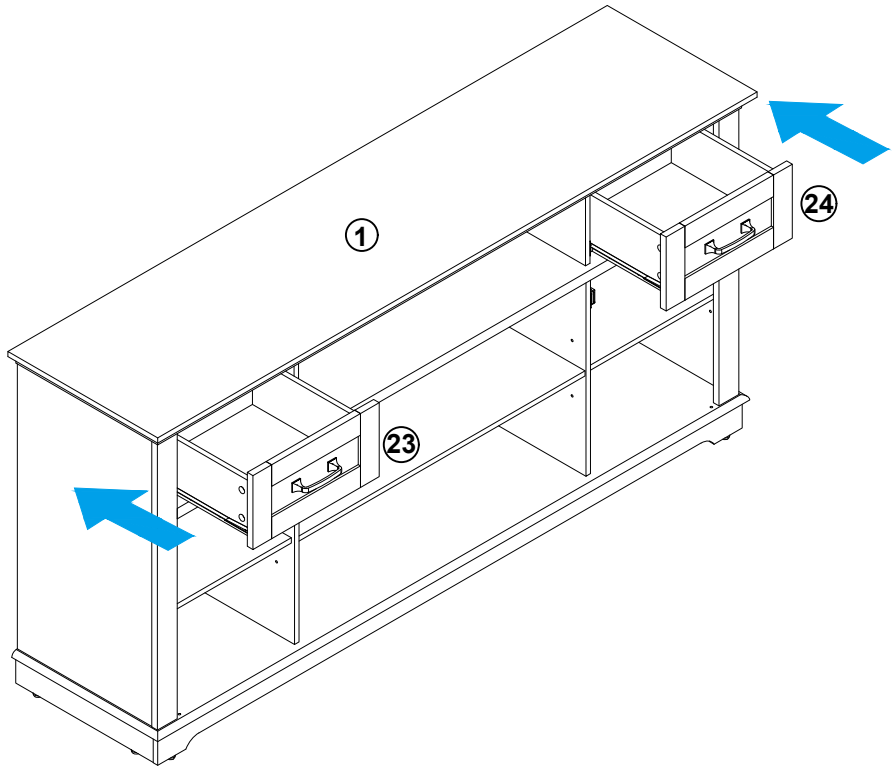


STEP 47

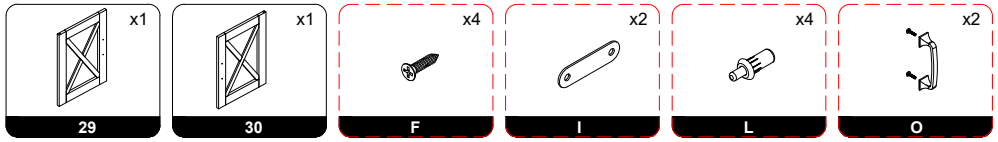


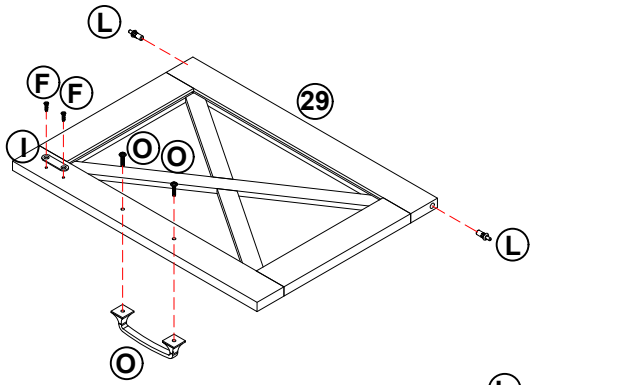


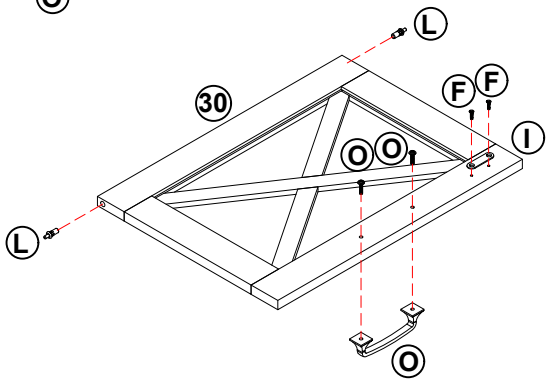

STEP 48

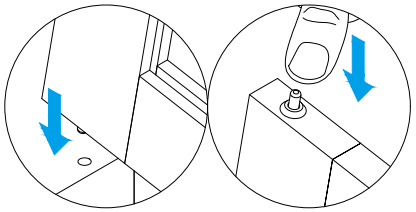

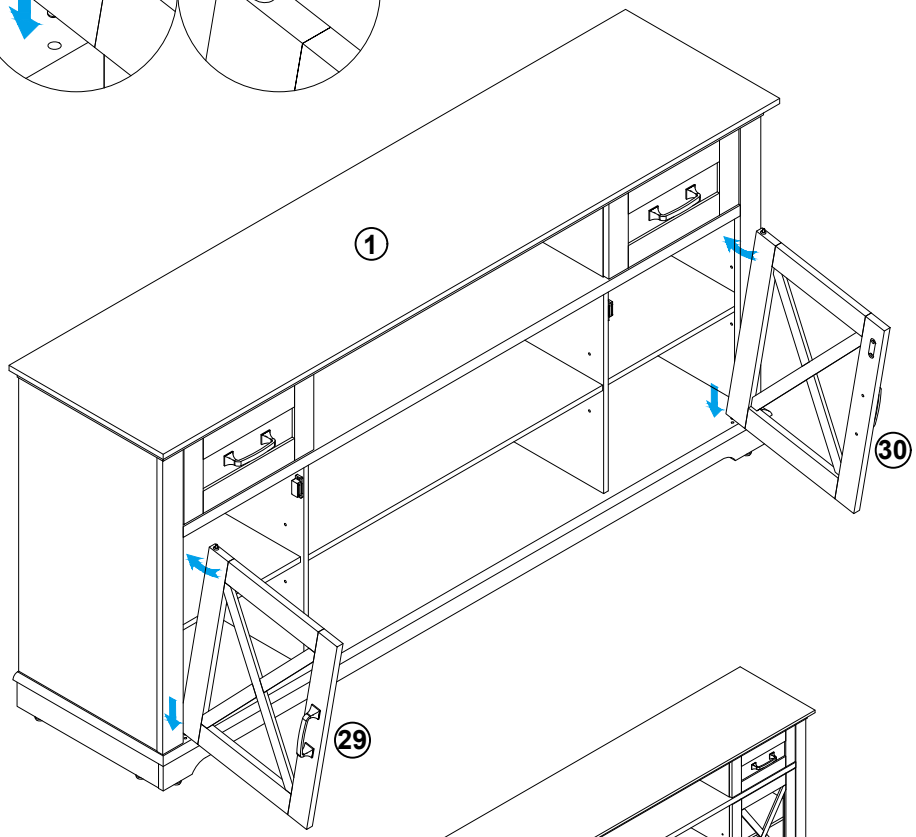

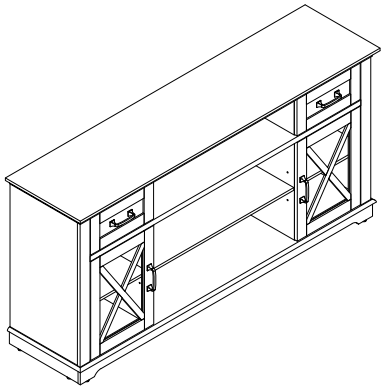

MAINTENANCE

- Wipe the surface with a soft, damp cloth and dry immediately.
- Avoid using chemical cleaners, solvents, or abrasive pads that could damage the finish.
- Do not place hot, wet, or heavy items directly on the surface.
- Keep the furniture away from direct sunlight and excessive humidity to prevent warping or discoloration.
- Check and tighten all screws periodically to maintain stability.

Warranty & Support

Limited Warranty

This product is backed by a limited warranty that covers manufacturing defects under normal household use.

Customer Service

If you have received a damaged product or are missing parts, please contact us directly for assistance. Do not return the product to the store. When contacting us, please provide the following information:

- Order number or proof of purchase
- Clear photos showing the issue or damaged parts
- Product model number (as listed in this manual)

✉️ Email: info@serviceprohelp.com

We will respond promptly with instructions for replacement parts or other solutions.

Thank you for choosing our product. Enjoy your new furniture!