

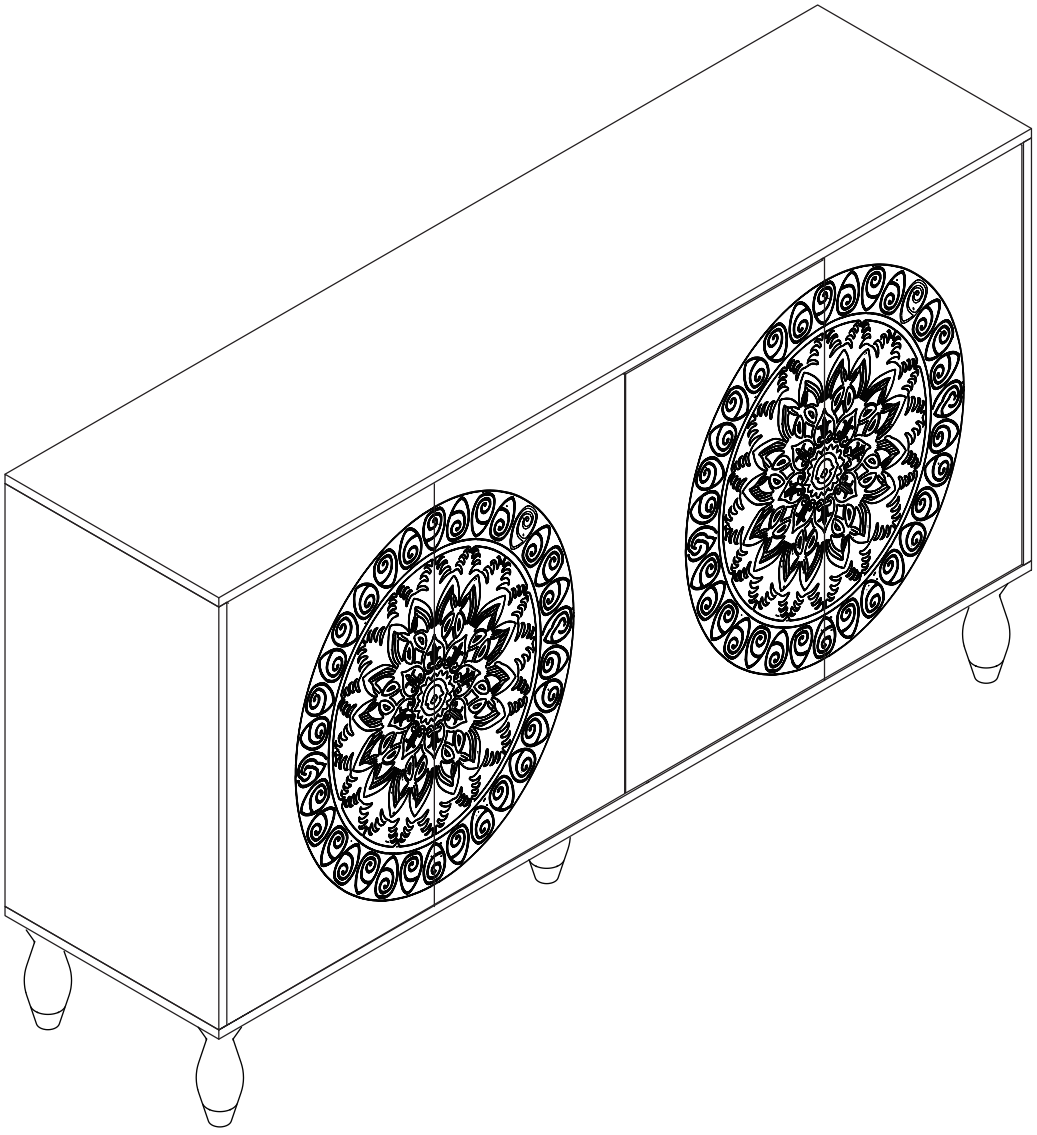
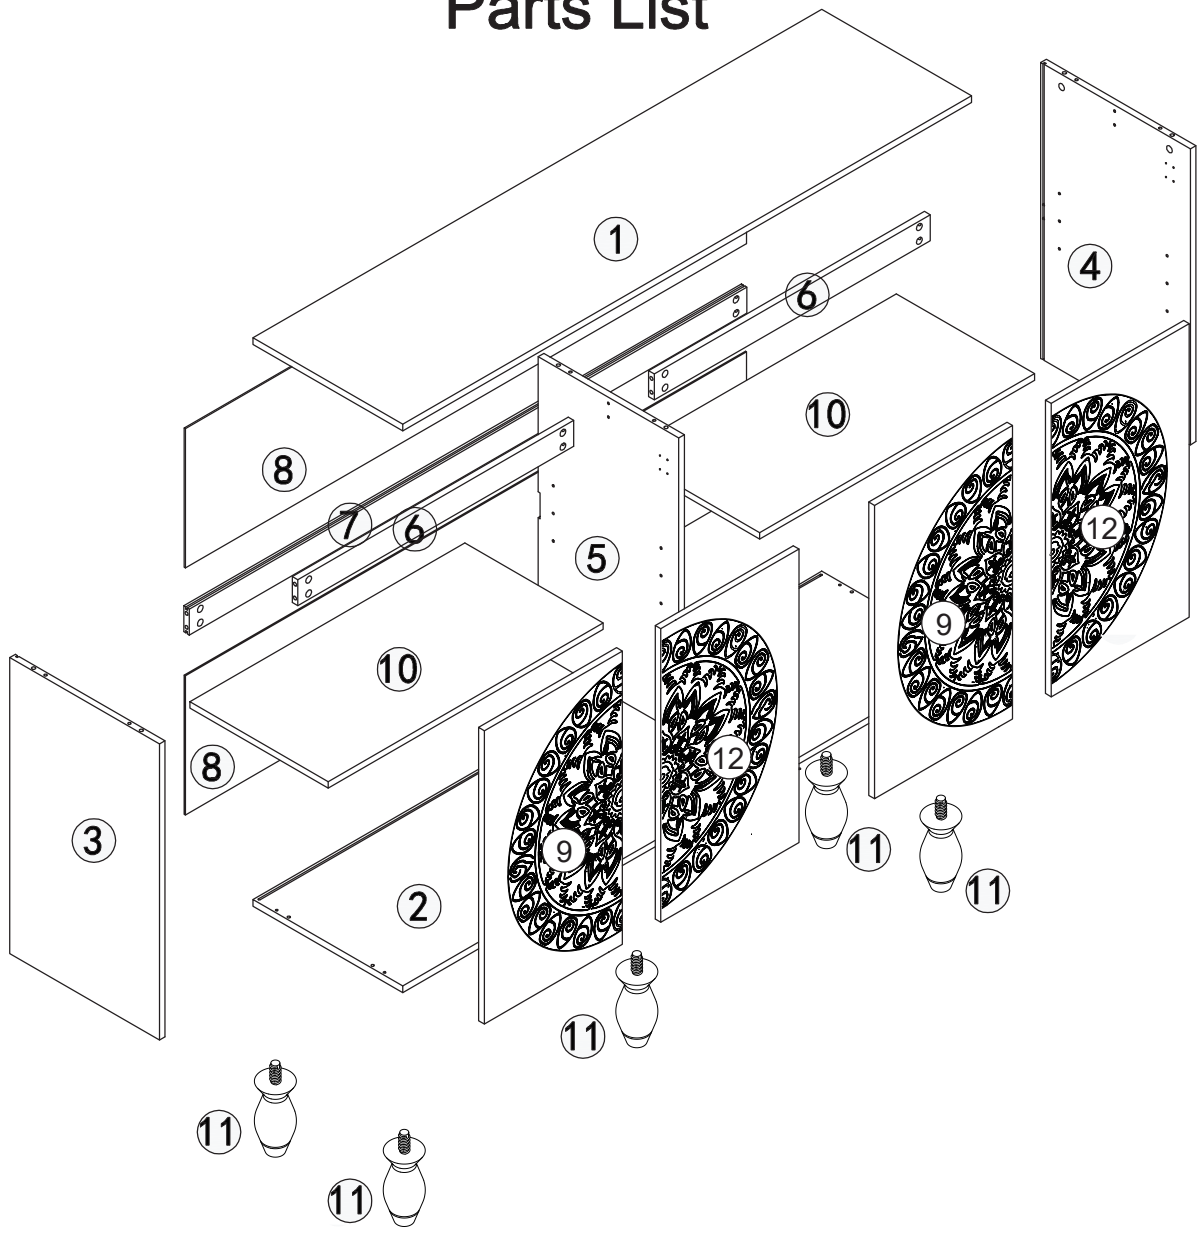



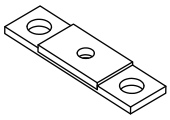
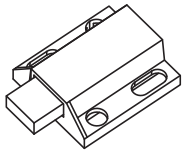
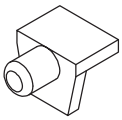




Parts List




W  8pcs	A  18pcs	B  18pcs	C  12pcs	D  72pcs
E  4pcs	F  12pcs	G  4pcs	H  4pcs	I  8pcs
J  1pc	K  12pcs	L  4pcs		


Step 1:

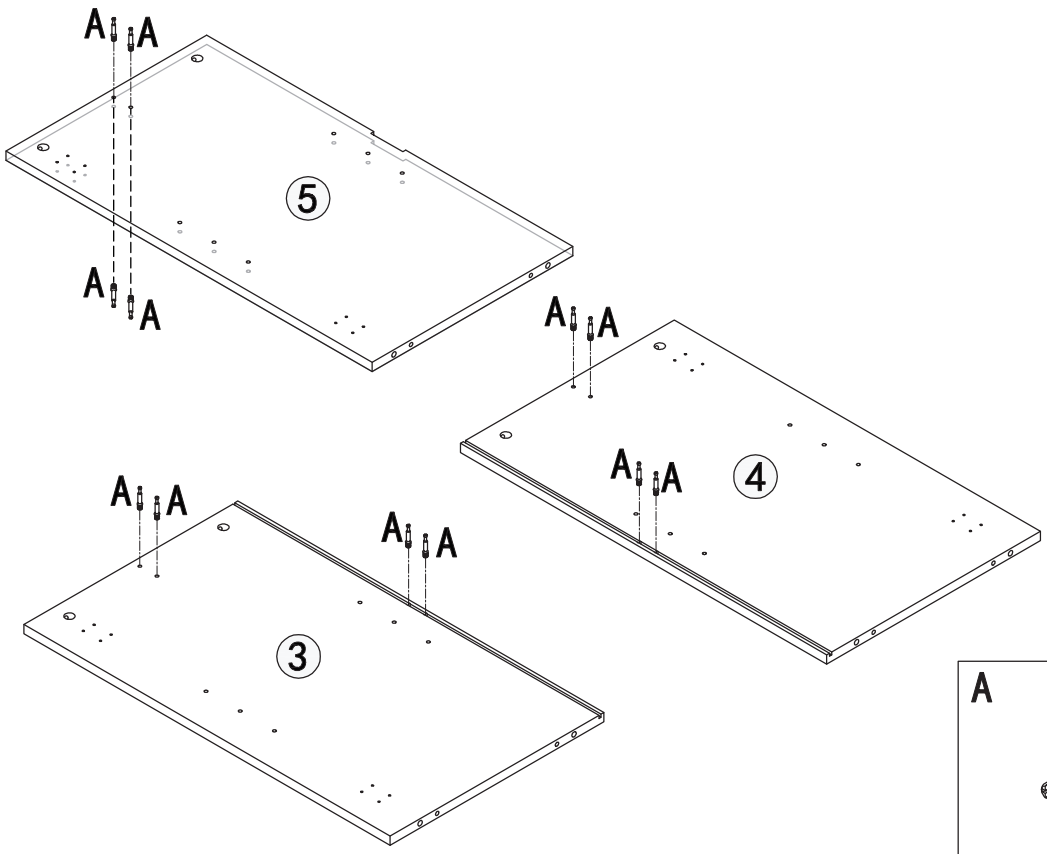

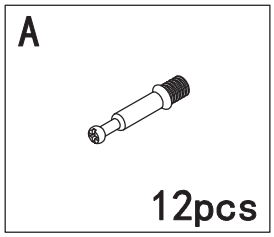



Step 2:

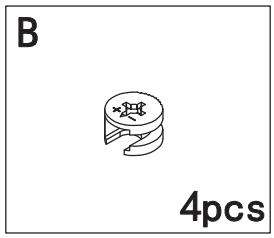

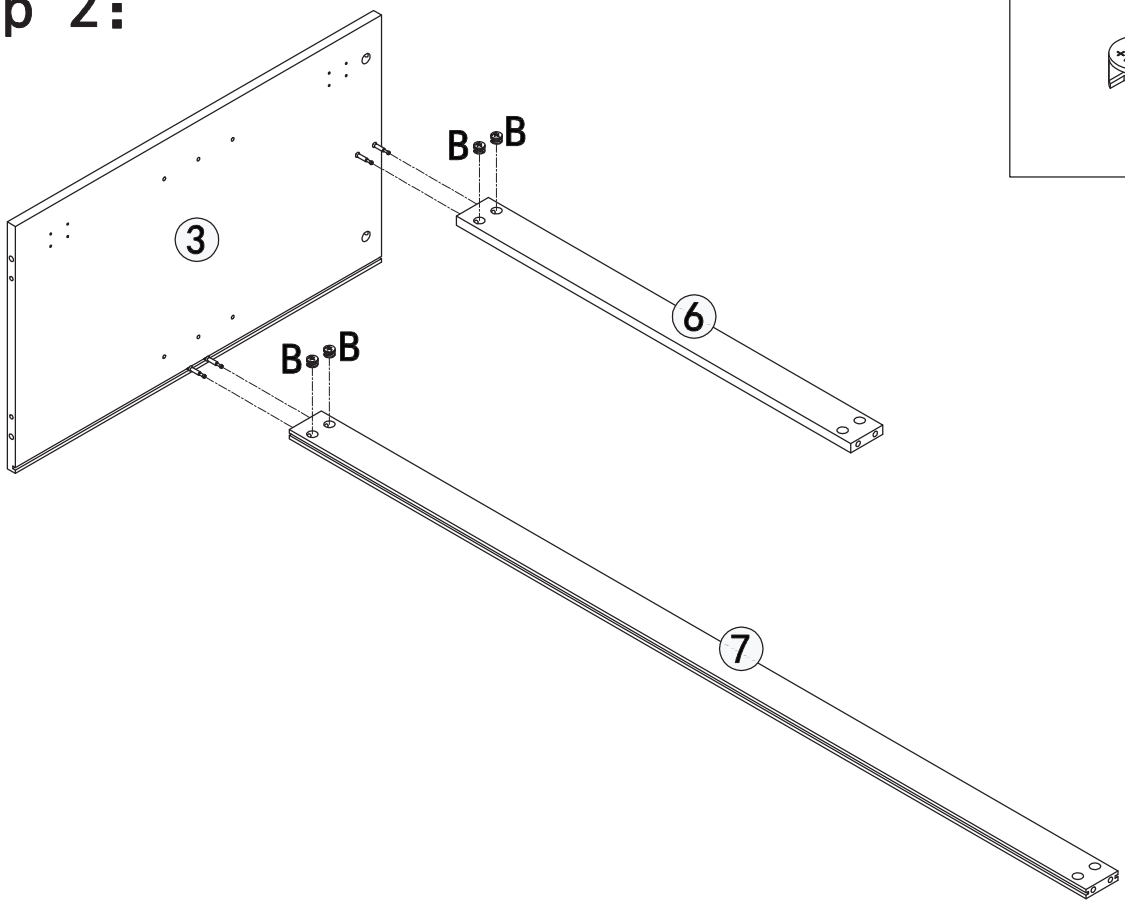



Step 3:

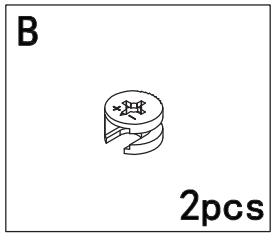

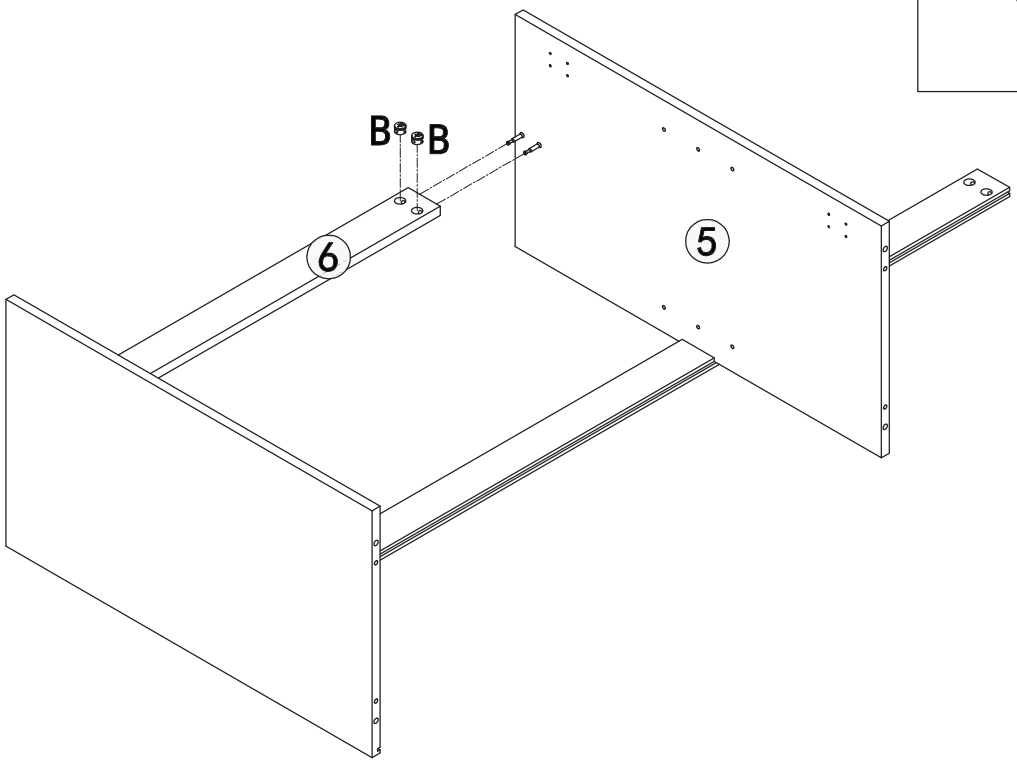



Step 4:

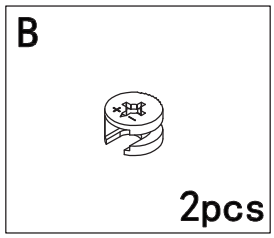

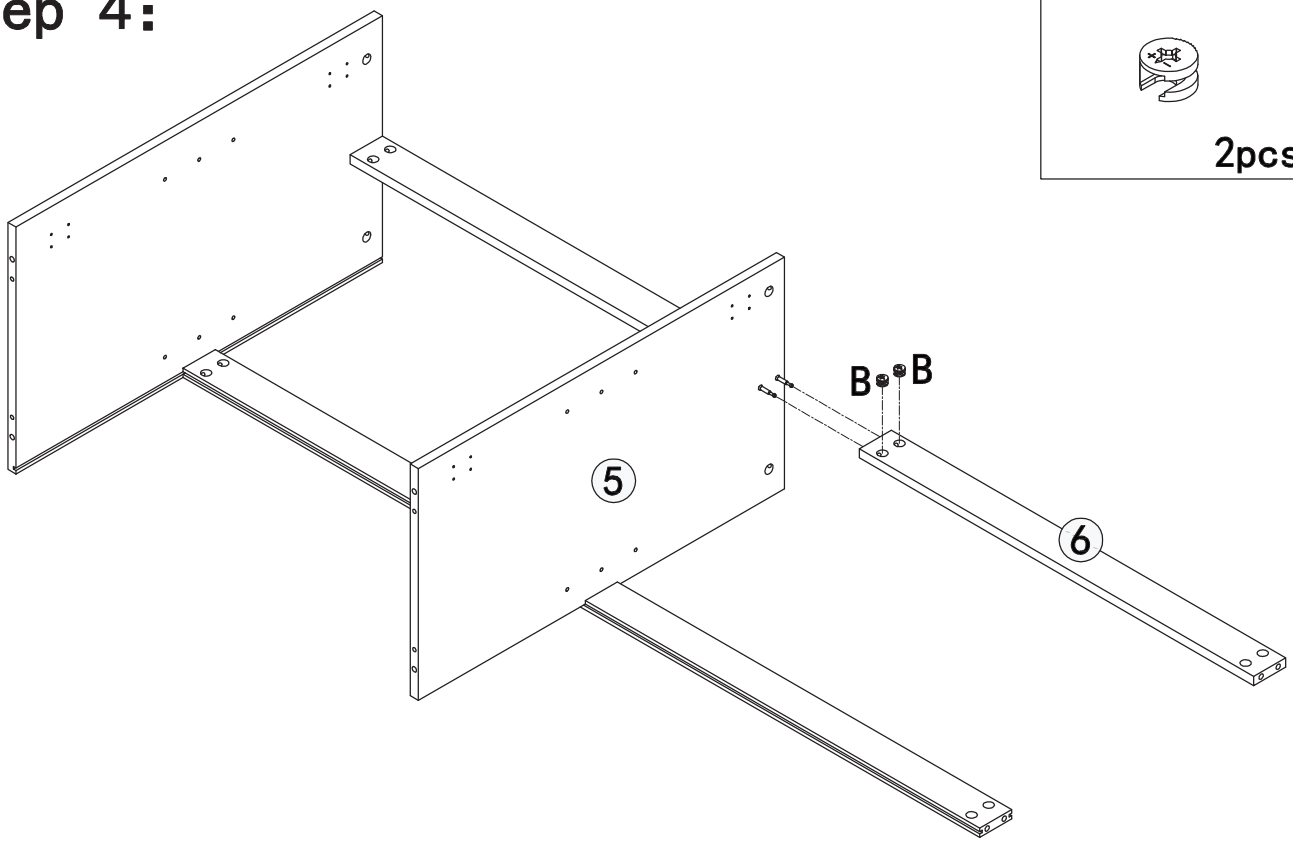


Step 5:

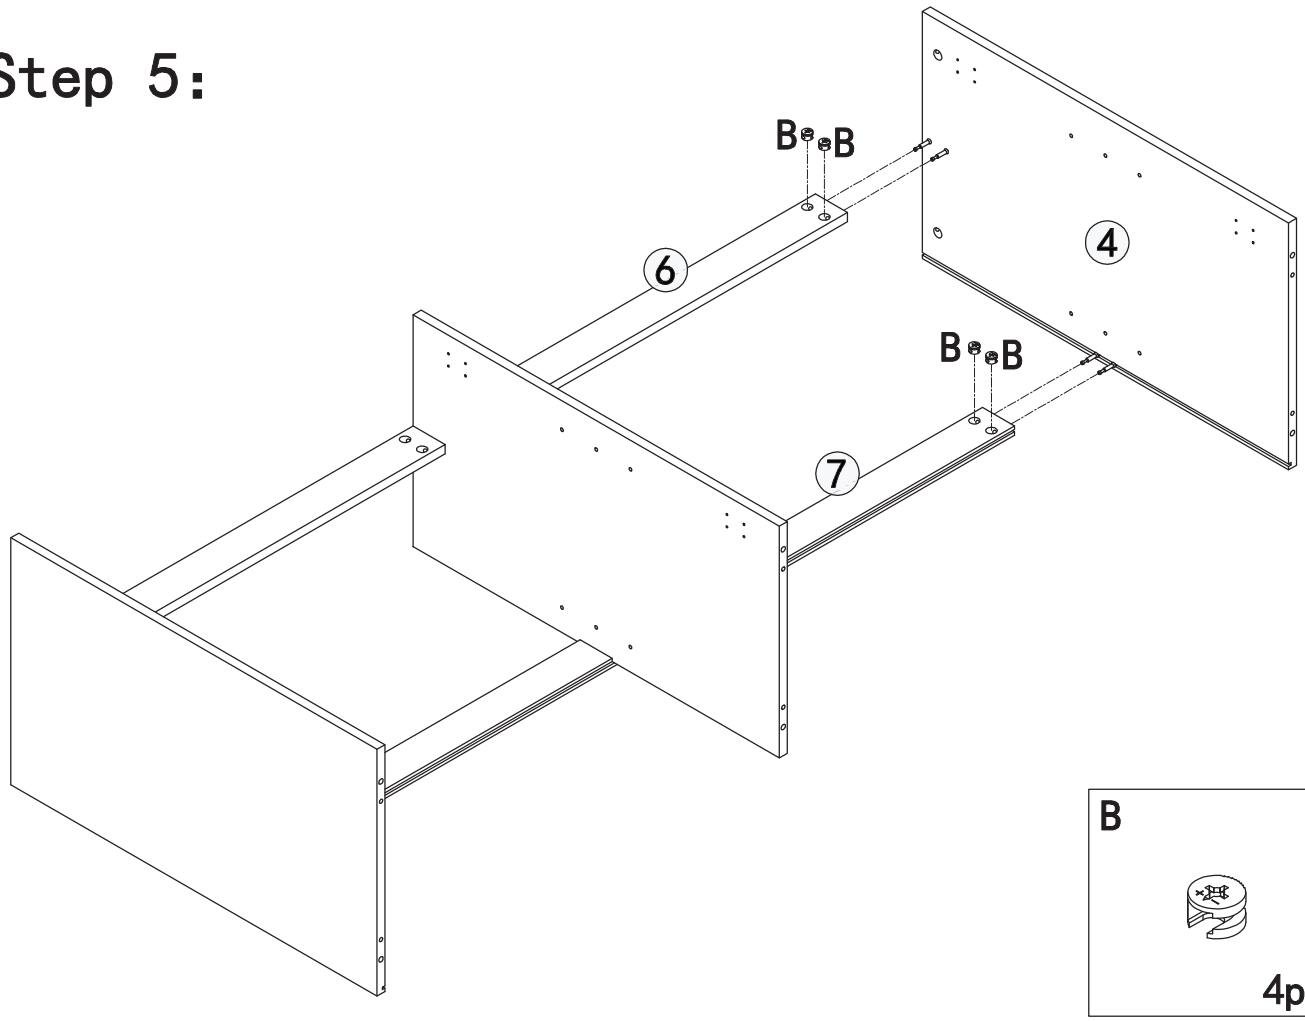


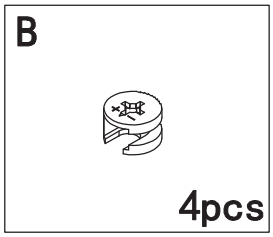

Step 6:

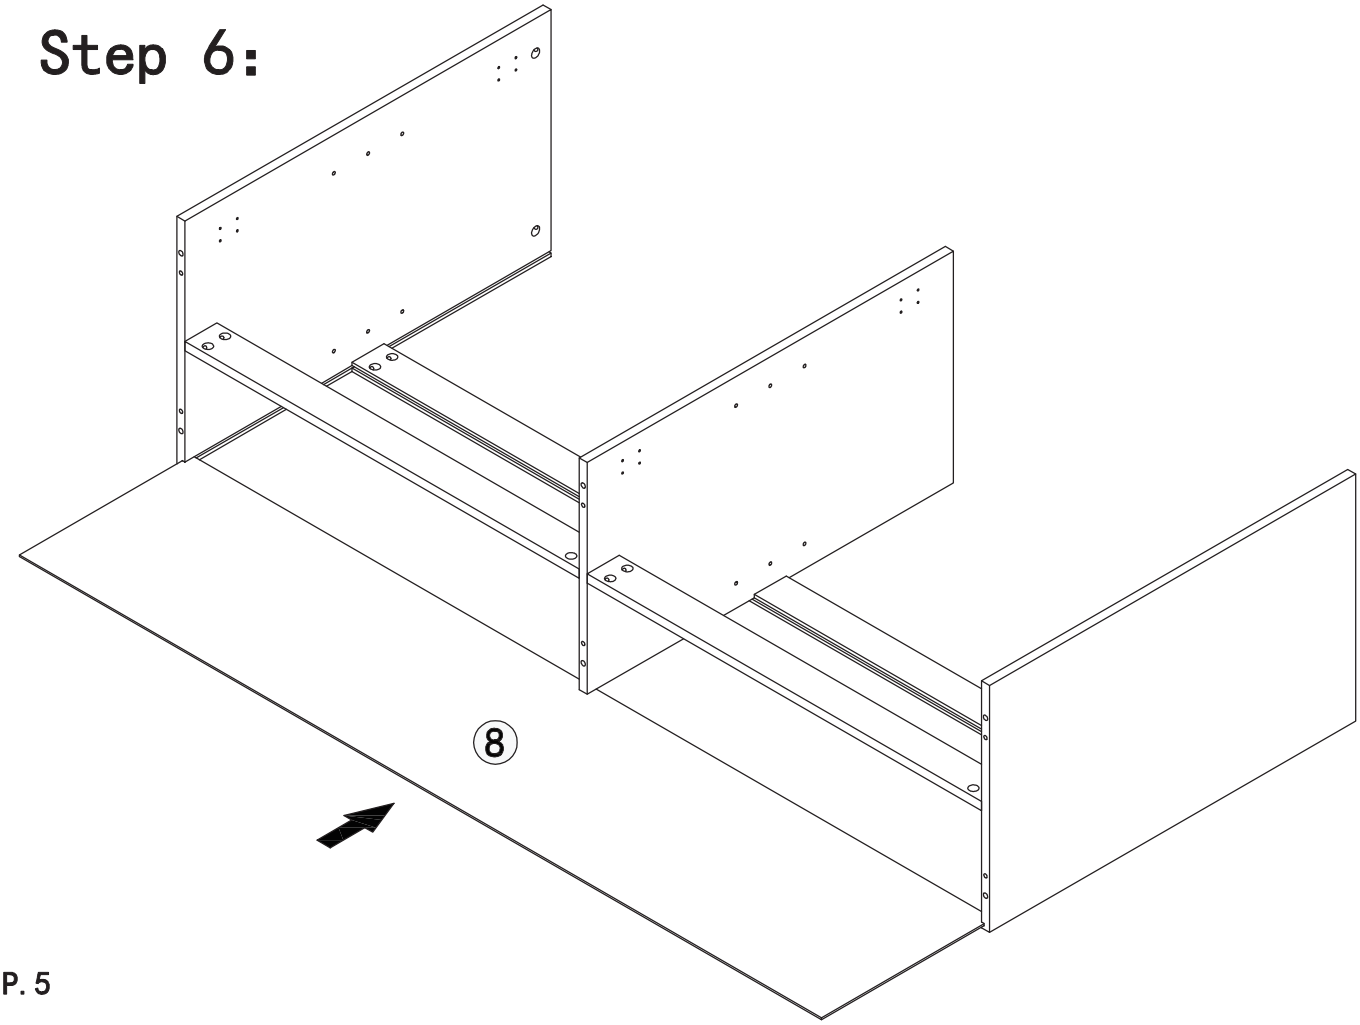

Step 7:

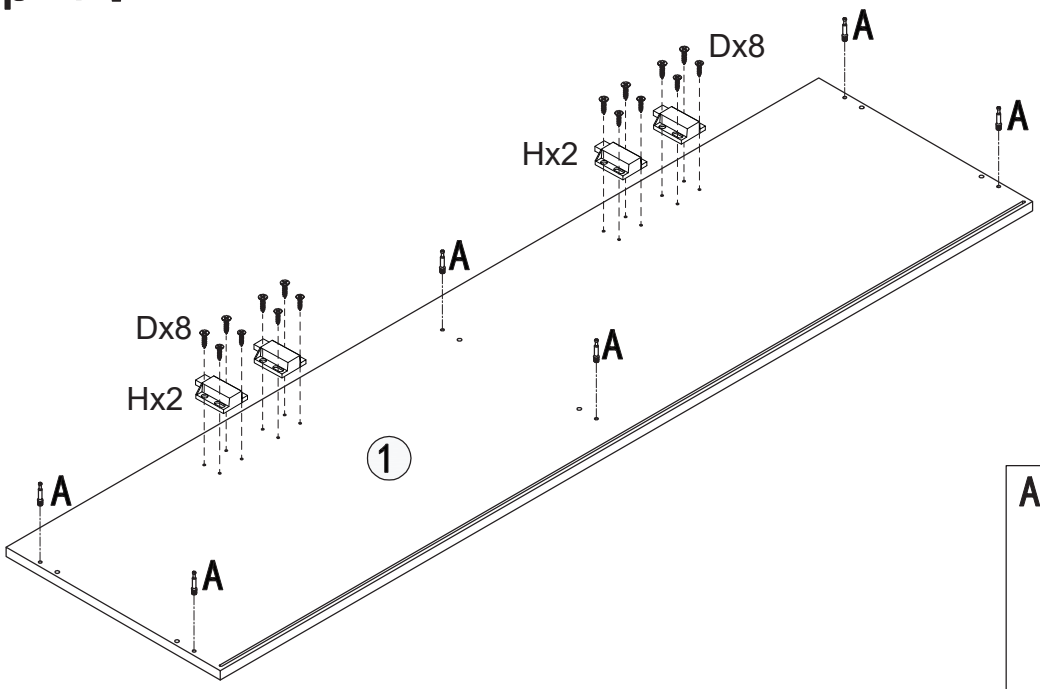


A	
	6 pcs

D	H
16 pcs	4 pcs


4

Step 8:

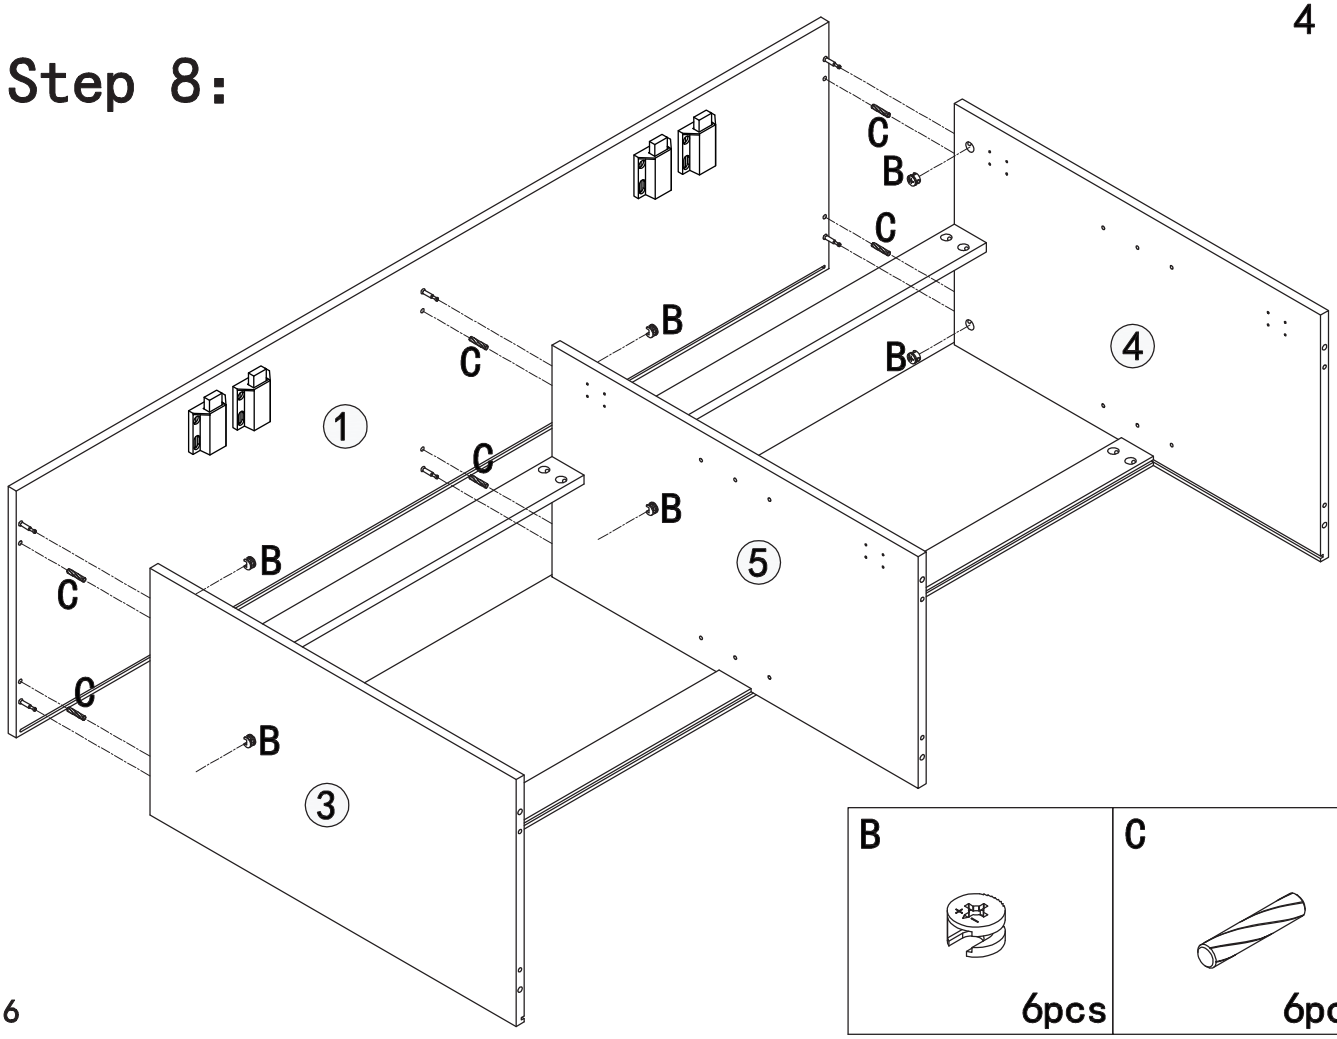




B	C
6pcs	6pcs

Step 9:

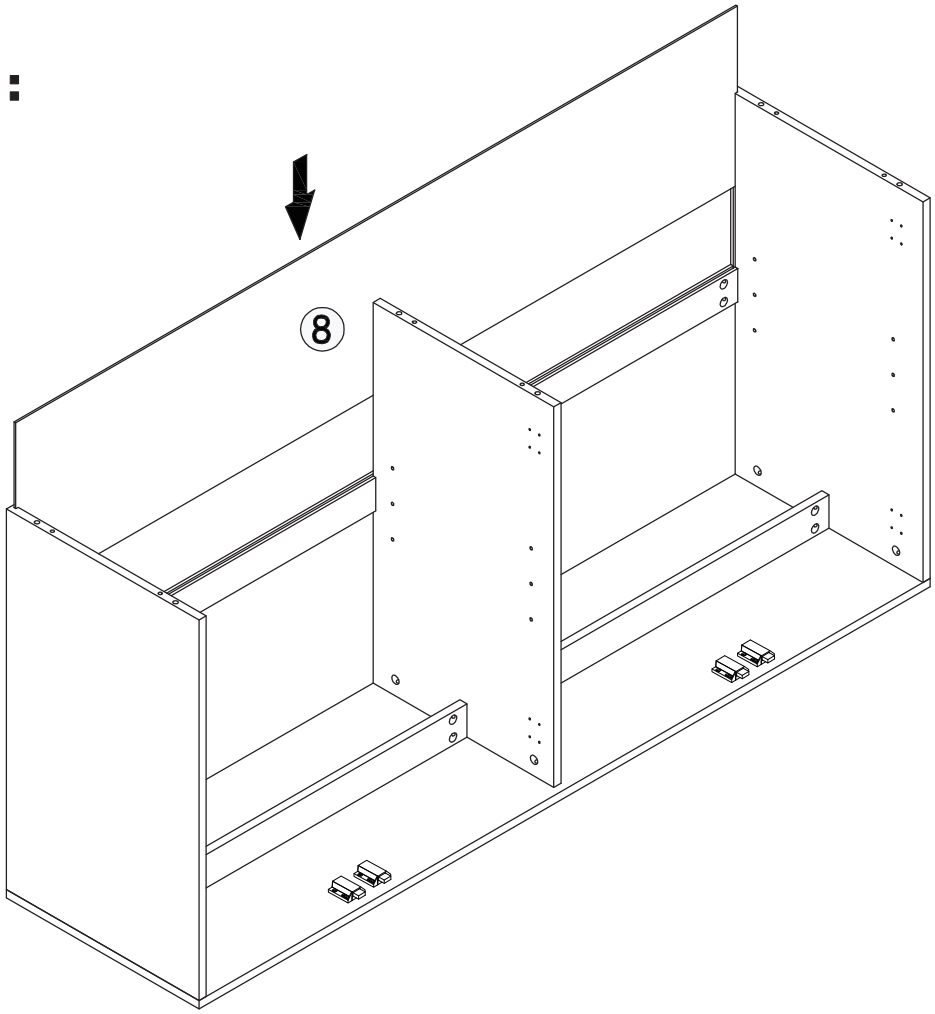


Step 10:

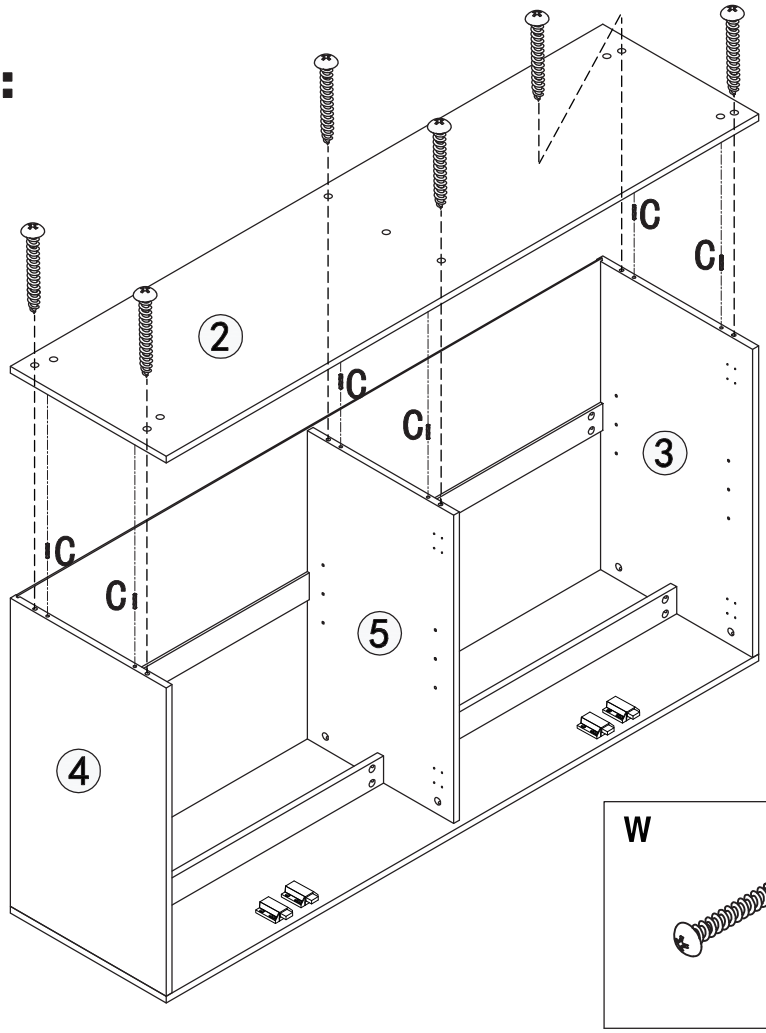


W	C
	
6pcs	6pcs


Step 11:

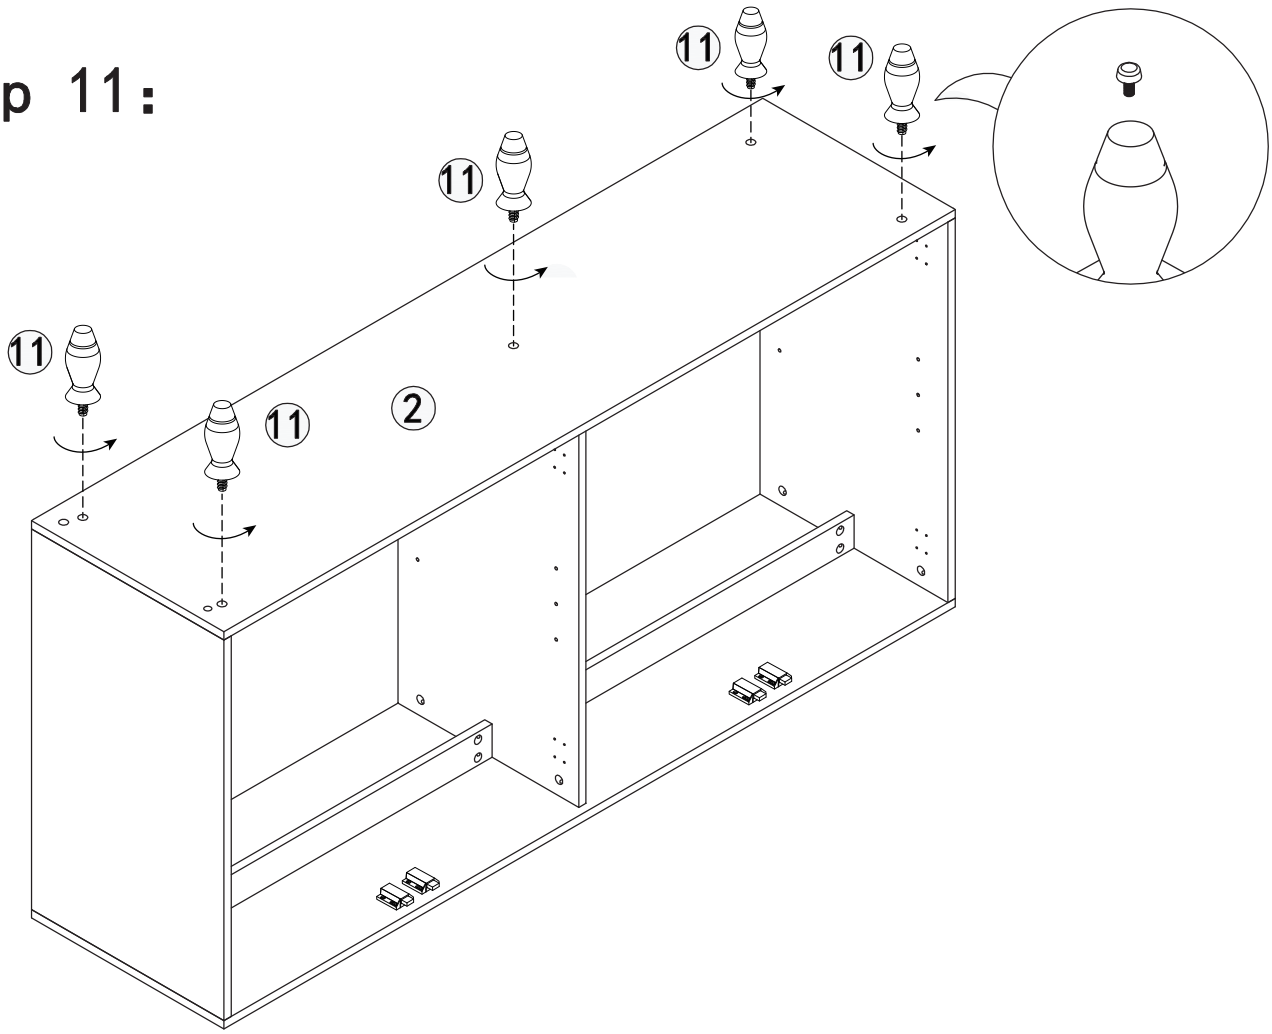

Step 12:

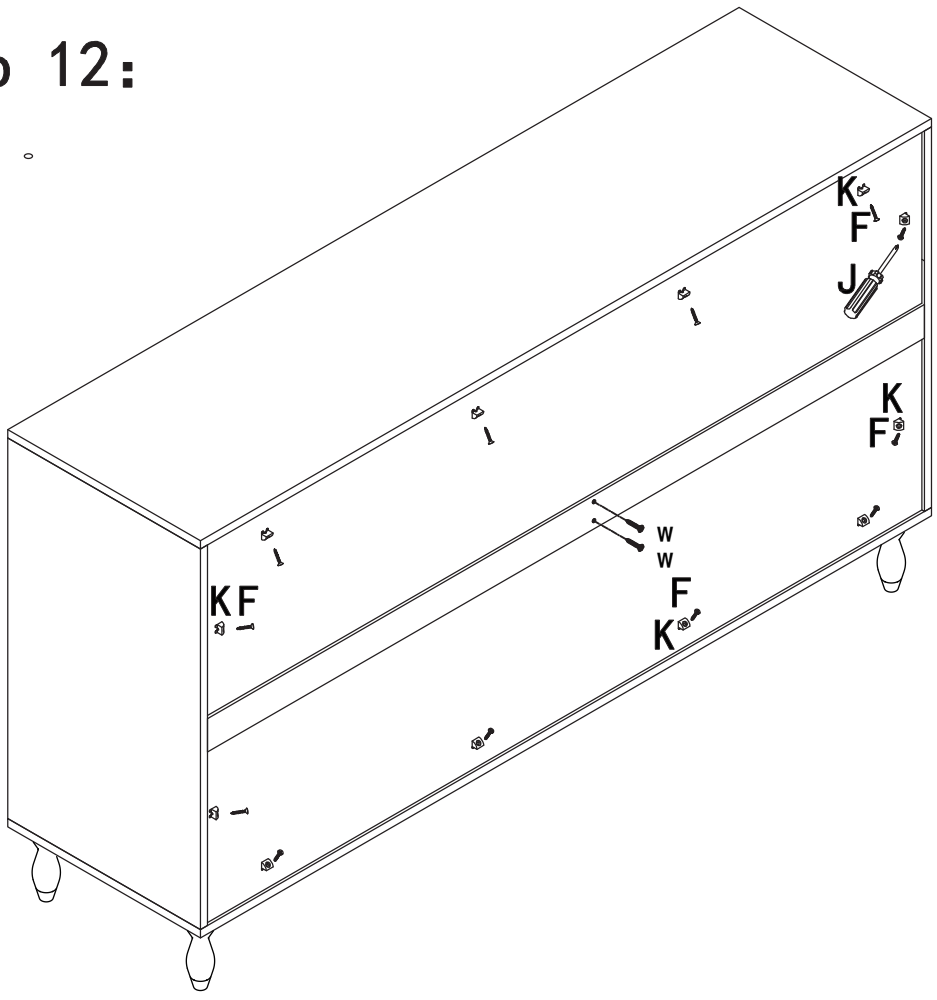

W



2 pcs

K




12pcs

F




12pcs

J



1pc

Step 13:

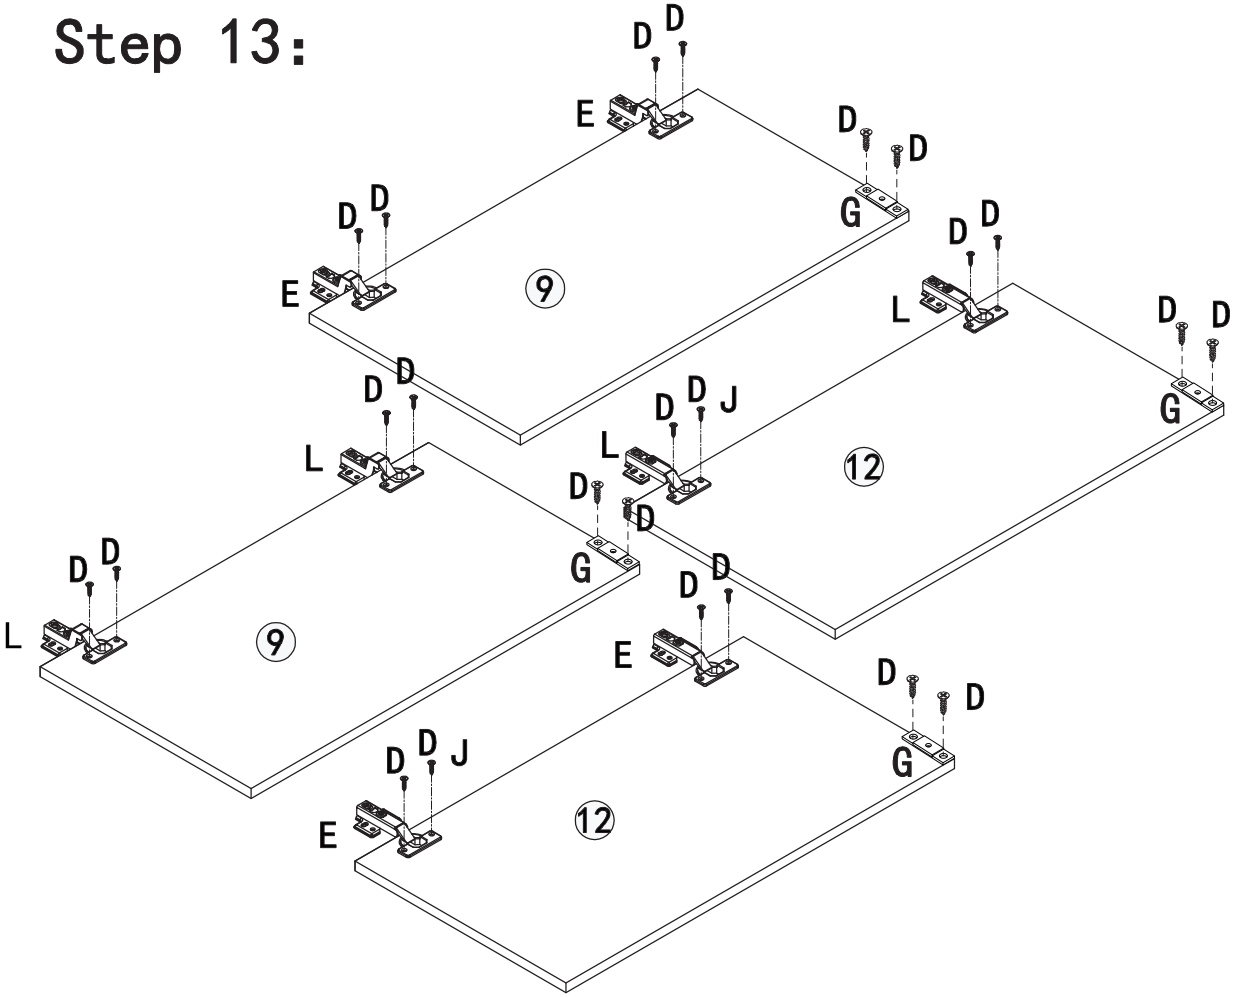


E



4pcs

G




4pcs

D



24 pcs


L



4pcs


Step 14:

USE HINGE E FOR THE 2 SIDE DOORS

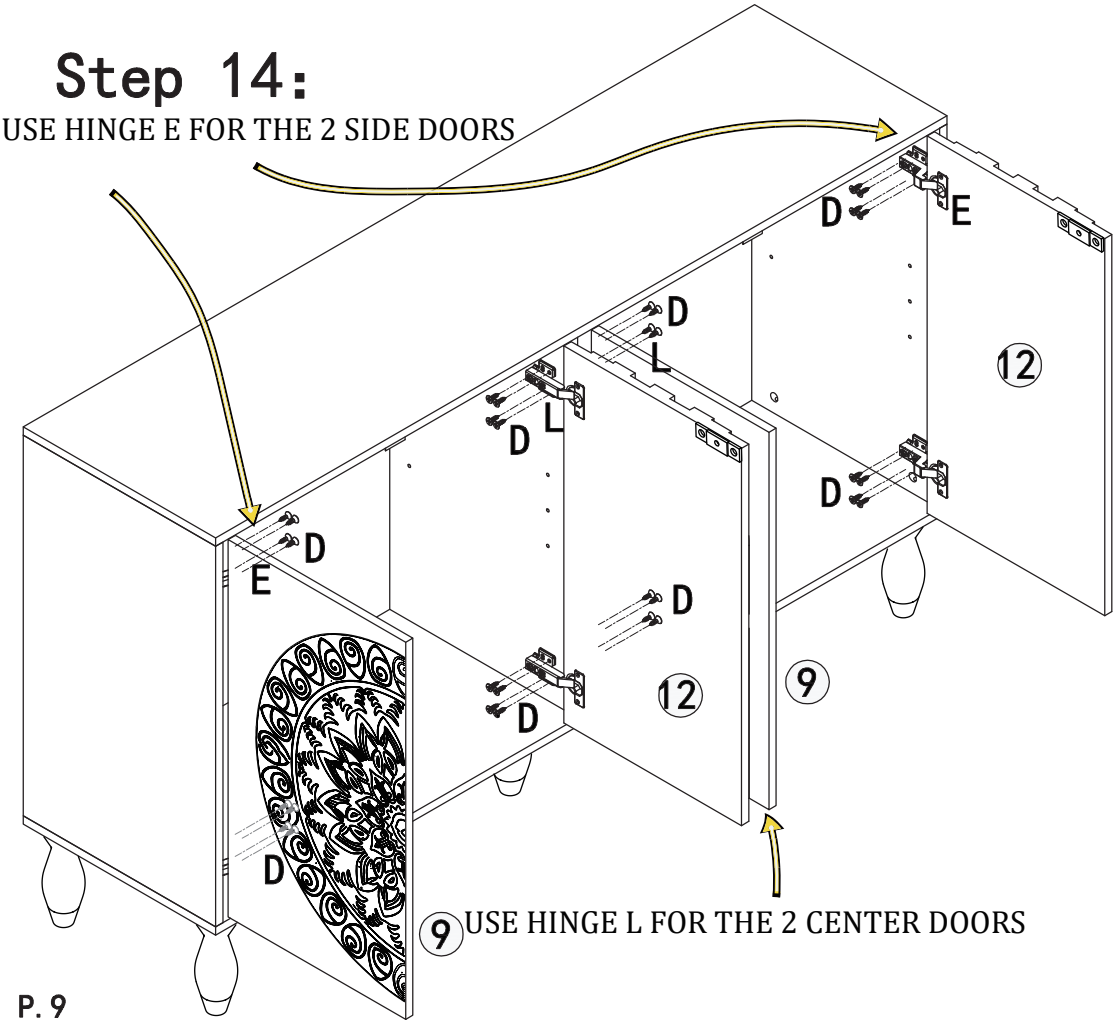


9 USE HINGE L FOR THE 2 CENTER DOORS


1

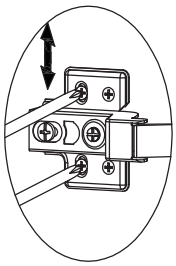

2

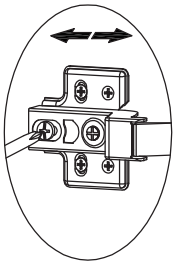


3

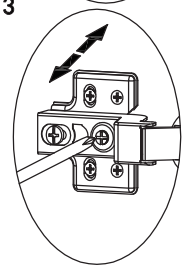


D




32pcs

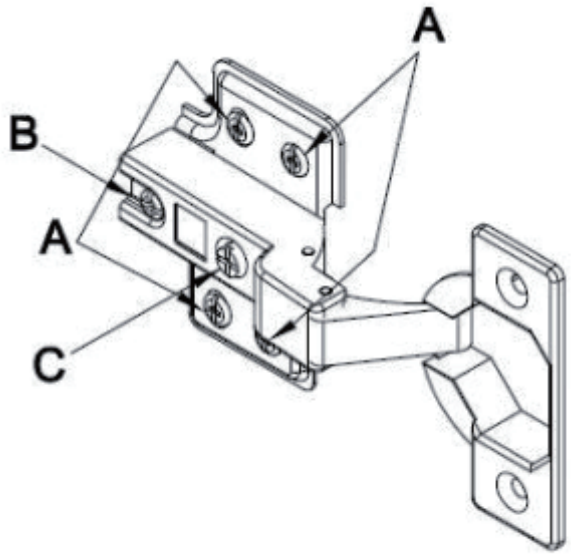


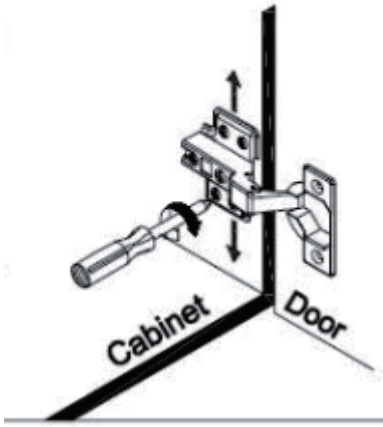

To adjust the vertical height.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

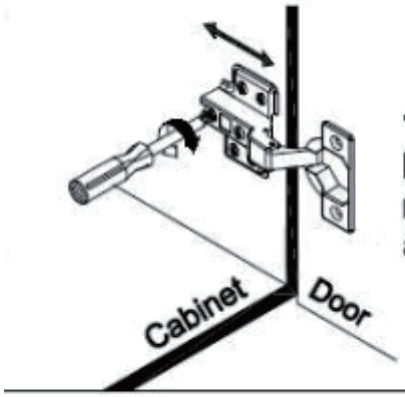

To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

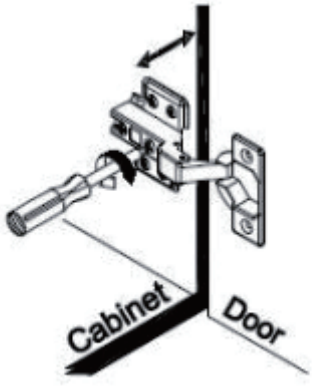

To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

Step 15:

