
OMCHOM

User Manual

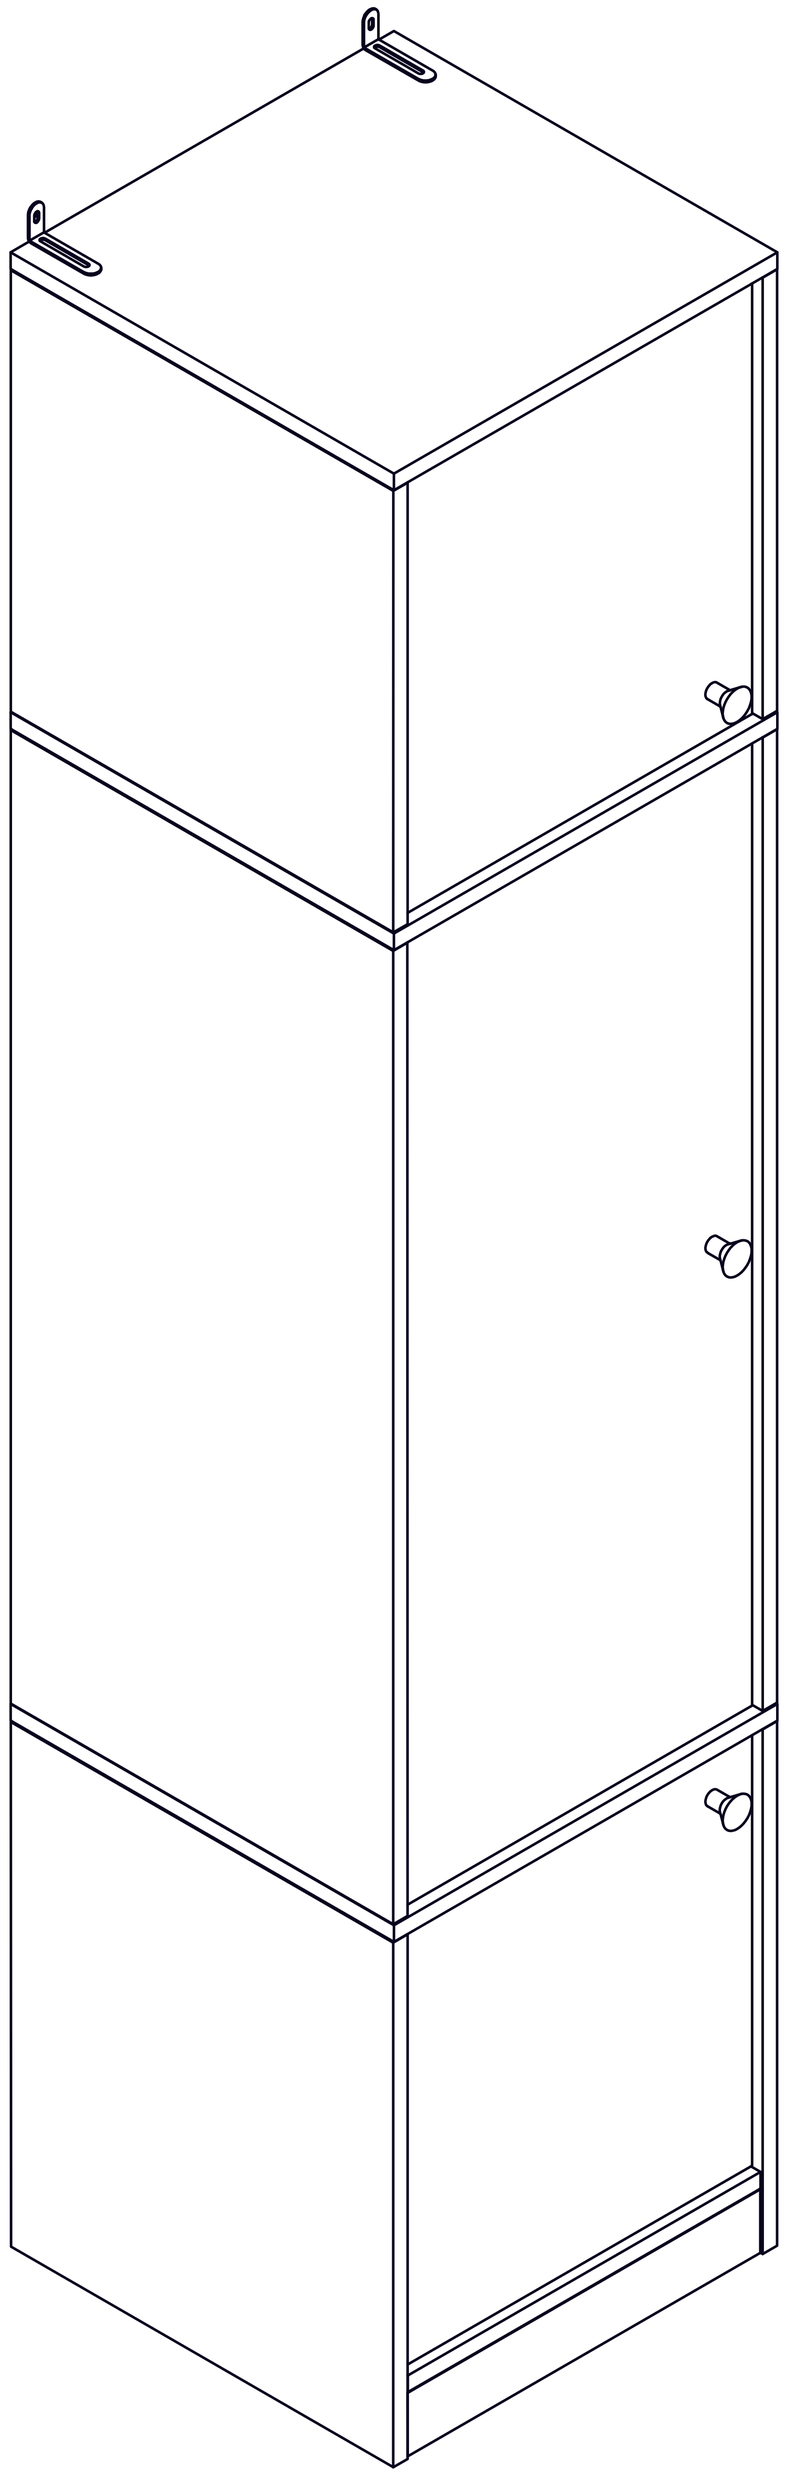


OMC25S101


Please read the instruction manual before assembly. Scan the QR code on the right to view the installationvideo and electronic manual.
Please keep the manual safe and transfer it with the product.

Scan for the e-manual


Scan for the installation video

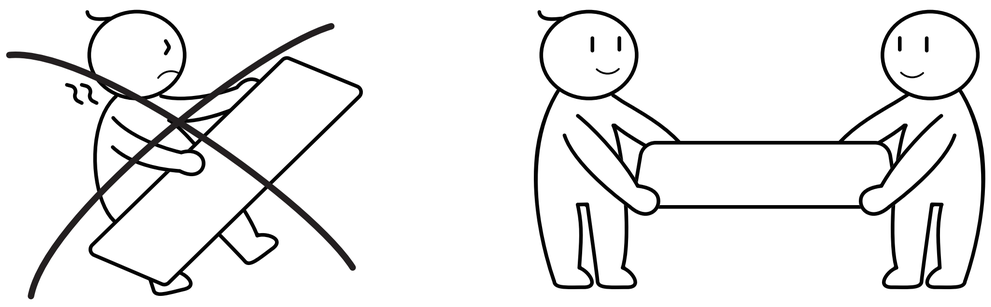

1.Please keep this manual in a safe place and pass it on if you transfer the product to someone else.

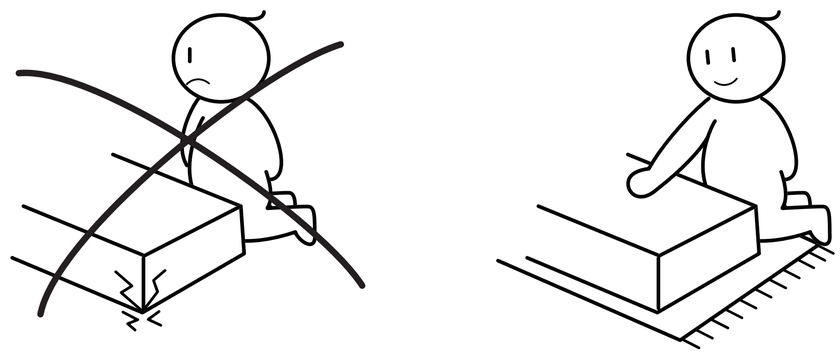

2.Choose a clean, flat and spacious area for assembly, and avoid hard surfaces that could damage the product.

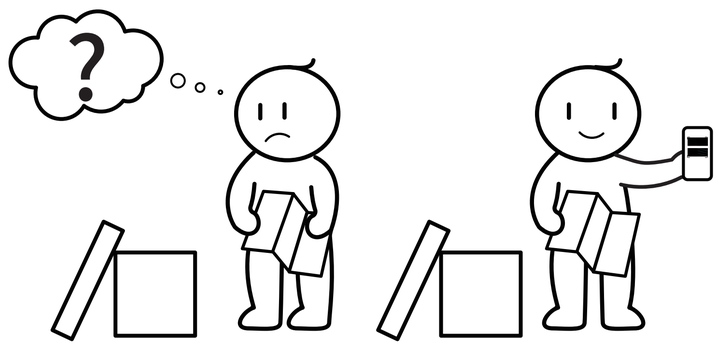

Scan the QR code to access.

1. Official after-sales support service
2. Product installation video
3. Warranty activation service

⚠ If you encounter any problems during the installation process, please scan the QR code to contact us for assistance.

⚠ Anti-tipping warning ⚠

Furniture tip-over can cause serious or fatal injuries.
To prevent such incidents, please follow the recommendations below:



- Install the supplied tip-over restraint kit as instructed.
- Keep children from climbing on or leaning against the product.
- Do not place a TV or other heavy items on it unless it is designed to support them.
  If this product includes drawers:
- Store heavier items in the bottom drawer.
- Open only one drawer at a time to avoid instability.
- Do not remove or tamper with drawers.

Note: The included anti-tip device reduces— but does not fully eliminate — the risk of tip-over. Please use this product with caution.

Warning


- This product is for indoor use only. Using the product outside of its intended purpose and/or modifying it beyond its original design may result in personal injury and/or product damage.
- This product must be assembled and used according to the instructions.
- The seller assumes no responsibility or liability for any damage caused by improper assembly or misuse.
- Children must not assemble this product. Keep small parts out of children’ s reach during assembly, as swallowing or inhaling them may be fatal.
- Children must not climb or stand on this product to avoid tipping and potential injury.
- Do not use this product if there are defects and/or missing parts, as this may cause damage or injury.
- If this product is equipped with an anti-tip device, be sure to install it to prevent the product from tipping over and causing unnecessary injury.
- If this product involves electrical components, keep it away from water or damp environments to avoid electric leakage or short circuits that may cause injury.
- If the product does not have wheels at the bottom, it cannot be moved. Do not drag it, as doing so may loosen or damage the product.

Maintenance Tips


- Place the product on a flat, stable surface to avoid uneven stress and potential damage.
- Periodically check the tightness of all screws during use. Retighten them if necessary to ensure structural integrity.
- Use heat-resistant pads for hot items. Keep the product away from air-conditioning vents or radiators by at least 1.5 meters. Do not place it in any high-temperature area to ensure longevity.
- Wipe off any water on the furniture surface promptly. Avoid exposing the product to long-term humidity to prevent mold.
- Do not place any corrosive substances (including alcohol, aromatherapy oils, nail polish remover, etc.) on the surface.

Parts list


Please prepare the following tools:

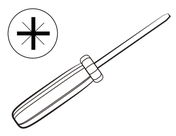


screwdriver

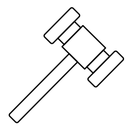


hammer

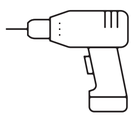


electric drill













tape measure





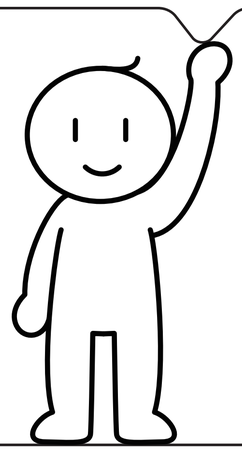


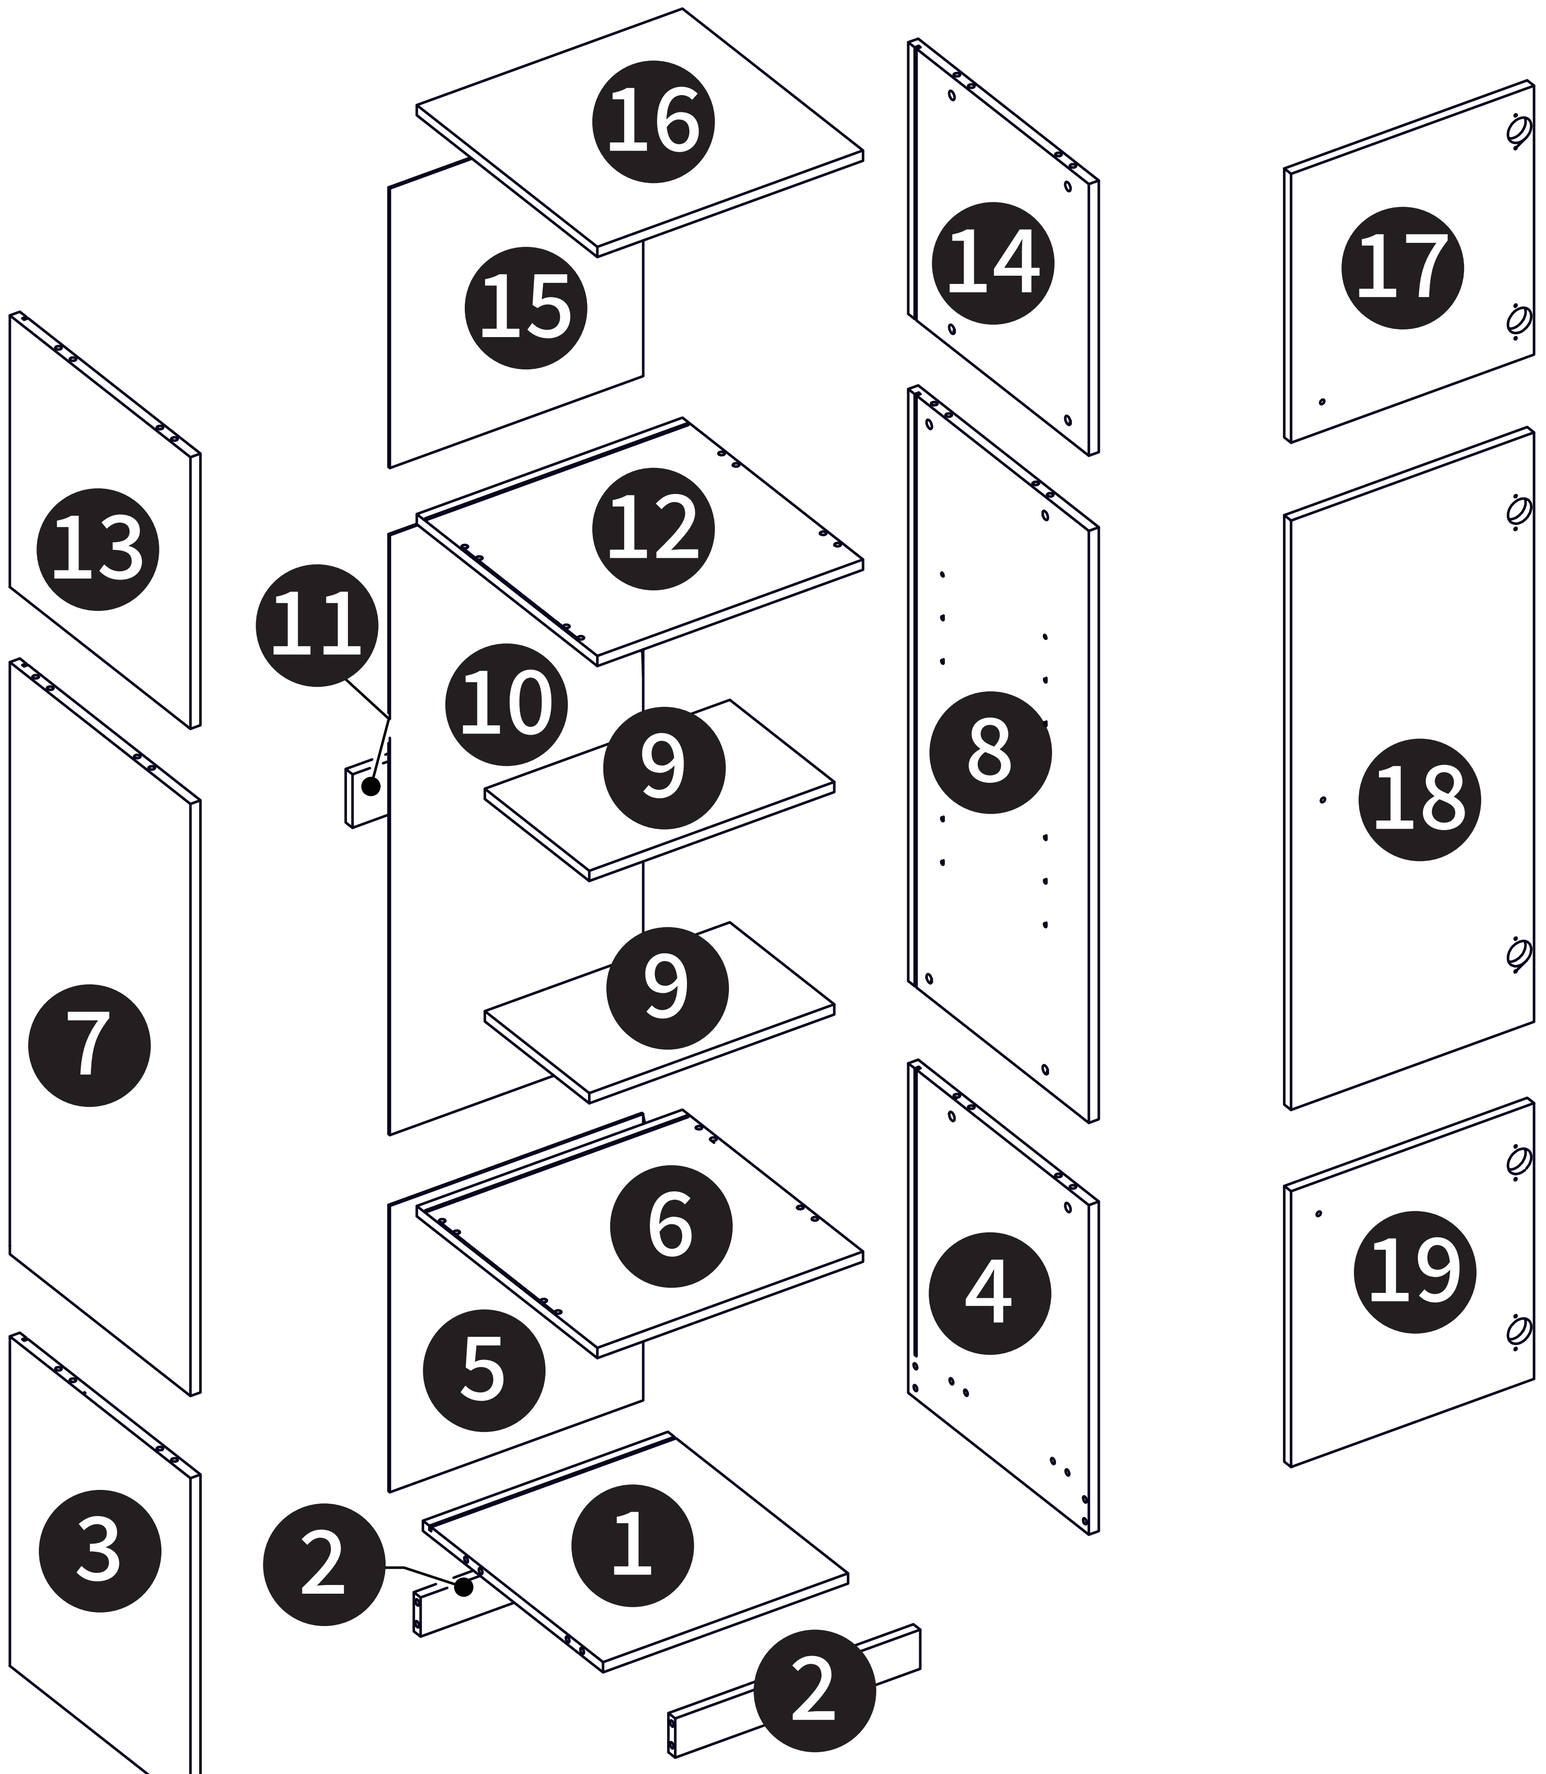

Before installation, check that all boards and parts match the manual and distinguish similar parts by size. If anything is missing, scan the QR code to contact us.Note: The product ships in a complete package.

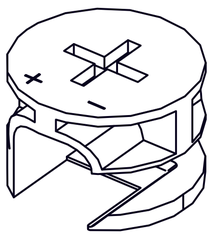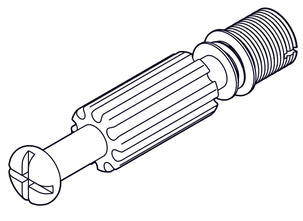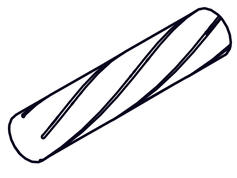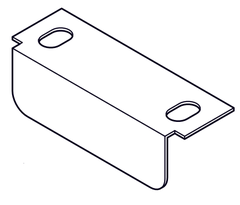
A*30	B*30	C*30	D*2	E*42
				
cam wheel	cam bolt	wooden dowel	door stopper	short screw

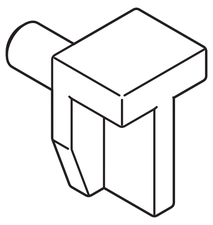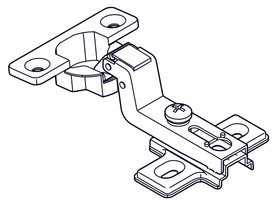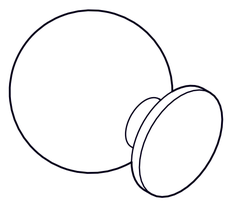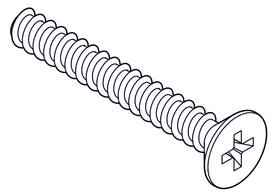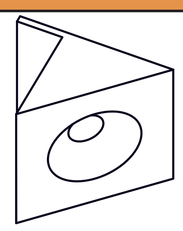F*8	G*6	I*3	J*3	K*12
				
shelf pin	hinge	handle	flat-head screw	back panel fastener

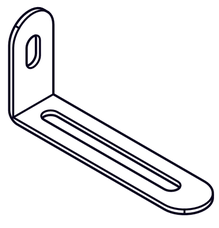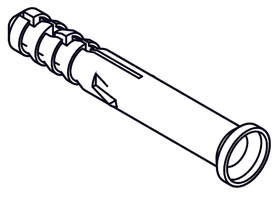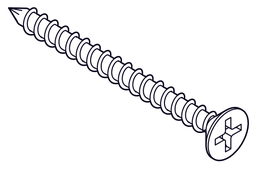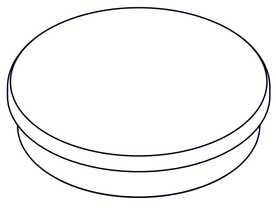
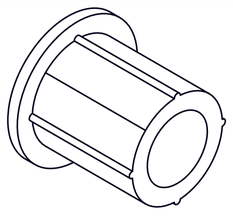
L*2	M*2	N*2	P*30	FA*16
				
anti-tip device	wall plug	long screw	cover cap	Shelf Pin Hole Cover


1


As shown in the figure, hammer the black Cam Nut (B.1) into panels 3 and 4 first, then use a screwdriver to screw the cam bolt (B.2) into the black Cam Nut.

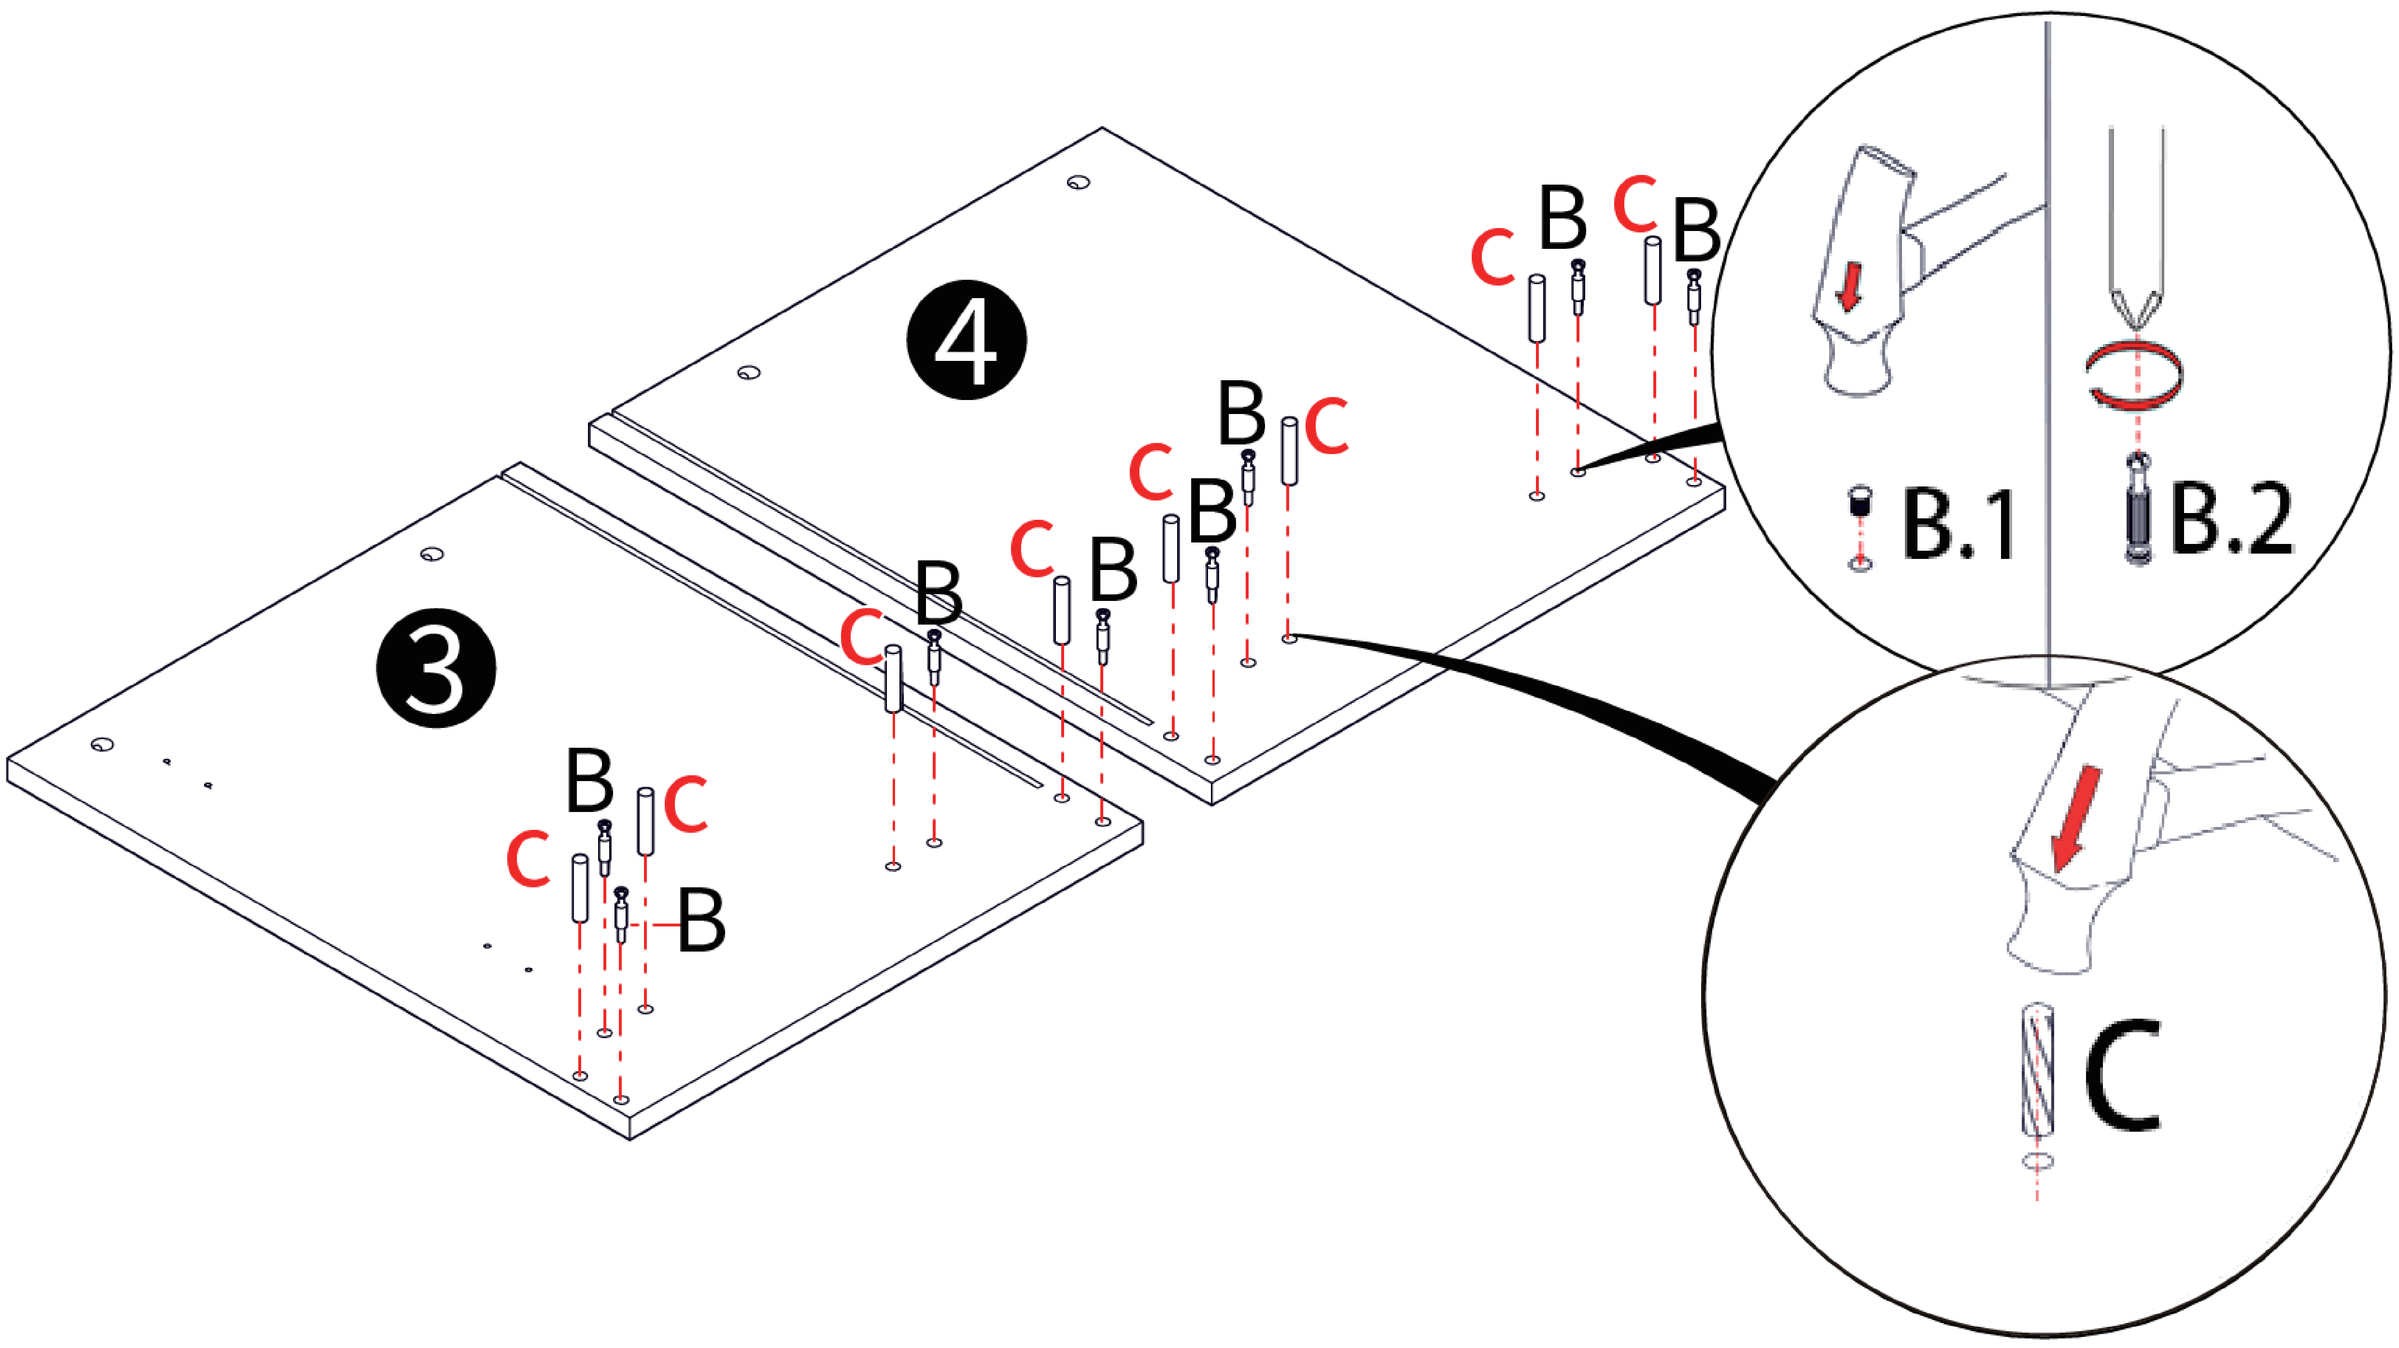


Insert the wooden dowels (C) into Panels 3 and 4.

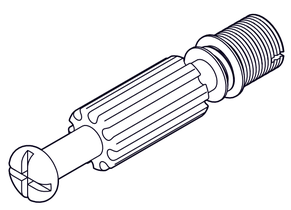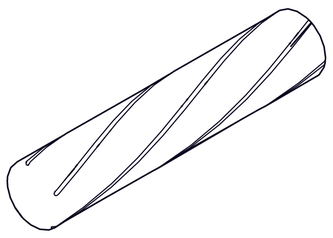B*8	C*8
	
Cam bolts	wooden dowels

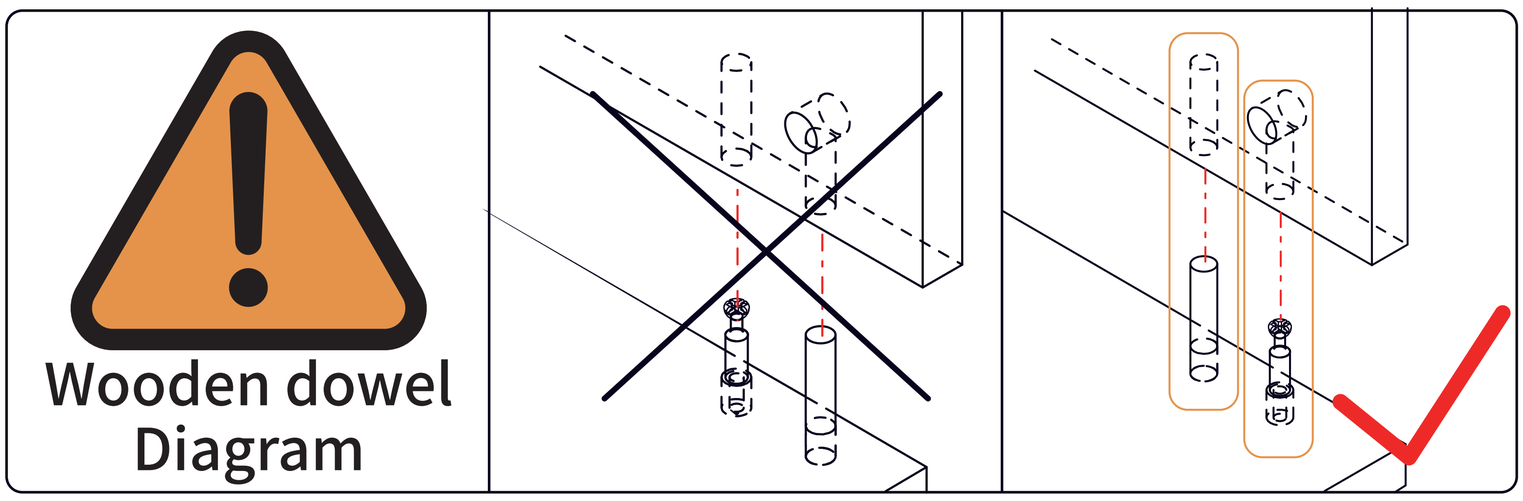


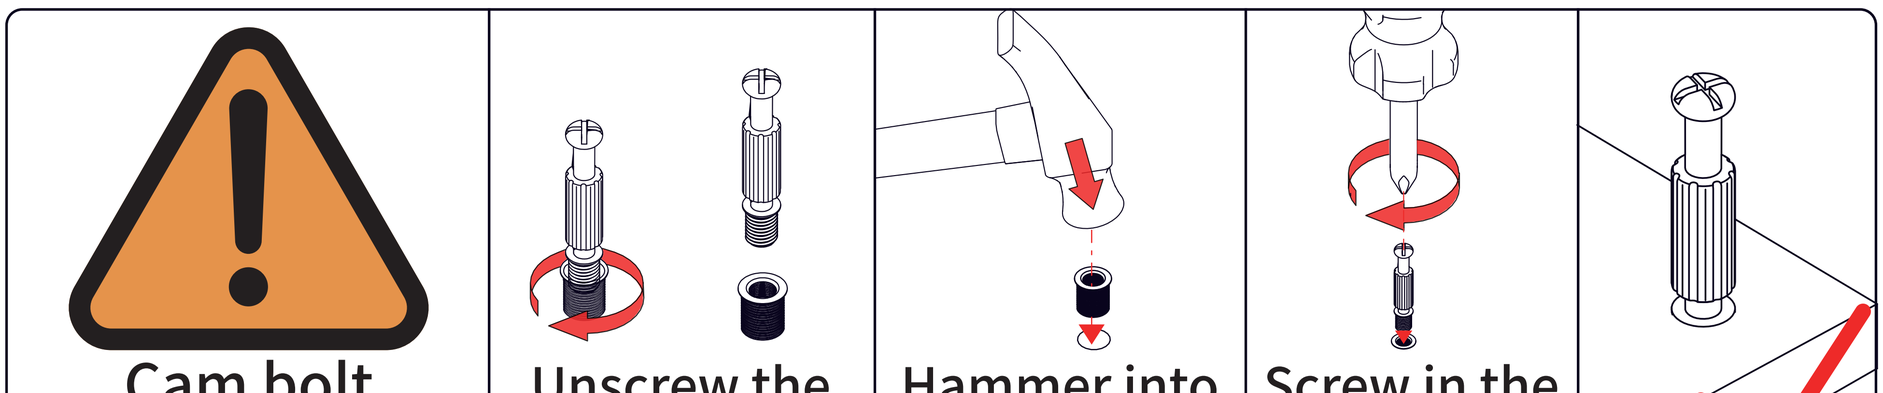

2 As shown in the figure, connect panel 3 to panels 1 and 2, and press the Cam wheel (A) into panels 1 and 2. Then rotate to tighten.

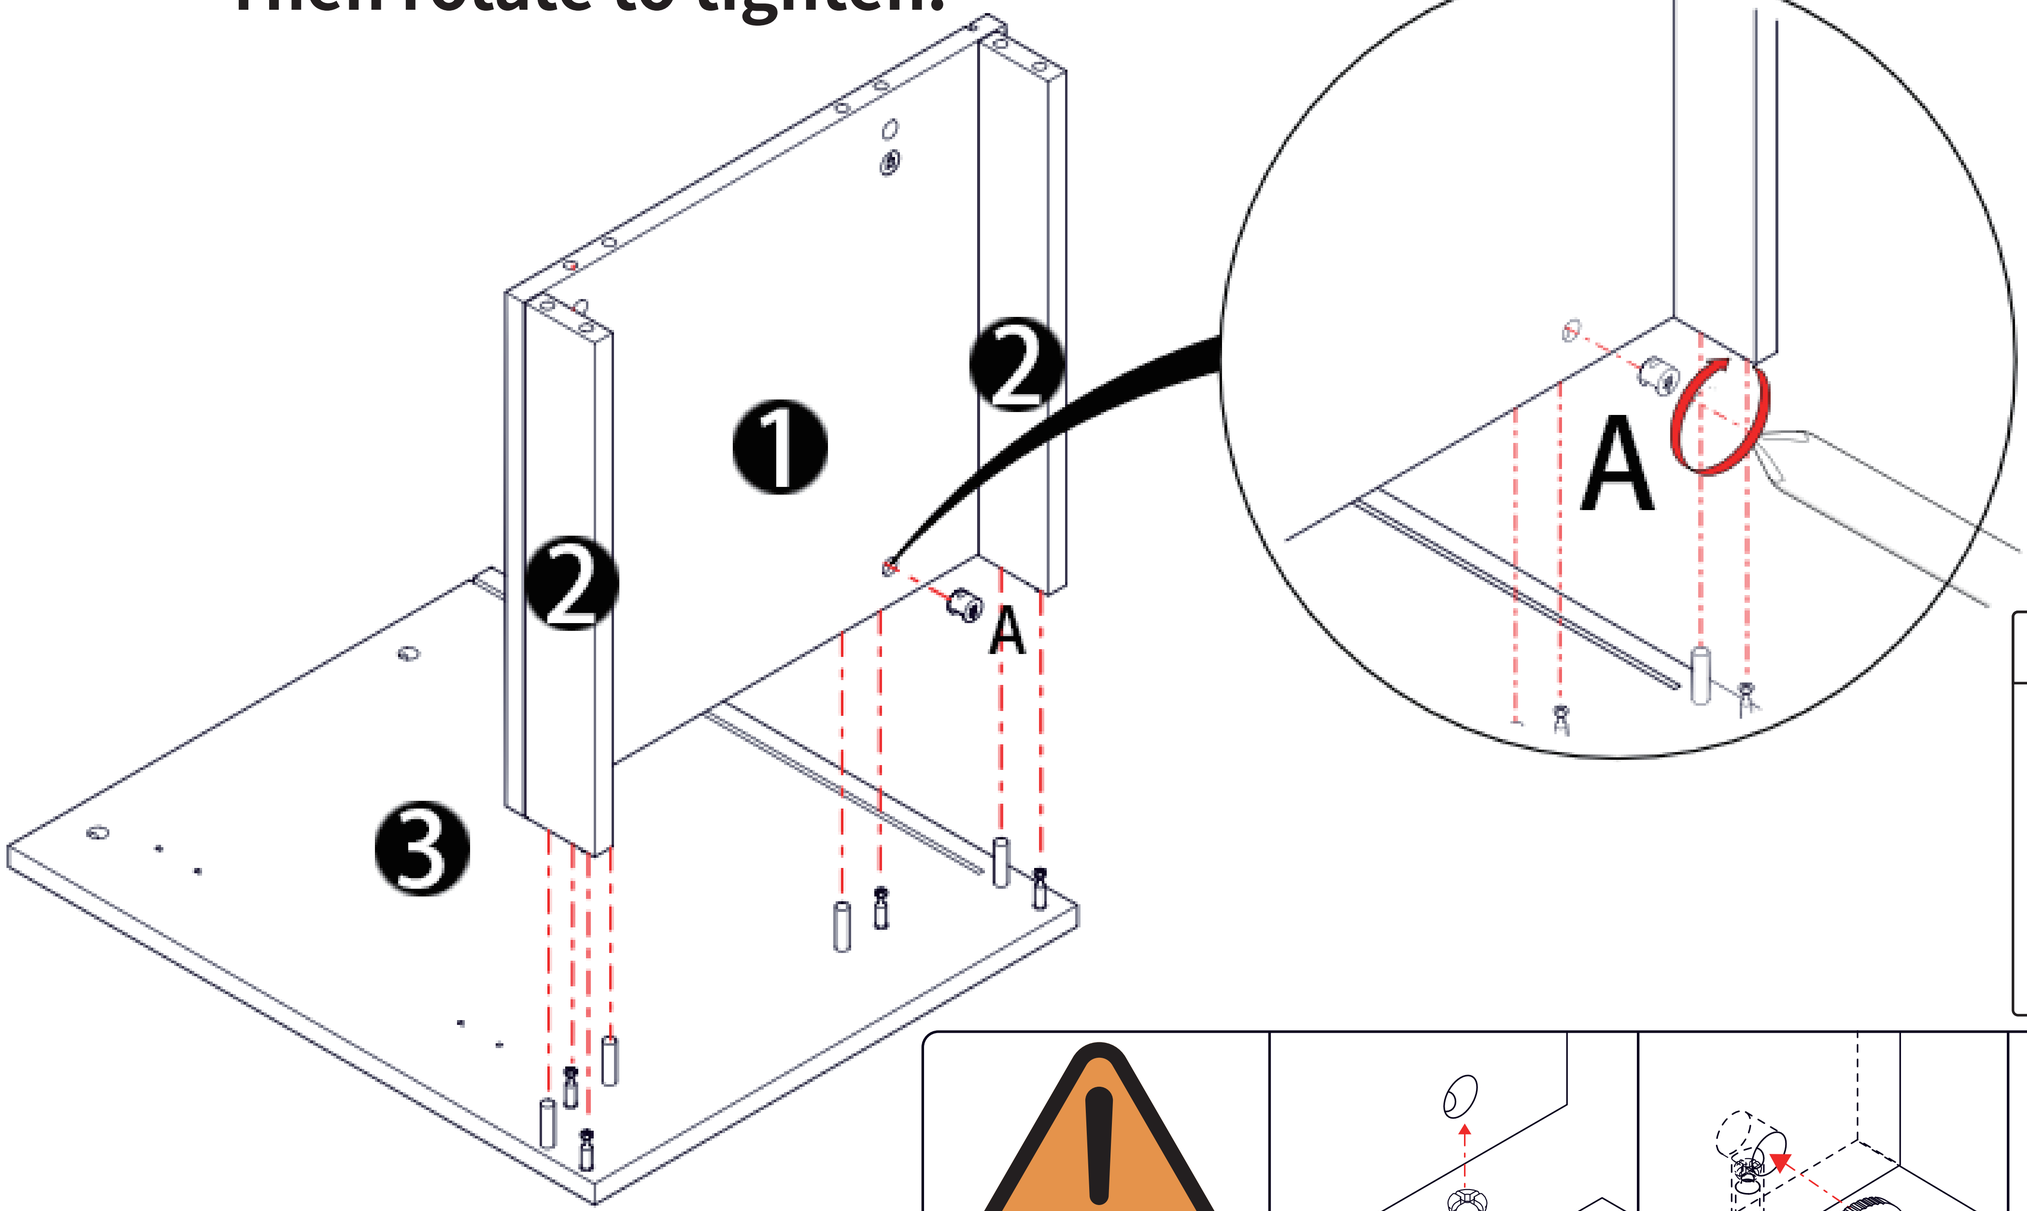


A*4

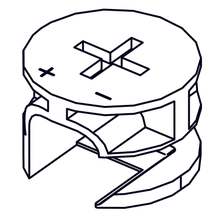

Cam wheels


Cam wheel Diagram

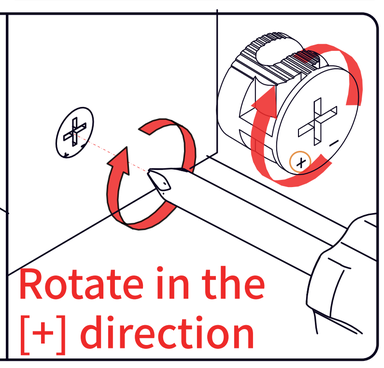


Rotate in the [+] direction

3 then connect panel 4 to panels 1 and 2, and press the Cam wheel (A) into panels 1 and 2. Then rotate to tighten.

First rotate panel 4 by 180°

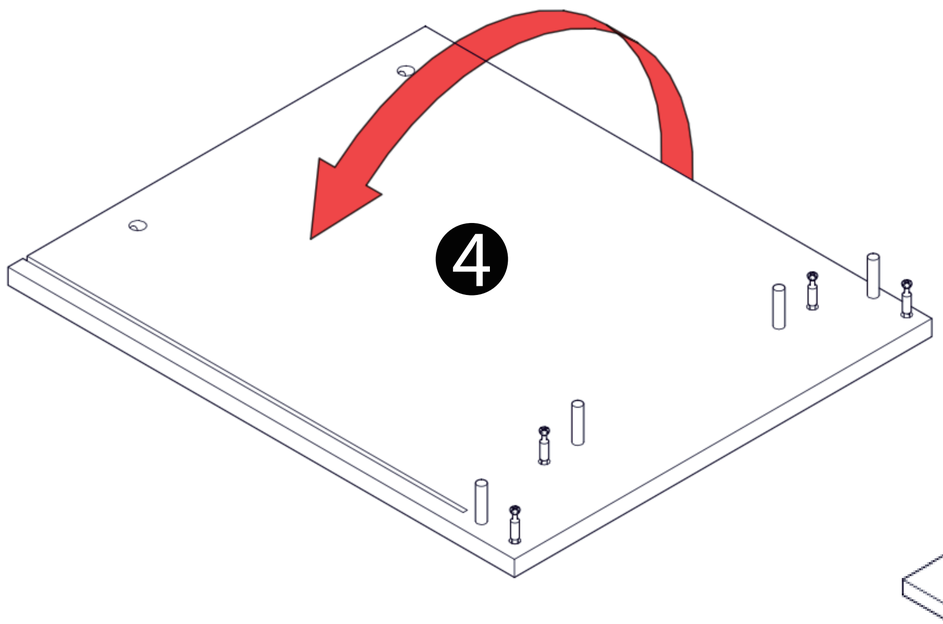

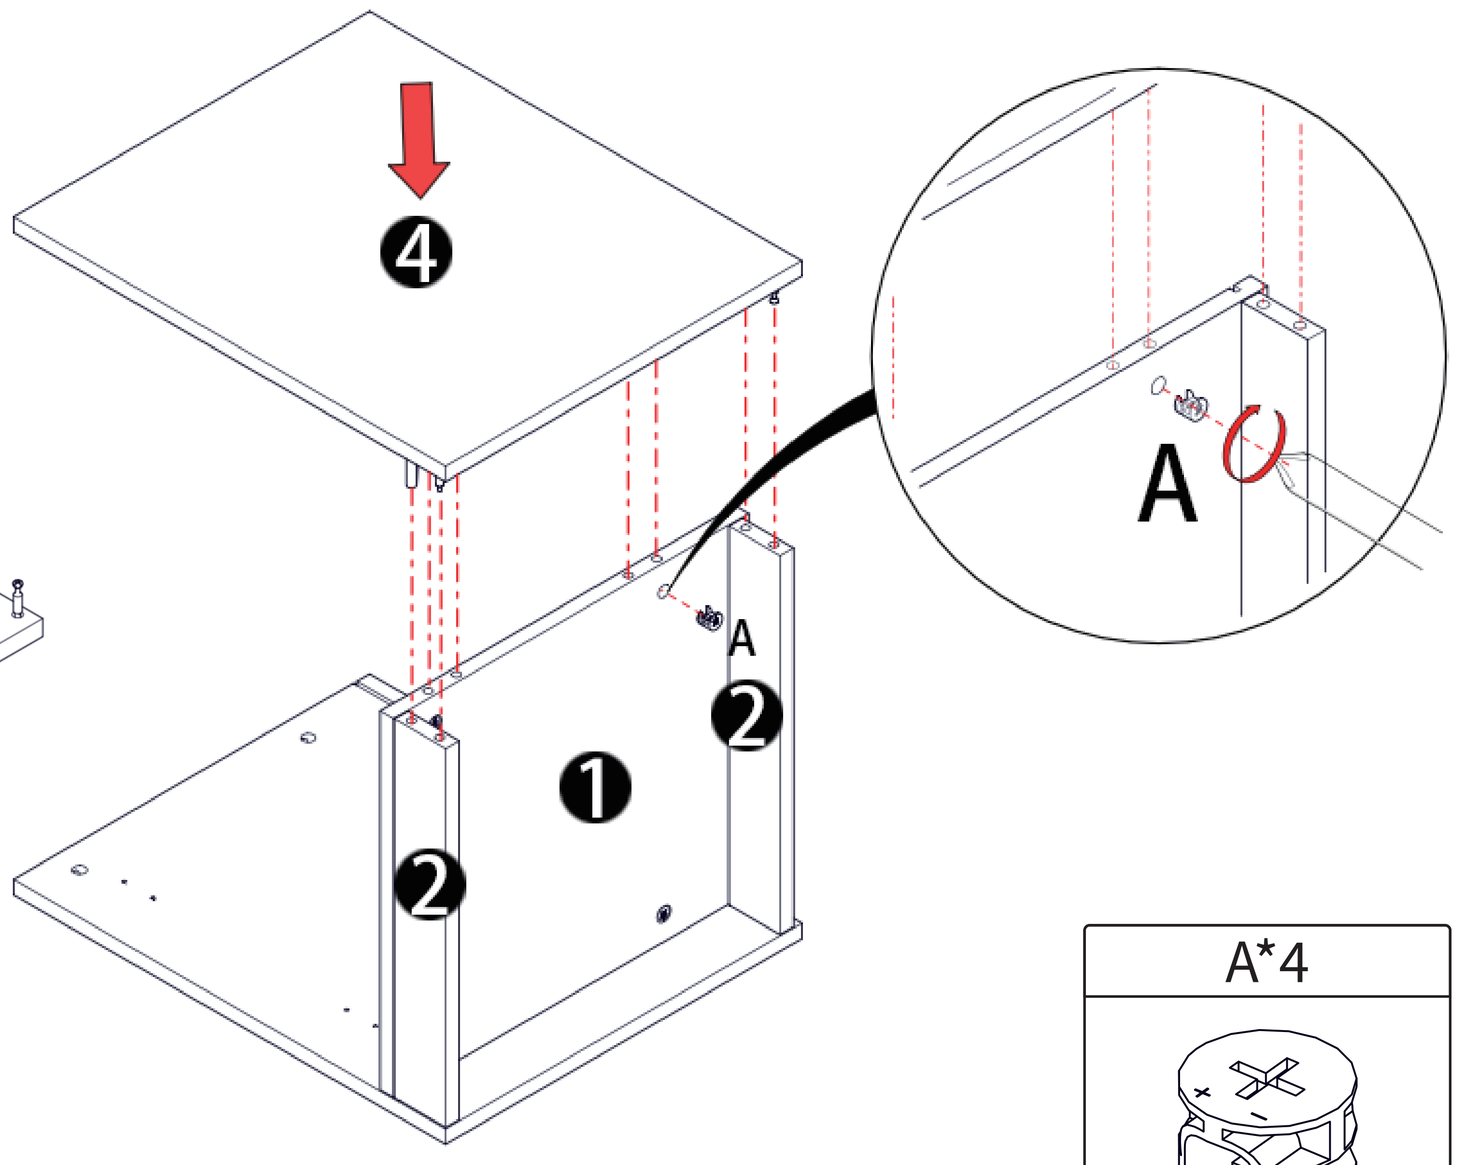


A*4


Cam wheels

4

then insert Back Panel 5 along the groove.


Rotate the cabinet body 90°

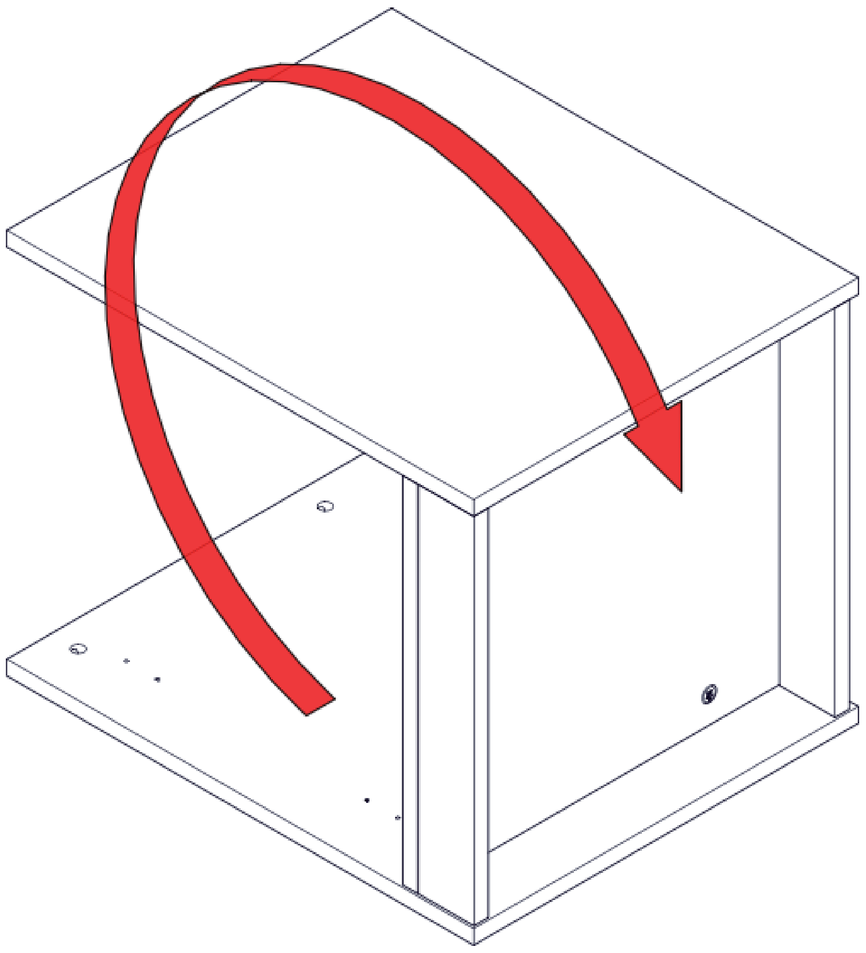

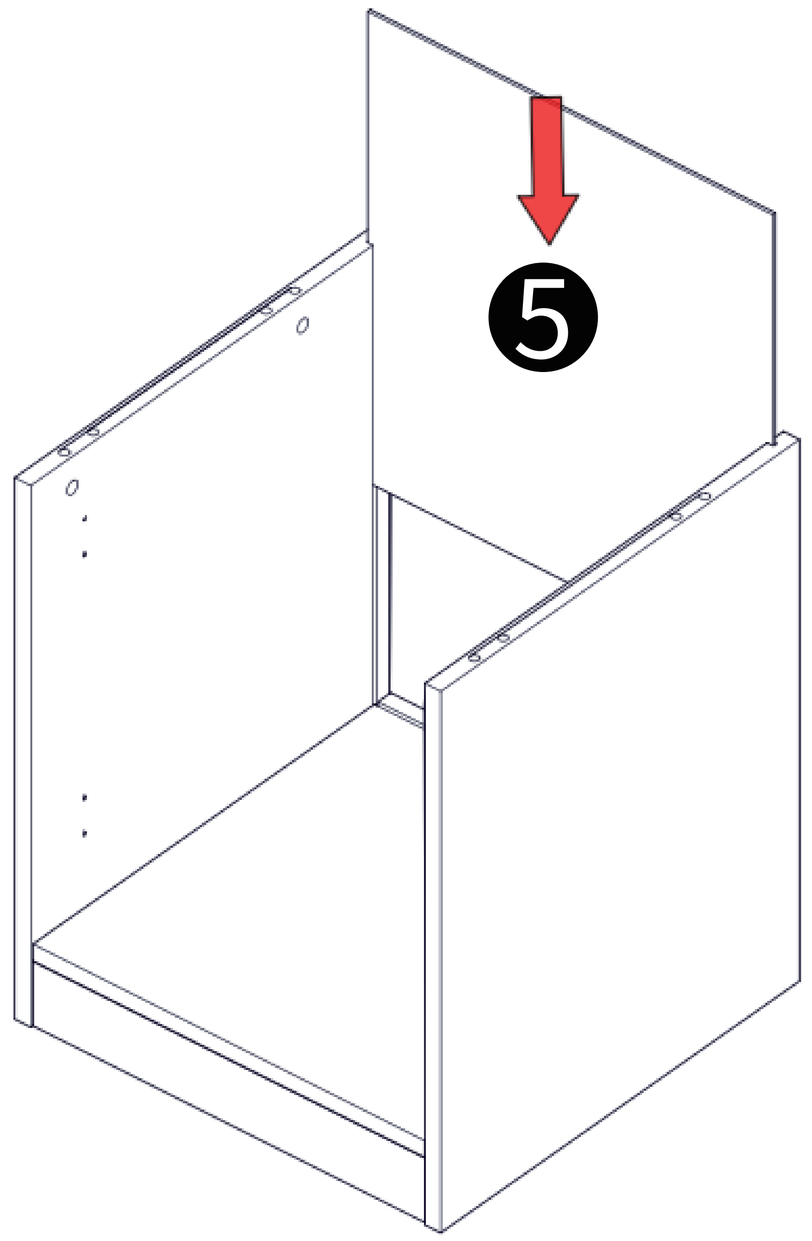


5

As shown in the figure, hammer the black Cam Nut (B.1) into panel 6 first, then use a screwdriver to screw the cam bolt (B.2) into the black Cam Nut.

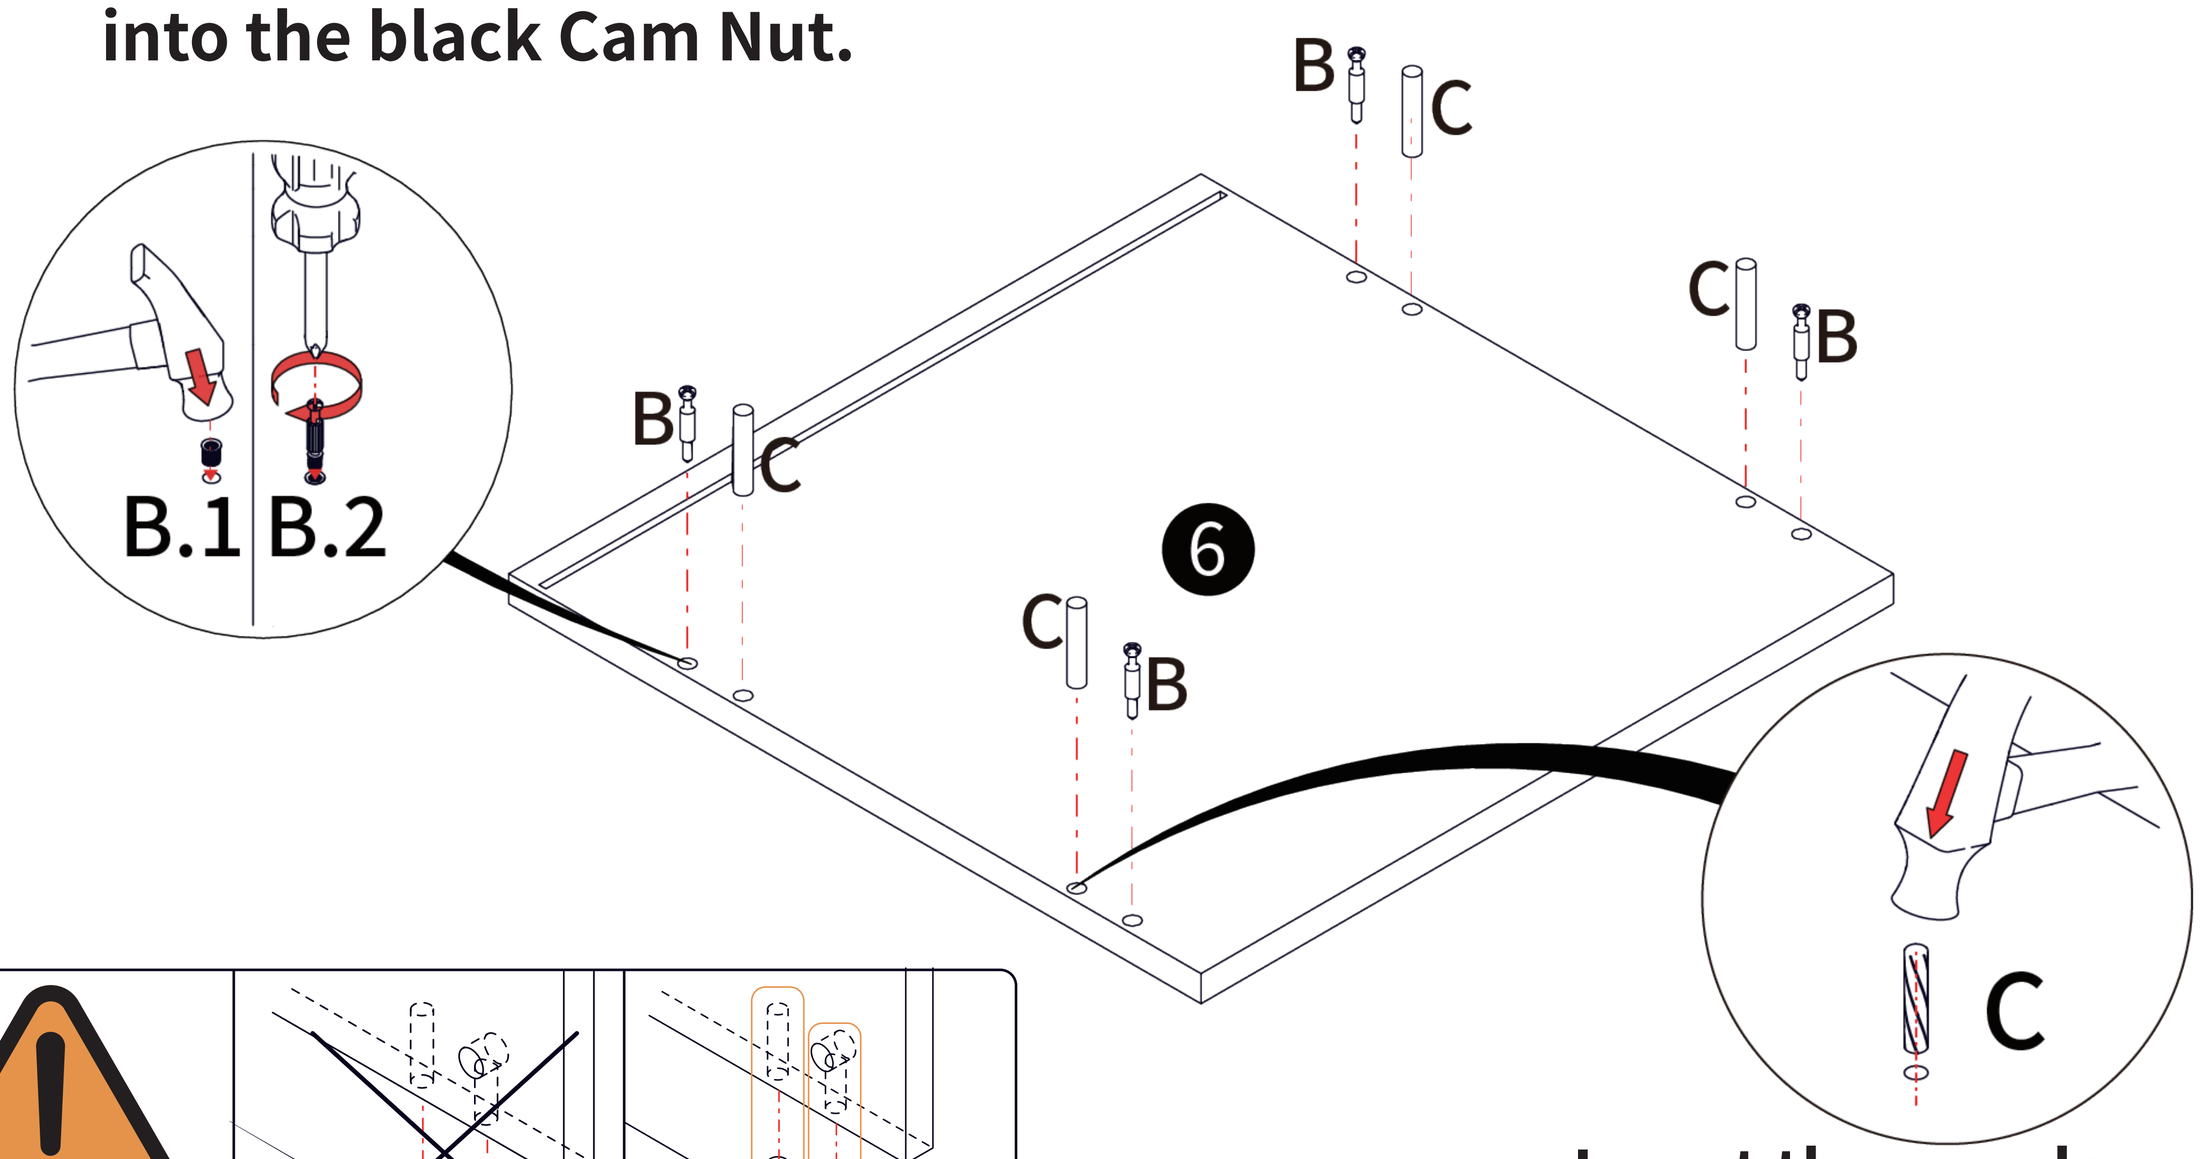


Insert the wooden dowels (C) into panel 6.

Wooden dowel Diagram

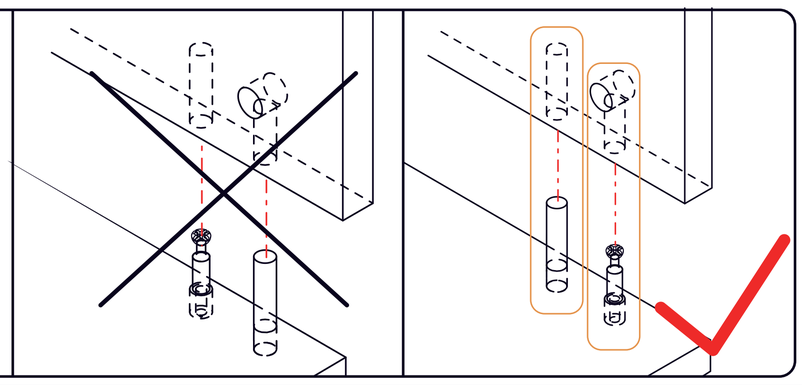

Cam bolt Diagram

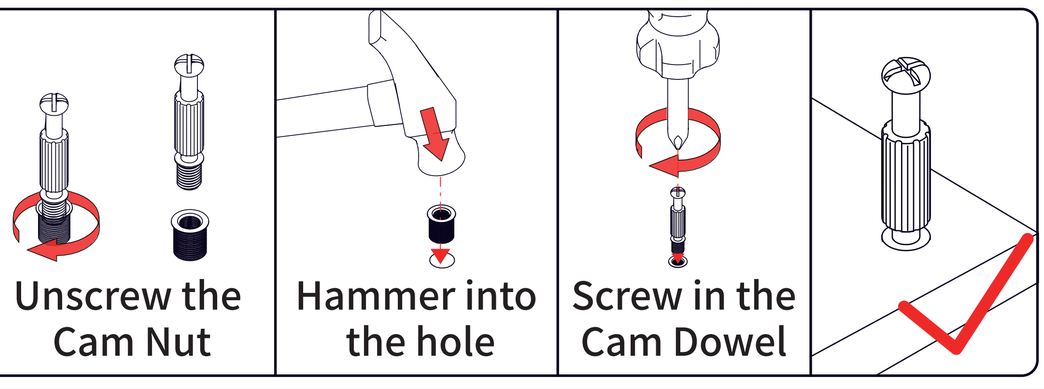


Unscrew the Cam Nut

Hammer into the hole


Screw in the Cam Dowel

C*4

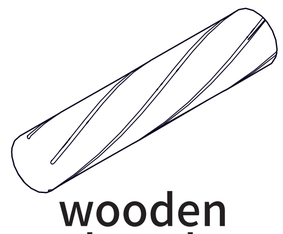

wooden dowels

B*4

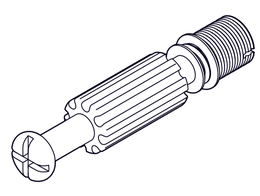



Cam bolts

6


Connect panel 6 to panels 3, 4, and 5, and press the Cam wheel (A) into panels 3 and 4. Then rotate to tighten.

First rotate panel 6 by 180°

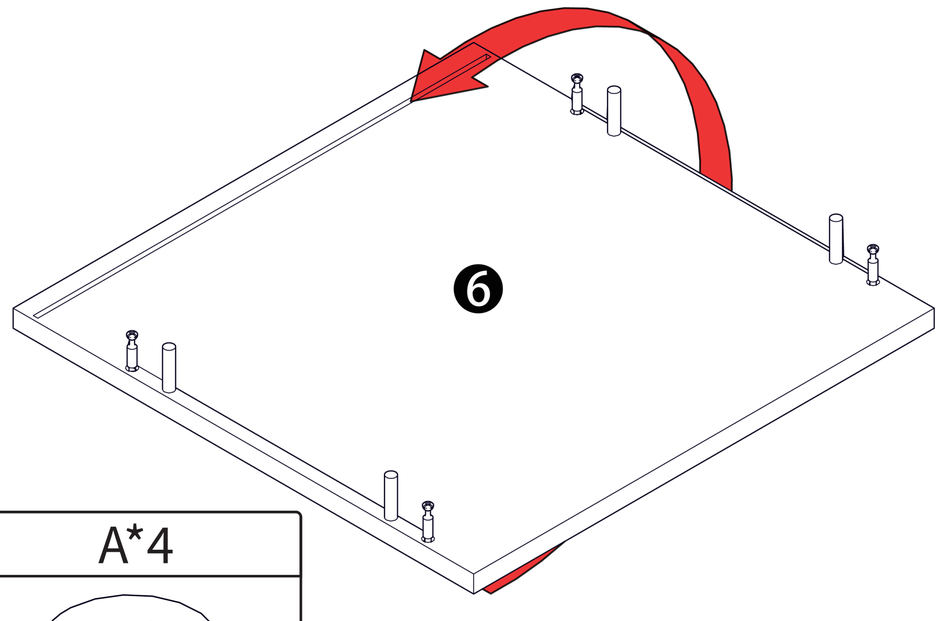

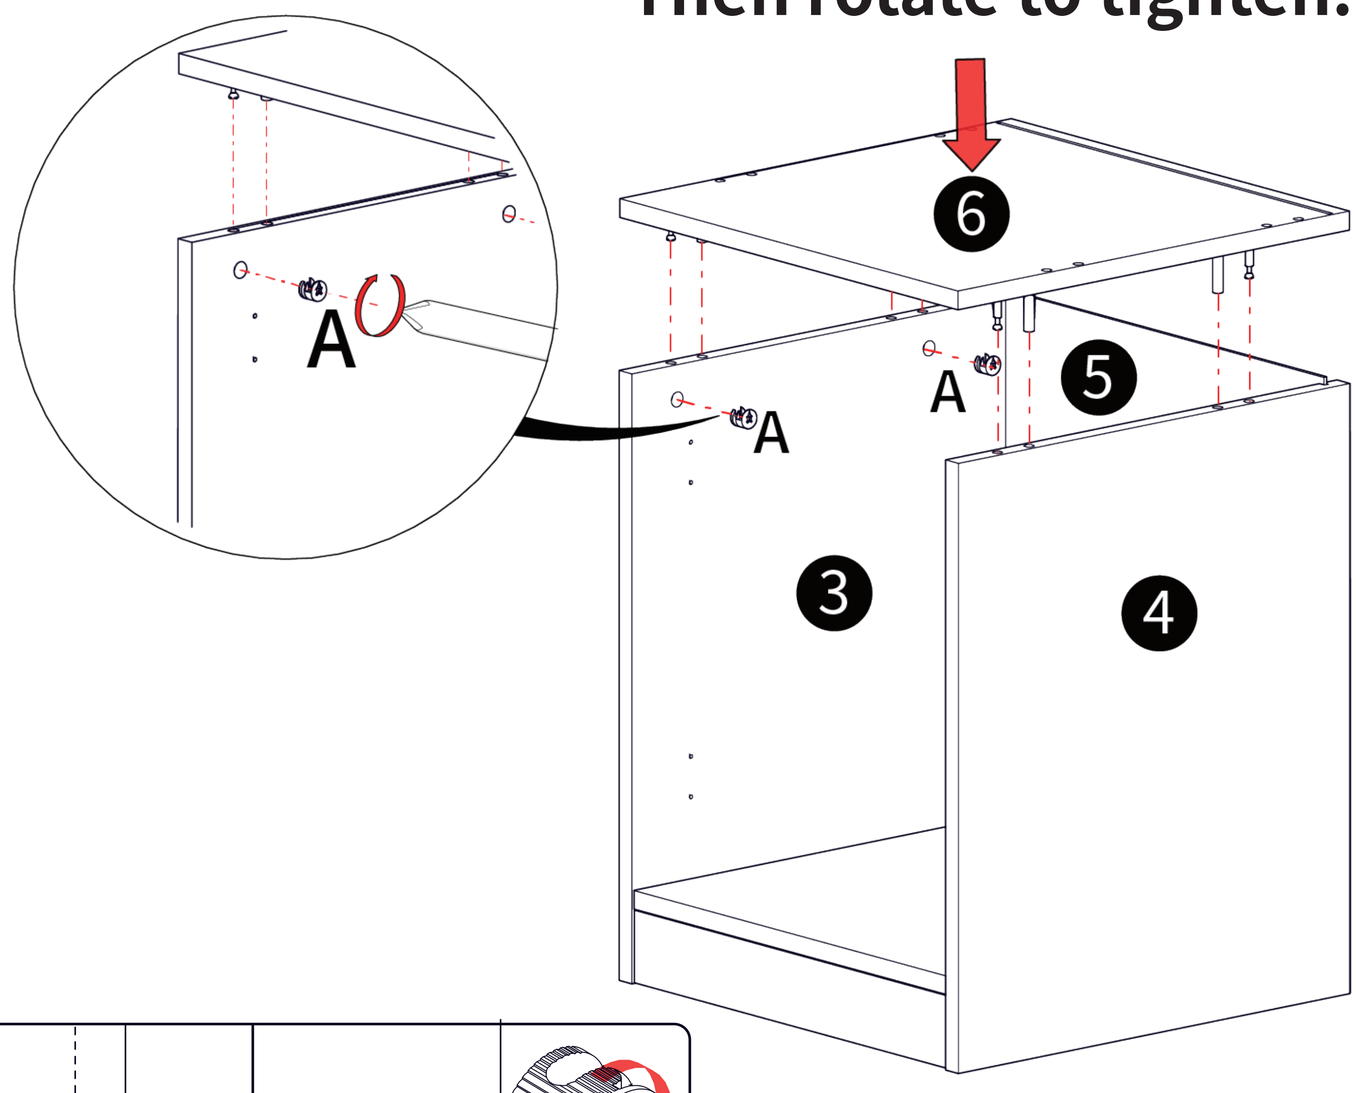


A*4

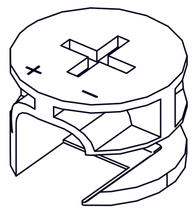

Cam wheels




Cam wheel Diagram

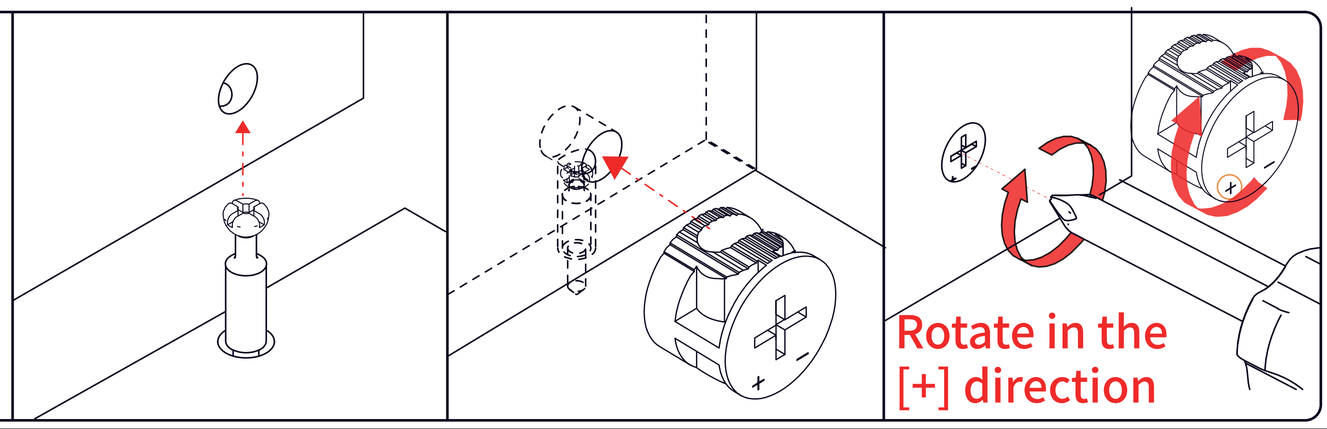


7

B*4

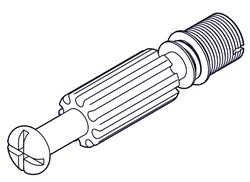

Cam bolts


C*4

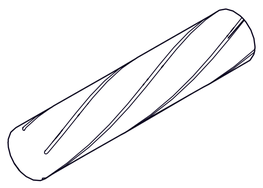


wooden dowels


As shown in the figure, hammer the black Cam Nut (B.1) into panel 6 first, then use a screwdriver to screw the cam bolt (B.2) into the black Cam Nut.

Insert the wooden dowels (C) into panel 6.

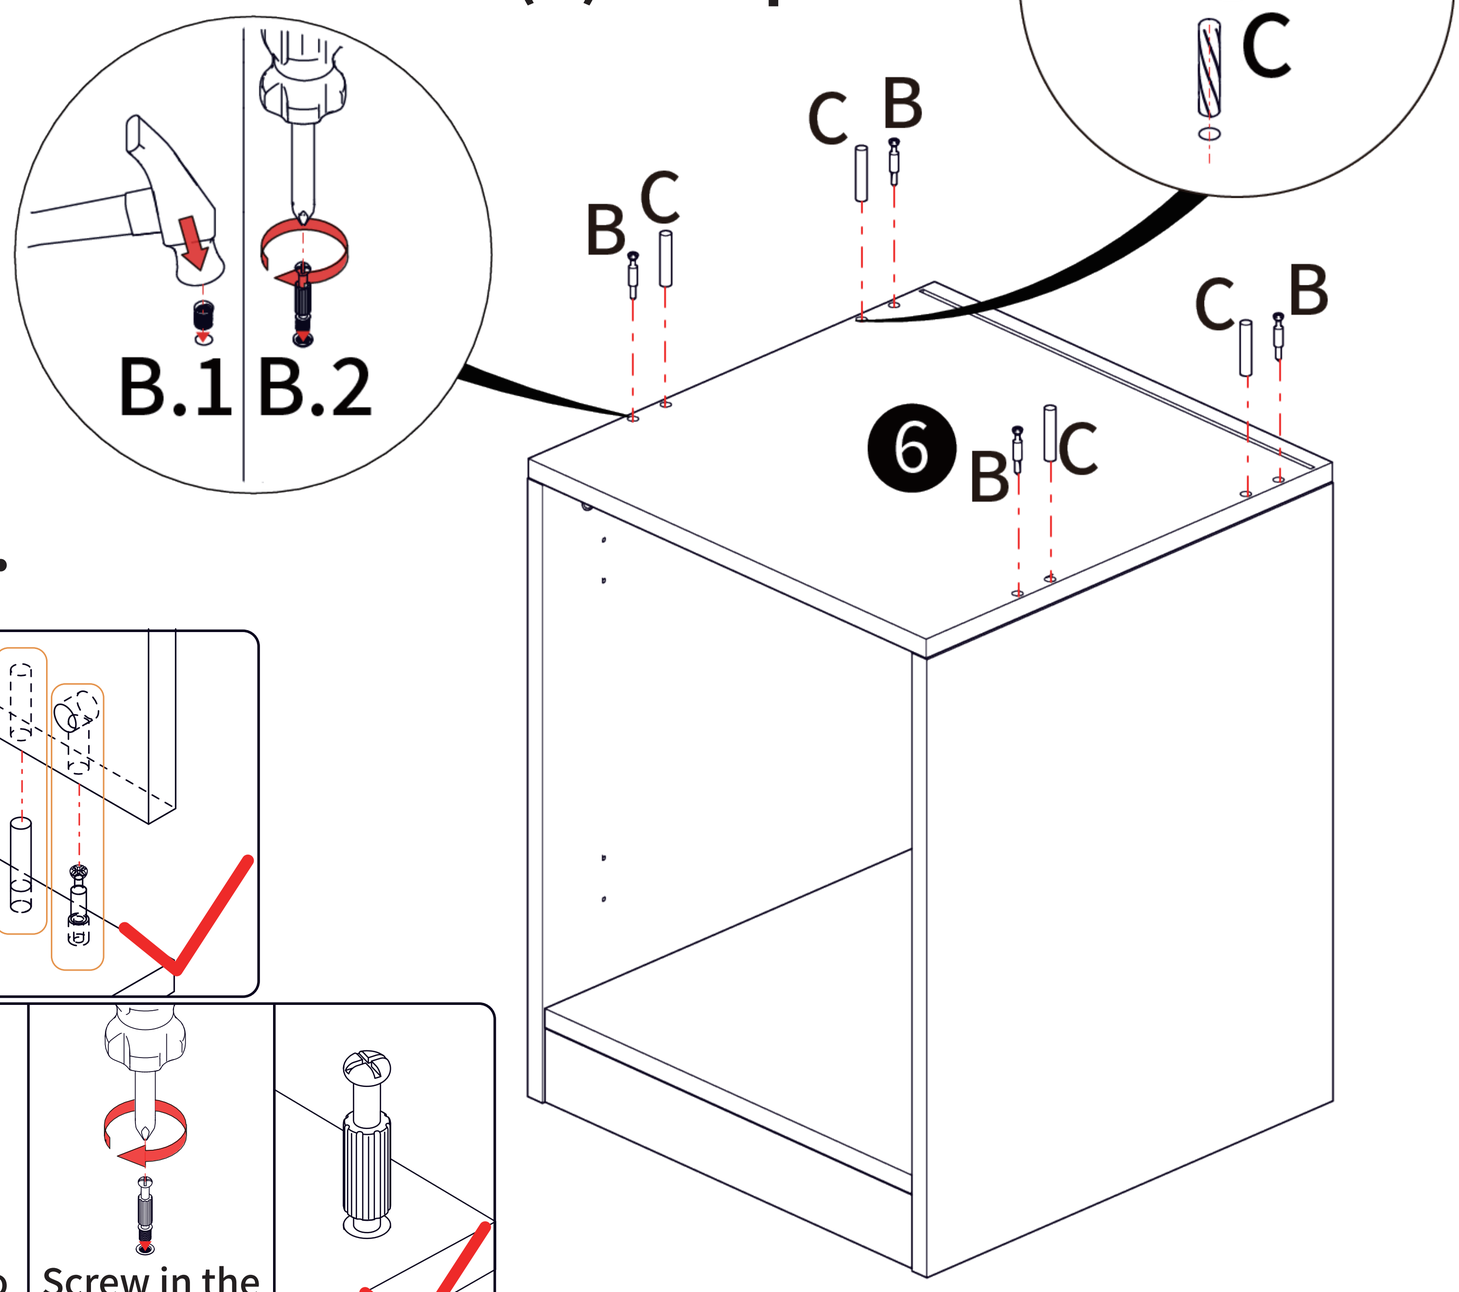

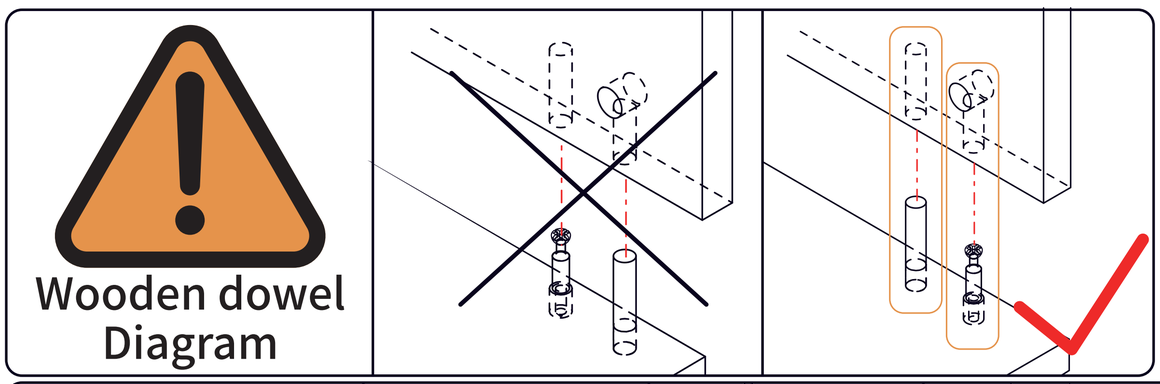

Wooden dowel Diagram

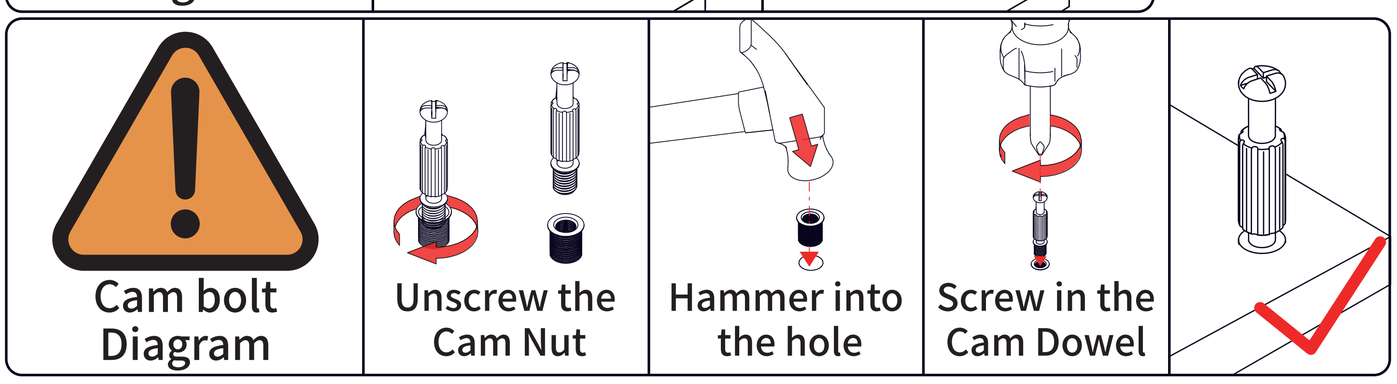




Cam bolt Diagram

8

As shown in the figure, hammer the black Cam Nut (B.1) into panels 7 and 8, then use a screwdriver to screw the cam bolt (B.2) into the black Cam Nut.

Insert the wooden dowels (C) into panels 7 and 8.

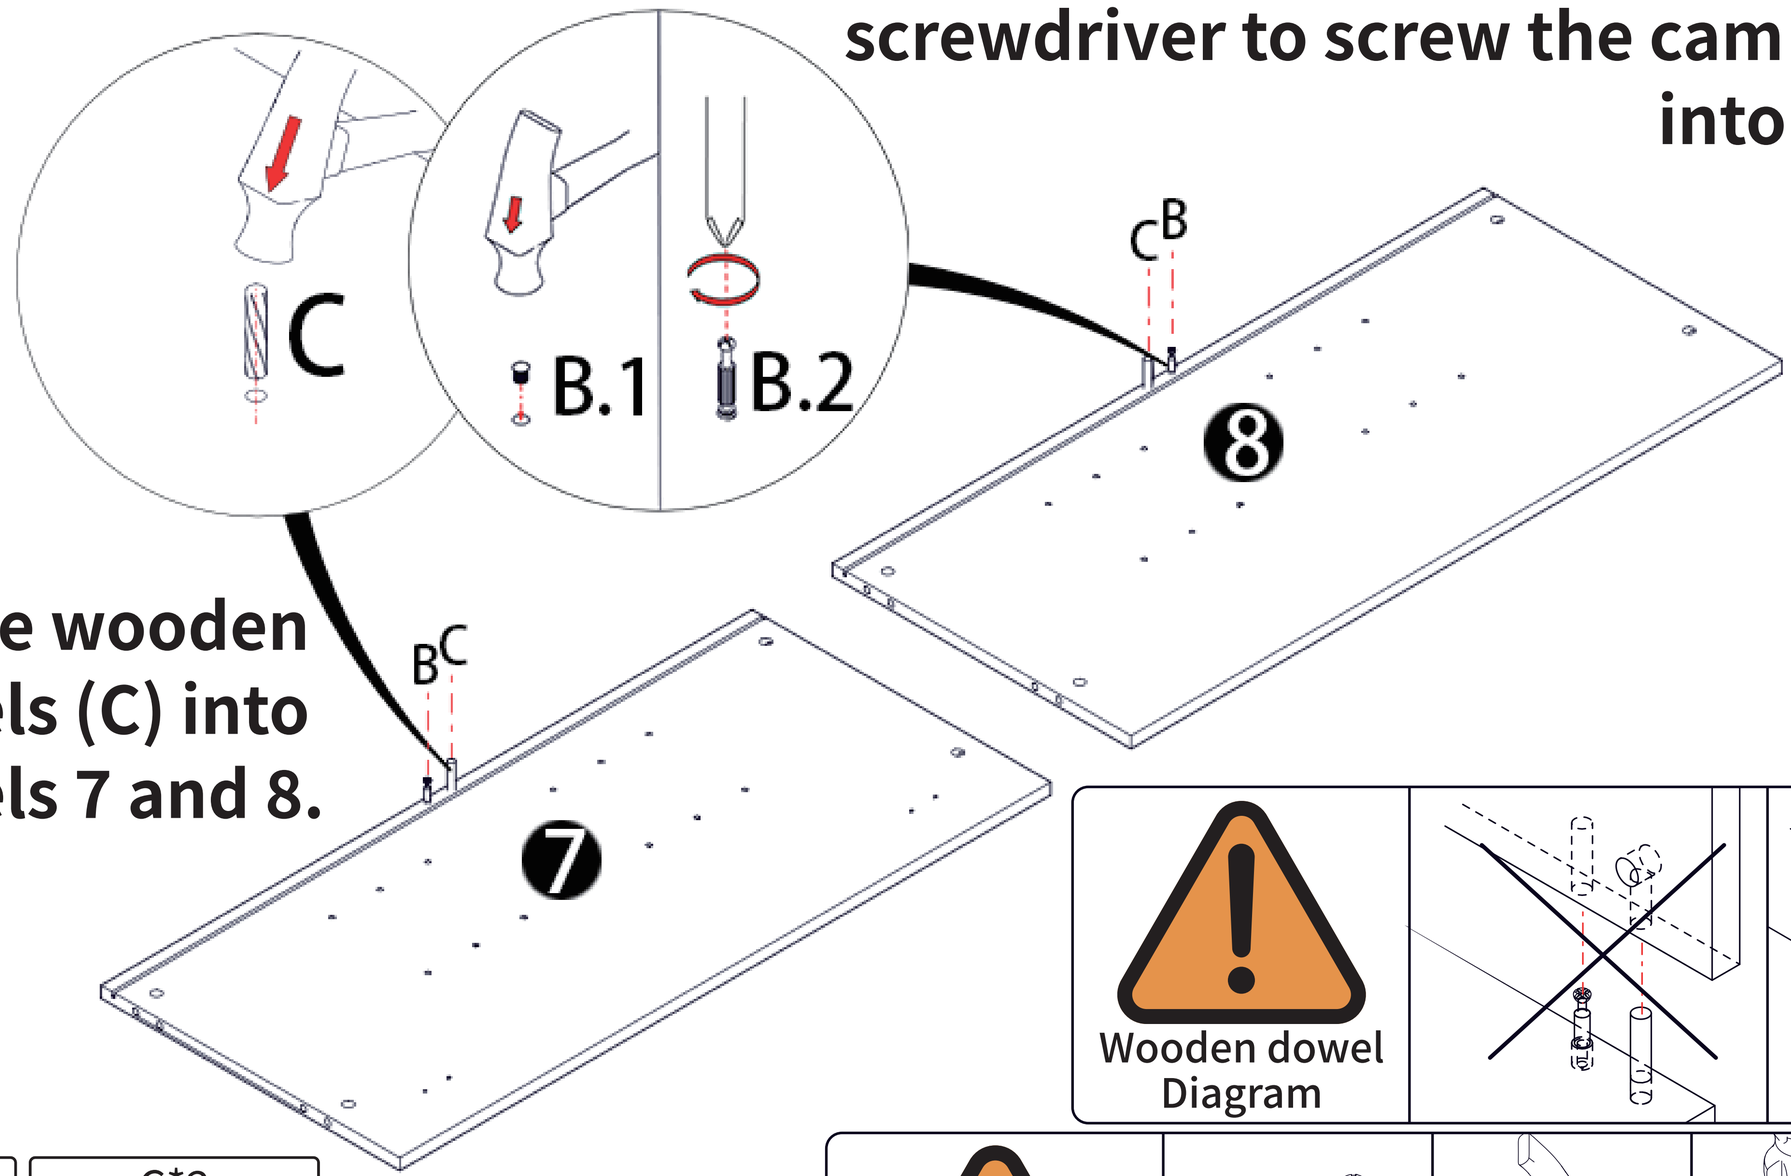


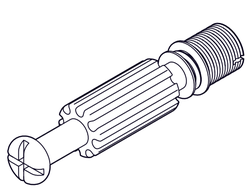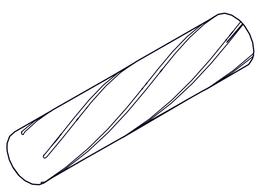B*2	C*2
	
Cam bolts	wooden dowels


Wooden dowel Diagram




Cam bolt Diagram




Unscrew the Cam Nut

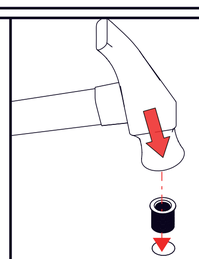

Hammer into the hole

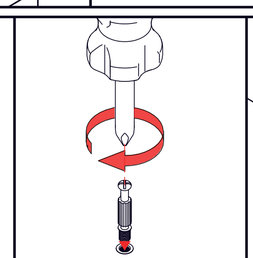



Screw in the Cam Dowel

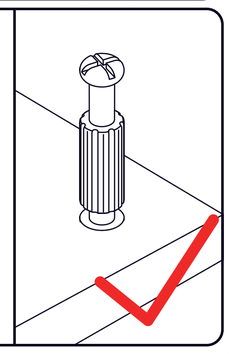

9


As shown in the figure, connect panel 11 to panel 7, and press the Cam wheel (A) into panel 11. Then rotate to tighten.

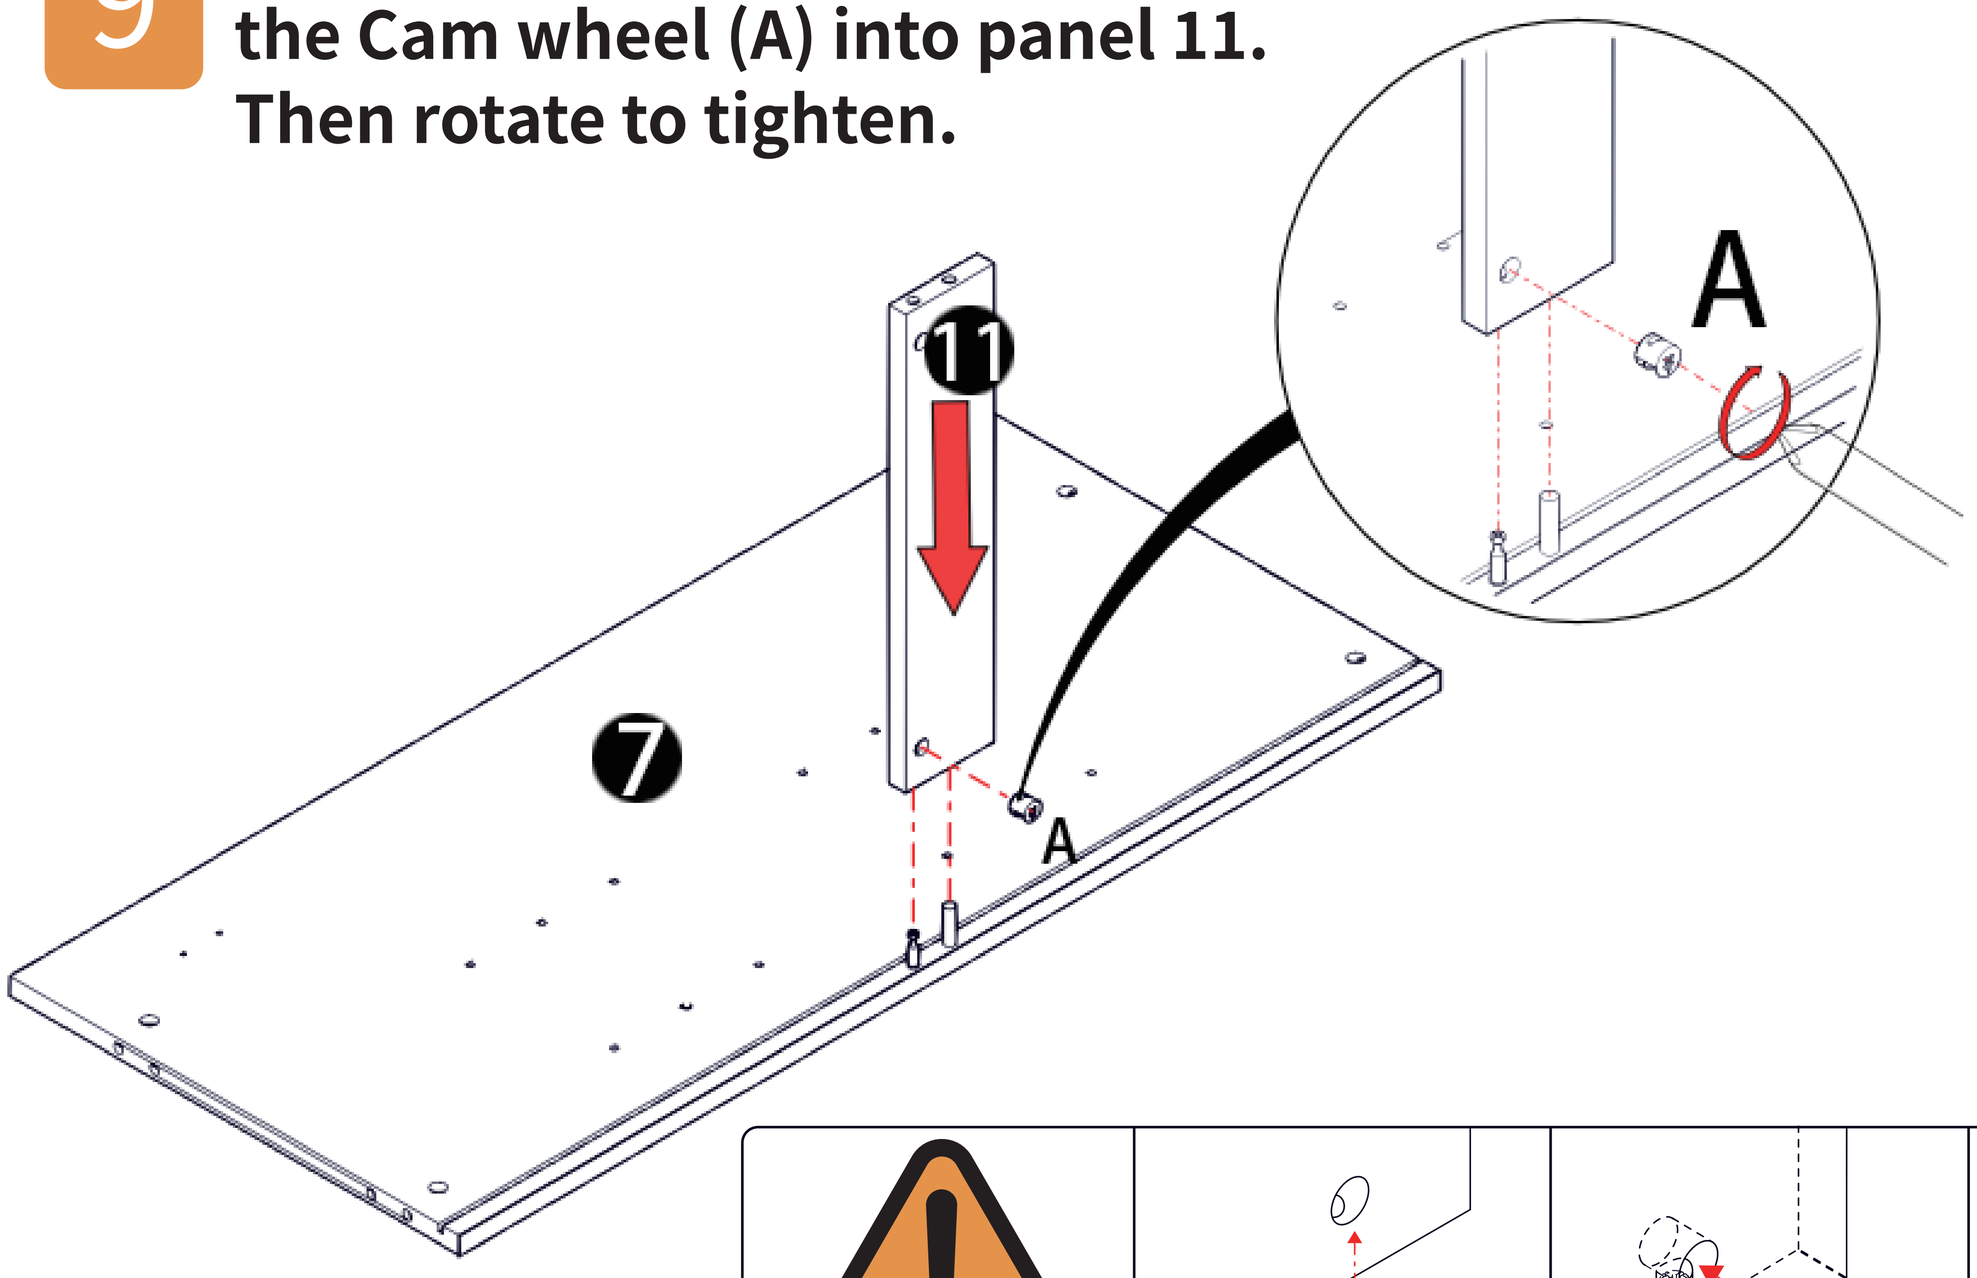


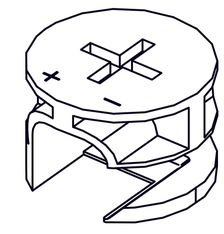
A*1

Cam wheel

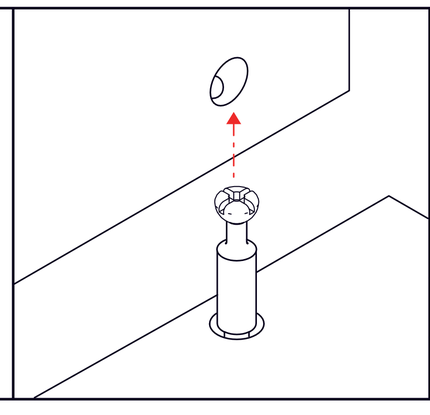

Cam wheel Diagram

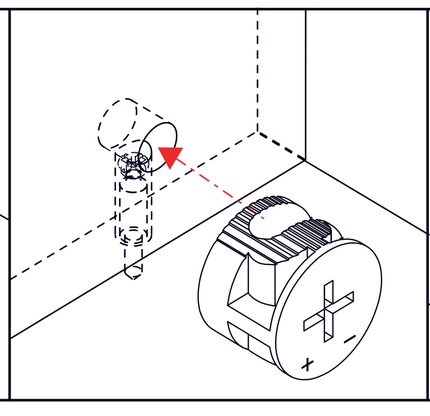

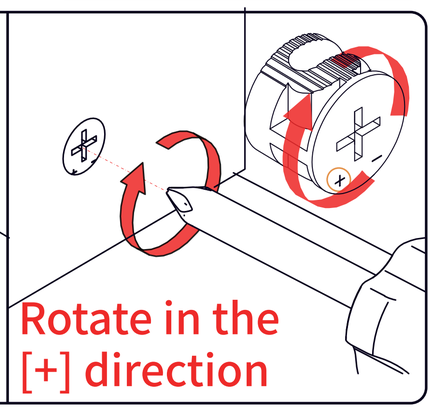





10

then connect panel 8 to panels 7 and 11, and press the Cam wheel (A) into panel 11. Then rotate to tighten.

First rotate the cabinet 90°

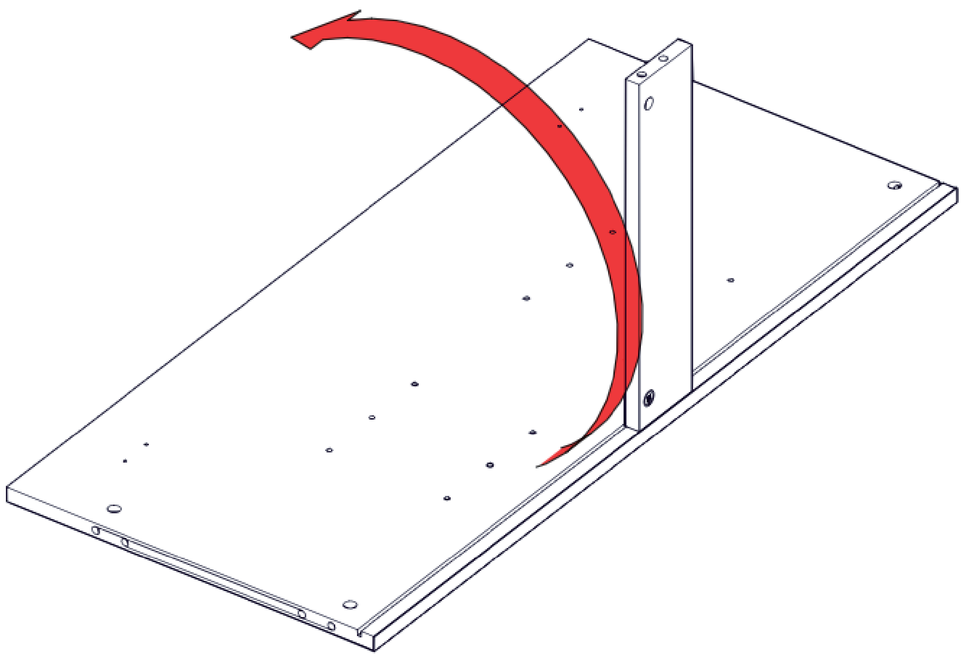

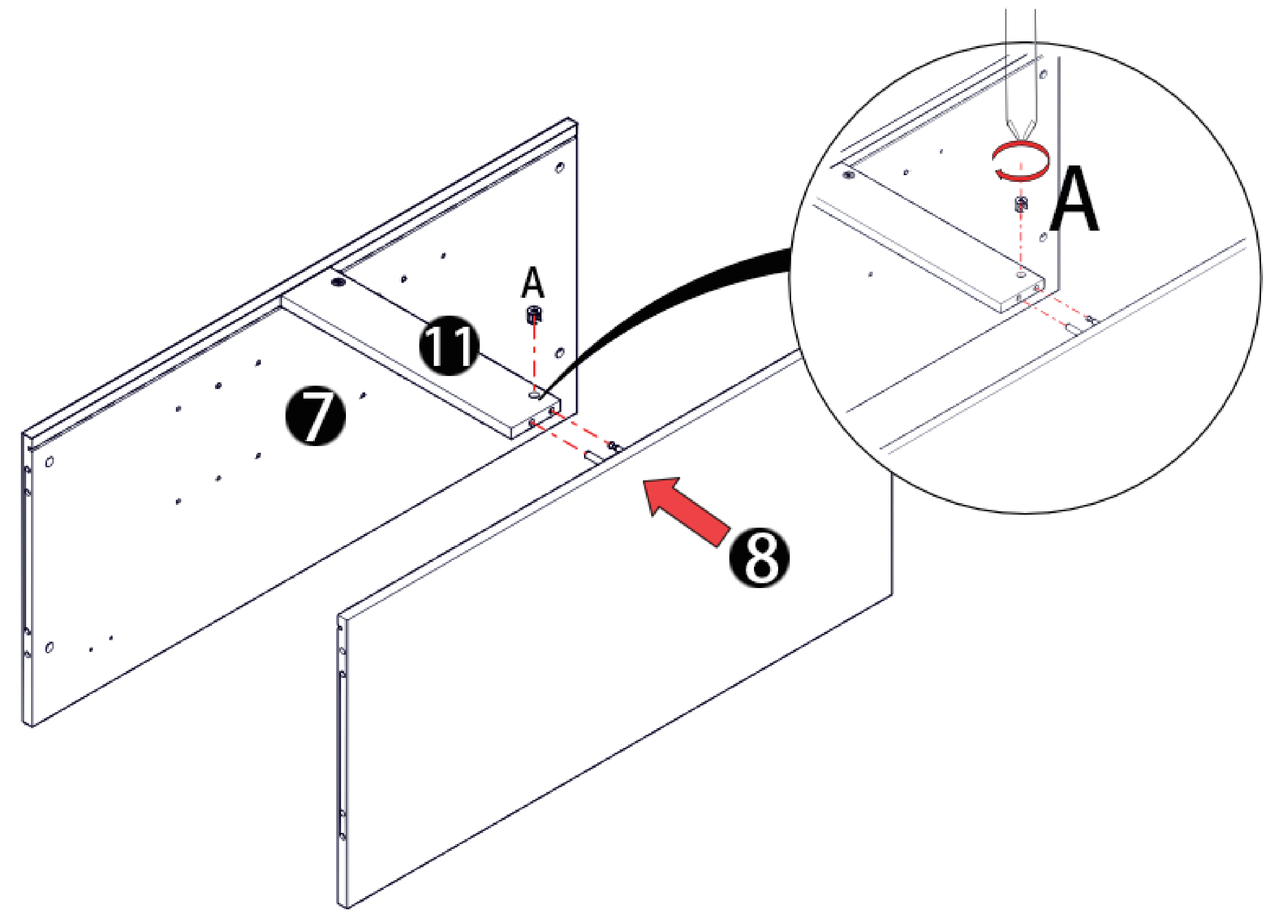


A*1





Cam wheel



Cam wheel Diagram

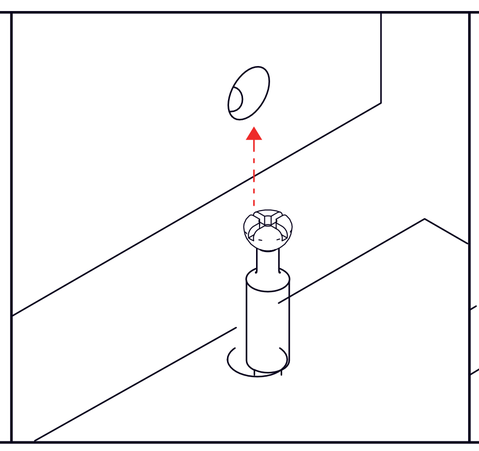


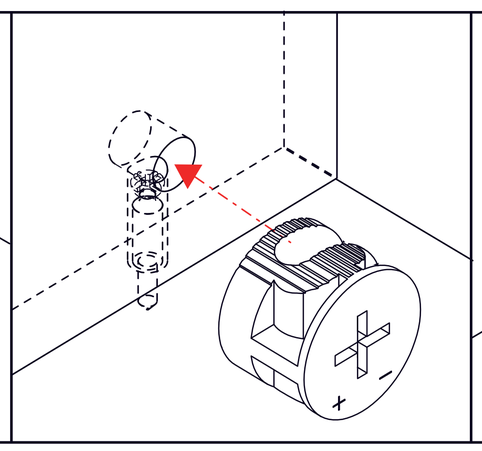

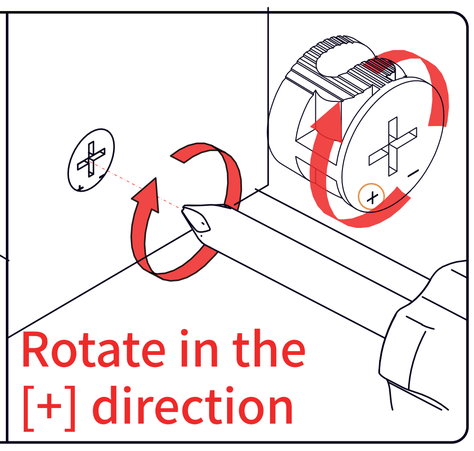

11


A*4

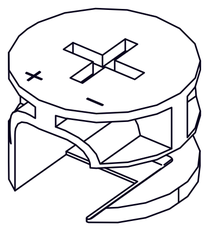


Cam wheels


then connect panel 7, 8, and 11 to panel 6, and press the Cam wheel (A) into panel 7 and 8.

First rotate the cabinet 90°

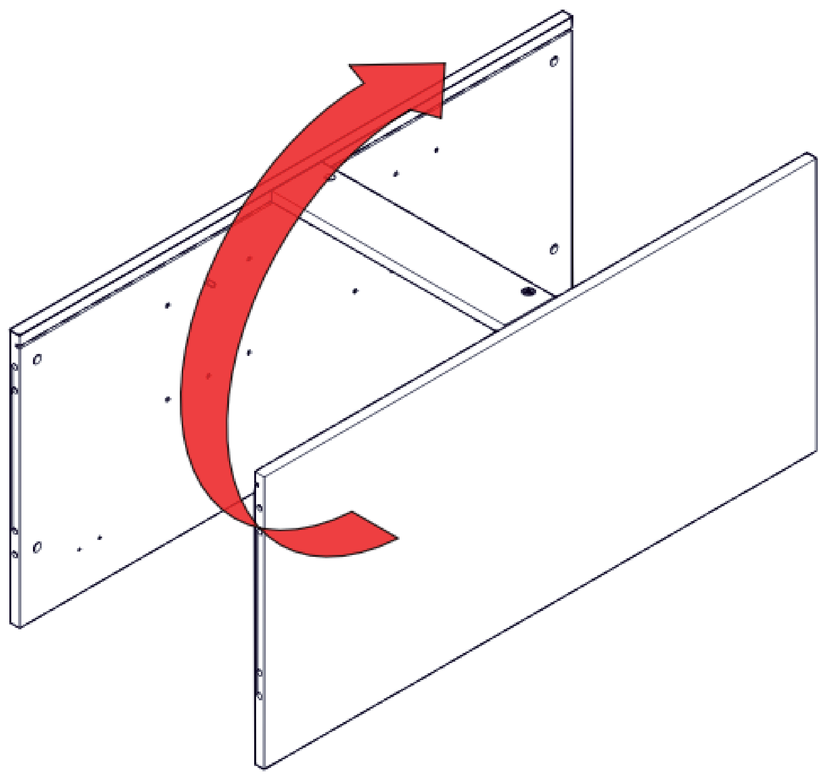


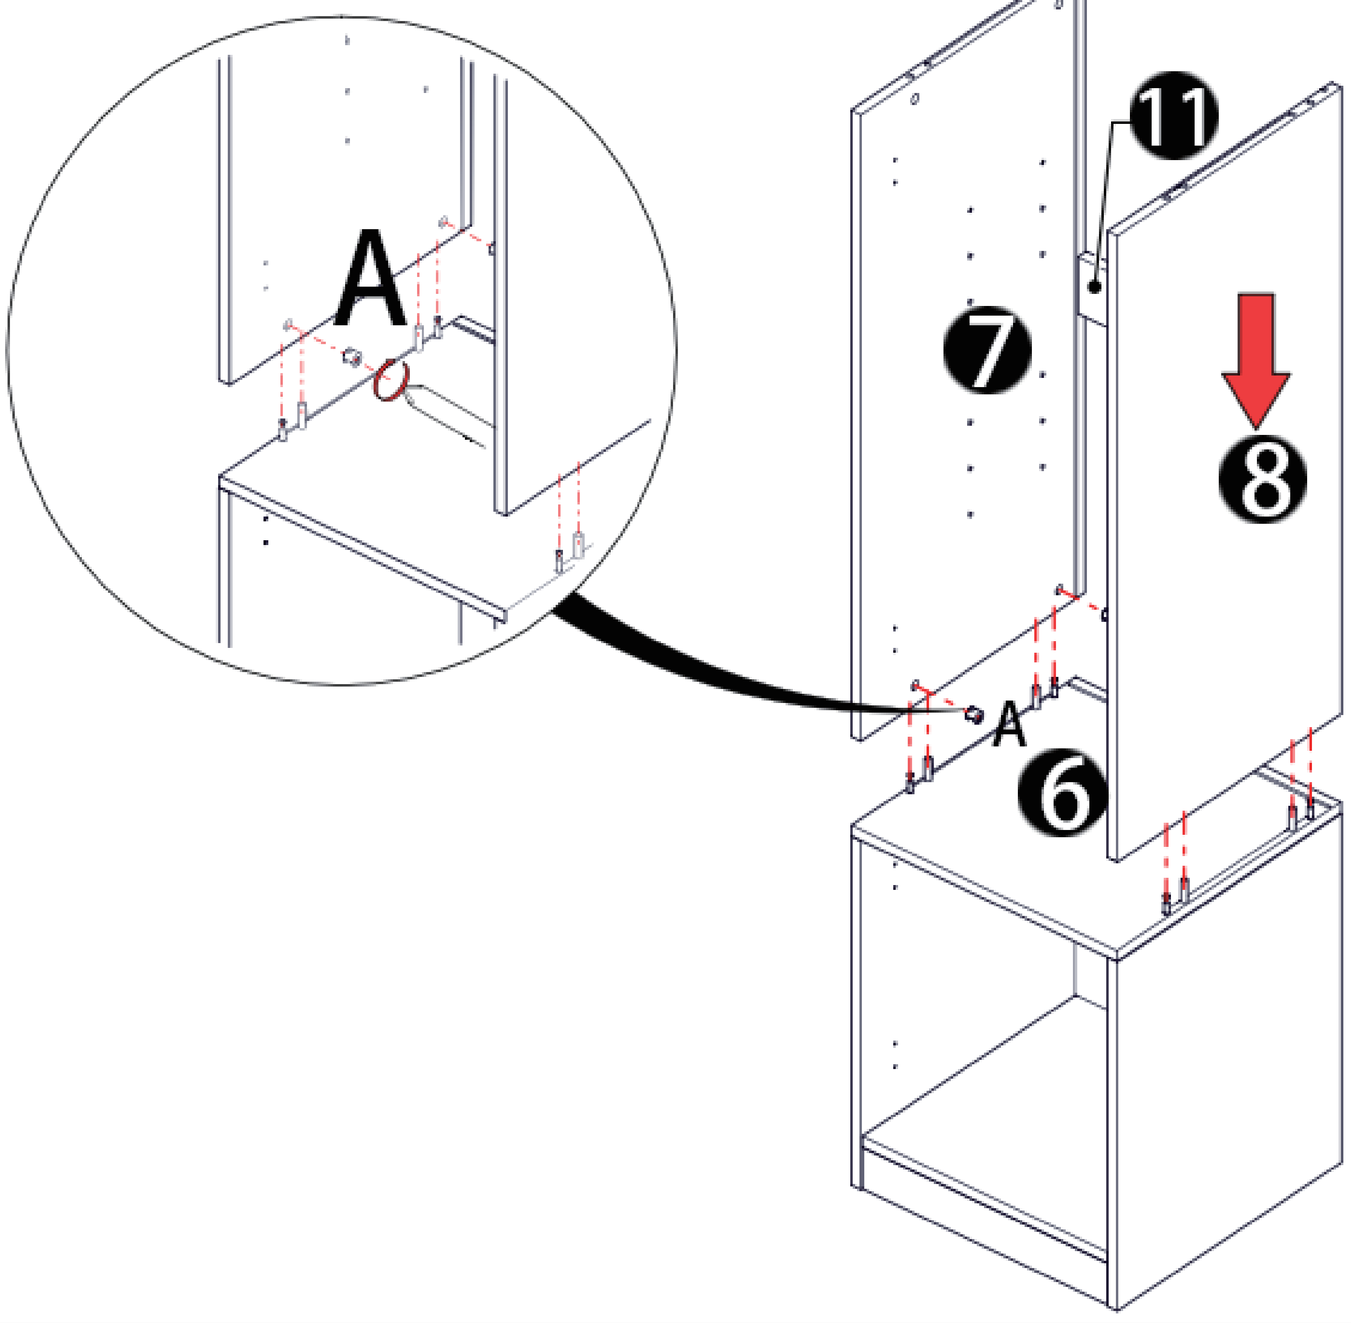


12

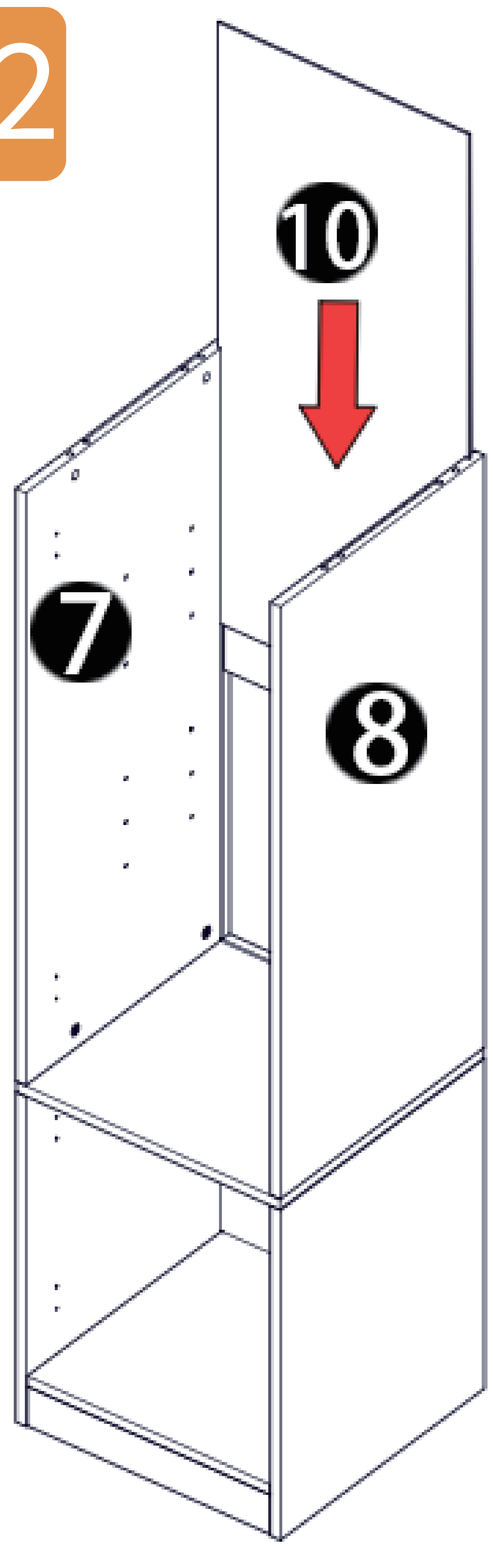

As shown in the illustration, insert Back Panel 10 along the groove.

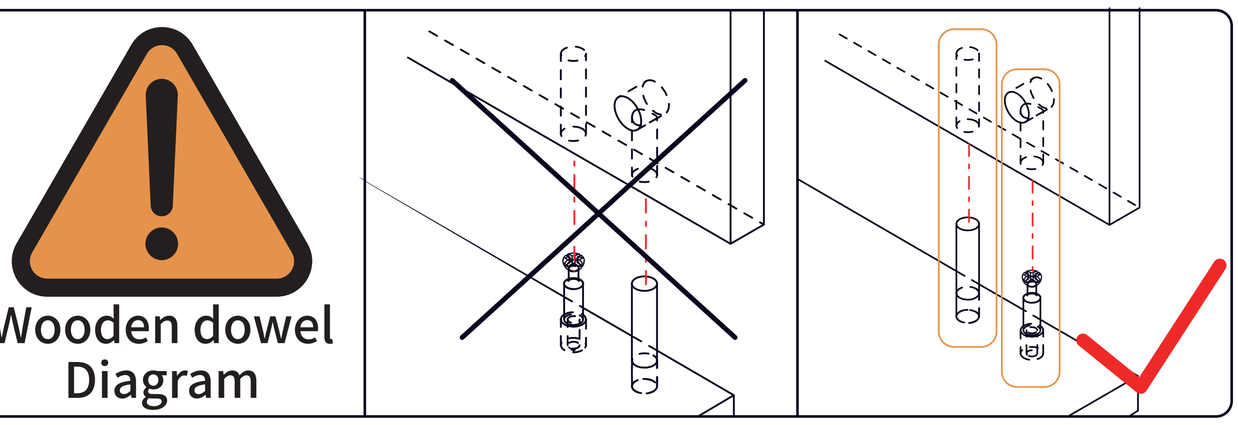


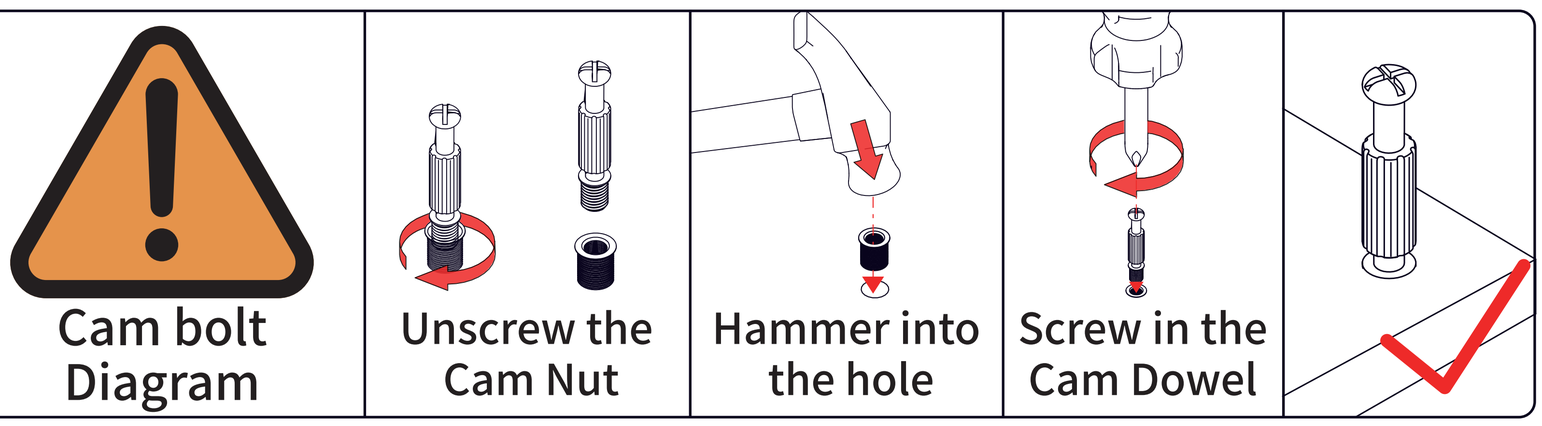

13


As shown in the figure, hammer the black Cam Nut (B.1) into panel 12 first, then use a screwdriver toscrew the cam bolt (B.2) into the black Cam Nut.

B*4

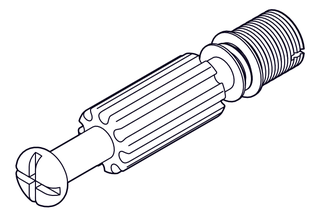


Cam bolts

C*4

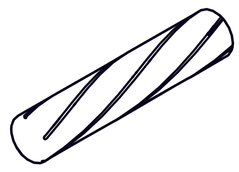

wooden dowels

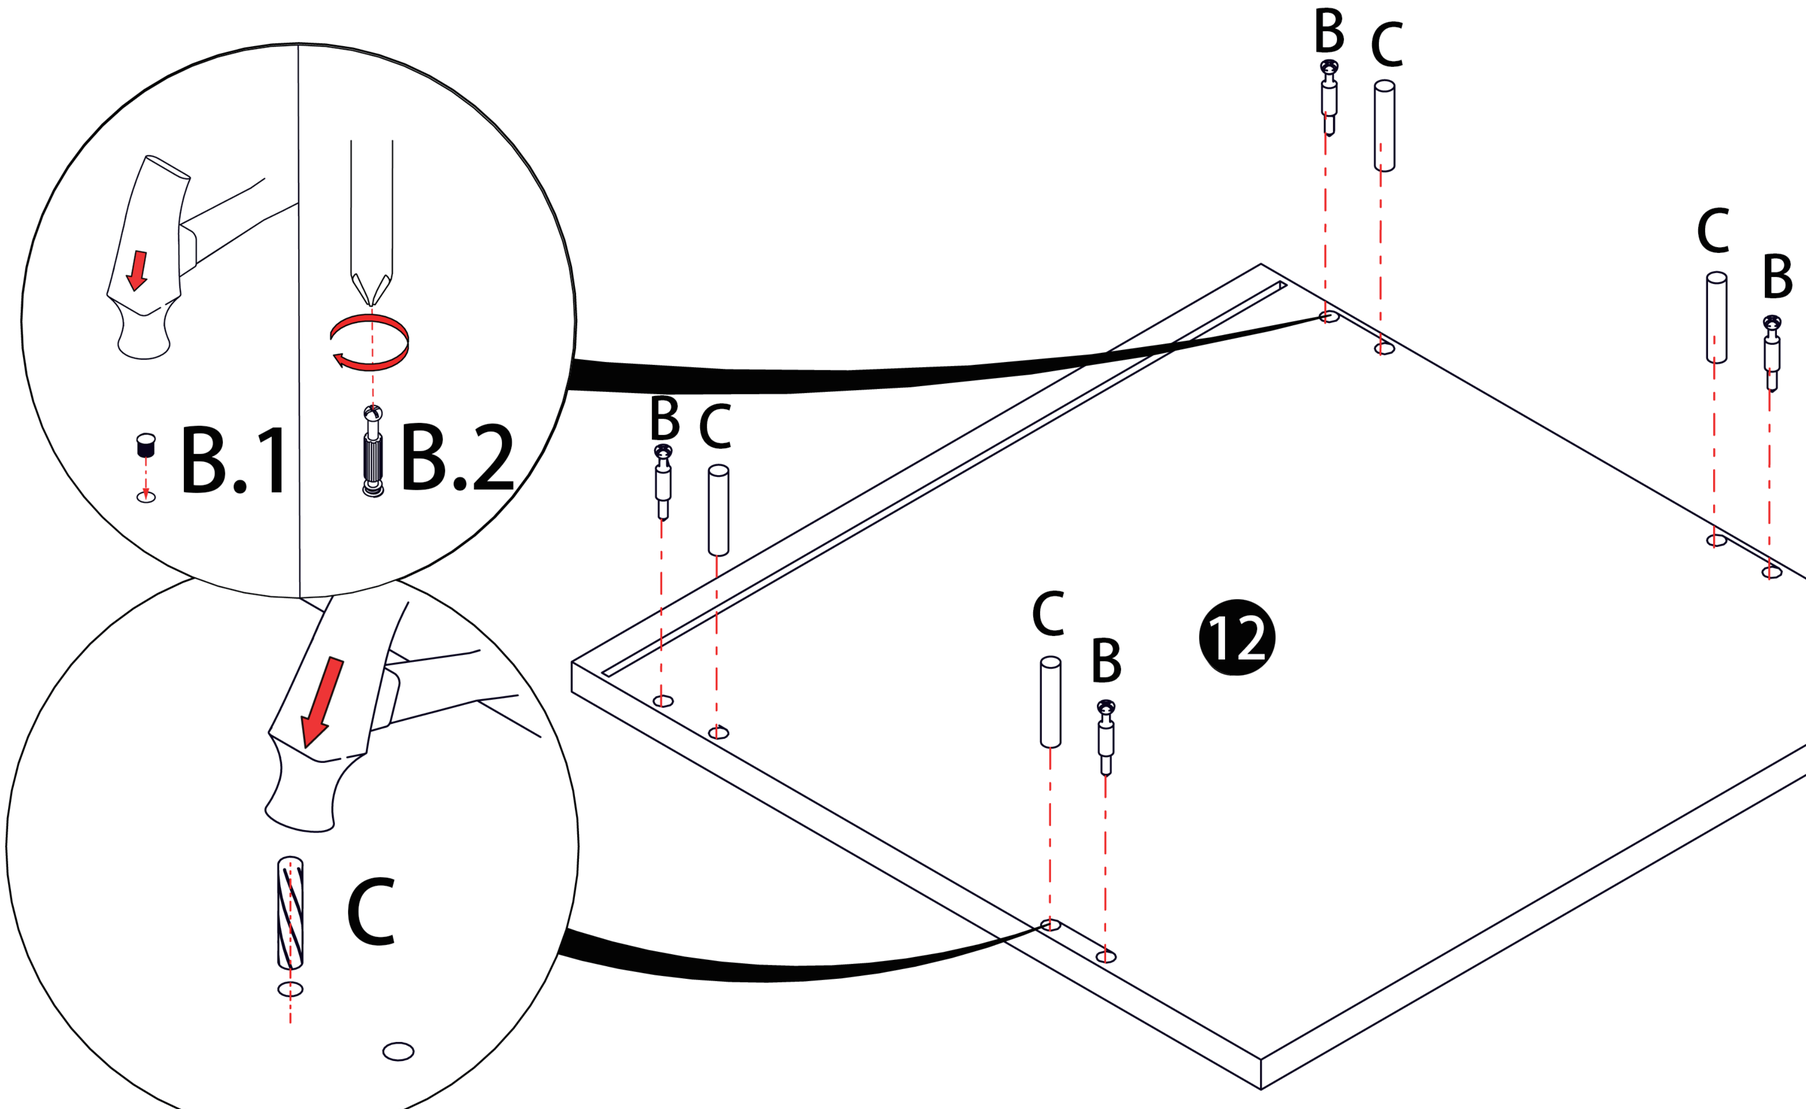

Insert the wooden dowels (C) into panel 12.