128g铜版纸，44x73cm(大规3开)，天地翻，印1300张。纸张自带，奕丰加工　颜色同之前。注意：不要拉墨，不能糊版



JD08-INSTRUCTION

ASSEMBLY INSTRUCTIONS

2022 VIGOSIT Components, Inc. All rights reserved.
VIGOSIT and the language logo are registered trademarks in the United States and/or other countries.
The appearance patent of VIGOSIT has been registered in the United States, Europe and Japan.
Product may vary slightly from those pictured.

PARTS CHECKING

Please check the parts before assembling.


A Gas Cylinder Cover	F Footrest Rail	K Cushion	a x9 M6*20
B Gas Cylinder	G Footrest Rail Buckle	L Armrest (L & R)	b x10 M6*25
C Base	H Tilt Mechanism	M Lumbar Pillow	c x3 M8*20
D Caster	I Back Support Plate	N Head Pillow	d x4 M8*30
E Footrest	J Backrest	O Power Supply Adapter	e x2 Rubber ring
			f x8 Gasket
			g M6
			h x4 Plastic cap

INSTRUCTION


If you have any questions during assembly, Please feel free to contact the after-sales service department. ✉vigositus@163.com


Installation of Base and Gas Cylinder

1.Install the five feet of base to the core of base as shown.
Use five M6x20mm (a) screws to reinforce the joints of the base.

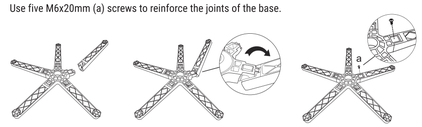


2.Turn the base over and insert the casters firmly as far as it will go.
※To prevent the casters from coming off,it is a bit difficult to insert.

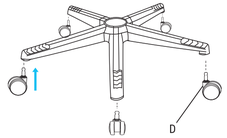

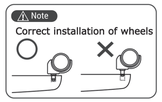


3.Insert the gas cylinder into the base as shown.

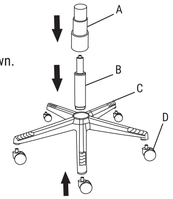


Note Both a/b need to be used together with f.

4.Installation of Tilt Mechanism

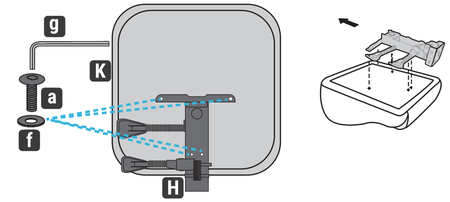


Place the seat on a stable place such as a table.
Using the four M6×20mm (a) screws to attach the Tilt Mechanism to the seat cushion.

5.Installation of THE FOOTREST

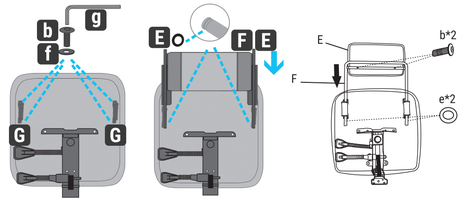


Using the four M6×25mm (b) screws to attach two footrest rail buckle (G) to the seat cushion.
Using the two M6×25mm (b) screws to attach the footrest (E) to the footrest rail (F).
Insert the footrest rail (F) into the footrest rail buckle (G).
NOTE: Use the rubber ring (e) to clamp the end of the footrest rail as shown in the picture to prevent the footrest from falling.

6.Installation of Backrest

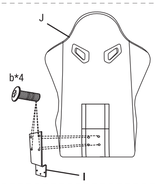


Align the steel plate with the four holes on the backrest and screw in the 4 screws.

Then, with the seat cushion in a stable position, insert the back support plate into the tilt mechanism and install the three screws.

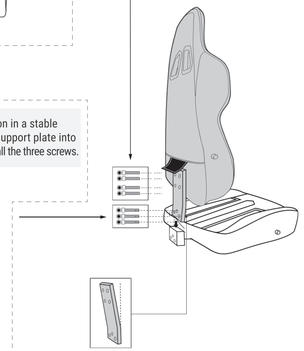


※The back support steel plate has an inclined design, please note that the steel plate is inclined outward when installing.

7.Fix the headrest and lumbar pillow as shown.

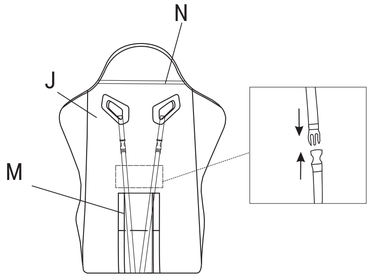




Rated Voltage: 12V
Rated Current: 2A
Rated Power: 24W
Note Please do not exceed the rated voltage when using to ensure the safety, stability and service life of the massage lumbar pillow.

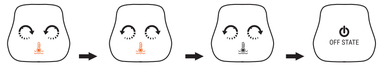

WARNING:For your personal safety, when you use this massage lumbar pillow, please make sure you are using the special power adapter.

* The straps of the headrest are directly fixed.
* The lumbar pillow belt is passed through the gap between the backrest and the cust and fixed.

8.Installation of Armrest

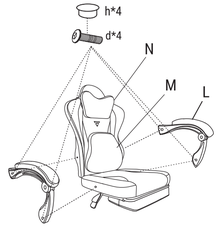


Attach the armrest to the main body as shown.
※ Please note the strength of screwing, if the backrest does not tip over, the armrest screws may be too tight.

9.Installation of Cushion



Assemble the upper and lower parts of the chair as shown.
※ If lack of energy, or install it by yourself, please place the upperside of the chair on the ground, insert the gas cylinder into the tilt mechanism, and pick up the chair.

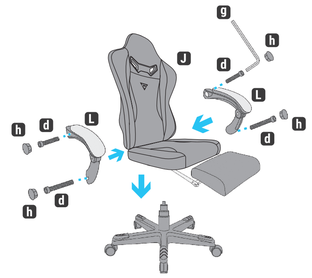

USAGE

Please read before use.

Vibration Massage Function

Massager works by connecting a USB power port such as a personal computer / laptop.

Backrest Angle Adjustment Function

When adjusting the angle of the backrest, sit on the chair and operate the reclining lever.
- Pull the lever up to release the reclining function, and tilt it back to increase the angle of the backrest. If it is the other way around, it will decrease.
- Push the lever down to fix the backrest at the current angle.

Seat Height Adjustment Function

When adjusting the height, sit on a chair and operate the lift lever.
- If you raise the lift lever while your hips are floating, the seat surface will rise.
- If you raise the lift lever while sitting, the seat surface will drop.



BEFORE USE

- The purpose of this manual is to describe the items you should be aware of when using the product to prevent harm to you and other people and damage to property. Please be sure to observe it for safe use.
- Please read this manual carefully before use to ensure correct and safe use.
- Please keep it in a safe place and read it when necessary.
- When renting or transferring the product to a third party, be sure to attach this manual and fully explain the handling method.

* The warranty period is one year after delivery. If a failure occurs due to our responsibility within the above warranty period, we will repair or replace it with a new product for free.
Please do not hesitate to contact us if any problem occurred: ✉ vigositus@163.com

SAFETY PRECAUTIONS

The precautions written here are to prevent harm or damage to you or others.
All of these are important contents for safe use, so be sure to observe them.
- Do not disassemble or lubricate the gas cylinder. It may explode and cause injury.
- Please do not incinerate. The high-pressure gas in the gas cylinder may explode or emit toxic gas.
- Do not put your hand in the gaps between the moving parts.
- Do not operate the up/down adjustment lever on the seat surface while the seat is vacant. The seat and backrest may rise sharply and cause injury.
- Do not use ow slippery floors. You may fall and get injured.
- To avoid safety incidents and ensure user experience, all the screws must be fully tightened before use.
- Also, if any rattling occurs due to the loosening of bolts or screws during use, check to make sure all the screws are fully tightened in a right way.
- Please do not let the infant sit alone. They may fall and get injured.
- Please do not modify unauthorized.

PRECAUTIONS FOR USE

- Outdoor use of this product or getting wet may cause malfunction, rust or discoloration.
- Avoid using the product in a place exposed to direct sunlight or heat, such as a stove, or in a place with significant humidity or dryness.
- Tighten the bolts and screws regularly every two months.
- Vacuum or use slightly wet cloth to remove dust or dirty on the main body of the chair. Do not use anything like bleach or benzine to clean the chair.