
PAPROOS


Model:FDYWC009NA FDYWC009BK FDYWC009WAL

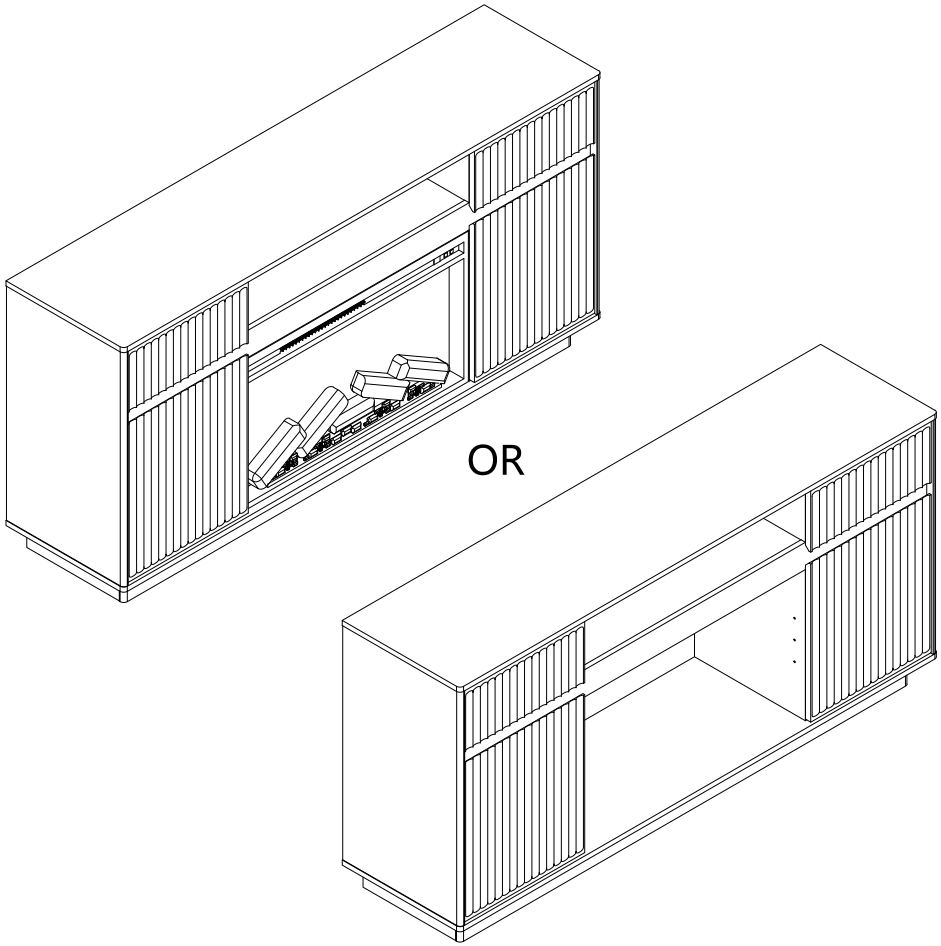

OR

info@serviceprohelp.com

PLEASE READ CAREFULLY

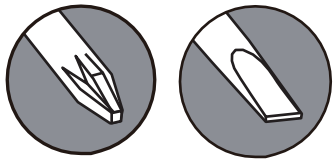

TOOLS REQUIRED

Two people are required for assembly.


Move this piece of furniture gently with two people.



Read this assembly manual carefully, and verify that you have all the parts listed before you begin.
Keep your assembly manual for future reference.



Do not place very hot/cold objects on top of any surface.
Always use a coaster or mat. Never leave liquids on the surface.
Clean immediately with a mild soap and a damp cloth.
Never use scouring powder based cleanser.

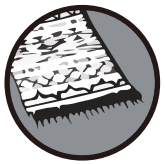

Protect finishes by placing furniture pieces on a soft carpeted surface during assembly.

SAFE INFORMATION

WARNING: To prevent serious injury or death from furniture tip-overs.

- **NEVER** allow children to climb, stand, or play on any furniture.
- **ALWAYS** supervise children around furniture.
- **KEEP** remote controls, toys, and other attractive items out of reach from the tops of furniture.

WARNING: ALWAYS anchor furniture to the wall.


- Anchoring is **ESSENTIAL** to prevent tip-overs.
- Anchor **DIRECTLY** to wall studs or masonry using appropriate hardware.
- **CONSULT** a qualified professional if you are uncertain about your wall construction or how to install anchors properly.
- **REFER** to your television and furniture owner’ s manuals for model-specific instructions.
- **NEVER** remove wall anchors without first emptying all items from the furniture.

CAUTION: Use only furniture designed for TVs.


- Placing a TV on furniture **NOT** designed for it (e.g., dressers, bookcases) creates a top-heavy, unstable hazard.
- **USE ONLY** furniture specifically designed and rated to support the weight and size of your television.
- **FOLLOW** all manufacturer instructions for installation and weight limits.


➡ For more details, visit https://www.anchorit.gov/


EXPLODED VIEW

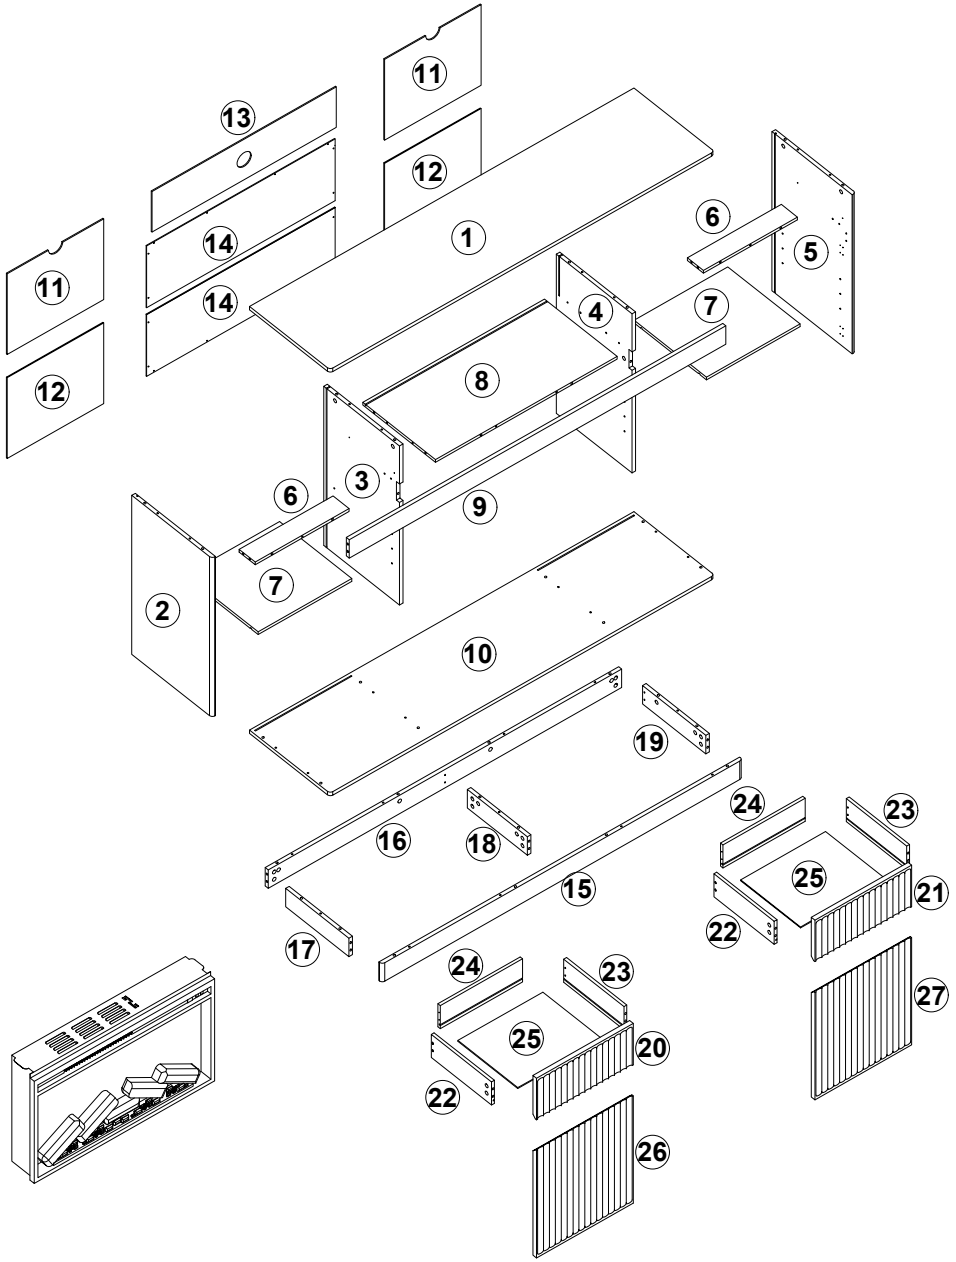



PARTS

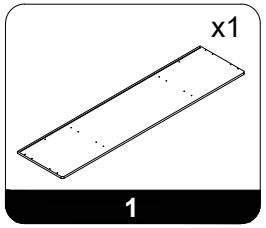


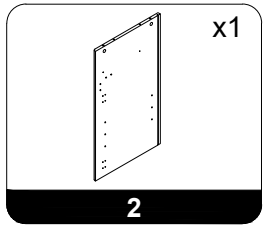


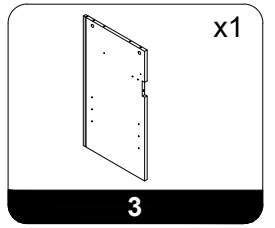


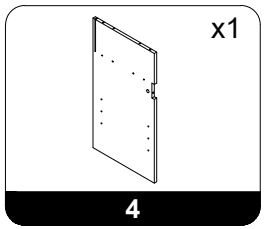


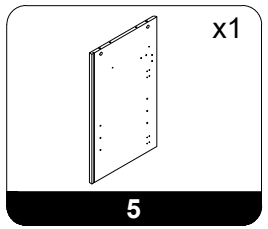


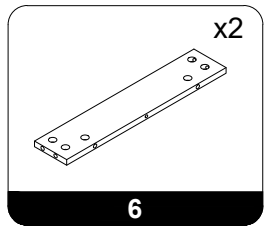


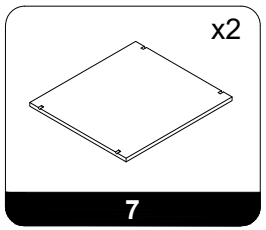


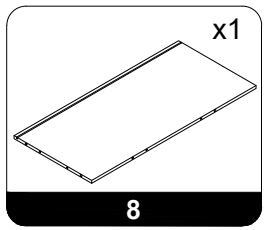


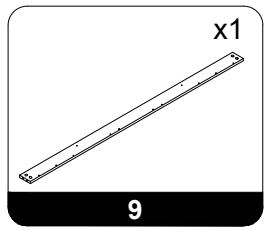


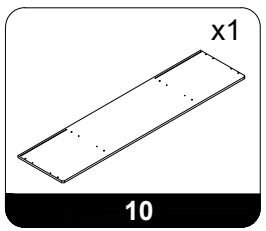


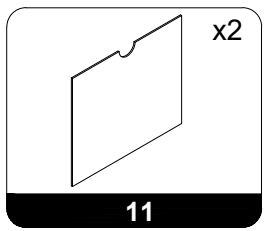

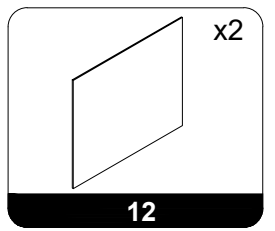


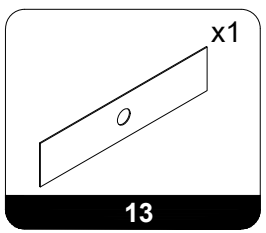


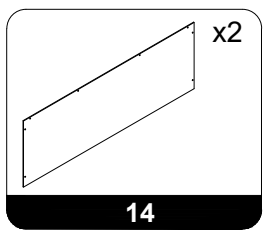


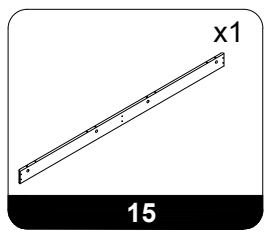



PARTS

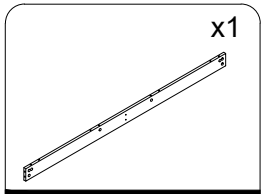


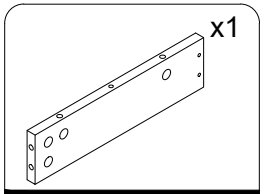


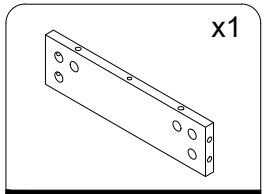


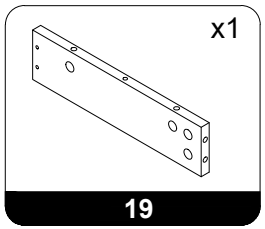


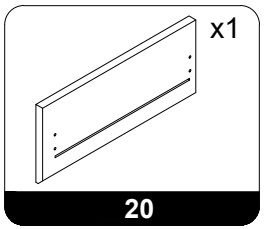


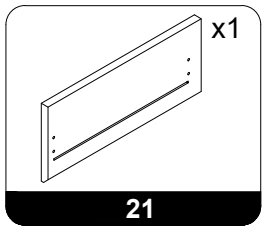


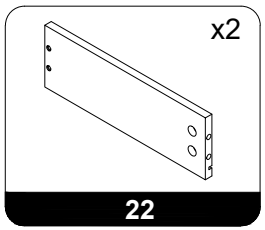


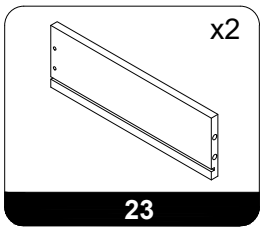

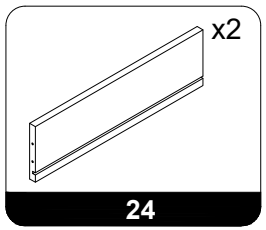


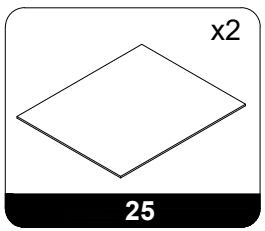


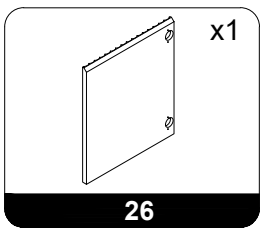


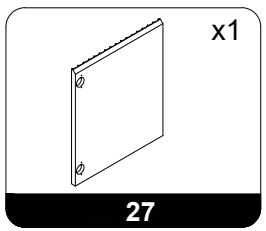



HARDWARE

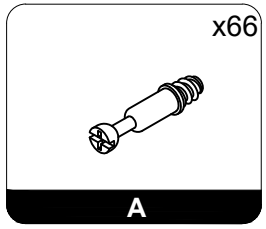


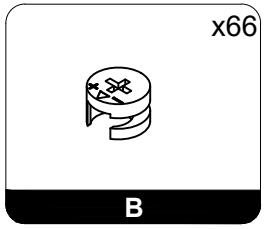


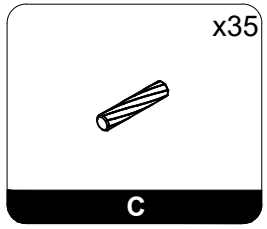


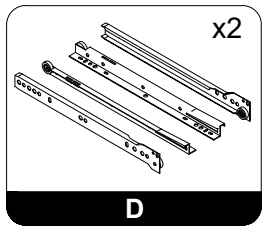


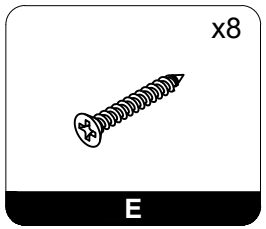


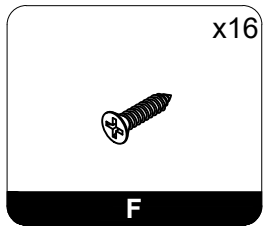


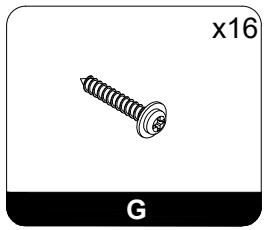


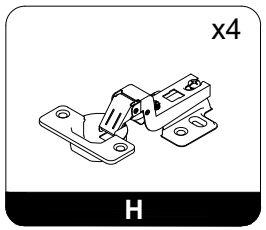


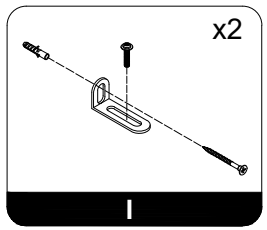


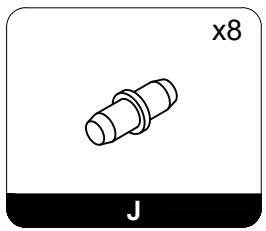


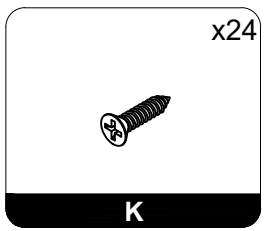

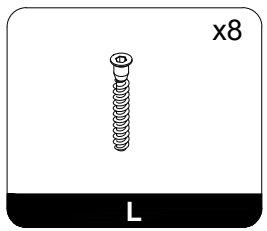


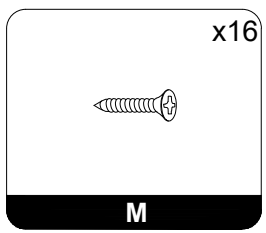

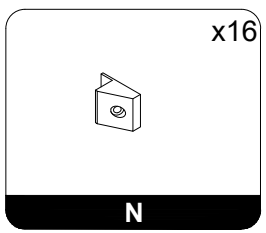

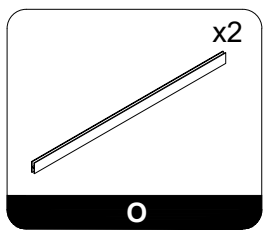


HARDWARE

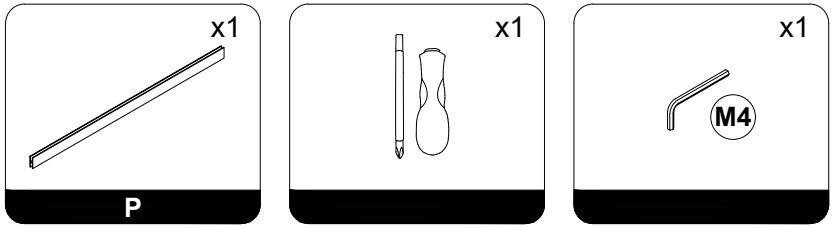


ASSEMBLY INSTRUCTIONS


Do not tighten the screws until all of them are fastened into the holes.


STEP 1

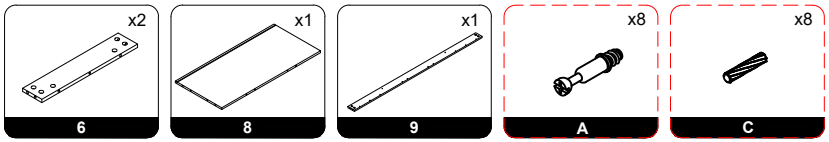

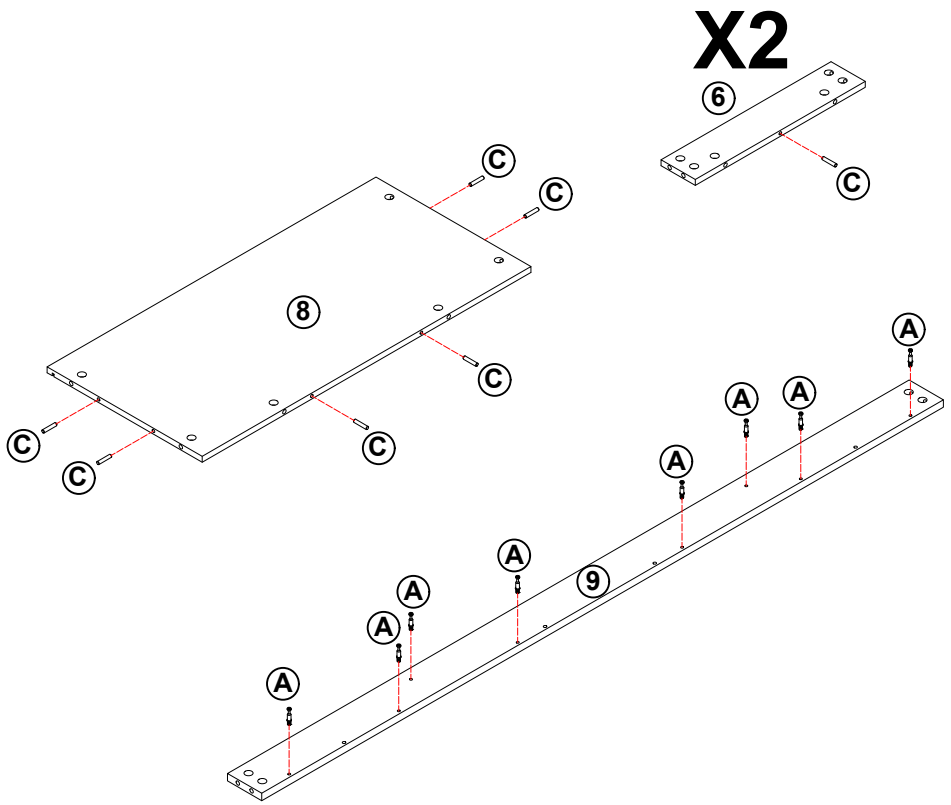


STEP 2

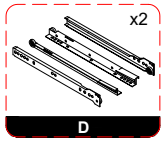


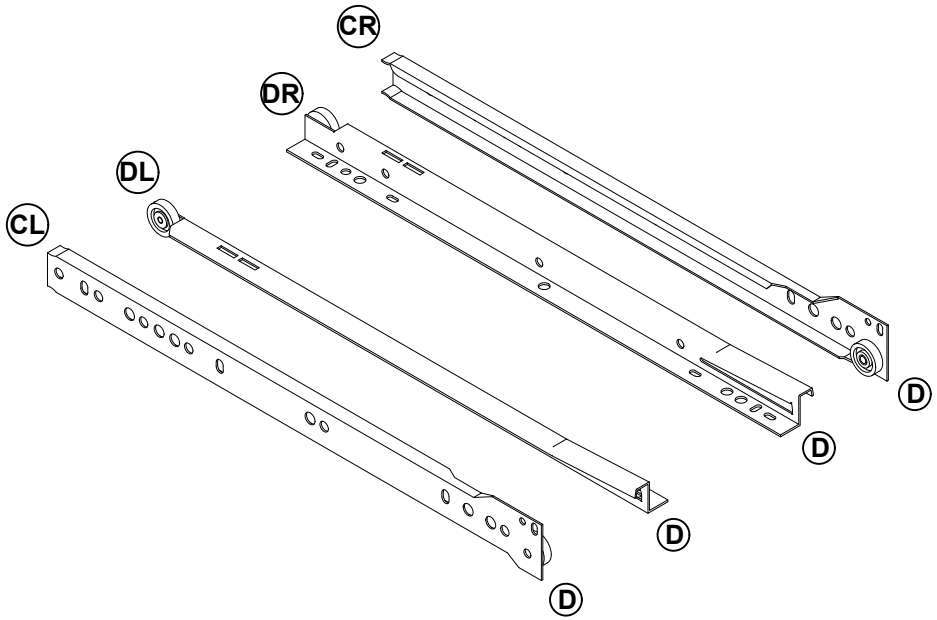


X2


STEP 3

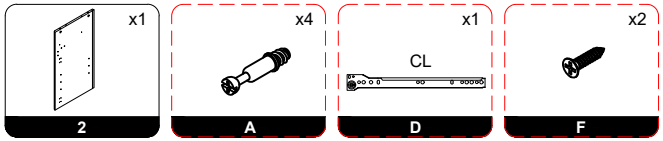


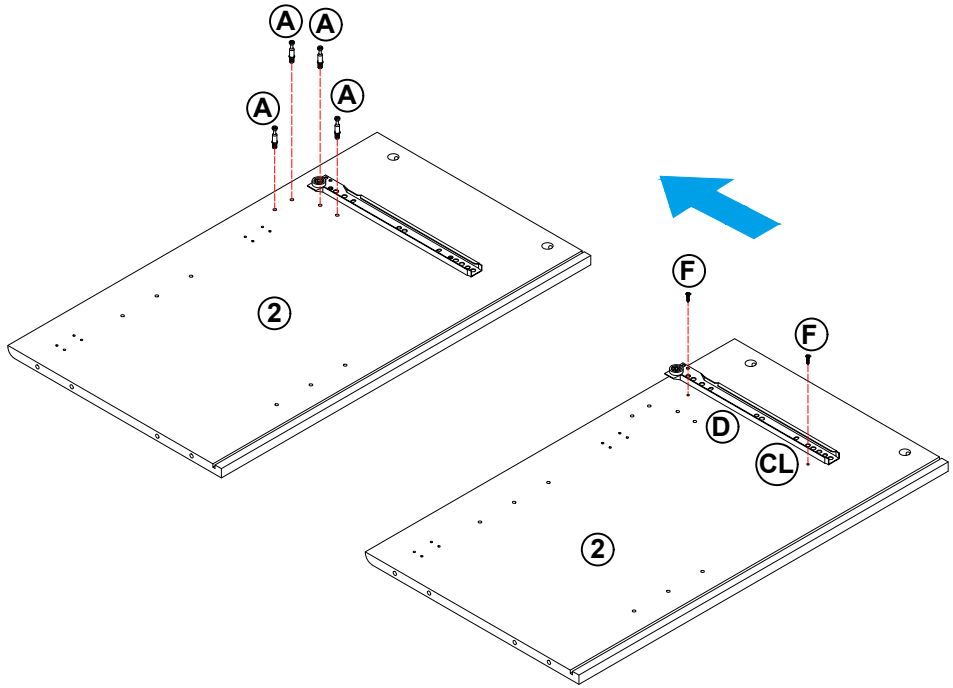


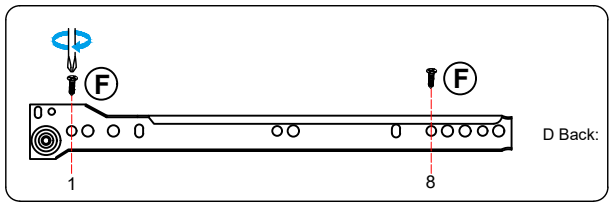


STEP 4

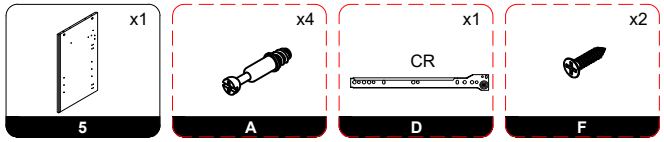

x1
5
x4
A
x1
CR
D
x2
F

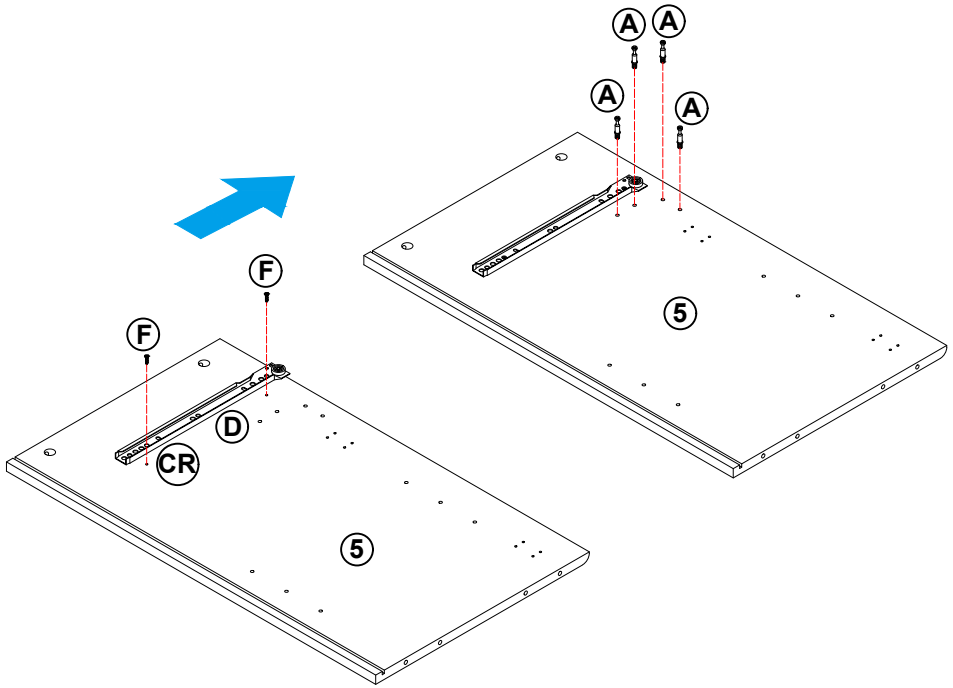

A
A
A
A
F
F
D
CR
5
5

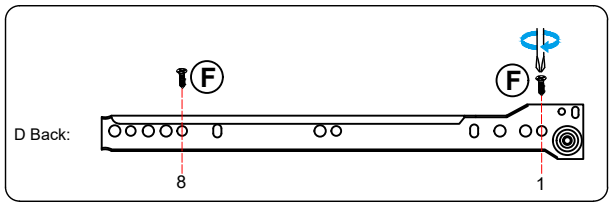
D Back:
F
F
8
1


STEP 5

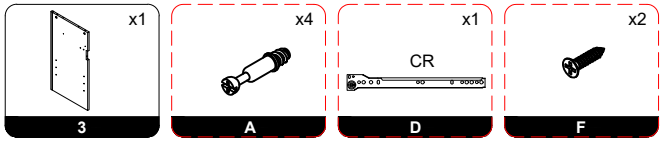

x1
3
x4
A
x1
CR
D
x2
F

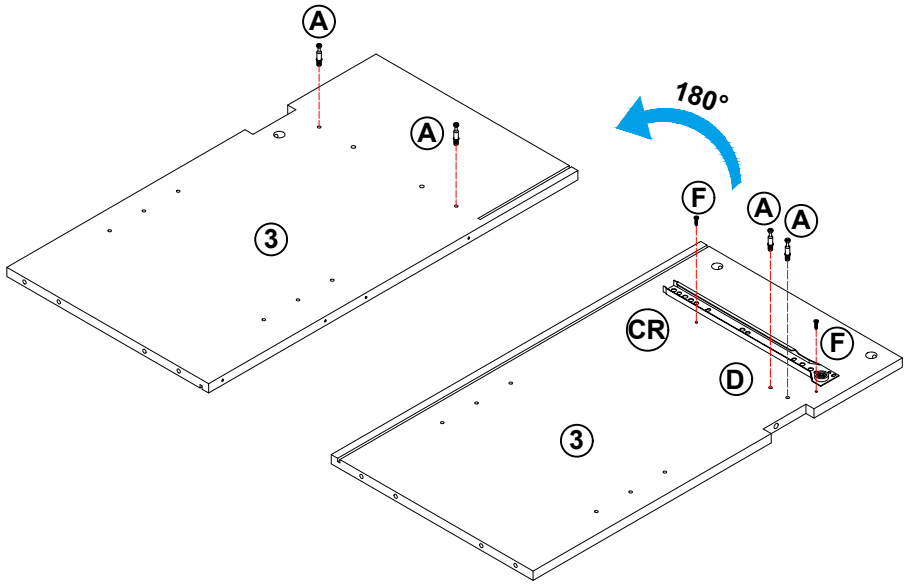

A
A
3
180°
F
A
A
CR
F
D
3

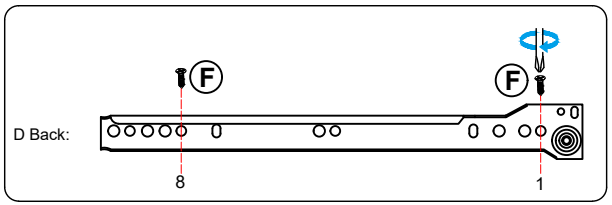
D Back:
F
F
8
1


STEP 6

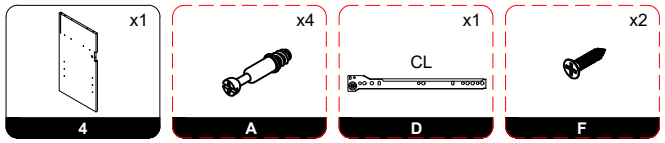


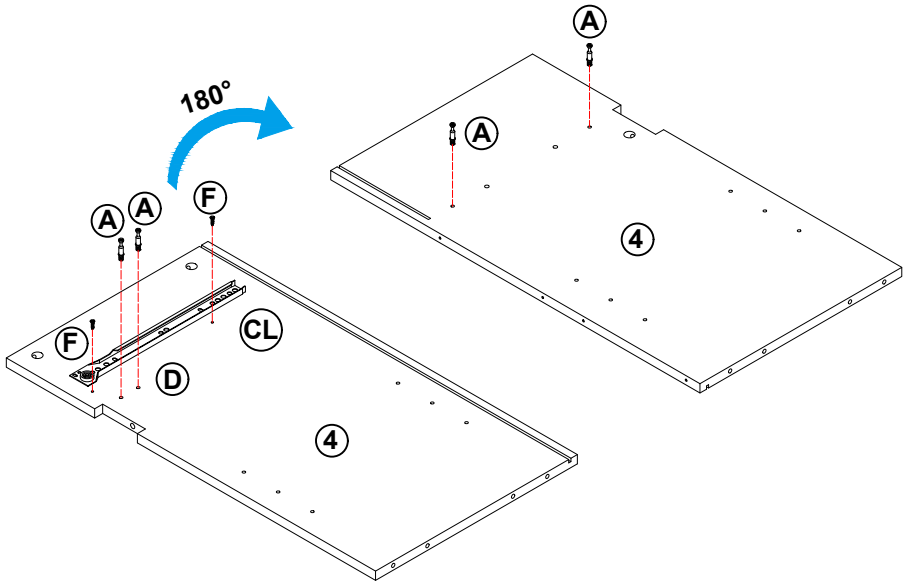


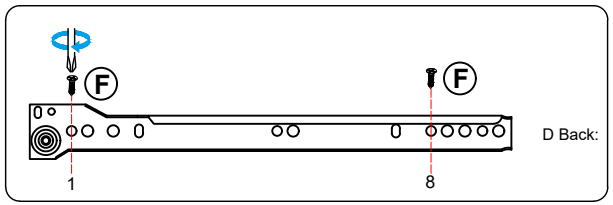

STEP 7

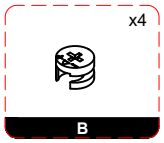


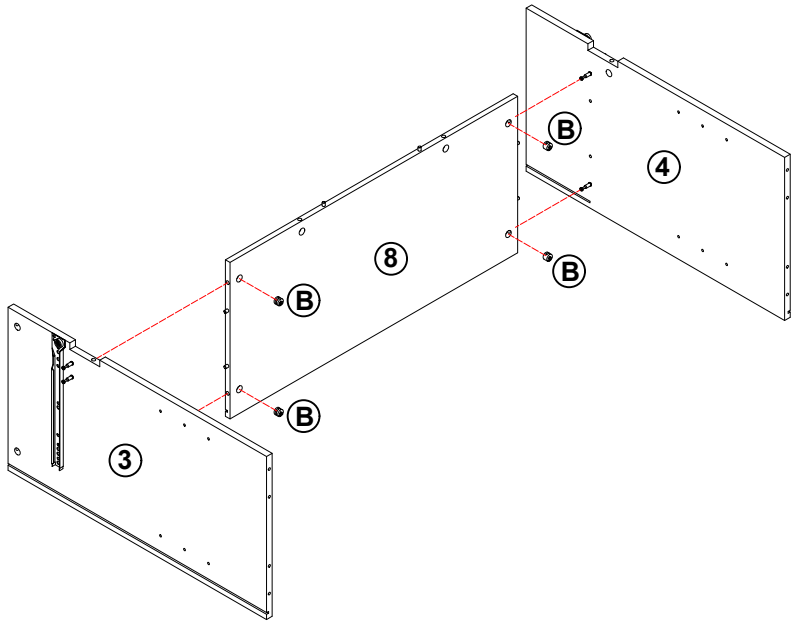





Note: the direction of the arrow.

STEP 8

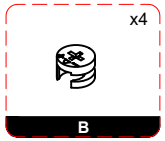


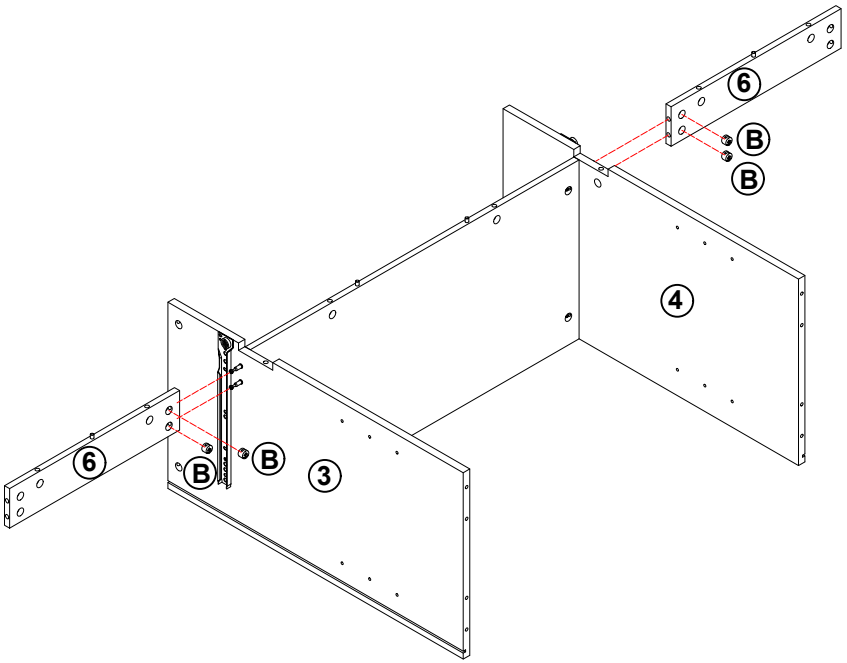





Note: the direction of the arrow.

STEP 9

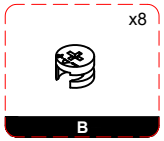


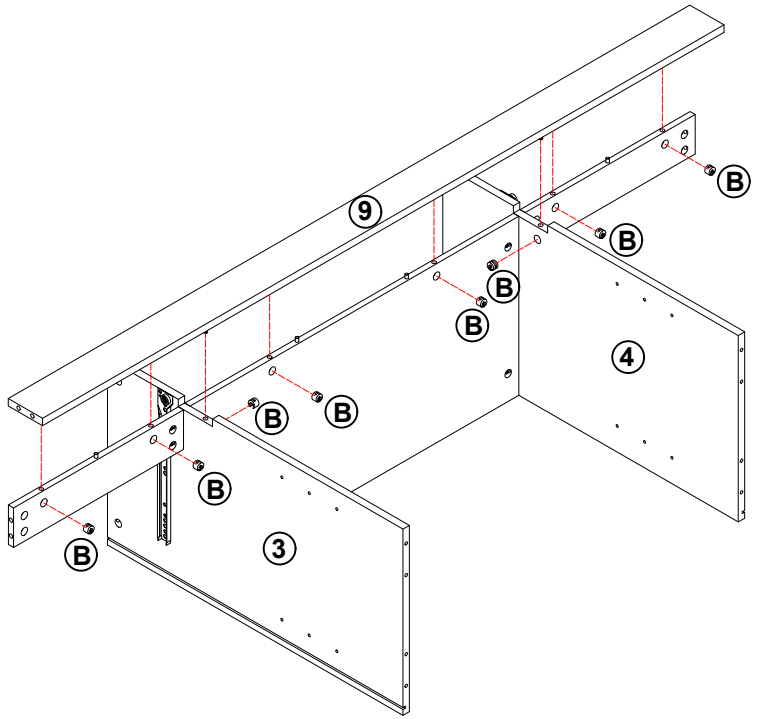





Note: the direction of the arrow.

STEP 10

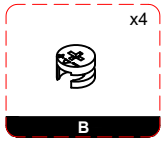


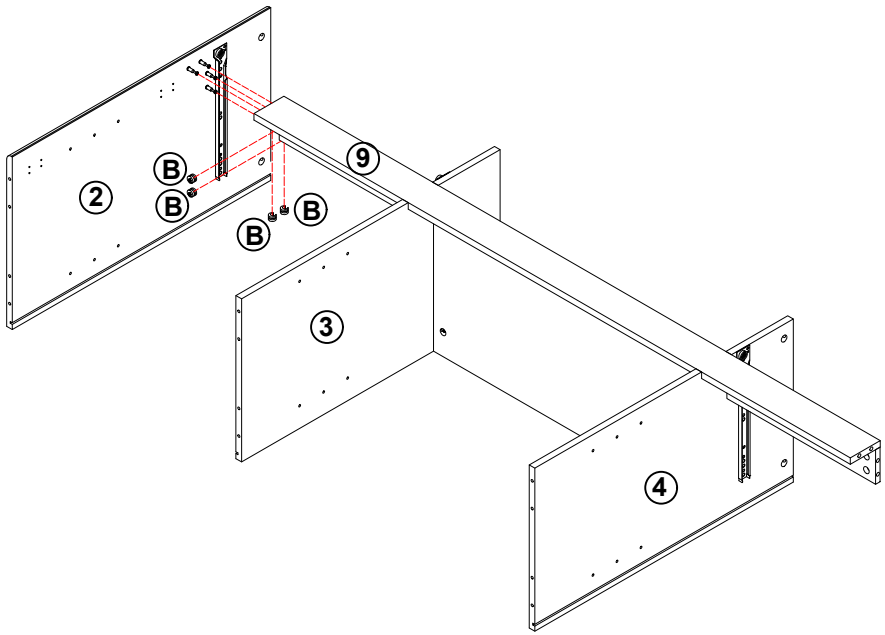





Note: the direction of the arrow.

STEP 11

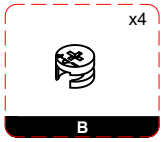


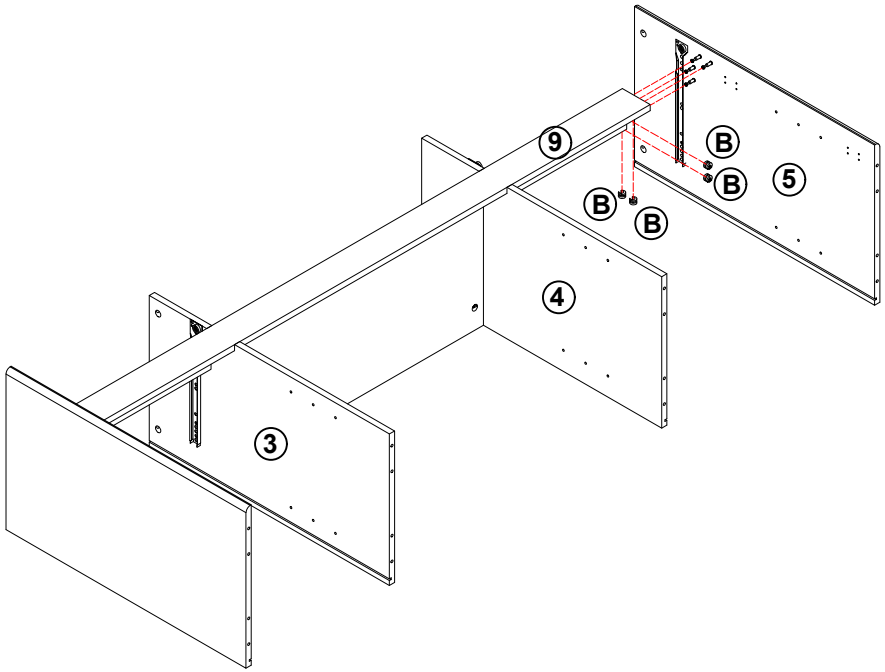





Note: the direction of the arrow.


STEP 12

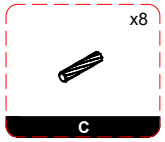


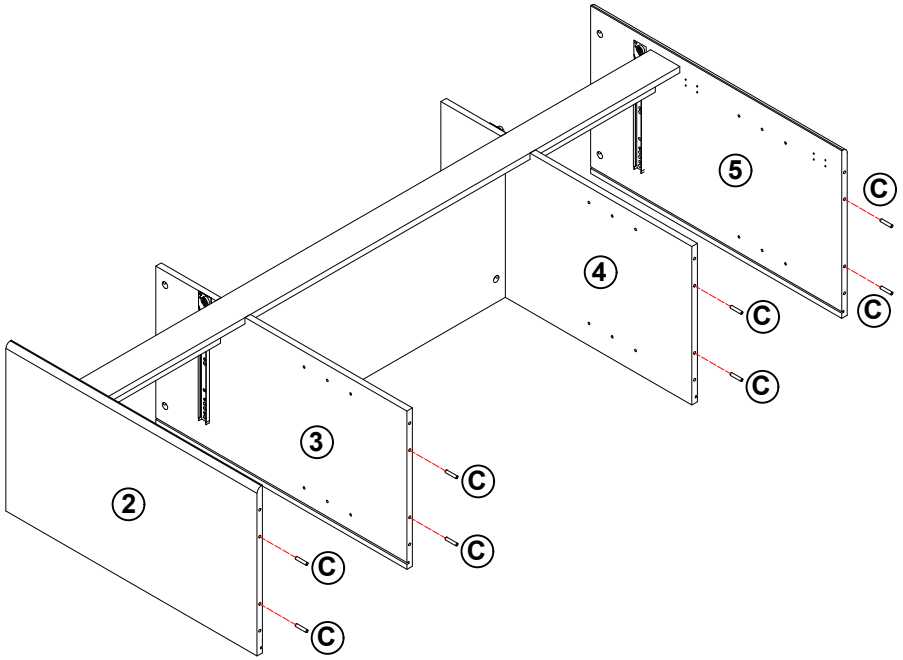


STEP 13

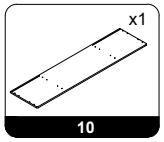


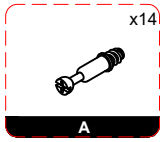

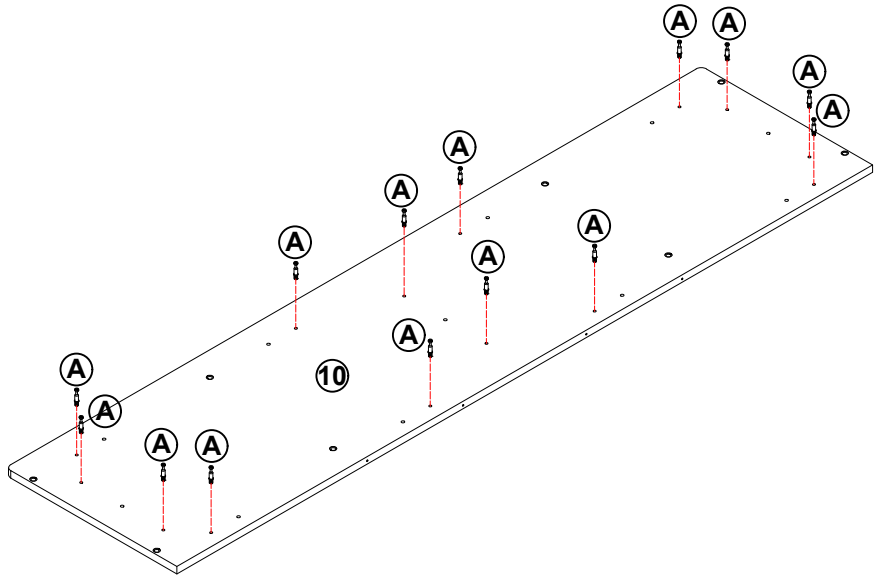



STEP 14

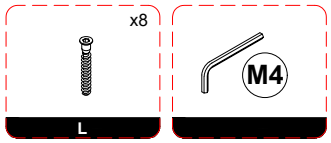

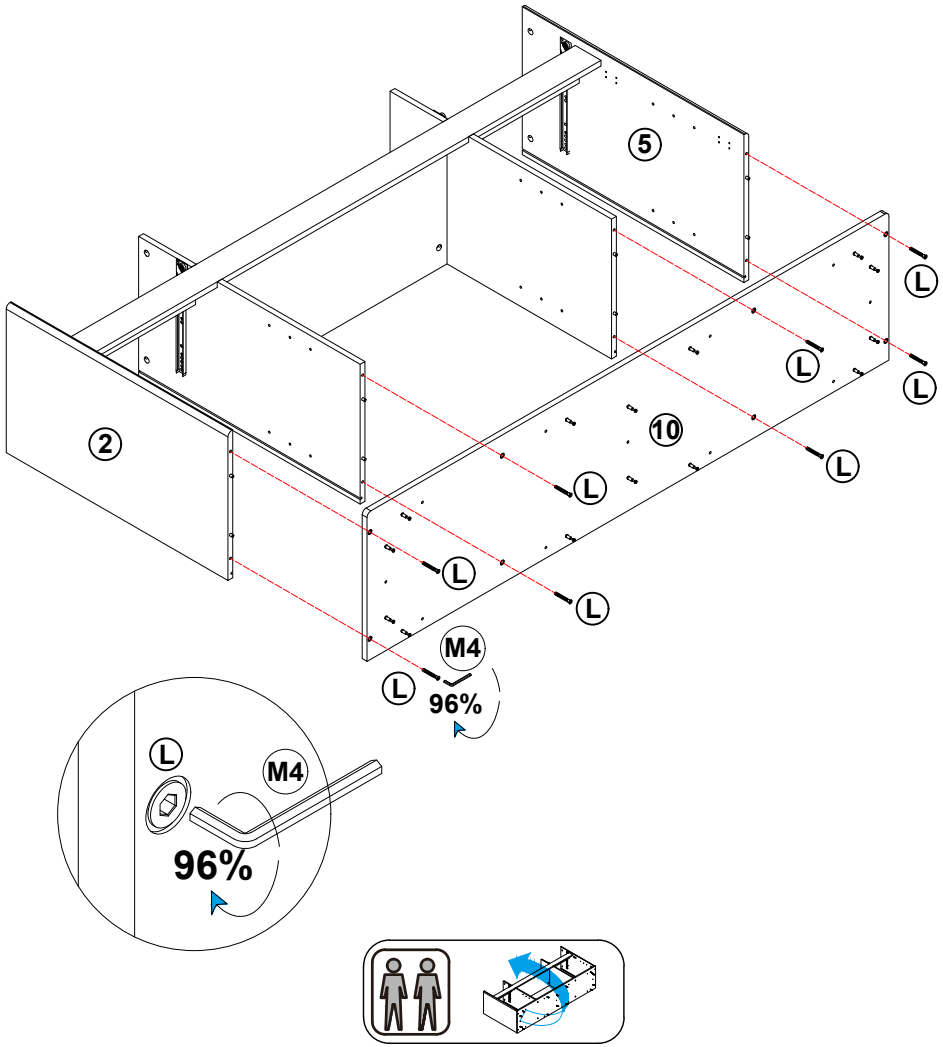



STEP 15

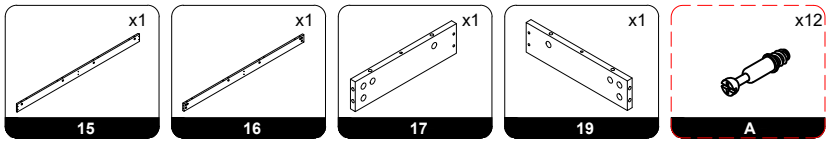


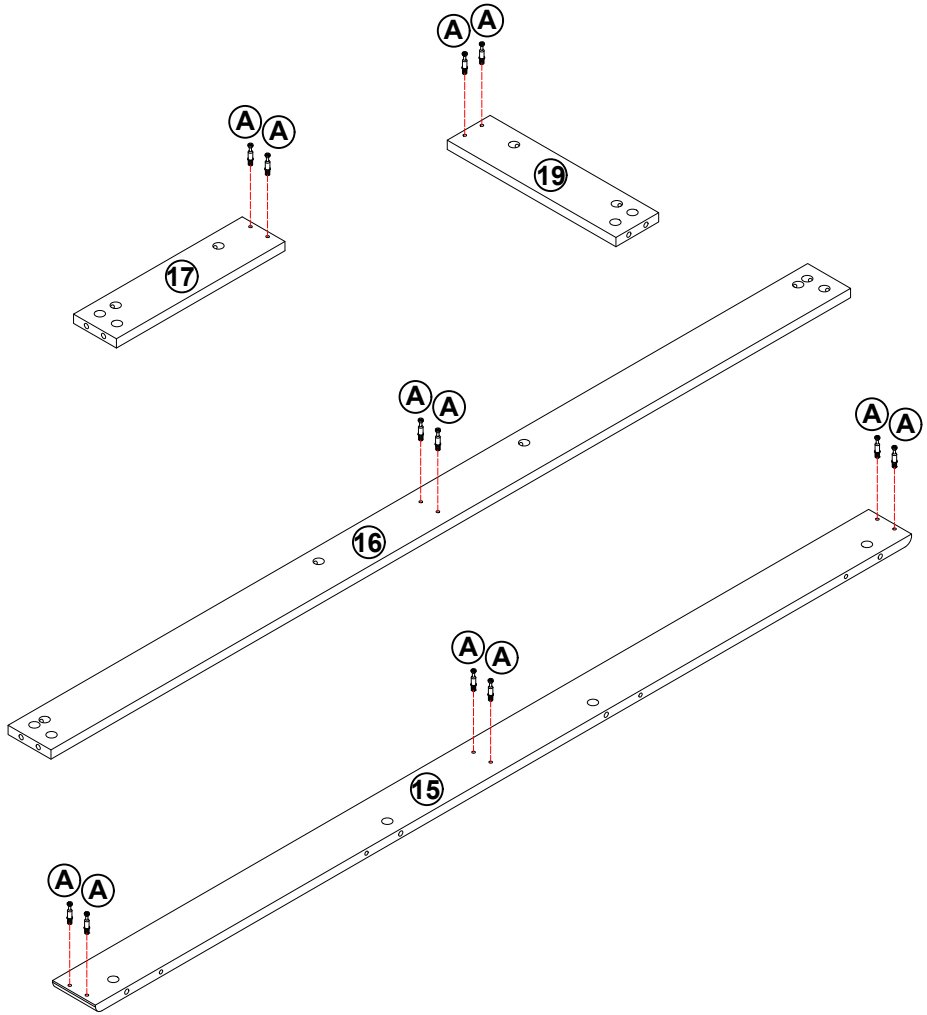

STEP 16

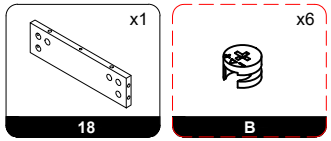


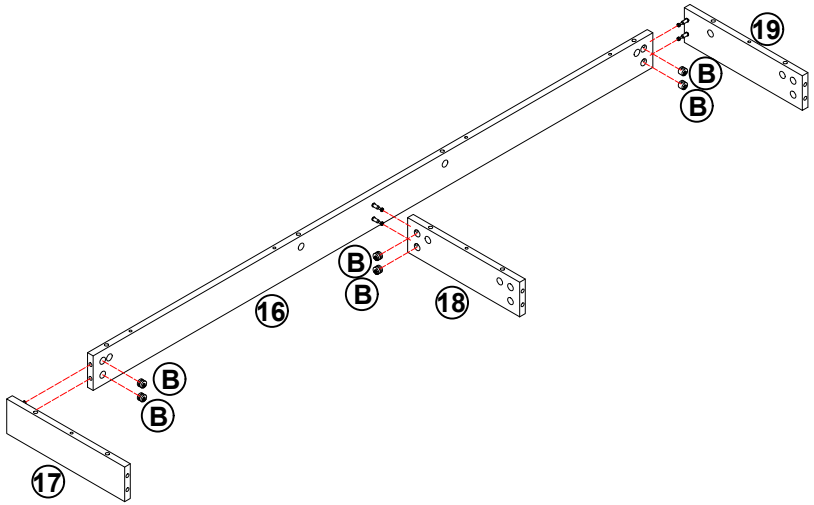





Note: the direction of the arrow.

STEP 17

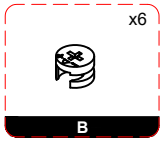


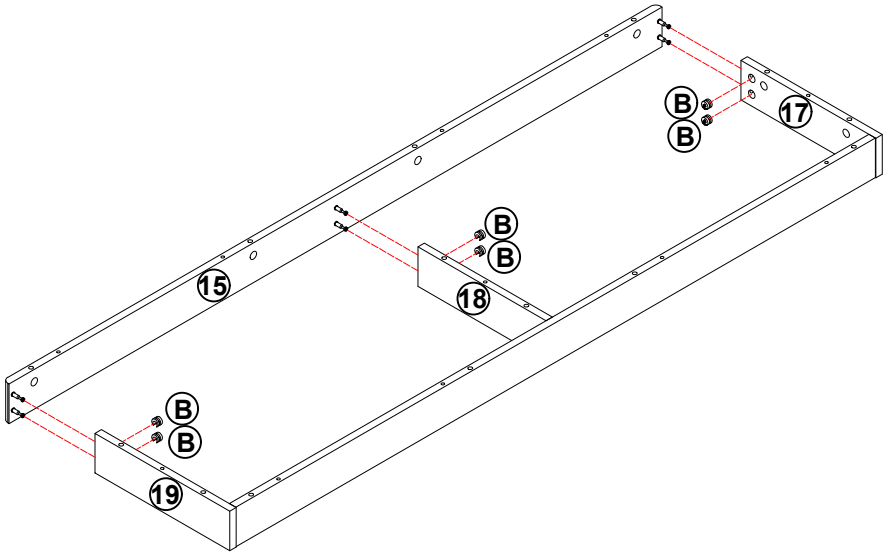





Note: the direction of the arrow.


STEP 18

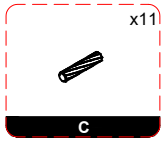


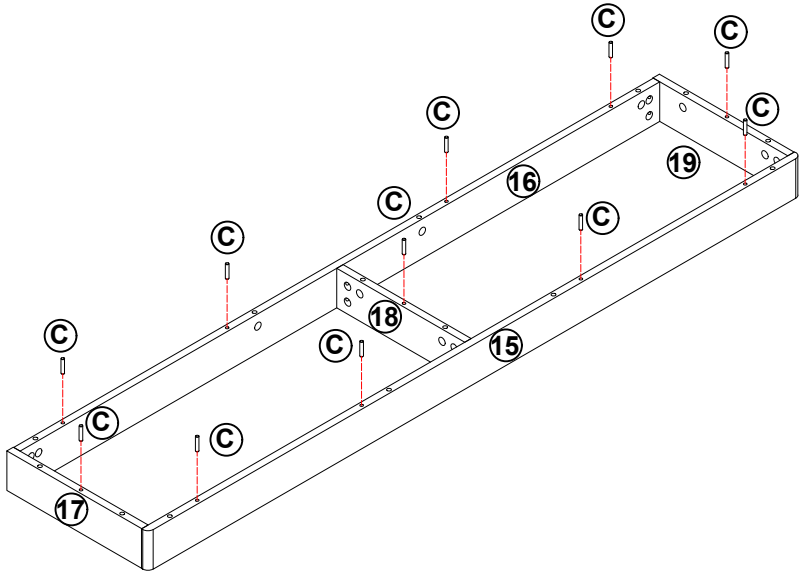


STEP 19

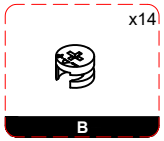

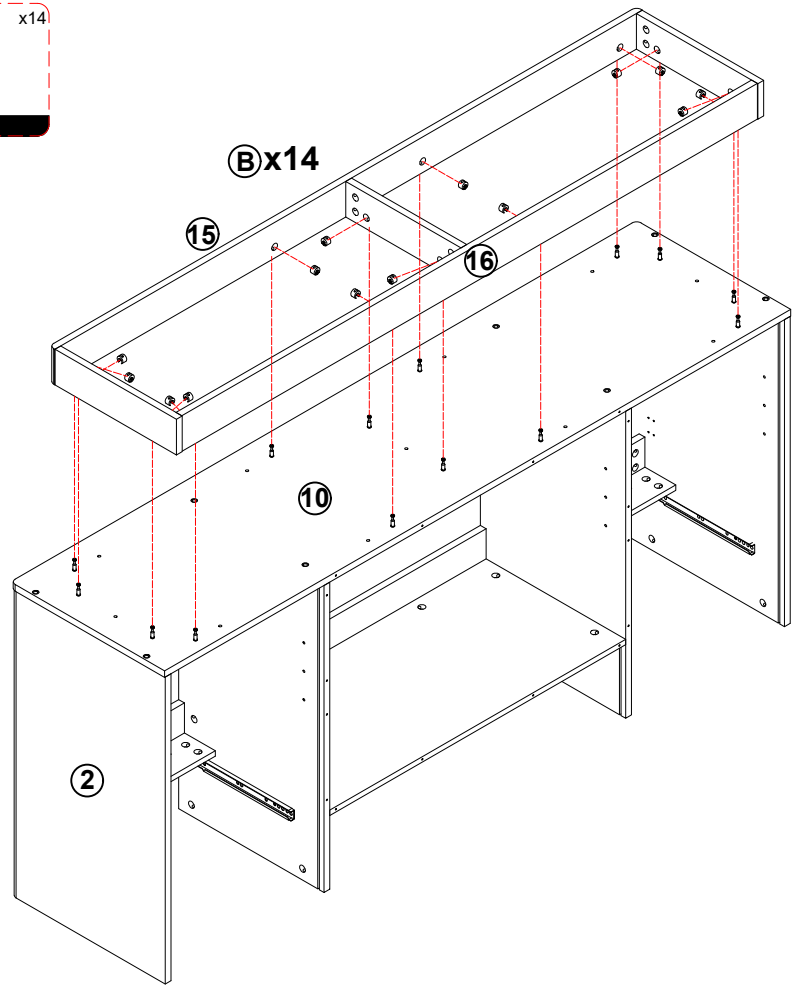








Note: the direction of the arrow.


STEP 20

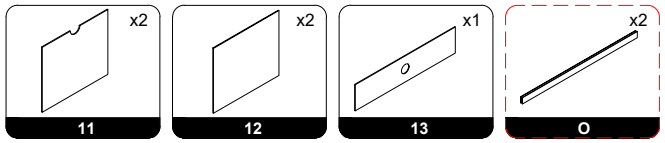

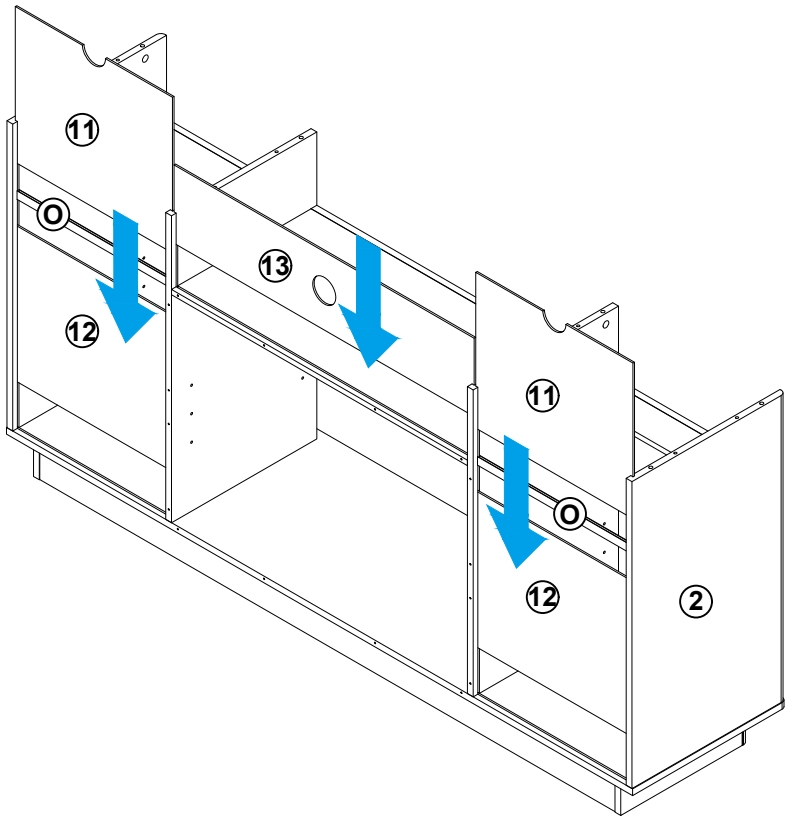



STEP 21

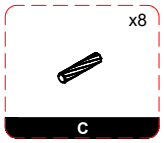

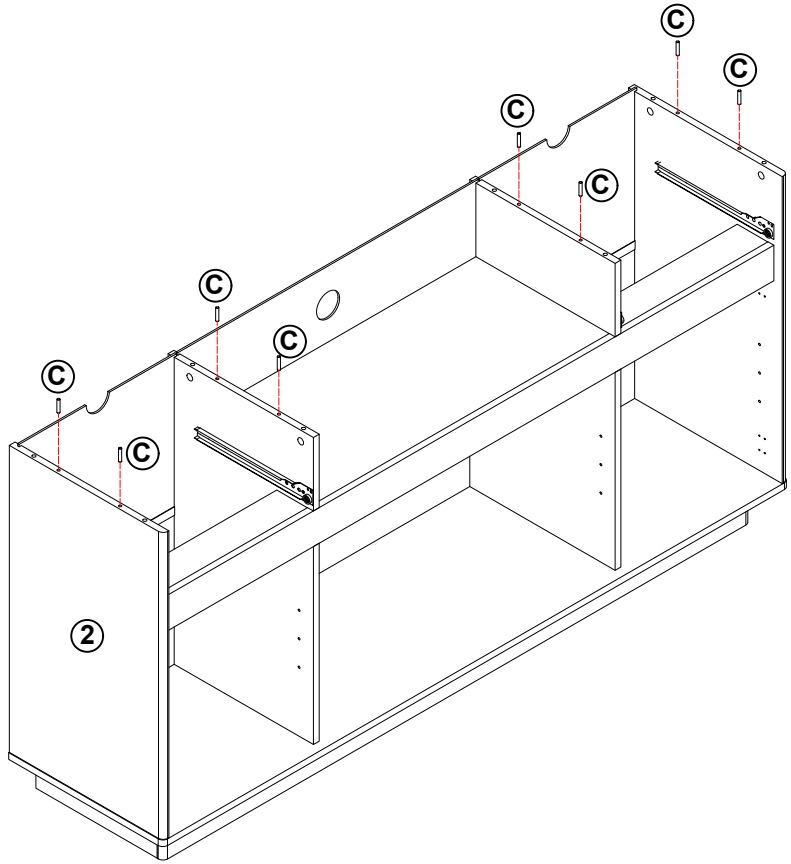



STEP 22

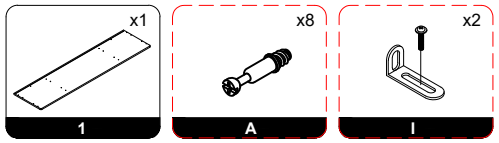


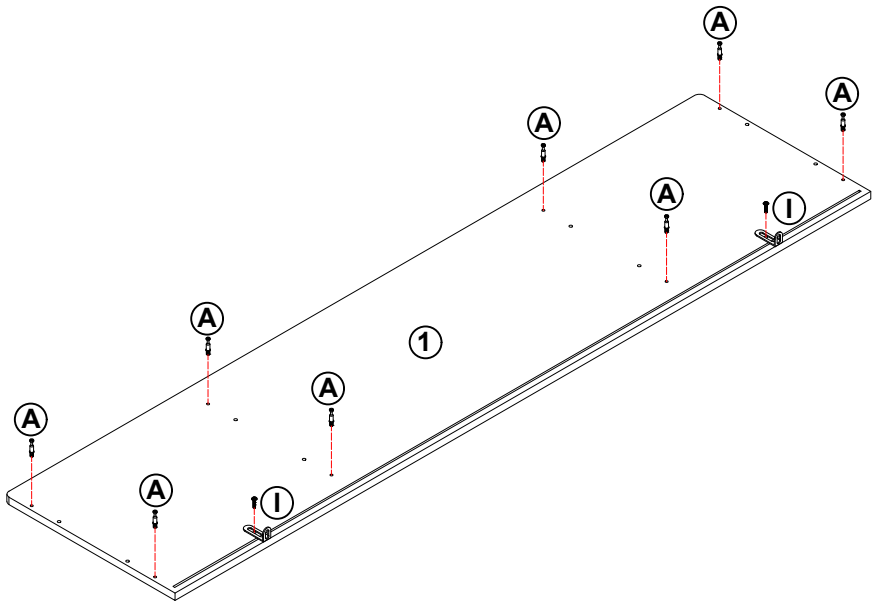

STEP 23

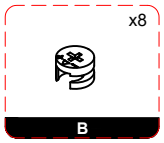

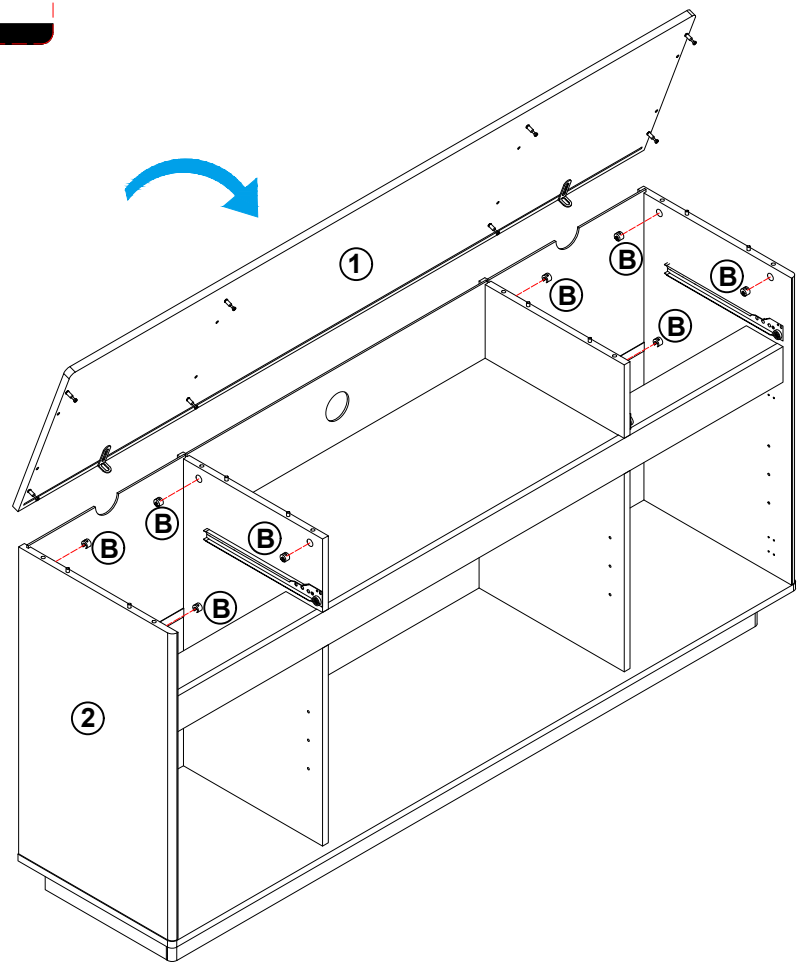






Note: the direction of the arrow.

Note! Please select the subsequent installation steps based on the version you purchased:
1. Install the fireplace TV stand (from STEP 24 to STEP 36)
2. Install the TV stand (from STEP 37 to STEP 49)


STEP 24

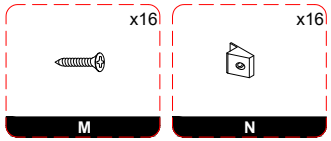


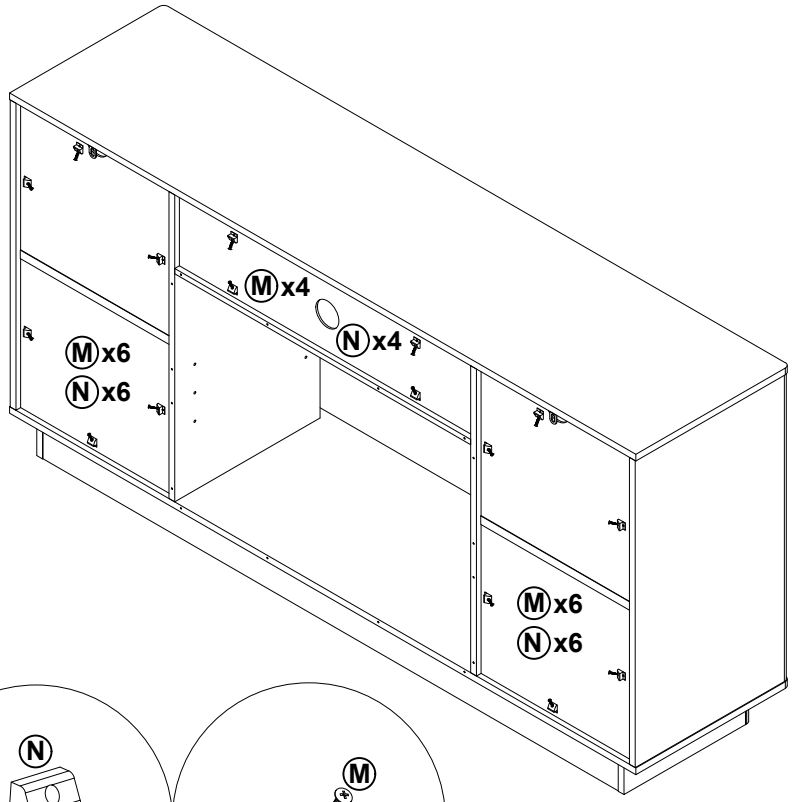

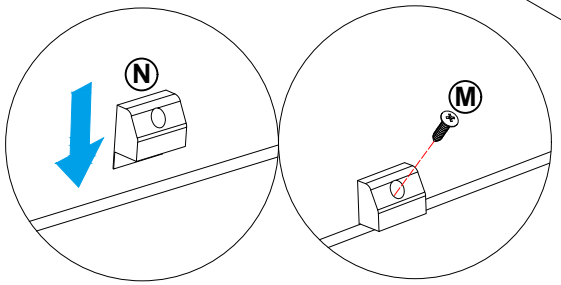



STEP 25

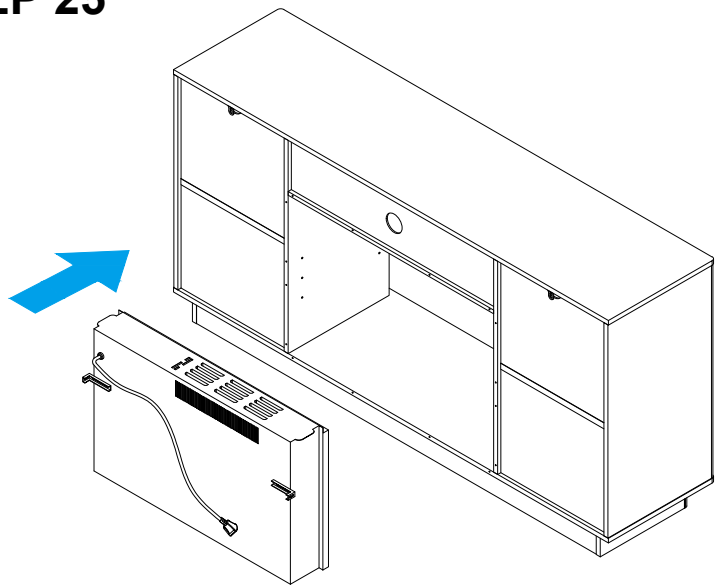

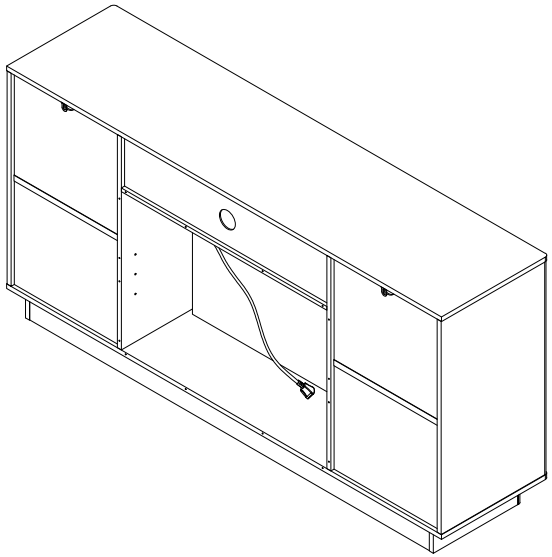

STEP 26

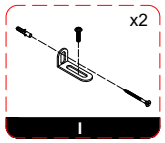

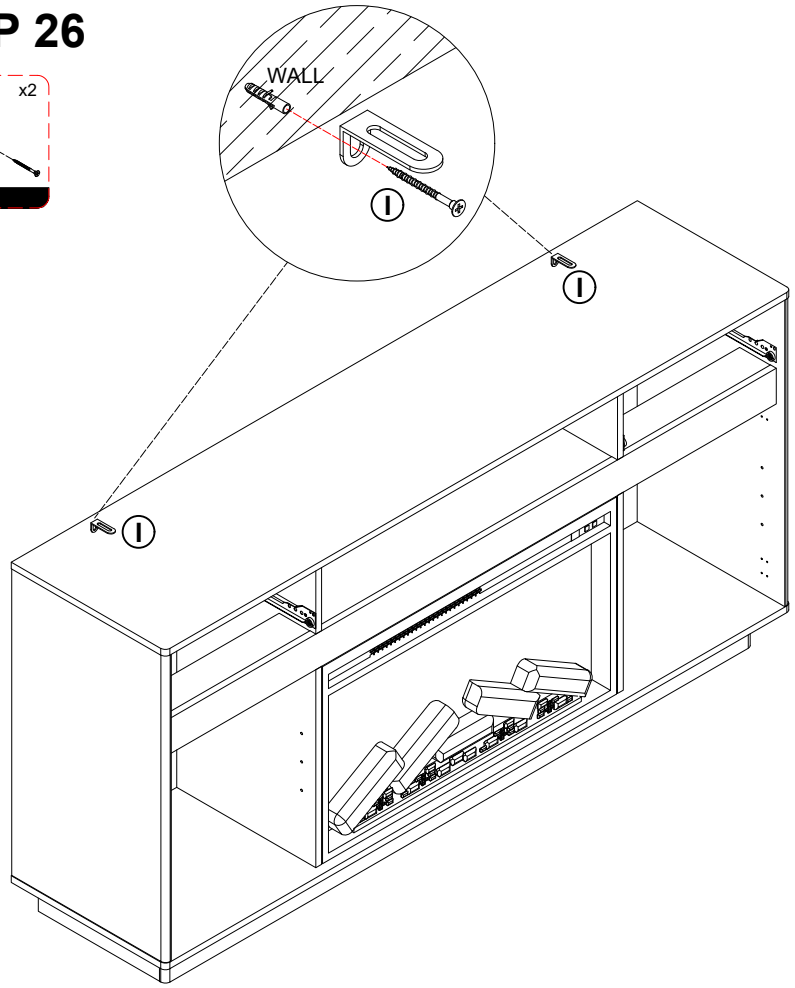

Wall Mounting Instructions

⚠ **CAUTION — Risk of Furniture Tip-Over. Always anchor this furniture securely to the wall.**


- Using the screws provided and a screwdriver, secure the mounting plate(s) to the back of the product .
- Noting the location of the product's mounting plate(s), mark the corresponding positions on the wall for the wall-mounted plate(s).


  Drill pilot holes at the marked locations into a wall stud.


NOTE: If wall studs are not available, drill holes slightly smaller than the drywall anchors. Insert each anchor until its flange is flush with the wall.


- Using a screwdriver, secure the mounting bracket(s) to the wall stud or to the drywall anchors using the screws provided.
- Place the product in its final position. Secure one end of the "L"-shaped anti-tip hardware to the wall mounting hole and the product mounting plate, adjusting to remove any slack. Do not overtighten.

STEP 27

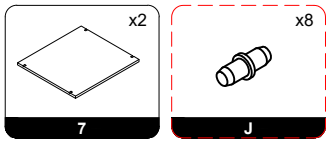


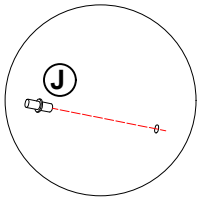


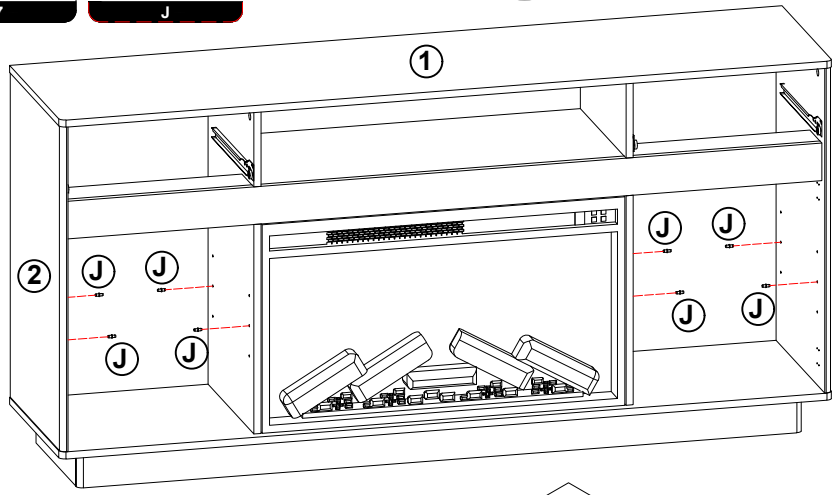

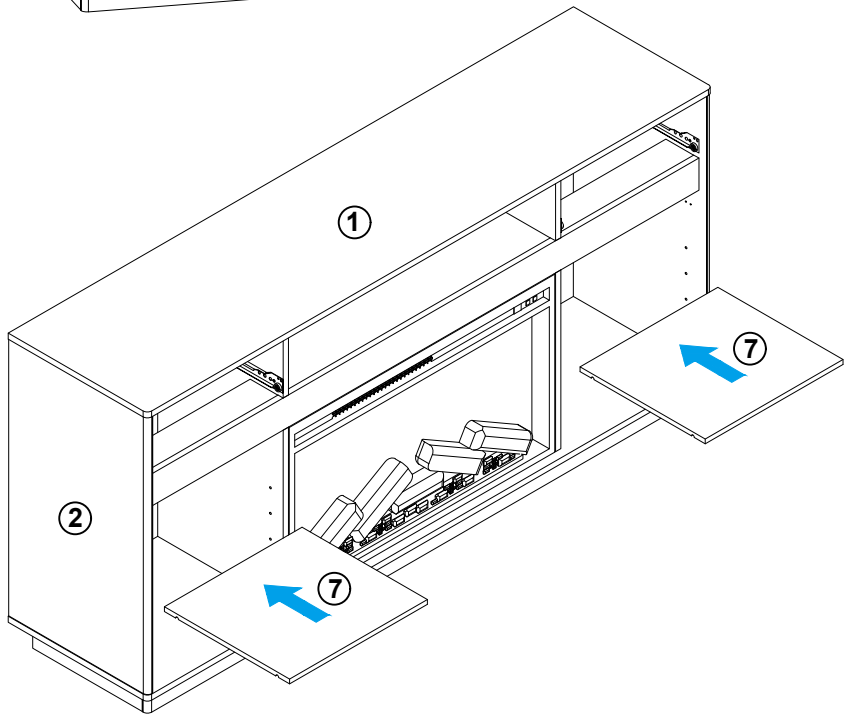



STEP 28

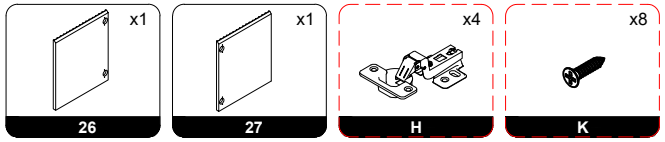

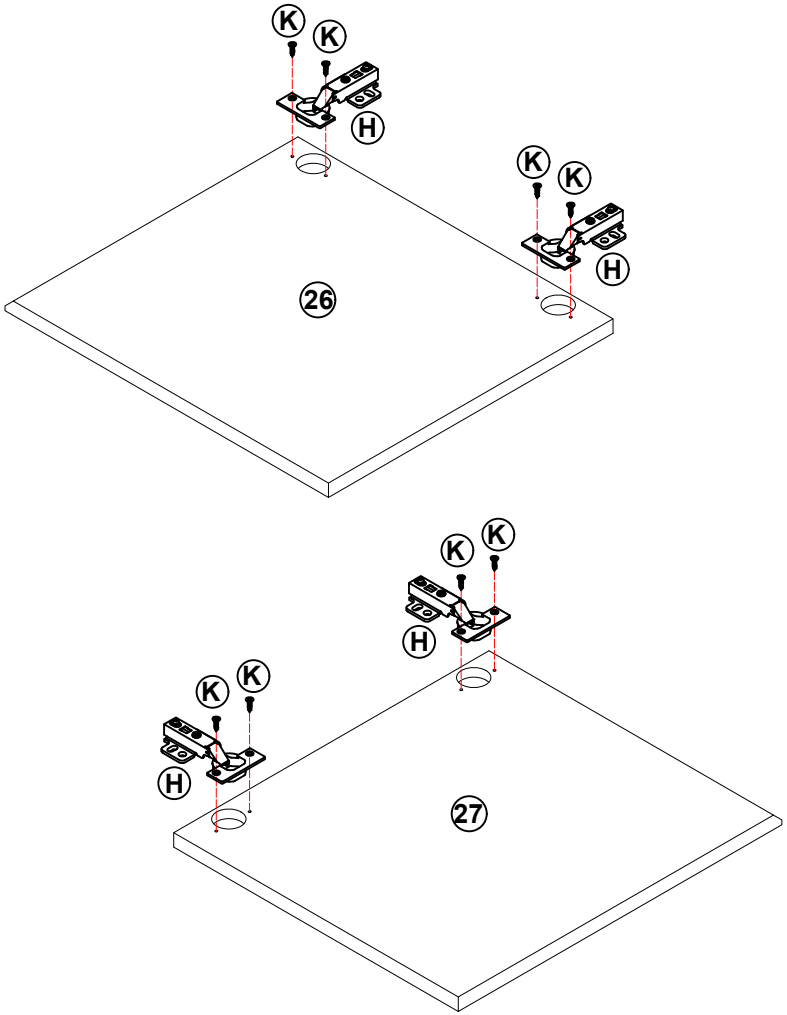



STEP 29

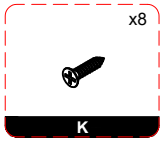


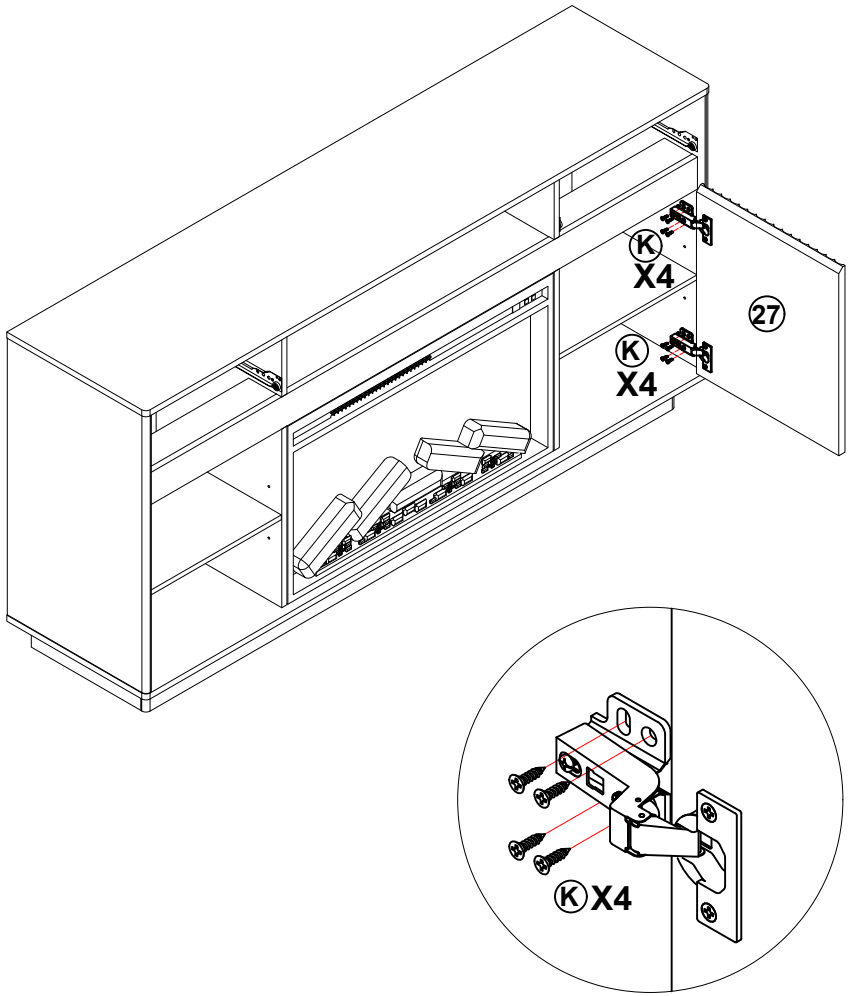


STEP 30

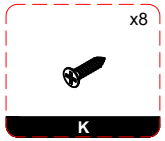


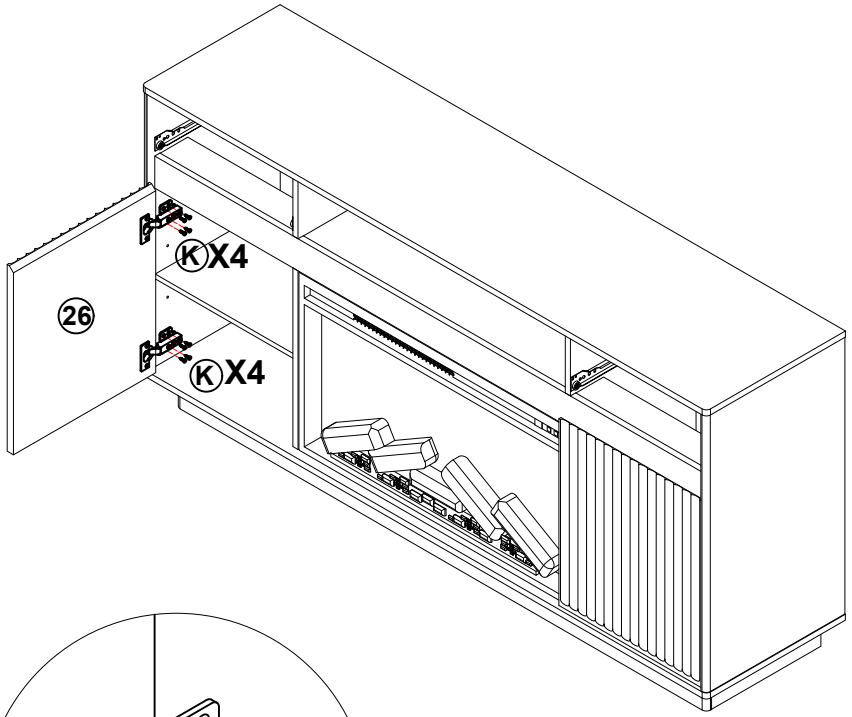


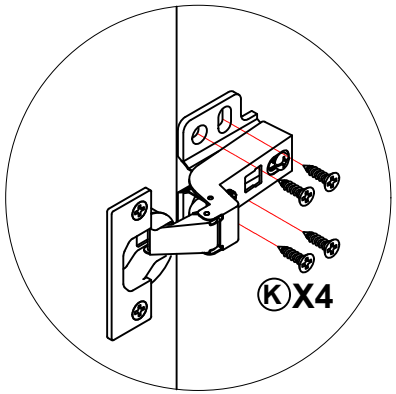


STEP 31

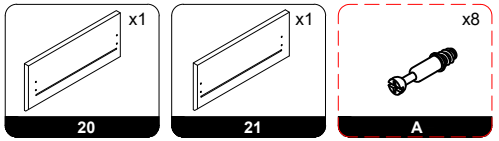


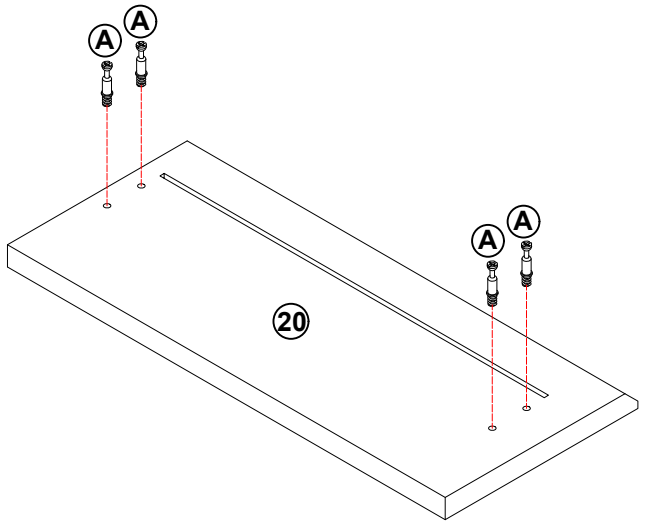

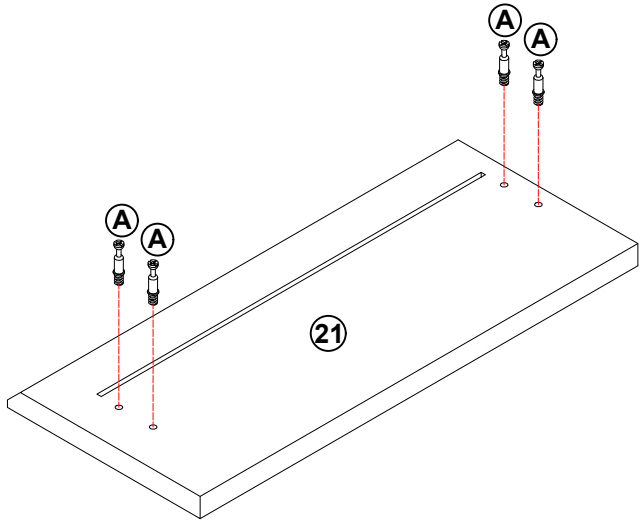


STEP 32

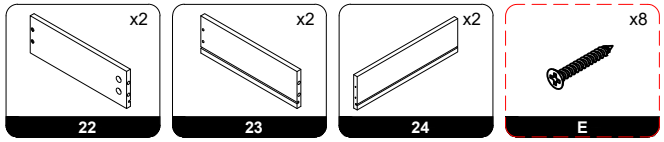


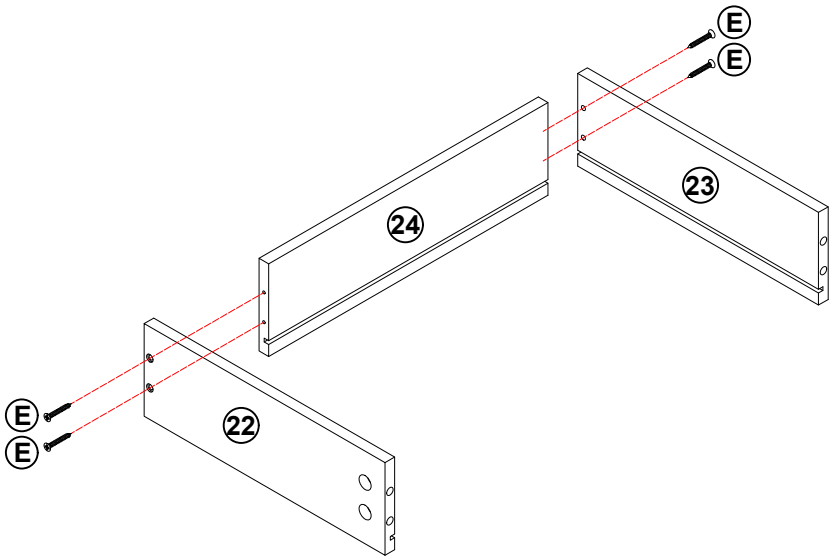

X2


STEP 33

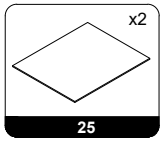


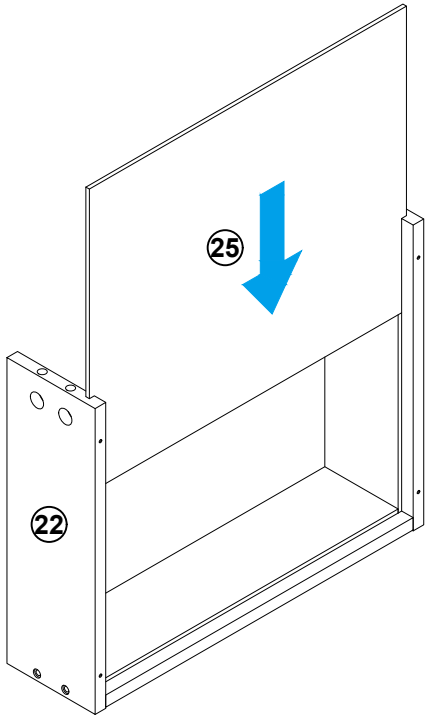


X2

STEP 34

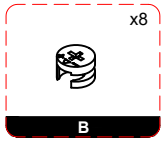


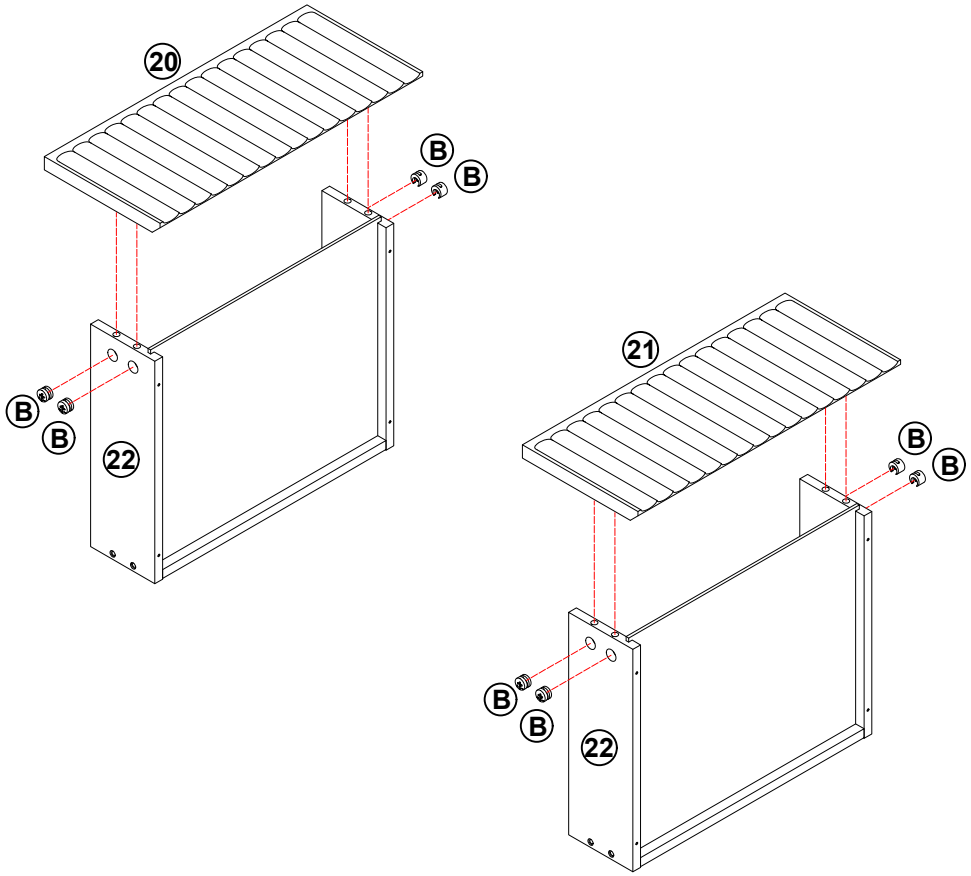





Note: the direction of the arrow.


STEP 35

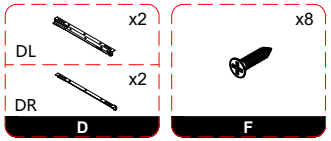

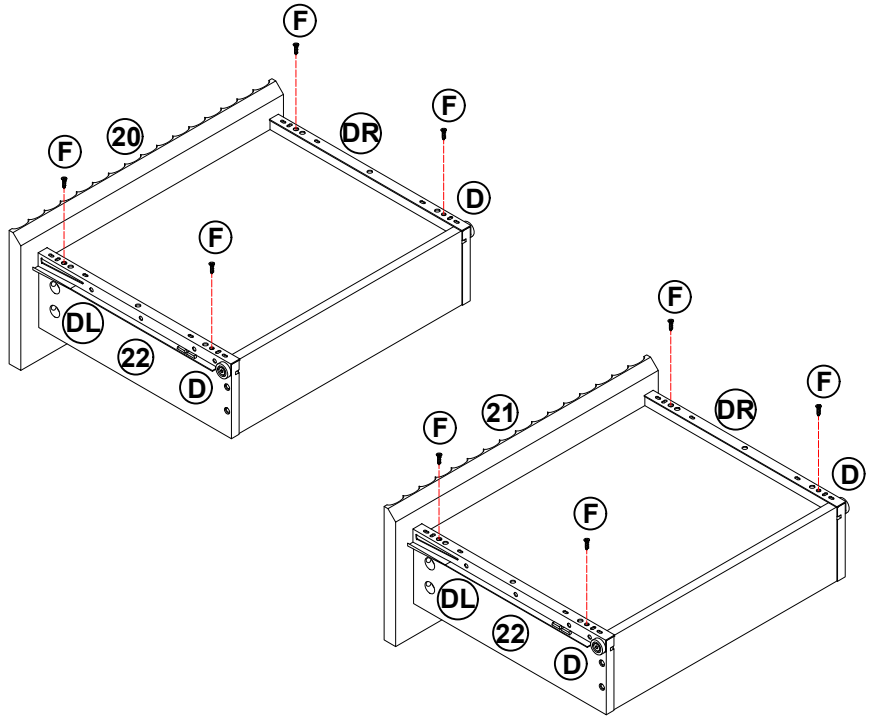


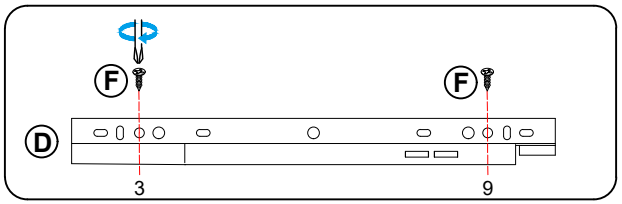


STEP 36

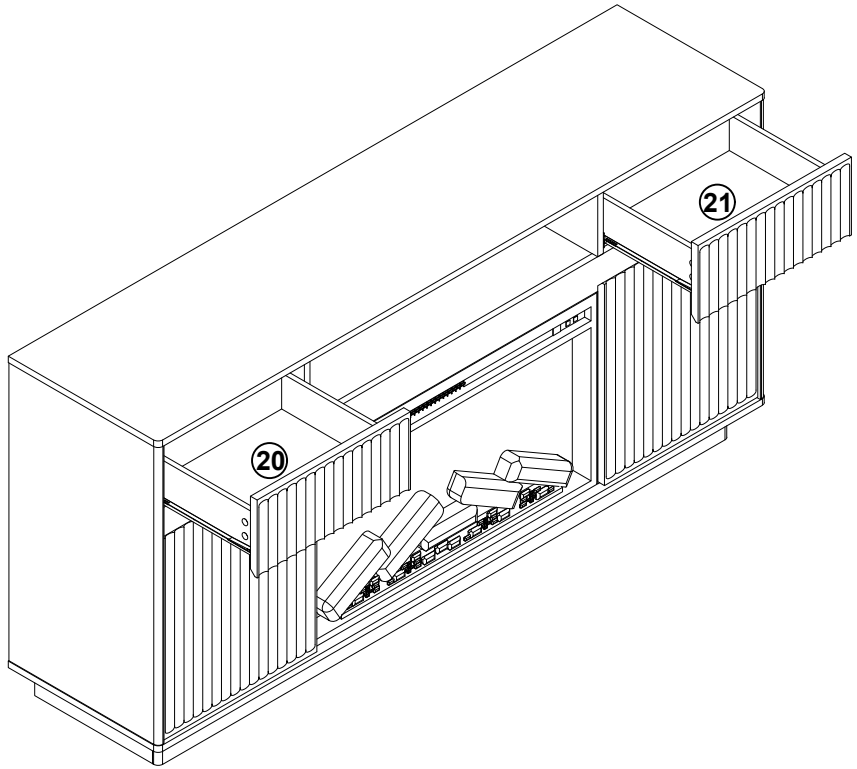


STEP 37

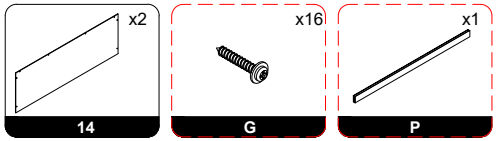


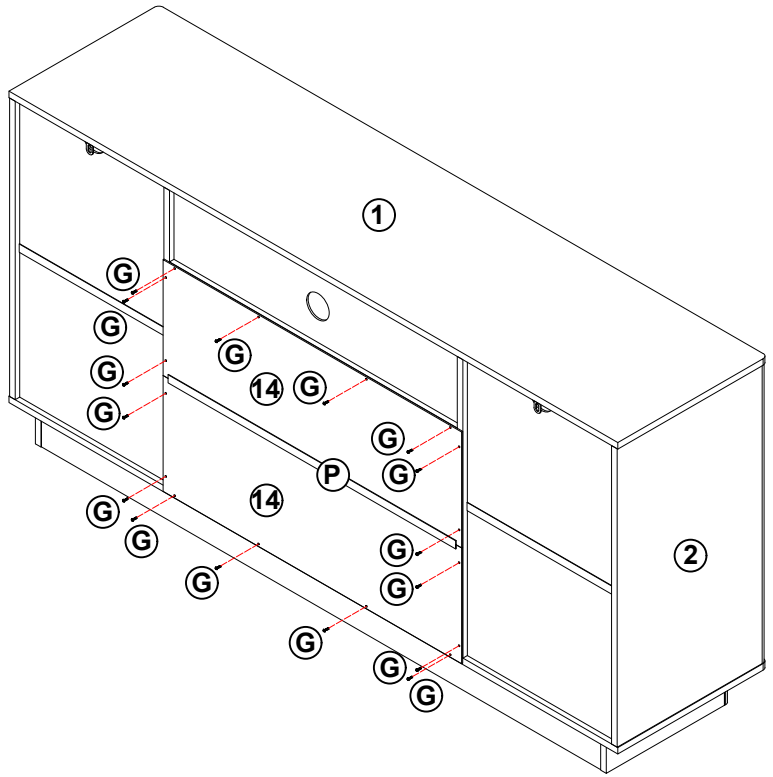


STEP 38

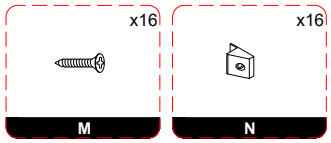

STEP 39

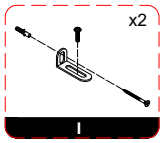

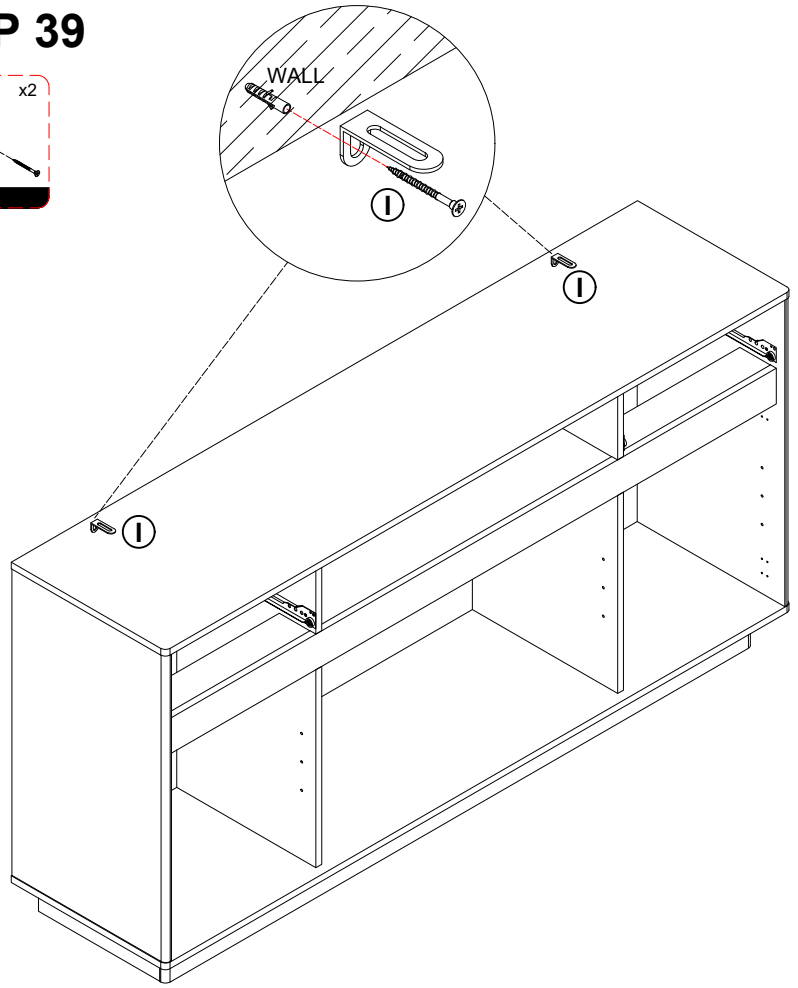

Wall Mounting Instructions


CAUTION — Risk of Furniture Tip-Over. Always anchor this furniture securely to the wall.


- Using the screws provided and a screwdriver, secure the mounting plate(s) to the back of the product .
- Noting the location of the product's mounting plate(s), mark the corresponding positions on the wall for the wall-mounted plate(s). Drill pilot holes at the marked locations into a wall stud.


NOTE: If wall studs are not available, drill holes slightly smaller than the drywall anchors. Insert each anchor until its flange is flush with the wall.

- Using a screwdriver, secure the mounting bracket(s) to the wall stud or to the drywall anchors using the screws provided.
- Place the product in its final position. Secure one end of the "L"-shaped anti-tip hardware to the wall mounting hole and the product mounting plate, adjusting to remove any slack. Do not overtighten.


STEP 40

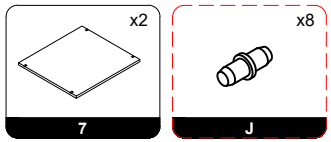


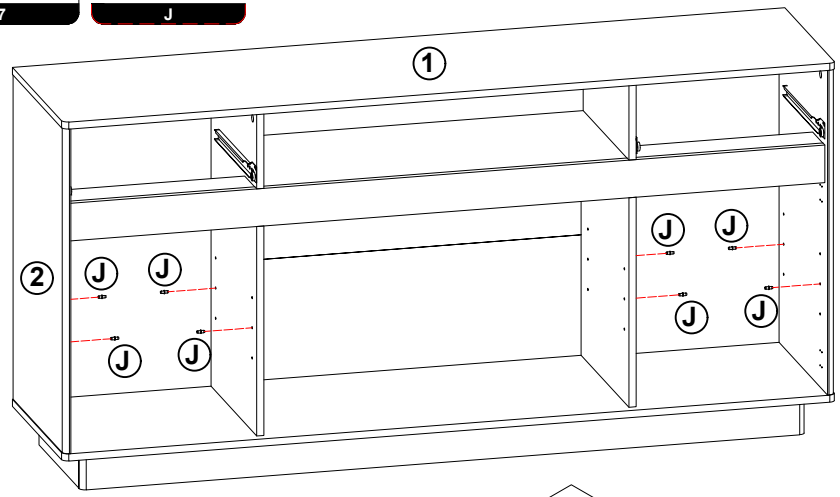


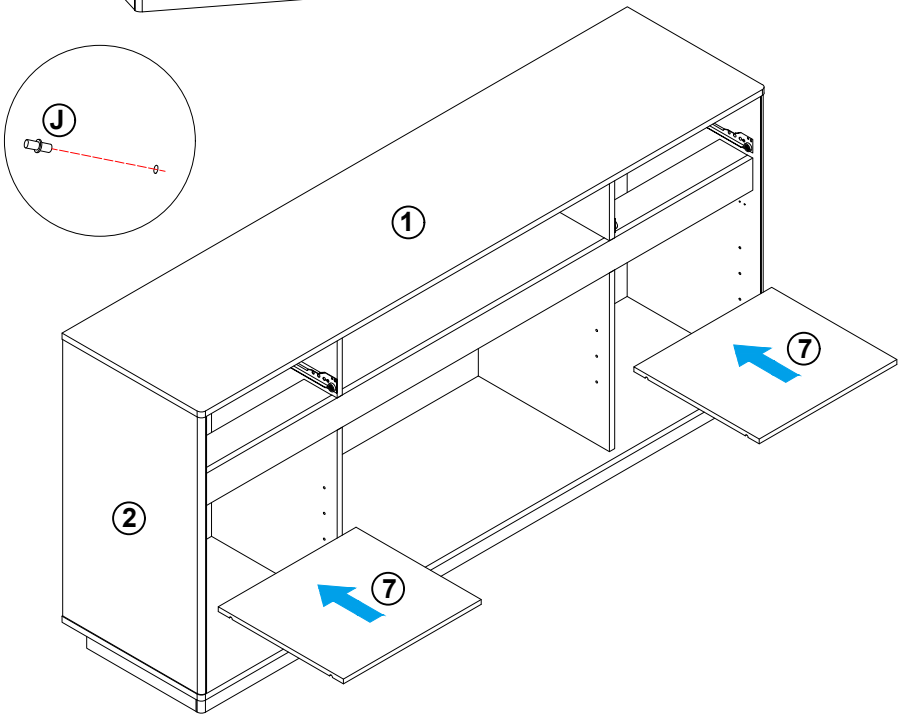



STEP 41

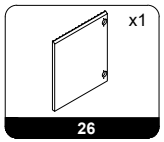


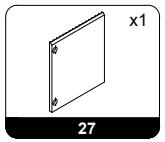

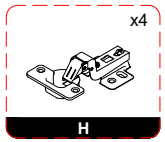


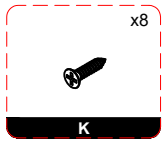


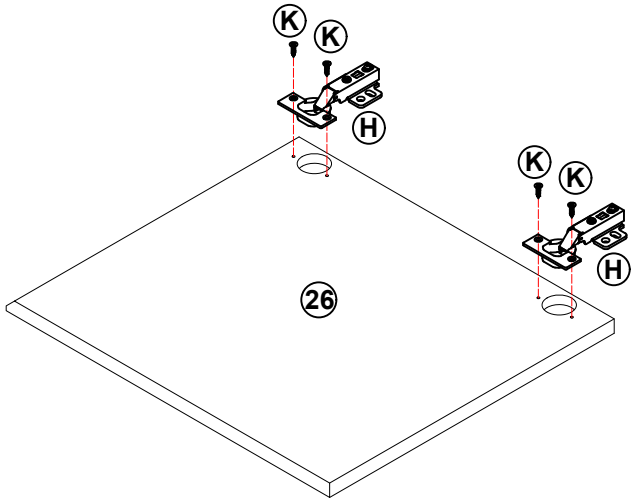

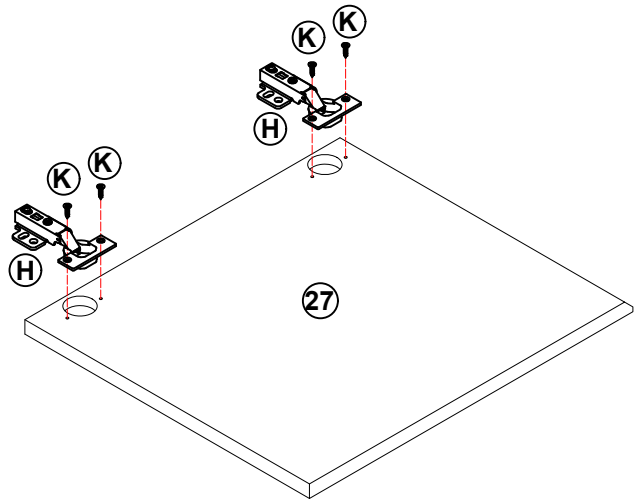



STEP 42

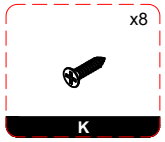

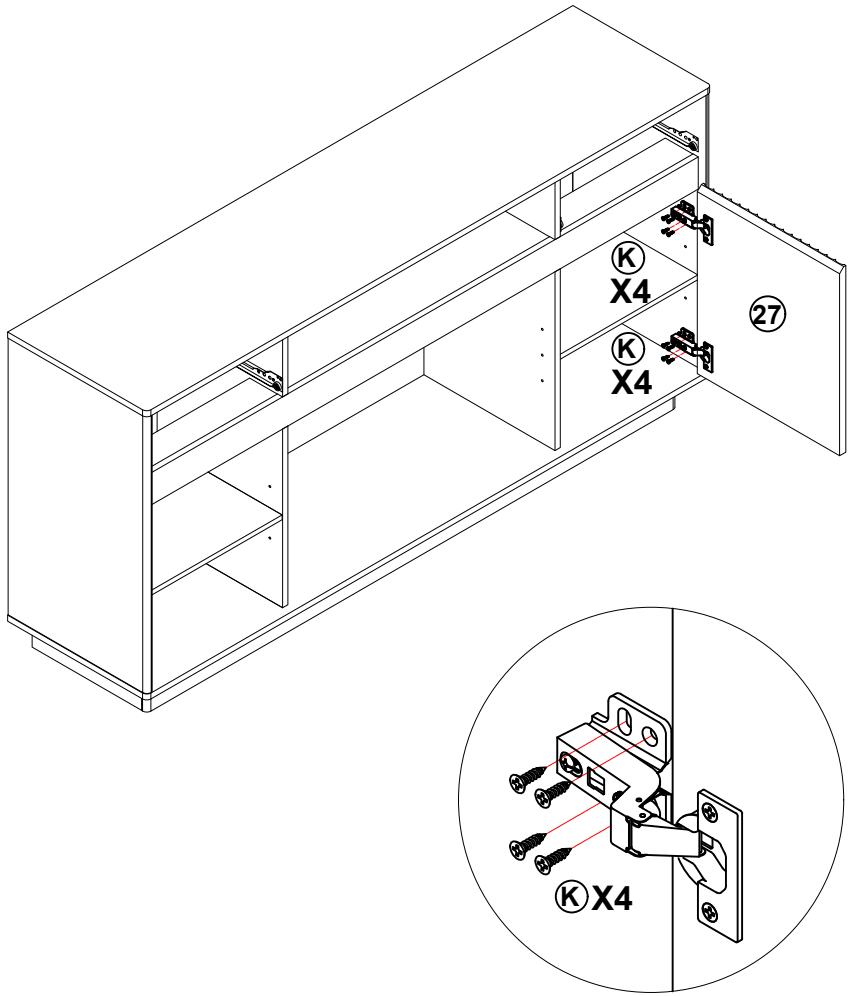



STEP 43

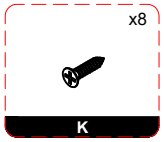

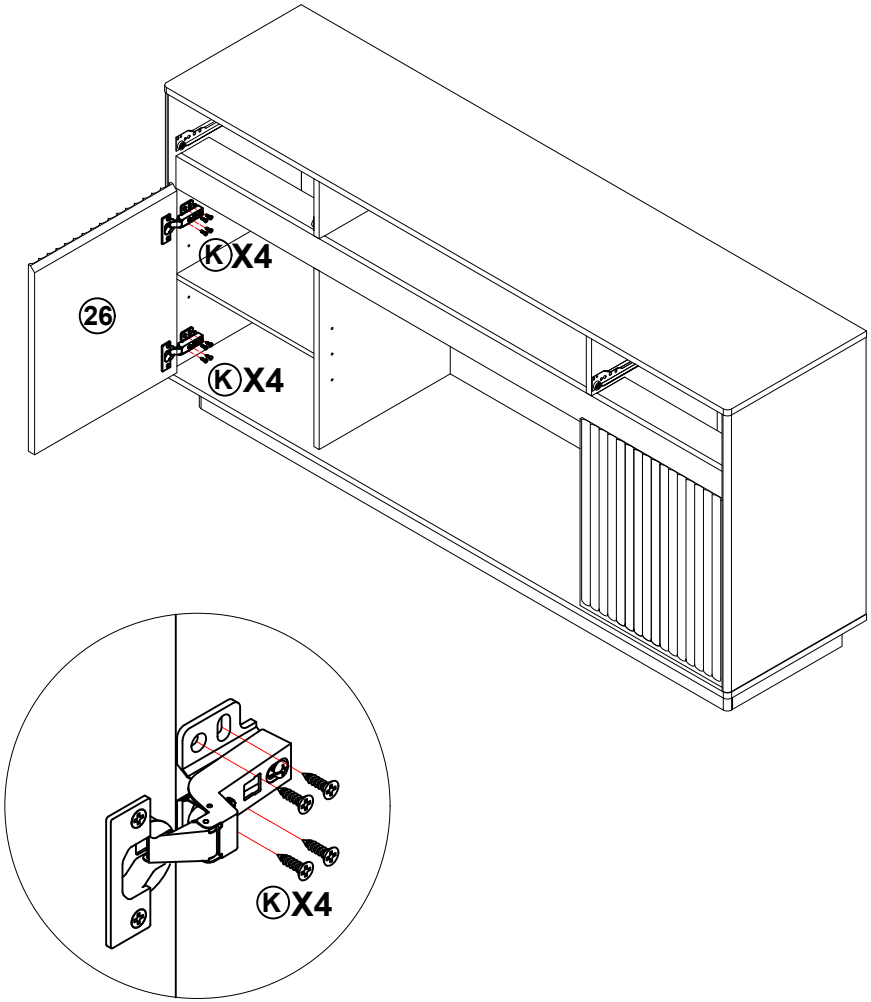



STEP 44

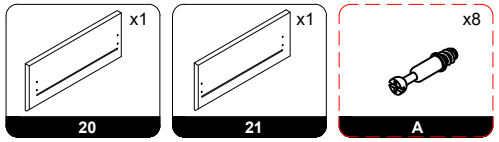

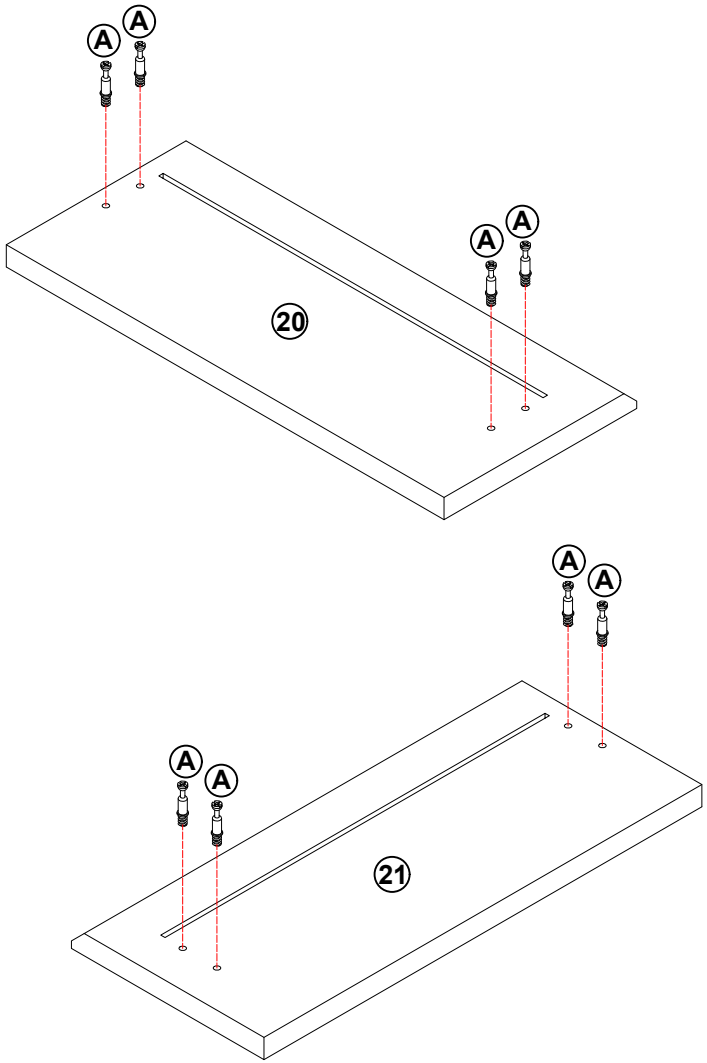


STEP 45

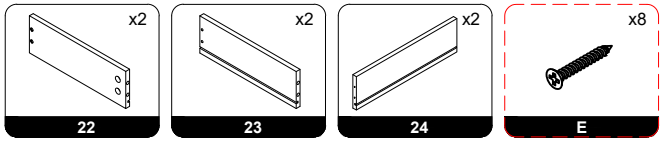


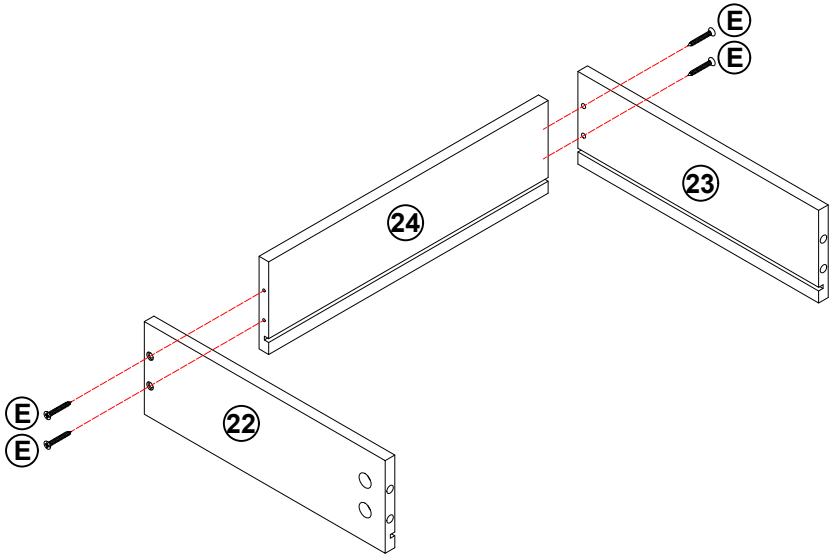

X2


STEP 46

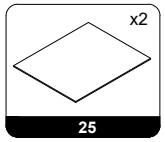


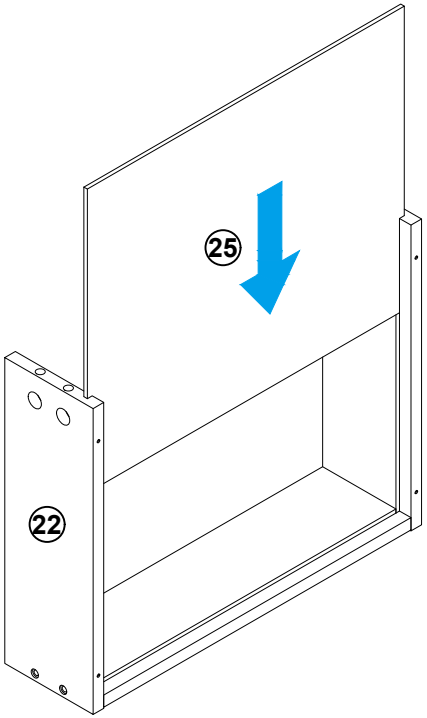


X2

STEP 47

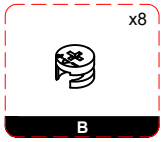


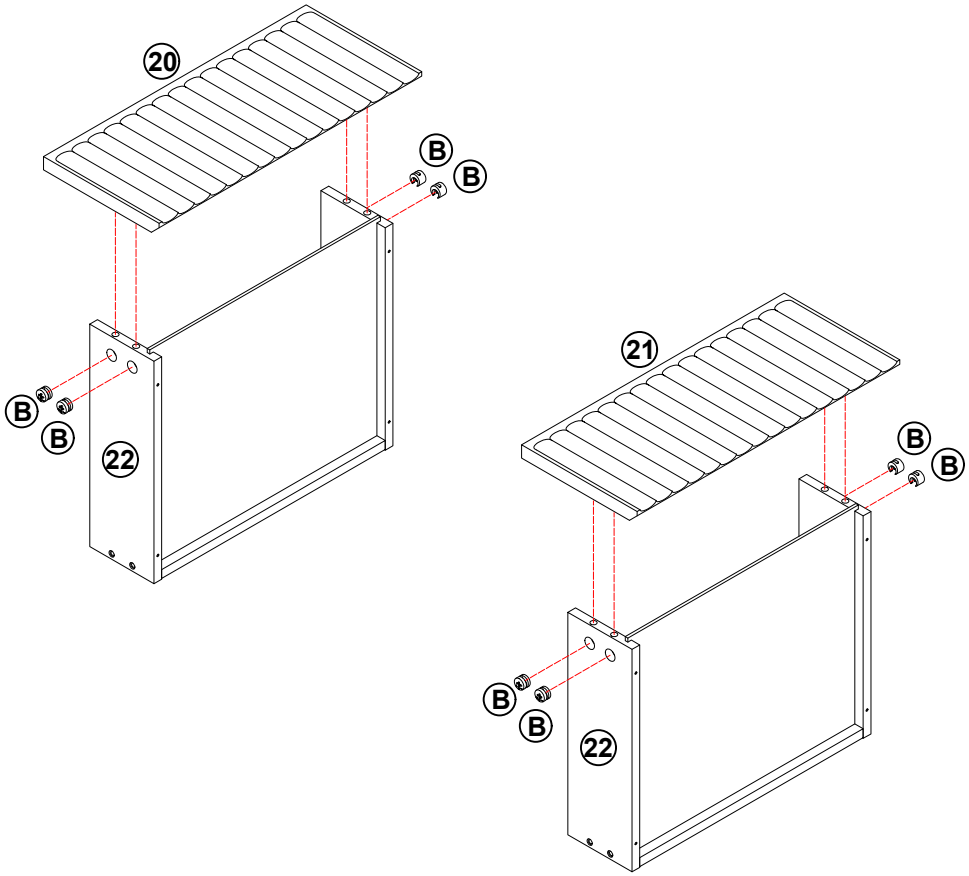





Note: the direction of the arrow.


STEP 48

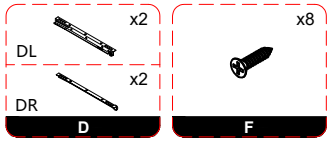

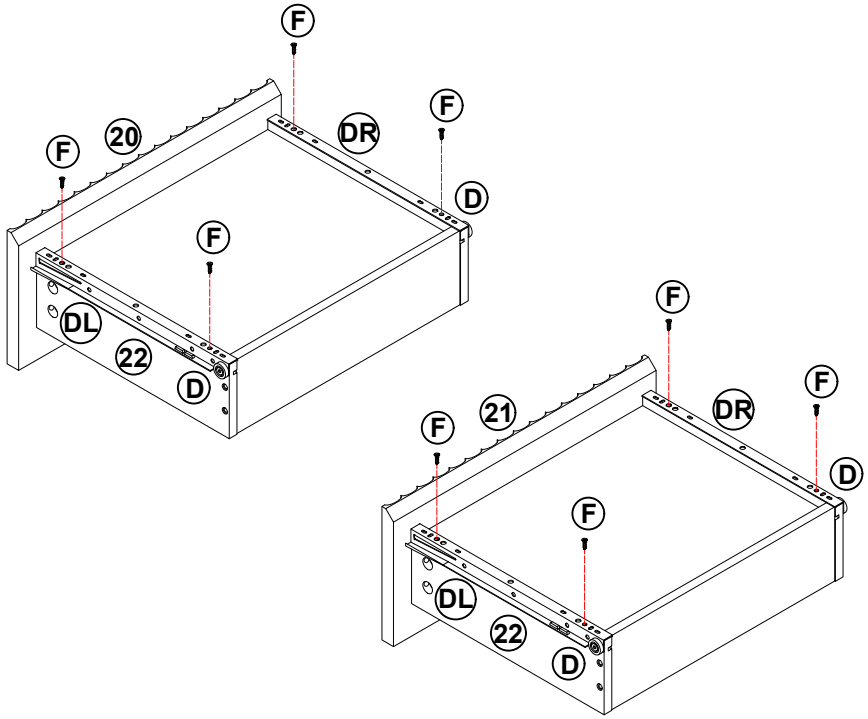

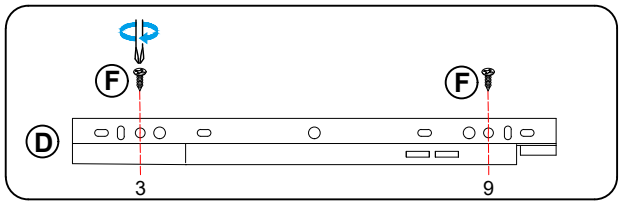



STEP 49

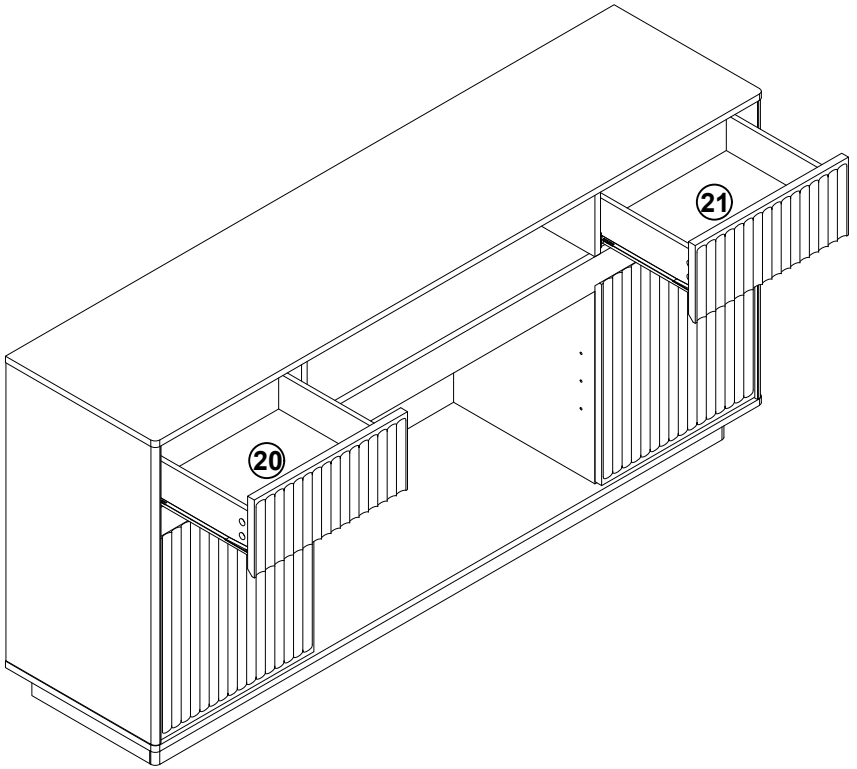


STEP 50


Loosen the hinge screws slightly, adjust the door up / down, Front / Back, or Left / Right until aligned, then retighten the screws.

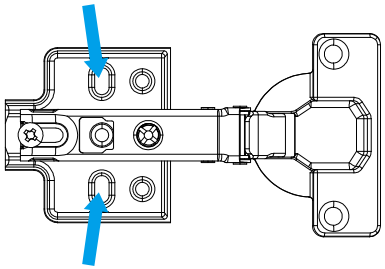

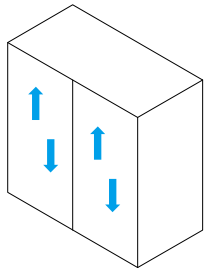



Up / Down

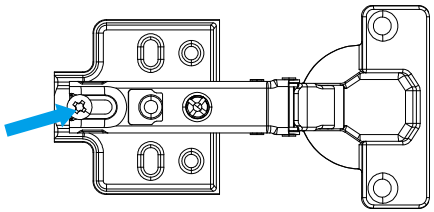

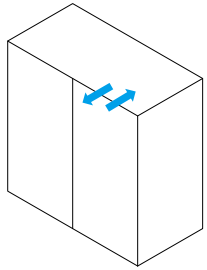

Front / Back

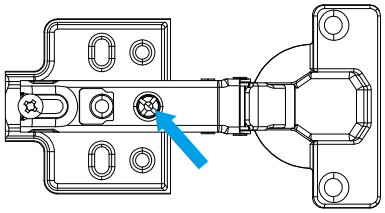

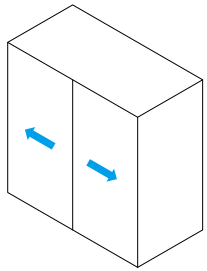

Left / Right

MAINTENANCE

- Wipe the surface with a soft, damp cloth and dry immediately.
- Avoid using chemical cleaners, solvents, or abrasive pads that could damage the finish.
- Do not place hot, wet, or heavy items directly on the surface.
- Keep the furniture away from direct sunlight and excessive humidity to prevent warping or discoloration.
- Check and tighten all screws periodically to maintain stability.

Warranty & Support

Limited Warranty

This product is backed by a limited warranty that covers manufacturing defects under normal household use.

Customer Service

If you have received a damaged product or are missing parts, please contact us directly for assistance. Do not return the product to the store. When contacting us, please provide the following information:

- Order number or proof of purchase
- Clear photos showing the issue or damaged parts
- Product model number (as listed in this manual)

Email: info@serviceprohelp.com

We will respond promptly with instructions for replacement parts or other solutions.

Thank you for choosing our product. Enjoy your new furniture!