INDUCTION HARDWARE

CARE & INSTALL GUIDE
2026 · V1.0

VENTILATION · INSERTS

INSERT RANGE HOOD

The professional ventilation core for custom hood enclosures and cabinetry.

RH-INSERT-28 · RH-INSERT-34 · RH-INSERT-46 · RH-INSERT-58 — STAINLESS STEEL



28″ — RH-INSERT-28



34″ — RH-INSERT-34



46″ — RH-INSERT-46



58″ — RH-INSERT-58

APPLIANCE SHOWROOM

WWW.INDUCTIONHARDWARE.COM
12920 OLD VIRGINIA ROAD, SUITE 160
RENO, NEVADA 89521, USA

CONTACT

(775) 898-7562
INFO@INDUCTIONHARDWARE.COM
MON–FRI 9–4 PST

THE FUTURE OF COOKING

ALL-ELECTRIC, BY DESIGN.
ENGINEERED IN LAKE TAHOE, NEVADA.

Four widths, one **standard**.

INDUCTION HARDWARE

Induction Hardware aims to be the industry leader in electric and induction appliances. Every single Induction Hardware product is electric and focused on bringing a better way to cook. We build every product to last and design them to be easy to maintain. **Induction technology is the future of cooking.**



RH-INSERT-28
28″ · for 30″ cooktops



RH-INSERT-34
34″ · for 36″ cooktops



RH-INSERT-46
46″ · for 48″ cooktops



RH-INSERT-58
58″ · for 60″ cooktops

TABLE OF CONTENTS

Quick Start Guide	**3**
Rangehood Safety Instructions	**4**
Included Parts	**6**
Control Panel & Operation	**7–10**
Installation Guide	**11**
Cabinet Cutout & Bracket Dimensions	**12**
Installation Diagram	**13**
Venting Sheet — minimum duct clearance	**14**
Mounting Sheets — all four widths	**15–18**
Product Dimensions	**19**
Cleaning & Maintenance	**20**
Troubleshooting	**21**
Warranty	**22**
For Your Records & Contact	**23**

Induction is the new **electric.**

Induction cooking uses electromagnetic fields to directly heat pots and pans, making it faster, more energy-efficient, and more precise than traditional electric ceramic cooktops, which heat by transferring heat from a coil through the glass surface. Unlike ceramic cooktops, induction surfaces stay cooler to the touch and allow for instant temperature control.

FIRST FIVE STEPS

1. Confirm your cabinet or custom hood enclosure is cut to the dimensions listed in *Cabinet Cutout & Bracket Dimensions.*
2. Confirm a minimum of 23 in. between the supporting surface for cooking vessels on the hob and the lowest part of the range hood.
3. Attach the mounting brackets to the insert using the included hardware and set bracket height to match your enclosure material thickness.
4. Lower the insert into the enclosure from the top down and secure with screws.
5. Plug into a standard residential 120V three-pronged outlet located inside the enclosure.



Remote included	DC BRUSHLESS MOTOR(S)	LED WORK LIGHTS

Read and obey all **safety messages.**

INDUCTION HARDWARE

This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages follow the safety alert symbol and one of the following words. Always read and obey all safety messages.

DANGER!

You **can be killed or seriously injured** if you do not immediately follow instructions.

WARNING!

You **can be killed or seriously injured** if you don't follow instructions.

CAUTION!

Hazards or unsafe practices **could result in minor personal injury** if you don't follow instructions.

HOUSEHOLD USE ONLY

To reduce the risk of fire, electrical shock, injury to persons, or damage when using the rangehood, follow basic precautions, including the safety warnings in this section. **This product is intended for household use only.**

Note that when the rangehood is operating simultaneously with an open fireplace or burner that depends on the air in the environment, the rangehood may remove the air from the environment which a burner or fireplace needs for combustion. The negative pressure in the environment must not exceed 4Pa (4×10^{-5} bar). Provide adequate ventilation in the environment for safe operation of the rangehood — operate the hood at one of the lowest functions if all windows are closed, or open a nearby window for added airflow into the home. Follow the local laws applicable for external air evacuation.

BEFORE CONNECTING THE MODEL TO ELECTRICITY

Review the data plate (positioned inside the appliance) to ascertain that the voltage and power correspond to the network and the socket is suitable. If in doubt, please ask a qualified electrician for help. Please note that our rangehoods are produced with ready-to-use three-pronged plugs for use in standard residential 120V power supplies.

WARNING! In certain circumstances electrical appliances may be a danger hazard.

Basic **precautions**, A through O.

A. Do not check the status of the filters while the rangehood is operating.

B. Do not touch bulbs or adjacent areas after prolonged use of the lighting, as they can eventually get quite hot.

C. Flambé cooking is prohibited underneath the rangehood.

D. Avoid free flames near the range hood, as it is damaging to the filters and the motor, and can cause a fire hazard.

E. Constantly check food frying; overheated oil may become a fire hazard.

F. Disconnect the electrical plug prior to any maintenance.

G. There shall be adequate ventilation in the room when the range hood is operating.

H. There is a risk of fire if cleaning is not carried out in accordance with the instructions.

I. If the supply cord is damaged, it must be replaced by the manufacturer, a service agent, or similarly qualified person(s) in order to avoid a hazard.

J. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

K. Children should be supervised to ensure that they do not play with the appliance.

L. The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.

M. The minimum distance between the supporting surface for the cooking vessels on the hob and the lowest part of the range hood shall be at least 26 in.

N. Regulation concerning the discharge of air has to be fulfilled.

O. The hoods can be applicable for 6 gas burners cooking together max (if using with an induction range, disregard this note).

INSTALLATION INSTRUCTIONS

Assembly and electrical connections must be carried out by specialized personnel. The appliance has been manufactured as class I, therefore an earth cable is necessary (an earth cable is a protective conductor that aids in preventing fire and electric shocks).

> ! **WARNING — State of California Proposition 65:** This product contains bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm, and lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

Everything in the **carton.**

Our insert range hoods come with dishwasher-safe baffle filters, with the grease traps integrated into the baffles, held in place with a combination of magnetic strips and gentle springs to ensure a tight fit and minimal vibrations when the range hood is in full operation.

Our insert range hoods also come with backdraft dampers and flexible ducting sized to the model's duct collar — 10″ on RH-INSERT-46 and RH-INSERT-58, 6″ on RH-INSERT-28 and RH-INSERT-34. Duct the unit per local code requirements keeping the run as short and straight as possible; undersized or restricted ductwork reduces airflow.

Every model comes ready to plug into a standard residential 120V three-pronged plug.

NOTE — INSERT MODELS

Unlike our wall-mount Pro Range Hoods, insert models do not ship with telescoping chimneys. The insert is designed to be housed inside a cabinet, soffit, or custom hood enclosure supplied by the installer or cabinetmaker.




PARTS INCLUDED IN CARTON

A	Mounting brackets	**26/34" x6 " : 46/58" x8**
B	Bracket / mounting screws	**26/34" x12 : 46/58" x16**
C	Cabinet mounting screws	**26/34" x6 : 46/58" x8**
D	Baffle filters	**26/34" x2 : 46" x3 : 58" x4**
E	Backdraft damper	**1**
F	Flexible ducting (6" - 26/34. 10" - 46/58)	**1**

NOTE — MOUNTING

Enclosure construction and structural support determine the appropriate mounting method and hardware; consult a contractor or other professional to ensure the hood is safely and securely mounted. Incorrect mounting could damage the hood, enclosure, countertop or appliances beneath, and could cause significant injury. All screws, toggle bolts, wall anchors or other hardware must be rated in excess of the hood's weight. Follow local building codes, ensure the hood is level before finalizing hardware, and verify ventilation clearances.

Push-button control — **46″ and 58″.**

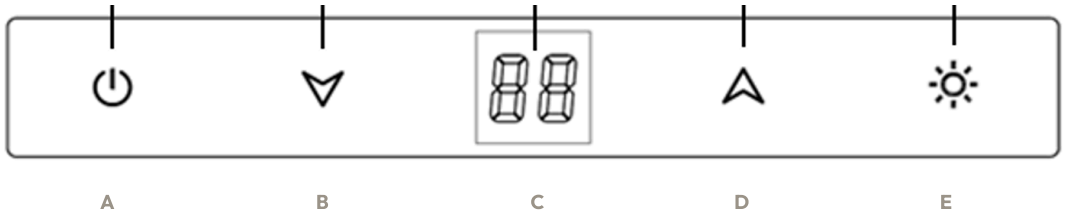

BUTTONS AND FUNCTIONS

ITEM	BUTTON	TYPE	FUNCTION	INDICATOR LIGHT STATUS
A	On / off key	Button	Starts or stops the range hood. The fan and the lighting switch off together.	The key indicator lights when unit is on
B	Level down	Button	Reduces fan speed. Also works with the hood off, which starts the fan and lights the power key. Hold for 2 seconds to run through the levels, one level every 0.5 seconds.	The key indicator lights while the button is held; goes off on release.
C	Level display	Digital tube	Shows the selected level.	Displays levels 01–09 and Boost. In Boost the first digit goes blank and the second shows “b”.
D	Level up	Button	Increases fan speed. Also works with the hood off, which starts the fan and lights the power key. Hold for 2 seconds to run through the levels, one level every 0.5 seconds.	The key indicator lights while the button is held; goes off on release.
E	Light	Button	Turns the lighting on and off, independently of the fan. Three brightness levels, 1 to 3 from low to high.	First press — level 3. Second press — level 2. Third press — off. Hold 2 seconds for level 1; hold 2 seconds again to switch off.

Status, levels and **remote.**

STATUS

Power-on state. Switch on the supply. All buttons light and the display shows “00”. After one second every display goes off.

Powered on. Press the power key. The power key lights, the other keys and the digital tube go off. With the hood off you can also press level down or level up directly, which starts the hood and lights the power key. If the lighting was on before the hood was powered on, it stays on.

Powered off. Press the power key again. All key lights and the digital tube go out, and the fan and lighting shut down together.

LEVEL SETTINGS

From standby, pressing level down or level up starts the fan and the digital tube shows “01”. With the hood already powered on, the same keys set the level from “01” upward.

Each press of level up raises the setting by one; each press of level down lowers it by one. The digital tube follows the selection and stays lit while the hood runs.

Boost is the maximum setting: the first digit goes blank and the second shows “b”. After two minutes of continuous running Boost drops automatically to level 09.

TURNING THE FAN OFF


Press level down until the display reads “00”, or press the power key — the fan stops either way.

LIGHTING

The light key works independently of the fan and can be used with the hood off. Brightness has three levels, 1 to 3 from low to high. First press gives level 3, second press level 2, third press off. Hold the key for 2 seconds for level 1; hold again for 2 seconds to switch the lighting off.


REMOTE CONTROL

An infrared receiver inside the electronic switch takes commands from the dedicated remote.

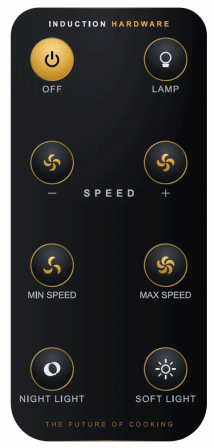

OFF	Shuts the hood down, turning off the fan and the lighting.
LAMP	First press — level 3 lighting. Second press — lighting off.
SPEED –/+	Steps the fan level down or up in sequence; the digital tube shows the level.
MIN SPEED	Runs the fan at level 1.
MAX SPEED	Runs the fan in Boost, dropping to level 09 after two minutes.
NIGHT LIGHT	First press — level 1 lighting. Second press — lighting off.
SOFT LIGHT	First press — level 2 lighting. Second press — lighting off.

Touch control — **28″ and 34″**.

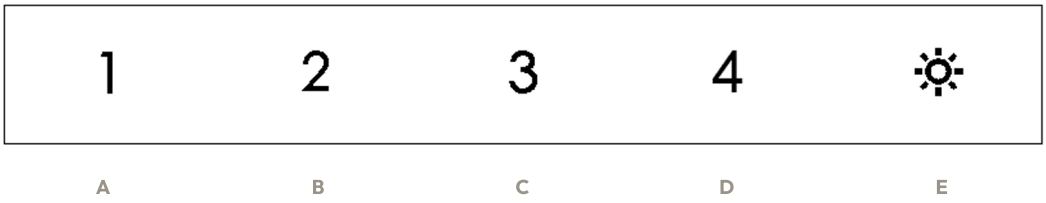

BUTTONS AND FUNCTIONS

ITEM	BUTTON	TYPE	FUNCTION	INDICATOR LIGHT
A	Level 1	Touch	Runs the fan at level 1. Swiping across the panel selects the same level.	The key indicator lights while the level is selected.
B	Level 2	Touch	Runs the fan at level 2. Swiping across the panel selects the same level.	The key indicator lights while the level is selected.
C	Level 3	Touch	Runs the fan at level 3. Swiping across the panel selects the same level.	The key indicator lights while the level is selected.
D	Level 4	Touch	Runs the fan at level 4. Swiping across the panel selects the same level.	The key indicator lights while the level is selected.
E	Light	Touch	Turns the lighting on and off. Three brightness levels, 1 to 3 from low to high.	First press — level 3. Second press — level 2. Third press — off.

STATUS

Power-on. When the supply is connected every key indicator lights, then goes off after one second.

Standby. The unit sits in standby once powered on, and returns to standby whenever the running level is switched off.

Shutdown. These models have no separate shutdown state.

Levels, lighting and **remote**.

LEVEL SETTINGS

From standby, touch key 1, 2, 3 or 4. That key lights along with the power indicator, the other level indicators go out, and the fan starts at the level selected.

Raising the level. Levels rise in sequence 1, 2, 3, 4, with power rising in step.

Lowering the level. Levels fall in sequence 4, 3, 2, 1, with power falling in step.


Switching the fan off. Touch the key of the running level. Its indicator goes out, the level switches off and the unit returns to standby.

LIGHTING

The light key works with the fan running or in standby. Brightness has three levels, 1 to 3 from low to high. First press gives level 3, second press level 2, third press off. Hold the key for 2 seconds for level 1; hold again for 2 seconds to switch the lighting off.

REMOTE CONTROL

An infrared receiver inside the electronic switch takes commands from the dedicated remote.

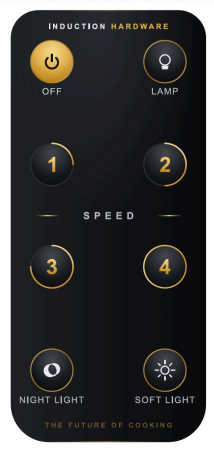

OFF	Shuts the hood down, turning off the fan and the lighting.
LAMP	First press — level 3 lighting. Second press — lighting off.
1·2·3·4	Runs the fan at that level; the matching key on the panel lights.
NIGHT LIGHT	First press — level 1 lighting. Second press — lighting off.
SOFT LIGHT	First press — level 2 lighting. Second press — lighting off.

Installation made **clear.**

Proper installation ensures your Induction Hardware appliance performs exactly as designed. This guide provides the key steps and requirements to help installers complete the process safely and correctly. For additional resources, installation videos, and the most up-to-date documentation, please visit our website.



WARNING! Before drilling or cutting, ensure that there are no electric wires, gas lines, or water pipes in the area where holes are to be made.

PRE-INSTALLATION CHECKLIST

- [ ] Enclosure (cabinet, soffit, or custom hood) is square, level, and free of obstructions.
- [ ] Enclosure is structurally rated to carry well in excess of the insert's weight.
- [ ] Cutout is cut to dimension A × B for your model (see next section).
- [ ] Minimum 26 in. clearance is maintained between the cooking surface and the lowest part of the hood. 30 in. clearance should be used if mounted above a gas cooking surface
- [ ] Duct run is planned and sized to the model's collar — 10″ on RH-INSERT-46/58, 6″ on RH-INSERT-28/34.
- [ ] Ductwork terminates outdoors. Air must not be discharged into a flue used for exhausting fumes from appliances burning gas or other fuels.
- [ ] A standard residential 120V grounded outlet is located inside the enclosure and remains accessible.
- [ ] Local building codes have been reviewed and will be followed.

Cut once, to the **record**.

CUTOUT DIMENSIONS

MODEL	A (LENGTH)	B (WIDTH)
RH-INSERT-28	**26.8 in**	**16.8 in**
RH-INSERT-34	**32.8 in**	**16.8 in**
RH-INSERT-46	**44.8 in**	**16.8 in**
RH-INSERT-58	**56.8 in**	**16.8 in**

Cutouts are taken from the factory mounting sheets on pages 14–17. The insert body overhangs the cutout onto the surrounding enclosure surface. Verify against the insert in hand before cutting.

DUCT SIZE BY MODEL

RH-INSERT-28 · RH-INSERT-34	**6" round**
RH-INSERT-46 · RH-INSERT-58	**10" round**

BRACKET HEIGHT ADJUSTMENT RANGE


BRACKET POSITION	MINIMUM	MAXIMUM
Front and rear brackets	**0.4 in**	**3.9 in**
Side brackets	**0.4 in**	**2.6 in**

Bracket height is set to match the thickness of the enclosure material the insert will be captured against. Set all brackets to the same height before lowering the unit into place. The mounting sheets show bracket travel as common to all four widths.

FULL DRAWINGS


Dimensioned mounting sheets for each width — front and side elevations, top plan with collar location, enclosure cutout, and bracket travel — are on pages 14–17.

CUTOUT REFERENCE

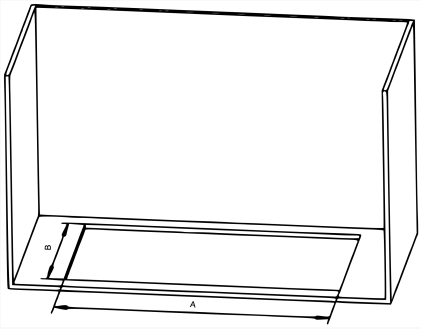

A — cutout length · B — cutout width. Opening shown in the underside of the enclosure, viewed from below.

BRACKET REFERENCE

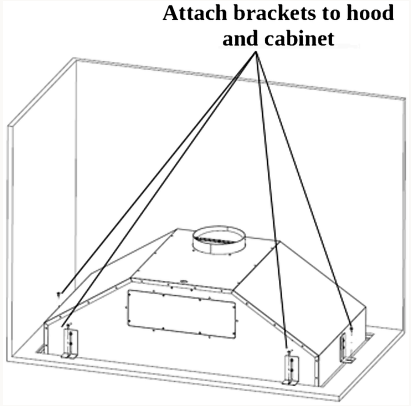

Fasten all brackets to the hood and to the surrounding enclosure at all points.



POWER CONNECTION

The hood ships with a power cord and NEMA 5-15P plug already installed. Provide a standard 120 V grounded outlet inside the enclosure.

Seven steps, top **down.**

1. **Prepare the enclosure.** Cut the opening to dimensions A × B for your model. Verify the opening is square and that the surrounding material is sound and load-bearing.
2. **Arrange power and duct.** Arrange the electrical power supply within the dimensions of the enclosure — the insert plugs into an outlet placed inside it. Route the duct run so the connection at the top of the insert is accessible once the unit is seated. Every home and every install is unique; the installer must ensure that screws and anchors suit the material into which the range hood is being installed.
3. **Install the brackets.** Install the brackets to the hood using the included hardware. Set the front and rear bracket height between 0.4 in and 3.9 in, and the side bracket height between 0.4 in and 2.6 in, to match the thickness of your enclosure material.
4. **Seat the unit.** With two people, insert the unit into the cabinet from the bottom. Confirm the unit sits flush and level in the opening, with even reveal on all four sides and no binding against the enclosure.
5. **Secure.** Secure the unit with the included screws through all bracket points. Do not final-tighten until the unit is confirmed level.
6. **Connect duct and damper.** Fit the backdraft damper and connect the flexible ducting. Confirm the damper opens freely and closes fully.
7. **Power up.** Plug the unit into the outlet inside the enclosure. Test all fan speeds, Boost, and all five lighting levels before closing up the enclosure.

NOTE — MOUNTING

Enclosure construction and stud or framing location play a crucial role in determining the appropriate mounting method and hardware. Consult a contractor or other professional; use hardware rated in excess of the hood's weight; follow local building codes; ensure the hood is level before finalizing any hardware; verify ventilation clearances.




INSTALLATION DRAWING · VENTING SHEET

Range Hood Insert

Minimum vent clearance · straight duct before first bend

INCHES [MM]

1 · FRONT ELEVATION — DUCT RUN

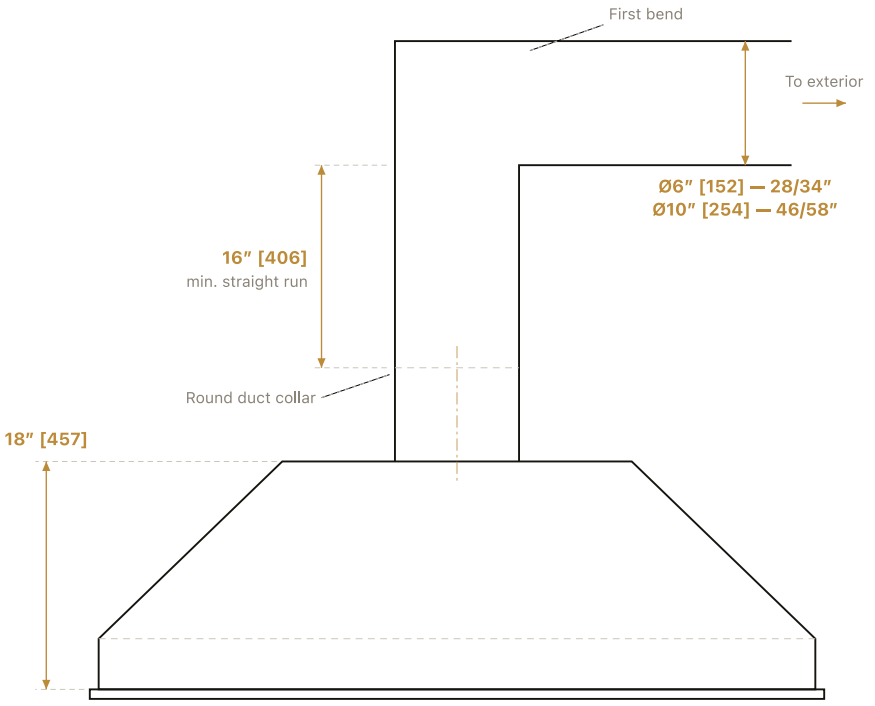

Maintain the full straight duct length between the hood outlet and the first elbow to preserve airflow.

Verify the duct route, wall or roof cap, and make-up air requirements on site before installation.

RH-INSERT-28 — 28″ Insert


INSTALLATION DRAWING · MOUNTING SHEET

28″ Range Hood Insert — RH-INSERT-28


INCHES [MM]

Insert for a custom enclosure · ducted · brushless DC · 120V


1 · FRONT ELEVATION

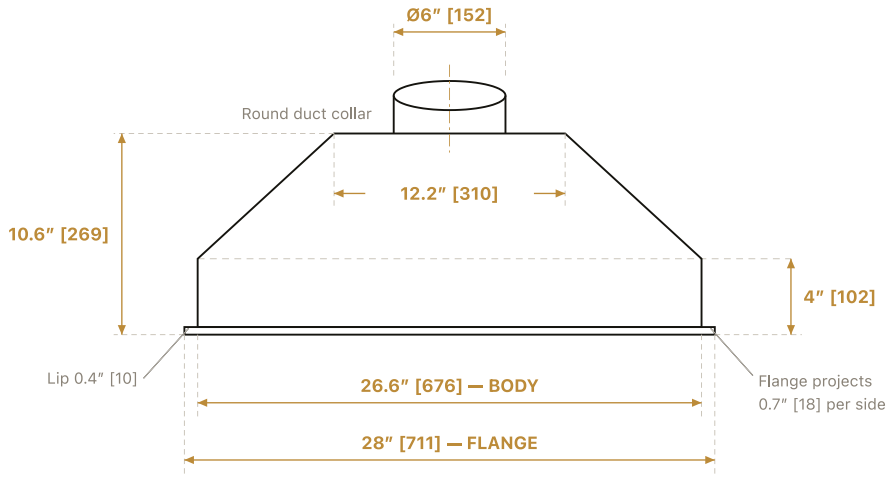

2 · SIDE ELEVATION

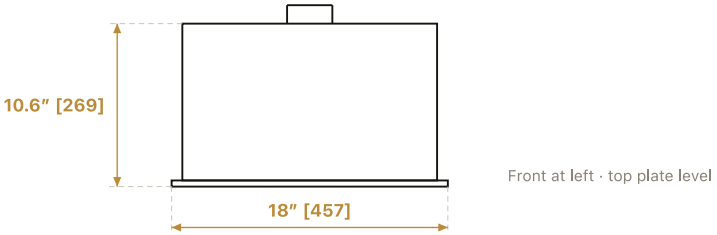

3 · TOP PLAN — COLLAR LOCATION

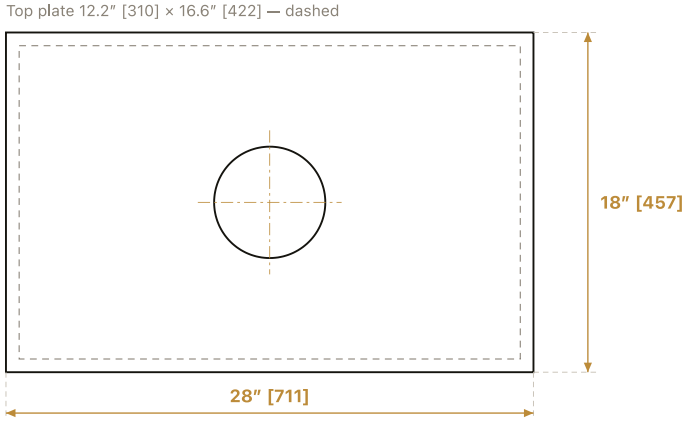

Cutout A × B = 26.8″ [681] × 16.8″ [427] · lower body 26.6″ × 16.6″ · flange 28″ × 18″

Brackets: front & rear 0.4–3.9″ [10–100] · side 0.4–2.6″ [10–65] · min. drop below lip 0.4″ [10]

Suits a 30″ cooking surface · duct Ø6″ round · 400 CFM max · 120V AC · verify on site before cutting

RH-INSERT-34 — 34″ Insert


INSTALLATION DRAWING · MOUNTING SHEET

34″ Range Hood Insert — RH-INSERT-34


INCHES [MM]

Insert for a custom enclosure · ducted · brushless DC · 120V

1 · FRONT ELEVATION

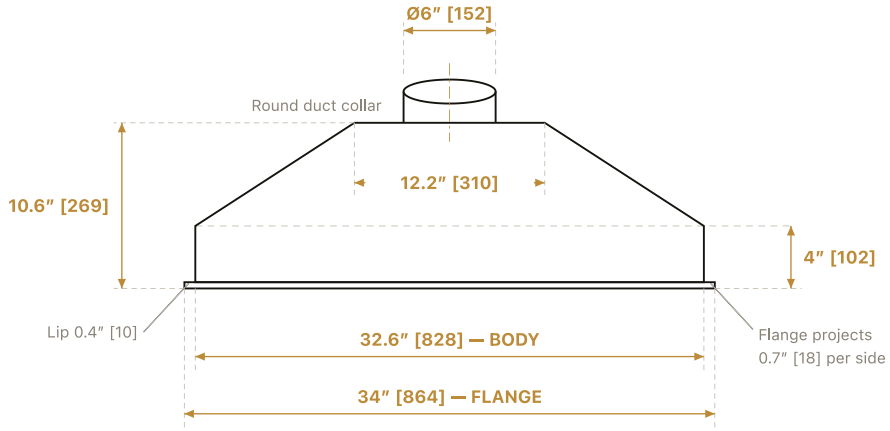


2 · SIDE ELEVATION

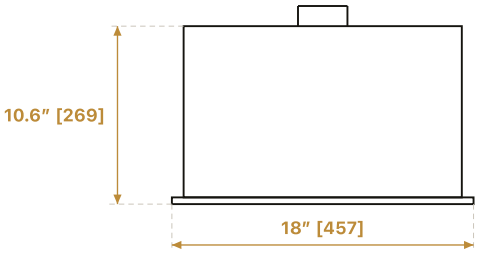

Front at left · top plate level

3 · TOP PLAN — COLLAR LOCATION

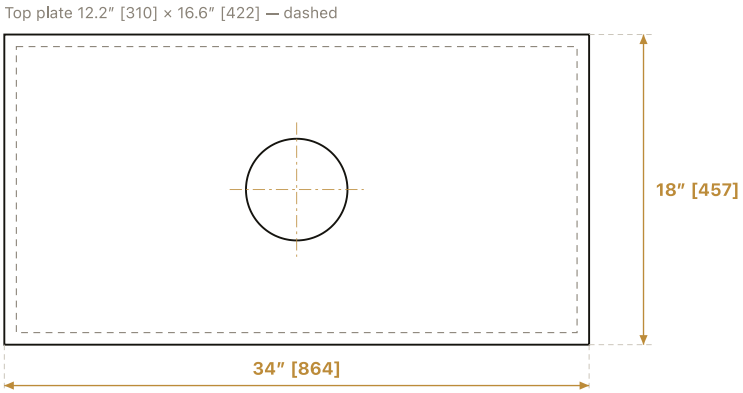

Cutout A × B = 32.8″ [833] × 16.8″ [427] · lower body 32.6″ × 16.6″ · flange 34″ × 18″

Brackets: front & rear 0.4–3.9″ [10–100] · side 0.4–2.6″ [10–65] · min. drop below lip 0.4″ [10]

Suits a 36″ cooking surface · duct Ø6″ round · 400 CFM max · 120V AC · verify on site before cutting

RH-INSERT-46 — 46″ Insert


INSTALLATION DRAWING · MOUNTING SHEET

46″ Range Hood Insert — RH-INSERT-46


INCHES [MM]

Insert for a custom enclosure · ducted · brushless DC · 120V

1 · FRONT ELEVATION

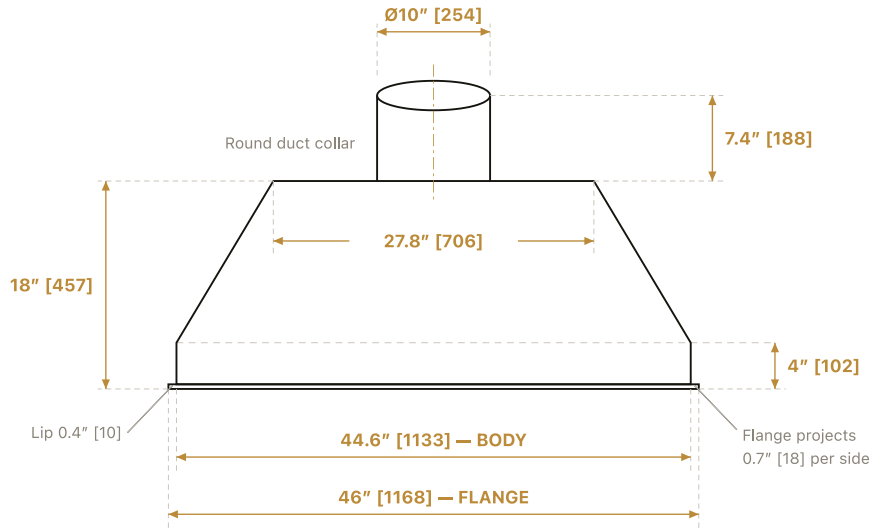


2 · SIDE ELEVATION

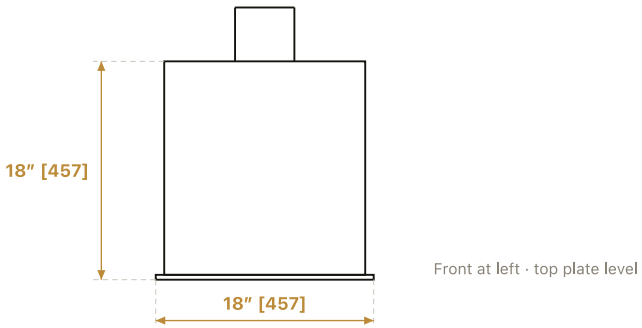

3 · TOP PLAN — COLLAR LOCATION

Top plate 27.8″ [706] × 16.6″ [422] — dashed

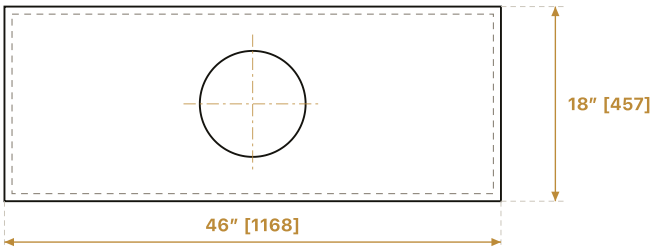

Cutout A × B = 44.8″ [1138] × 16.8″ [427] · lower body 44.6″ × 16.6″ · flange 46″ × 18″

Brackets: front & rear 0.4–3.9″ [10–100] · side 0.4–2.6″ [10–65] · min. drop below lip 0.4″ [10]

Suits a 48″ cooking surface · duct Ø10″ round · 1500 CFM max · 120V, 6.7A AC · verify on site before cutting

RH-INSERT-58 — 58″ Insert


INSTALLATION DRAWING · MOUNTING SHEET

58″ Range Hood Insert — RH-INSERT-58


INCHES [MM]

Insert for a custom enclosure · ducted · brushless DC · 120V


1 · FRONT ELEVATION

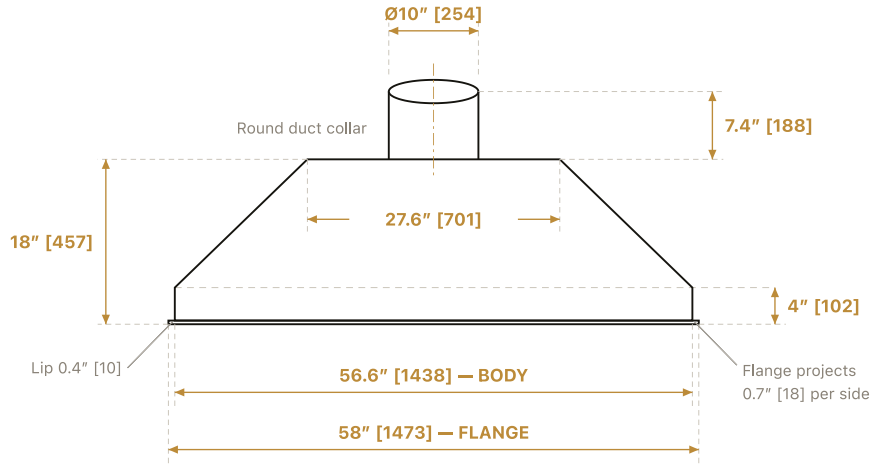

2 · SIDE ELEVATION

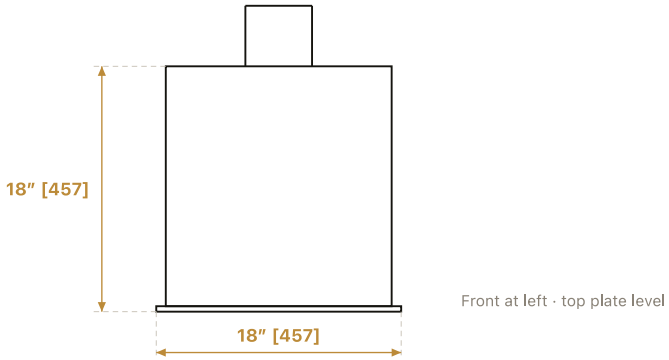

3 · TOP PLAN — COLLAR LOCATION

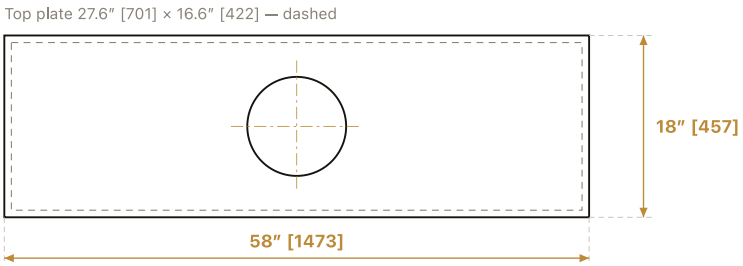

Cutout A × B = 56.8″ [1443] × 16.8″ [427] · lower body 56.6″ × 16.6″ · flange 58″ × 18″

Brackets: front & rear 0.4–3.9″ [10–100] · side 0.4–2.6″ [10–65] · min. drop below lip 0.4″ [10]

Suits a 60″ cooking surface · duct Ø10″ round · 1500 CFM max · 120V, 6.7A AC · verify on site before cutting

Every detail, on the **record**.

MODEL	W × D × H	MAX CFM	WEIGHT	DUCT COLLAR	PACKAGE
RH-INSERT-28	28 × 18 × 13 in	400	25 lbs	Ø6 in	32 × 22 × 17 in
RH-INSERT-34	34 × 18 × 13 in	400	45 lbs	Ø6 in	36 × 22 × 17 in
RH-INSERT-46	46 × 18 × 18 in	1,500	60 lbs	Ø10 in	50 × 22 × 22 in
RH-INSERT-58	58 × 18 × 18 in	1,500	77 lbs	Ø10 in	62 × 22 × 22 in

All models: brushless DC blower (2x blower in 46/58") 2 × LED work lights (3x lights on 58") · insert mounting · ducted venting · 120V · NEMA 5-15P · ETL certified. Weights and dimensions are approximate; Induction Hardware reserves the right to change specifications without prior notice.

RECOMMENDED COOKTOP PAIRING

RH-INSERT-28	**30 in. cooktops**
RH-INSERT-34	**36 in. cooktops**
RH-INSERT-46	**48 in. cooktops**
RH-INSERT-58	**60 in. cooktops**

THE CANOPY, UP CLOSE



Grease never gets to **stay**.

> **WARNING!** Disconnect the electrical plug prior to any maintenance. There is a risk of fire if cleaning is not carried out in accordance with these instructions. **CAUTION:** do not check the filters while the rangehood is operating; do not touch bulbs or adjacent areas after prolonged use of the lighting. Allow the unit to cool completely before servicing.

BAFFLE FILTERS

The baffle filters carry integrated grease traps and are dishwasher safe. They are held in place with a combination of magnetic strips and gentle springs.

1. Confirm the unit is off and cool, and the plug is disconnected.
2. Release each baffle filter from its magnetic and spring retention and lower it free of the housing.
3. Empty the collected grease from each baffle, dispose of it responsibly, then wash the filters in the dishwasher, or by hand in warm soapy water.
4. Dry completely before reinstalling.
5. Reseat each filter until the magnets and springs engage fully. A loose filter will vibrate at high fan speeds.

Grease should not be allowed to accumulate on the hood or filter. Clean ventilating hoods frequently. Magnets applied on appropriate models.

TOUCH CONTROLS / REMOTE

Apply mild non-abrasive cleaner to a soft cloth or sponge and gently wipe clean. Never apply cleaner directly onto the panel. Do not use abrasive cleaners, steel-wool pads, gritty washcloths, or some paper towels. Damage may occur.

STAINLESS STEEL SURFACES

Clean with a mild detergent and warm soapy water; dry with a soft, non-abrasive cloth.

Apply a stainless steel cleaner or protectant to maintain the finish.

Always wipe in the direction of the grain to prevent scratching.

Do not use abrasive powders, steel wool, chlorine bleach, rust removers, or flammable solvents.

RECOMMENDED SERVICE INTERVAL

Baffle filters	Empty and wash every 2–4 weeks with normal use, more often with heavy frying
Duct run	Inspect duct run and exterior termination annually



Diagnose before you **dial.**

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Unit does not power on	Not plugged in, or outlet inside enclosure has no power	Verify the plug is seated and the circuit breaker is on. Confirm the outlet is live.
Touch screen unresponsive	Screen surface is greasy or wet	Power down at the breaker, clean the screen per the cleaning section, allow to dry, restore power.
Airflow seems low	Filters loaded with grease	Remove and wash the baffle filters.
Airflow seems low	Duct run restricted, obstructed, crushed, or undersized	Inspect the full duct run and the exterior termination. Duct to the model's collar size — 10″ on RH-INSERT-46/58, 6″ on RH-INSERT-28/34. Undersized, crushed, or obstructed ducts reduces airflow.
Excessive vibration or rattle	Filter not fully seated on its magnets and springs	Power down, reseat each filter until fully engaged.
Odors linger after cooking	Fan stopped too soon	Run the fan for several minutes after cooking ends.
Backdraft or cold air entering	Damper stuck open or obstructed	Power down and inspect the damper for free movement and debris.
Lights do not illuminate	Lighting level set to "0"	Tap the Lighting icon and select 1–5.
Smoke not being captured	Hood undersized for cooktop, or clearance incorrect	Verify the insert is paired to the correct cooktop width and that 26 in. minimum clearance is maintained.
Supply cord damaged	—	Do not use the appliance. The cord must be replaced by the manufacturer, a service agent, or similarly qualified person(s) in order to avoid a hazard.

FAULT CODES — NONE

Range hoods do not produce fault codes. Troubleshoot by symptom: motor running with no airflow points at a jammed butterfly valve; abnormal noise points at fan blade contact. Both are technician calls — contact Customer Service.

IF A PROBLEM PERSISTS

Stop using the appliance, disconnect power, and contact Induction Hardware Customer Service. Do not disassemble the appliance for repair yourself.

Built to last, backed for **life.**

INDUCTION HARDWARE

At Induction Hardware, we believe great products should be built to last and supported by people who care. Your appliance is backed by our warranty as part of our commitment to quality, craftsmanship, and long-term reliability.

For full warranty details, coverage periods, and exclusions, please visit our website where we store our warranty information:

inductionhardware.com/pages/warranty-and-service

AN INDUSTRY FIRST

A **lifetime** warranty on every product we make.

The "Induction-Clad" warranty — we build to a fit-and-finish standard the appliance industry doesn't, so we back every product for as long as you own it.

WARRANTY CONDITIONS

This warranty applies to the original purchaser only, for products installed and used in accordance with this guide.

Proof of purchase is required for all warranty claims.

Warranty is void if the product has been modified, repaired by unauthorized personnel, or damaged through misuse, negligence, or failure to follow installation and operating instructions.

Warranty does not cover damage caused by improper installation, use of non-original parts, or operation in non-residential or commercial settings.

Warranty will not cover damages caused by environment.

Thank you for being part of the Induction Hardware community. If you ever need assistance, our team is always here to help.

Keep this manual with the **receipt.**

Thank you for purchasing your insert range hood. This manual contains important information regarding the proper installation, use, and maintenance of your range hood. Following this manual will ensure that your product will work at its peak performance and efficiency.

Please write down the model number and serial number below for future reference. Both numbers are located on the rating label inside the unit and are needed to obtain warranty service. You may also want to staple your receipt to this manual, as it is the proof of your purchase and may also be needed for service under warranty.

MODEL NUMBER

SERIAL NUMBER

DATE OF PURCHASE

INSTALLER / COMPANY

BEFORE CONTACTING CUSTOMER SERVICE

If you received a damaged product, immediately contact the retailer or dealer that sold you the product.

Read and follow this instruction manual carefully to help you install, use and maintain your unit.

Read the troubleshooting section of this manual — it will help you diagnose and solve common issues.

CONTACT US

Website	**www.inductionhardware.com**
Phone	**(775) 898-7562**
Email	**info@inductionhardware.com**
Address	**12920 Old Virginia Road, Suite 160 Reno, Nevada 89521, USA**

INDUCTION HARDWARE

Thank you for choosing Induction Hardware.
The Future of Cooking is Now.

Thank you for being part of the Induction Hardware community.

If you ever need support, our team is always here to help.

www.INDUCTIONHARDWARE.com