Veego

YG-BS24L-1.1-NA
YG-BS24R-1.1-NA

INSTRUCTION MANUAL

BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY RULES AND OPERATING INSTRUCTIONS.

Hey there :)

If you're reading this, your Yeego product has officially arrived — and honestly, we're pretty excited about that.

Thank you for bringing us into your space. Maybe it's heading into your kitchen, your home bar, your office, your café, your salon, or that one corner you've been meaning to make a little more useful, a little more organized, and a lot more ready.

Wherever it lands, we hope it helps make everyday moments easier to enjoy — a cold drink within reach, guests feeling welcome, workdays running smoother, and your space feeling just a bit more complete.

At Yeego, we believe a better lifestyle should be easy to start. Not overcomplicated. Not out of reach. Just practical, reliable, and ready for real life.

So here's to a space that works better, feels better, and welcomes whatever comes next.

Stay Ready. Live Easy.

Kenneth & The Yeego Team

https://yeegolife.com/

https://www.facebook.com/yeegolife.official

https://www.instagram.com/yeegolife.official

TABLE OF CONTENTS

IMPORTANT SAFETY RULES	01
PARTS & TECHNICAL DATA	03
INSTALLATION INSTRUCTIONS	04
OPERATING YOUR APPLIANCE	07
TROUBLESHOOTING GUIDE	10
LIMITED WARRANTY	13

IMPORTANT SAFETY RULES

Before using the appliance, it must be properly positioned and installed as described in this manual. Read this manual carefully. To reduce the risk of fire, electric shock, or injury when using the appliance, follow basic precautions, including the following:

☆ DANGER

Plug into a grounded 3-prong outlet. Do not remove the grounding prong. Do not use an adapter, and do not use an extension cord.

Replace all panels before operating. It is recommended that a separate circuit serving only your appliance be provided. Use receptacles that cannot be turned off by a switch or pull chain.

Never clean appliance parts with flammable fluids. These fumes can create a fire hazard or explosion. Do not store or use gasoline or other flammable vapors and liquids near this or any other appliance. The fumes can create a fire hazard or explosion.

Before cleaning or maintenance, make sure the power supply to the unit is disconnected.

Do not connect or disconnect the electric plug when your hands are wet. Unplug the appliance or disconnect power before cleaning or servicing. Failure to do so may result in electric shock or death.

Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.

☆ WARNING

To help ensure safe moving and installation of the appliance, two or more people are recommended. Failure to do so may result in back or other injuries.

To ensure proper ventilation, the front of the unit must be completely unobstructed. Choose a well-ventilated area with temperatures above 50°F (10°C) and below 90°F (32°C). This unit must be installed in an area protected from the elements, such as wind, rain, water spray, or drips.

The appliance should not be located next to ovens, grills, or other sources of high heat.

The appliance must be installed with all electrical, water, and drain connections in accordance with state and local codes. A standard electrical supply (115V AC only, 60Hz) should be properly grounded in accordance with the National Electrical Code and local codes and ordinances, as required.

Do not kink or pinch the appliance power supply cord.

The fuse or circuit breaker size should be 15 amperes.

It is important for the appliance to be level in order to operate properly. You may need to make several adjustments to level it.

Never allow children to operate, play with, or crawl inside the appliance.

Do not use solvent-based cleaning agents or abrasive cleaners on the interior. These cleaners may damage or discolor the interior.

Do not use this product for any purpose other than its intended use.

FLAMMABLE REFRIGERANT GAS

For your safety, observe the following recommendations.

This appliance contains a small quantity of R600a refrigerant, which is environmentally friendly but flammable. It does not damage the ozone layer or increase the greenhouse effect. During transportation and installation, ensure the refrigerant tubing is not damaged. Avoid using or manipulating sharp objects near the appliance. Leaking refrigerant can ignite and may damage the eyes.

In the event of any damage, avoid exposure to open flames or devices that create sparks. Disconnect the appliance from the power supply. Ventilate the room where the appliance is located for several minutes. Notify Customer Service for guidance. The room for installing the appliance must contain at least 1 cubic meter per 0.28 oz of refrigerant. The refrigerant quantity is also listed on the Rating Plate of the appliance.

☆ DANGER

Risk of fire or explosion. Flammable refrigerant used.
DO NOT use mechanical devices to defrost the refrigerator.
DO NOT puncture refrigerant tubing.
Flammable refrigerants have a risk of fire or explosion and should only be repaired by trained service personnel.

☆ WARNING

The use of flammable refrigerants presents a fire or explosion hazard. Refer to the Service Manual before servicing this product. All safety precautions must be followed. Dispose of property in accordance with federal or local regulations.


Puncturing refrigerant tubing can cause fire or explosion. Follow handling instructions carefully. To prevent child entrapment, keep children away from the appliance and the surrounding area.

To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:

☆ WARNING

Read all instructions before using the appliance.
DANGER or WARNING: Risk of child entrapment.
Child entrapment and suffocation remain hazards with discarded appliances.
Before discarding an old appliance, remove the door but leave shelves in place to prevent children from climbing inside.
Never allow children to operate, play with, or crawl inside the appliance.
Never clean appliance parts with flammable fluids, which can create a fire hazard or explosion.
Do not store or use gasoline or other flammable vapors or liquids near this or any other appliance, as these fumes can create a fire hazard or explosion.

PARTS & TECHNICAL DATA

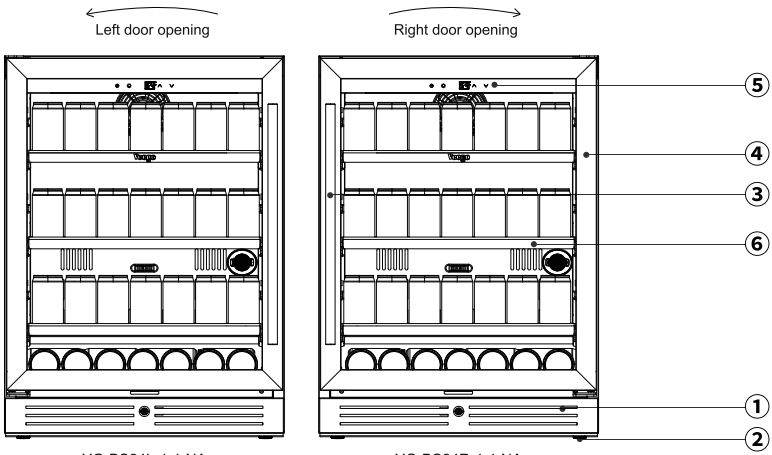

YG-BS24L-1.1-NA YG-BS24R-1.1-NA

① **Bottom Vent Grille**
② **Adjustable Leveling Feet**
③ **Door Handle**
④ **Double-Layer Tempered Glass Door**
⑤ **Touch Control Display Panel**
⑥ **Fully Removable Shelves (3 Total)**

Technical Data:	
Voltage:	115V/60Hz
Rated Current:	1.2A
Capacity :	At least 145 cans, 12 oz each
Temperature Range:	34°F-54°F (1°C-12°C)
Net Weight:	84.4 LB
Gross Weight:	106.6 LB
Unit Dimensions:	23.4"W x 22.4"D x 32.3"H
Packaging Dimensions:	27.6"W x 26.1"D x 35.8"H
Refrigerant:	R600a

INSTALLATION INSTRUCTIONS

Before Using the Appliance

Remove the exterior and interior packing. Ensure you have all of the following parts:
3*Wire Shelves
1*Door Handle
4*Adjustable Leveling Feet
1*L-Shaped Screwdriver
1*Instruction Manual

Before connecting the appliance to the power source, let it stand upright for approximately 24–36 hours. This reduces the possibility of malfunction in the cooling system caused by handling during transportation.
Clean the interior surfaces using a soft cloth and lukewarm water.
Install the handle on the left side of the door.

Installation of the Appliance

This appliance is designed for freestanding or built-in (fully recessed) installation. Place the product on a floor strong enough to support it when fully loaded. Adjust the front leveling legs at the bottom to level the unit.

Place the product away from direct sunlight and any heat sources, such as stoves, heaters, or radiators. Direct sunlight may damage the acrylic coating, and nearby heat sources could increase energy consumption. Extremely cold temperatures may also affect performance. Do not install the unit in areas where the temperature could drop below 50°F (10°C), and avoid moist or damp locations.

For optimal performance, it is recommended to install the appliance in an environment with an ambient temperature between 66°F and 75°F. Temperatures outside this range may adversely affect performance.

Built-in Cabinet Instructions


For built-in installation, leave a 6 mm space on each side and at the top of the appliance to ensure proper air circulation to cool the compressor and condenser. Ensure that no objects block the front exhaust vent, as this could impair performance. If the refrigerator is too short to fit securely in the cabinet, adjust its height using the leveling feet.

Cabinet Opening Dimensions

Minimum Width
23.90" (60.7cm)

Minimum Depth
22.65" (57.6cm)

Minimum Height
32.55" (82.7cm)

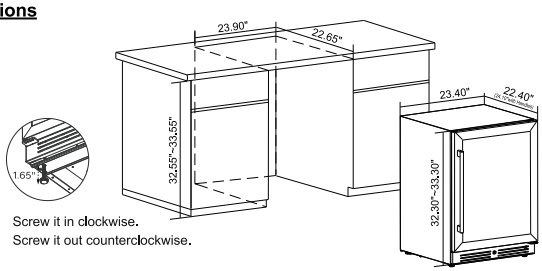

Electrical Connection

☆ WARNING

Improper use of the grounded plug can result in a risk of electric shock. If the power cord is damaged, have it replaced by an authorized service center.

Proper grounding is essential for safety. The power cord has a three-prong plug for standard grounded outlets to reduce the risk of electric shock.

☆ NOTE

Plug the unit into a dedicated, properly grounded wall outlet. Do not, under any circumstances, cut or remove the third grounding prong from the power cord. For personal safety, this appliance must be properly grounded. Any questions about power or grounding should be directed to a certified electrician or an authorized service center.

The appliance should always be plugged into its own individual electrical outlet with a voltage rating that matches the rating label on the appliance. This provides the best performance and helps prevent overloading household wiring circuits, which could create a fire hazard from overheating. Never unplug the appliance by pulling the power cord. Always grip the plug firmly and pull it straight out from the receptacle. Repair or replace immediately any power cords that are frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. When moving the appliance, be careful not to damage the power cord.

This appliance requires a standard AC 115V/60Hz grounded outlet with three prongs. Have the wall outlet and circuit checked by a qualified electrician to ensure the outlet is properly grounded. Replace 2-prong outlets with properly grounded 3-prong outlets. The cord should be secured behind the appliance and not left exposed or dangling to help prevent accidental injury.

Power Bar with Surge Protection (Recommended)

Most electrical appliances operate with electronic control boards, which are highly susceptible to power surges and may sustain damage or complete failure.

If your location is prone to power surges or outages, it is strongly recommended to connect the appliance to a surge protector. The surge protector must have a joule rating adequate for the connected appliance.

If you have any questions regarding the type or size of surge protector, contact a licensed electrician in your area.

Extension Cord

To avoid potential safety hazards, do not use an extension cord with this appliance. If an extension cord is required, use a UL/CUL-listed, 3-wire grounding cord rated for 115 volts and at least 10 amperes.

Installing the Handle

This appliance includes a door handle. To install the handle, please follow the instructions below (using the right-opening door as an example):

Step 1:
Remove the door gasket from the left side of the door (where the handle will be installed, as shown below). No tools are required—the gasket can be removed by hand. If needed, start peeling from a corner.

Step 2:

The handle screws are pre-installed on the door.

Step 3:


Align the handle holes with the screws. Tighten the screws using a screwdriver until the handle base is flush with the door surface. Ensure the handle is secure but not overtightened to avoid assembly damage.

Step 4:

Reinstall the door gasket.

Note:

Two spare Handle Screws ④ are packed with the other accessories in the accessory bag supplied with the appliance. Before installing the handle, make sure both screws are inserted through the door.

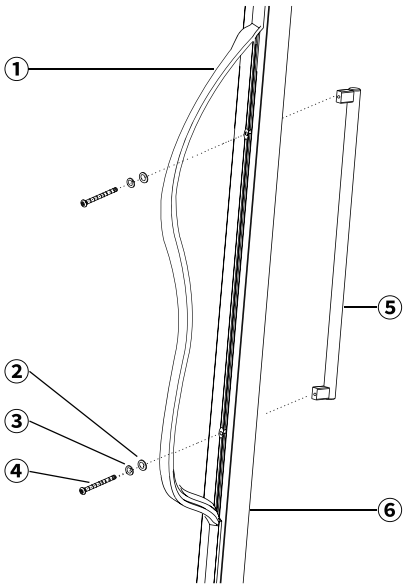

① **Rubber gasket**

② **Flat washer**

③ **Lock washer**

④ **Screw**


⑤ **Handle**

⑥ **Doorframe**

OPERATING YOUR APPLIANCE

It is recommended to install the appliance in an area where the ambient temperature is maintained between 66°F and 75°F (19°C to 24°C). If the ambient temperature falls outside this range, the unit's performance may be affected. For example, exposure to extremely hot or cold conditions can cause temperature fluctuations, and the target temperature range of 34°F to 54°F (1°C to 12°C) may not be achieved.

Control Panel



ON/OFF:

To turn the unit on or off, press and hold the ON/OFF button for 5 seconds.

INSIDE LIGHTING:

To turn the lighting on or off, press the light button.

TEMPERATURE DISPLAY:

Press and hold the light button for 5 seconds to switch the temperature display between °C and °F.

∧ BUTTON: To increase the temperature by 1°C or 1°F.

∨ BUTTON: To decrease the temperature by 1°C or 1°F.

☆ NOTE

If the unit is unplugged, experiences a power loss, or is powered off, allow 3 to 5 minutes before restarting. Attempting to restart prematurely may cause the unit to fail to start.

When using the appliance for the first time or restarting it after a prolonged shutdown, there may be a slight variance between the set temperature and the LED display reading. This is normal and occurs due to the initial stabilization period. After a few hours of operation, the temperature will stabilize.

☆ NOTE

This product is designed for storing and cooling beverages. It is not intended for storing perishable food.

Large Storage Capacity


Can sizes and dimensions may vary. This appliance can store approximately 145 standard 12 oz. drink cans.


Shelves


This appliance is equipped with 3 wire shelves that slide in and out smoothly.
To avoid damaging the door gasket, make sure the door is fully open before pulling out the shelves. For easy access to beverages, pull the shelves approximately 1/3 of the way out of the cabinet.

Moving the Appliance

1. Remove all items, including drinks.
2. Securely tape down all loose items, such as shelves, inside the appliance.
3. Turn the adjustable leg up toward the base to help prevent damage.
4. Tape the door shut.
5. Make sure the appliance remains secure in an upright position during transportation. If the refrigerator must be transported horizontally, place it on its back with the door facing up.
6. Protect the outside of the appliance with a blanket or similar item.

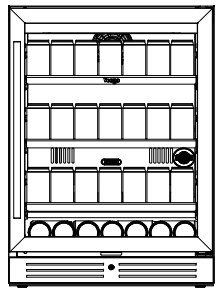

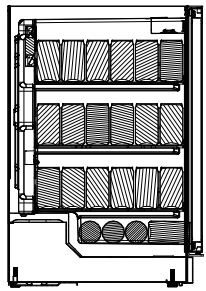

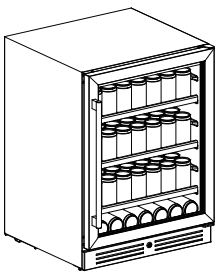



Total=19+42×3=145 cans



145 cans of 12 oz at least

Cleaning the Appliance

Before cleaning, turn off and unplug the appliance. Remove all contents, including shelves. Clean the interior surfaces with a warm water and baking soda solution. Mix approximately 2 tablespoons of baking soda with 1 cup of water. Wash the shelves with a mild detergent solution, rinse thoroughly, and allow them to dry completely. When cleaning the control panel or any electrical components, make sure the sponge or cloth is well wrung out to prevent excess moisture. Finally, wipe the exterior cabinet with warm water and a mild liquid detergent, then rinse and dry with a clean, soft cloth.

Automatic Defrosting

The unit defrosts automatically. The evaporator behind the rear wall of the unit defrosts automatically. Condensate collects in the drainage channel behind the rear wall of the unit, then flows through the drainage hole into the drip tray near the compressor, where it evaporates.

Power Failure

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power will be off for a longer period of time, take the proper steps to protect your contents.


☆ NOTE

Always disconnect the unit from its power source before cleaning or servicing to reduce the risk of electric shock or personal injury.

Charcoal Filtration System

Your appliance is equipped with an active charcoal filtration system to ensure clean air and maintain an odor-free cabinet for storing your wines. The filter is located at the bottom of the rear panel inside your cellar. Please note that this filter should be replaced every 12 months.

Begin by removing all wine bottles from the two shelves in front of the filter. Remove the shelves and set them aside for reinstallation after replacing the filter. To remove the old filter, grip it firmly, rotate 45 degrees counterclockwise, and pull it out. Discard the used filter and insert the new filter into the slot. Secure it by rotating 45 degrees clockwise.

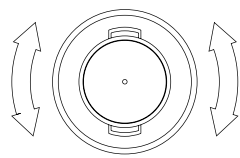

Energy Saving Tips

Place the appliance in the coolest available area, away from heat sources and direct sunlight. Allow adequate space on all sides for proper ventilation. Never cover air vents. Minimize the time the door is open, as frequent openings will affect the internal temperature.

TROUBLESHOOTING GUIDE

Many common issues can be resolved easily, potentially saving you a service call. Before contacting our support team, try the troubleshooting tips below.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Product does not operate.	Power cord is not plugged in. The unit is turned off. Circuit breaker tripped or a fuse is blown.	Plug in the unit. Turn on the unit. Check the circuit breaker and replace any blown fuses.
Product is not cold enough.	External environment may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly.	Check the temperature control setting. Close the door properly. Check the door gasket.
The compressor turns on and off frequently.	The room temperature is higher than normal. A large amount of contents has been added to the refrigerator. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.	Close the door properly. Check the door gasket. Avoid frequent door openings.
Fan is always running	This is a normal function of the cooling system. Lower temperature settings cause the fan to run more frequently. In warmer rooms, the fan will run more often. The unit is designed to run continuously at lower temperatures.	Normal operation; no action required.
The light does not work.	Power cord is not plugged in. Circuit breaker tripped or a fuse is blown. The light button is “OFF.”	Plug in the unit. Press the power button to turn on the unit. Check the circuit breaker and/or fuses.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Vibrations.	The refrigerator is not leveled. The bottles are vibrating. There is an object under the refrigerator.	Check that the refrigerator is level. Make sure the bottles do not touch each other. Remove any objects under the refrigerator.
The product seems to make too much noise.	The unit is not level.	Level the refrigerator. The rattling may come from the flow of refrigerant, which is normal. You may hear gurgling sounds from refrigerant flow. Contraction and expansion of the interior walls may cause popping and cracking noises.
Display shows EL or EH	The air temperature sensor in the corresponding temperature zone has failed.	Call the service center.
The phenomenon of flashing lights	In some cases, this is normal. The light may flash when the automatic defrost function starts. This can happen if the set temperature is higher than the internal temperature.	Adjust the temperature to resolve.
Frost appears in cabinet (on back)	Excessive humidity or too low temperature inside the cabinet.	Unplug the refrigerator and allow it to defrost manually. Reconnect once the ice has melted. If the problem persists, contact service.
The door will not close properly	The refrigerator is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.	Level the refrigerator. Close the door properly. Clean the door gasket. Place the shelves correctly.

If the above problems occur and cannot be solved by following the instructions, please contact us by email: service@yeegolife.com. Describe your problem in detail with words, pictures, or videos, and we will respond as soon as we receive your feedback.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Display shows: E1, E2, E5, E6, E7, E8, E9, EA, EU	Temperature sensor failure or communication error.	Please call the service center.
L0	Low temperature alarm.	Please call the service center.
HI	High temperature alarm.	Check whether the internal and external fans are operating and whether the compressor is running. If both the fans and compressor are operating but the temperature is incorrect, the temperature sensor may be faulty. If the internal fan is not operating, it may indicate a fan malfunction. If any of the above issues occur, please contact the customer service center for assistance.
Et	Temperature difference alarm.	Turn off the unit and unplug the power supply. Leave the door open for 24–36 hours to allow the error to clear. If the issue persists after ventilation, carefully remove the back panel of the internal fan to check for ice buildup. Once the ice has fully melted, restart the unit and set the desired temperature. It is not recommended to set the temperature to the minimum at this time.
E0	The door is not closed properly.	Make sure the door is tightly closed. If the door is not properly closed, close it securely. If the issue persists, please contact customer service for assistance.

LIMITED WARRANTY

1 Year Whole Unit Warranty

For one year (12 months) from the date of purchase by the original owner, we will provide warranty coverage for the whole unit against defects in material or workmanship. We may provide replacement parts, accessories, installation videos, or online guidance to help resolve the issue. You may also contact us by email for support and solutions.
During this period, we will provide all parts necessary to correct such defects free of charge, provided that the unit has been installed and operated in accordance with the written instructions in this manual.

3 Year Warranty for Wear Parts

For three years (36 months) from the date of original purchase, we will provide warranty coverage for wear parts that prove to be defective under normal use. This coverage applies only when the unit has been installed, operated, and maintained in accordance with the written instructions in this manual.

5 Year Warranty Compressor

For five years (60 months) from the date of original purchase, we will provide a replacement compressor free of charge in the event of compressor failure. You are responsible for service labor and freight charges. Any cost required to move the wine cellar to the servicer's shop and return it to the user's home is the user's responsibility.

What Is Not Covered

Damage due to accidents, misuse, abuse, mishandling, neglect, acts of God, fires, earthquakes, floods, high winds, government actions, war, riots or labor disputes, strikes, lockouts, carrier delays, or any cause beyond the control of the seller, whether similar or dissimilar to the foregoing.
Content losses due to spoilage. Incidental or consequential damages. Parts and labor costs for the following are not considered warranty coverage unless otherwise covered under the stated 3 Year Warranty for Wear Parts:

- Door springs and/or frames.
- Inner door panels, door rails, and/or door supports.
- Light bulbs and/or plastic housing.
- Plastic cabinet liners.

A punctured evaporator voids the warranty on the complete sealed system.
Repairs performed by unauthorized servicers.
Damage caused by external factors.
Excess wear and tear caused by the user. Service calls that do not involve defects in material or workmanship, such as customer education, door reversal, or proper installation.
Service calls related to external problems, such as abuse, misuse, inadequate electrical power, accidents, fires, floods, or acts of God.
Replacement of house fuses or resetting circuit breakers.
Failure of the product if it is used for any purpose other than its intended use.
This warranty does not apply outside Canada or the Continental USA.
The purchaser understands and acknowledges that the goods purchased are appliances designed for wine storage. The purchaser assumes all risks of using this unit, including the risk of spoilage, humidity variations, temperature variations, leaks, fire, water damage, mold, mildew, dryness, and similar perils that may occur.

CUSTOMER SERVICE

Read This Guide Carefully

This guide is intended to help you operate and maintain your new wine cellar properly. Keep it handy to answer your questions.
Keep proof of original purchase date (such as your sales slip) with this guide to establish the warranty period. Save time and money by checking the Troubleshooting Guide before calling for service. It lists minor operating issues you can often correct yourself.

Purchase Date: _____
Model Number: _____
Serial Number: _____

CONTACT US

We pride ourselves on our service and want you to be satisfied. If for any reason you are not happy with the service you receive, follow these steps for further assistance:

1. First, contact the people who serviced your appliance and explain why you are not satisfied. In most cases, this will resolve the problem.

2. You may also contact us by email at service@yeegolife.com.

If you are still not satisfied, fill in all the detailed information below, including your telephone number, and send it to us:

Address	
Phone	
Fax	
Email	
Online	

Yeego

Activate your warranty & Owner Care

Register your product to activate your warranty and access setup guidance, FAQs, and product support.

Scan to activate

WARRANTY SETUP SUPPORT



Scan now to activate and get support.

If you need further assistance, our support team is here for you.
We'll get back to you within 1 business day at
vip@yeegolife.com.