

Change password


Step 1: Ensure that the password is the initial password "000".

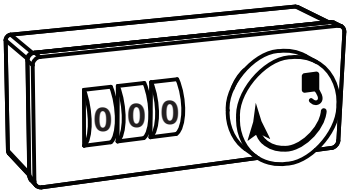

Step 2: Move the lever from A to B

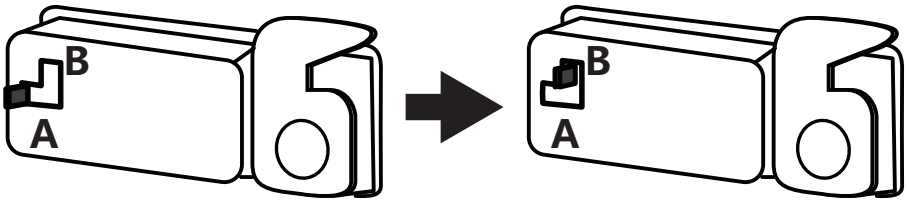

Step 3: Adjust password

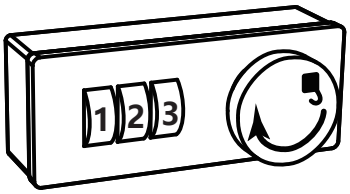

Step 4: Move the lever from B to A

