
H1-1013 - H1-1014

NORTHSKY

24" & 30" NON-OSCILLATING WALL FAN

SFSI3-750/60Y (H1-1013)
SFSI3-750Y (H1-1014)

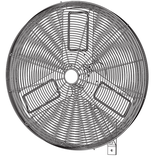

READ & SAVE THESE INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

To prevent serious injury or property damage, read and understand owner's manual before operating.

SAFETY INFORMATION

Warning


1. Unplug the fan before moving it or performing maintenance. Do not touch the fan when your hands are wet.
2. Those who are not qualified electricians should not disassemble, repair or rebuild the fan.
3. Unplug the fan when it is not in use.
4. DO NOT unplug the fan by holding the cable cord. Unplug by holding the plug.
5. DO NOT use the fan when there is damage to the cable cord or plug.
6. DO NOT use the fan close to the fire.
7. DO NOT insert your hand or other objects into the guard or the movable parts.
8. WARNING: To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
9. If the supply cord is damaged, it has to be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
10. Electric shock hazard. Do not expose to water or rain.
11. WARNING: To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).

CAUTION

1. Unplug the fan from the socket and clean it with a soft cloth.
2. DO NOT immerse the fan in water or liquids.
3. Fit the guard onto fan before starting up the fan.


ASSEMBLY INSTRUCTION

1. Mark the hole locations by using the bracket,and then drill the holes.
2. For concrete wall installation, after drilling, insert the wall anchors and tap them flush with the wall, position the bracket and then screw the two bolts into the anchors, securely attaching the wall.
3. For wood wall installation, after drilling the smaller diameter pilot hole, position the bracket and screw the two bolts into the wall until they are secured.
   CAUTION: The fan is only suitable for wood or concrete wall mounting.




a. concrete wall b. wood wall

4. Remove the hex nuts, spring washers and bowl washers from the motor and save them for next step.




ASSEMBLY INSTRUCTION

5. Secure the rear guard to the motor and fix it with the bowl washers, spring washers and hex nuts removed from step 4.




6. Attach the fan blades to the motor shaft and lock it accordingly.

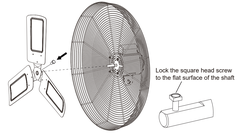


ASSEMBLY INSTRUCTION

7. Position guard hooks of front guard into ribs of rear guard.

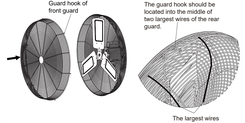


8. Fix the connecting plate to the motor with the accessories provided.

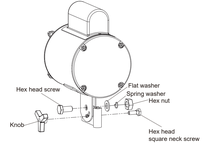

ASSEMBLY INSTRUCTION

9. Assemble the swivel bracket with wall bracket and fasten with hexagon screw, flat washer, spring washer and nut.




OPERATION INSTRUCTION

1. Use the pull chain switch located on back of motor to operate the fan or select speeds.



OPERATION INSTRUCTION

2. Loosen the knob and adjust until the fan head is at the desired angle. Tighten the knob back.

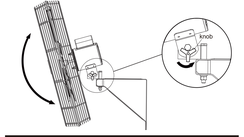

CARE AND CLEANING

Unplug the appliance before cleaning. Don't use any water for cleaning metal surfaces. Slightly moisten a cloth and then wipe off the surfaces of the fan. In order to remove dust from the grill, use a vacuum cleaner or remove the front grill by removing the securing screws on the edge of the grill. After cleaning, remount the grill. After doing this, fasten the screws on the edge of the grill.

1-YEAR LIMITED WARRANTY


The manufacturer warrants this product to be free from manufacturing defects in the material and workmanship under normal use for a period of one year after the date of purchase by the original purchaser.
This warranty does not cover transit damages. This warranty does not apply to damages from accident, misuse, alteration of any kind to the fan or where the connected voltage is more than above the nameplate voltage. This warranty does not apply to the finish on any portion of the product. Servicing performed by unauthorized persons shall render the warranty invalid. The warranty is not responsible for damages of any kind, including accident and consequential damages. Some states do not allow the exclusion or limitation of the incidental or consequential damages, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Installation – Secondary Safety Support Cable


Warning:
Use of secondary safety support cable does not guarantee against accidents. Improper installation of secondary safety circulator and cable could fall if subject to abuse, neglect or if improperly installed. To avoid personal injury, circulators must be supported anytime angle is adjusted.

PARTS	SPECIFICATION	QTY
	Φ3*3050	1
	M5*10	2

1. Loop one end of the cable around the large diameter wires of both the front and rear guard as shown below. Attach a cable retainer with the "U" on the tail side of the retainer around the cable and secure with a screw. Tighten clamp nuts forming a tight loop, 32in.-lbs of torque. Make sure the cable does not interfere with the propeller.



2. Wrap the other end of the cable around a secure building post, beam, truss or other support near the fan as shown below. Take up all excess slack in the cable. Pull the cable tight enough to support the circulator, leave enough slack to allow free movement through range of motion.



3. Attach the remaining cable retainers as done previously in step 1. Make sure the cable is taut but not stressed to extend 1 to 2 inches past the second clamp.
4. Check the assembly to assure the propeller is free of all obstructions and turns freely.
5. Connect the circulator to the proper power supply ensuring the voltage matches the electrical rating listed on the circulator's motor nameplate.

Designer:	王斌
Date:	250214