GARDWIN

Scan the QR code to watch the video installation tutorial.



USER MANUAL

Important Tips

1. Please read this manual carefully before setting up the product.
2. Keep this manual in a safe place for future reference.
3. The complete product includes: **inflatable body, ground stakes, weight bag, tethering ropes, and storage bag. If any item is missing, please contact us at: service@gardwinplay.com.**
4. CHOKING HAZARD: This product contains small parts. Please keep babies and children away during installation.
5. If you need to move the product, please first disconnect the power, remove the ground stakes and ropes, and take out the sandbags/weight bags. Failure to do so may damage the product.
6. This product is not intended for permanent display. Do not use it continuously for more than 90 days.
7. Do not use this product in strong winds (wind speeds exceeding 31 mph / 50 km/h).
8. If wind conditions worsen, deflate the product and store it indoors. Resume use only after wind speeds decrease.
9. Do not modify, add parts to, or use this product for any purpose other than decorative display, as this may create unnecessary risks or cause damage.
10. Keep the product away from sharp, angular, or high-temperature objects.
11. The blower motor operates normally at temperatures above 5°F (–15°C). It may cease to function if the temperature falls below this limit.
12. Clean the product only with mild (neutral pH) detergent, cold water, and a soft cloth.
13. When not in use, fully deflate the product, fold it neatly, place it in the storage bag, and store it indoors in a cool, dry location.

Installation Steps

1. **Choose a suitable installation location:** Select a flat, relatively dry area that is sheltered from sudden strong winds and has access to a power source.
2. **Fill the weight bags:** Fill the weight bags with water or fine sand.

Note: Use a free-flowing, dense material to fill the bags as heavily as possible. The weight bags are used to anchor the inflatable— the heavier, the better the stability.

3. **Unfold the inflatable body completely:** Lay out the main inflatable unit fully, ensuring no part is twisted or knotted. Twisting or knotting may hinder proper inflation.
4. **Insert the weight bags:** Locate the zipper on the inflatable body, open it, and place the filled weight bags inside at the bottom (imagine the orientation of the product once fully inflated—the bottom of the unit is where the weight bags should go). Then, fully close the zipper.
5. **Power on and inflate:** Plug in the blower and allow the inflatable to fully inflate.
6. **Secure and adjust the position:** Use the included ground stakes and tethering ropes to stabilize the unit and adjust its posture.

Note: The primary goal is to ensure the inflatable remains stable and upright. To achieve this, feel free to reposition the stakes and adjust the plastic tie-down straps as needed


Safety Warning


1. For safety purpose, the Plug of this product will fit into a polarized outlet only one way.
2. If the plug could not be inserted into the outlet, try reversing the plug.
3. If the plug still does not fit, contact a qualified electrician.
4. DO NOT use the plug with an extension cord unless you can fully insert the plug into the extension cord.
5. DO NOT alter the plug.
6. DO NOT defeat the safety purpose of the polarized or grounding type plug.
7. The repair of the damaged main connection cable is only allowed for a qualified technician.
8. If the energized part of this product is damaged, Only a qualified technician is allowed to repair it.
9. Please arrange the power cord properly to avoid pinching/cutting/burning off the power cord. If the insulation integrity of the energized part is damaged it needs to be repaired by qualified technicians.
10. The product needs electricity to function. Please do not touch the energized part during use to avoid electric shock.
11. The energized parts (fan, motor, power cord, etc.) should not be exposed to water, that may lead to electric shock or reduce the life of the product.

About Secure the Inflatable


The inflatable body has four anchor points (white fabric loops), located as shown in the diagram:


- The **front and rear anchor points** are positioned near the ground. You can secure them directly by inserting ground stakes through the loops into the ground.
- The **left and right anchor points** must be connected to ground stakes using tethering ropes.

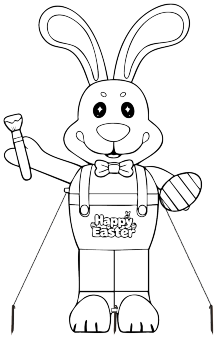


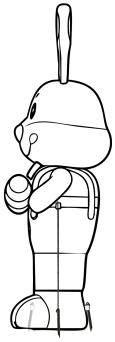



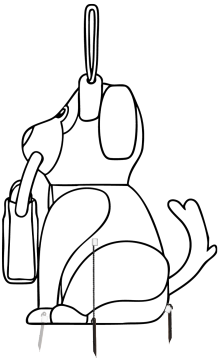

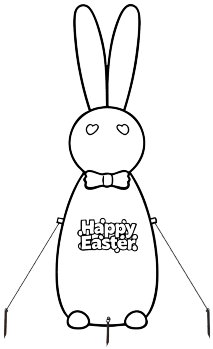

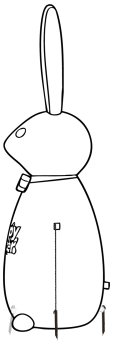

Troubleshooting Guide

Symptom	Possible Cause	Solution
Fan is running, but the product does not fully inflate	Zipper is not fully closed.	Ensure the zipper is completely sealed.
	Holes or punctures on the surface.	Repair the hole using needle and thread, a stapler, or tape.
	Obstruction at the fan intake.	Clear any blockage from the fan's air intake.
	Inflation performance of the fan decreases.	Disconnect the power supply and restart the product after 30 minutes.
Fan does not run; product remains uninflated	Poor electrical connection.	Check and repair the electrical connection.
	Power source failure.	Replace the power supply.
	Fan overheating.	Disconnect the power supply and restart the product after 30 minutes.