Lighted Snowman Family



Illustrated assembly guide

MODEL KS4460-3

Finished dimensions
Heights: 41.73 in / 36.61 in / 24.41 in

Keep the power disconnected while joining the frame and light connections. Use the supplied power source for your item.

Before you begin

Arrange the components on a clean surface. Three snowman figures with matching body sections, hats, twig arms and scarves, LED cords, main power cord, ties and stakes.



Have scissors ready when zip ties are used. Cut only excess tie ends; keep scissors clear of the light wires.

Assembly sequence

Follow the numbered steps. Check each frame and cord connection before applying power.

1 Start with the largest snowman



Attach its twig arms. Feed the top lights into the hat and attach the hat.

2 Join the largest body




Feed the cords into the lower body. Hook the upper body at the front and zip-tie it at the back.

3 Assemble the small snowman



Hook the head onto the body at the front and zip-tie the back. Attach the scarf around the neck and fit the twig arms.

4 Assemble the middle snowman

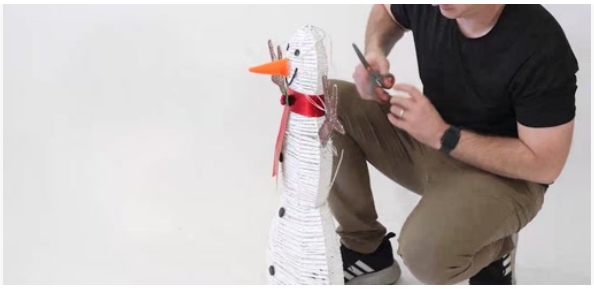

Hook its upper body at the front and zip-tie the back. Fit the arms, place the top lights into the hat, and attach the hat.

Assembly sequence

Follow the numbered steps. Check each frame and cord connection before applying power.

5 Connect all three figures



Connect the three LED connections to the main power cord. Check the frame fittings and electrical connections.

6 Position and illuminate



Use the included ground stakes outdoors if needed. Connect the supplied adaptor and verify that all three figures light up.

Warranty?
Troubleshooting?

Scan the QR code for
instructions, support, & registration.

XProductSupport.com/product/KS4460-3

Instructions, support & warranty

Scan the mini card or click below to:

Watch the instructional video
Create a support ticket
Register your item for warranty

XProductSupport.com/product/KS4460-3