
ASSEMBLY INSTRUCTIONS

VALEN CHANNEL FRONT SIDEBOARD ITEM# 91800

ASSEMBLY REQUIREMENTS	1.5 Hours Assembly Time (Approximate)	2 -Person Assembly 	Tools Required (Not Provided): Phillips Screwdriver  Flat Head Screwdriver 

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.
Contact our customer service department in case there are any missing or damage parts or hardware.
Replacement parts are normally shipped within 2 or 3 days.

Email: replacementparts@buylateral.com
Within 30 days from delivery date

We appreciate your business!

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are correct before assembly.
   Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION:

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY:


1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE


1. Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
2. Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.
3. Solid wood is impacted by heat and humidity fluctuations which may cause small joint separations or hairline cracks; place the furniture away from direct sunlight and air conditioning vents, heating vents or units to protect the furniture.?

ASSEMBLY INSTRUCTIONS

VALEN CHANNEL FRONT SIDEBOARD ITEM# 91800

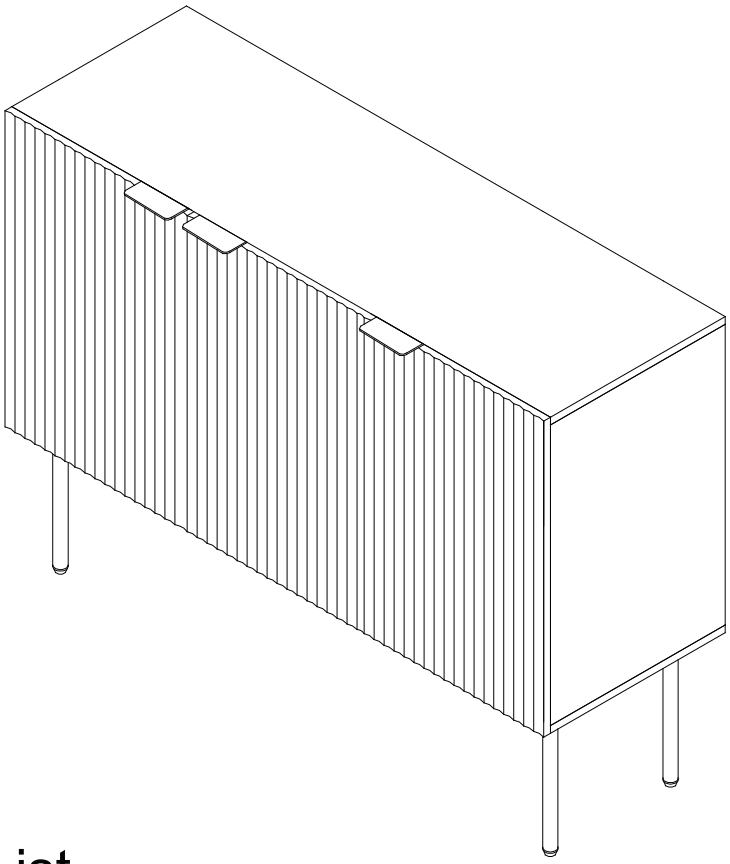












Hardware List

ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
A	Cam-Bolt	 6*35mm	8 pcs	K	Hinge		2 pcs
B	Cam-Lock	 15*10mm	8 pcs	L	Screw	 4*12mm	2 pcs
C	Wood Dowel	 8*30mm	16 pcs	M	Bracket For Wall Connection		2 pcs
D	Screw	 3.5*14mm	36 pcs	N	Allen Key		1 pc
E	Screw	 7*40mm	8 pcs	O	Bolt	 6*14mm	16 pcs
F	Screw	 3.5*12mm	6 pcs	P	Sticker		6 pcs
G	Handle		3 pcs	Q	Plastic Anchor		2 pcs
H	Screw	 2.5*10mm	34 pcs	R	Screw	 3.5*40mm	2 pcs
I	Shelf Pin		12 pcs	S	Bolt	 6*30mm	3 pcs
J	Hinge		4 pcs				

ASSEMBLY INSTRUCTIONS

VALEN CHANNEL FRONT SIDEBOARD ITEM# 91800


Parts List

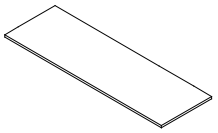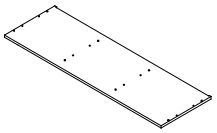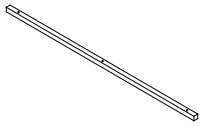ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
1	Top Panel		1 pc	8	Bottom Panel		1 pc
2	Left Panel		1 pc	9	Leg		4 pcs
3	Right Panel		1 pc	10	Side Back Panel		2 pcs
4	Left Divide Panel		1 pc	11	Middle Back Panel		1 pc
5	Right Divide Panel		1 pc	12	Adjustable Shelf		3 pcs
6	Left Door		1 pc	13	Metal Bar		1 pc
7	Middle and Right Door		2 pcs				

ASSEMBLY INSTRUCTIONS


VALEN CHANNEL FRONT SIDEBOARD ITEM# 91800

ASSEMBLY OVERVIEW

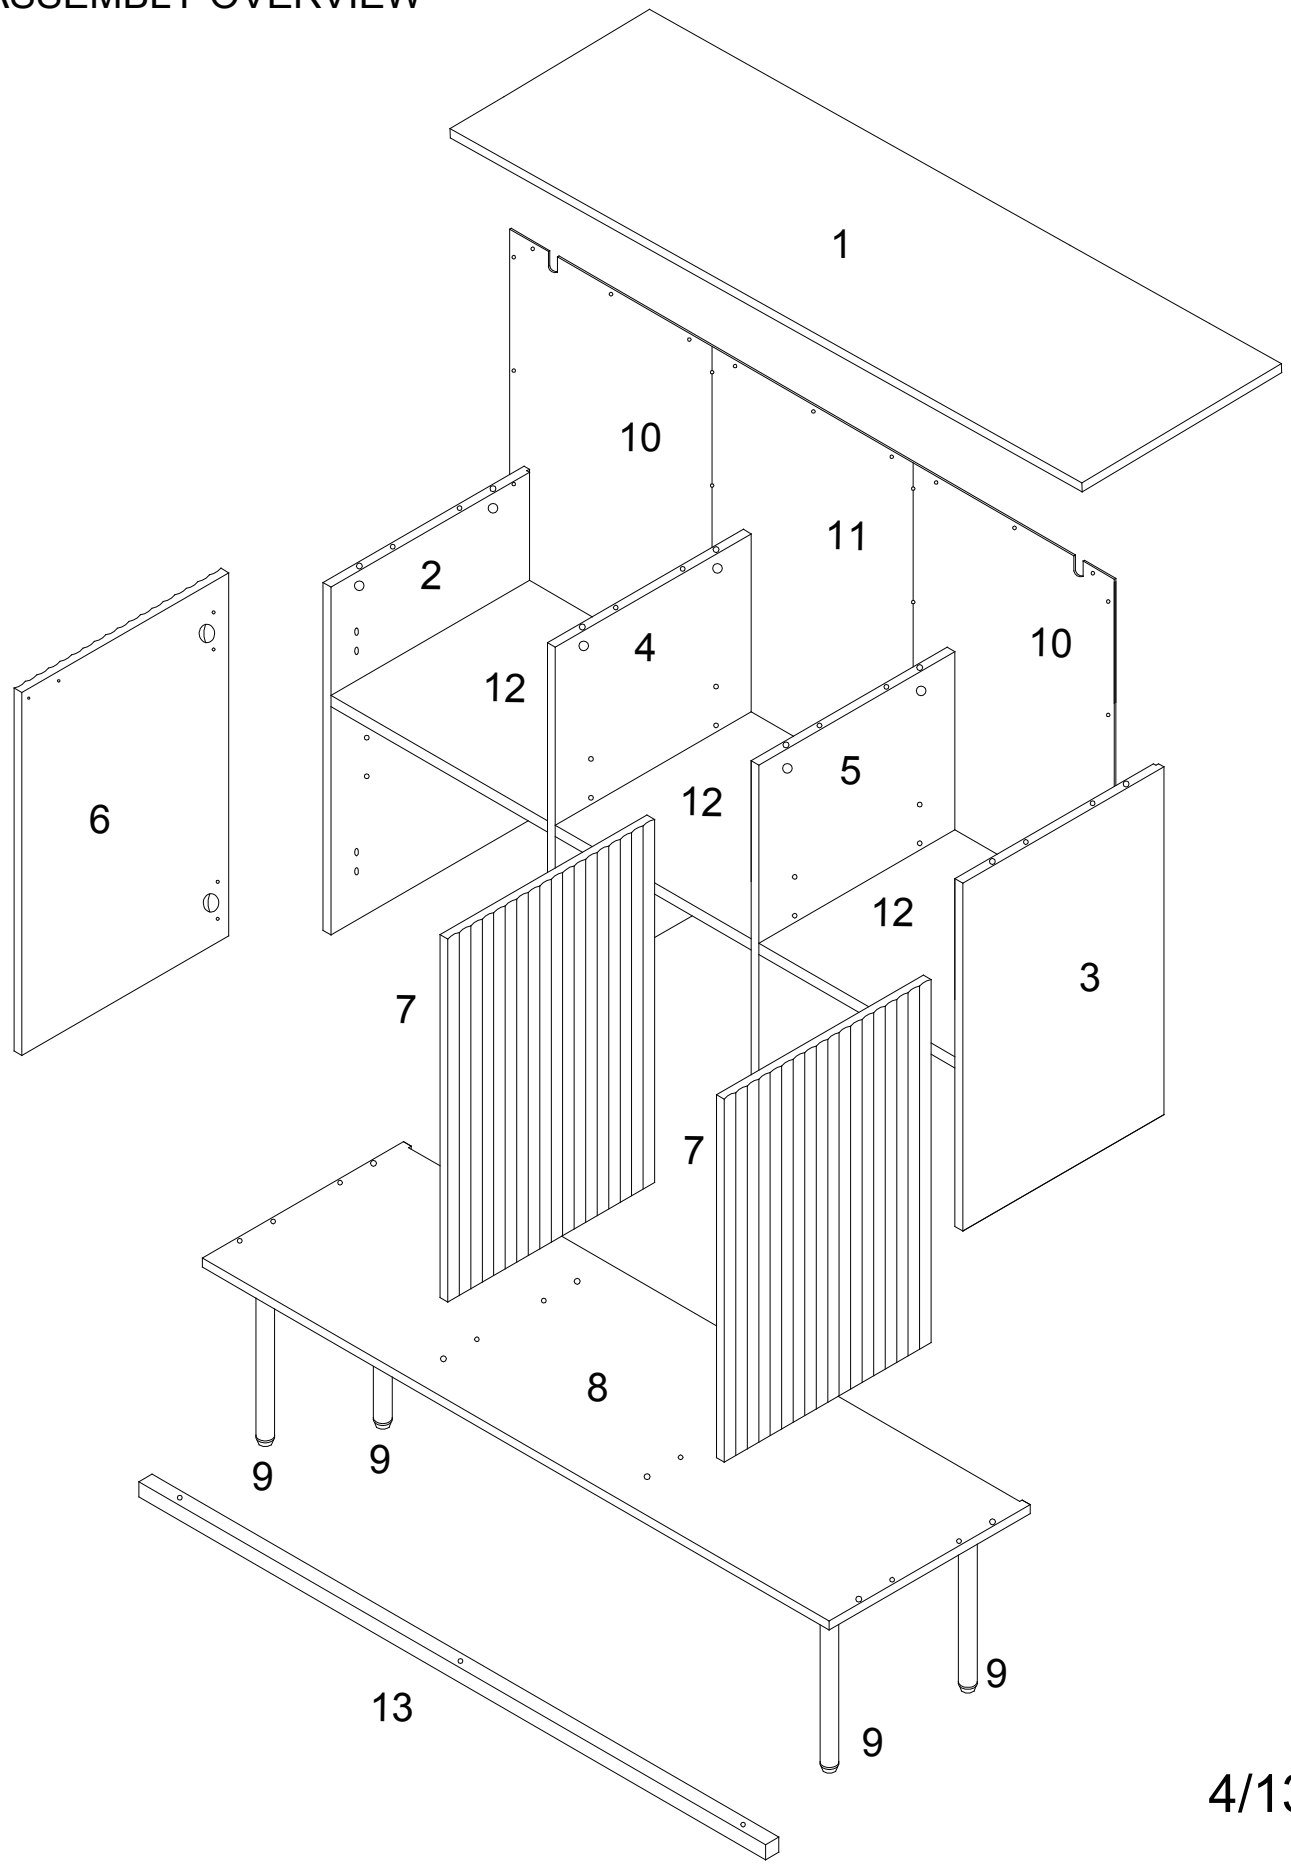

4/13

Instructions For Fastening
CAM-BOLT AND CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

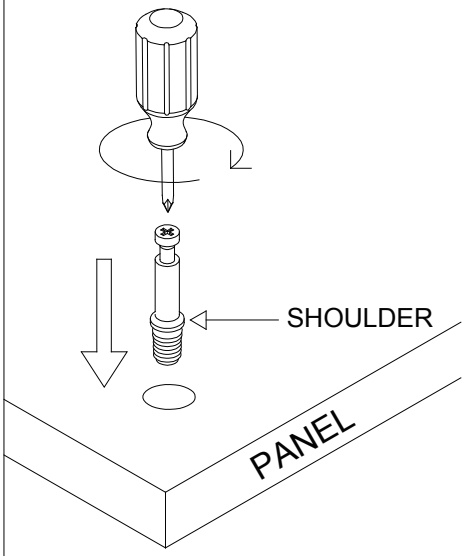

Place Cam-bolt on pre-drilled hole and screw in vertically.

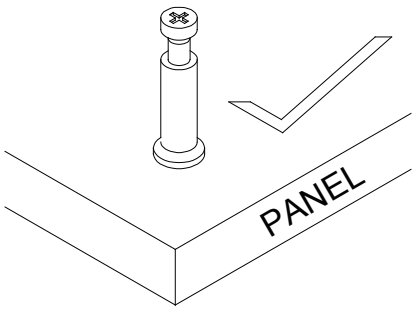


Shoulder is flushed (on the same level) with the panel.

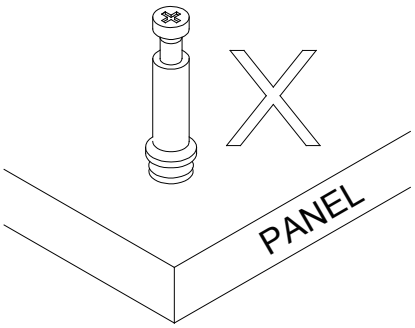


Shoulder is above the panel.

Place Cam-bolt to the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to tighten Cam-bolt vertically until shoulder is flushed (on the same level) with panel. Do not over-tighten or under-tighten.

INSERTING CAM-LOCK

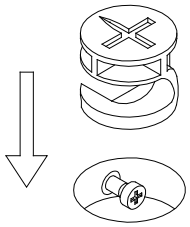


Insert Cam-lock with arrow align to Cam-bolt head.

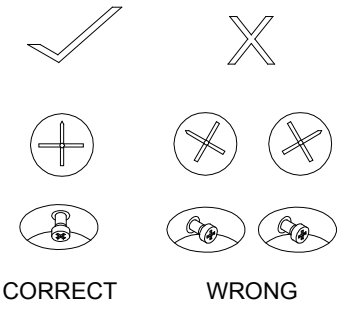

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK

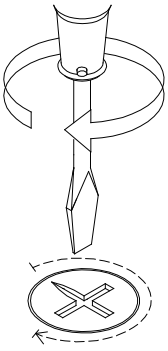


Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

STEP 1

A		8 pcs
L		2 pcs
M		2 pcs



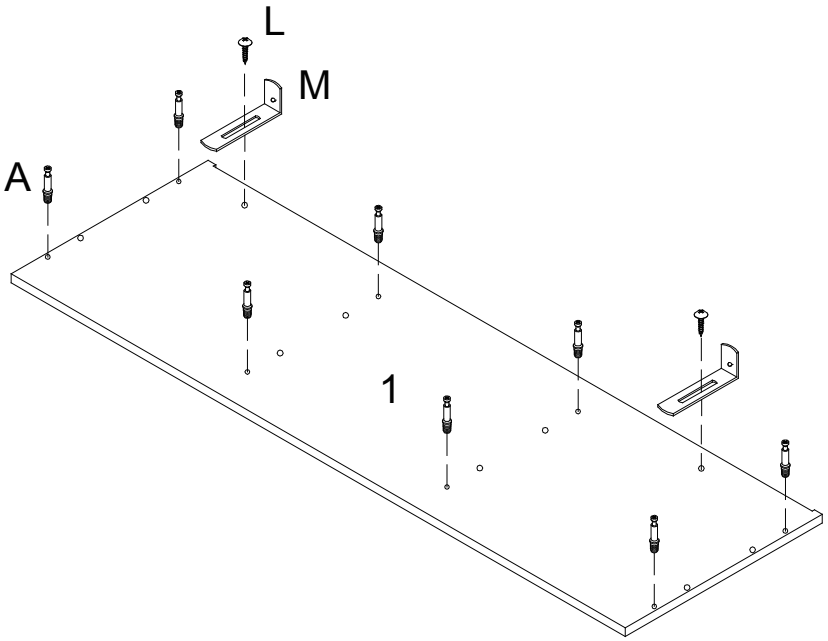

a) Lay Top Panel (1) bottom-side on a material that does not scratch or damage the part.
b) Screw in Cam-bolt (A) into the designated holes on (1). Refer to Page 5 for instructions on inserting and tightening Cam-bolt.
c) Attach Bracket (M) to (1) by using Screw (L) as shown.


STEP 2


C		8 pcs
E		8 pcs
N		1 pc

a) Insert Wood Dowel (C) to Left Panel (2).
b) Attach (2) to Bottom Panel (8) via Wood Dowel on (2).
Check that the groove edge of (2) and (8) are aligned perpendicular to each other - similarly for Right Panel (3) in subsequent step.
c) Insert Screw (E) and tighten by using Allen Key (O).
d) Repeat steps a) to c) to assemble Panel (3, 4 & 5).

STEP 3

B		8 pcs
C		8 pcs
N		1 pc
S		3 pcs




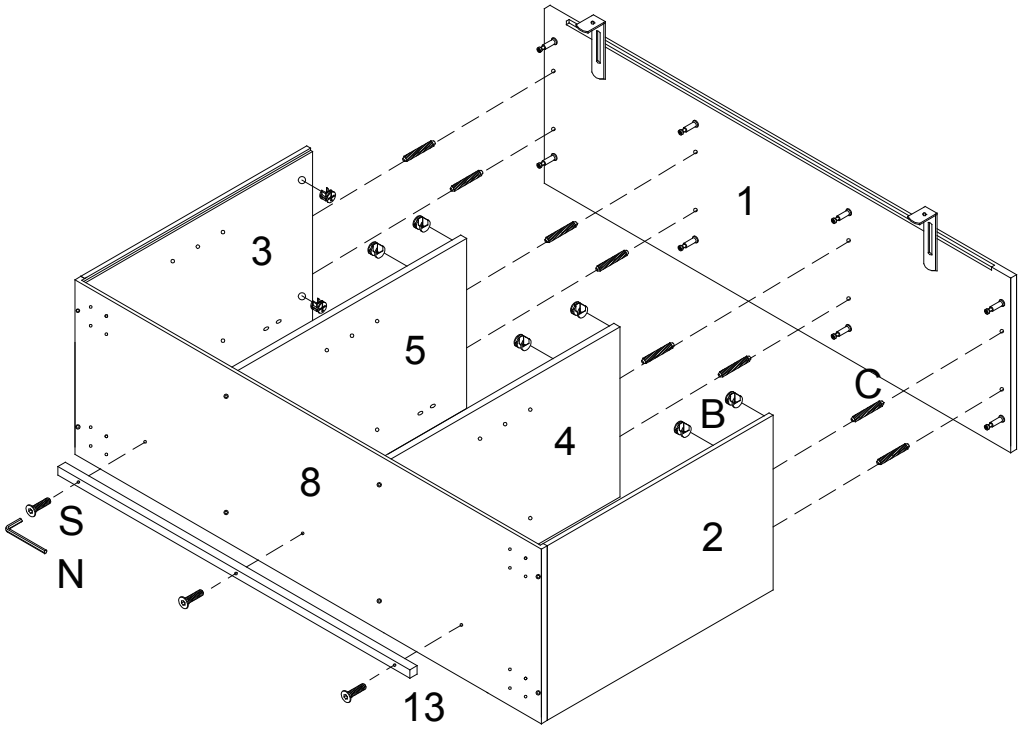

a) Insert Wood Dowel (C) into the inner two holes on top edge of Side Panel (2 & 3) and Divide Panel (4 & 5).
b) Attach Top Panel (1) to (2, 3, 4 & 5) via Wood Dowels and Cam-bolts on (1).
c) Insert Cam-lock (B) into the holes on (2, 3, 4 & 5) and then turn clockwise to lock onto Cam-bolt. Refer to Page 5 for instructions on inserting and tightening Cam-lock.
d) Attach Metal Bar (13) to Bottom Panel (8) with Bolt (S). Tighten Bolt (S) with Allen Key (N).

STEP 4

O		16 pcs

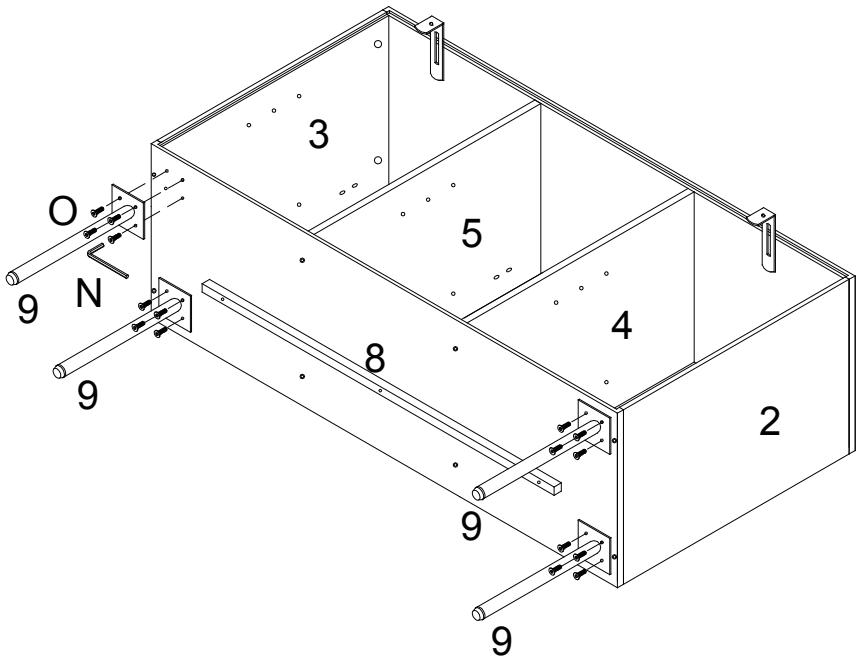


a) Position Leg (9) to Bottom Panel (8) and align screw holes on Leg (9) and pilot holes on Bottom Panel (8) as shown and fasten with Bolt (O).
b) Tighten Bolt (O) with Allen Key (N). Do not tighten the bolts completely until all four bolts are in place on each leg.

STEP 5

H		34 pcs



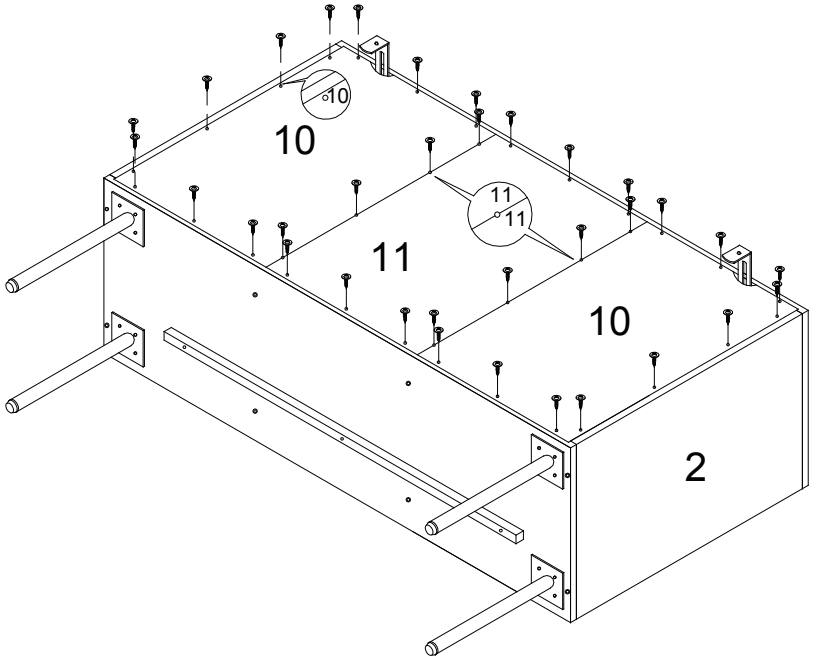



Fit Back Panel (10 & 11) squarely between Top, Bottom and Side Panels - check that there is no gap between any of the panels. Next, use Screw (H) to fasten the back panels.

STEP 6

D		8 pcs
J		4 pcs



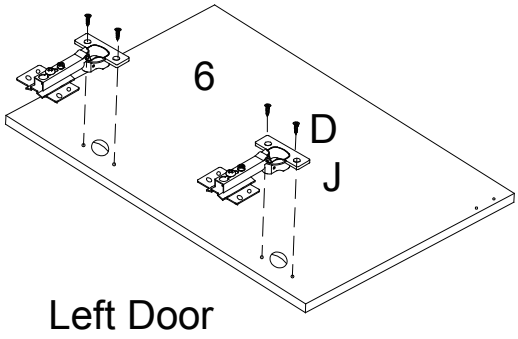

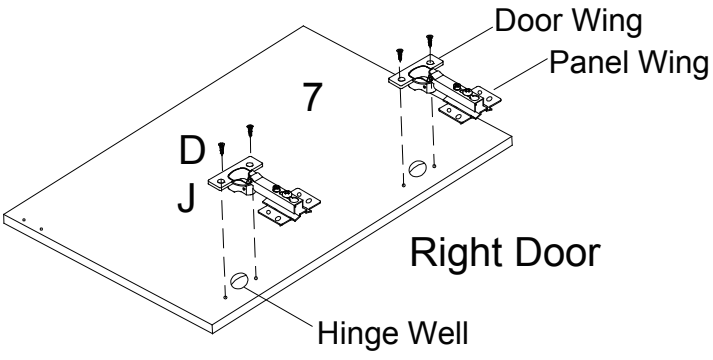


a) Fit Door Wing of Hinge (J) to the hinge well on Left and Right Door (6 & 7).
b) Align screw holes on Door Wing of (J) to the pilot holes on (6 & 7) and fasten with Screw (D)
Do not tighten (D) completely until both screws are in place on each Door Wing of the Hinge.

STEP 7

D		8 pcs



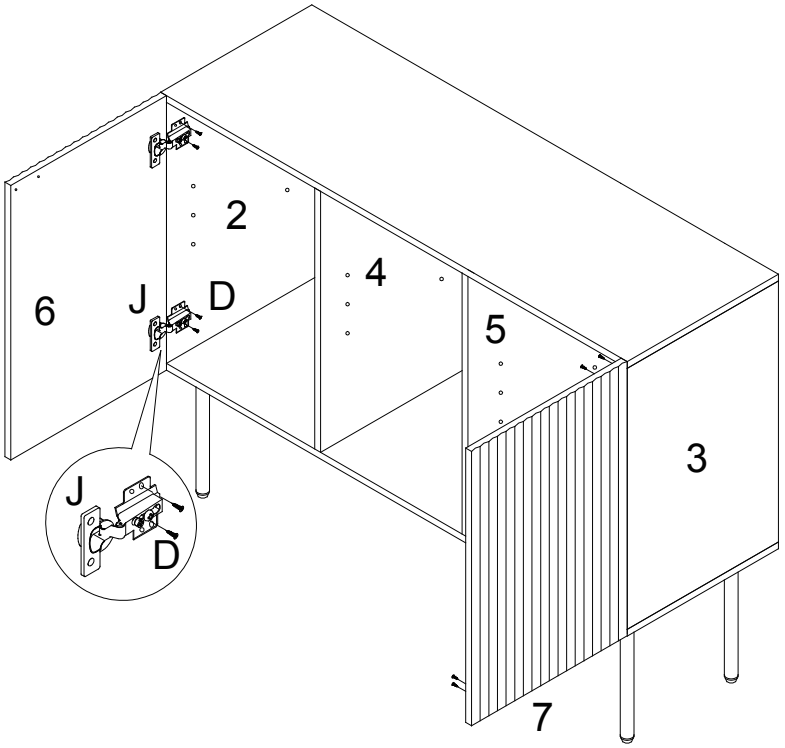


Use Screw (D) to fasten Left Door (6) and Right Door (7) - both with Hinge (J) - to Left Panel (2) and Right Panel (3), respectively.

STEP 8

D		4 pcs
K		2 pcs



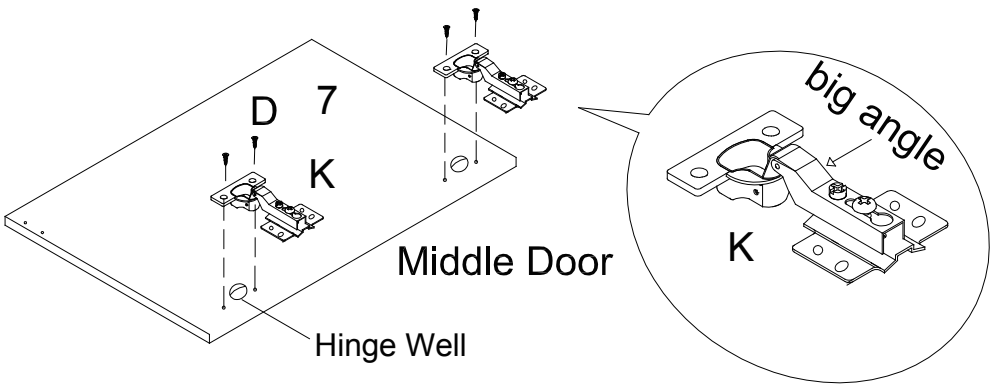


a) Fit Door Wing of Hinge (K) to the hinge well on Middle Door (7).
b) Align screw holes on Door Wing of (K) to the pilot holes on (7) and fasten with Screw (D)
Do not tighten (D) completely until both screws are in place on each Door Wing of the Hinge.

STEP 9

D		4 pcs




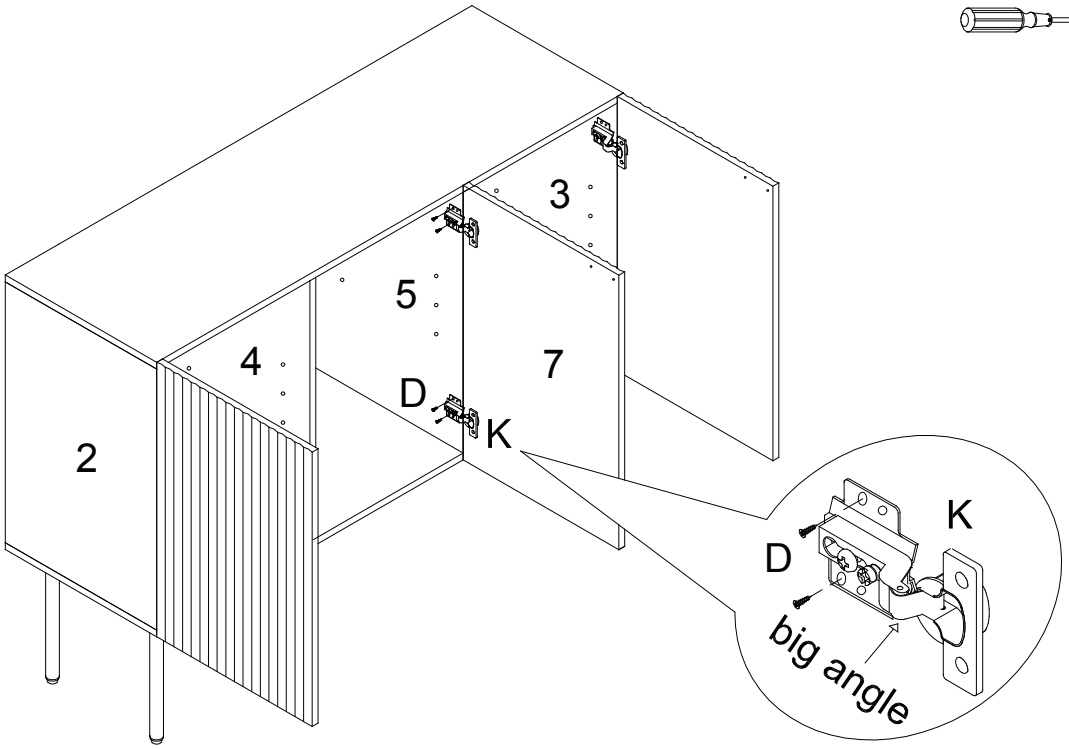


Use Screw (D) to fasten Panel Wing of Hinge (K) on Door (7) to Right Divide Panel (5).

STEP 10

F		6 pcs
G		3 pcs
P		6 pcs



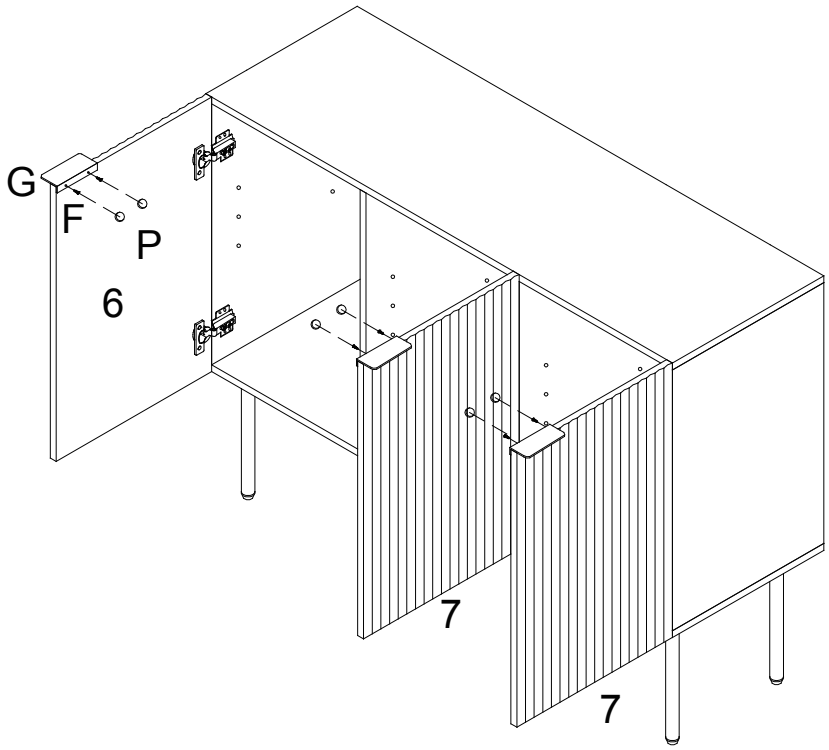

a) Attach Handle (G) to Door with Screw (F).
b) Conceal the screw holes with Sticker (P).


STEP 11

Q		2 pcs
R		2 pcs

a) Drill two holes in the dry wall as per the length and diameter of Plastic Anchor (Q) and the distance between the holes and the height need to the same as the screw holes on Bracket (M).
b) Press Plastic wall anchor (Q) into the 2 drilled holes. Ensure that the anchor fits securely in the wall.
c) Drive Screw (R) through the screw hole on adjustable Bracket (M) into the screw hole on (Q) to secure the Sideboard to the wall.

STEP 12


I		12 pcs

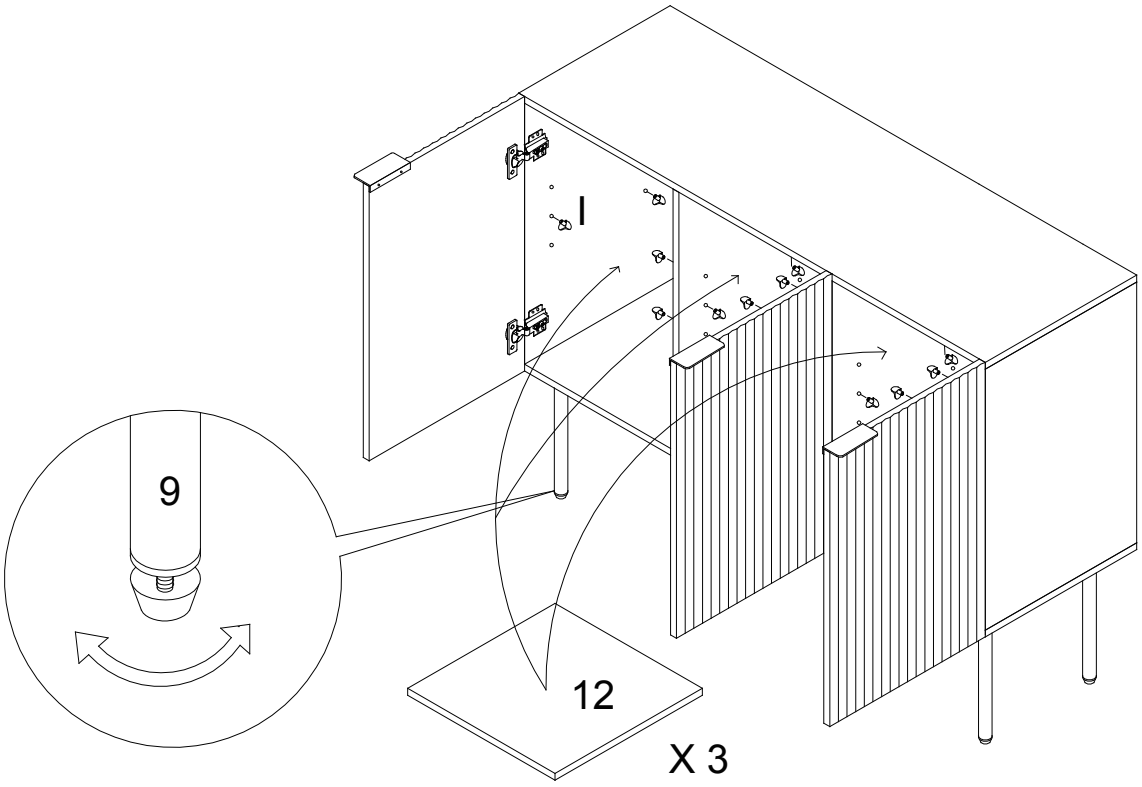


a)Insert Shelf Pin (I) and place the Adjustable Shelf (12) on it.


b)Adjust the adjustable Leg Stud on Leg (9) to level the Sideboard if necessary.


STEP 13

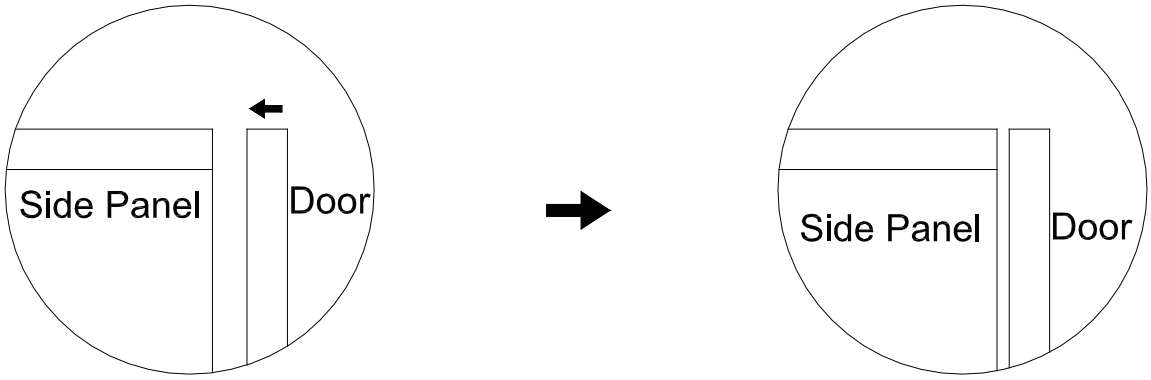

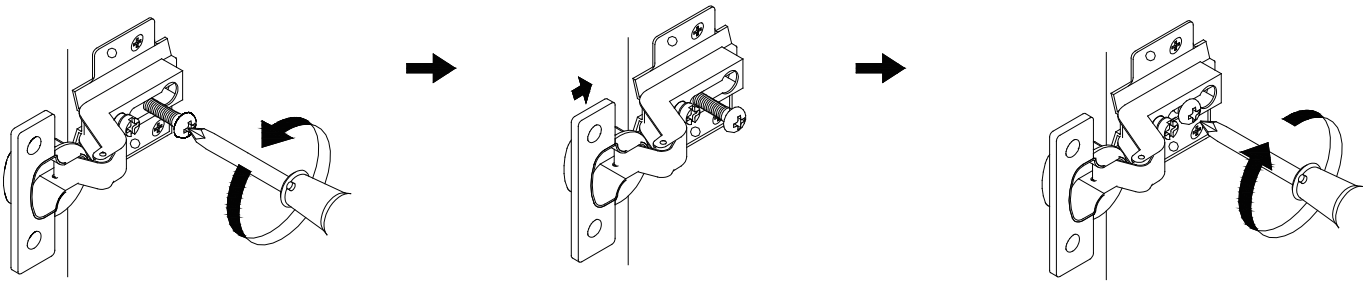


If there is gap between the side panel and the door, loosen the screw at the back of the hinge as shown, then move the hinge in or out until the desired gap is achieved, and then re-tighten the back screw.

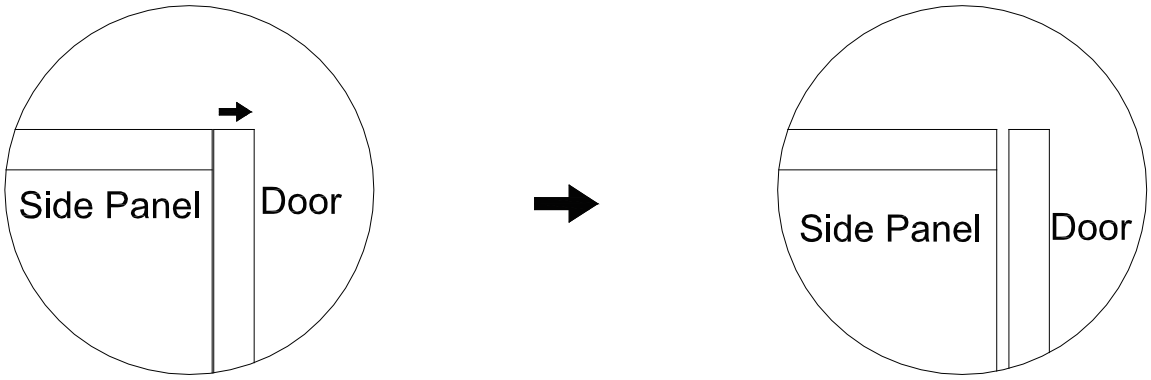


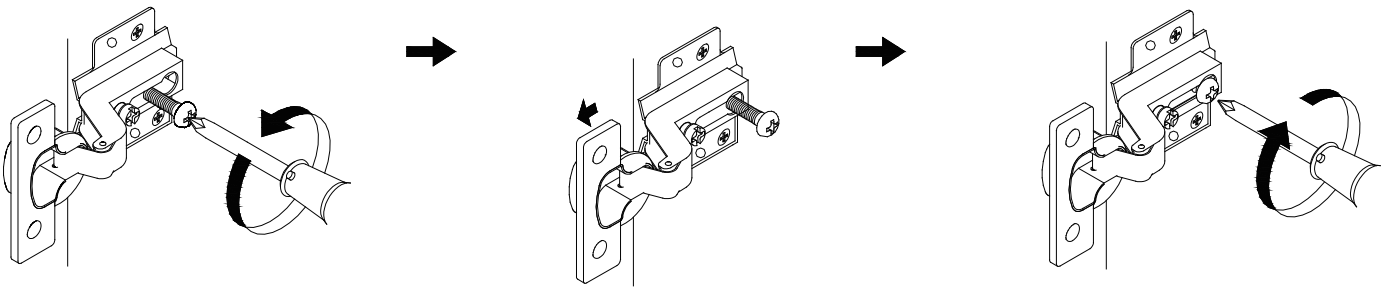


If there is gap between the side panel and the door , loosen the screw at the back of the hinge as shown, then move the hinge in or out until the desired gap is achieved, and then re-tighten the back screw as shown.

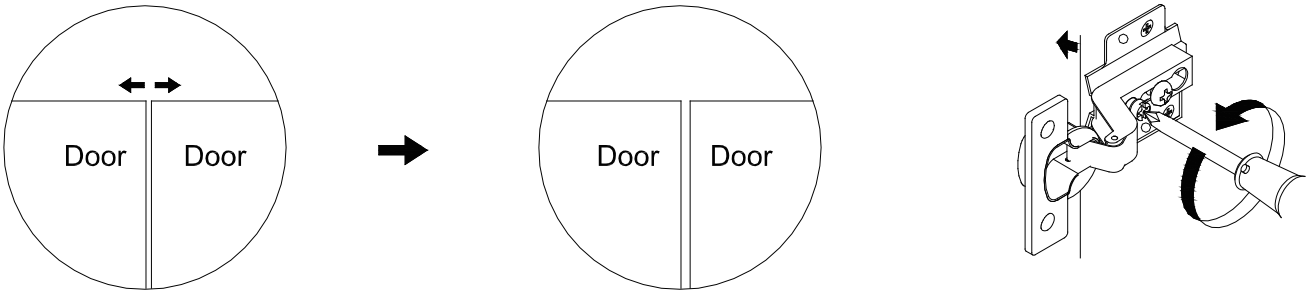

If the gap is too tight between the two doors, loosen the screw at the front of the hinge as shown to make the adjustment and then re-tighten the screw.

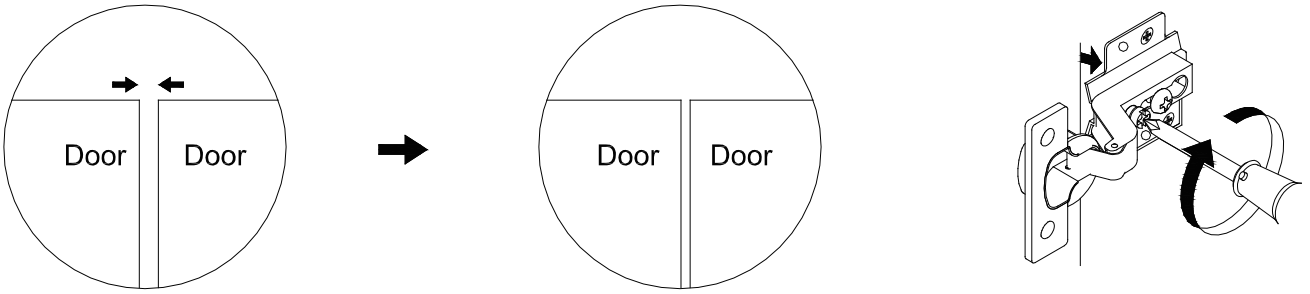

If the gap is too tight between the two doors, loosen the screw at the front of the hinge as shown to make the adjustment and then re-tighten the screw.

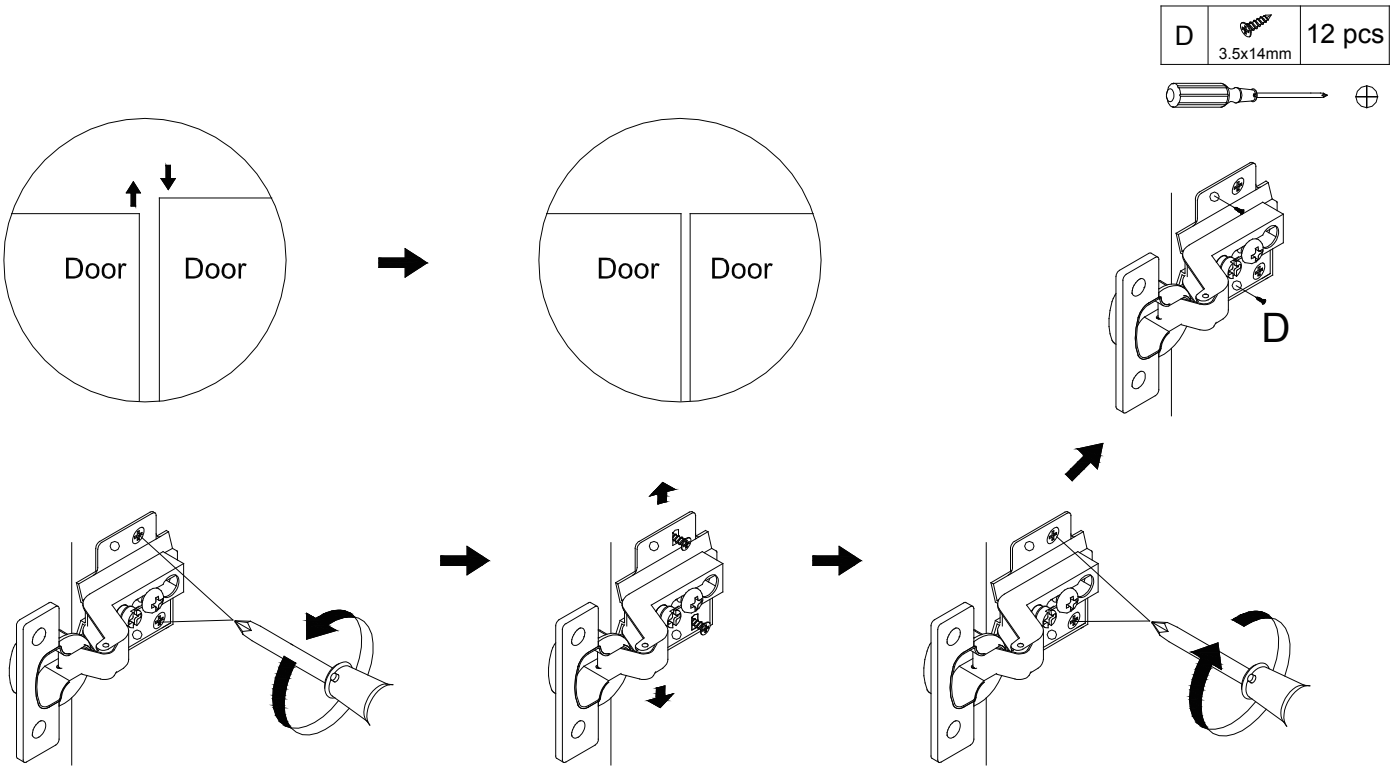

a) If the doors are not leveled with each other, loosen the screws (installed on STEP 11) at the Panel Wing of the hinge, then adjust the hinge up or down until the desired level or when both doors are leveled, and then re-tighten the screws.
b) When all the desired positions are in place, use the remaining twelve Screw (D) to fasten the Wing Panel using the front two screw holes on Panel Wing.

The assembly of the Cabinet is complete.