
TV Stand

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

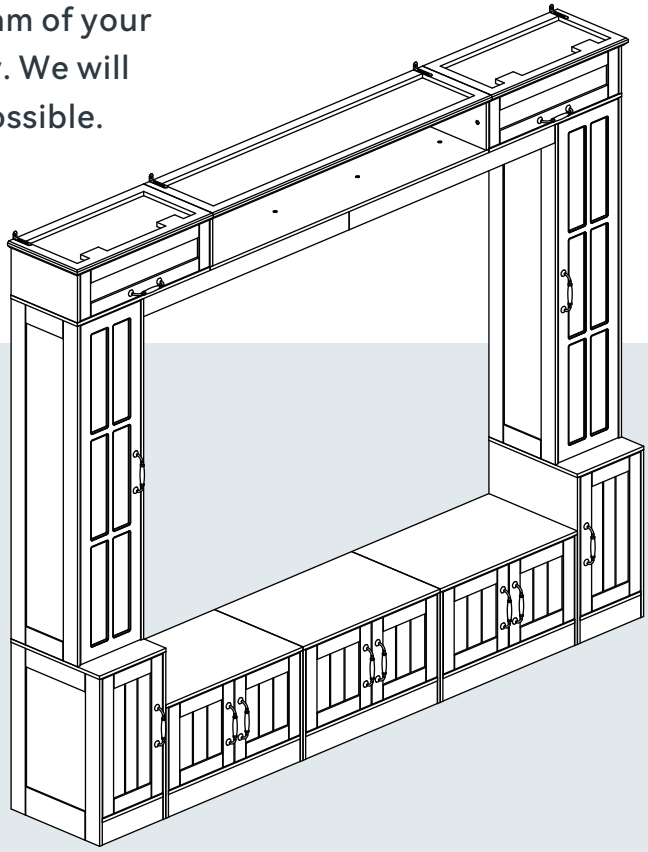

Arrive in 2 separate boxes and may not be part of the same shipment; Please install the product after receiving all the packages.

Dimensions

Width-98 inch
Depth-15.7 inch
Height-79 inch

EN

CONTACT US

- **Email: service@grandtunnel.com**
  In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:


- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

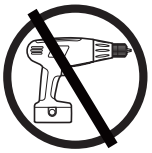

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is comKlete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly .

WARNING
In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type

Safety Instructions / Warnings

Please read and follow all instructions carefully before installation and use.

- **WARNING: Risk of electric shock – Do not open or disassemble electrical parts.**
- Use only the power cord specifically provided for this product.Adaptor Input:100-240V~, 50/60Hz, 0.5A, 30W. Output:DC 12V, 2.0A.
- Do not use with damaged power cords or plugs.
- Keep power cables away from moving or sharp parts of the furniture.
- Do not use extension cords or power strips unless specifically approved for the load.
- This product is **not a toy**. Do not allow children to play with electrical components or moving parts.
- Children under 8 years old must be kept away from the furniture unless continuously supervised.
- Keep remote controls, control switches, and ports **out of children's reach**.
- Always **disconnect the product from power** before cleaning, maintenance, or relocation.
- Do not attempt to open, modify, or repair electrical components.
- **Repairs must be performed by qualified professionals only.**
- Do not insert any foreign objects into openings or mechanisms.
- Clean with a dry cloth or a slightly damp soft cloth. Do not use solvents.
- This product is intended for **indoor use only** in dry environments.
- Do not expose the furniture to moisture, liquids, or direct sunlight.
- Ensure stability and clearance around any moving parts (e.g., lift mechanisms, recliners).
- Do not overload power outlets or USB ports beyond the specified ratings.

FCC Information

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. This product may cause harmful interference.
2. This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.
· Reorient or relocate the receiving antenna.
· Increase the distance between the product and receiver.
· Connect the product to an outlet on a circuit different from that to which the receiver is connected.
· Consult the dealer or an experienced radio/TV technician for assistance.

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6x30mm screws.”

Contact Us:

· By Email:
Send an email to service@grandtunnel.com, with the subject line “Missing Parts Issue.” Include the following in the email:
· A description of the missing parts and a photo of the parts list.
· Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with other details to service@grandtunnel.com, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: service@grandtunnel.com).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

· Customer Service Email: service@grandtunnel.com
















Helpful Tips

To process your issue efficiently, please prepare the following information:
· Order details (order number, purchase platform, purchase date).
· Clear photos or videos.
· We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.
Thank you for your trust and support! We hope you enjoy using our product!

Parts List - Fittings(in Box 2)

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

A  6*30mm Wooden Dowel x 103	B  6*35mm Cam Bolt x 102	C  Cam Lock x 104
D  6.5*60mm Cam Bolt x 2	E  4*12mm Screw x 156	F  2.5*10mm Screw x 16
G  4*40mm Screw x 20	H  4*16mm bolt x 24	I  x 12
J  x 4	K  x 32	L  x 1
M  x 1	N  x 26	O  x 8
P  x 9	Q  x 8	R  x 8
S  6*45mm Bolt x 6	T  6*12 mm Bolt x 20	U  Nut x 4
V  7.8*18mm Bolt x 24	W  7.8*12mm Bolt x 4	X  6*10 mm Bolt x 7
Y  x 2	Z  x 2	a  3*12mm Screw x 4
		b  x 1


Tools required



Phllips screwdriver
(medium & large)

Ruler - Use this ruler to help correctly identify the screws

mm





The screws length is measured from the head to the point (30mm screw shown).




inch

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

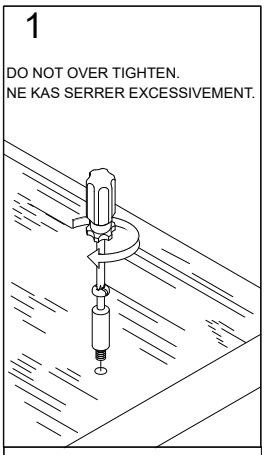

Step 2


Push the male camlock into the entry hole.

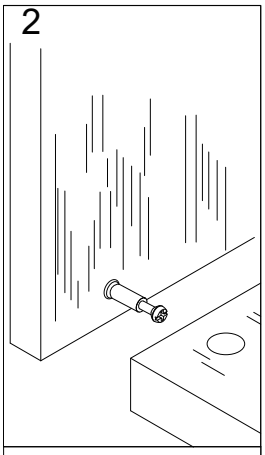

Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

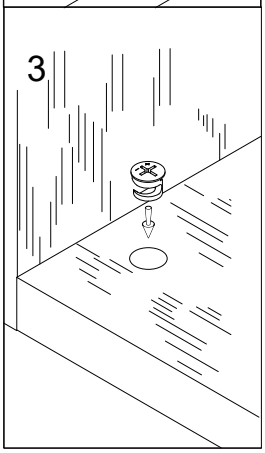


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

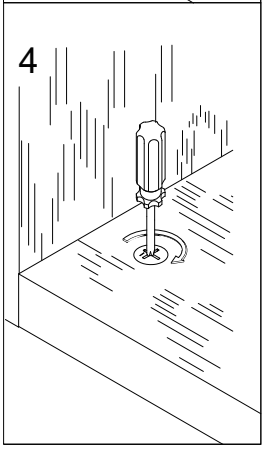


Parts List - Panels(Box 1)


Please check you have all the panels listed below

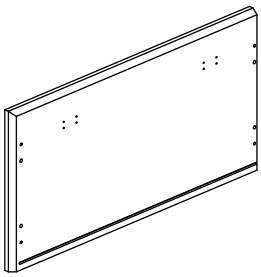


1 (615x315x24mm x1)

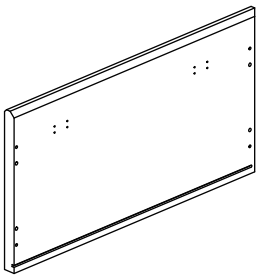


2 (615x315x24mm x1)

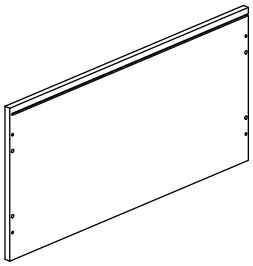


3 (600x300x12mm x1)

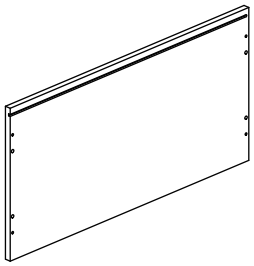


4 (600x300x12mm x1)

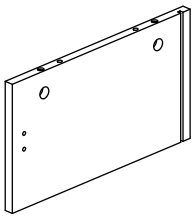


5 (300x170x12mm x1)

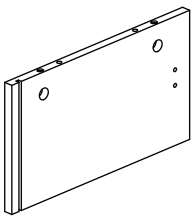


6 (300x170x12mm x1)

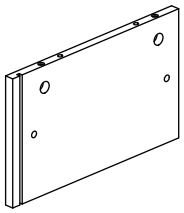


7 (280x170x12mm x1)

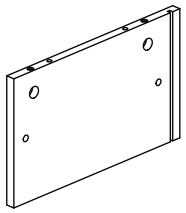


8 (280x170x12mm x1)

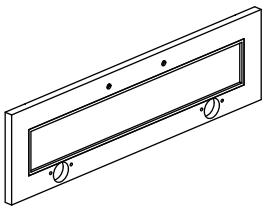


9 (582x164x15mm x2)

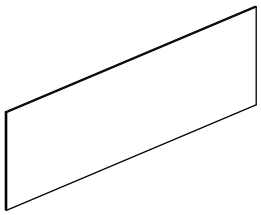


10 (582x178x3mm x2)

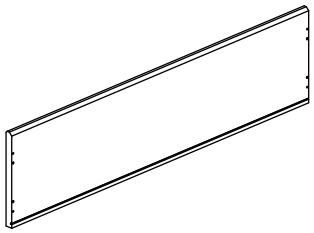


11 (1260x315x24mm x1)

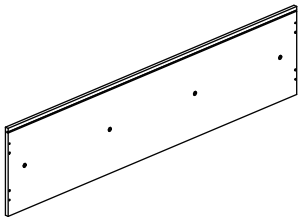


12 (1260x300x12mm x1)

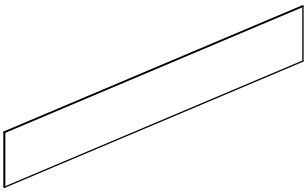


15 (1243x178x3mm x1)

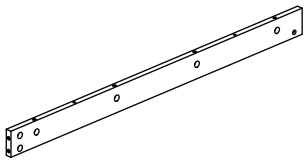


16 (930x65x15mm x1)

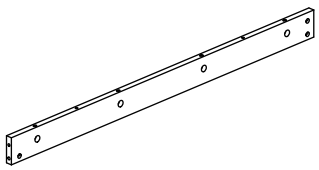


17 (930x65x15mm x1)

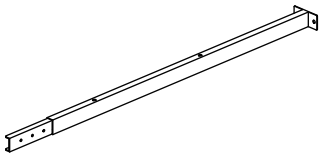


18 (1050x80x40mm x1)

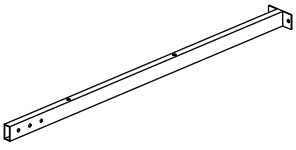


19 (960x80x40mm x1)

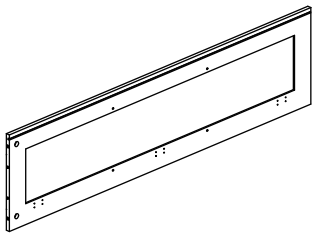

20 (1200x300x12mm x1)

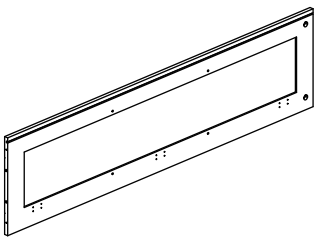


21 (1200x300x12mm x1)

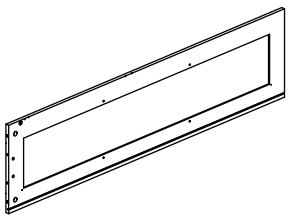


22 (1200x300x12mm x1)

Parts List - Panels(Box 1)


Please check you have all the panels listed below

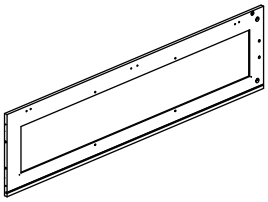


23 (1200x300x12mm x1)

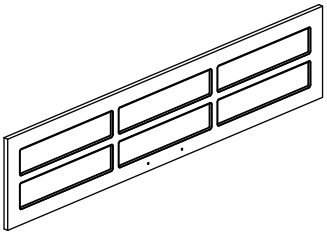


25 (1195x270x14mm x2)

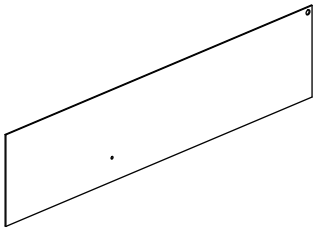


26 (1208x282x3mm x2)




30 (275x80x12mm x2)

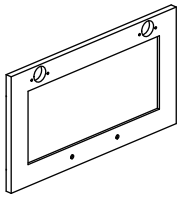


31 (490x270x15mm x2)

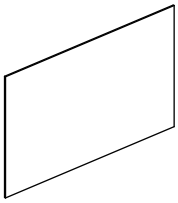


32 (503x282x3mm x2)

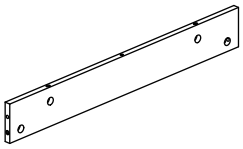

39 (596x80x12mm x3)

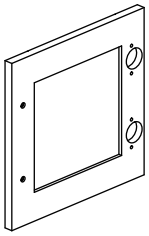


40 (294x290x15mm x4)

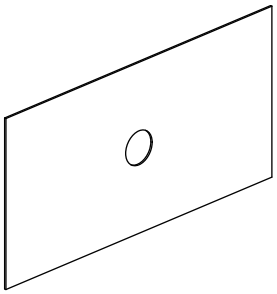


41 (602x302x3mm x3)

Parts List - Panels(Box 2)


Please check you have all the panels listed below

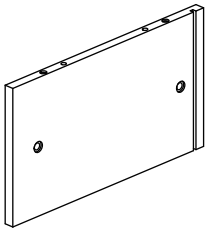


13 (300x170x12mm x1)

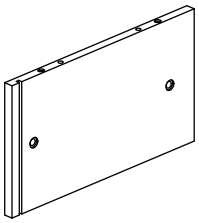


14 (300x170x12mm 1)

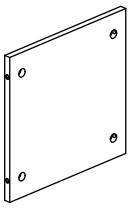


24 (275x268x12mm x4)

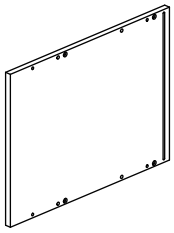


27 (400x300x12mm x2)

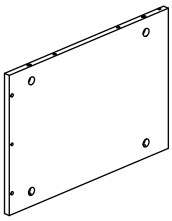


28 (400x275x12mm x2)

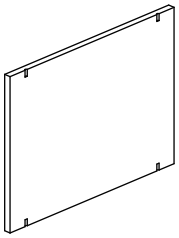


29 (367x273x12mm x2)

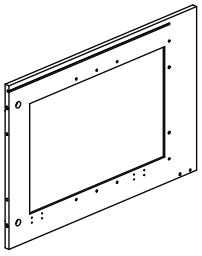


33 (588x400x12mm x1)

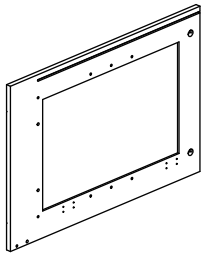


34 (588x400x12mm x1)

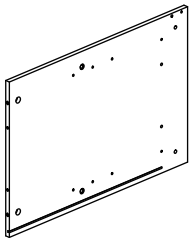


35 (588x400x12mm x1)

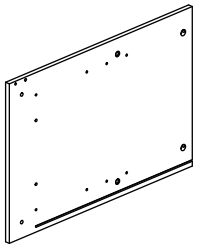


36 (588x400x12mm x1)

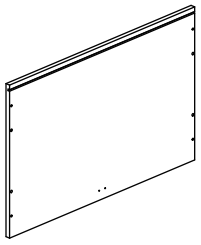


37 (620x400x12mm x3)

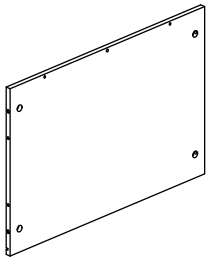


38 (596x400x12mm x3)

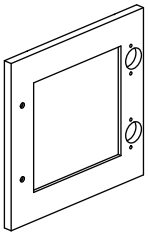

40 (294x290x15mm x2)

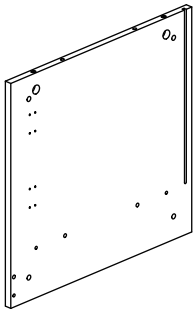


42 (388x400x12mm x3)

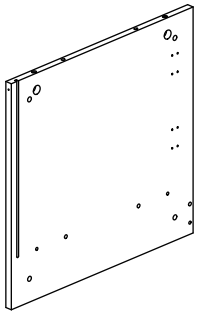

43 (388x400x12mm x3)


Assembly Instructions

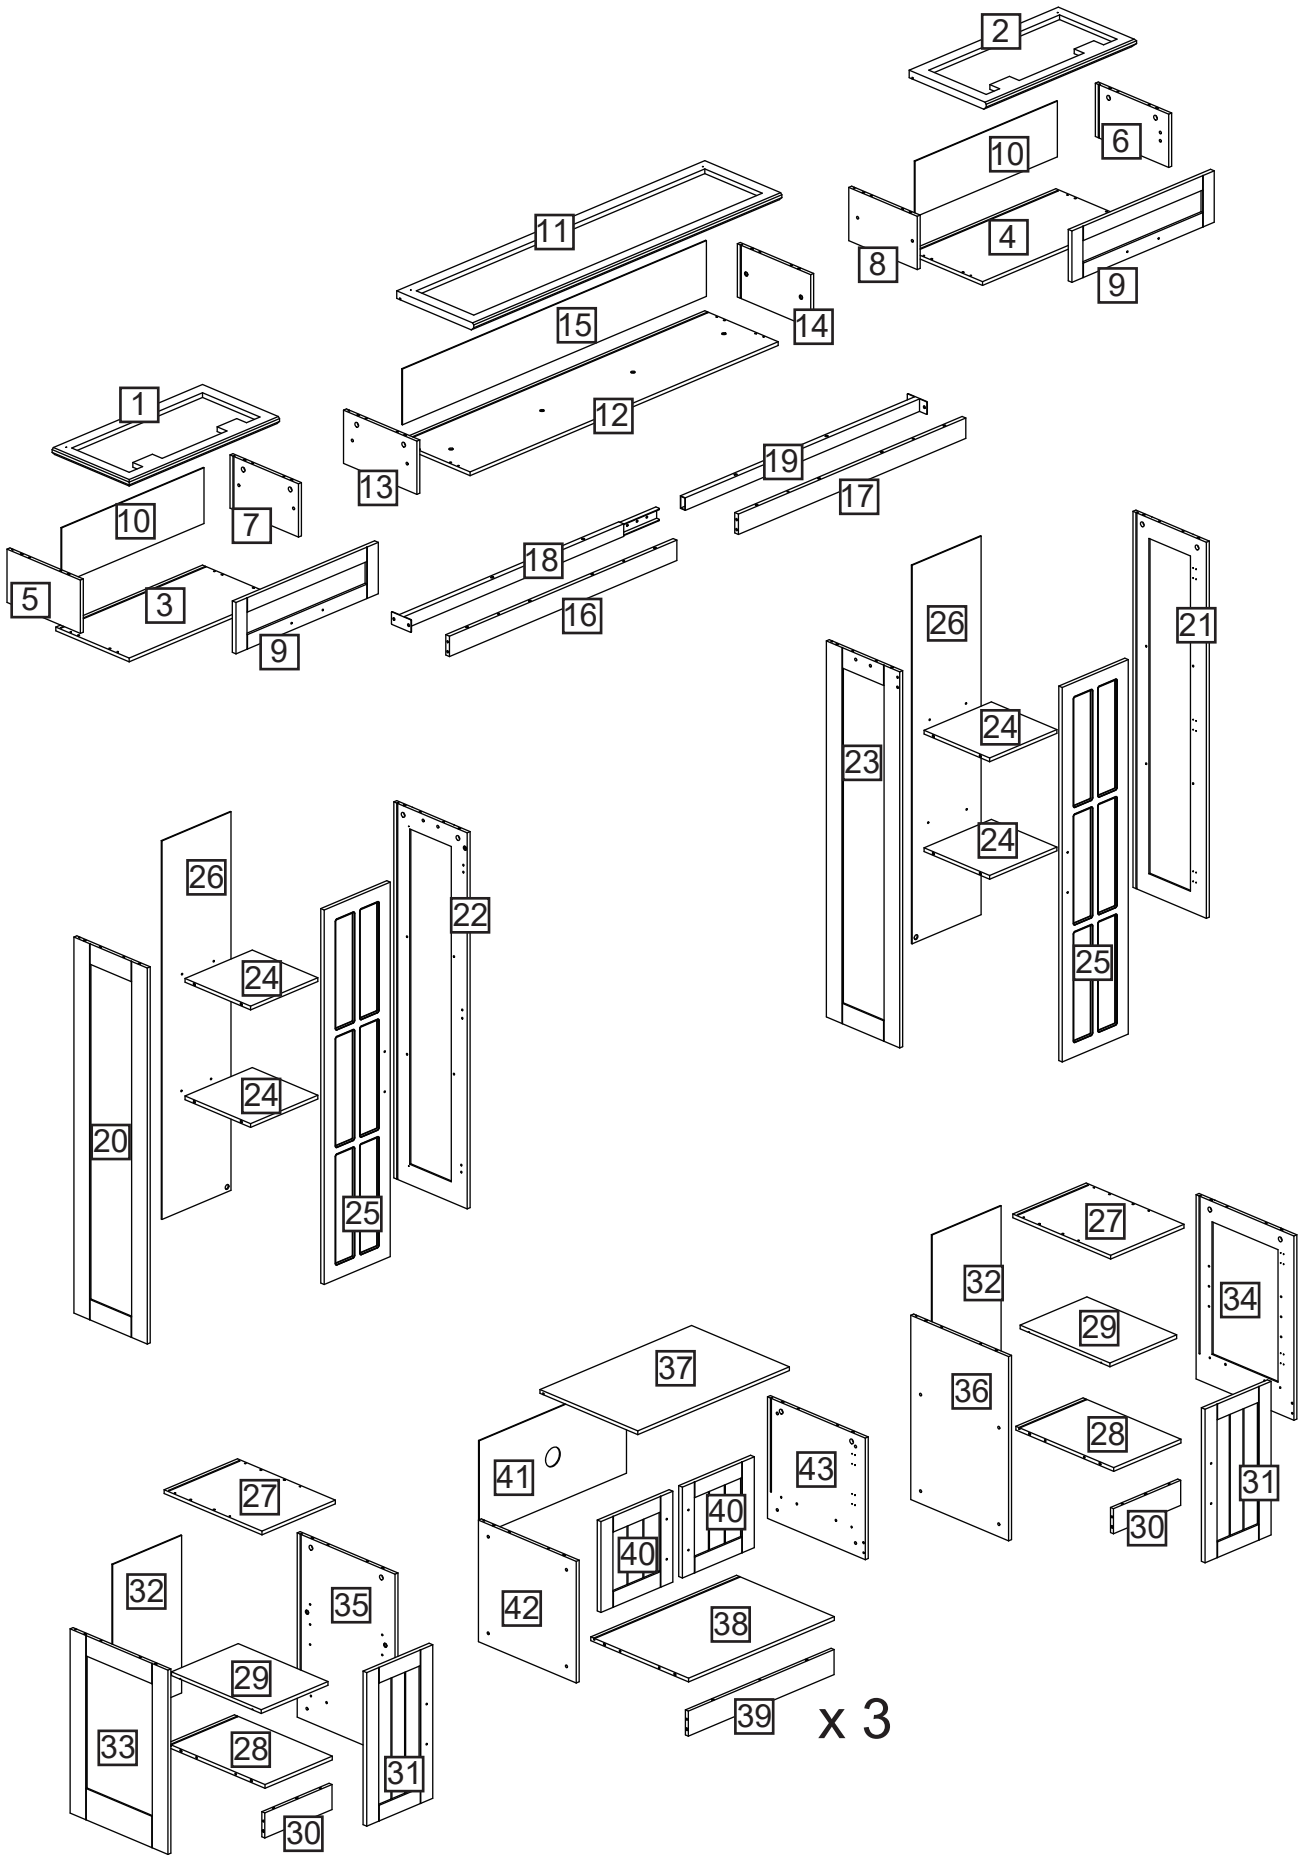



Assembly Instructions


Step 1

Assemble part (P) onto panel (5) and (6).

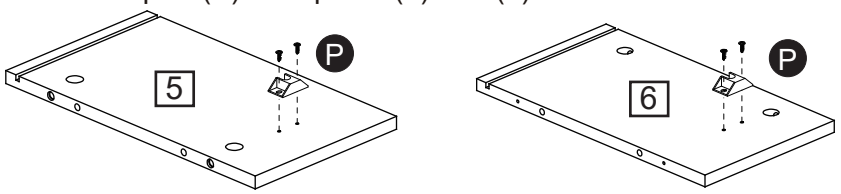


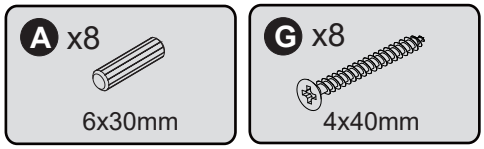

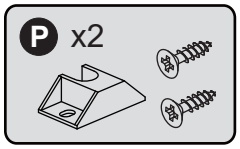

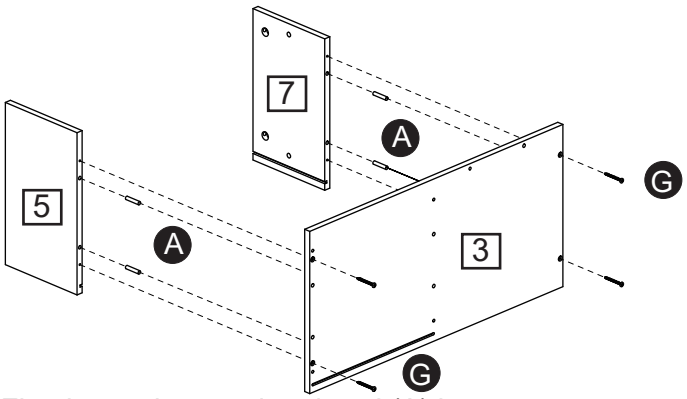


First insert the wooden dowel (A) into panel (5) and (7), then use screw (G) to assemble panel (3) onto panel (5) and (7).

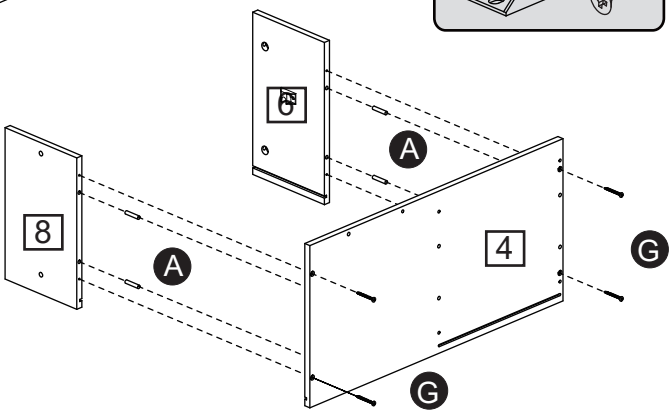

First insert the wooden dowel (A) into panel (6) and (8), then use screw (G) to assemble panel (4) onto panel (6) and (8).


Step 2


Insert panel(10) into slots (6) and (8). Insert panel(10) into slots (5) and (7).

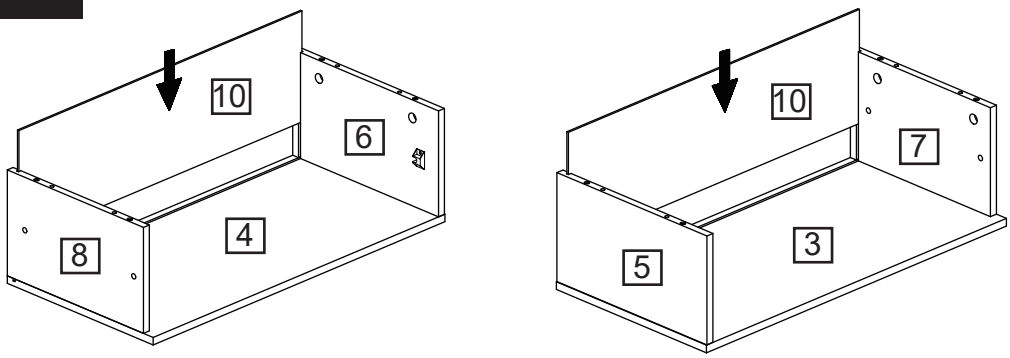



Step 3


CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

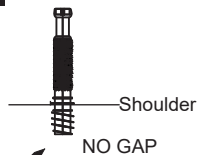

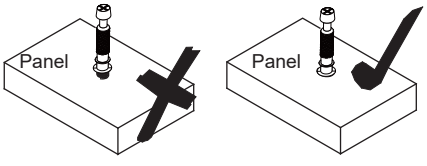

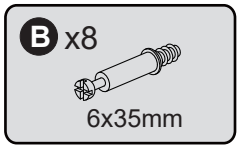

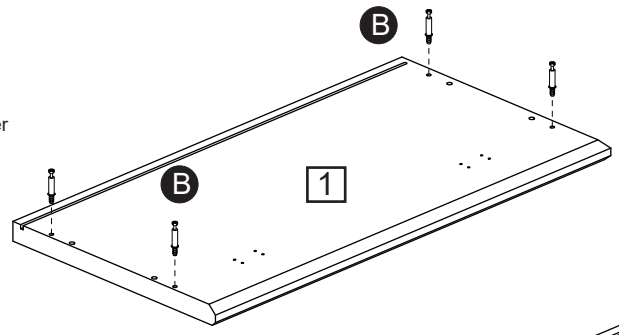


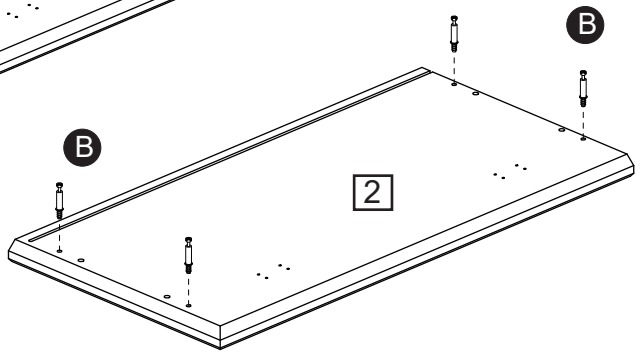



Lock the cam bolt (B) onto panel (1) and (2).

Assembly Instructions


Step 4

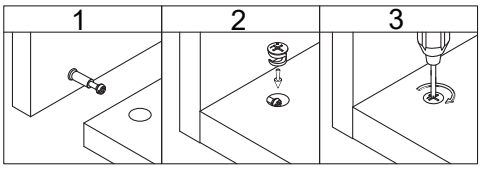

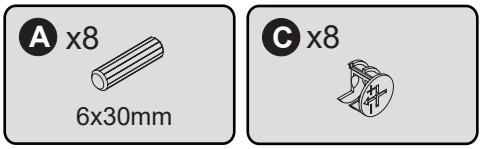

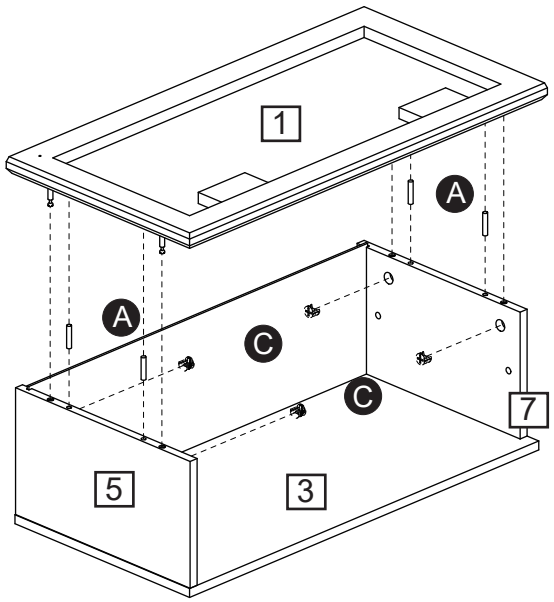


First, insert the wooden dowel (A) into panel (5) and (7), then assemble panel (1) onto panel (5) and (7), and insert cam lock (C) to lock it.

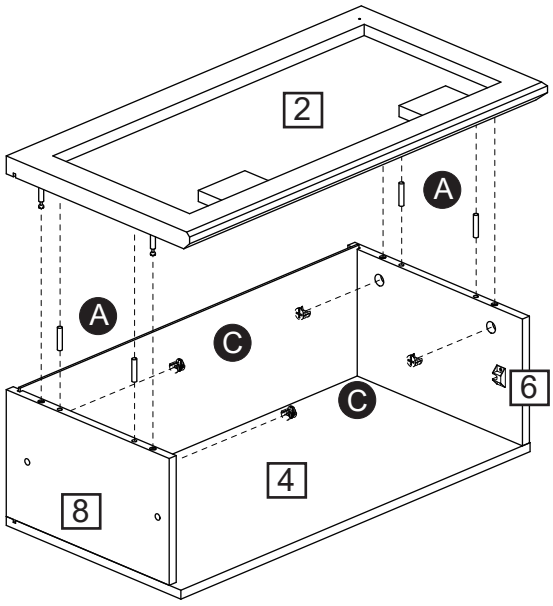



First, insert the wooden dowel (A) into panel (6) and (8), then assemble panel (2) onto panel (6) and (8), and insert cam lock (C) to lock it.


Step 5

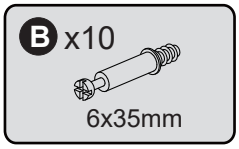


CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

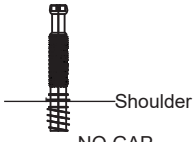

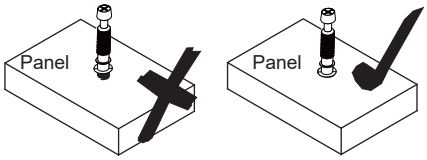

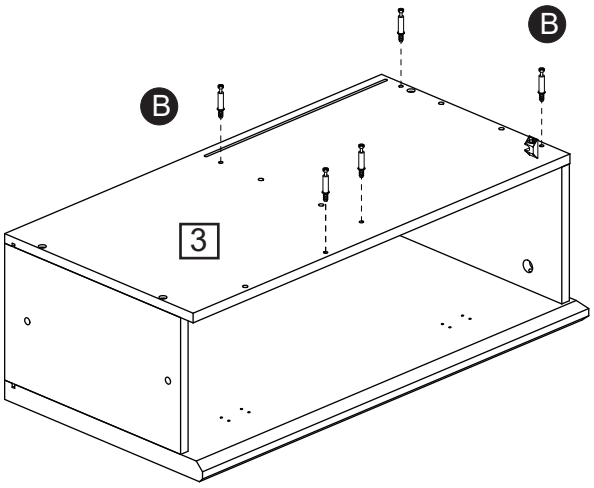

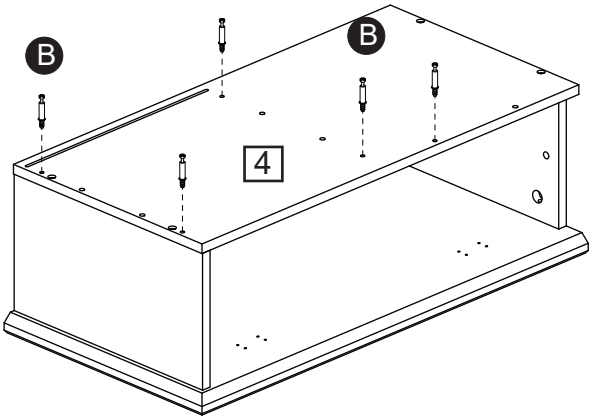


Lock the cam bolt (B) onto panel (3) and (4).

Assembly Instructions

Step 6

Do not fully tighten wall fixing brackets until it's ready to be fixed to the wall.

J x2

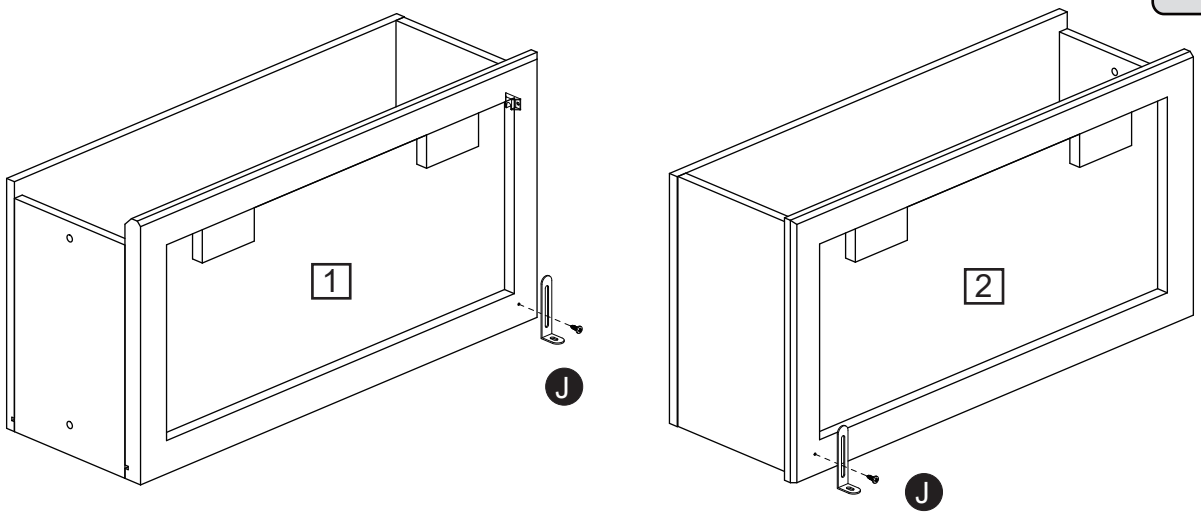


Assemble part(J) onto panel(1),(2).

Step 7


A x4
6x30mm

G x4
4x40mm

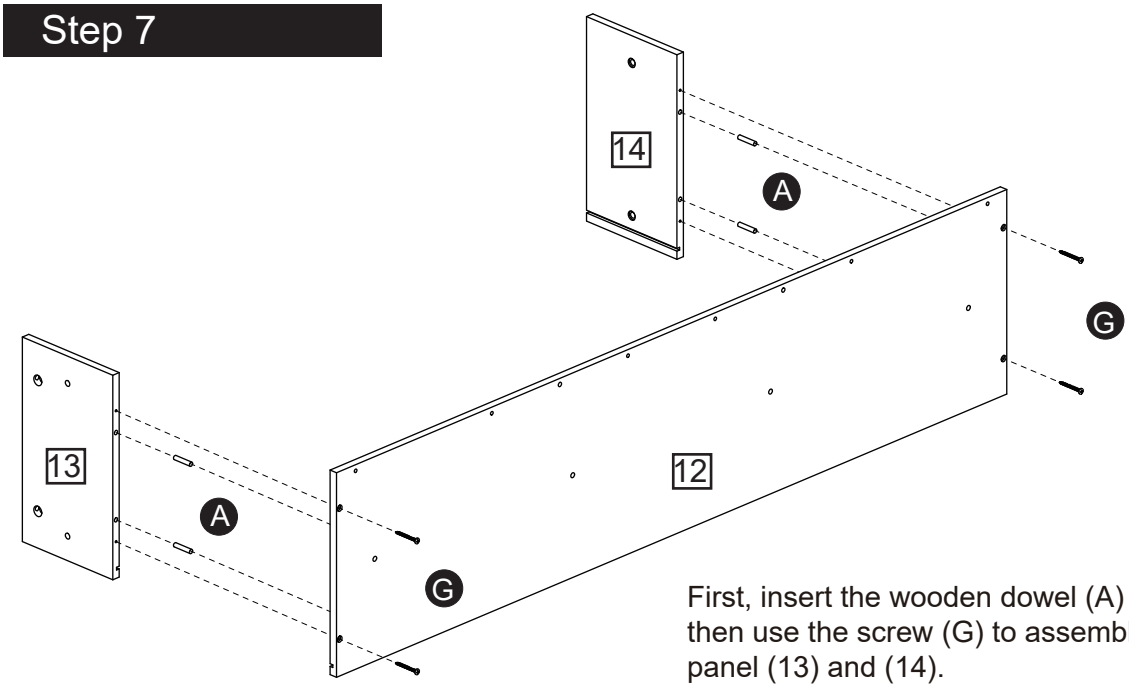

First, insert the wooden dowel (A) into (13) and (14), then use the screw (G) to assemble panel (12) onto panel (13) and (14).


Step 8

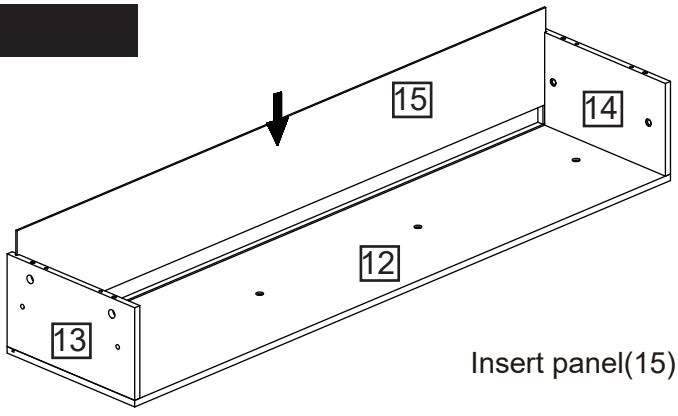

Insert panel(15) into the slots of panel(13) and (14).


Assembly Instructions

Step 9

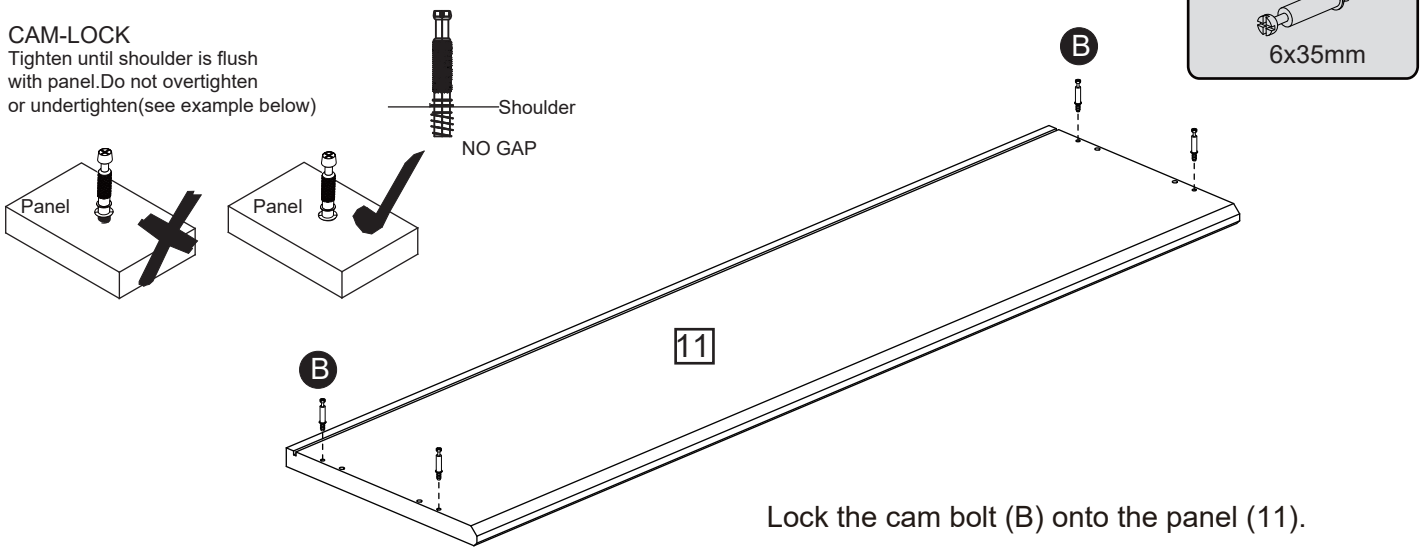


Lock the cam bolt (B) onto the panel (11).

Step 10

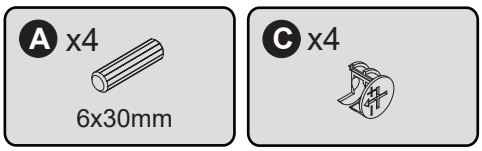


First, insert the wooden dowel (A) into panel (13) and (14).
Then, assemble panel (11) onto panel (13) and (14),
insert the cam lock (C), and tighten it.

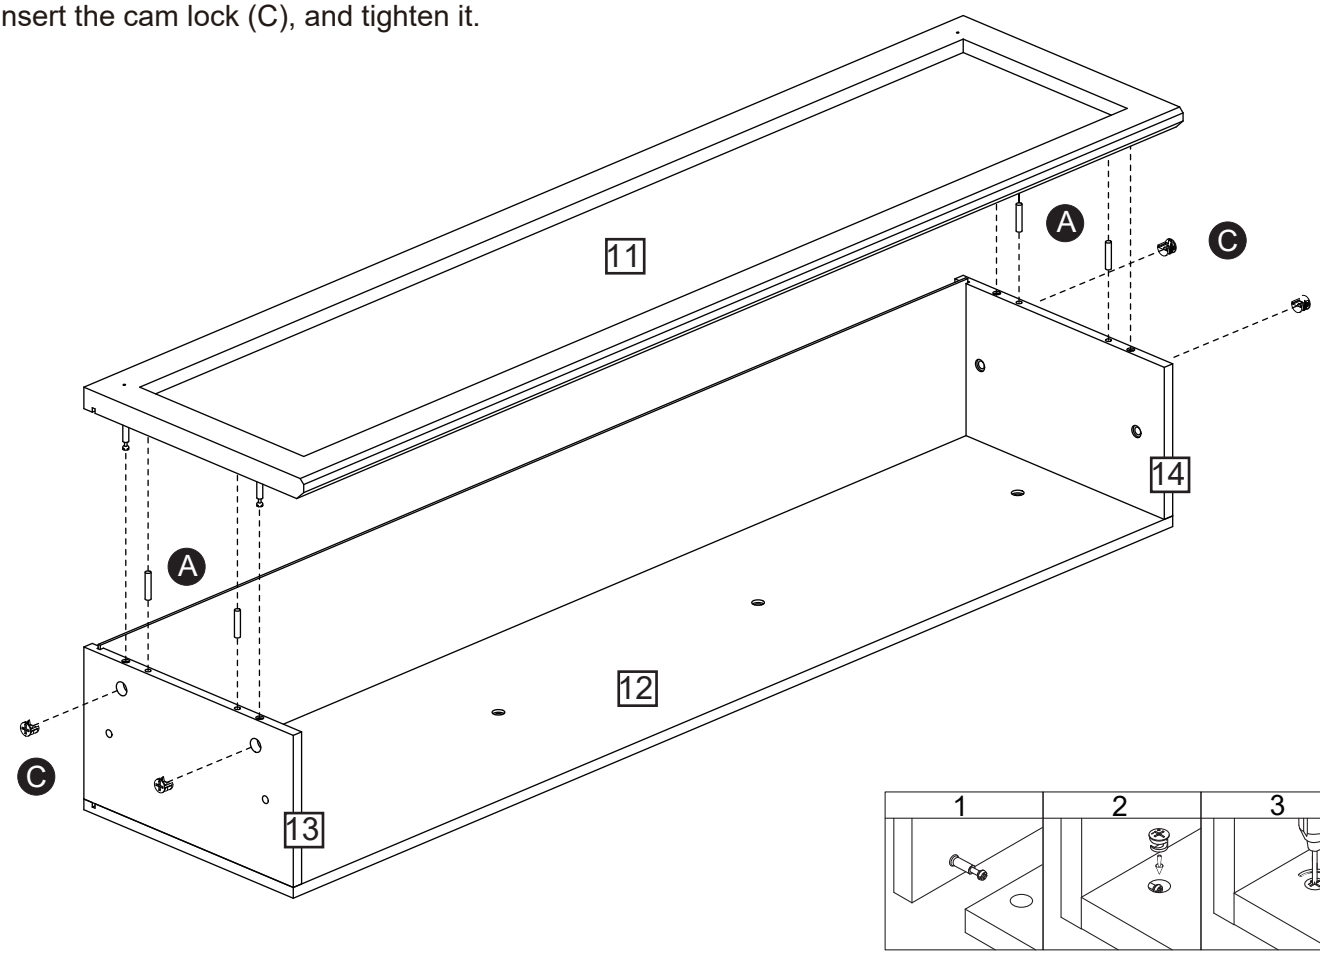


Assembly Instructions

Step 11

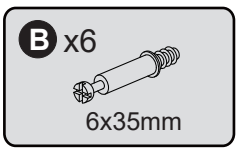


CAM-LOCK
Tighten until shoulder is flush
with panel.Do not overtighten
or undertighten(see example below)

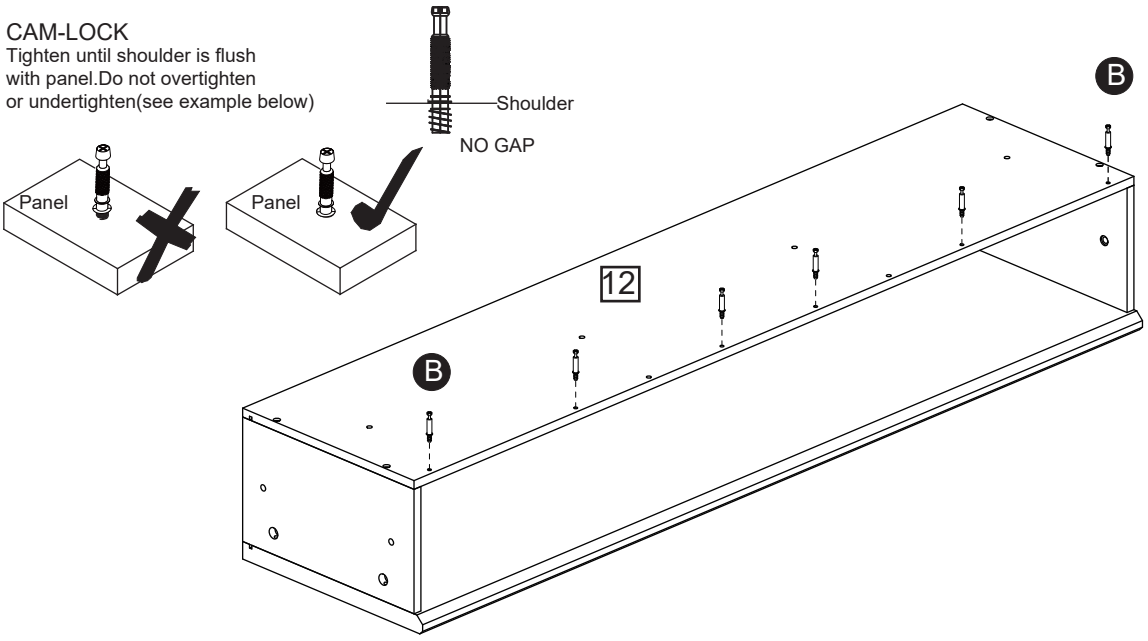


Lock the cam bolt (B) onto the panel (12).

Step 12

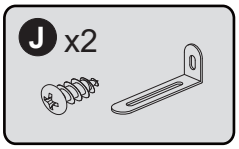

Assemble part(J) onto panel(11).

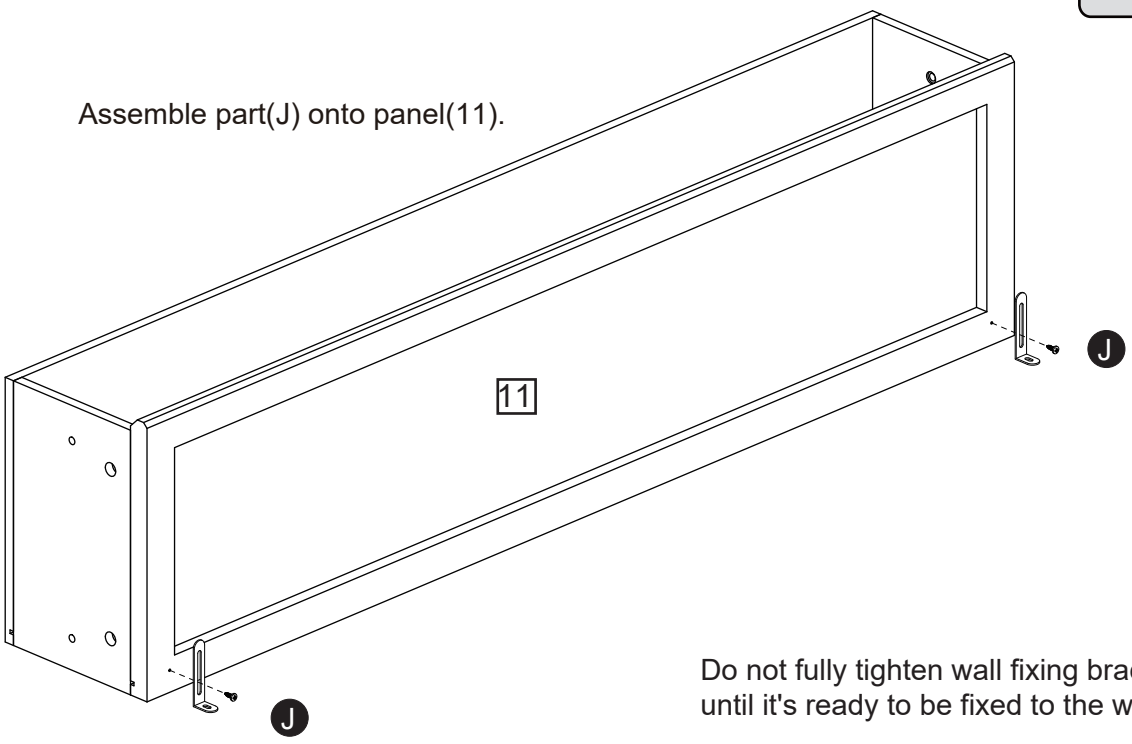



Do not fully tighten wall fixing brackets
until it's ready to be fixed to the wall.


Assembly Instructions

Step 13


CAM-LOCK
Tighten until shoulder is flush
with panel.Do not overtighten
or undertighten(see example below)

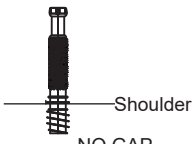


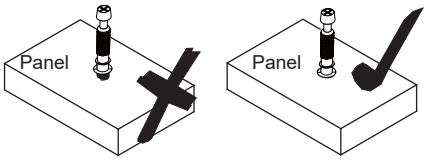

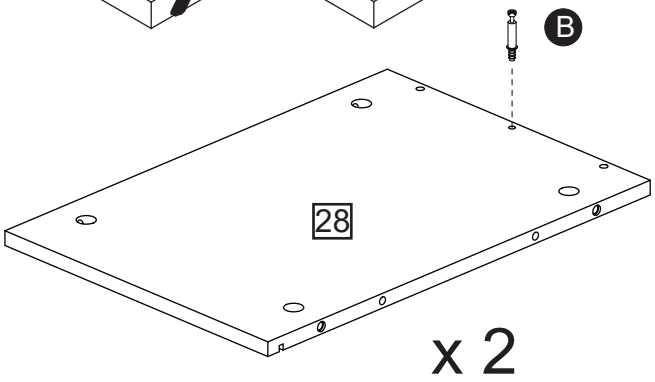


Lock the cam bolt (B) onto the panel (28).

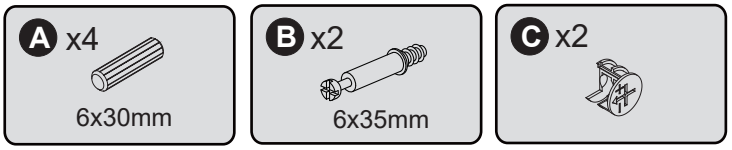

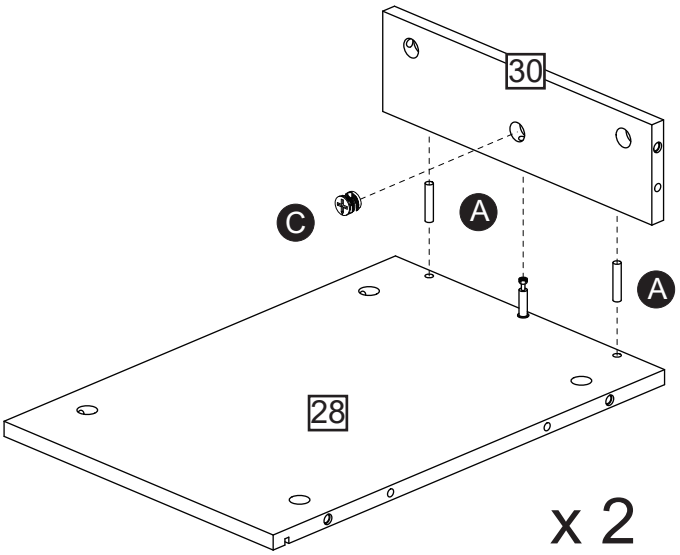



First, insert the wooden dowel (A) into the panel (28), then assemble the panel (30) onto the panel (28), insert the cam lock (C), and tighten it.

Step 14

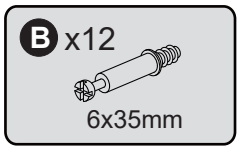



CAM-LOCK
Tighten until shoulder is flush
with panel.Do not overtighten
or undertighten(see example below)

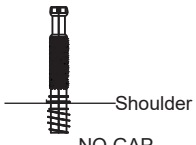


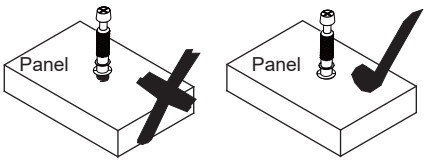


Lock the cam bolt (B) onto panel (33), (34), (35), (36).

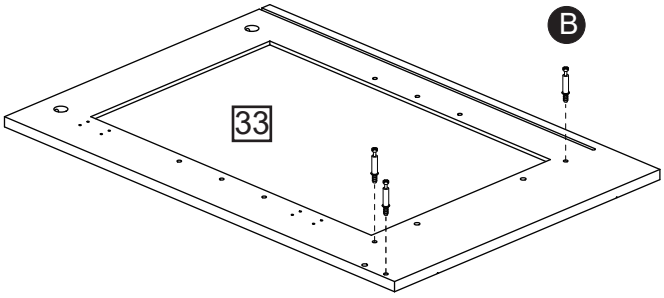

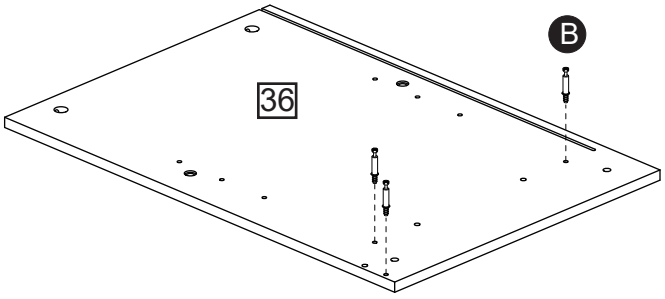


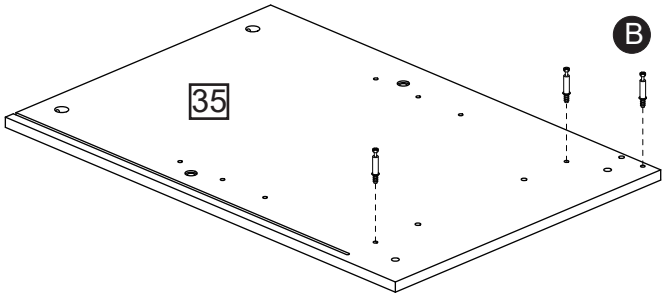

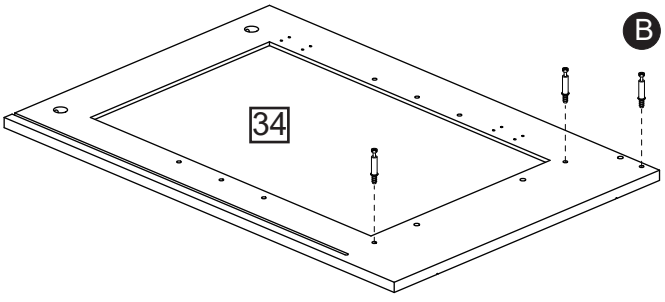


Assembly Instructions


Step 15

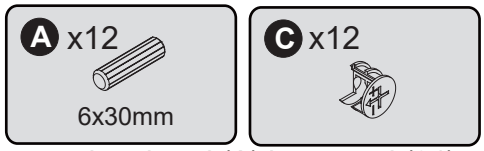


First, insert the wooden dowel (A) into panel (35), then assemble panels (28) and (30) onto panel (35), insert cam lock (C), and tighten.

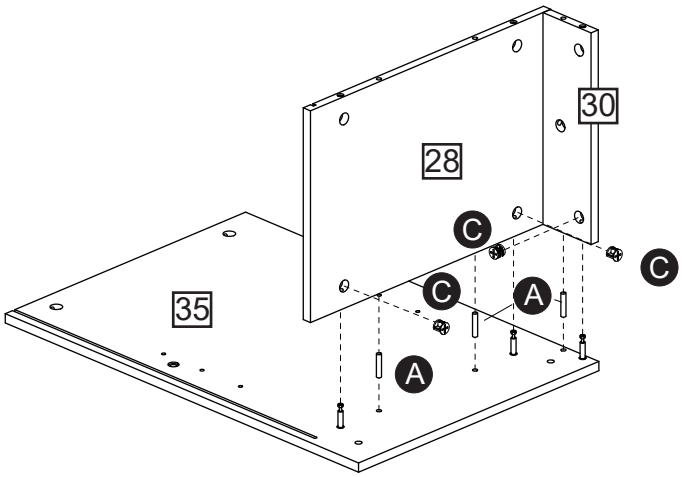


First, insert the wooden dowel (A) into panel (34), then assemble panels (28) and (30) onto panel (34), insert cam lock (C), and tighten.

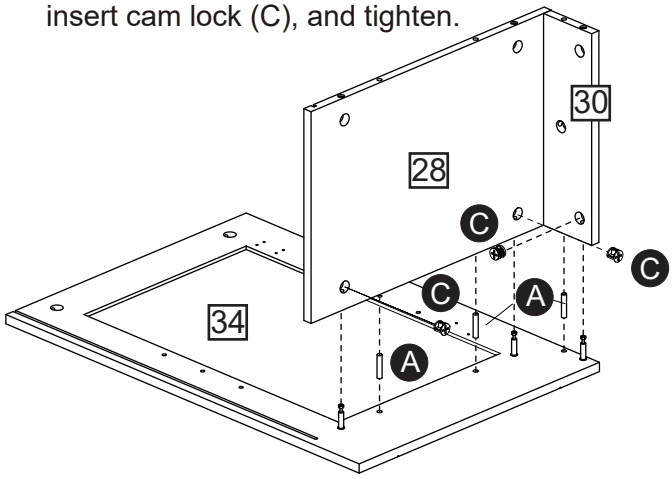

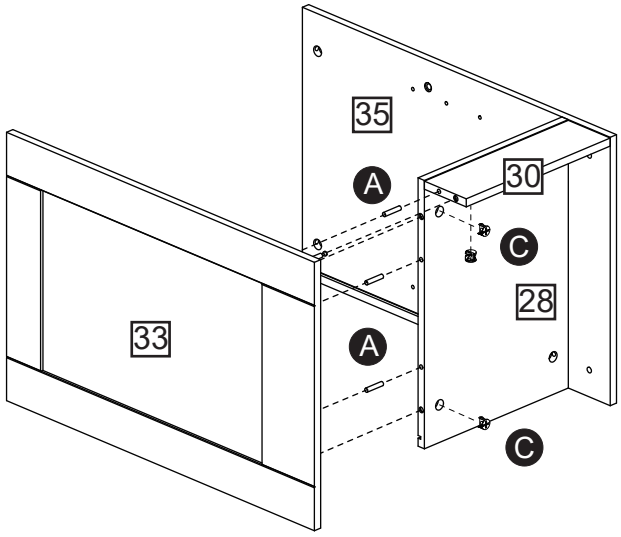


First, insert the wooden dowel (A) into panel (28) and (30), then assemble panel (33) onto panel (28) and (30), insert cam lock (C), and tighten.

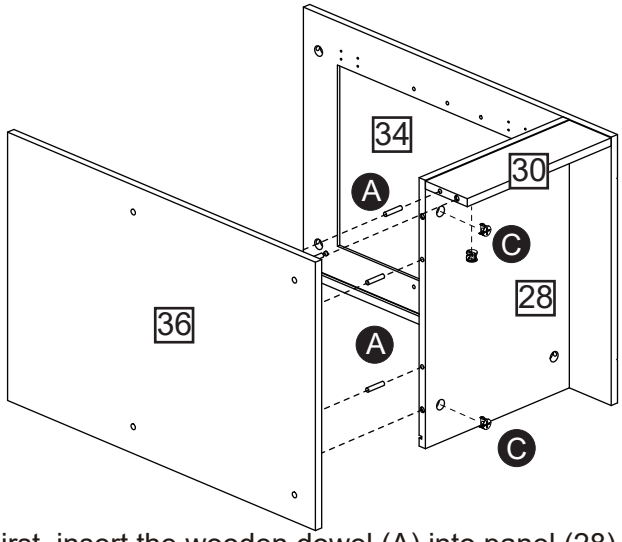

First, insert the wooden dowel (A) into panel (28) and (30), then assemble panel (36) onto panel (28) and (30), insert cam lock (C), and tighten.

Step 16


Insert panel(32) into slots (33) and (35).
Insert panel(32) into slots (34) and (36).

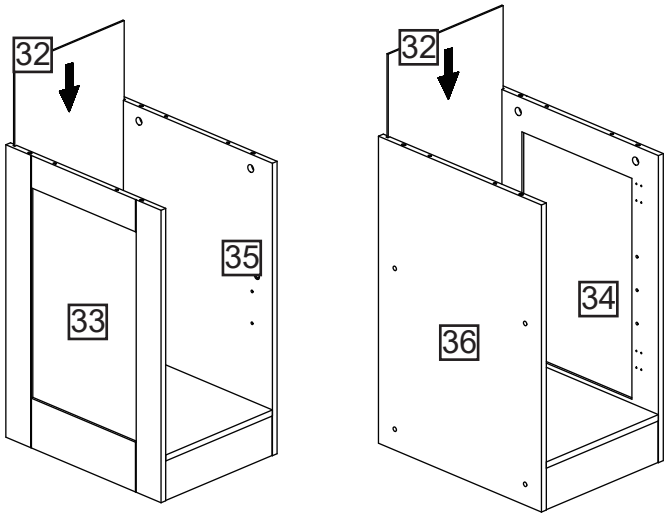



Assembly Instructions


Step 17


CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

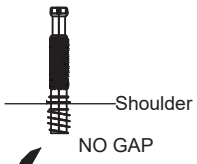

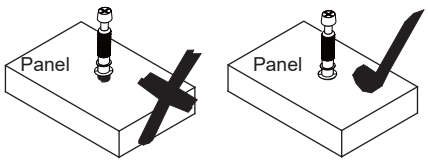


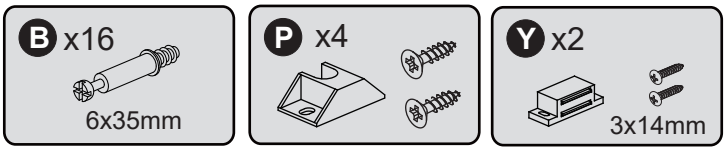


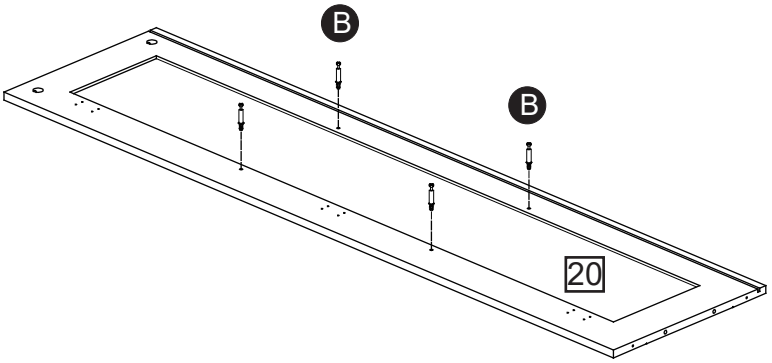

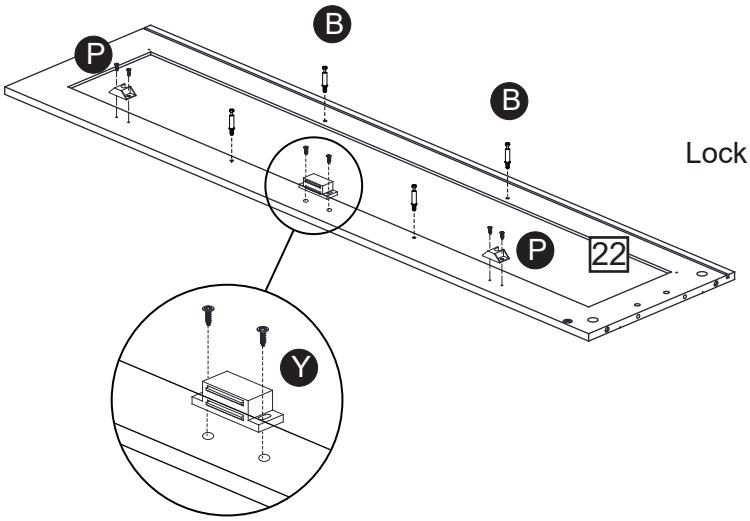

Lock the cam bolt (B) onto panel (20), (21), (22), (23).

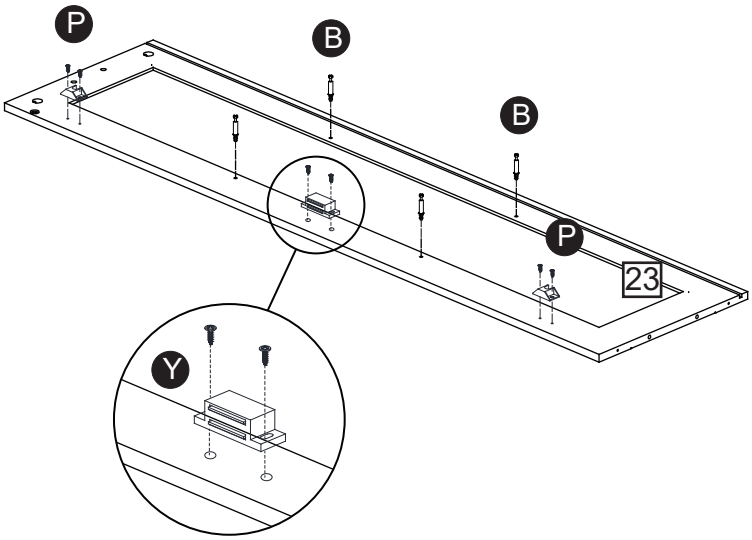

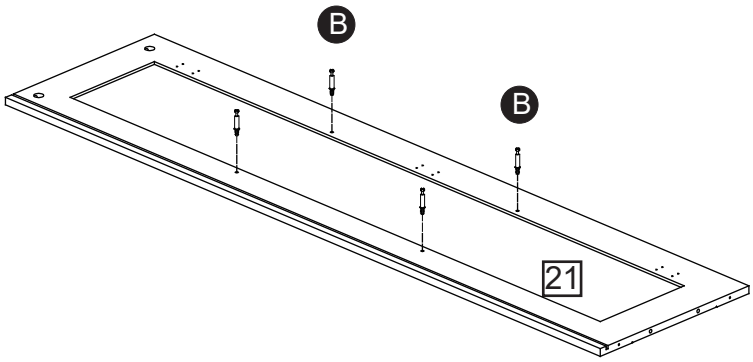


Assembly Instructions

Step 18


C x16




Assemble panels (24) onto panel (20), insert cam lock (C), and lock.

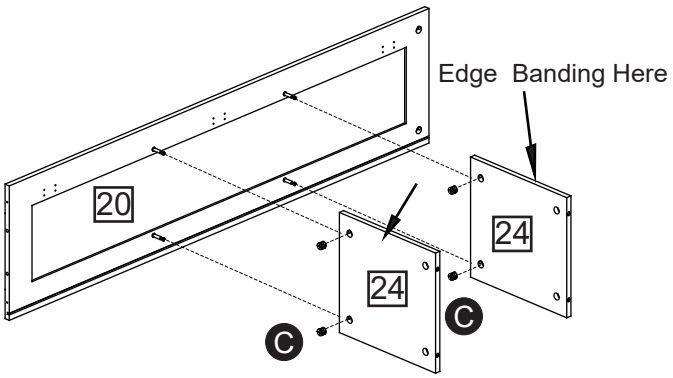


Assemble panels (22) onto panels (24), insert cam lock (C), and lock.

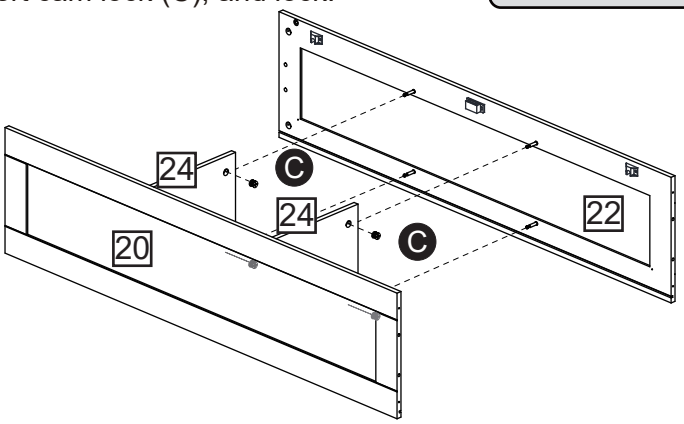

Assemble panels (23) onto panels (24), insert cam lock (C), and lock.

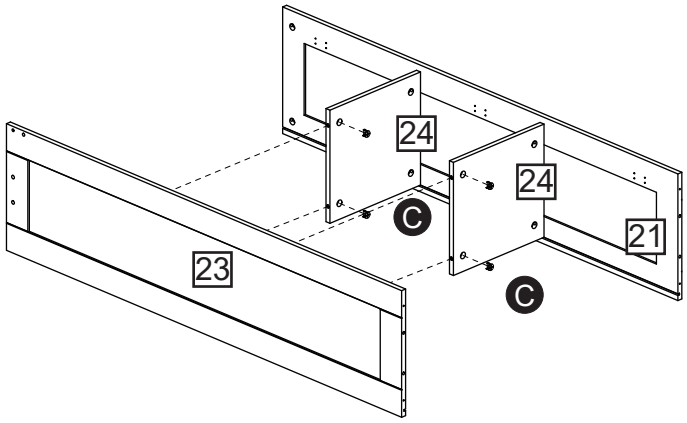


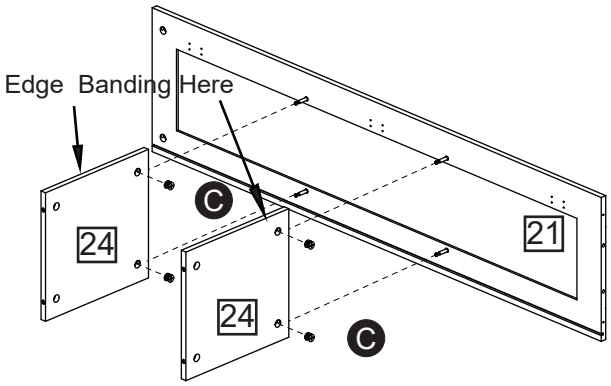

Assemble panels (24) onto panel (21), insert cam lock (C), and lock.


Step 19


B x8



6x35mm

CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

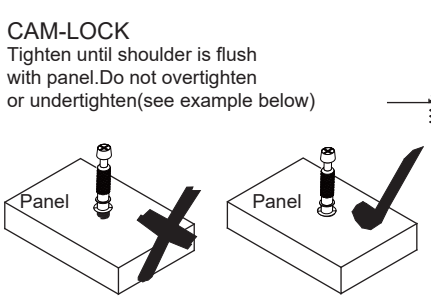

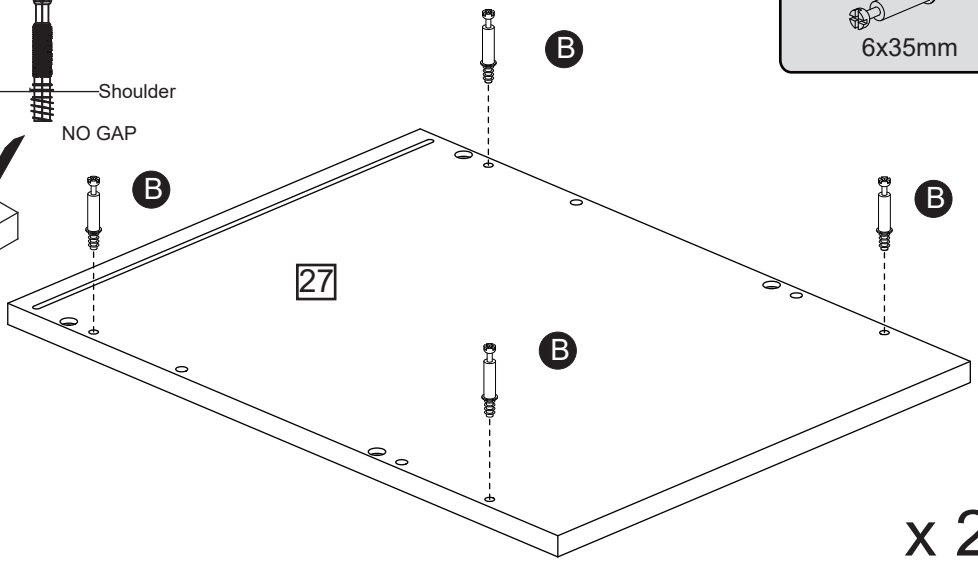


x 2

Lock the cam bolt (B) onto the panel (27).


Assembly Instructions

Step 20

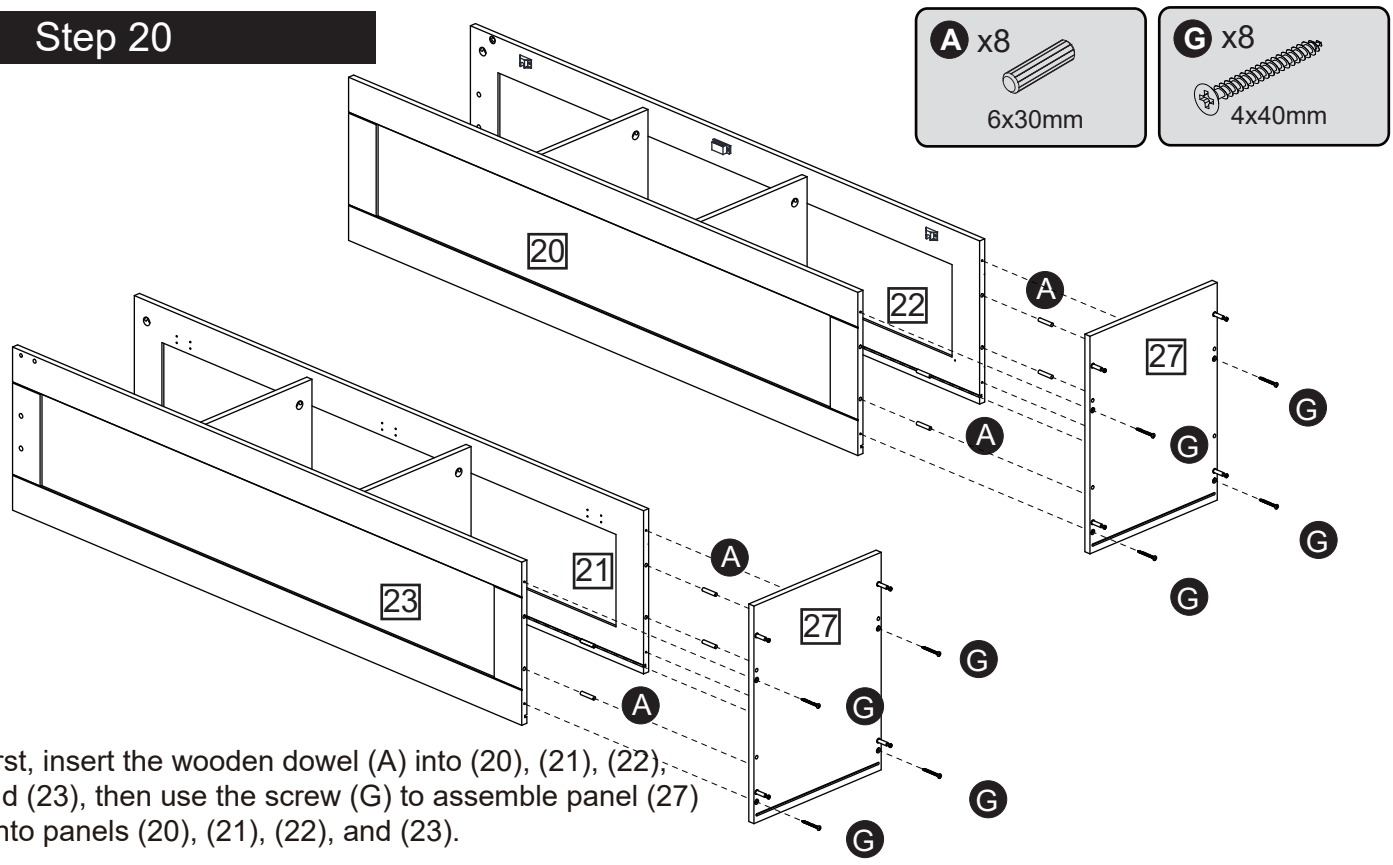

First, insert the wooden dowel (A) into (20), (21), (22), and (23), then use the screw (G) to assemble panel (27) onto panels (20), (21), (22), and (23).

Step 21

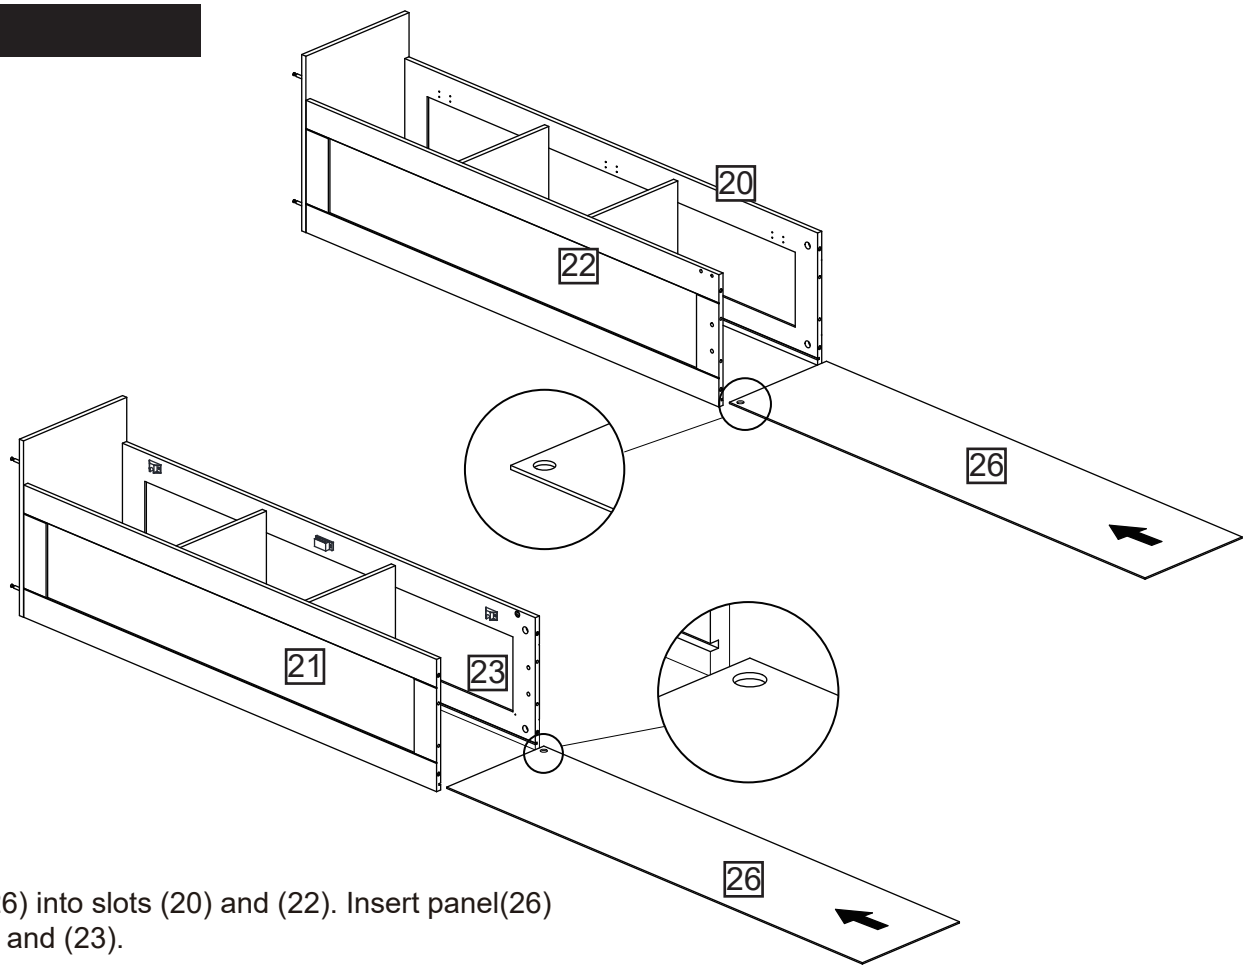


Insert panel(26) into slots (20) and (22). Insert panel(26) into slots (21) and (23).


Assembly Instructions

Step 22

X x3



6x10mm

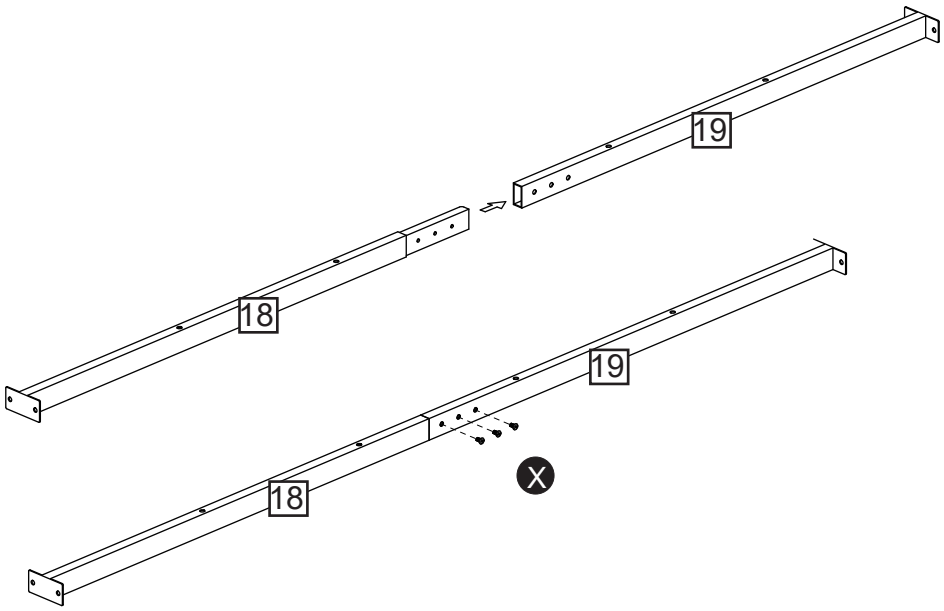


Insert panel(18) into panel(19) and fix it with bolt(X).

Step 23

C x2




D x2



6.5x60mm

U x2



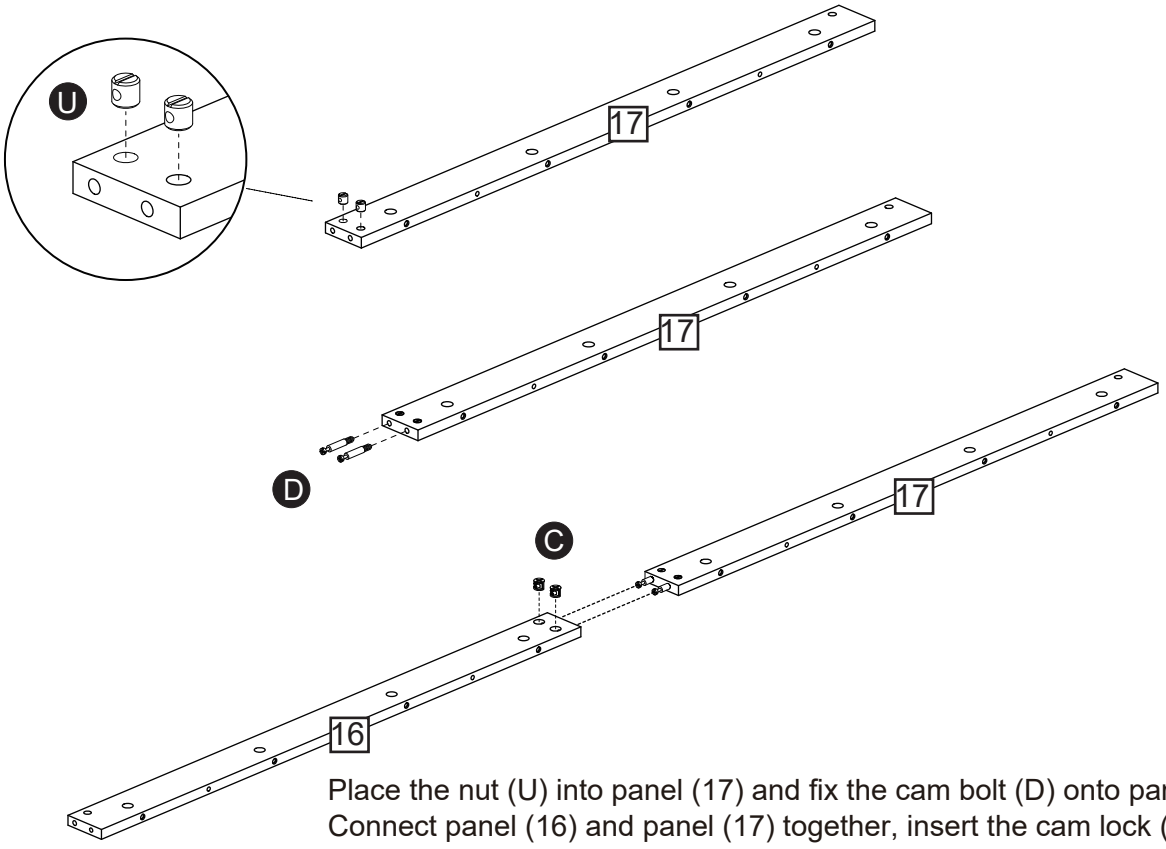

Place the nut (U) into panel (17) and fix the cam bolt (D) onto panel (17).
Connect panel (16) and panel (17) together, insert the cam lock (C), and tighten.

Assembly Instructions


Step 24

T x4

6x12mm

V x4

7.8x18mm

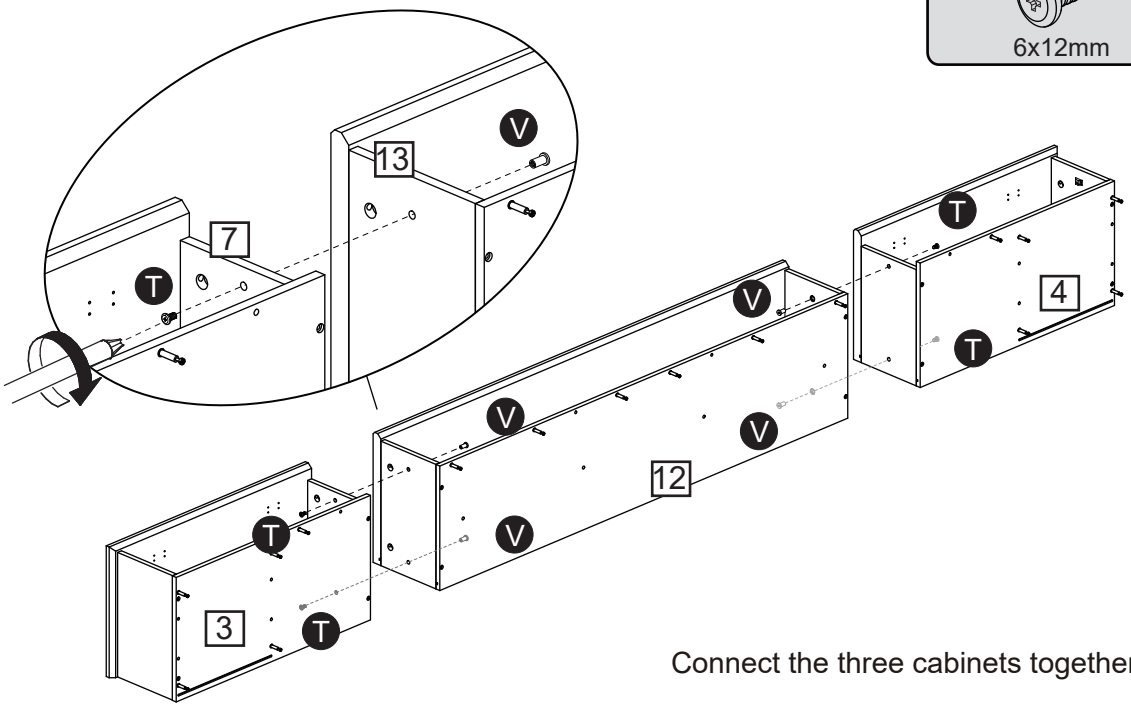

Connect the three cabinets together using bolt(T),(V).

Step 25

A x2

6x30mm

S x2

6x45mm


X x4

6x10mm

U x2


W x4

7.8x12mm

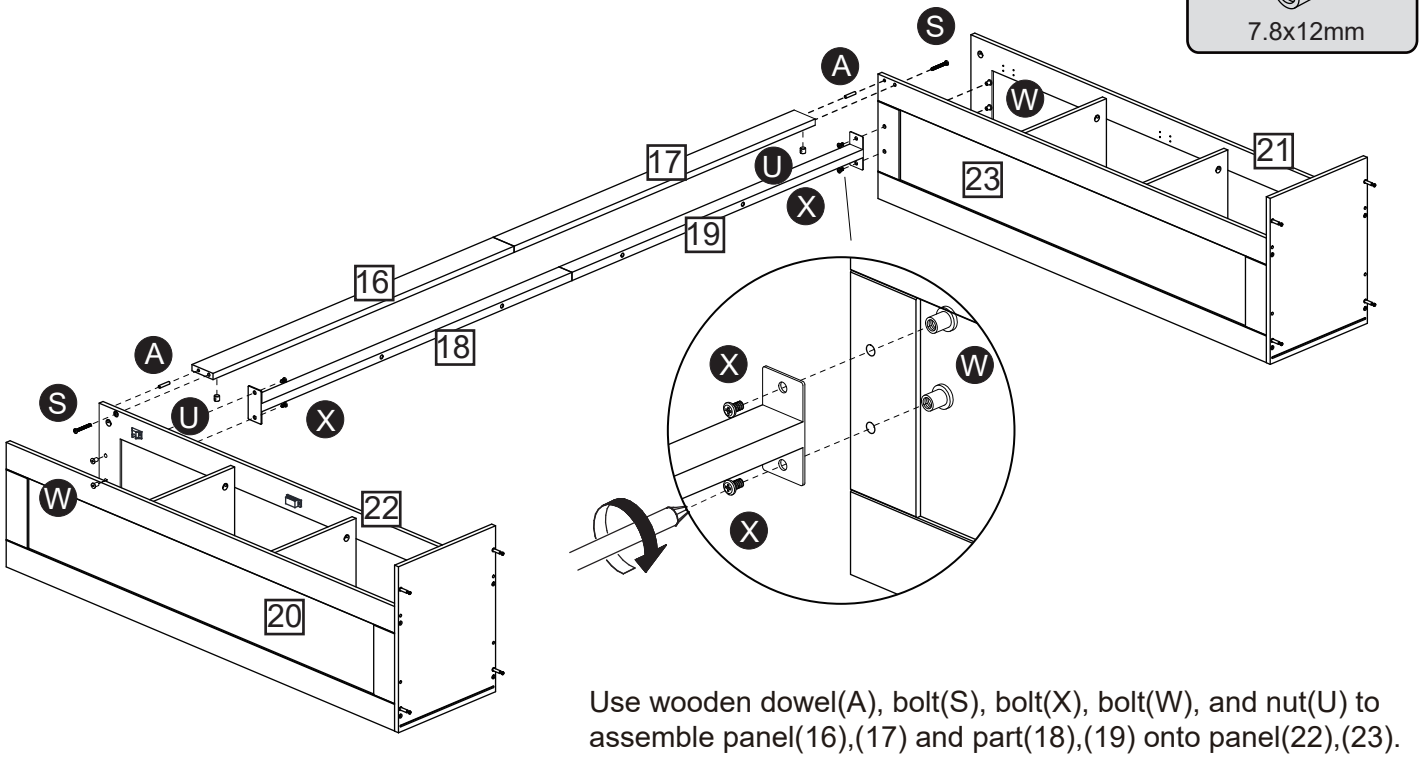

Use wooden dowel(A), bolt(S), bolt(X), bolt(W), and nut(U) to assemble panel(16),(17) and part(18),(19) onto panel(22),(23).

Assembly Instructions


Step 26

A x12


6x30mm

C x16


First, insert the wooden dowel (A) into panels (20), (21), (22), and (23). Then, assemble panels (3), (4), and (12) onto panels (20), (21), (22), and (23), and insert the cam lock (C) to lock it.

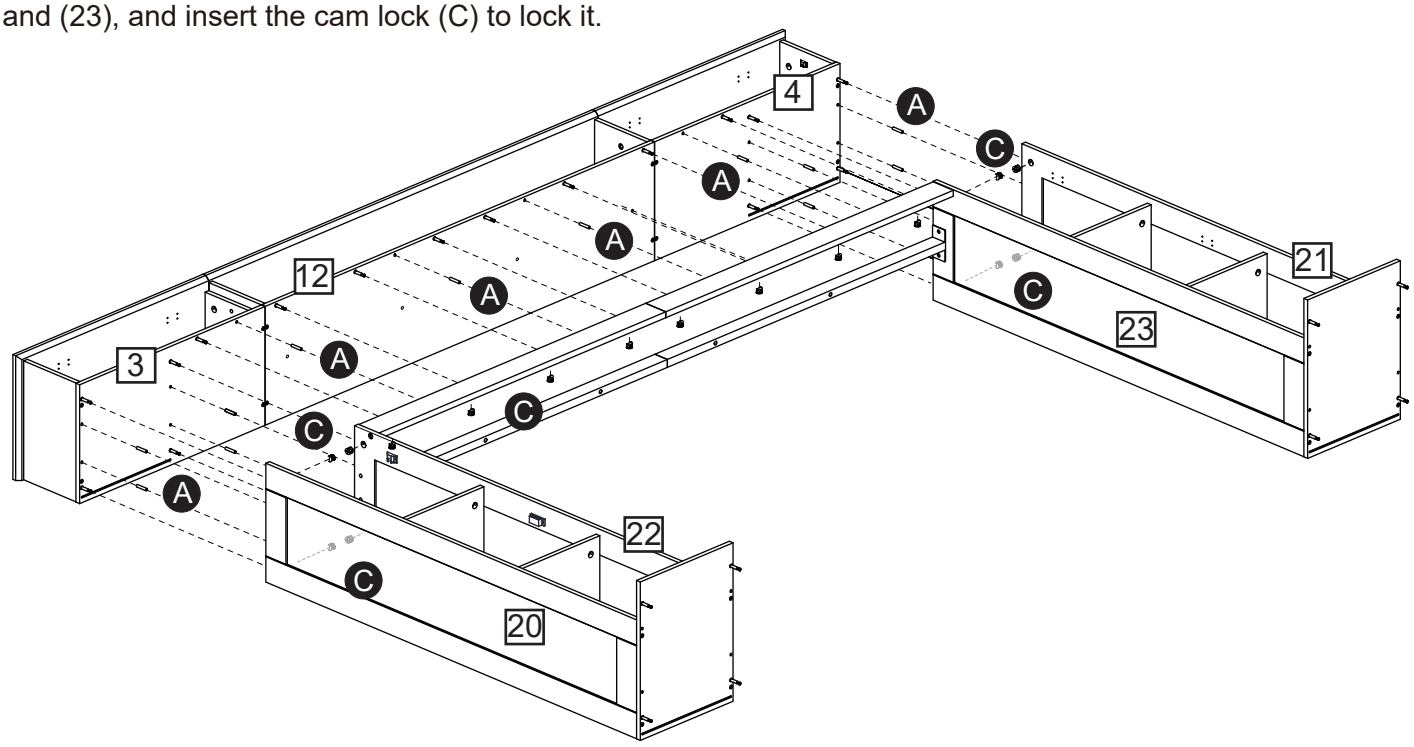


Step 27

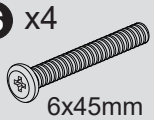S x4

6x45mm

V x4


7.8x18mm

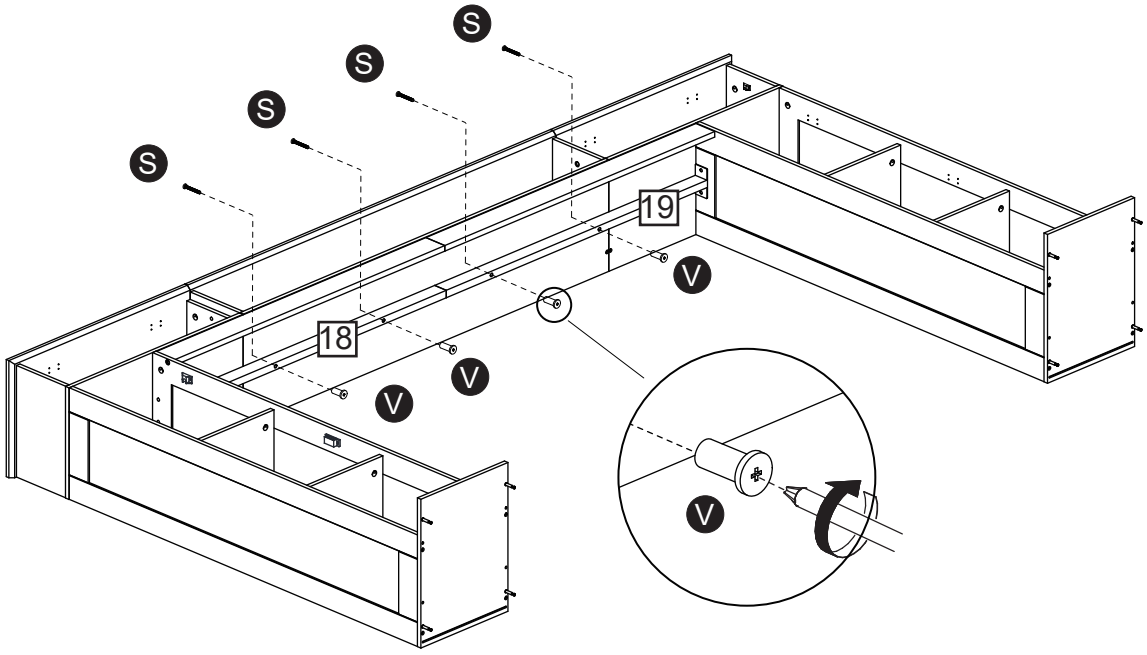
Use bolt(S) and bolt(V) to fix part(18) and (19).



Assembly Instructions

Step 28

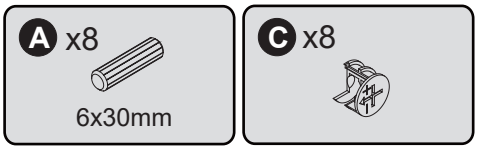


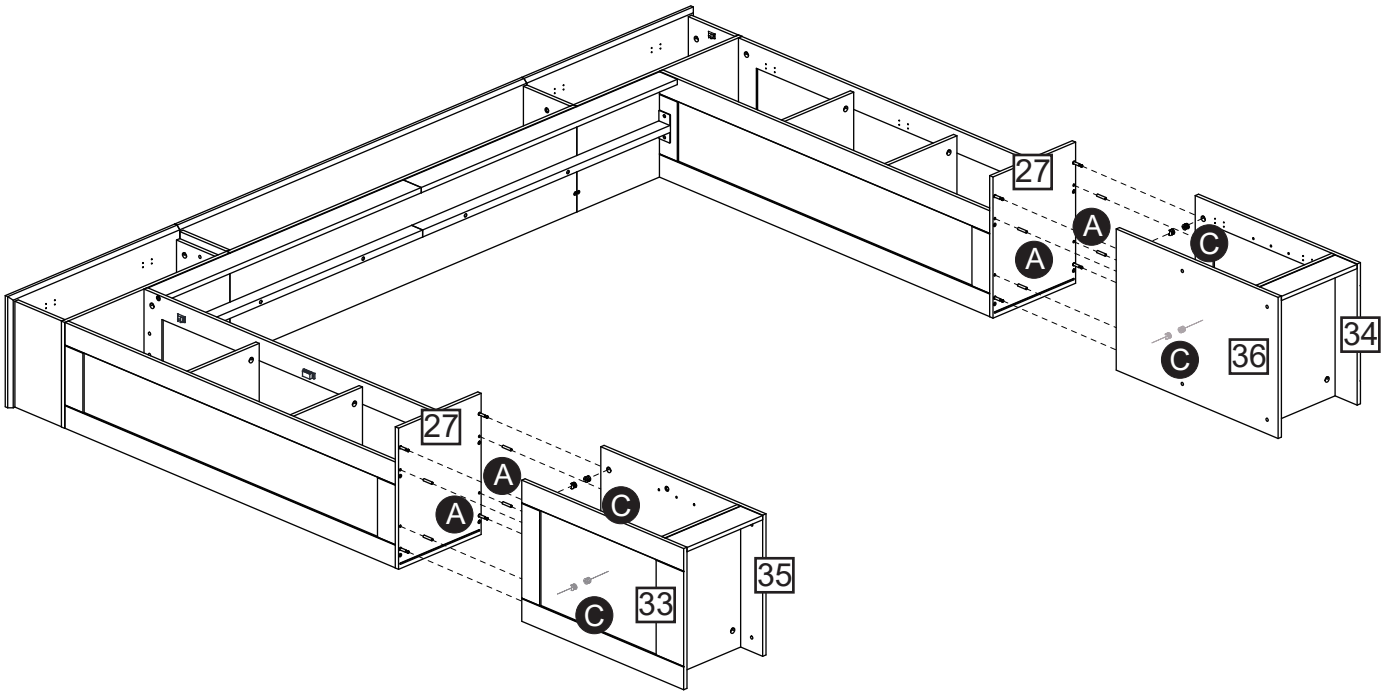

First, insert the wooden dowel (A) into panels (33), (34), (35), and (36).
Then, assemble panels (27) onto panels (33), (34), (35), and (36),
and insert cam lock (C) to lock it in place.


Assembly Instructions

Step 29

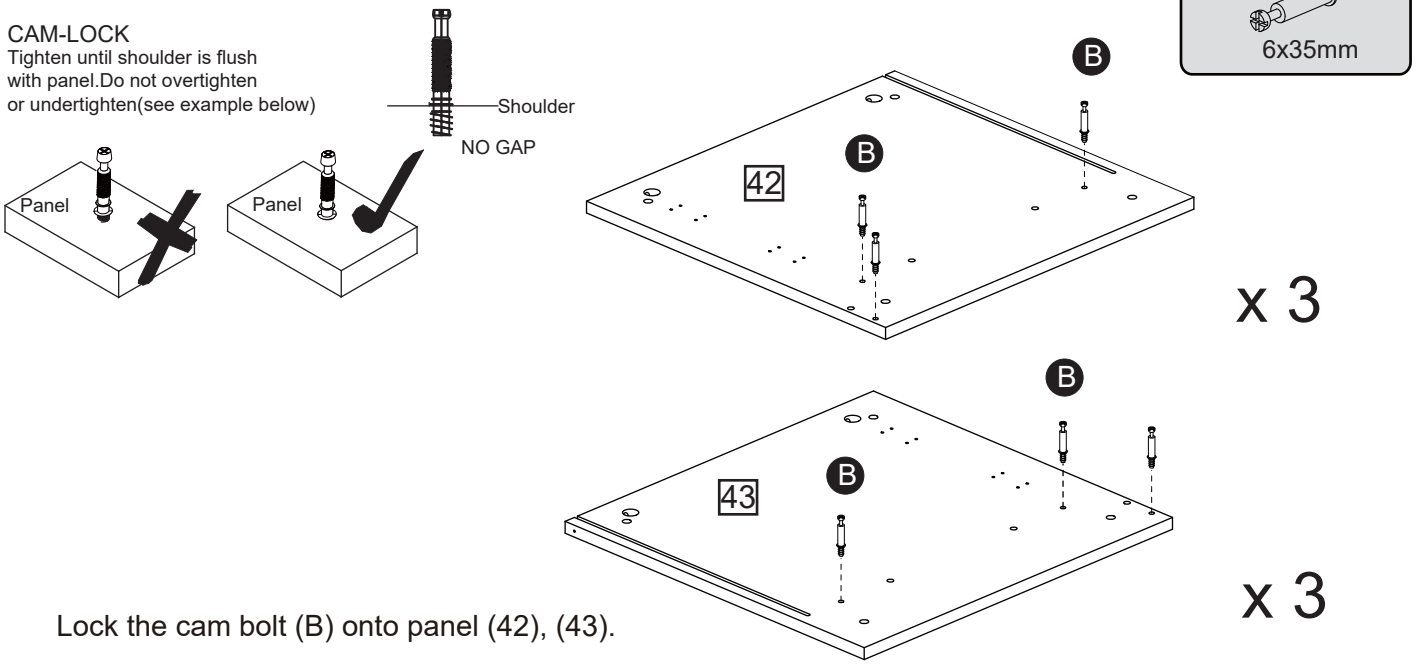

Lock the cam bolt (B) onto panel (42), (43).


Step 30

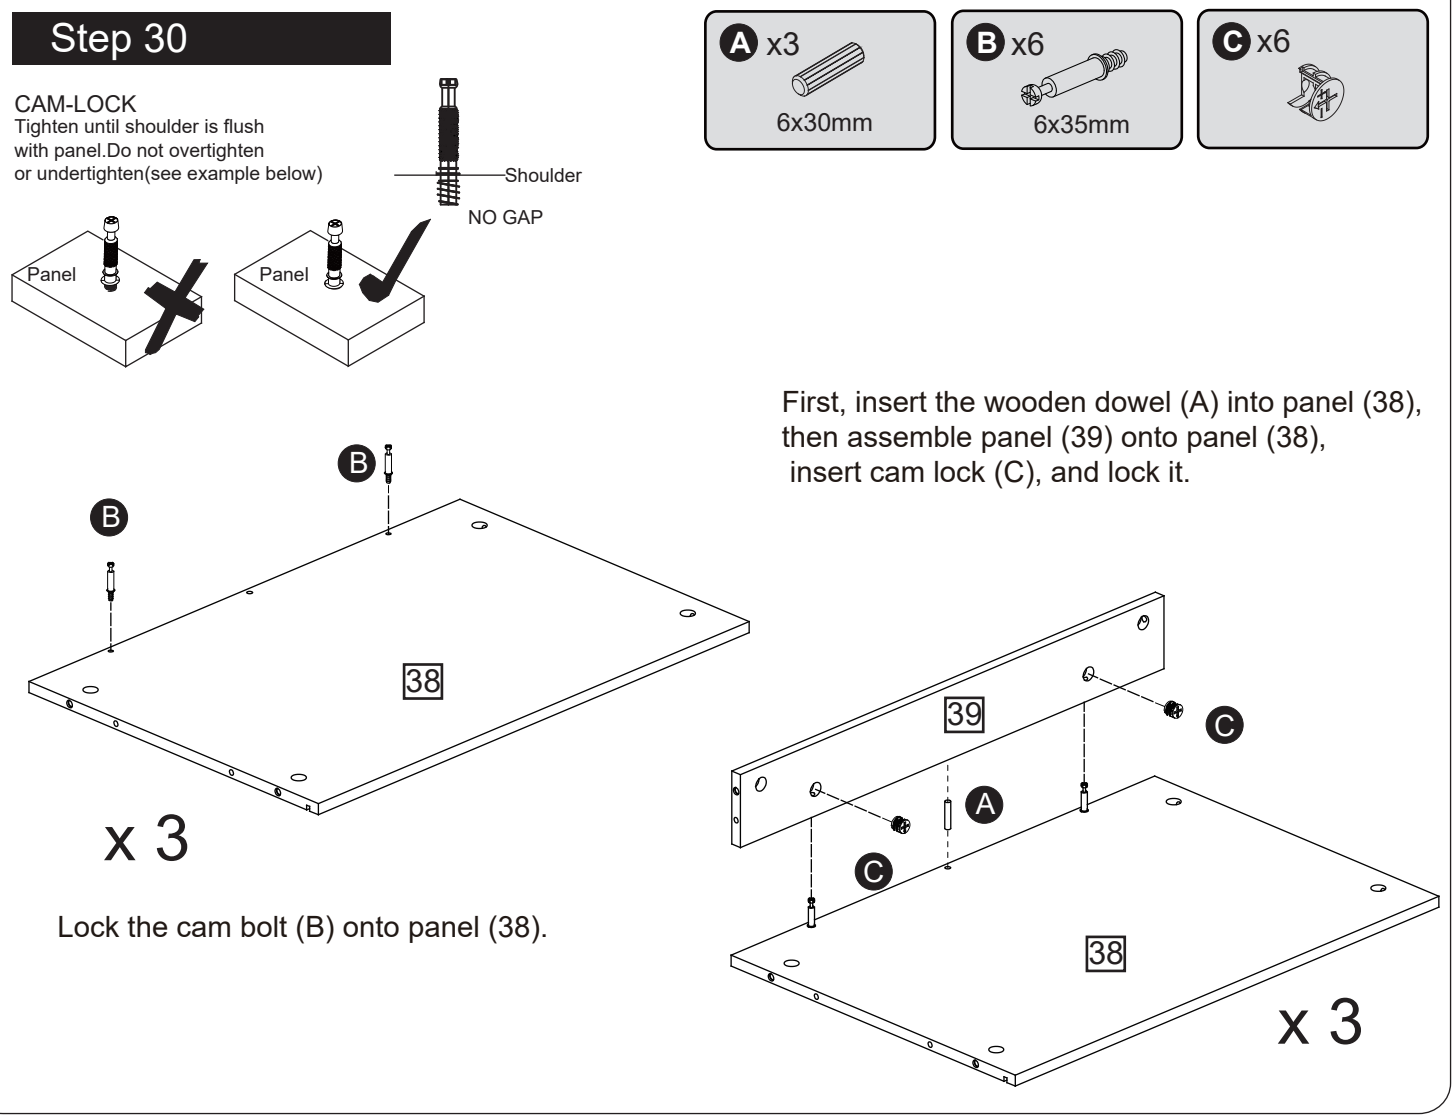


Lock the cam bolt (B) onto panel (38).

Assembly Instructions


Step 31

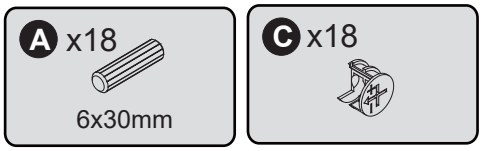

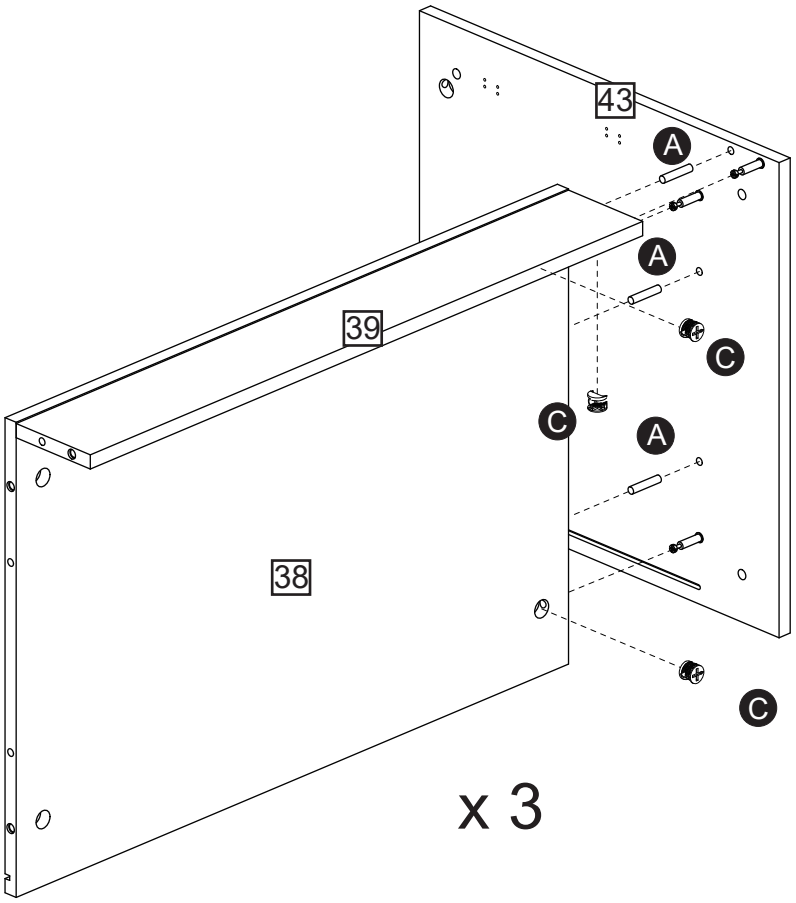

First, insert the wooden dowel (A) into panel (38), (39),then assemble panel (43) onto panel (38) and (39), insert cam lock (C), and tighten.


First, insert the wooden dowel (A) into panel (38), then assemble panel (42) onto panel (38) and (39), insert cam lock (C), and tighten.

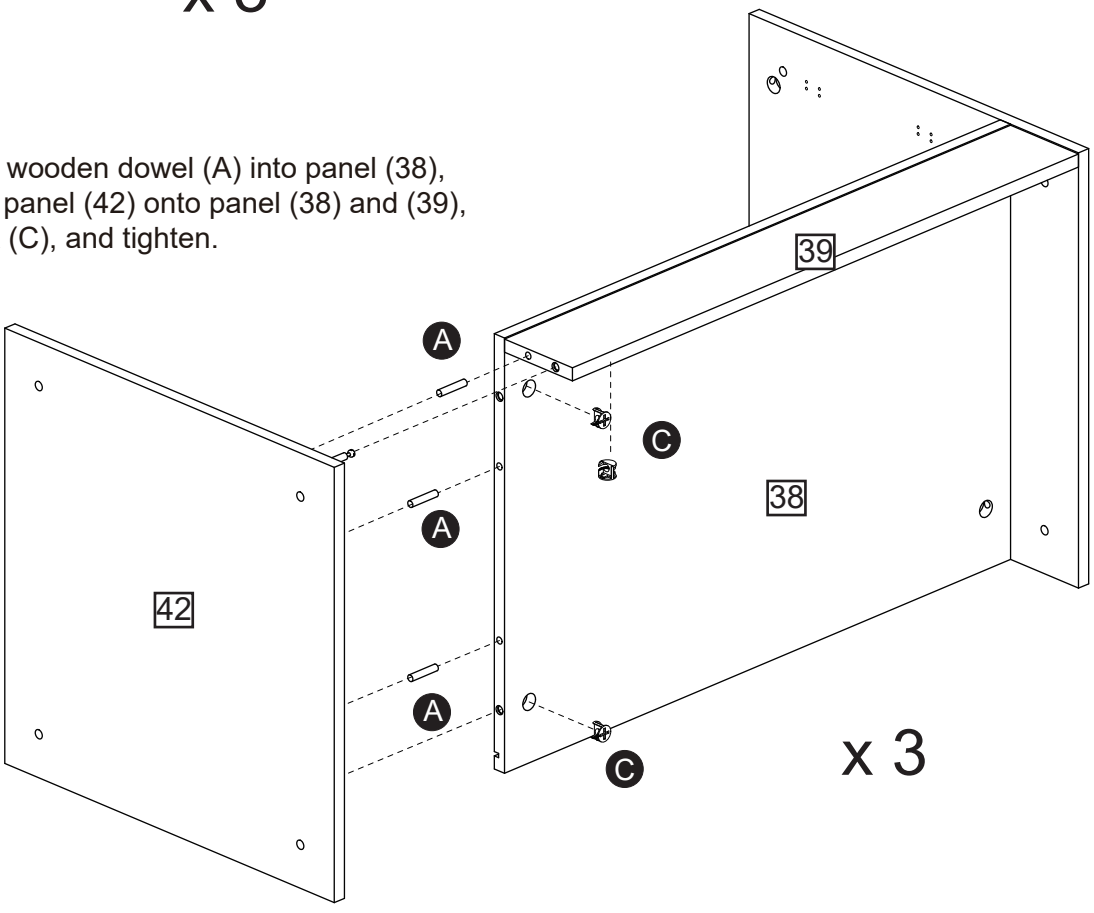


Assembly Instructions

Step 32


Insert panel(41) into the slots of panel(42) and (43).

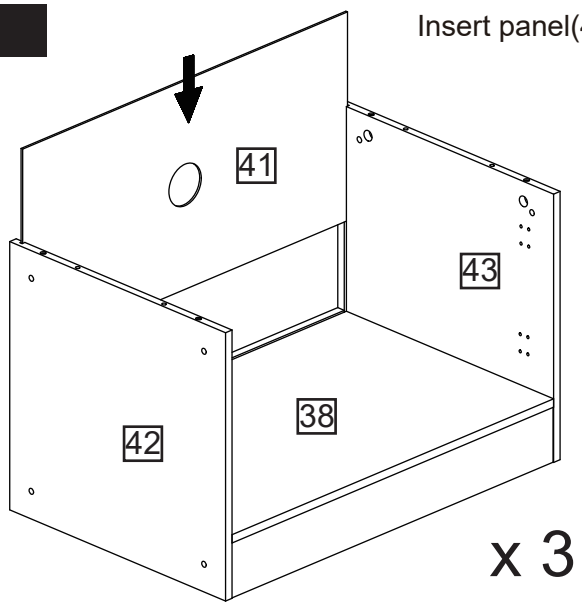


Step 33

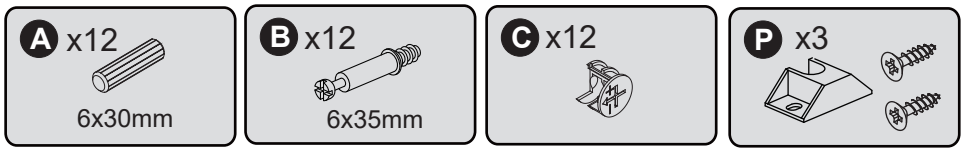



CAM-LOCK
Tighten until shoulder is flush
with panel.Do not overtighten
or undertighten(see example below)

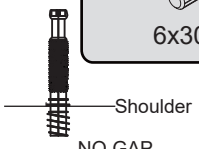

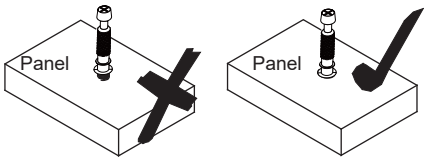

First, insert the wooden dowel (A) into the panel (42) and (43), then assemble the panel (37) onto the panel (42) and (43), insert the cam lock (C), and tighten it.

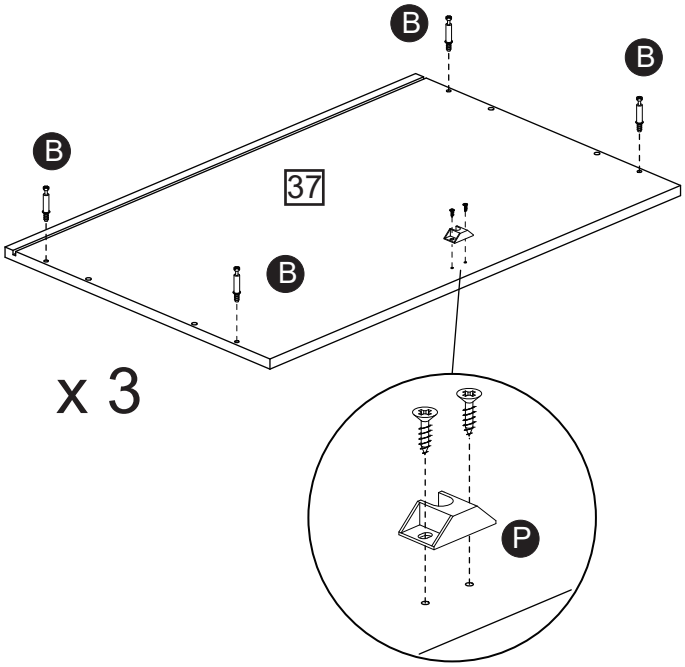

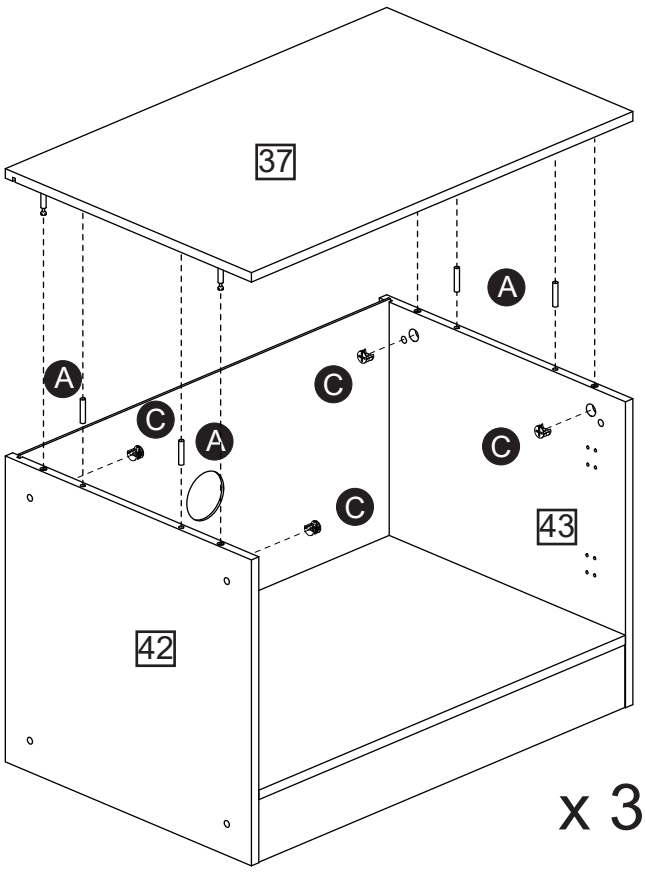

Lock the cam bolt (B) onto the panel (37).

Assembly Instructions


Step 34

T x8

6x12mm

V x8

7.8x18mm

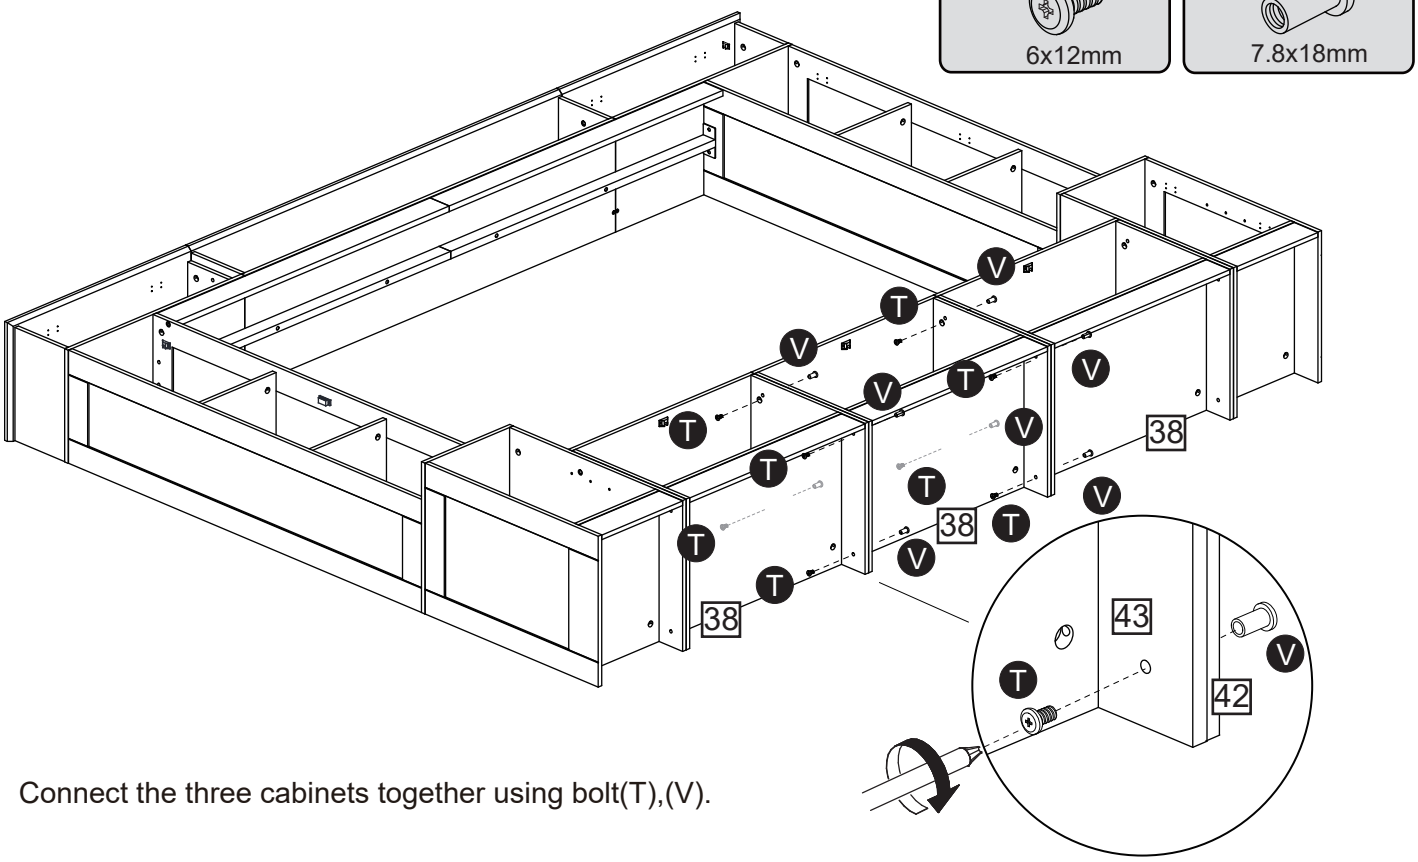

Connect the three cabinets together using bolt(T),(V).

Step 35


T x8

6x12mm

V x8

7.8x18mm

Connect the three cabinets together using bolt(T),(V).

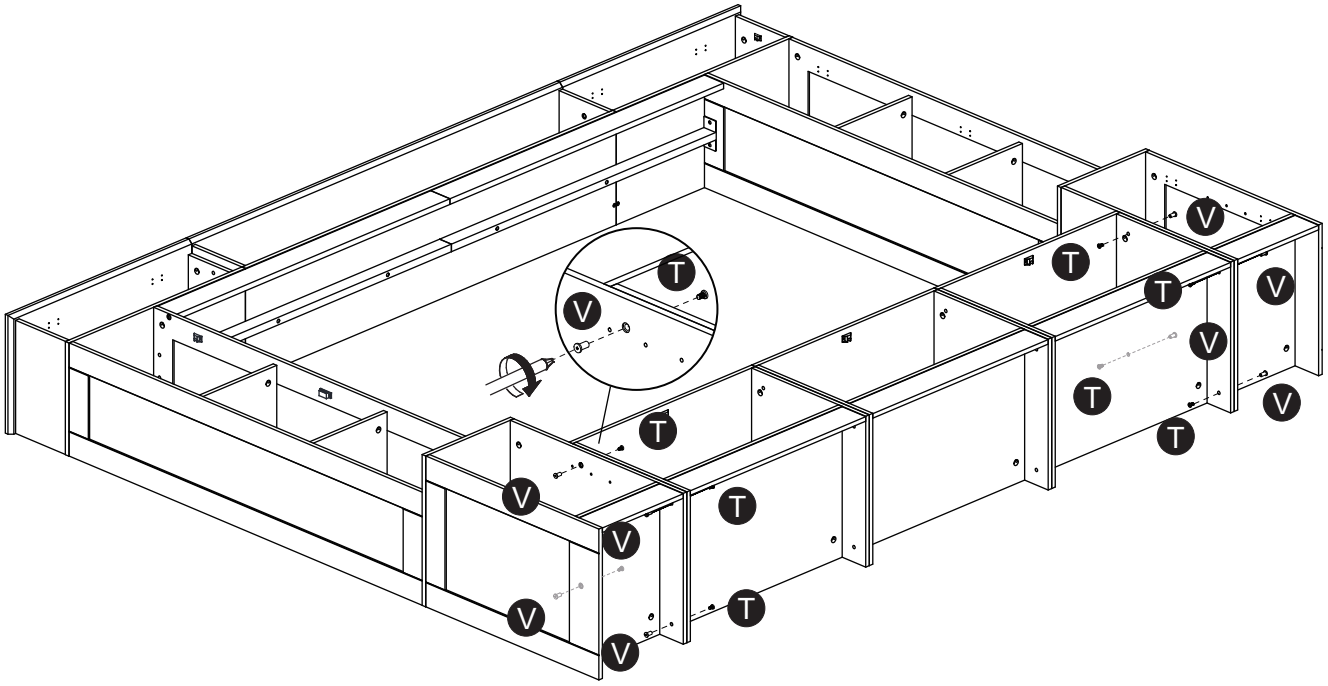

Assembly Instructions

Step 36

E x52 4x12mm


H x24 4x16mm

I x12


N x26

Z x2


a x4 3x12mm

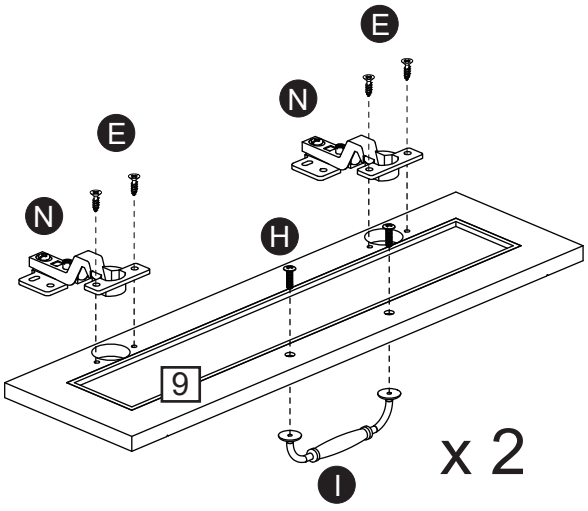


x 2

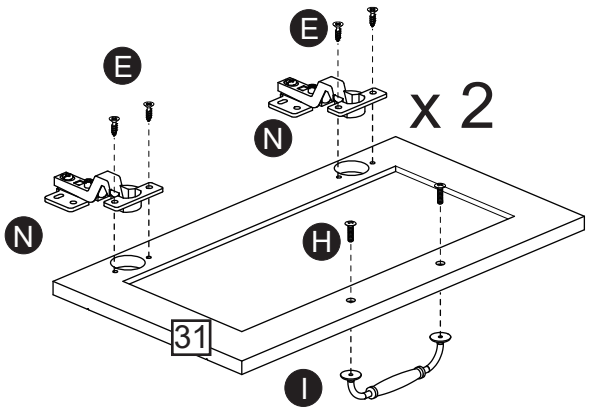

x 2

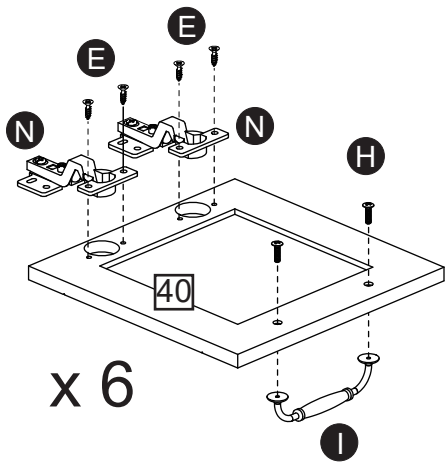



x 6

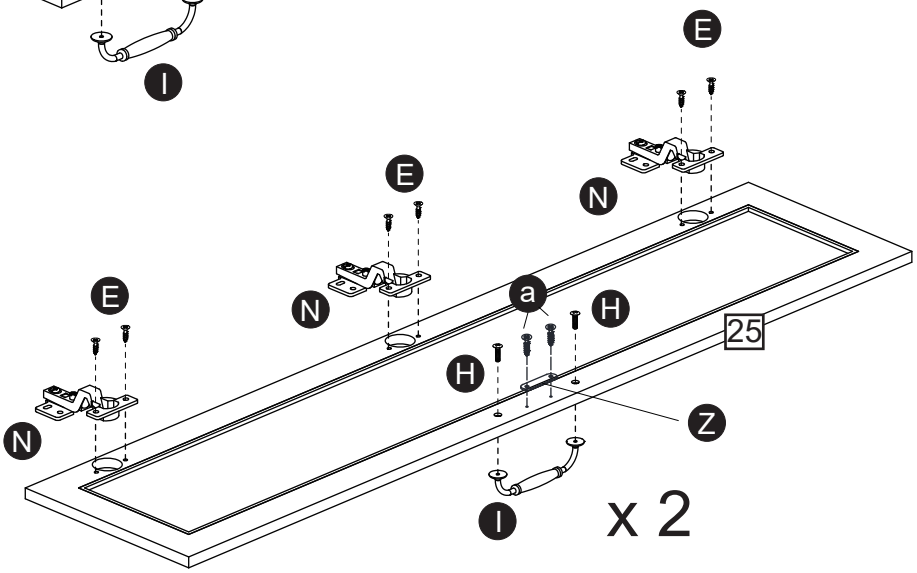


x 2

Use bolt (H) to assemble handel (I) onto panel (9), (25), (31), (40). Use screw (E) to assemble hinge (N) onto panel (9), (25), (31), (40).

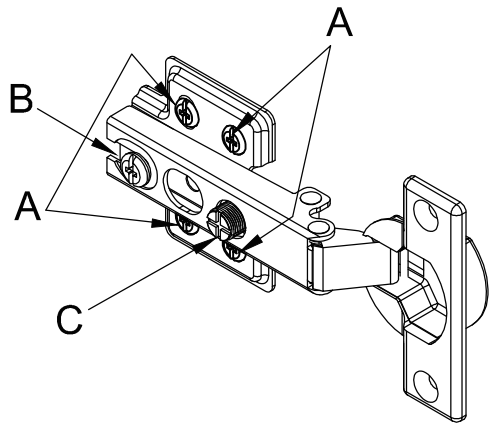


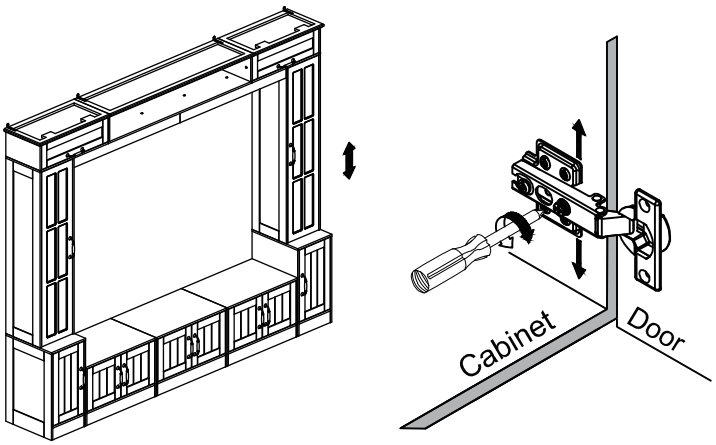

To adjust the vertical height.
Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

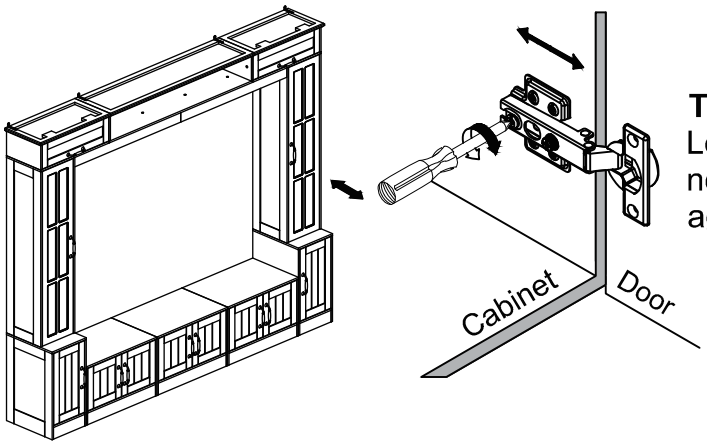


To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

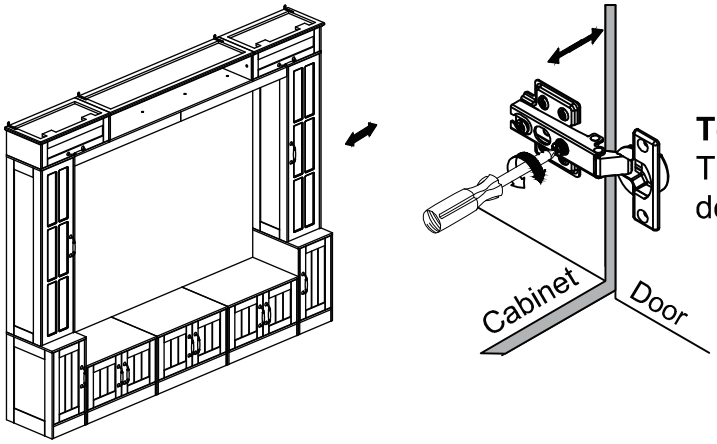

To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

Assembly Instructions

Step 37

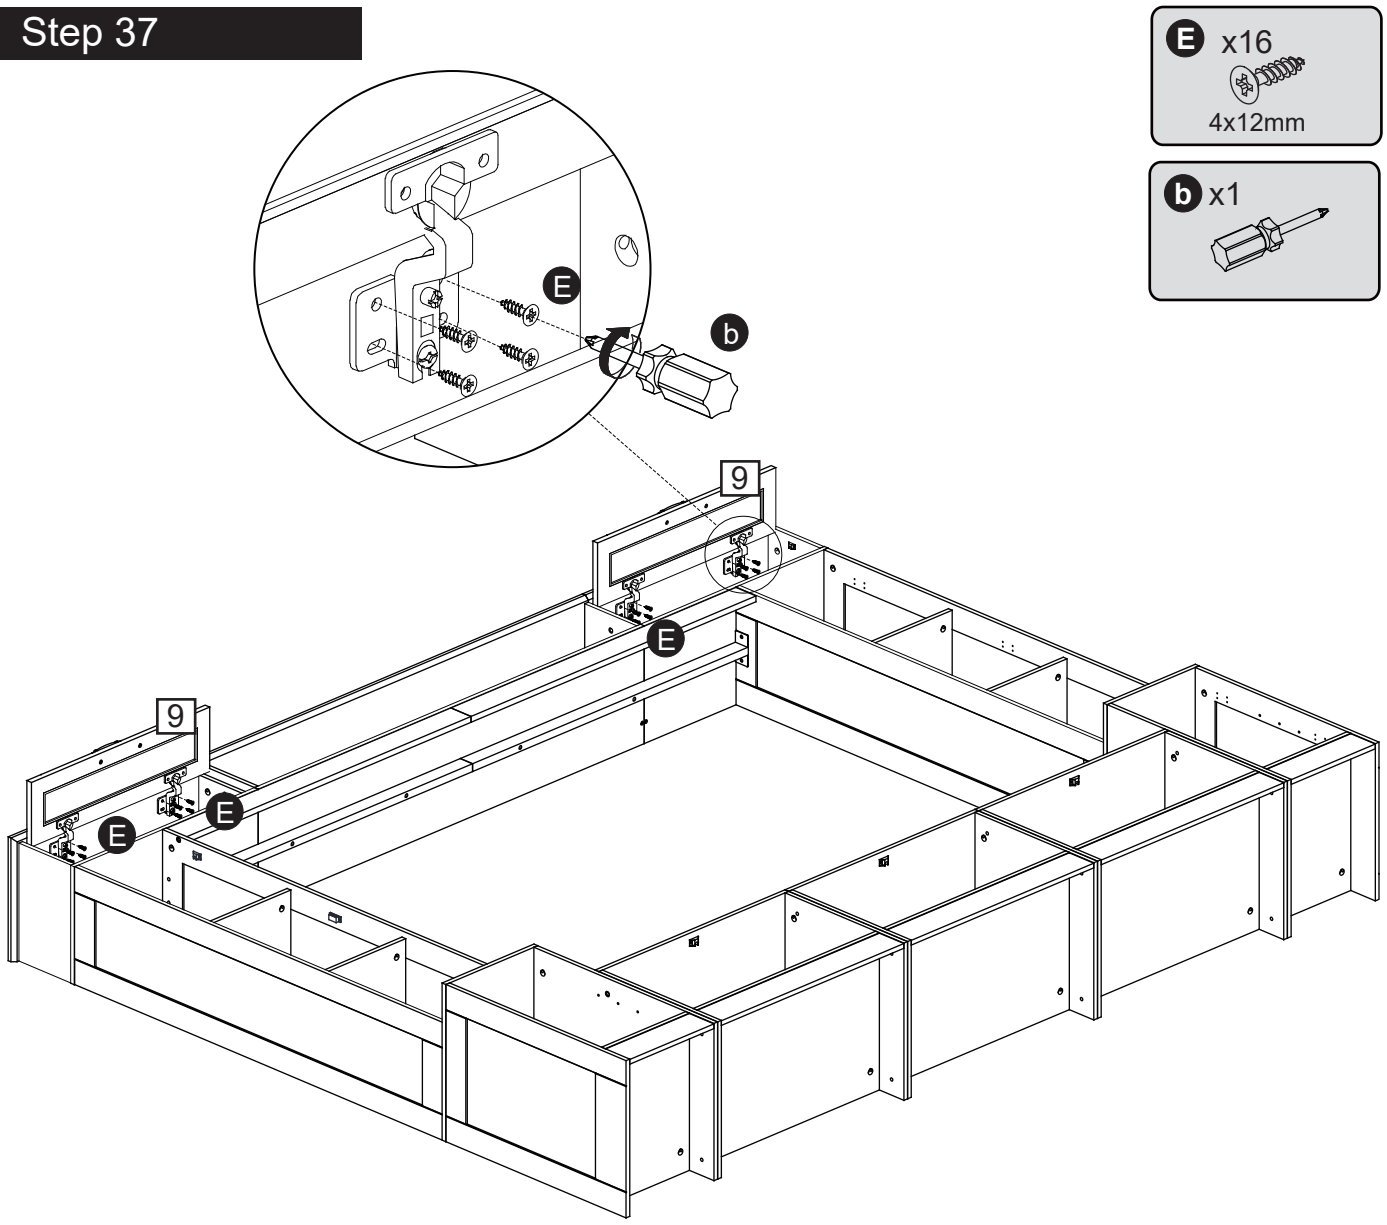

Use screw(E) to assemble panel(9) onto the cabinet.


Assembly Instructions

Step 38

E x24



4x12mm

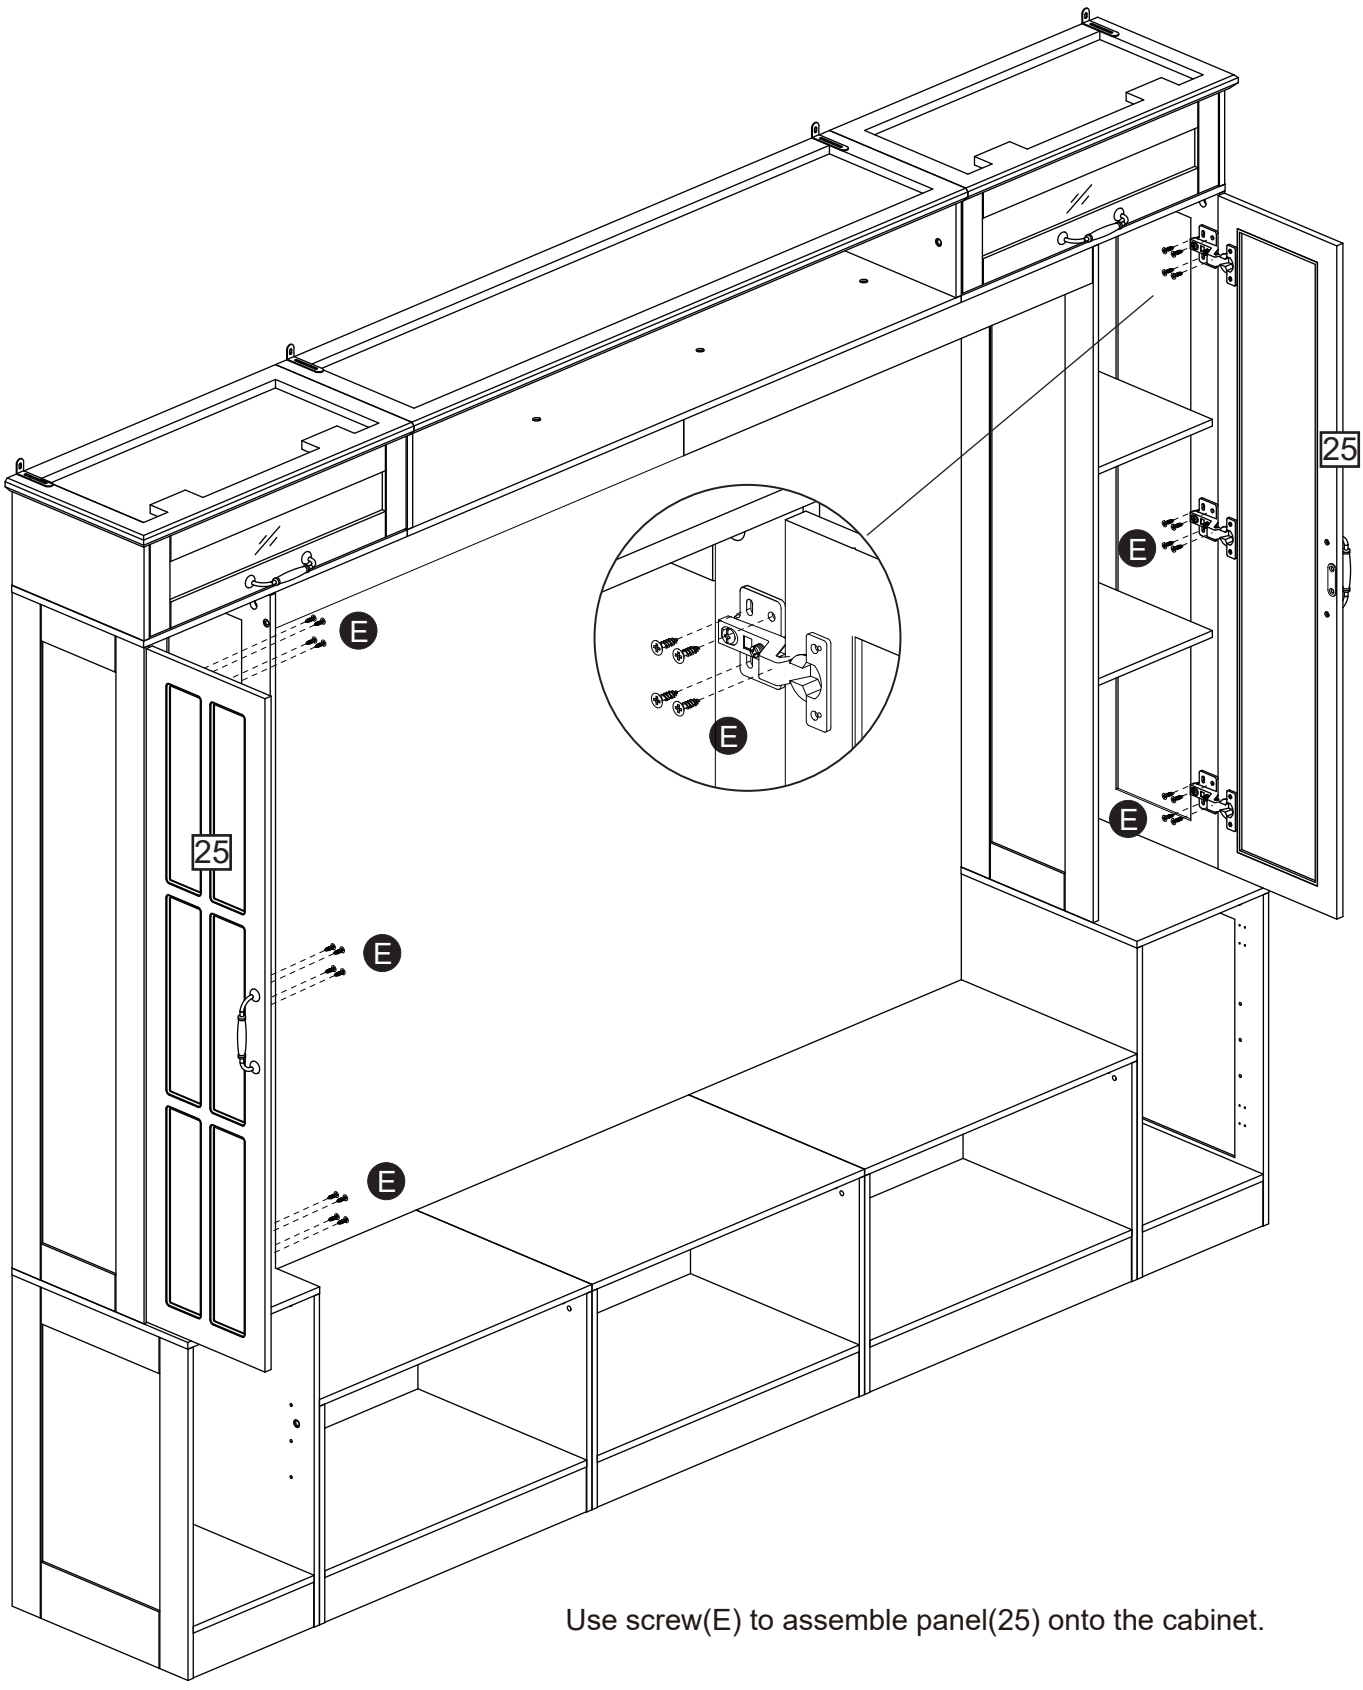

Use screw(E) to assemble panel(25) onto the cabinet.

Assembly Instructions


Step 39

E x48




4x12mm

Use screw(E) to assemble panel(40) onto the cabinet.

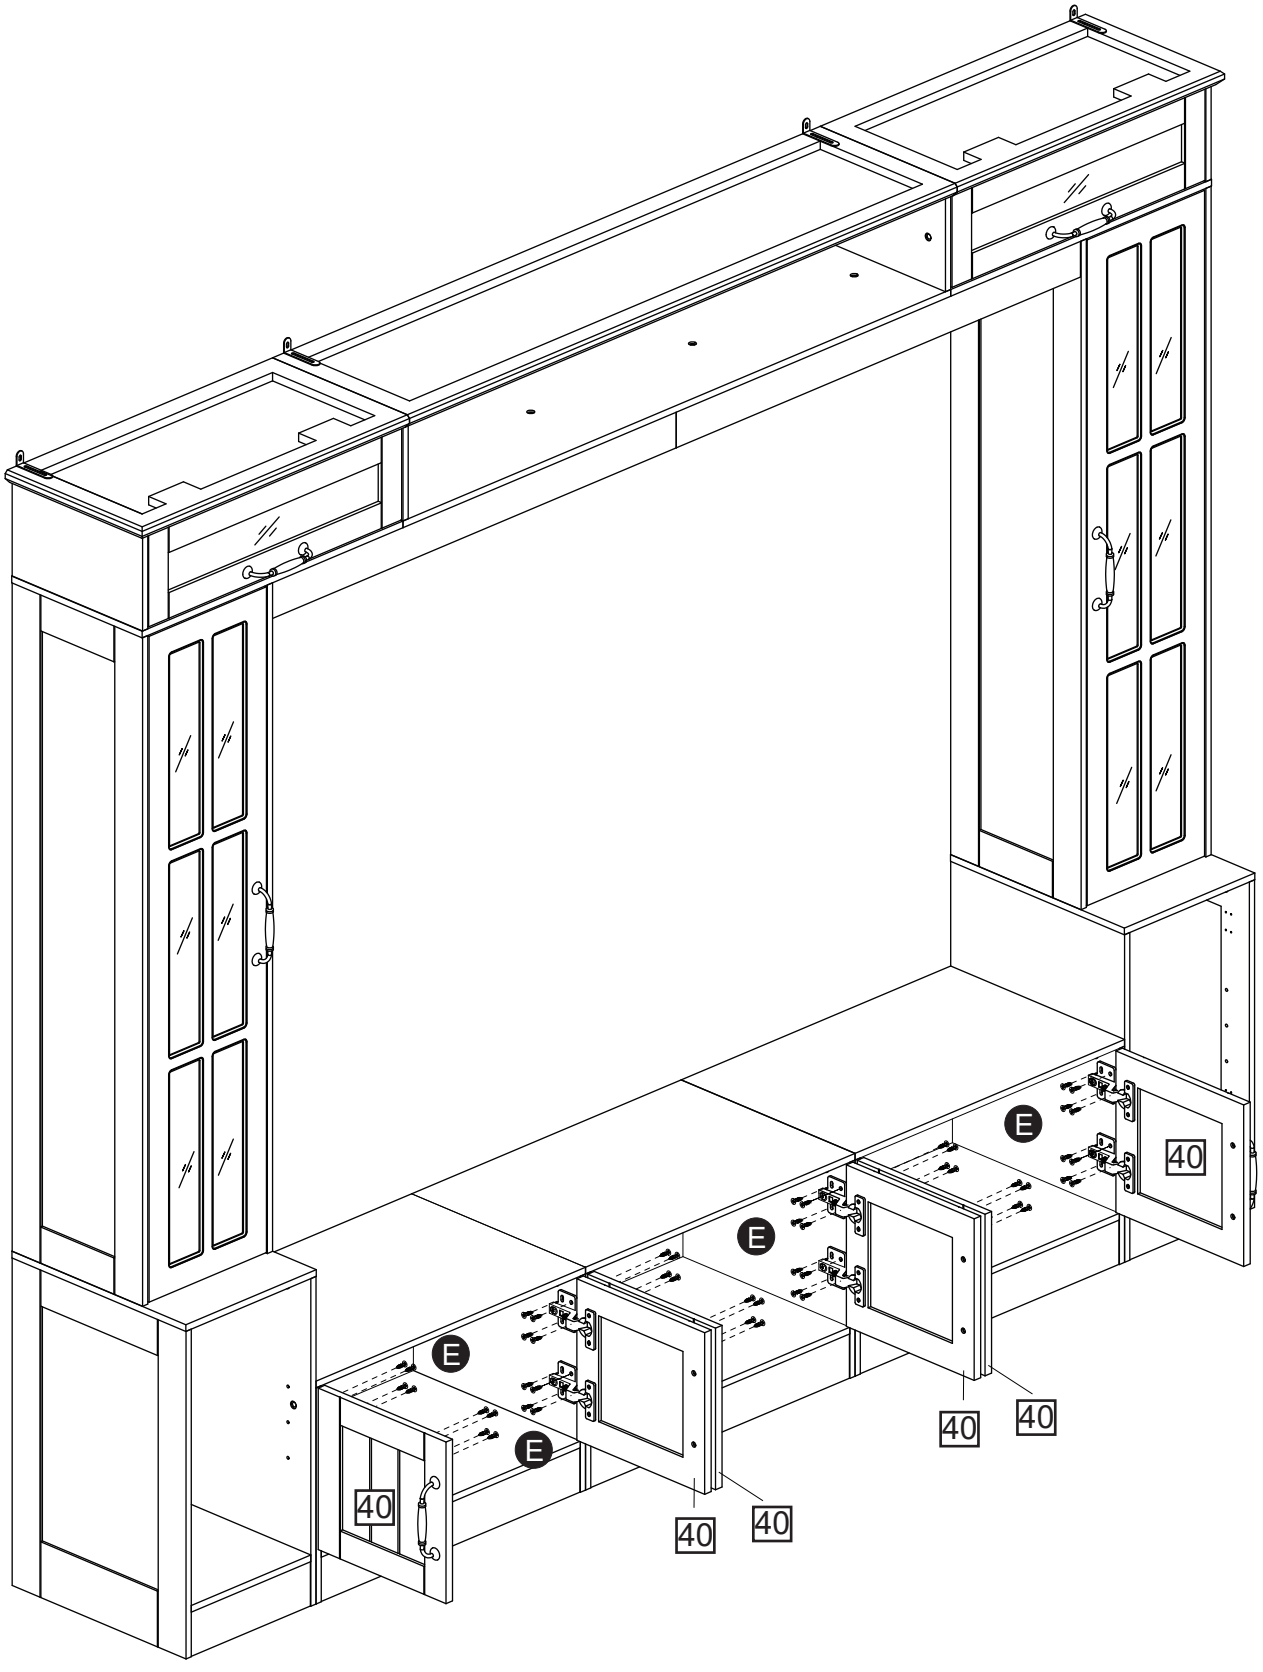


Assembly Instructions

Step 40

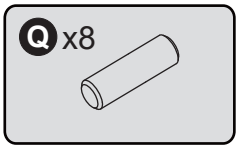

Insert the tray (Q) into panels (33), (34), (35), (36), and then assemble panel (29) into the cabinet.

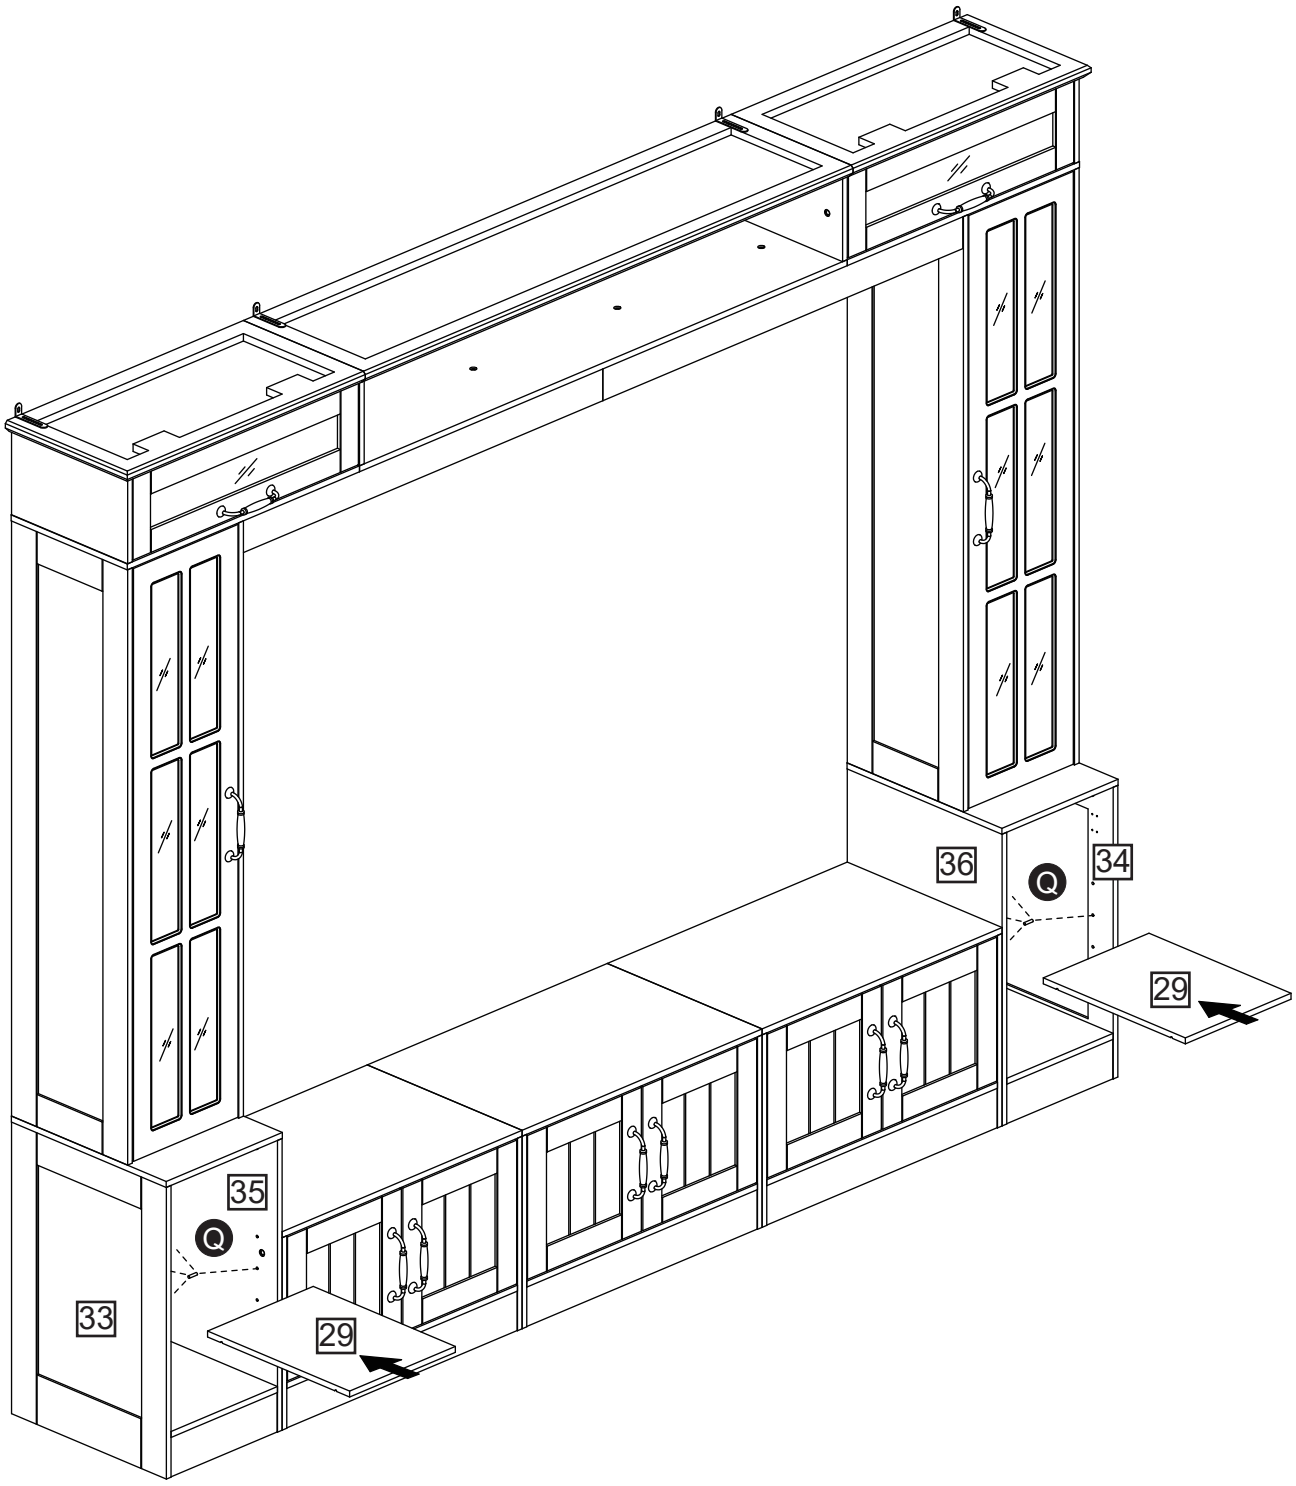


Assembly Instructions

Step 41

E x16
4x12mm

R x8

Use screw(E) to assemble panel(31) onto the cabinet. Assemble part(R) as shown in the figure.

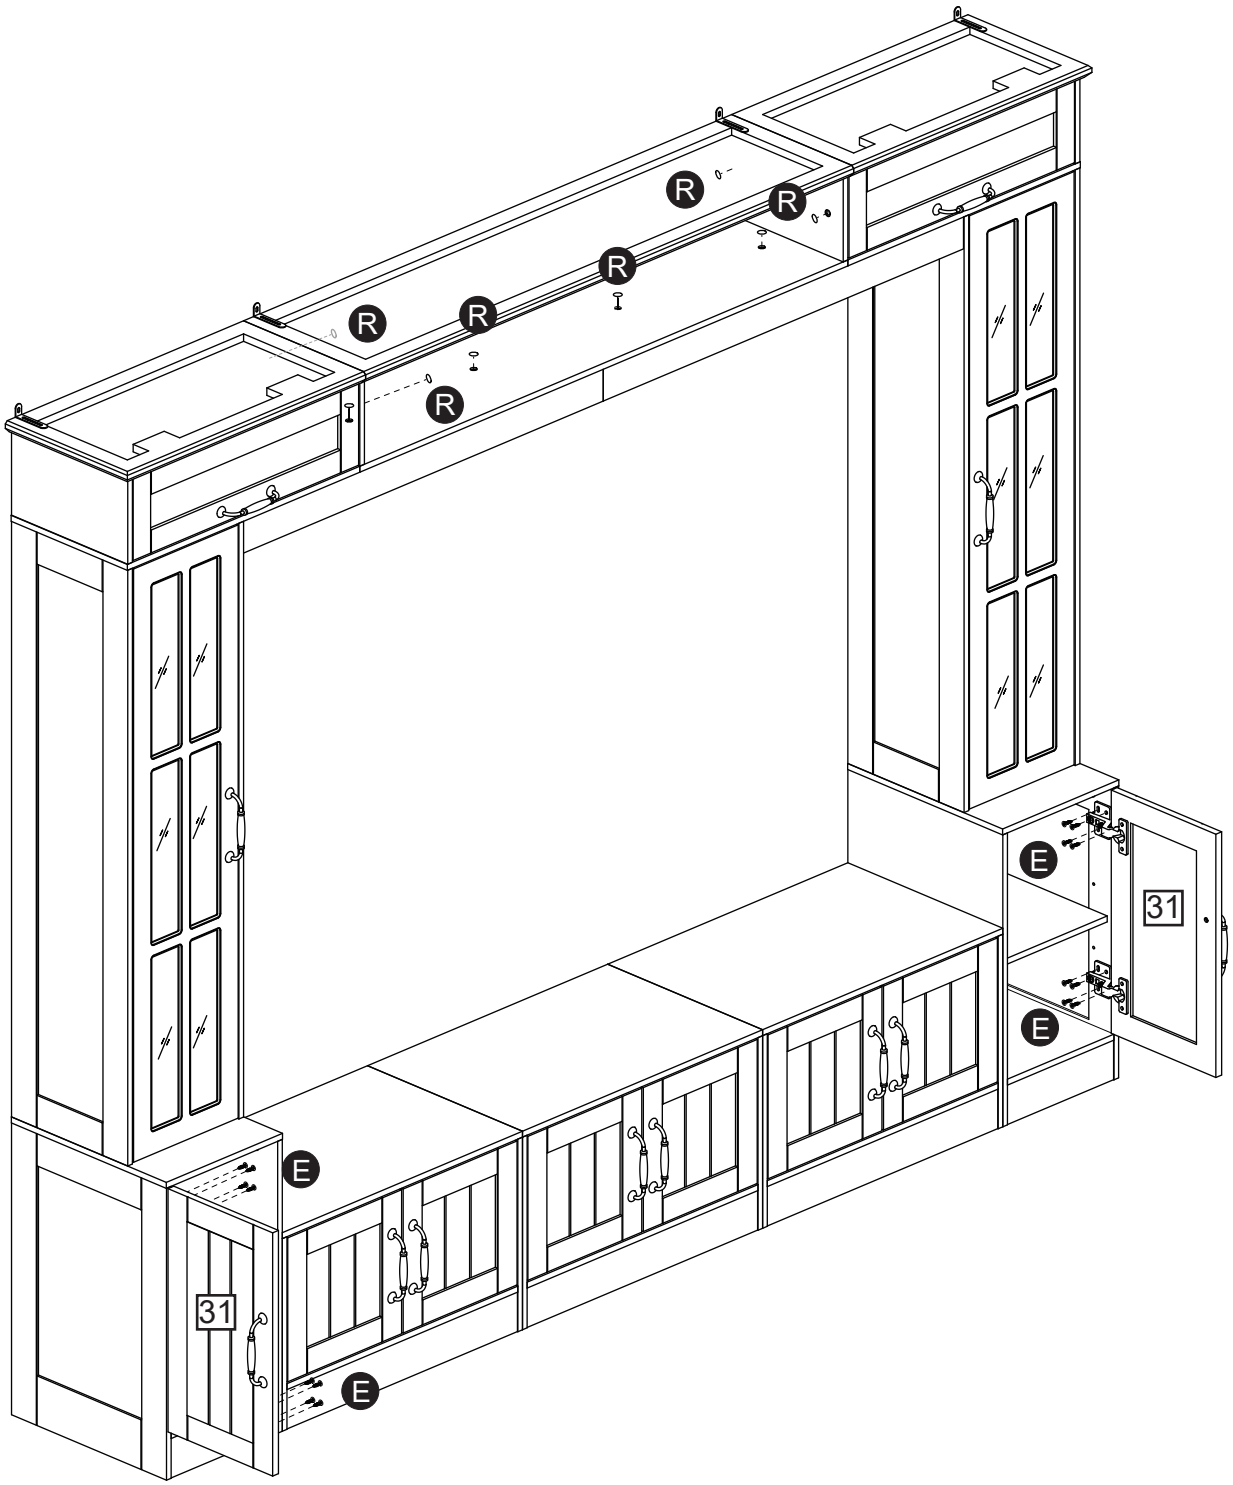

Assembly Instructions

Step 42

F x8




2.5x10mm

K x32




Assemble screw(F) and part(K) onto the backplate.

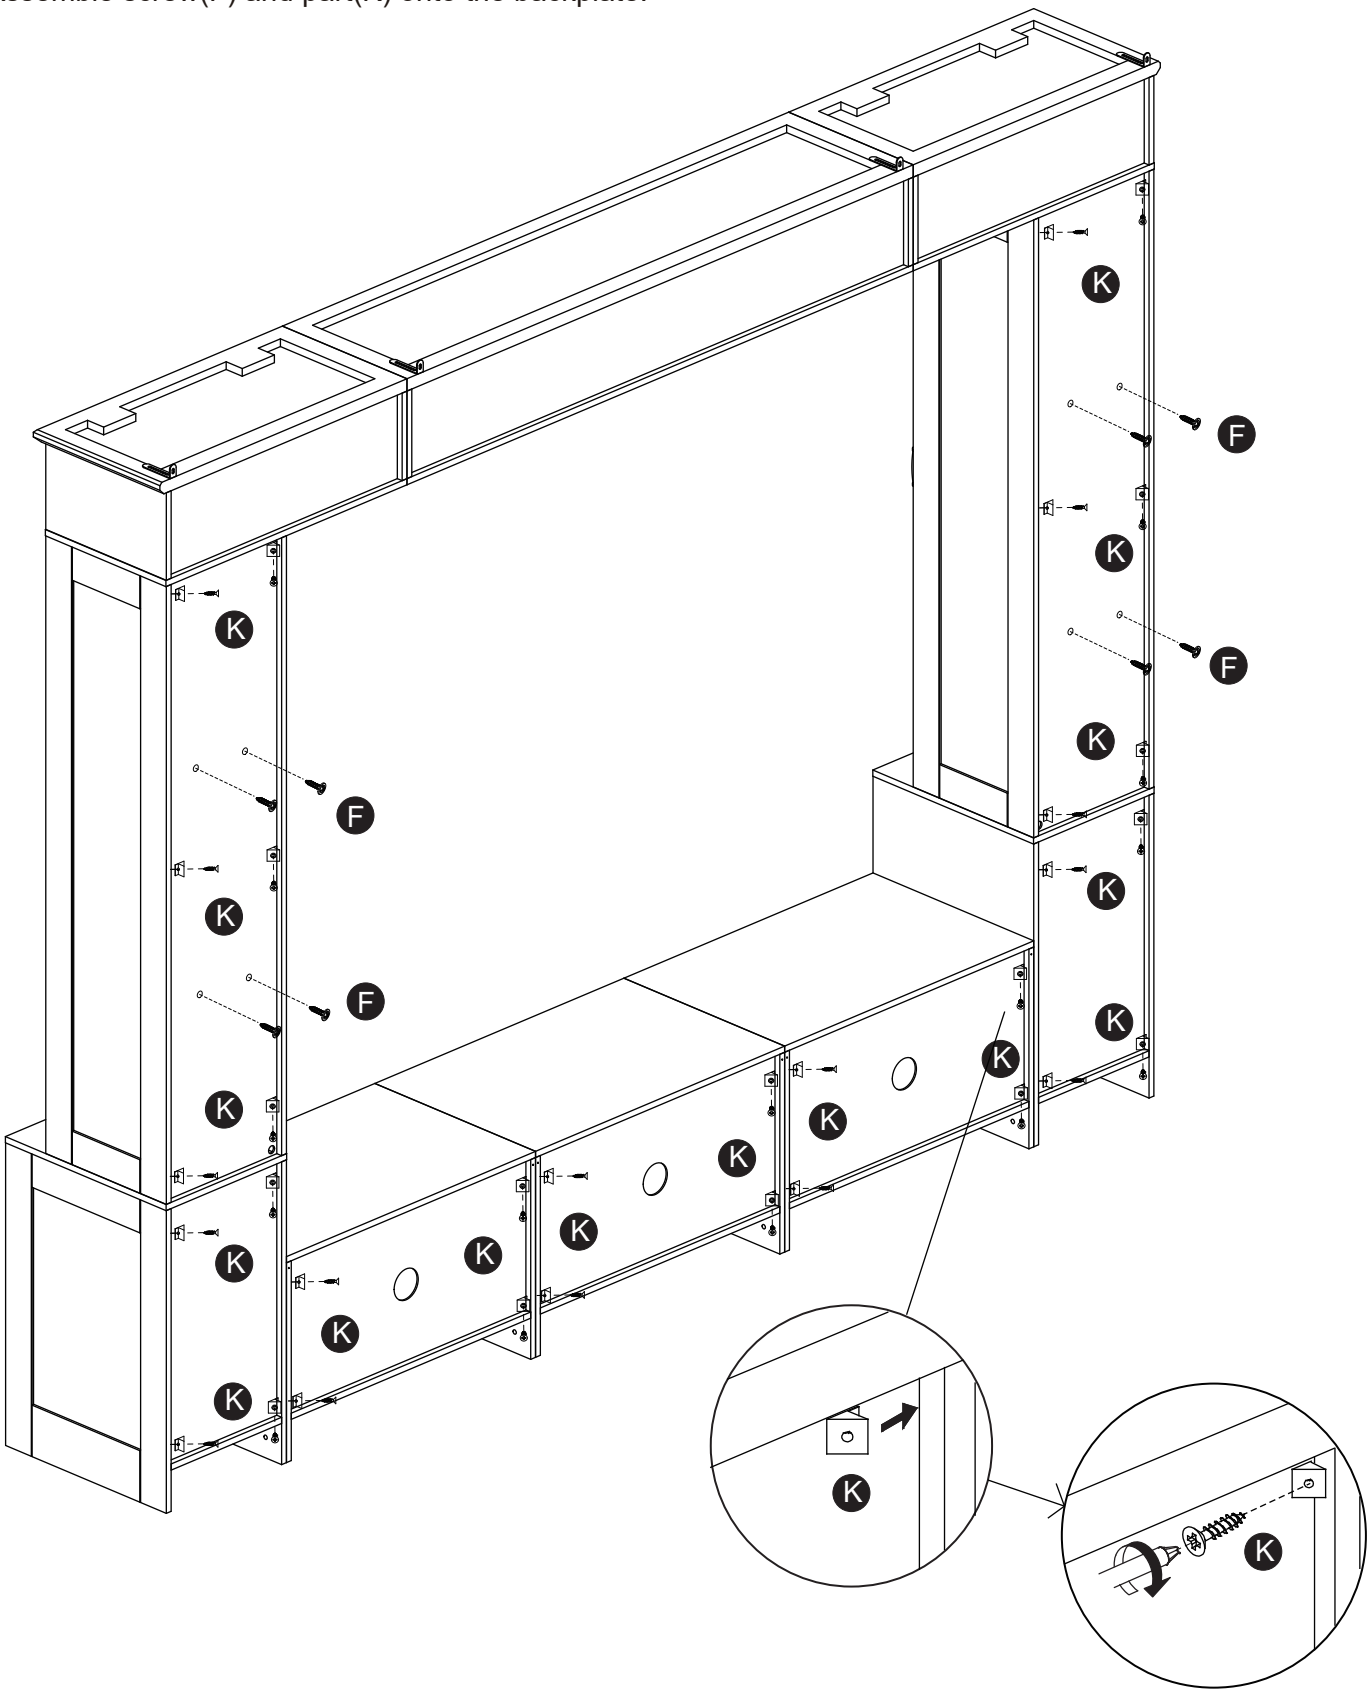


Assembly Instructions

Step 43

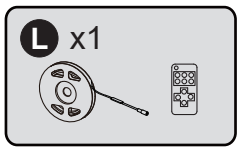



Insert the LED strip (L) into the cabinet.

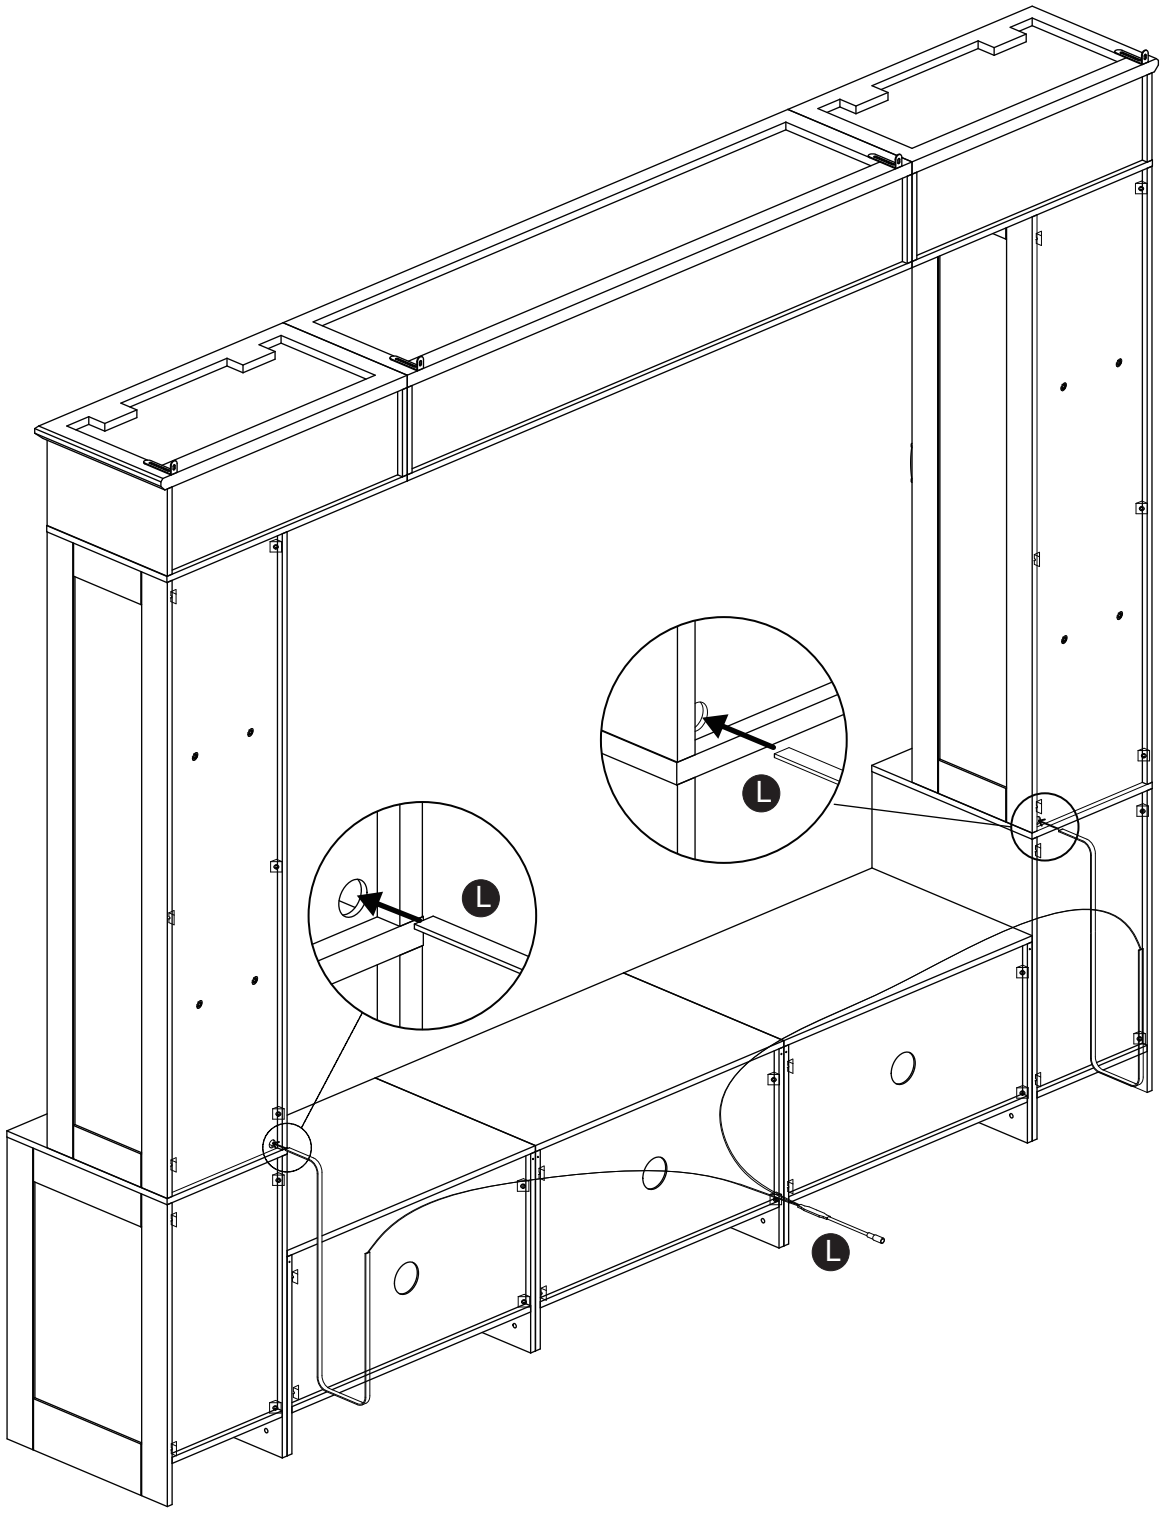

Assembly Instructions

Step 44

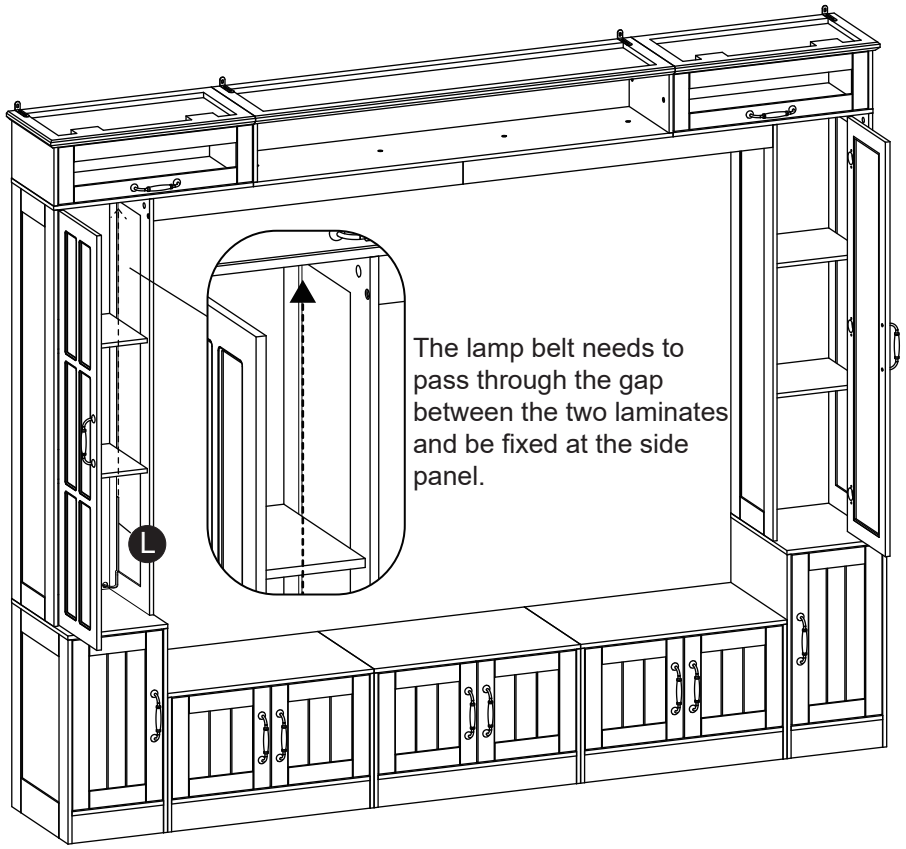


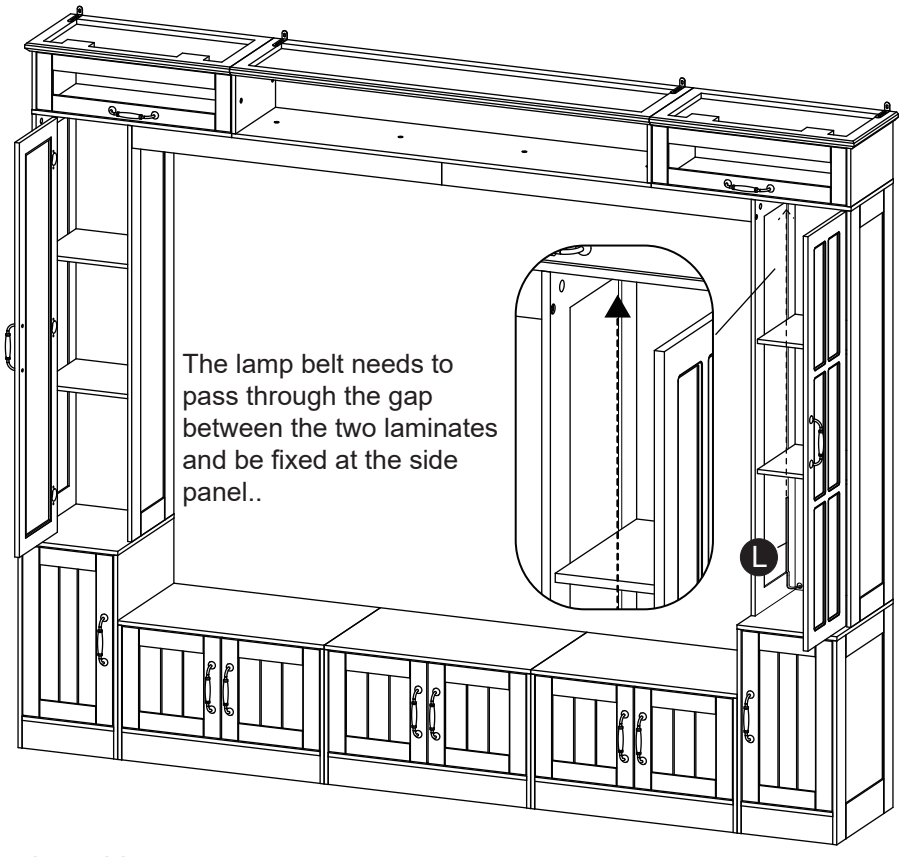


Insert the LED strip (L) into the cabinet.

Assembly Instructions

Step 45

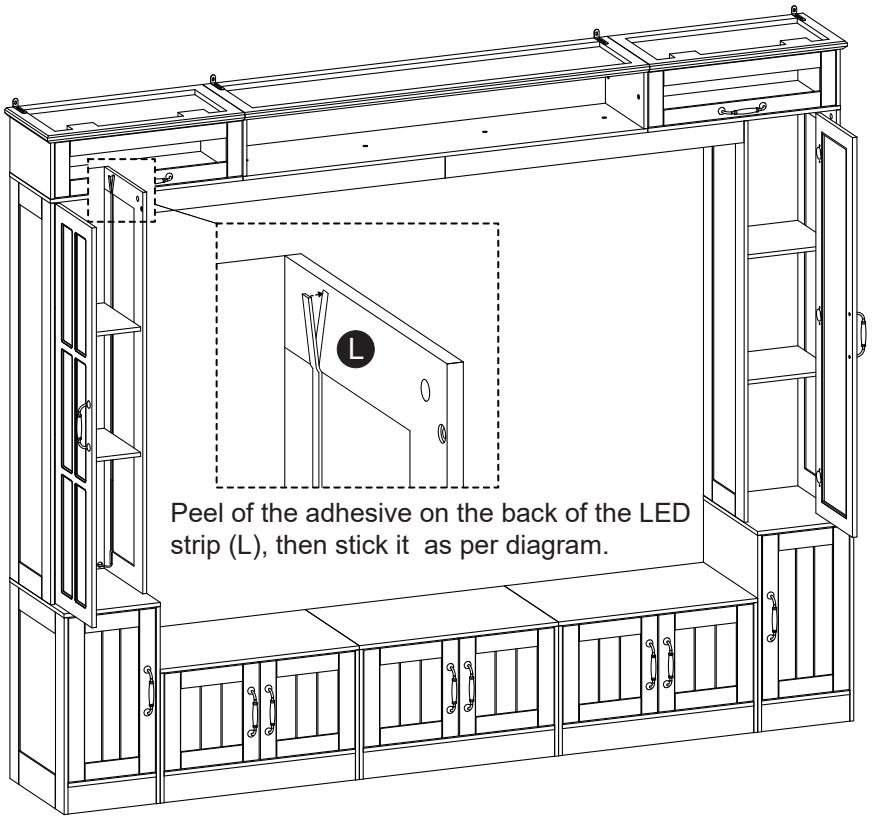


Peel of the adhesive on the back of the LED strip (L), then stick it as per diagram.

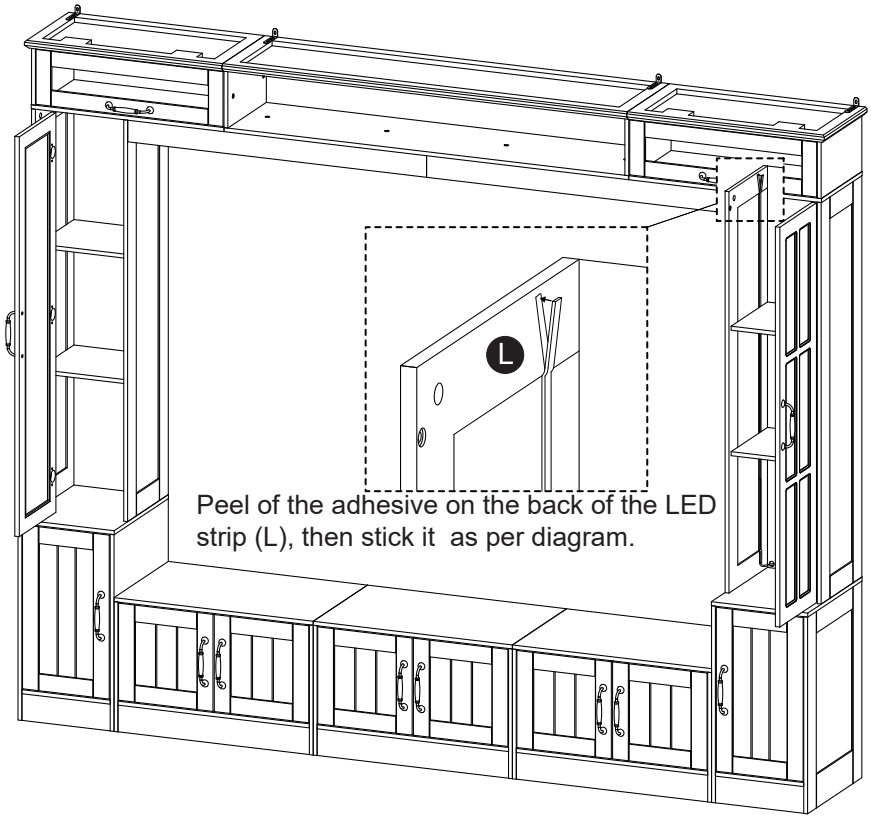


Peel of the adhesive on the back of the LED strip (L), then stick it as per diagram.


Assembly Instructions

Step 46

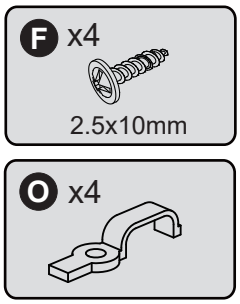

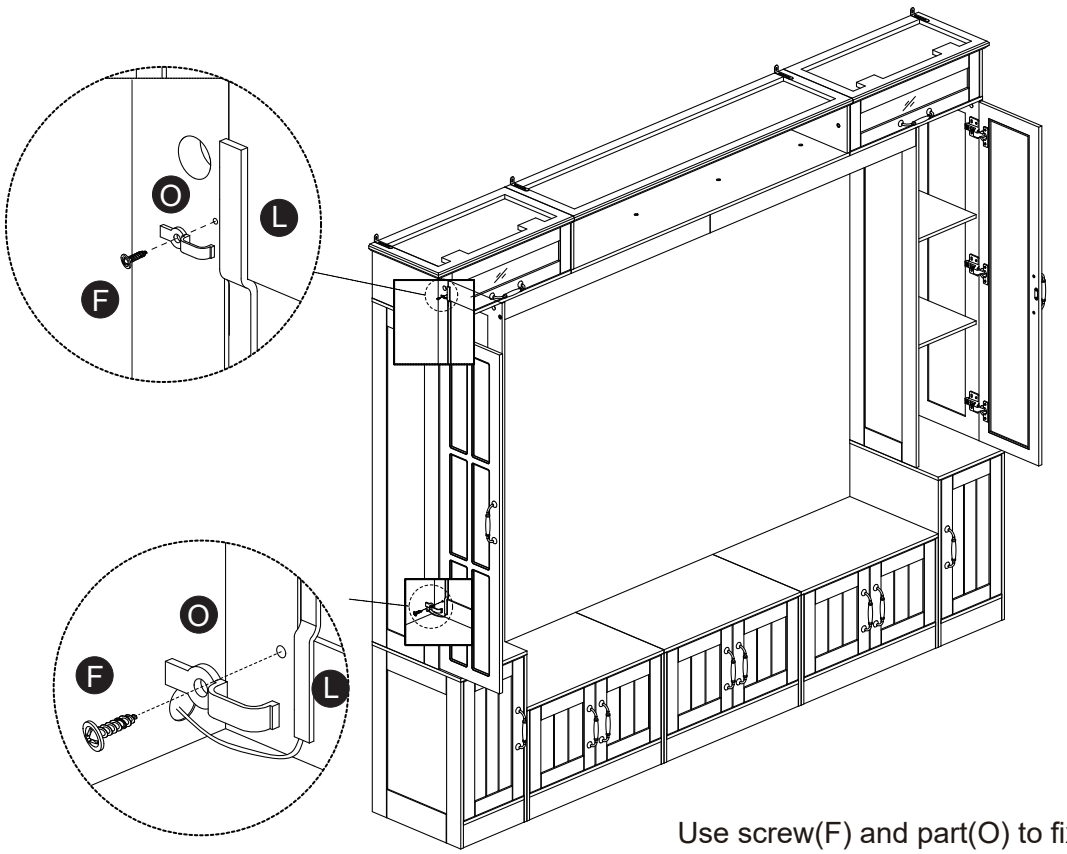

Use screw(F) and part(O) to fix the LED strip.

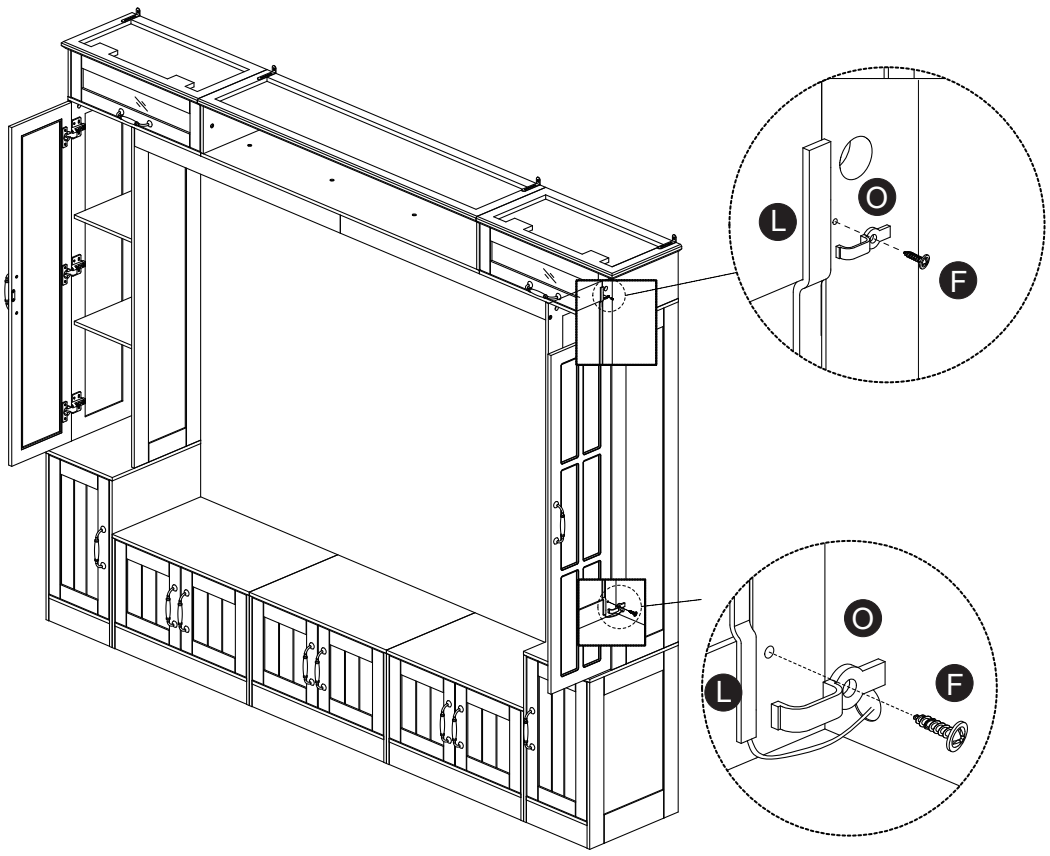

Assembly Instructions


Step 47

F x4




2.5x10mm

O x4





Use screw(F) and part(O) to fix the LED strip.

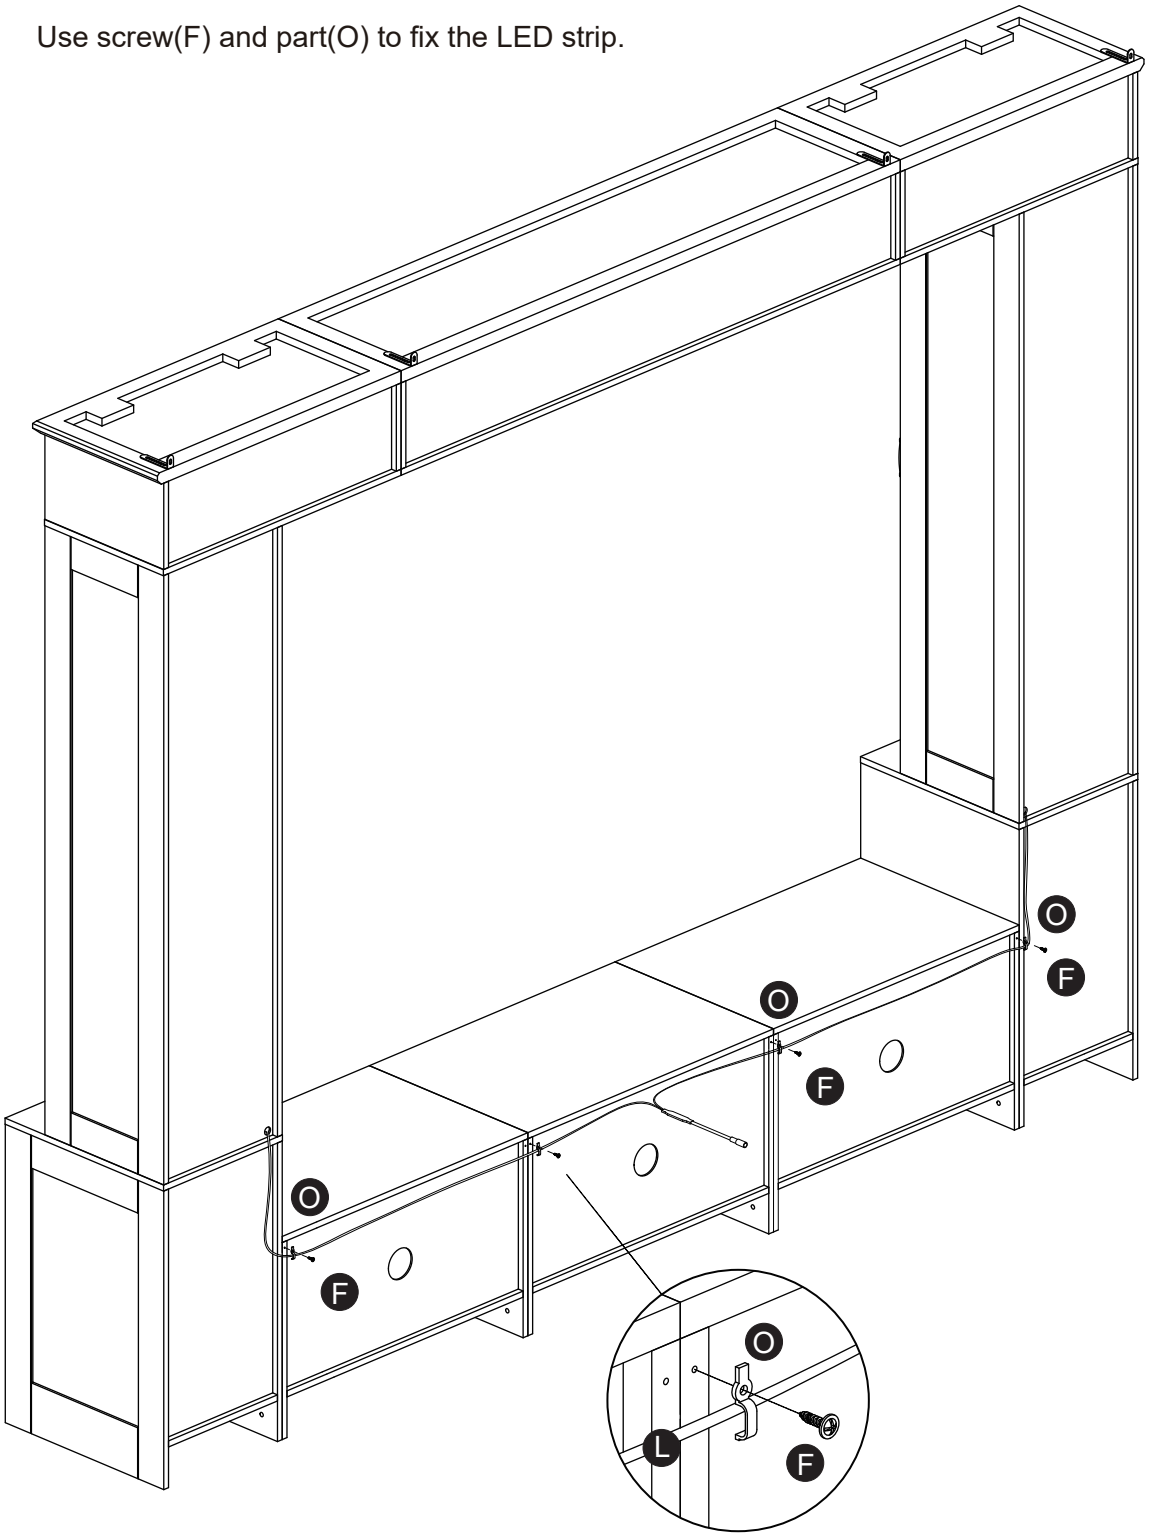


Assembly Instructions

Step 48

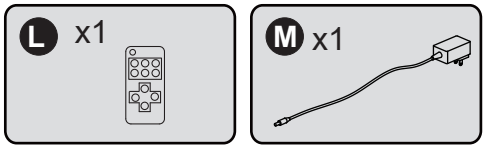

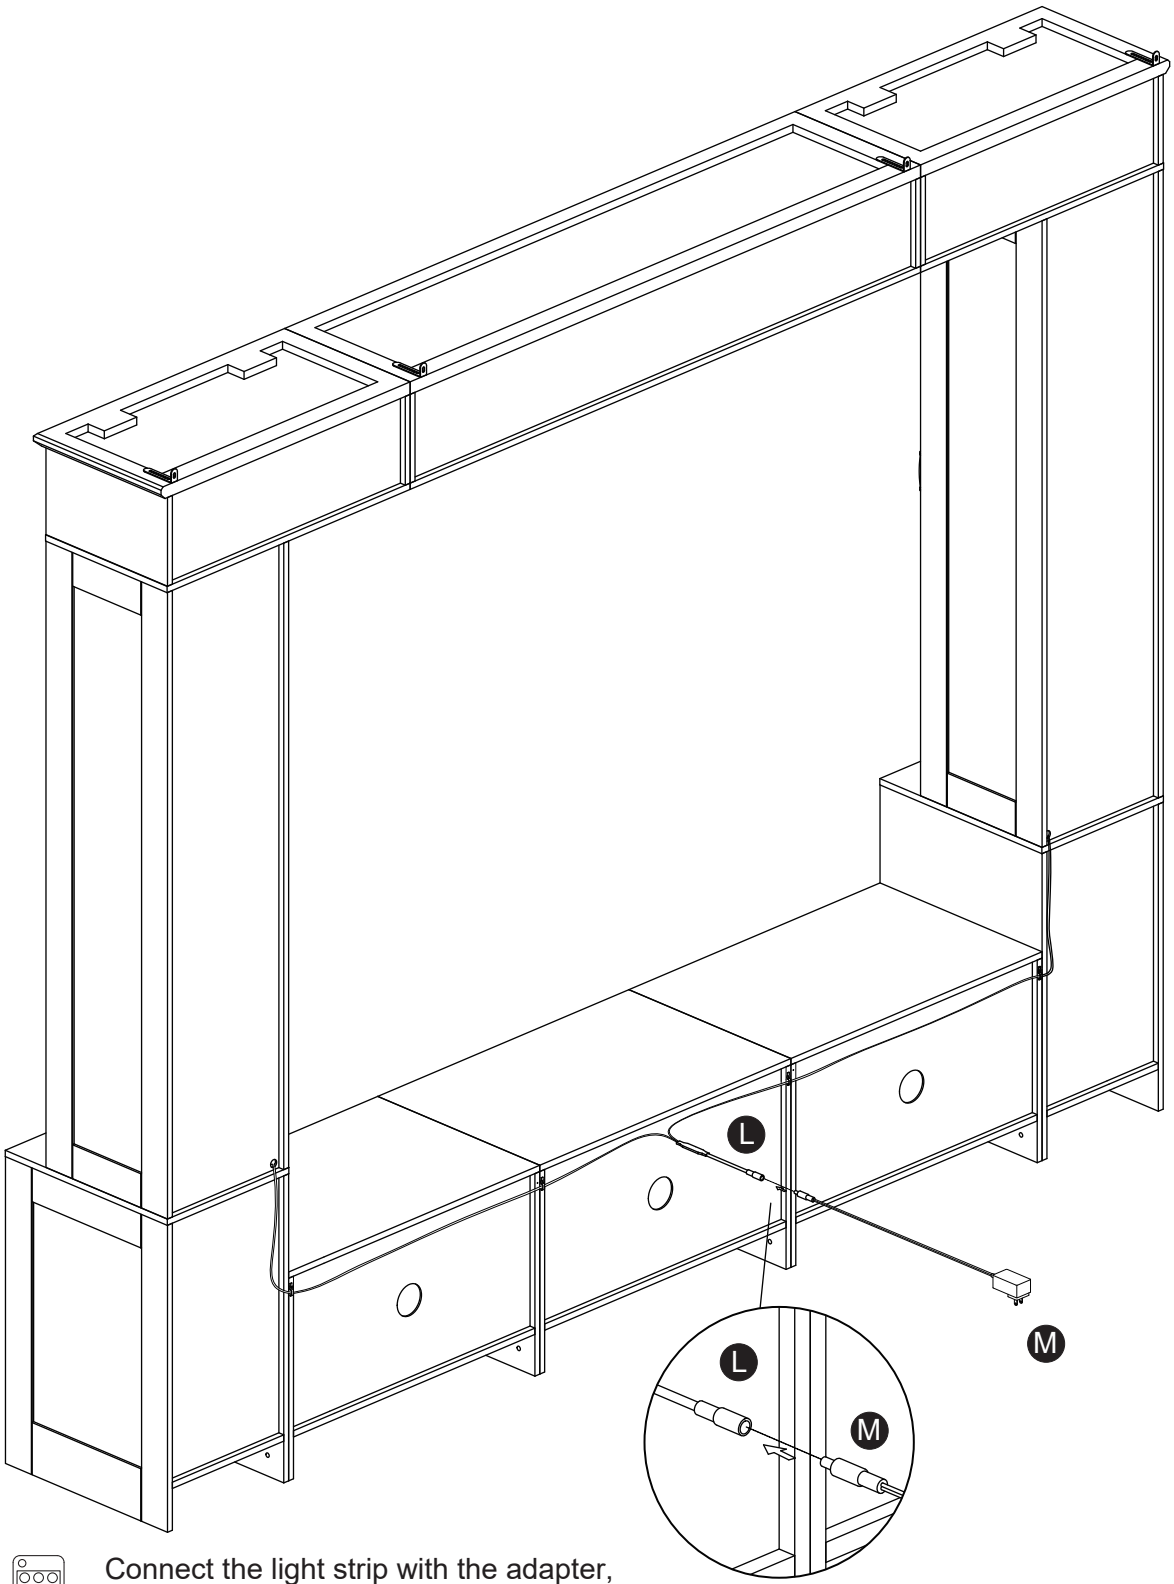





Connect the light strip with the adapter, then control the light with the remote control provided.

Connect part (M) and the light strip (L).

Assembly Instructions


Step 49

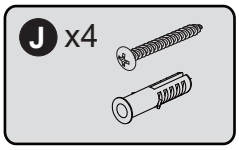

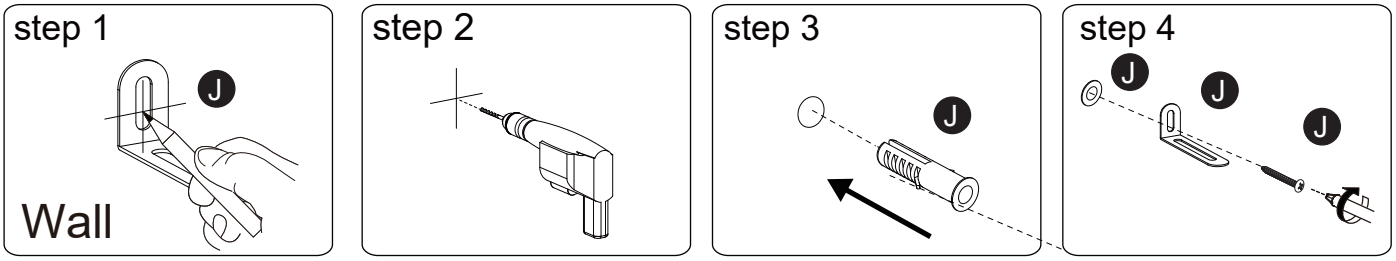

Assemble the cabinet onto the wall.

Do not fully tighten wall fixing brackets until it's ready to be fixed to the wall.

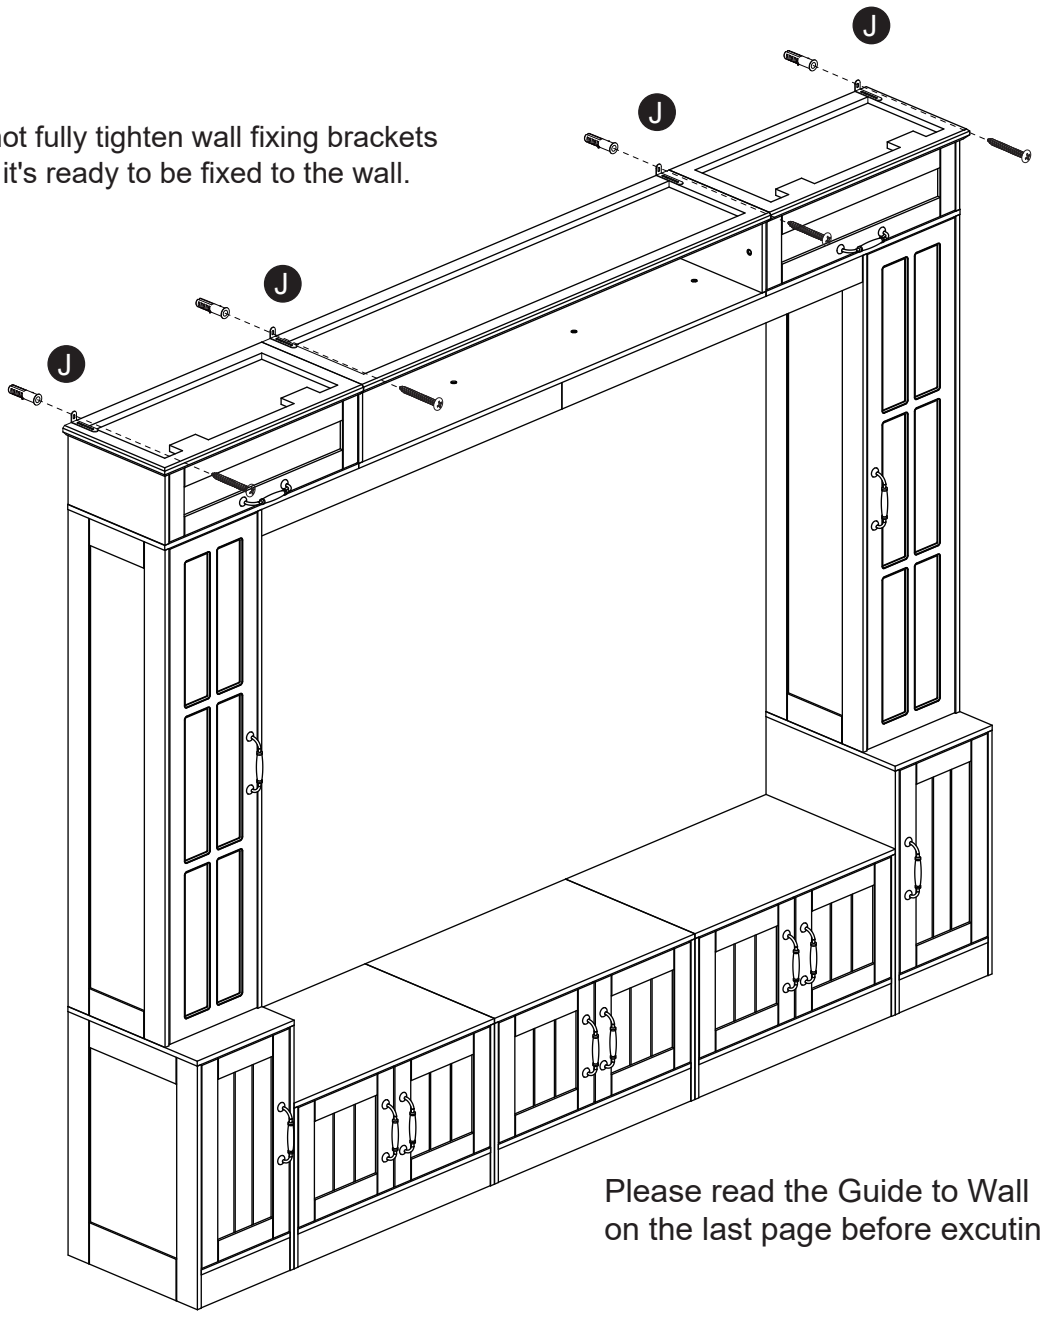

Please read the Guide to Wall Mounting & Fixings on the last page before excuting this step.

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.

Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for **supporting your unit. Consult a qualified tradesperson if you** are unsure.


Hints:

1: General rule: always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

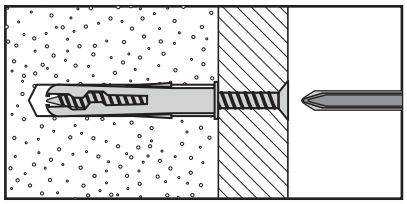


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.3 "Cavity Fixing" wall plug

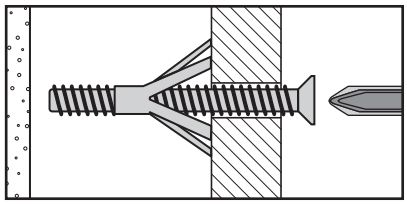


For use with plasterboard partitions or hollow wooden doors.

No.5 "Hammer Fixing" wall plug

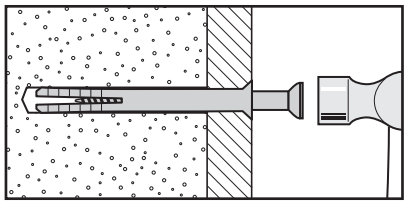


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2 " Plasterboard" wall plug

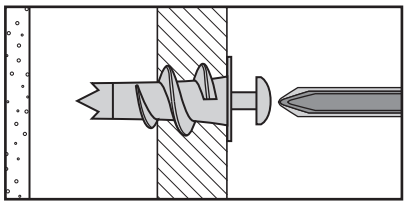


For use when attaching light loads onto plasterboard partitions.

No.4 " Cavity Fixing – Heavy Duty" wall plug

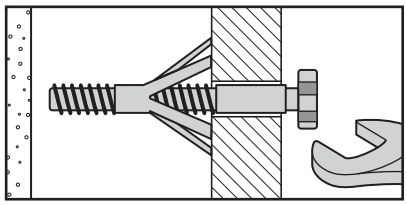

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.6 " Shield Anchor" wall plug – heavy loads

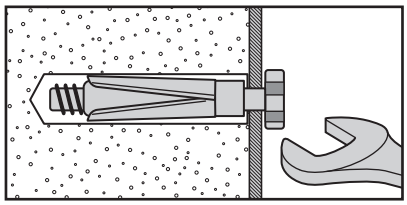

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.

Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.

TV Stand

Sku:
BJ2347-2J8A1
BJ2347-2J8A2
BJ2347-2J8B1
BJ2347-2J8B2

V1.0