
ASSEMBLY INSTRUCTIONS

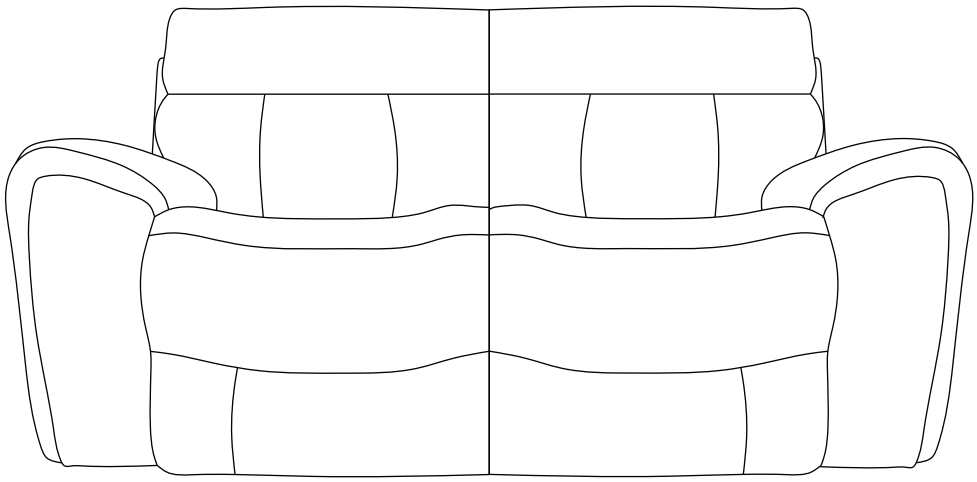

TOOLS REQUIRED

No Tools
Required For Assembly



2 - People
Recommended

ASSEMBLY RATING



EASY ⟶ DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 23-10-18

CHECK BEFORE STARTING

- [ ] **Are you missing anything?**
  Double-check all parts, hardware and accessories listed are all acccounted for.
- [ ] **Should we send any replacements?**
  Are there any irregularities or flaws in the parts? We can send replacements!
- [ ] **Check out our Quick Tips!**
  We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
- [ ] **Prep Time!**
  Please review the assembly instructions and all diagrams prior to assembling.


PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

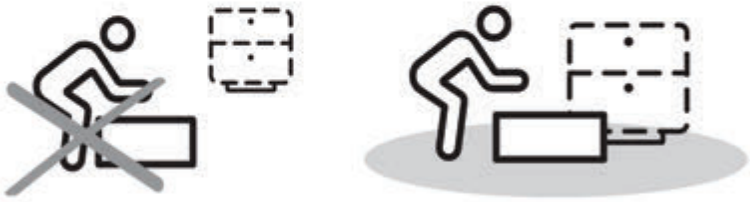

Suitable Location

Assembling near the area of the intended location is highly recommended.




Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.

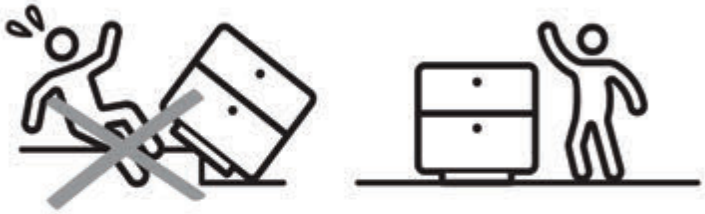

Flat Surface


Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE

FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.

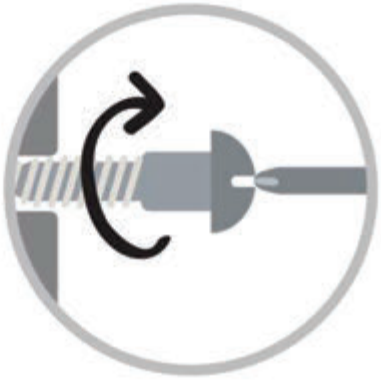

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.





Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

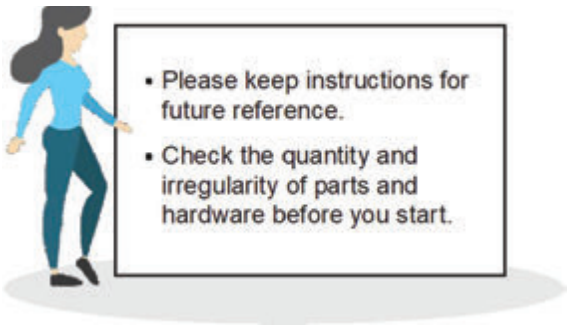

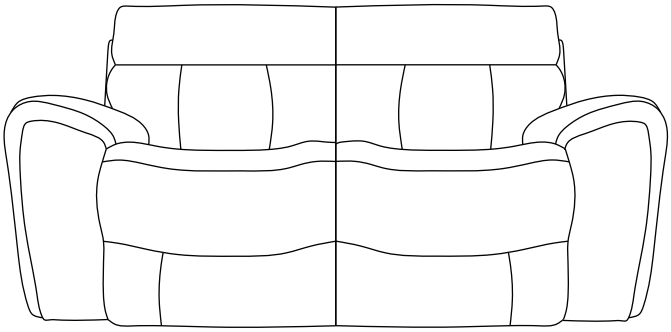


PARTS

Ⓐ

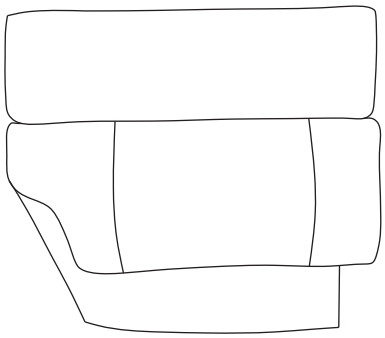


LEFT BACK CUSHION
1 pc.

Ⓑ

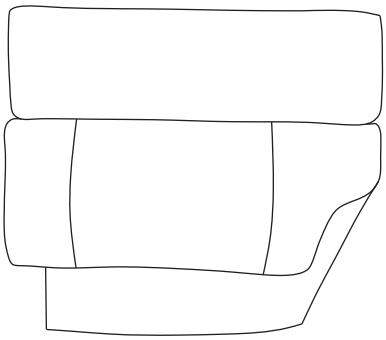

RIGHT BACK CUSHION
1 pc.

Ⓒ

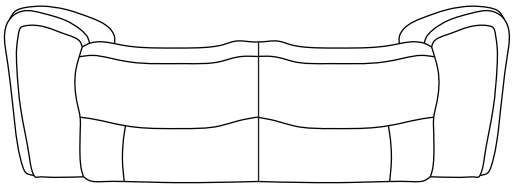


SEAT CUSHION
1 pc.

ASSEMBLY INSTRUCTIONS

1


I. Locate the wire plug on Left back Cushion (#A) and latch it to the female wire-receiver on the Seat Cushion (#C).
II.Lift the velcro and align the metal brackets on the Left Back Cushion (#A) into the metal brackets on the Seat Cushion (#C). Insert until secured.
III. Repeat steps with Right back cushion (#B).

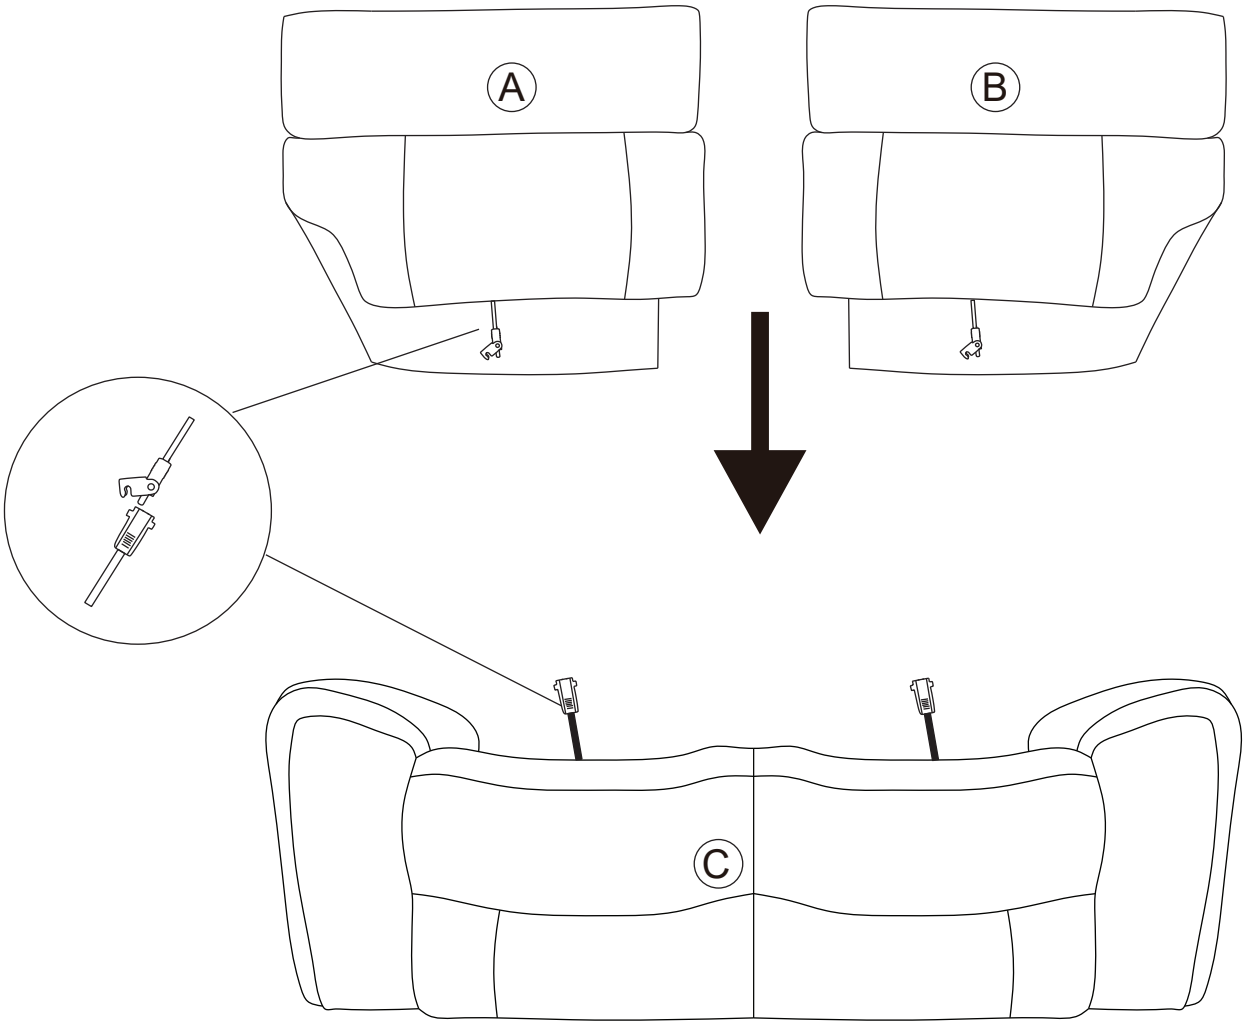


ASSEMBLY INSTRUCTIONS

2


Connect the wire plug transformer cord into the DC adaptor located in the lower back corner of the Left Recliner. Plug the other end of the transformer cord into the power outlet/wall socket. Then, flip the red switch on the DC adaptor to the ON position until the light is lit red.

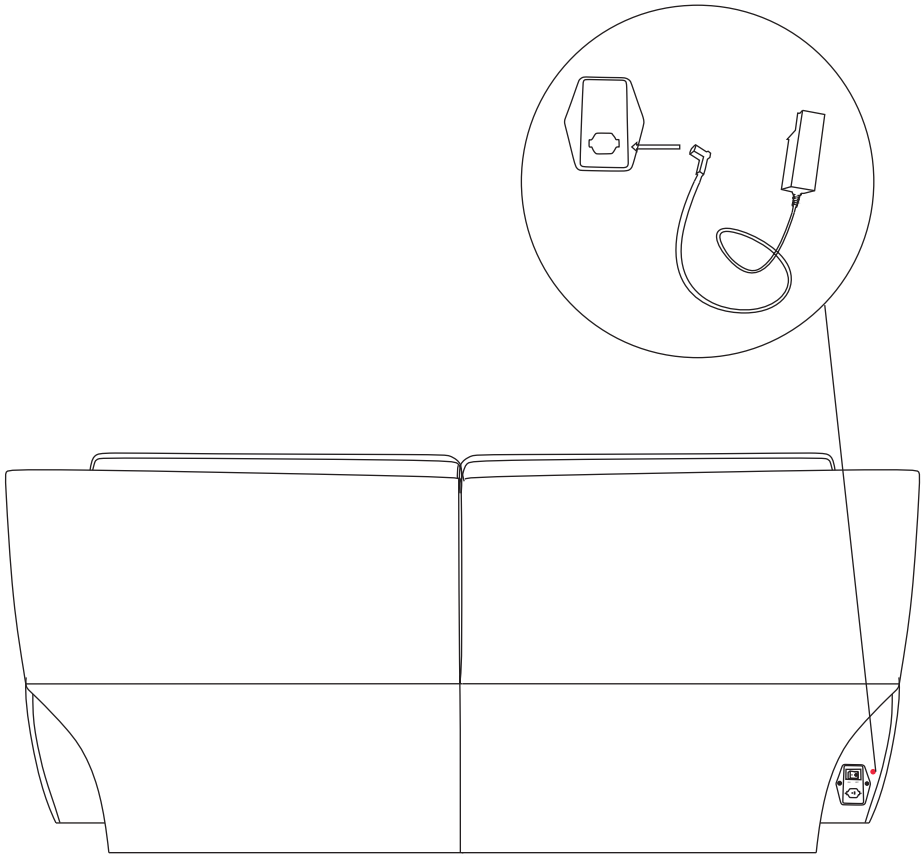

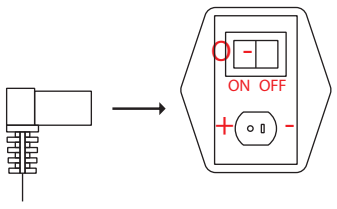

ASSEMBLY INSTRUCTIONS

3

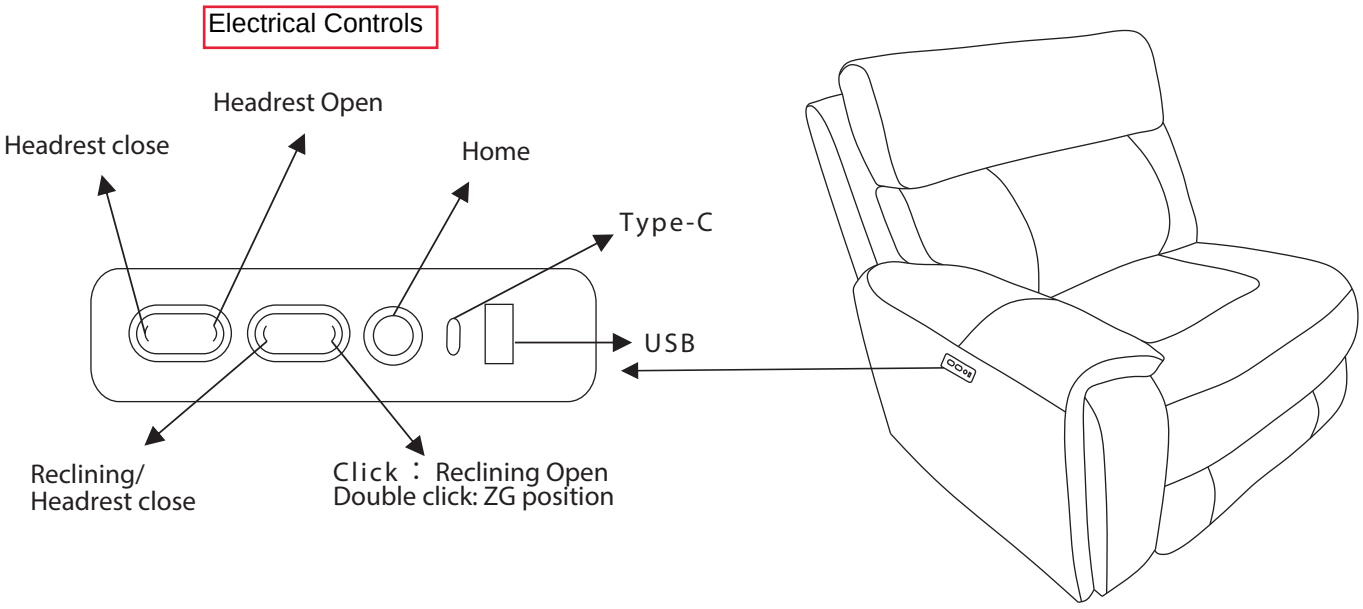

4

