Knee Massager
EMK-723B

IMPORTANT SAFETY INSTRUCTION
When using the product, all instructions and basic precautions should always be followed, including the following:

DANGER - To reduce the risk of electric shock:
Always unplug this product from the electrical outlet immediately after use and before cleaning

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1) The product should never be left unattended when plugged in. Unplug from outlet when it is not use and before putting on or taking off parts.
2) Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
3) Never operate the product with the air openings blocked. Keep the air openings free of lint, hair, and the like.
4) Do not drop or insert any object into any opening.
5) Do not use outdoors.
6) Do not operate where aerosol (spray) products are being used or where oxygen is administered.
7) Be sure to pull the plug out of the socket when you reach in. And don't pull it out when your hands are wet. That could cause electric shock and injury.
8) Do not carry this product by its supply cord or use cord as a handle.
9) The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
10) Remove the power plug from the socket immediately after the power failure. Otherwise, it may cause electric shock, short circuit and fire.
11) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for
12) Special attention to components most susceptible to wear an advice to replace defective components immediately and/or keep the equipment out of use until repair.
13) Use this appliance only for its intended use as described in this manual.
14) Keep the cord away from heated surfaces. If the fault is found, stop using immediately and cut off the power supply. Avoid accidents or injuries. please do not repair it by yourself, please contact the seller or manufacturer in time, avoid accidents or injuries.
15) The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
16) The appliance is only to be used with the power supply unit provided with the appliance.
17) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
18) Children should be supervised to ensure that they do not play with the appliance.
19) The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

Please check whether the product and accessories are intact and damaged before using.

⚠ The device is not to be used for commercial use or medical purposes. If you have health concerns, consult your doctor before using this product.


Only use indoors!

Do not use the device in damp rooms (e.g. when bathing or showing)

⚠
- Do not wash!
- Do not dry clean!
- After using this product for 20 minutes, rest for 30 minutes, then use again.

SAVE THESE INSTRUCTIONS

NAME AND FUNCTION OF THE MACHINE PARTS

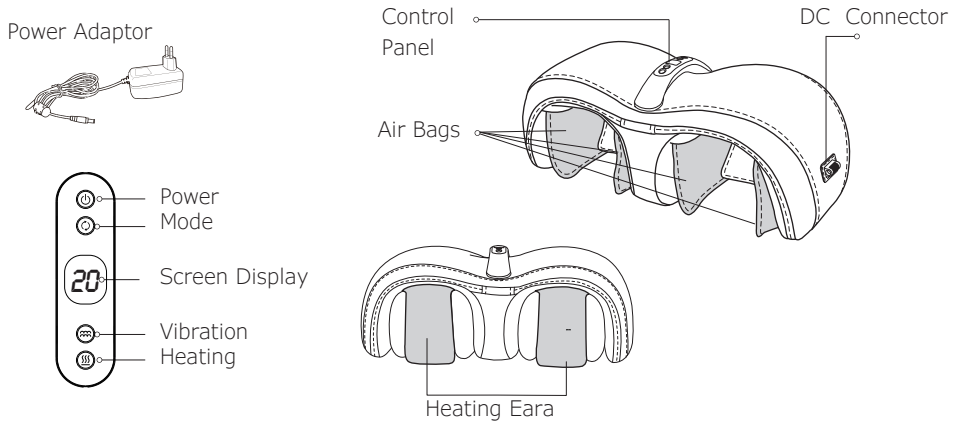

PRODUCT SPECIFICATIONS

Name	Knee Massager
Model	EMK-723B
Power output	12V ⎓ 2A
Power consumption	24W
Default Time	20mins

Short time operation 20 minutes, resting time 30 minutes

Note: Certified manufacturer's adapter must be equipped in the use of this products.

⚠ This product is suitable for home use only

This product is intended for household use only.


Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU.To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

MASSAGE POSITION

1. Please check the integrity of the machine and accessories.
2. Please check the massage cloth cover for damage or tear before use. Do not use it if the cloth is torn(like picture ①) . Please return the product to the after-sales service for inspection and repair.
3. Fold the heating pad in the middle when using with straight legs(like picture ②); Open the heating pad and wrap it around the knee when the legs are bent (like picture ③). Place the massager comfortably on the area that needs to be massaged (knee or calf).

⃠ Do not use this product standing up to avoid danger

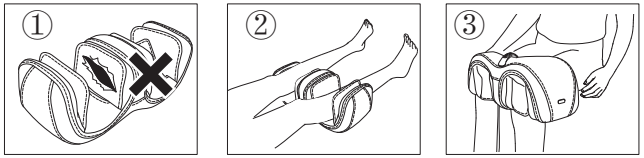

HOW TO OPERATE

*** Power** :
1. In the off state, press and hold this button for 2 seconds to turn on (voice "Massage on"), the default soothing mode, heat compress one gear, vibration is off, the screen displays a countdown of 20 minutes "20", it will automatically shut down after the countdown is over (voice " Massage ended"); 2. When the machine is on, press and hold this button for 2 seconds to turn off the machine (voice "Massage ended"), turn off the screen, and stop all work.

*** Mode**:
Short press the mode button to switch to massage mode (voice "massage mode"), the screen will display "C2", and switch to countdown display after 3 seconds;
short press again to switch to compression mode (voice "compression mode"), the screen will display "C3" , switch to countdown display after 3 seconds;
short press again to turn off the airbag massage (voice "Turn off air pressure"), the screen displays "C0", switch to countdown display after 3 seconds;
short press again to switch to soothing mode (voice "Turn off air pressure") "Soothing Mode"), the screen displays "C1", and switches to countdown display after 3 seconds;

*** Vibration button:**
Short press the vibration button to turn on the first vibration level (voice "vibration level 1"), and the screen will display "U1"; short press again to switch to vibration level 2 (voice "vibration level 2"), and the screen will display "U2"; short press again to switch to vibration level 2 (voice "vibration level 2"), and the screen will display "U2"; Press to switch to vibration level three (voice "vibration level three"), the screen displays "U3"; short press again to turn off vibration (voice "vibration off"), the screen displays "U0";

*** Heating**:
Short press the hot compress button to switch to the second level of hot compress (the voice says "60 degrees Celsius"), and the screen displays "H2". Short press it again to turn off the hot compress (the voice says "turn off heating"), and the screen displays "H0"; short press again to turn it on. Apply heat to one block (speech "55 degrees Celsius"), the screen displays "H1"; cycle in sequence;

Other functions
1. If the air bag, vibration, and hot compress are all turned off, the machine will automatically shut down after 30 seconds by default (voice "Massage ends");
2. Fault display: When the hot compress function is abnormal, the hot compress function will automatically turn off, and the screen will display the "E0" fault code. It will return to normal display after 5 seconds. In this case, press the hot compress key and the screen will display the "E0" fault code.

HOW TO CLEAN

Cleaning method
1. Dust on the product cover can be removed with a vacuum cleaner;
2. Surface dirt can be removed with a clean rag;
3. For relatively deep dirt, moisten the rag with neutral detergent, and then wipe it gently;
4. Do not let water enter the inside of the product;
5. Leave to dry naturally.

❗ The product cover cannot be removed for cleaning.
❗ After use, do not place it in a place exposed to direct sunlight or high humidity.
❗ During maintenance, be sure to unplug the power adapter, but do not use wet hands to unplug the wire.
❗ When not in use for a long time, the power should be turned off and the massager should be stored in its original packaging or covered with a dust cover.
⃠ Do not use alcohol, paint thinner, gasoline or nail polish remover. Failure to do so may damage the product or cause parts to crack or discolor.

Maintenance precautions
❗ During maintenance, be sure to turn off the power.
❗ Please handle the packaging bag of this product properly and keep it away from infants and young children.
⃠ Do not disassemble, modify, immerse the product (controller) in water, or throw it into fire, otherwise the product may be damaged.
⃠ Do not damage, modify, bend or pull the power adapter forcibly. Also, do not place heavy objects on the power adapter or squeeze the power cord.
⃠ During maintenance, please do not use volatile oil, thinner, alcohol, strong alkaline detergent, bleach, etc. for cleaning.
⃠ Keep out of reach of children and infants. Also, do not allow them to touch or operate this product. Otherwise, burns, electric shock, or personal injury may occur.
❗ When storing product, allow it to cool down first.

OPERATIONS FOR USE

Problem	Cause	Remedy
Can not start	The power button is not on	Long press the power button to
	20 minutes automatic massage time is up	Long press the power button to turn the massager on again
	Excessive load placed on the product (e.g. someone standing on the product or heavy objects placed on the top of the product)	Remove excess load bearing items
Sudden failure to start during use	Product is not plugged in or powered on	Please plug in the power adapter
There's a sound coming out of the product	This is the sound of filling and discharging the internal air pump, which belongs to the normal working state	no need to process
The product is smoking	The conductor of the product is short	Discontinue use immediately and contact the designated service center for this product

If you do not use it for a long time, ensure that the function is normal before using it again.		
periodical inspection	Are there any of the following faults · The power cord is deeply bruised or deformed and smells burnt · Cause abnormal sounds or vibrations during work · After the switch is turned on, it does not work properly · Leather case or appearance damaged	If the above fault occurs,in order toprevent accidents, please stop using immediately and cut off the power supply. Send to designated maintenance point for repair.

If you still have any problem after using the methods above, please contact our customer support team.