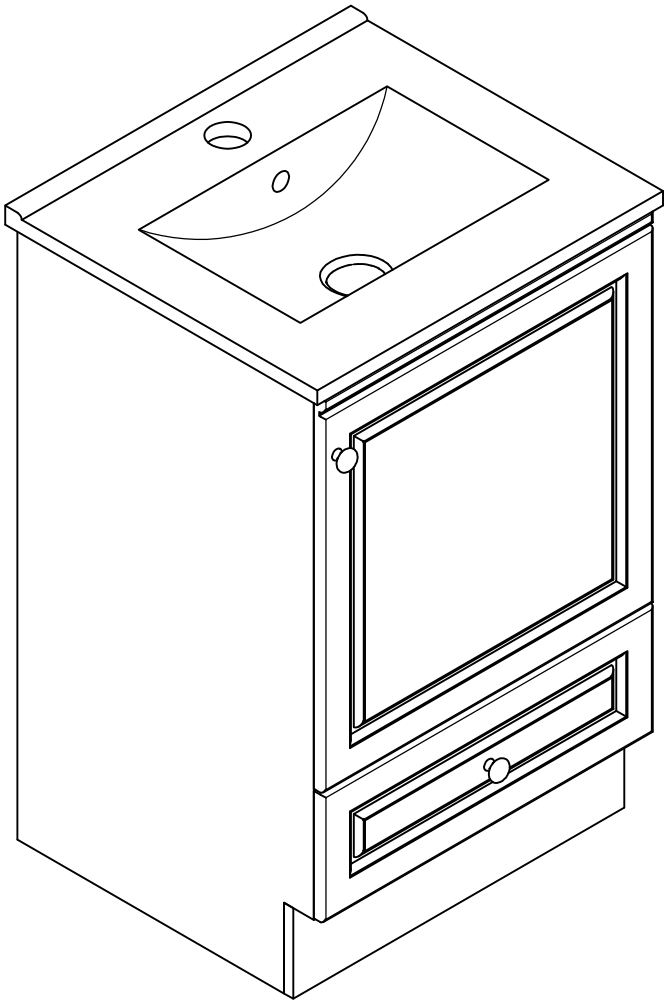
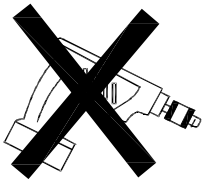
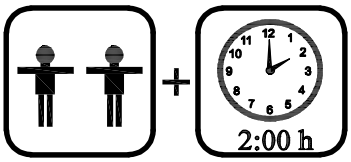
ASSEMBLY INSTRUCTIONS
20 INCH BATH VANITY COMBO
SKU:N759P566615




Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.






Tools Required



(Not Included)



(Not Included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation

Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.

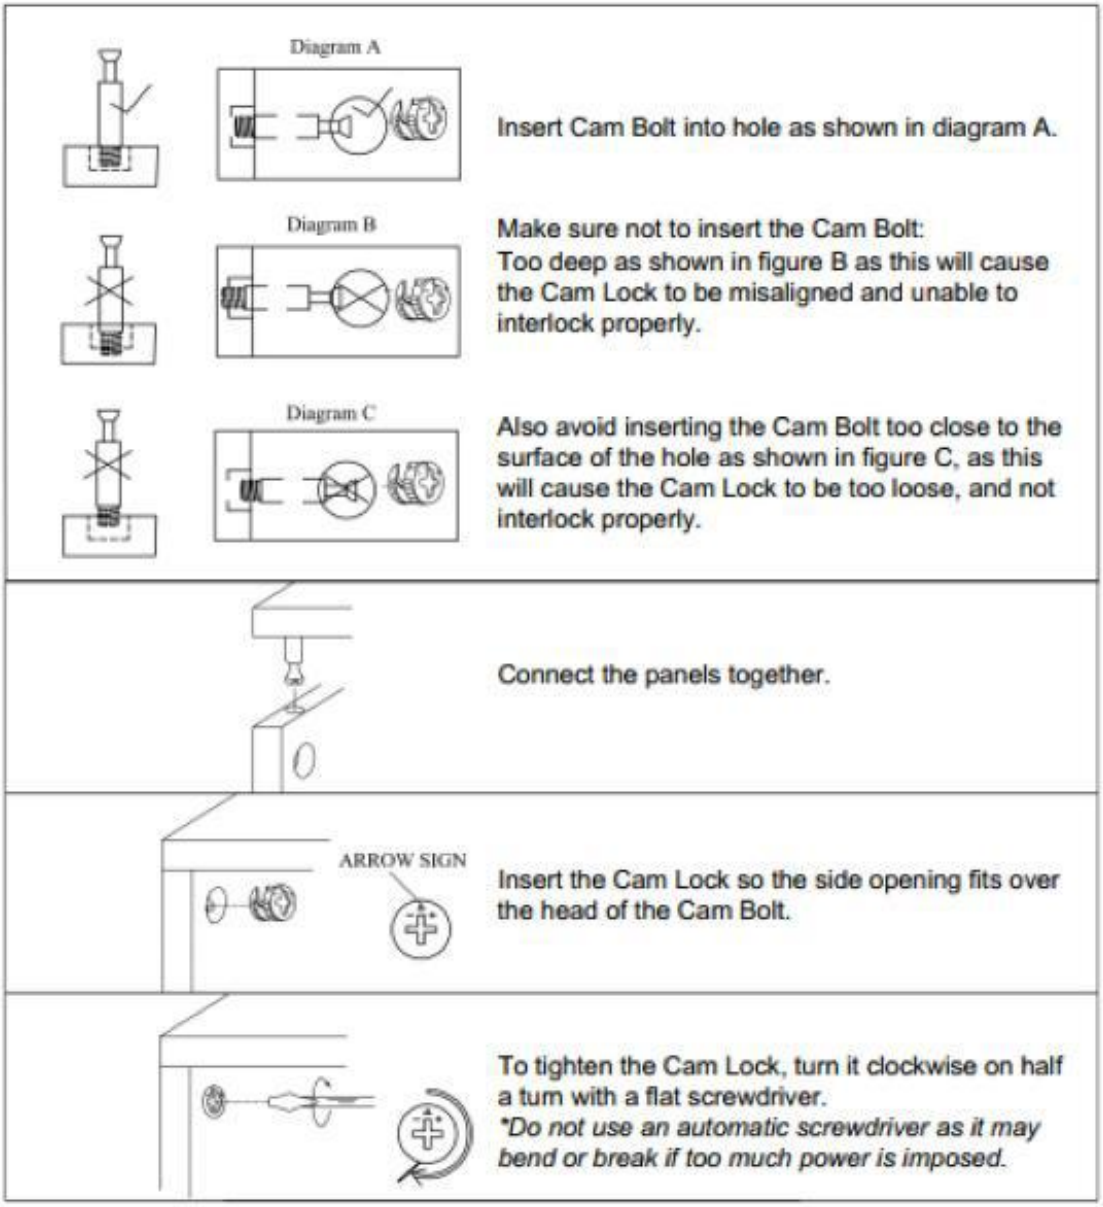
. Please do not over tighten screws or bolts until the assembly is completed.

. Keep children and animal away from the work area, small parts could choke if swallowed.


. Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions













Detail View - CABINET












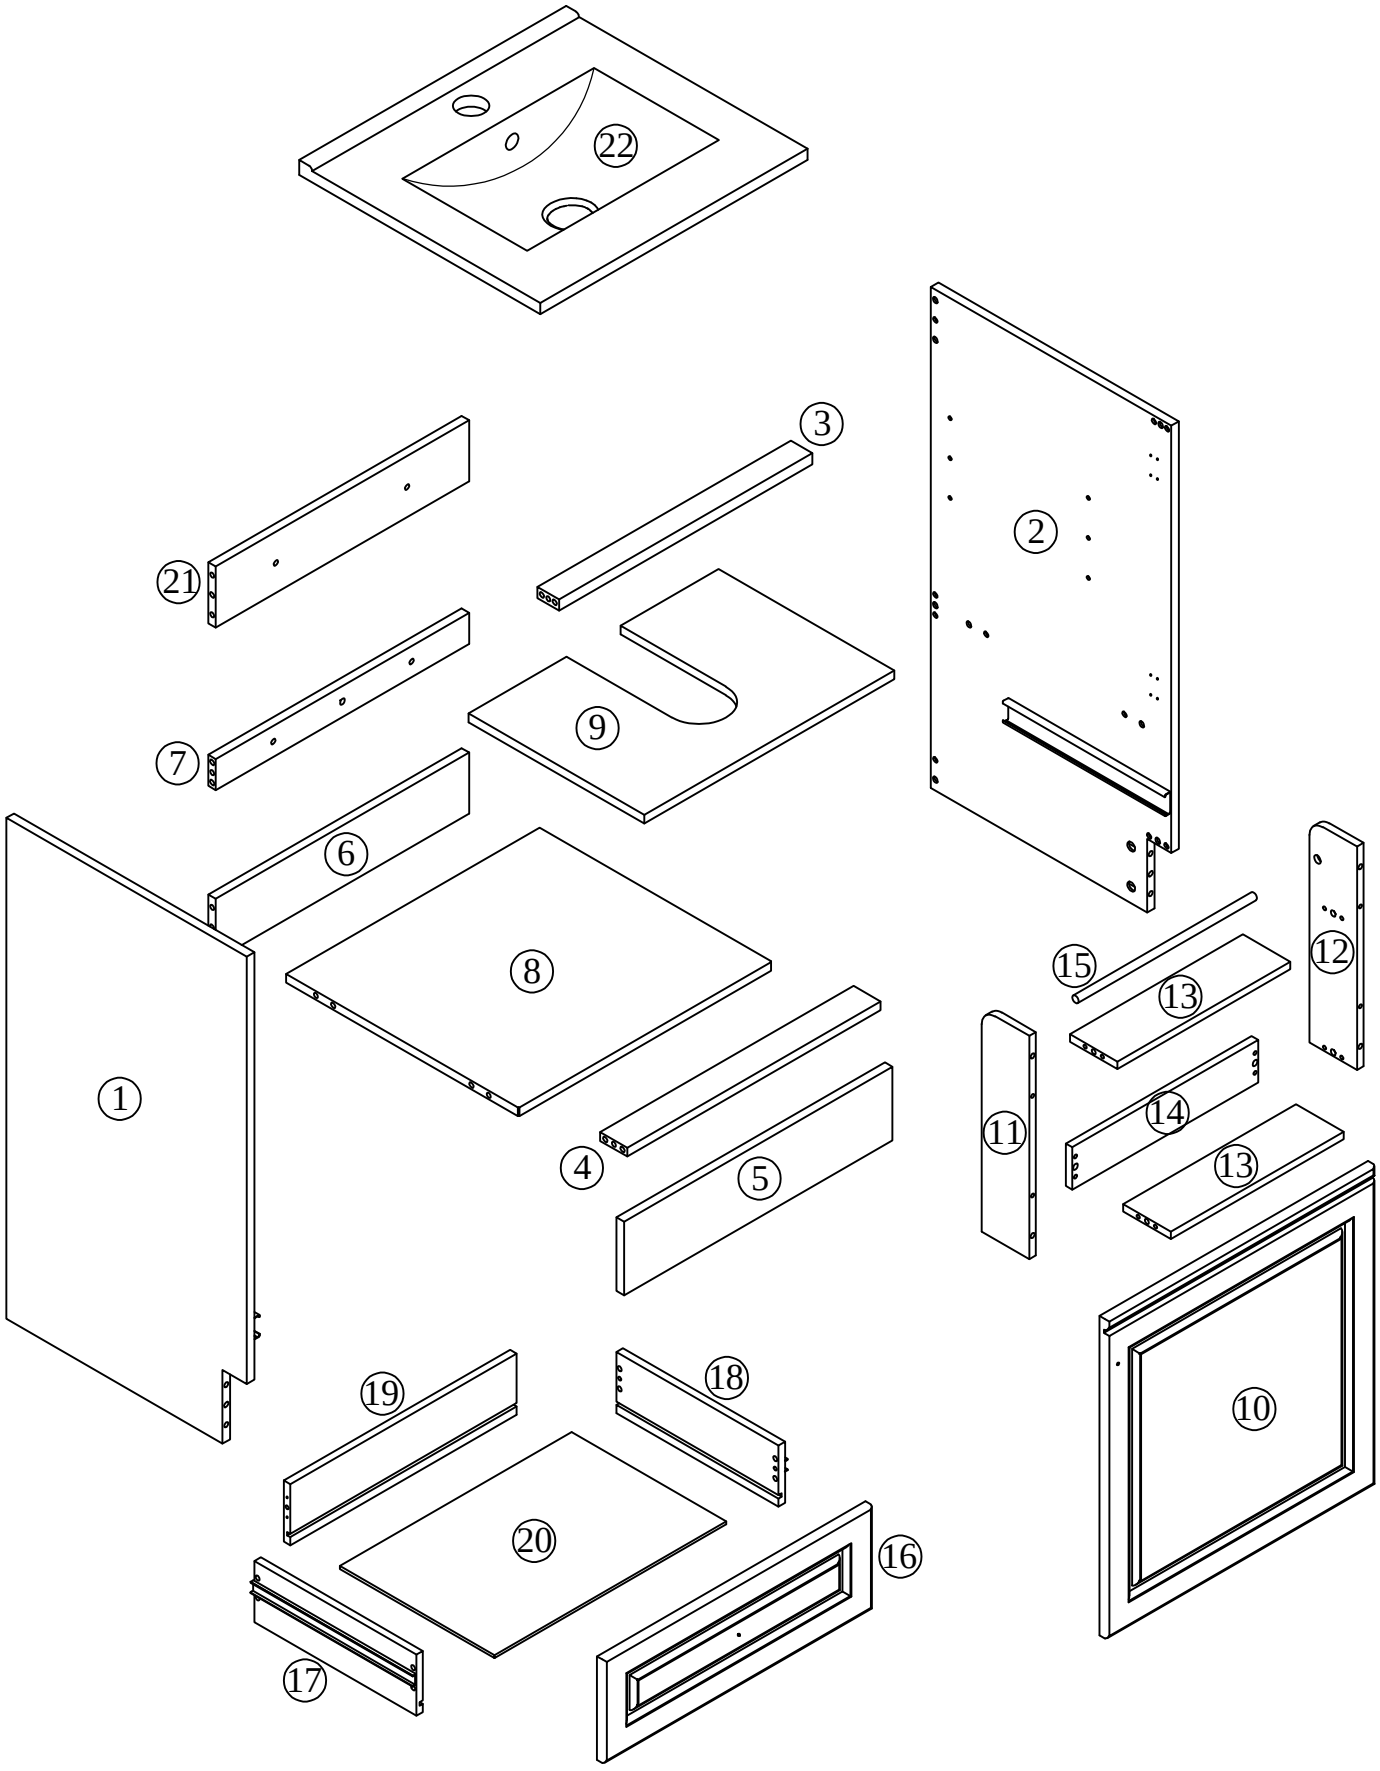


Identifying the Hardware-Identify the hardware using the illustrations below.


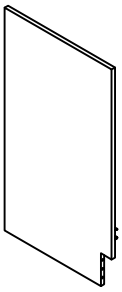
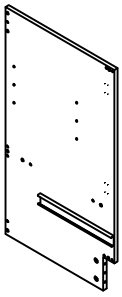
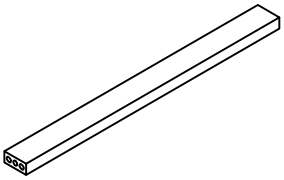
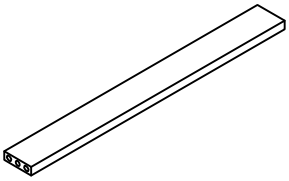
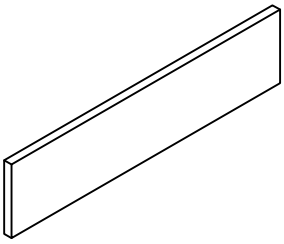
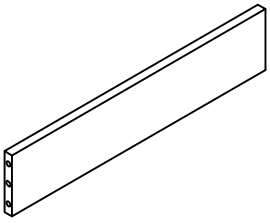
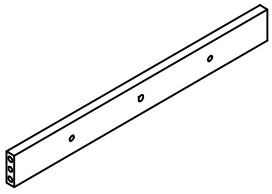
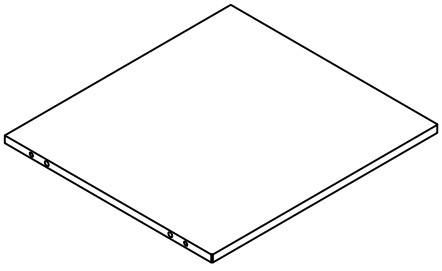
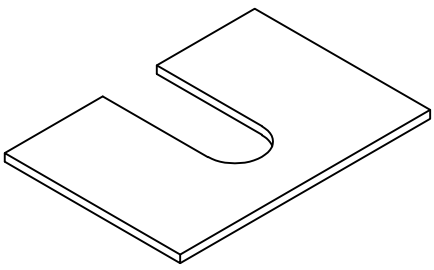
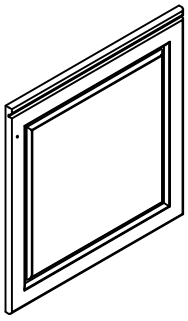
Part List - N759P566615

1  Side Panel (L) - 1pc	2  Side Panel (R) - 1pc
3  Front Top Bar - 1pc	4  Front Middle Bar - 1pc
5  Front Bottom Panel - 1pc	6  Bottom Back Panel - 1pc
7  Back Middle Bar - 1pc	8  Bottom Panel - 1pc
9  Adjustable Shelf - 1pc	10  Door - 1pc

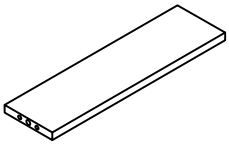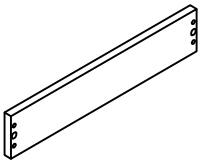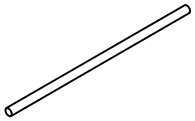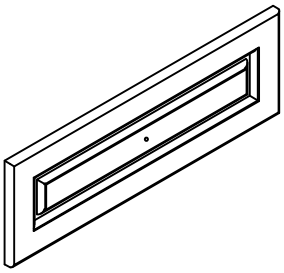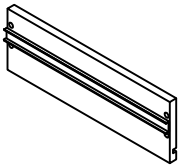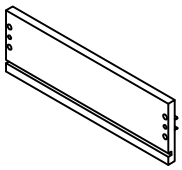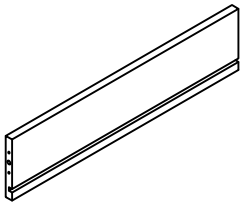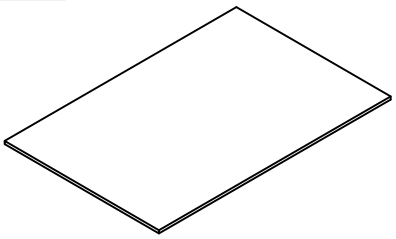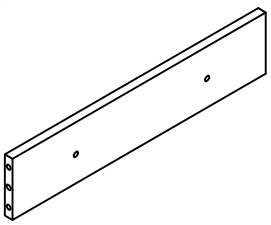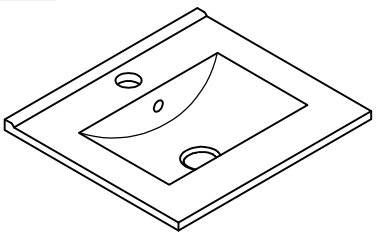
Part List - N759P566615


11  Door Side Panel (L) - 1pc	12  Door Side Panel (R) - 1pc	
13  Door Panel - 2pcs	14  Door Back Panel - 1pc	
15  Round Bar - 1pc	16  Drawer - 1pc	
17  Drawer Side Panel (L) - 1pc	18  Drawer Side Panel (R) - 1pc	19  Back Panel - 1pc
20  Bottom Panel - 1pc	21  Top Back Panel - 1pc	22  Sink - 1pc

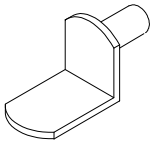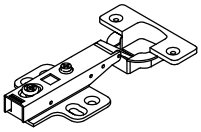
Hardware List - N759P566615


A  Ø6x35mm	B  ø14.5x9.5mm	C  Ø8x30mm
Three in one bolts (33+2pcs)	Three in one lock (33+2pcs)	Wood dowel (24+1pcs)
D  ø5/32"x20mm	E  ø5/32"x32mm	F 
Handle screw (1pc)	Handle screw (1pc)	Knob (2pcs)
G 	H 	I  ø7xø3.5x12mm
Shelf Pin (4pcs)	Damping hinge (2pcs)	Flat head screw (12+1pcs)
J  ø8xø4x32mm	K  ø6x30mm	L  ø10xø5x50mm
Round head screw (8+1pcs)	Wood dowel (20+1pcs)	Round head screw (2+1pcs)
M 	N  ø1/4"x16x1mm	
Plastic wall bolts (2+1pcs)	Washer (2+1pcs)	

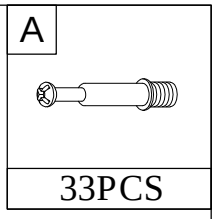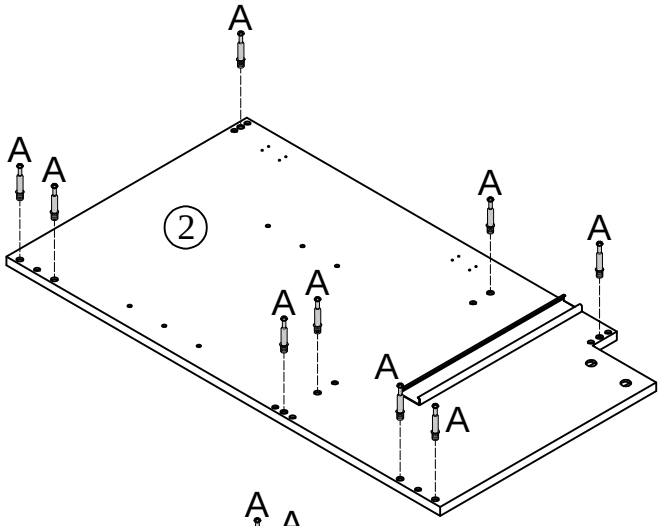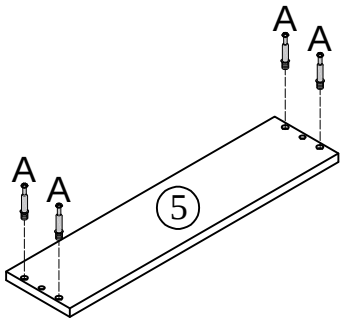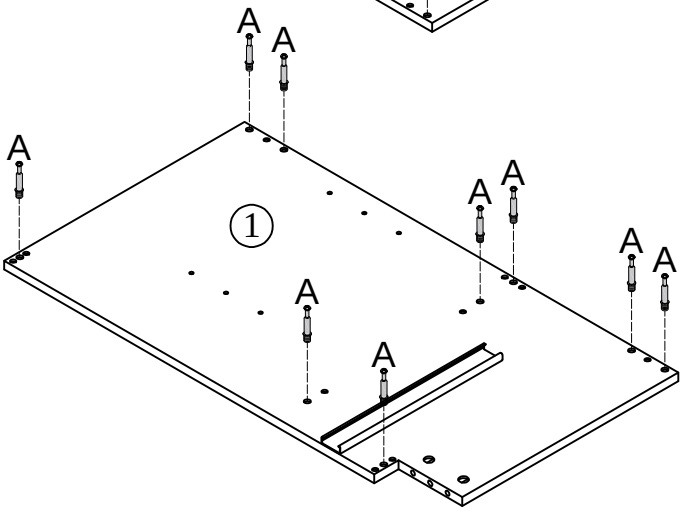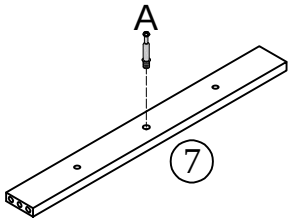
STEP: 1

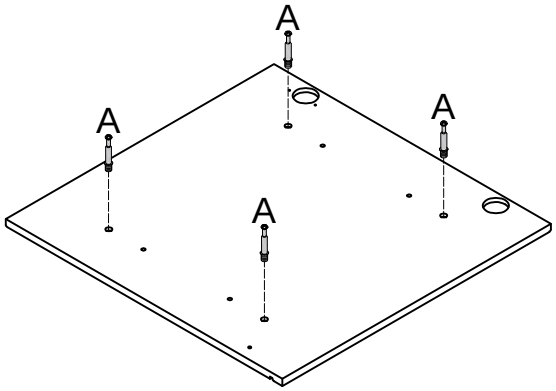


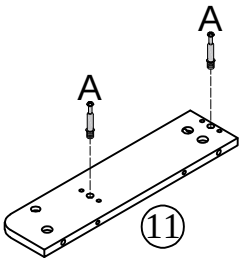


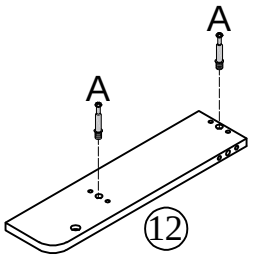


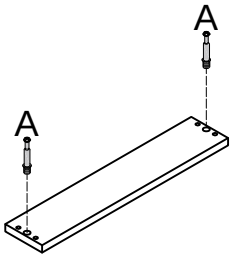


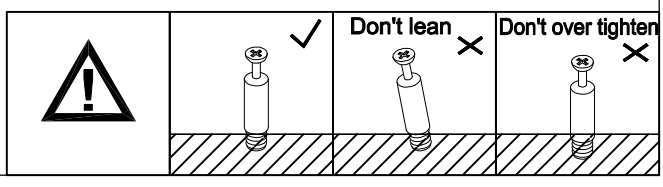


















STEP: 2


B	C
	
1PC	2PCS

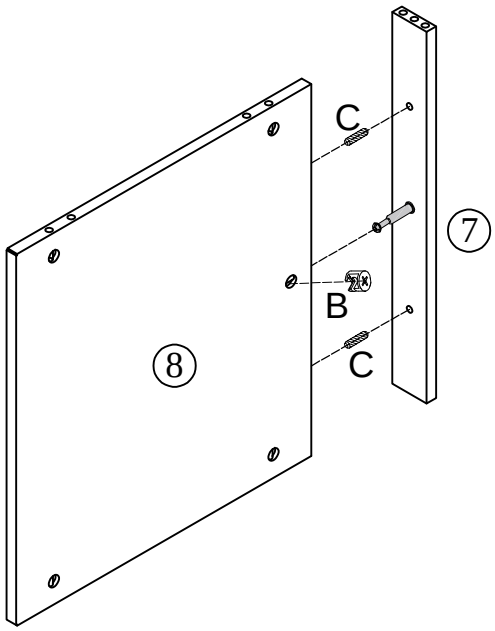



STEP: 3


B	C
	
9PCS	10PCS

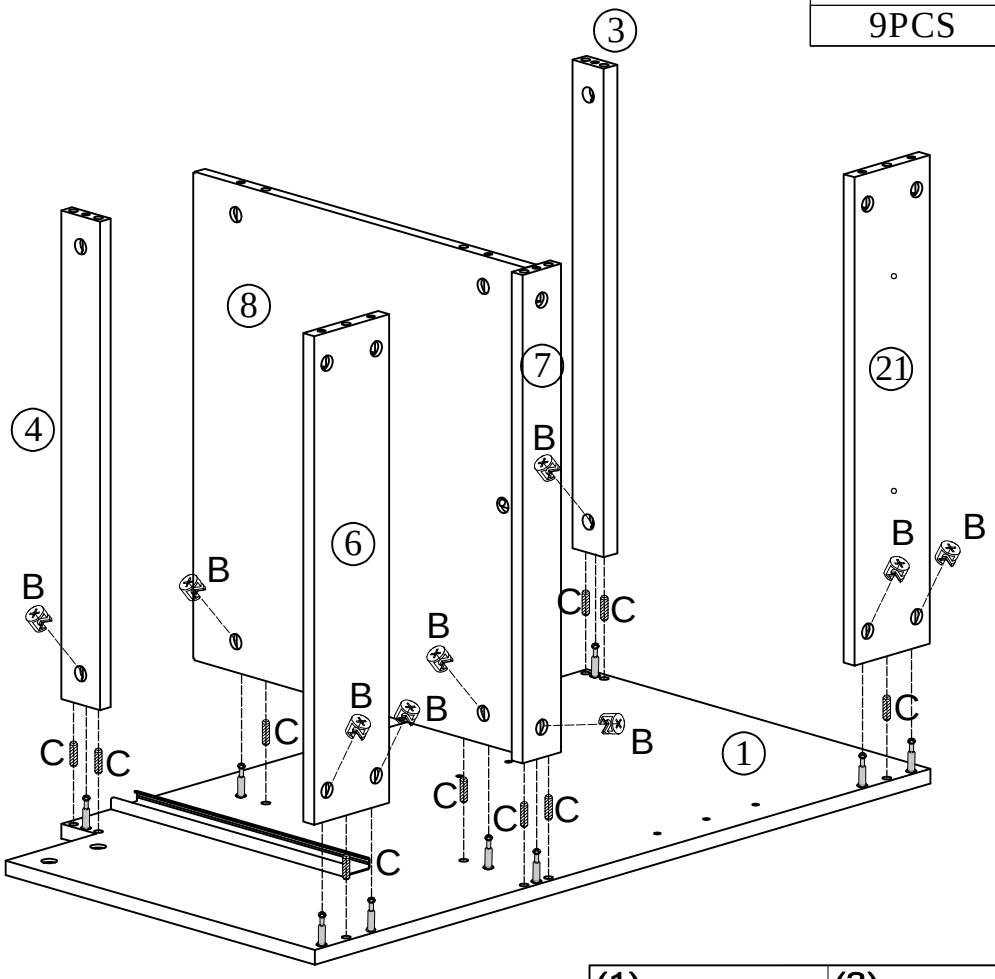


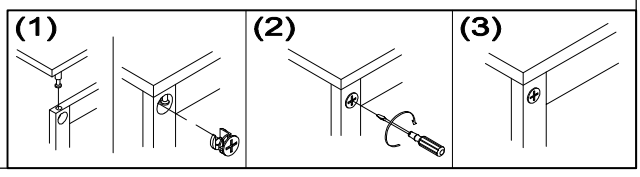



STEP: 4

B	C
	
9PCS	10PCS




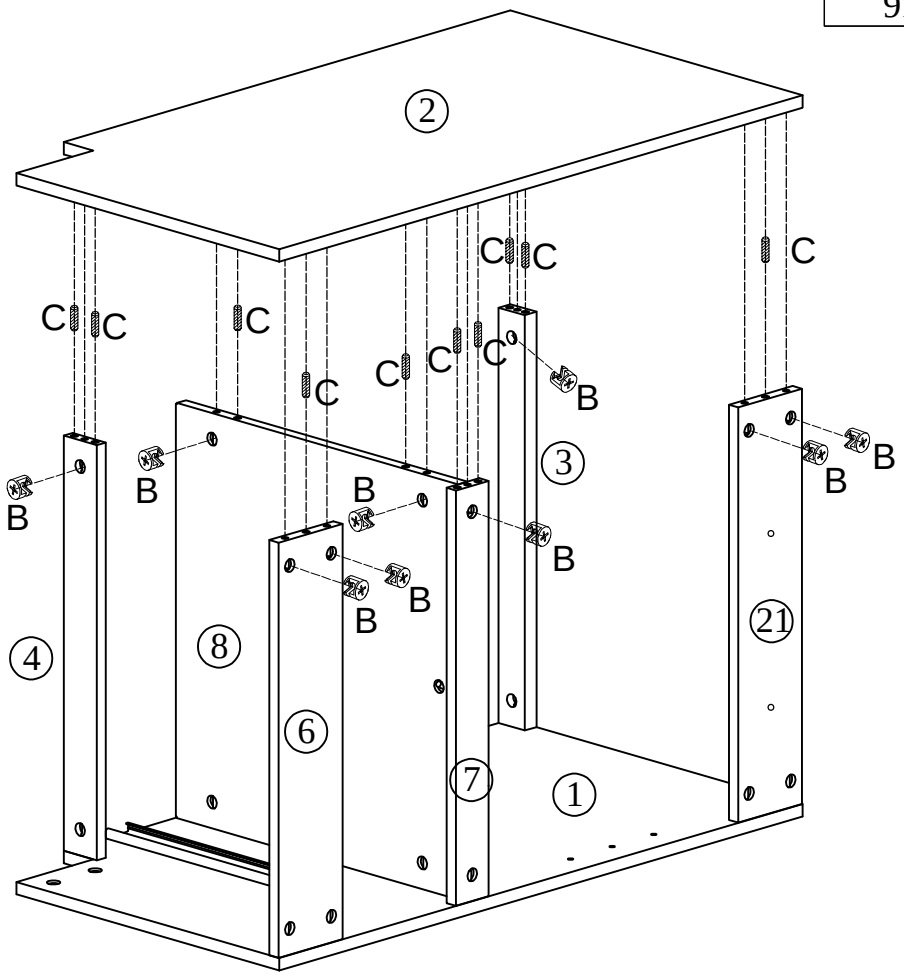



STEP: 5


B	C
	
4PCS	2PCS

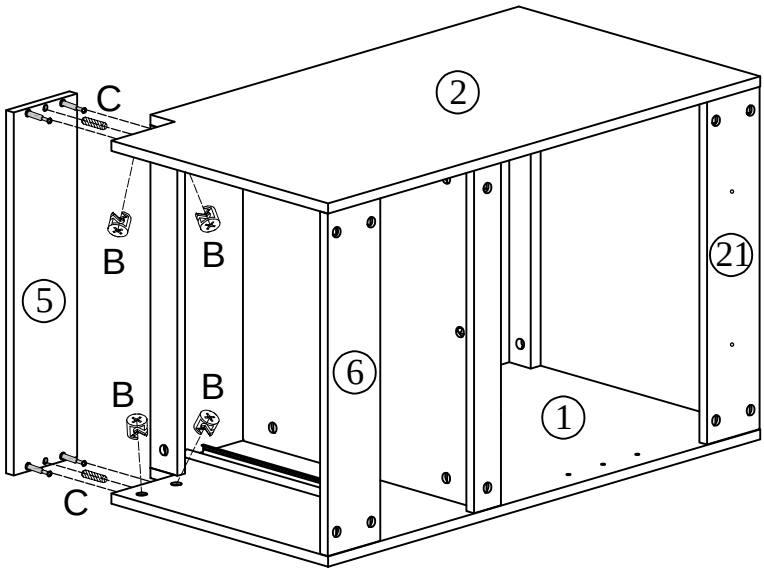



STEP: 6

B	D	F
		
10PCS	1PC	1PC
H	**I**	**K**
		
2PCS	4PCS	16PCS

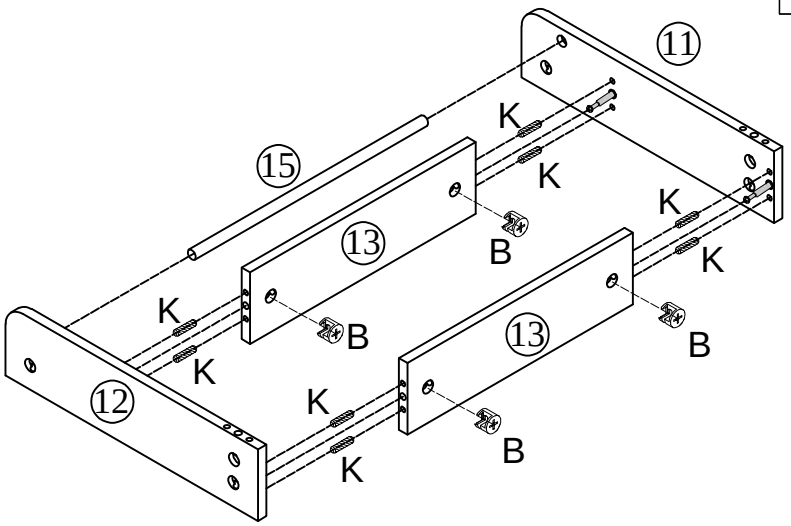


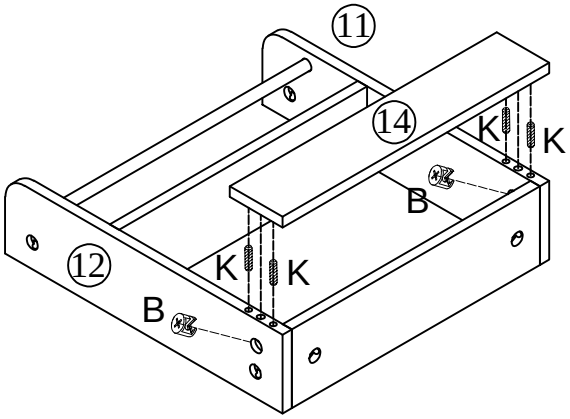


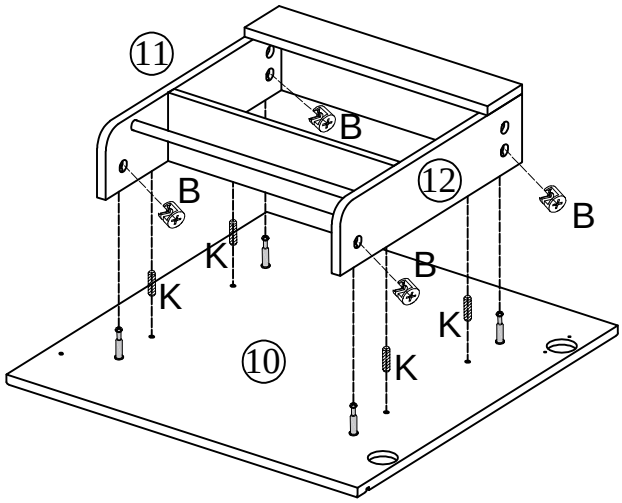

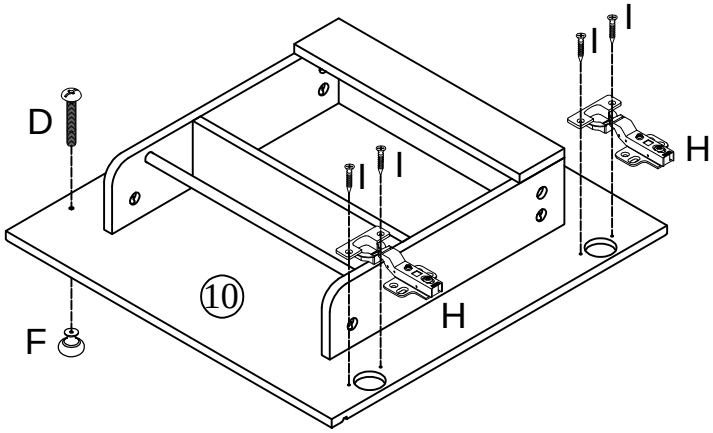

STEP: 7

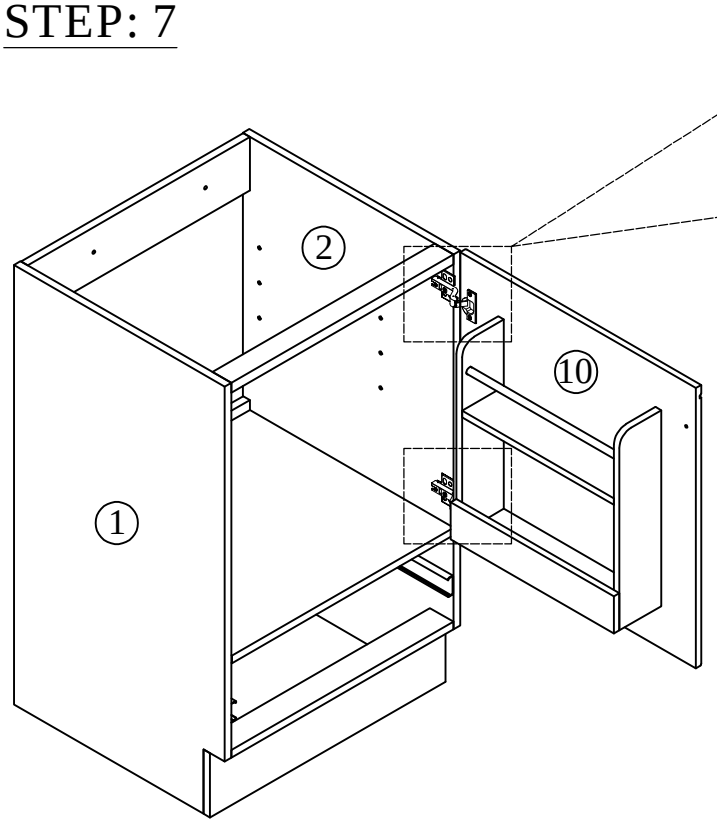


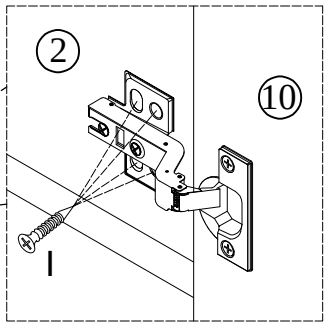


I

8PCS

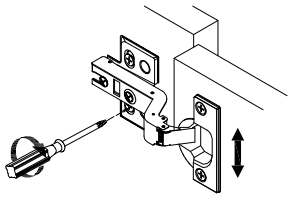
Use the screws to adjust up or down




Use the screws to permanent

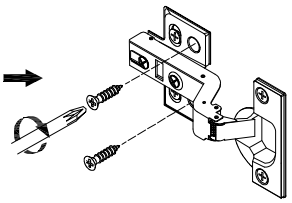




Use the screws to adjust left or right

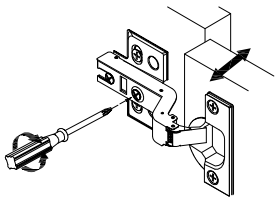



Use the screws to adjust in or out

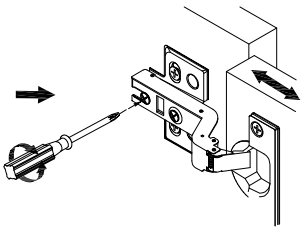


STEP: 8


E	F	J	K
			
1PC	1PC	8PCS	4PCS

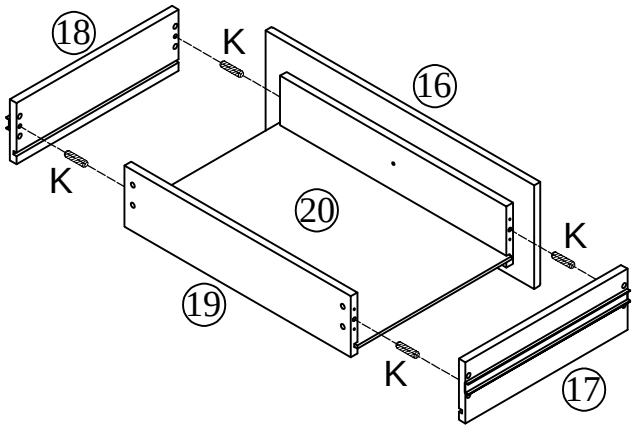

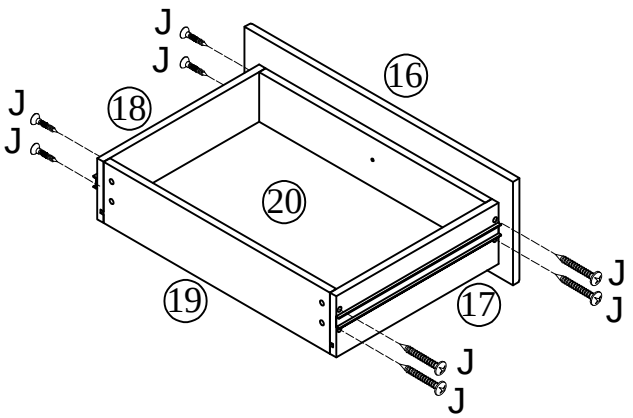


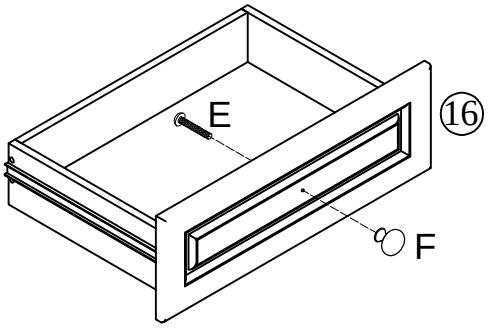


STEP: 9

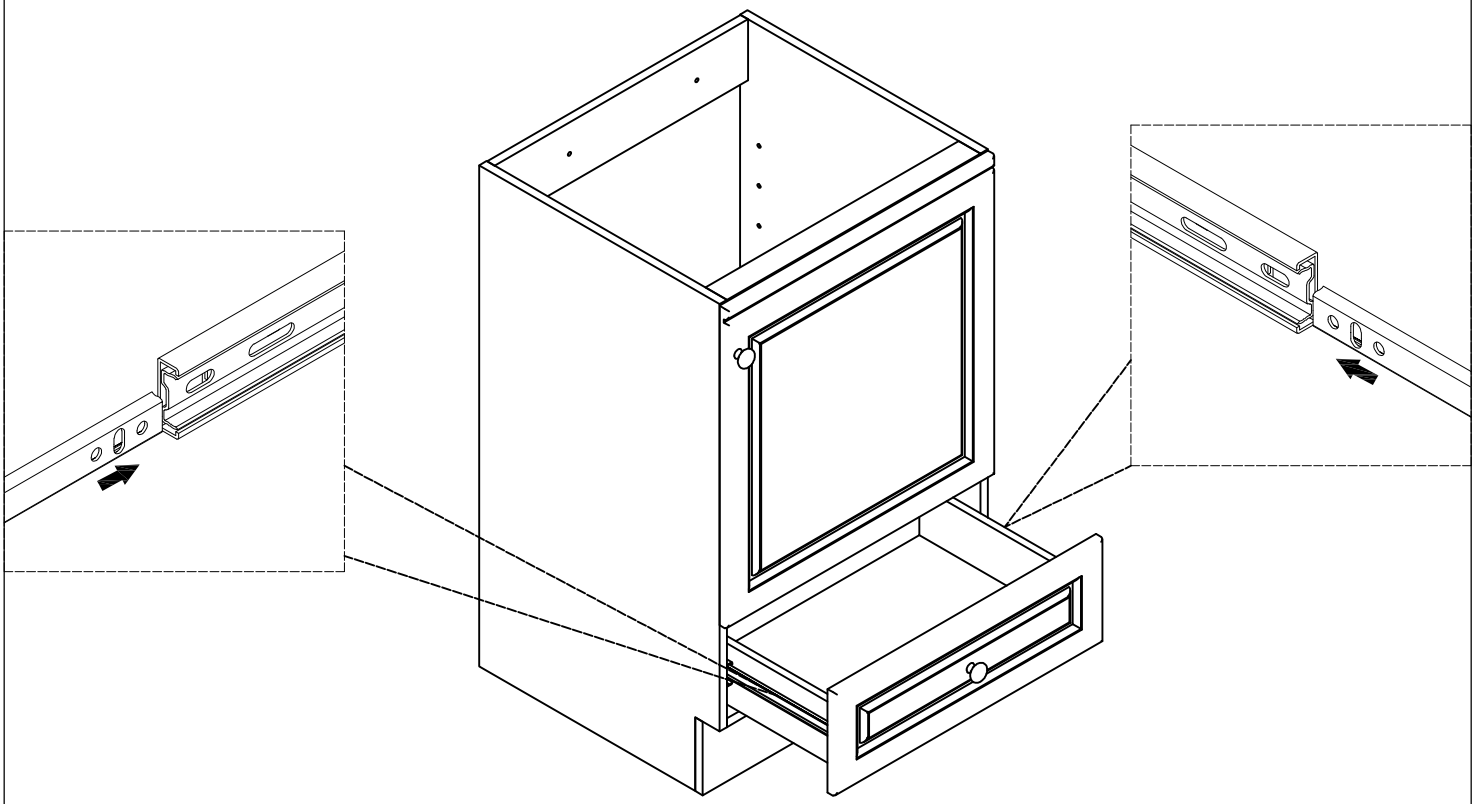


STEP: 10

G	
	
4PCS	

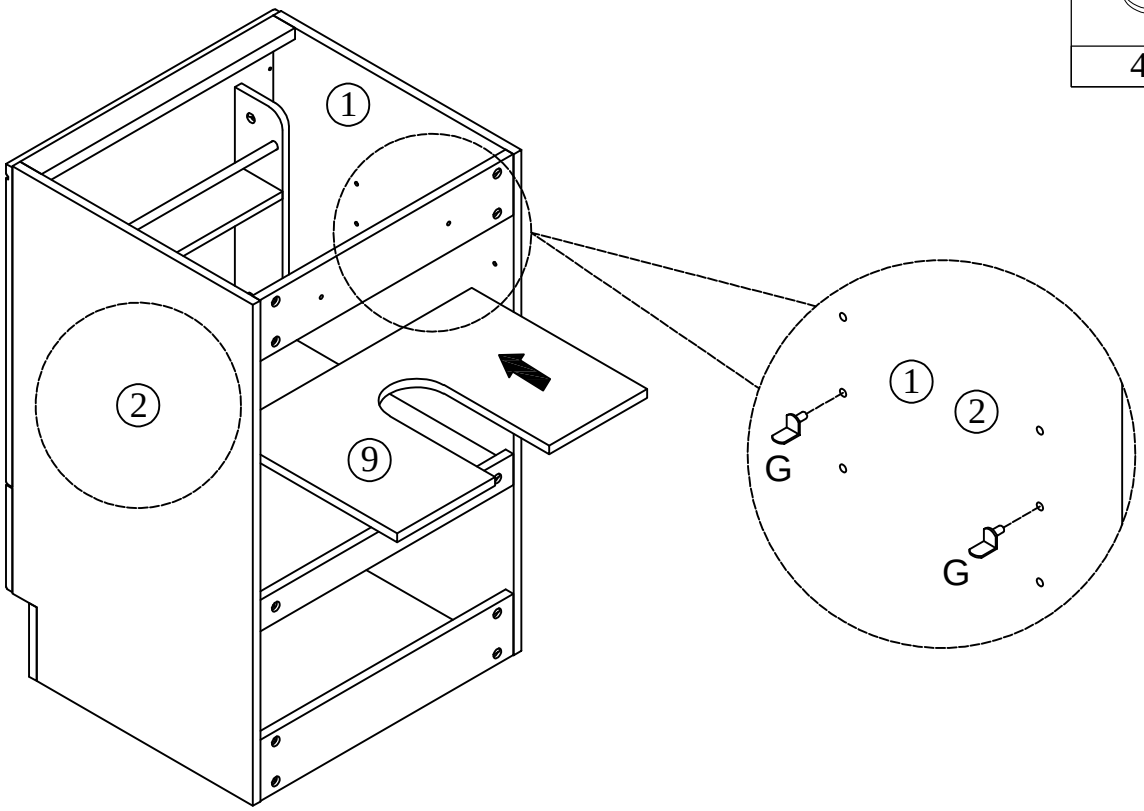


STEP: 11

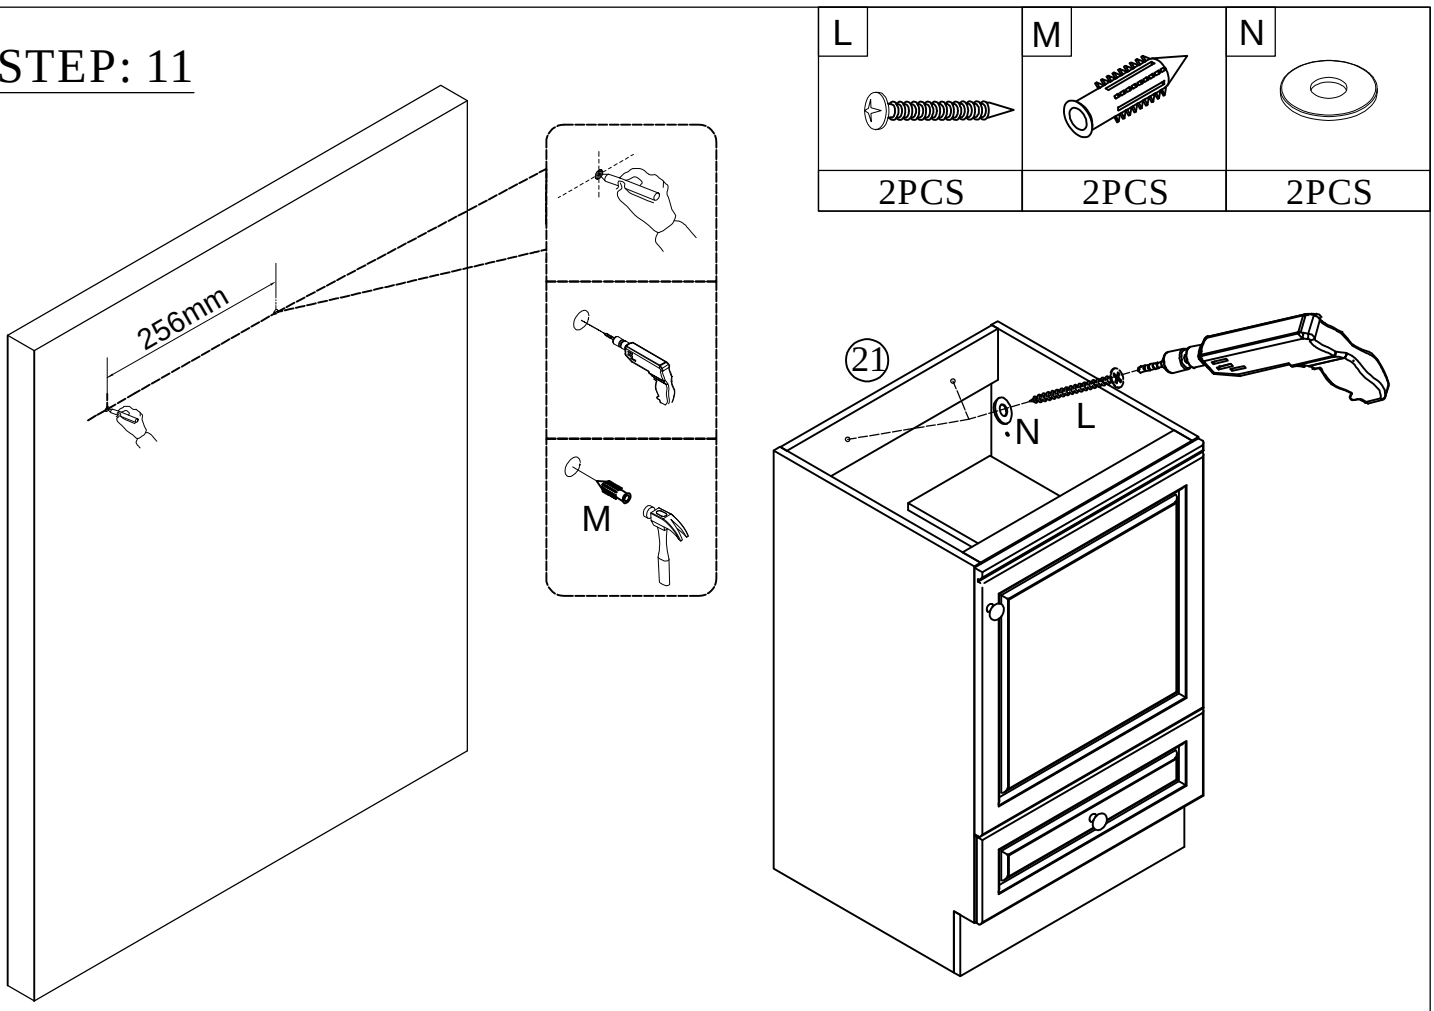


STEP: 12

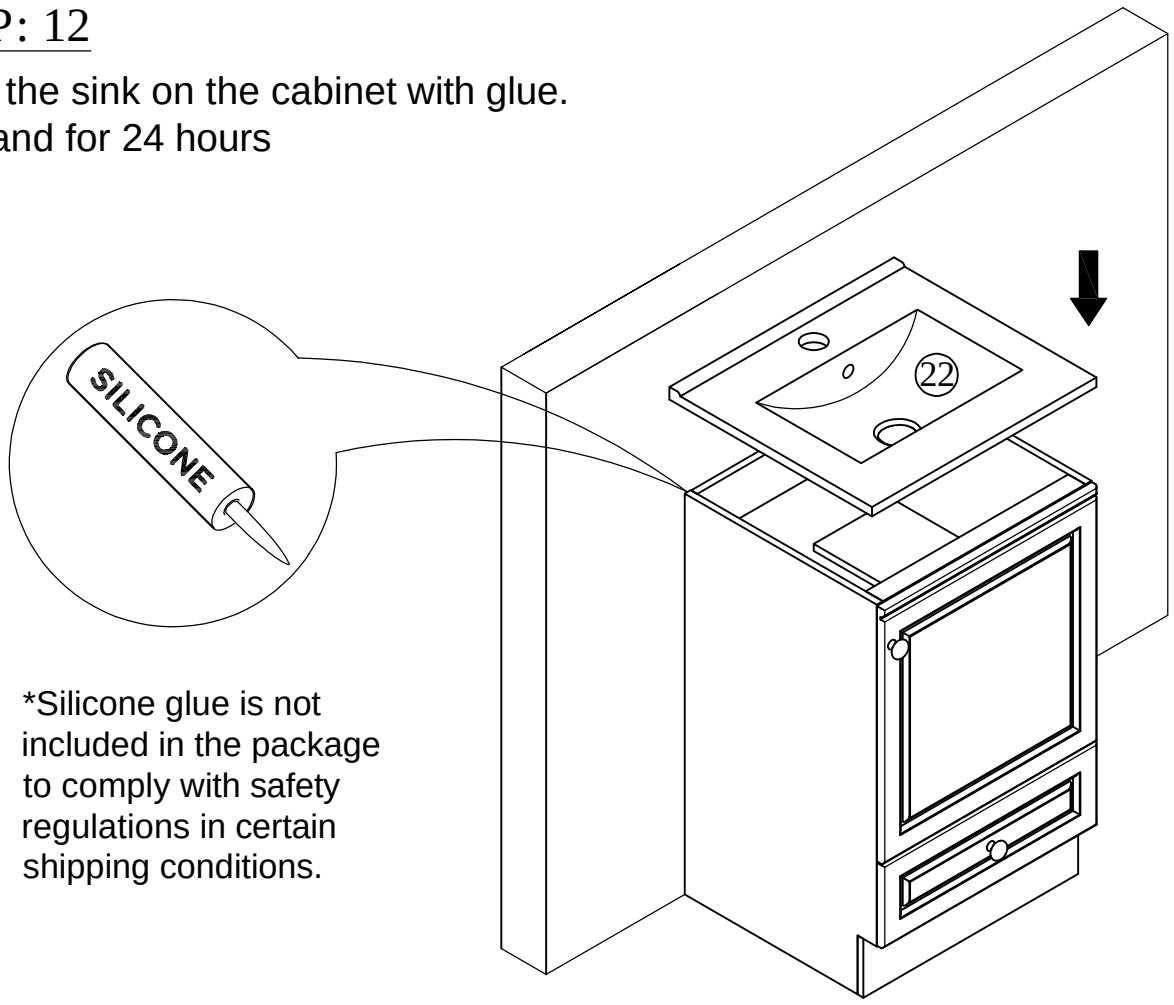
Install the sink on the cabinet with glue.
Let stand for 24 hours




*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

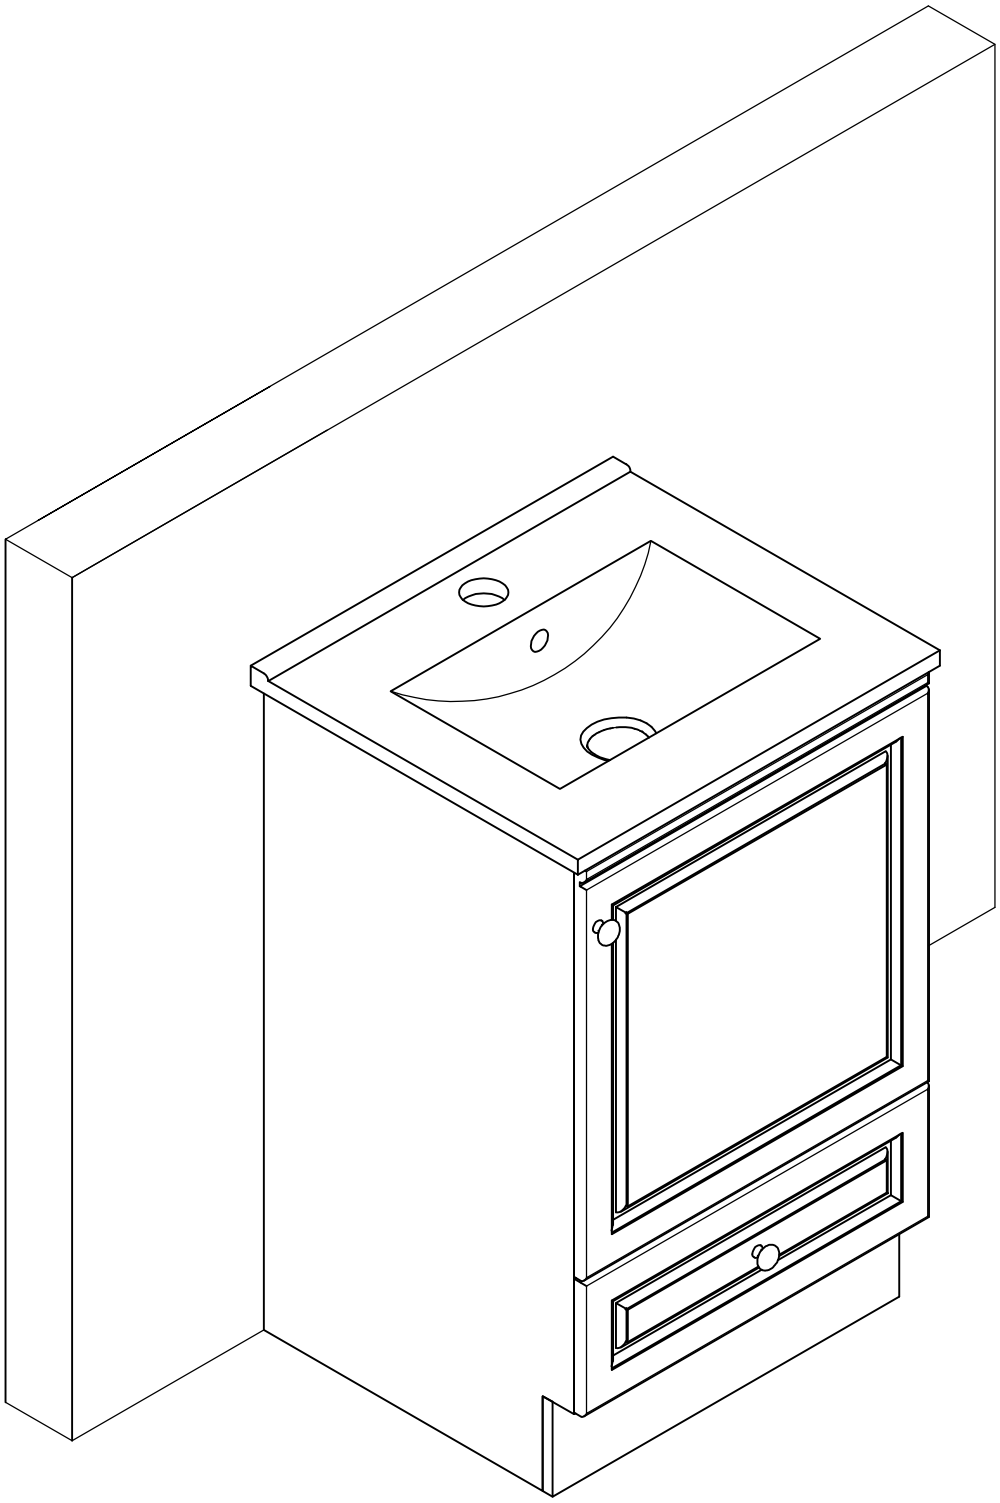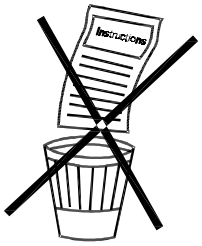STEP: 13






HINGE ADJUSTMENTS

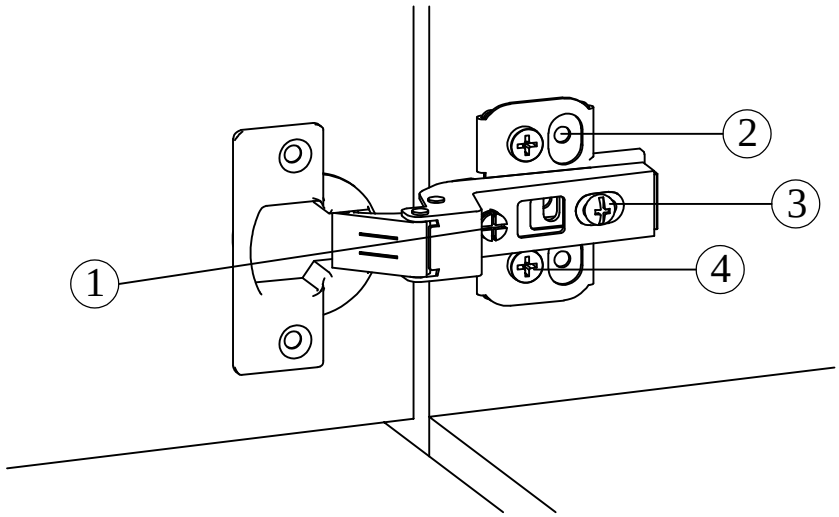


1 Sideways / Tilt adjustment

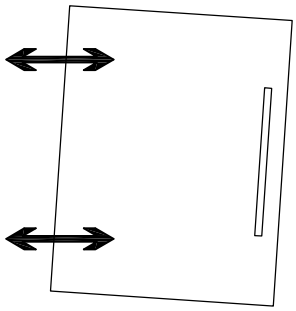


Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

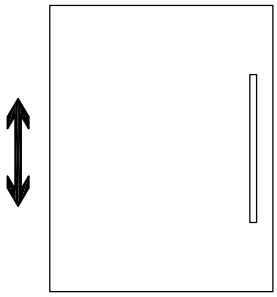2 4 Height adjustment



While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

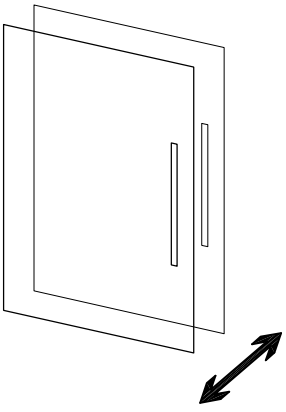3 Forward and back adjustment



If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet