Installation Instruction

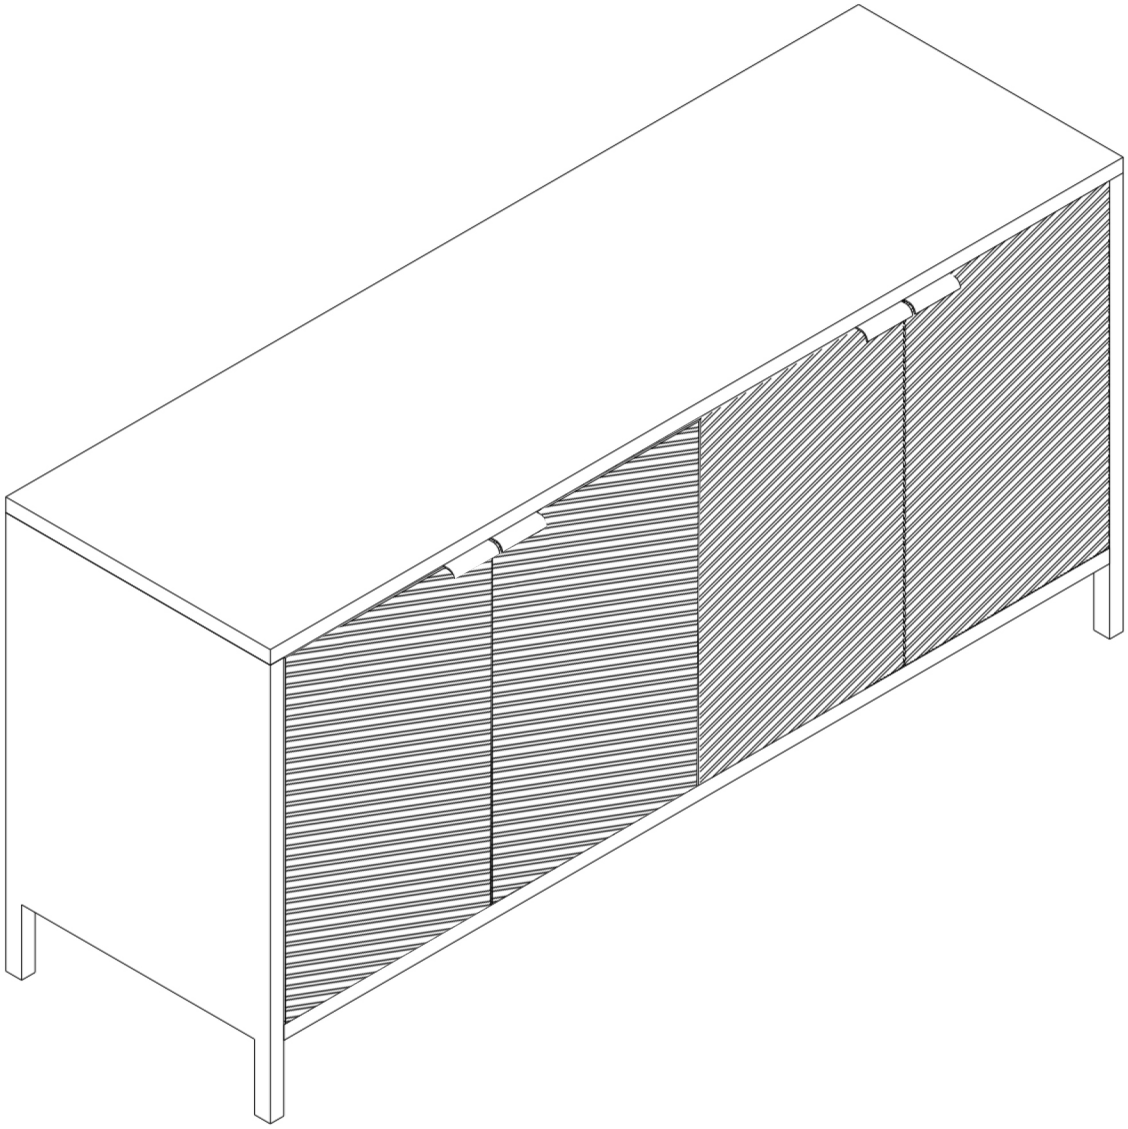

Parts List

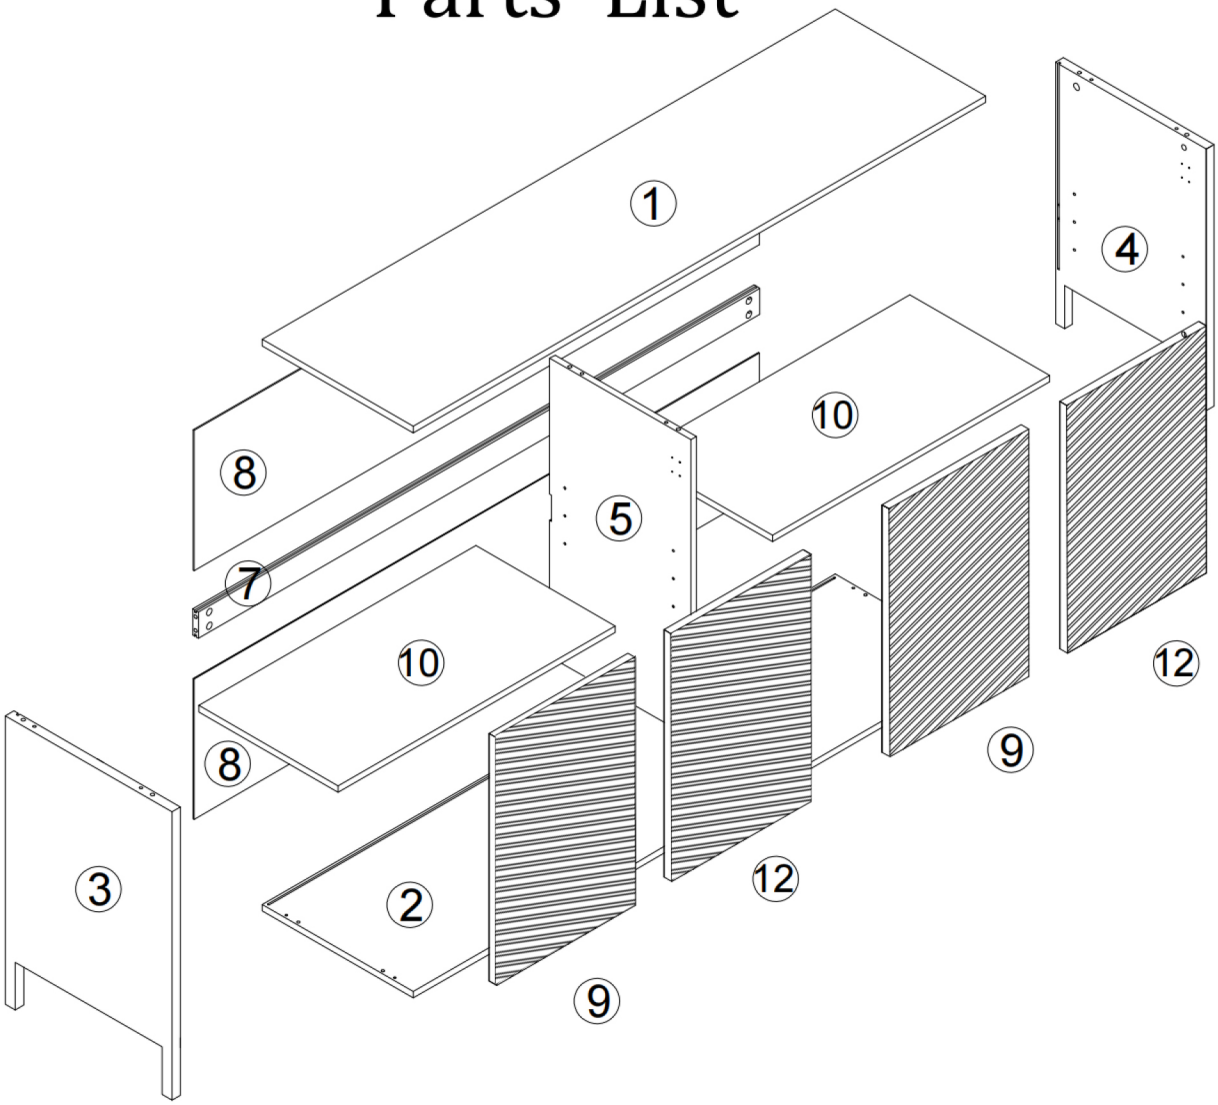

A 16pcs	B 16pcs	C  12pcs	D 3.5X14 72pcs	E  4pcs
M  4pcs	H  2pcs	I  8pcs	J  4pcs	K 12pcs
L  4pcs	W  2pcs			

Step 1:

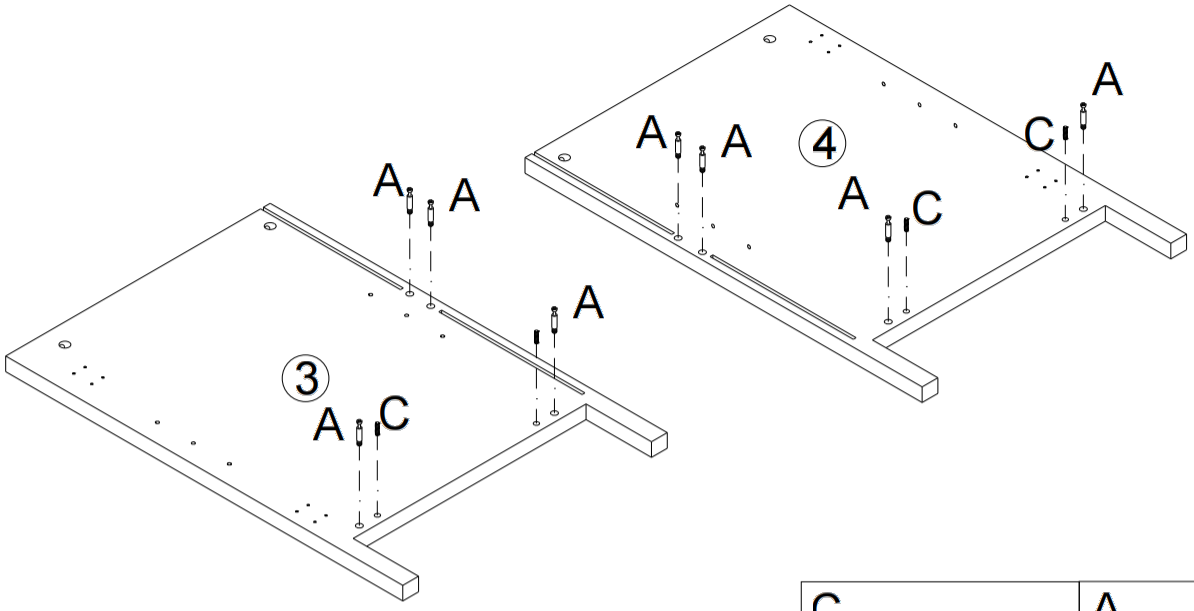

C	A
 4pcs	8pcs

Step 2:

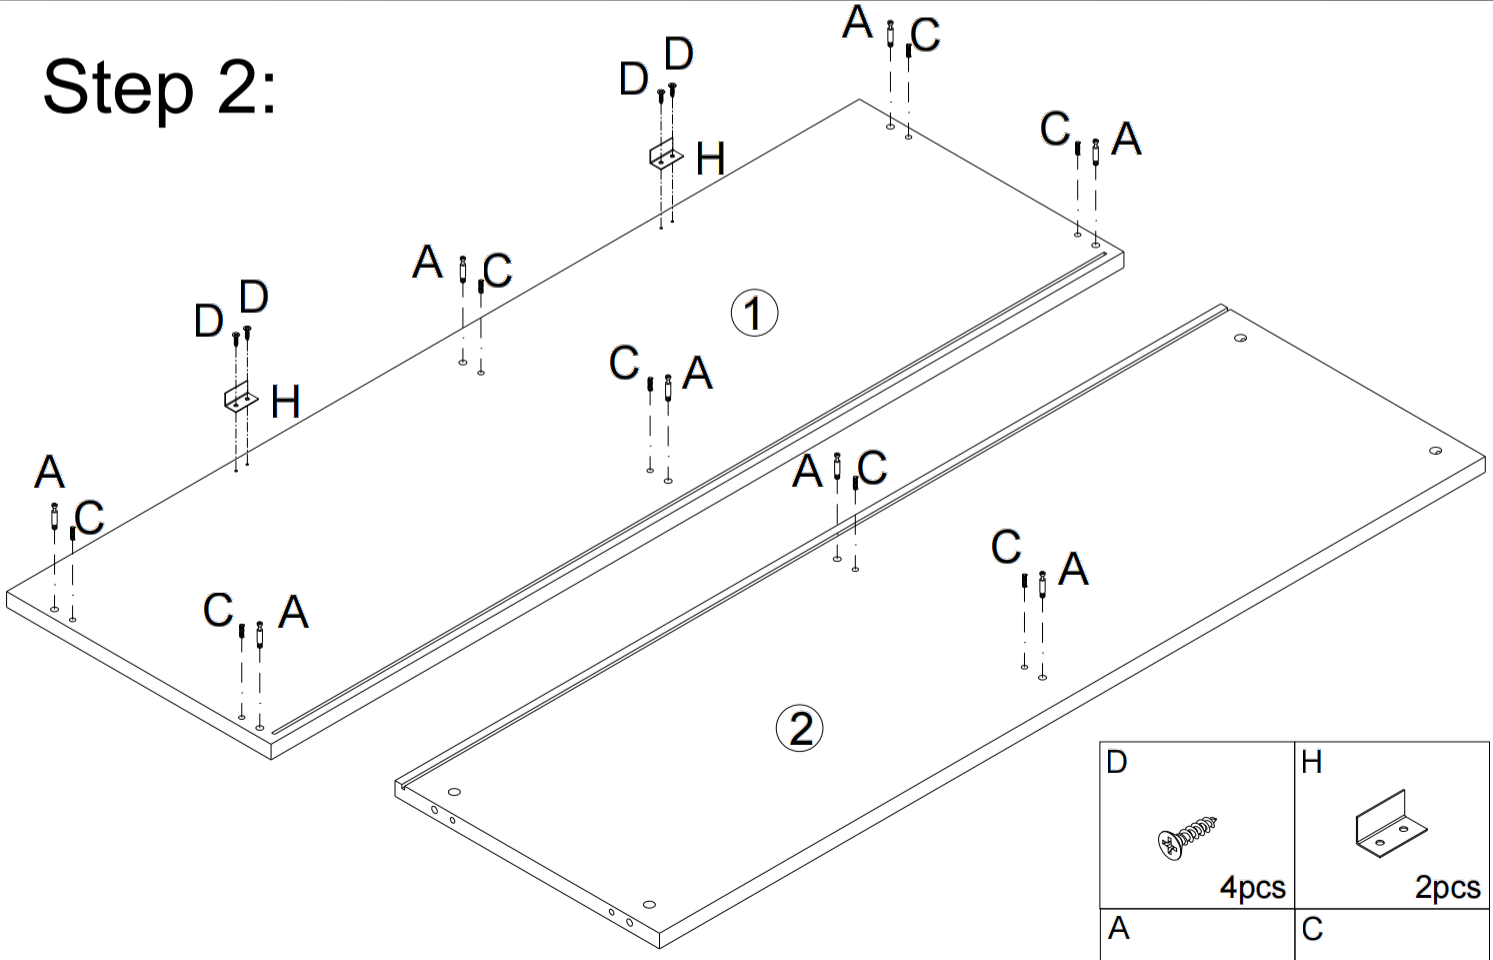

D	H
4pcs	2pcs
A	C
8pcs	8pcs

Step 3:

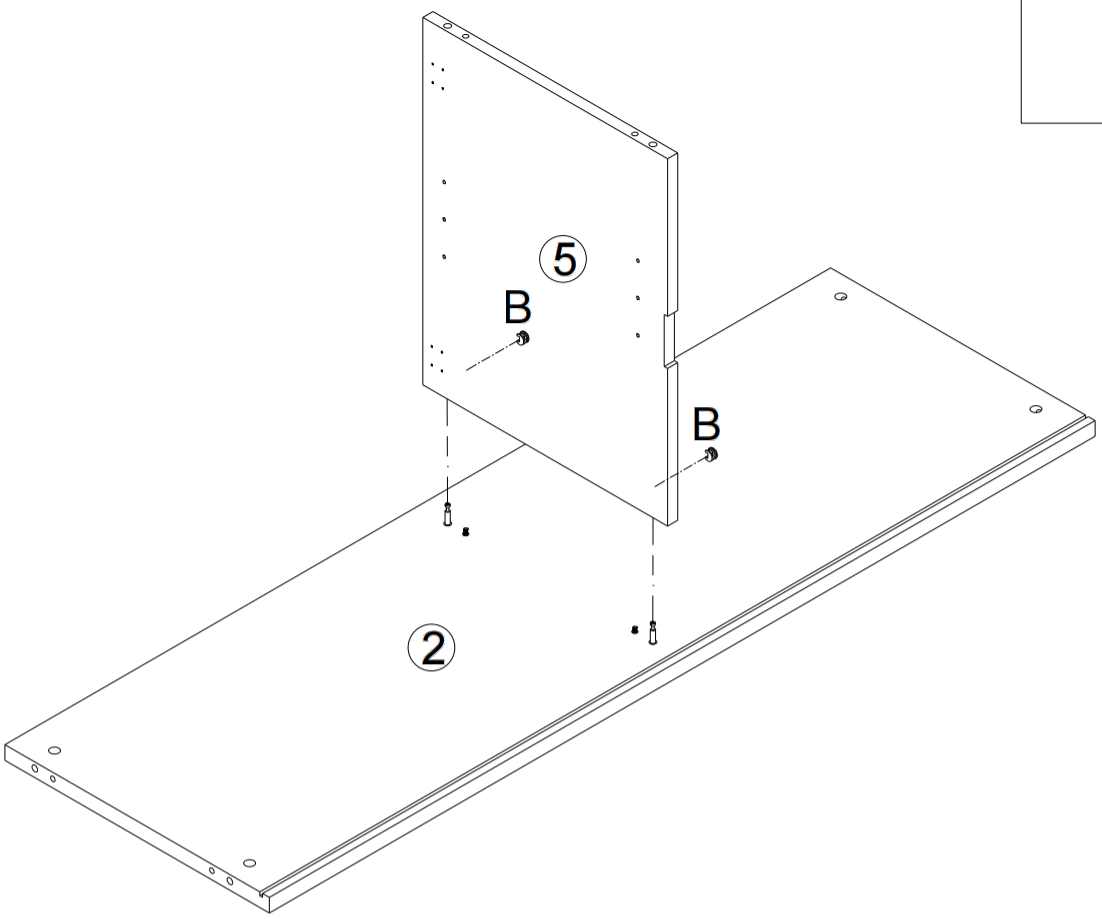

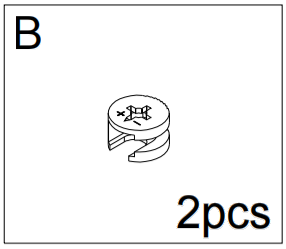

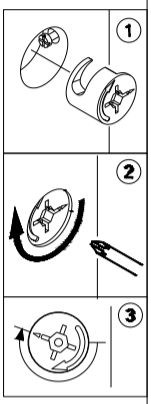

Step 4:

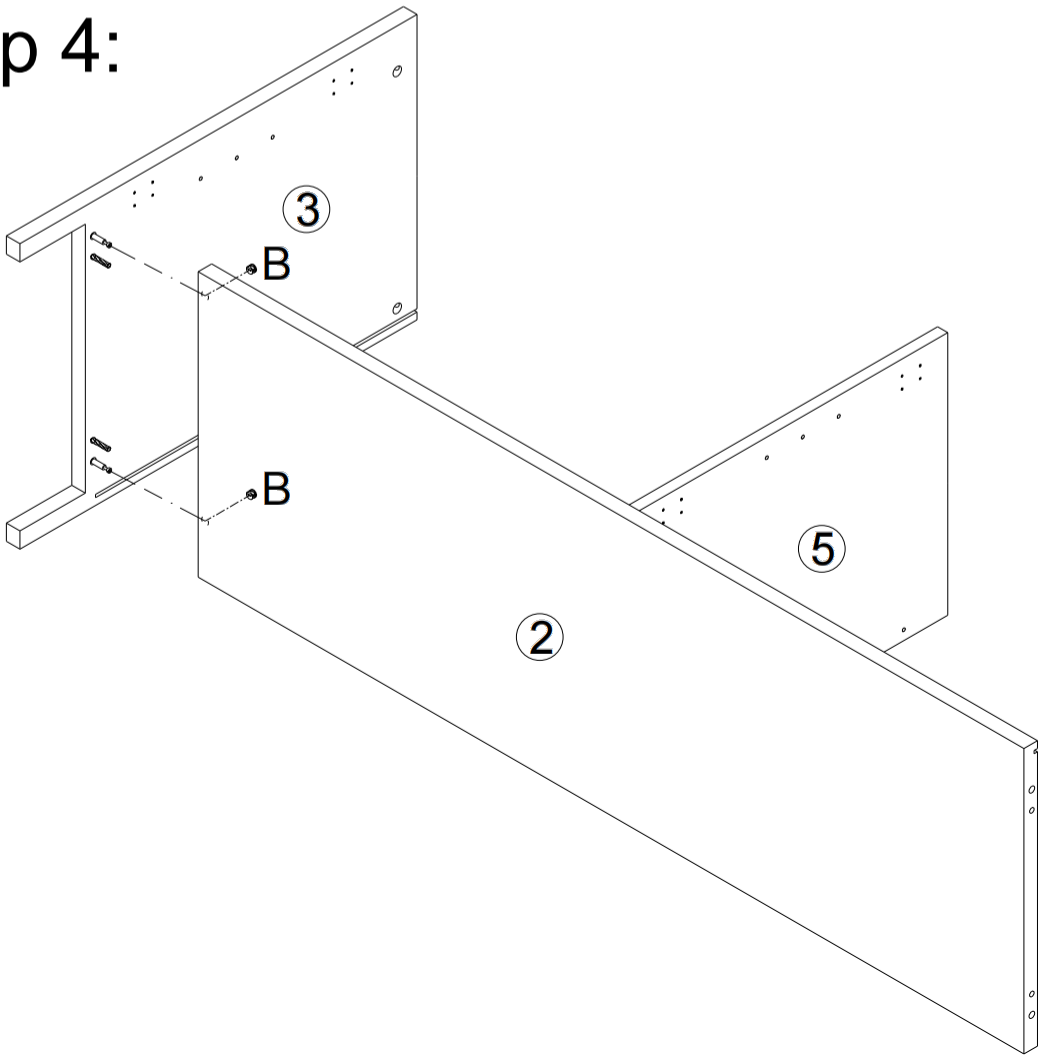

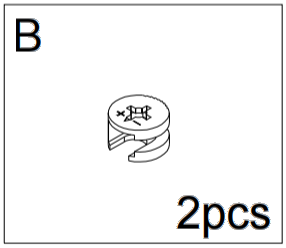

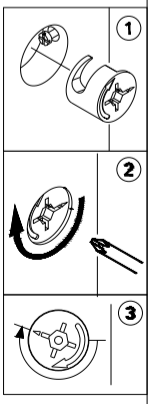

Step 5:

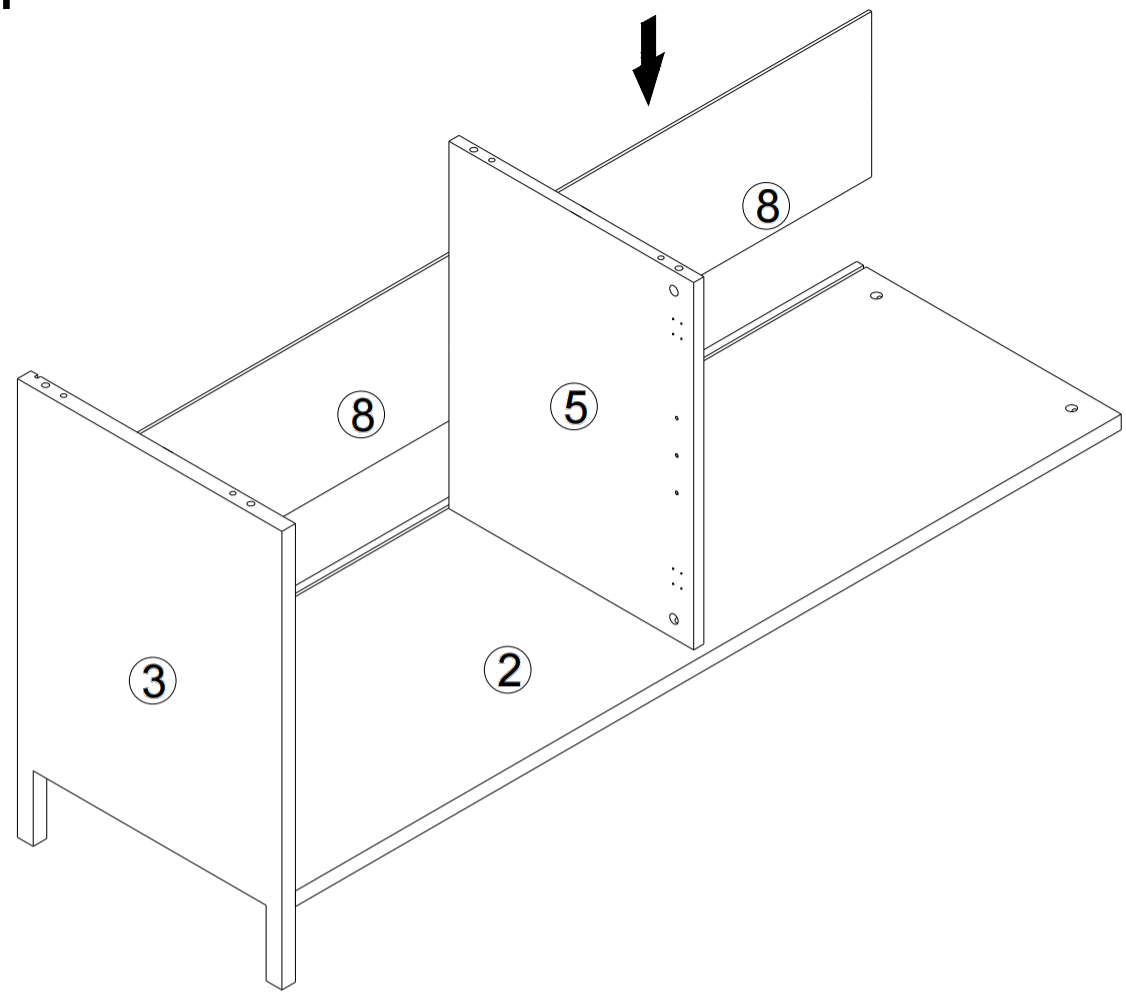

Step 6:

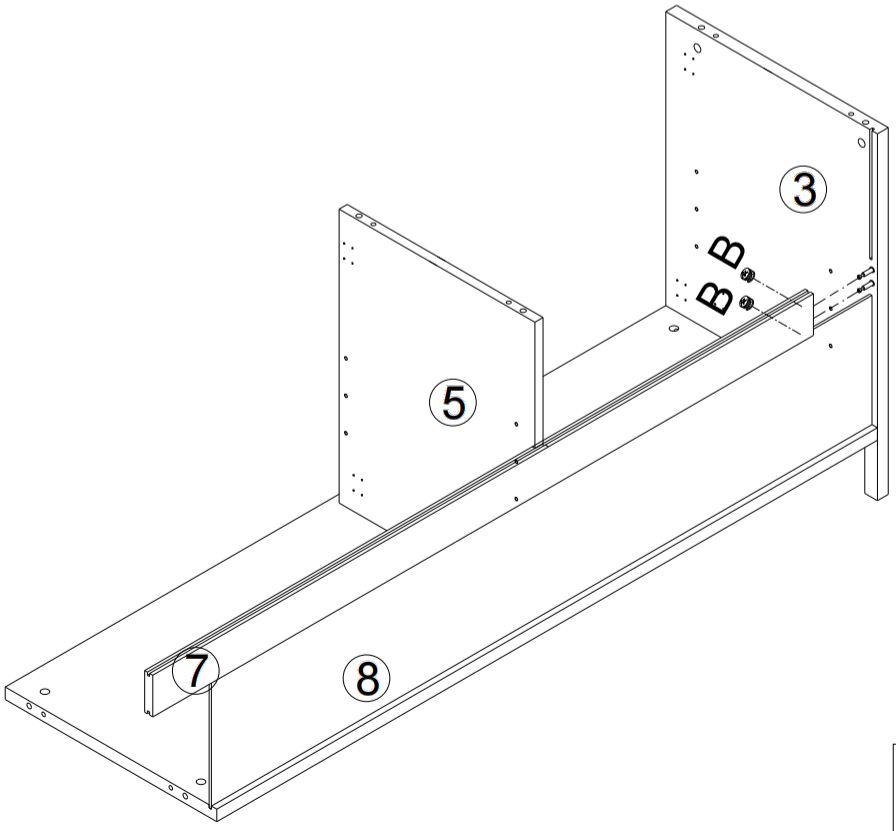

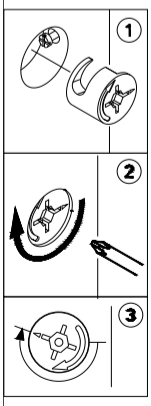

B

2pcs

Step 7:

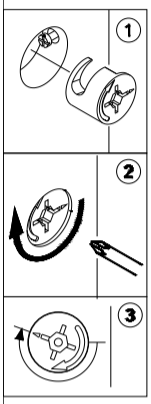

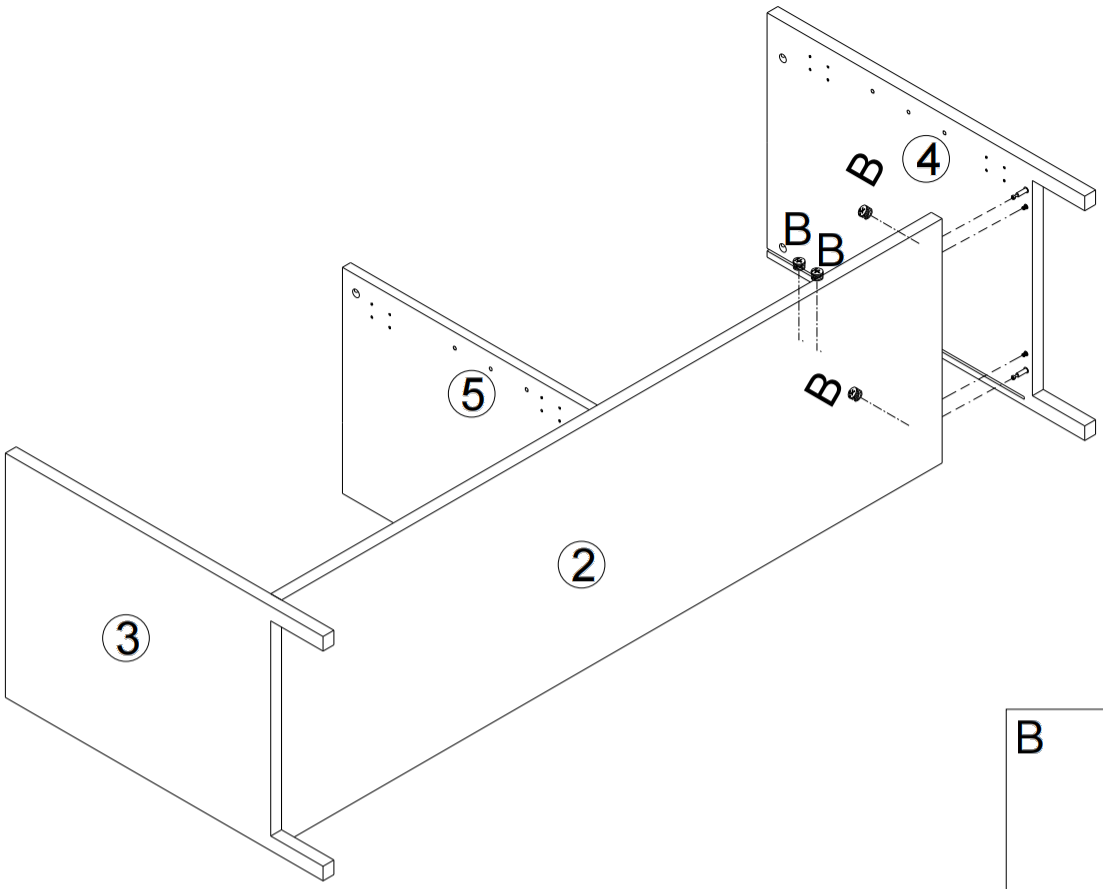

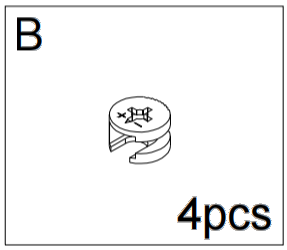

Step 8:

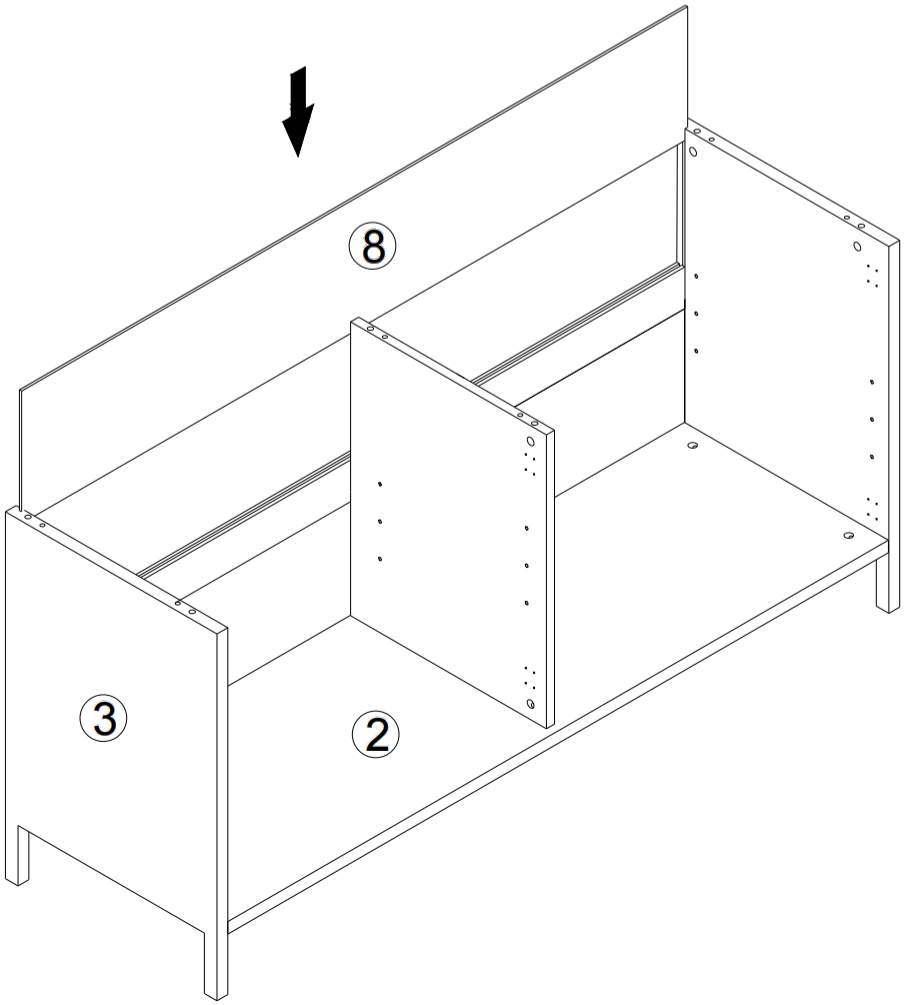

Step 9:

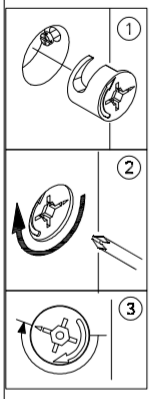

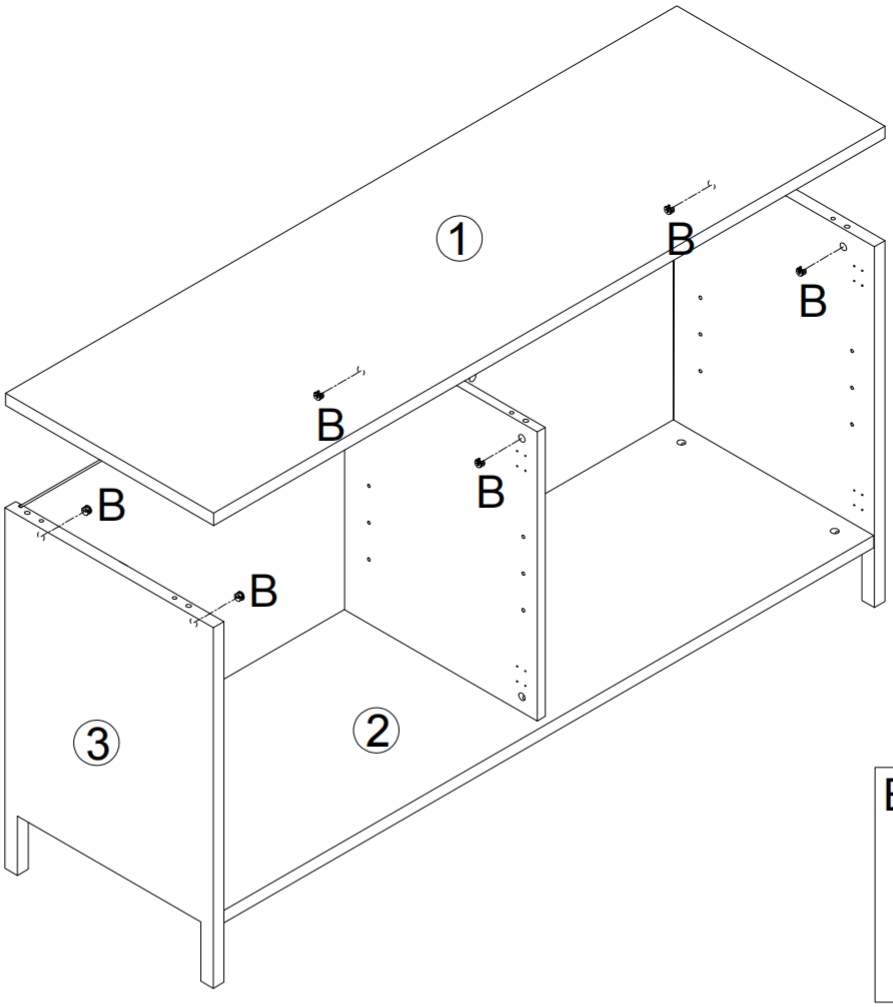

B

6pcs

Step 10:

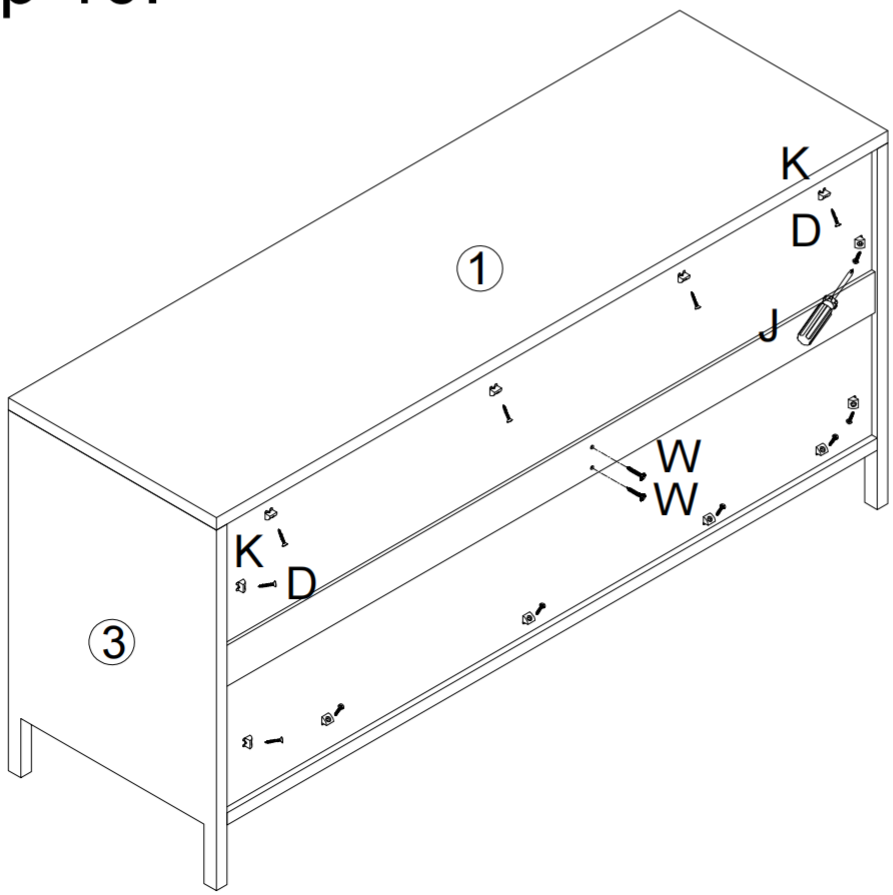

W



2pcs

K

12pcs

D

12pcs

J



1pcs

Step 11:

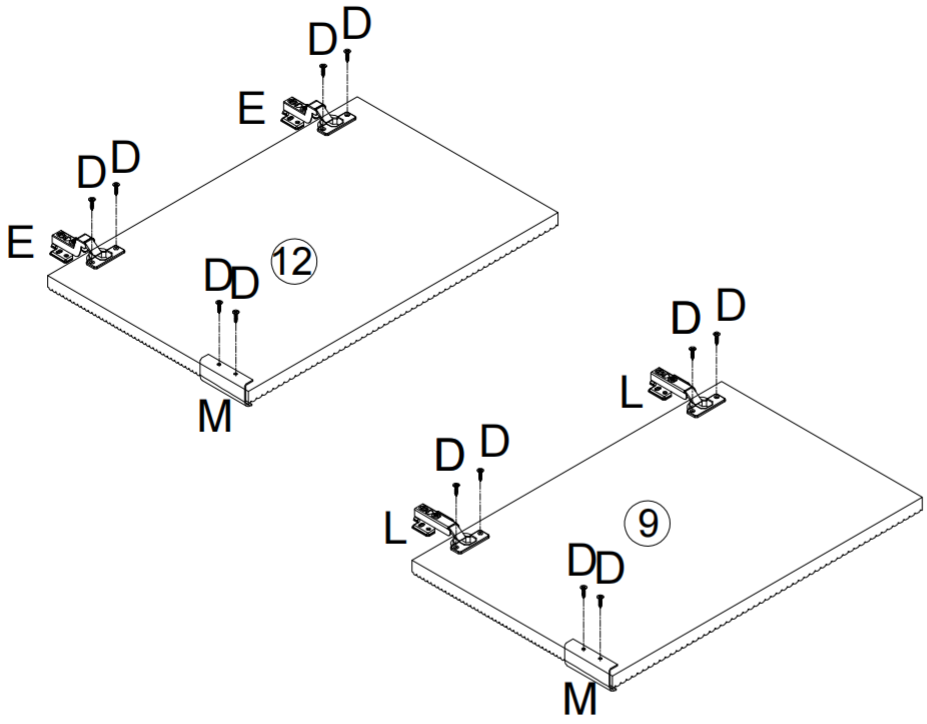

D

12pcs

E



2pcs

L



2pcs

M



2pcs

Step 12:

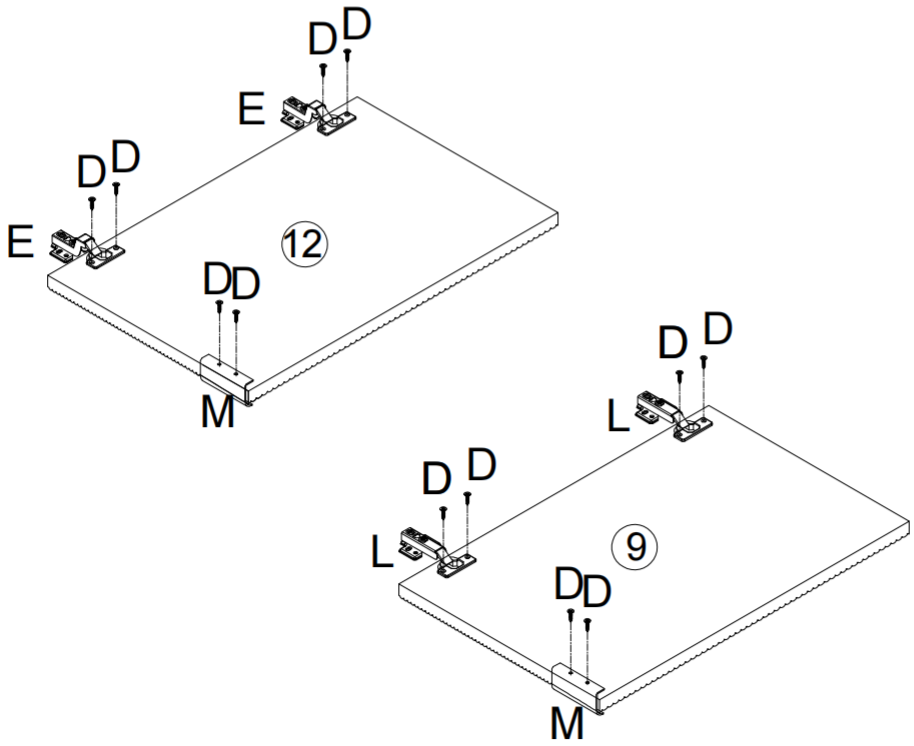

D

12pcs

E

2pcs

L



2pcs

M



2pcs

Step 13:

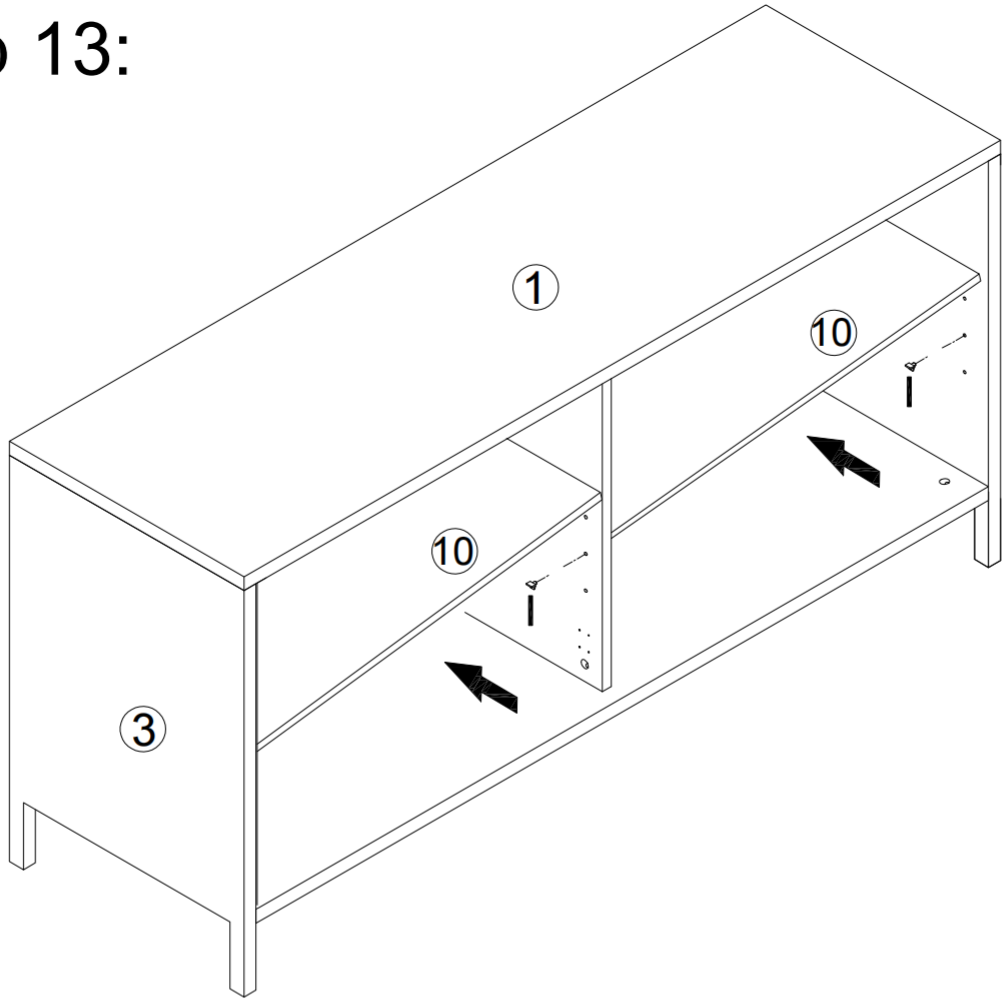

I

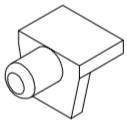

8pcs

Step 14:

USE HINGE E FOR THE 2 SIDE DOORS

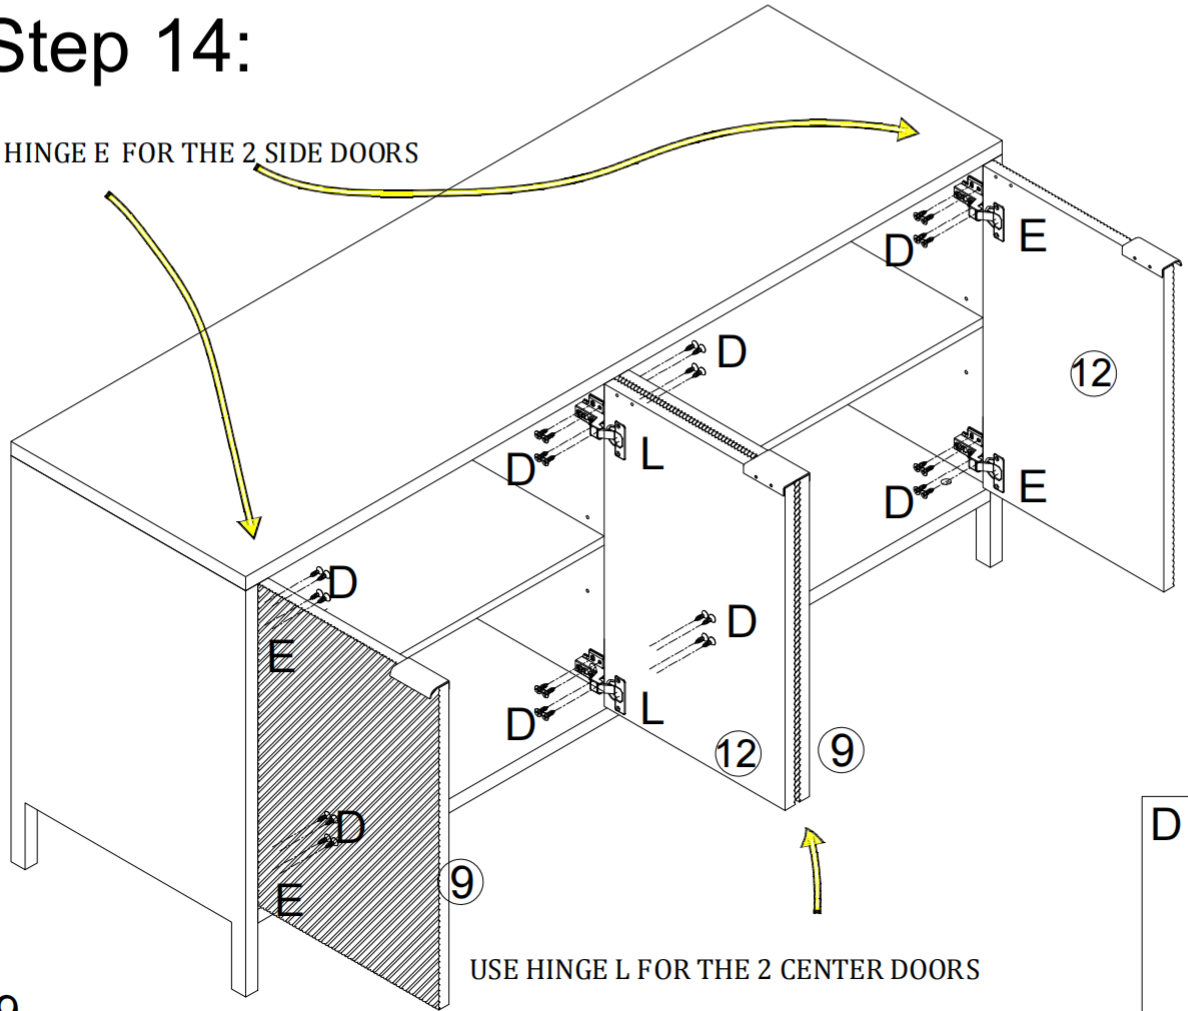

USE HINGE L FOR THE 2 CENTER DOORS

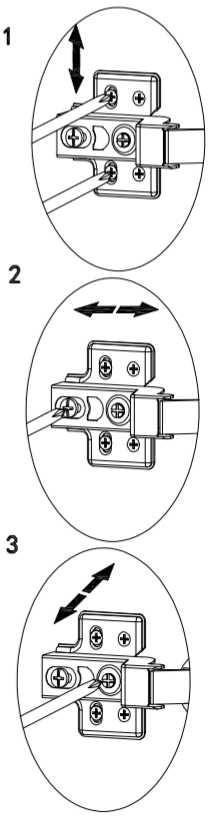

D

32pcs

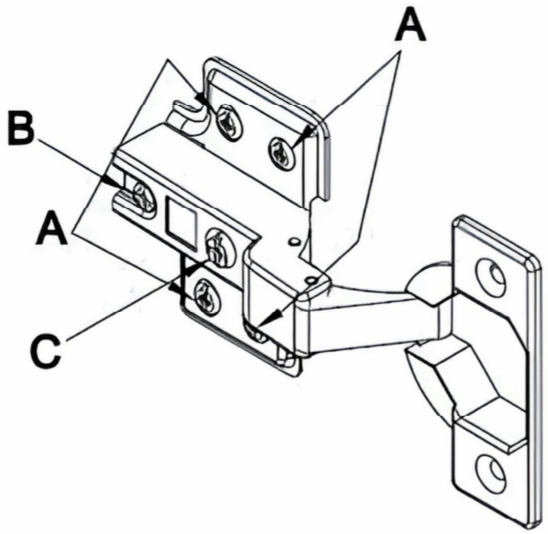

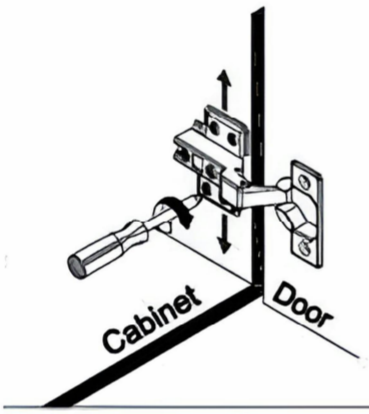

To adjust the vertlcal helght.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

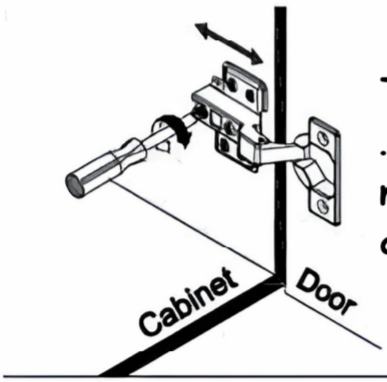

To adjust depth.
.Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try agaln. Tlghten screw "B" and "C".

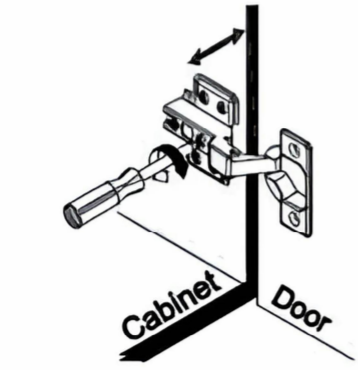

To adjust slde ways.

Turning the screw "C" on BOTH hinges on each door.