
Installation & Assembly

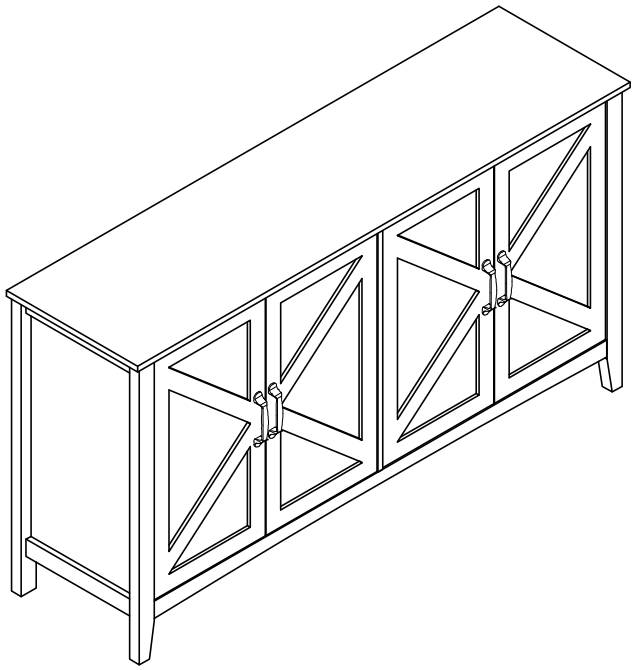

WARNING!


Children have died from furniture tipover. Fixed wall device have been included with this product;you must install the fixed wall device according to these instructions in order to minimize the risk of furniture.If you have any questions about this product or the Fixed wall device , please contact us immediately.

Never allow children to climb or hang on furniture,including drawers or cabiner doors.

In addition to installing the restrains,to help prevent tip-over.















1. Never put a TV or other heavy objects on top of this product.
2. Do not stand on the product.



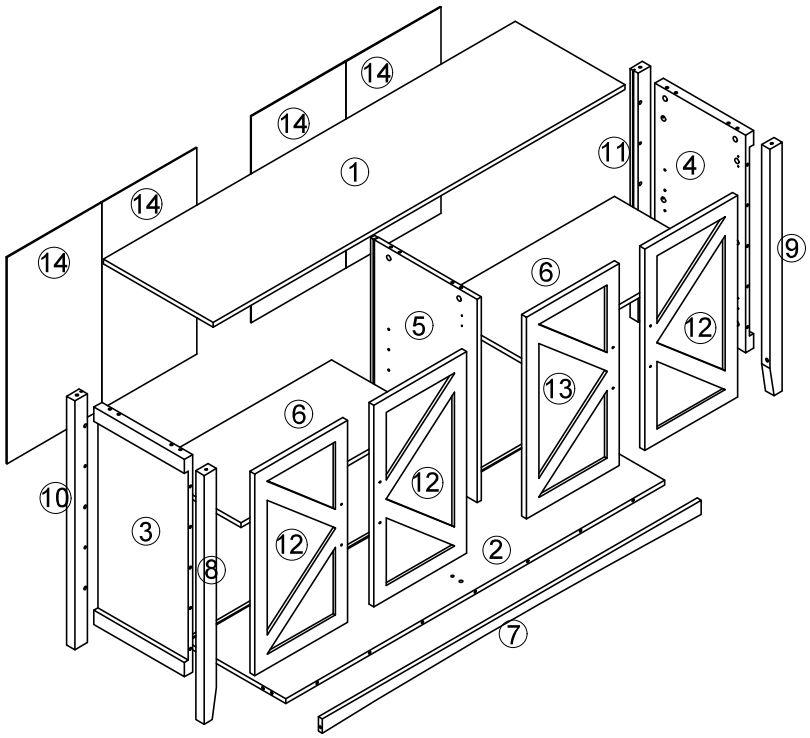

K 128mm	L 4*22	M	N
4PCS	8PCS	2PCS	8PCS


A	B	C 8*40	D 7*50	E 3.5*14	F	G	H	I 3*12	J
30PCS	30PCS	27PCS	2PCS	52PCS	1PCS	2PCS	16PCS	16PCS	8PCS

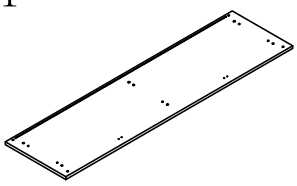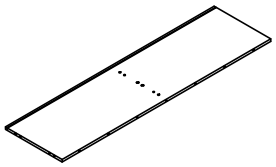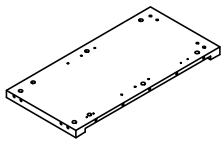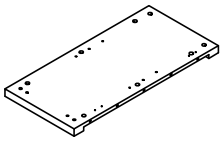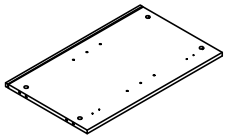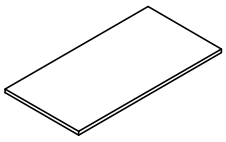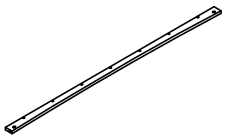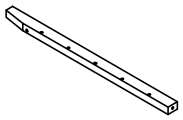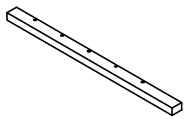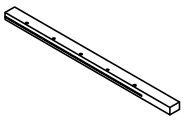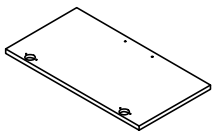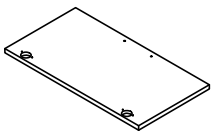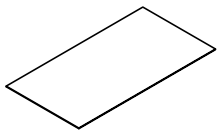1  1500*402 1PS	2  1380*374 1PS	3  694*330 1PS	4  694*330 1PS	5  641*389 1PS
6  680*350 2PS	7  1380*45 1PS	8  785*45 1PS	9  785*45 1PS	10  785*45 1PS
11  785*45 1PS	12  636*338 3PS	13  636*338 1PS	14  651*345.5 4PS	


Hardware installation demonstration

NOTE:Please make sure "A"hardware tightened and can't be pulled out!


I

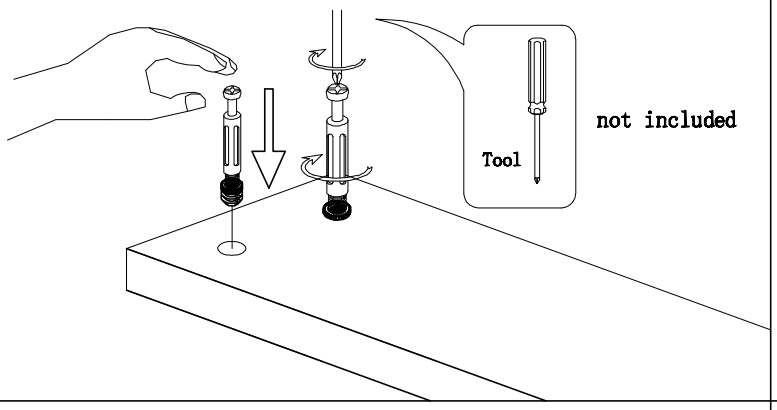


II

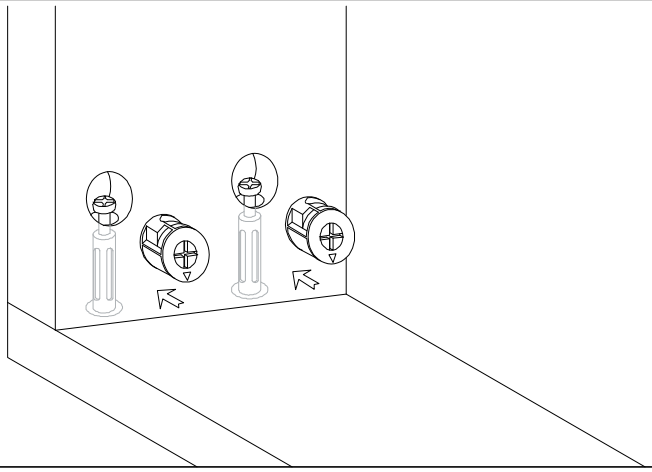

III

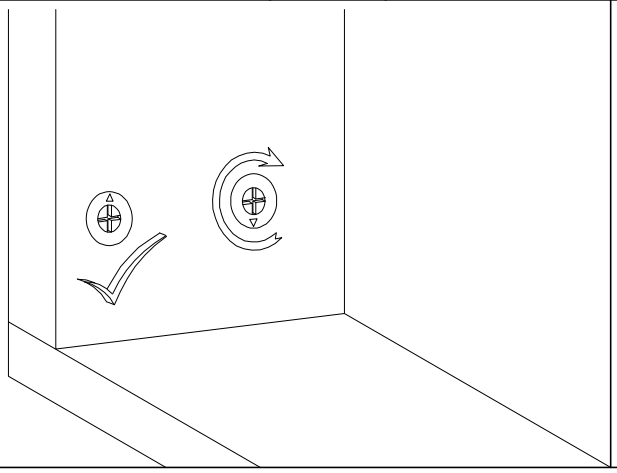

①

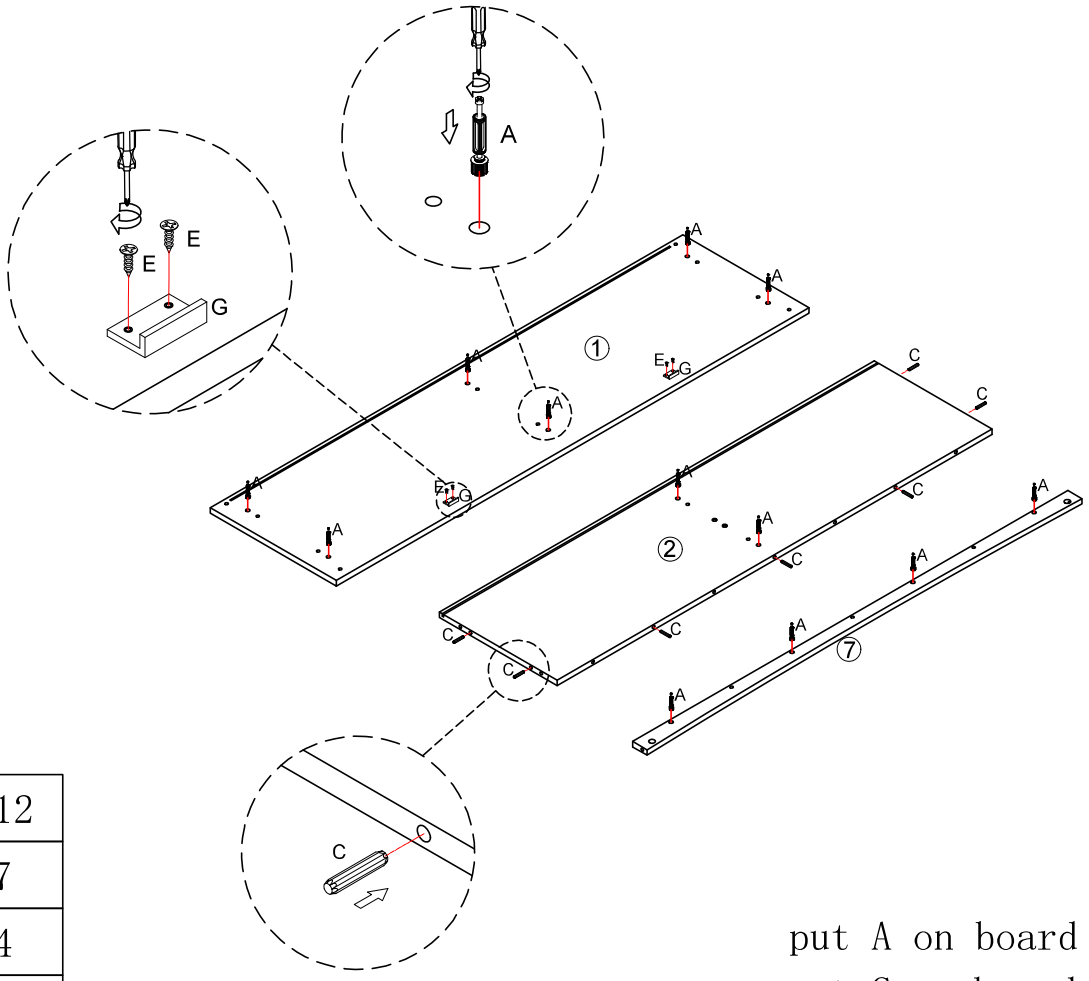


	A*12
	C*7
	E*4
	G*2

put A on board ①②⑦

put C on board ②⑦

②

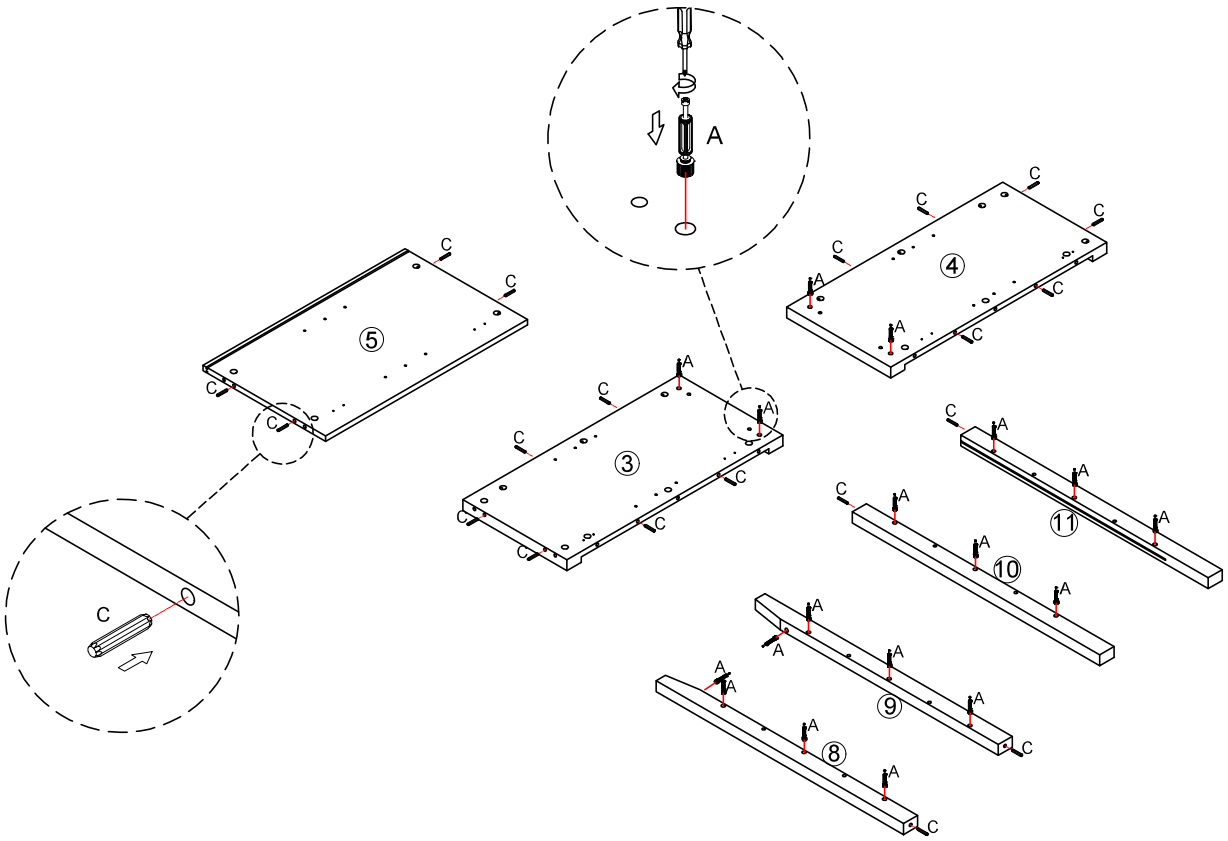


	A*18
	C*20

put A on board ③④⑧⑨⑩⑪

put C on board ③④⑤⑧⑨⑩⑪

③


Make sure the arrow on the screw align to the hole on the side.

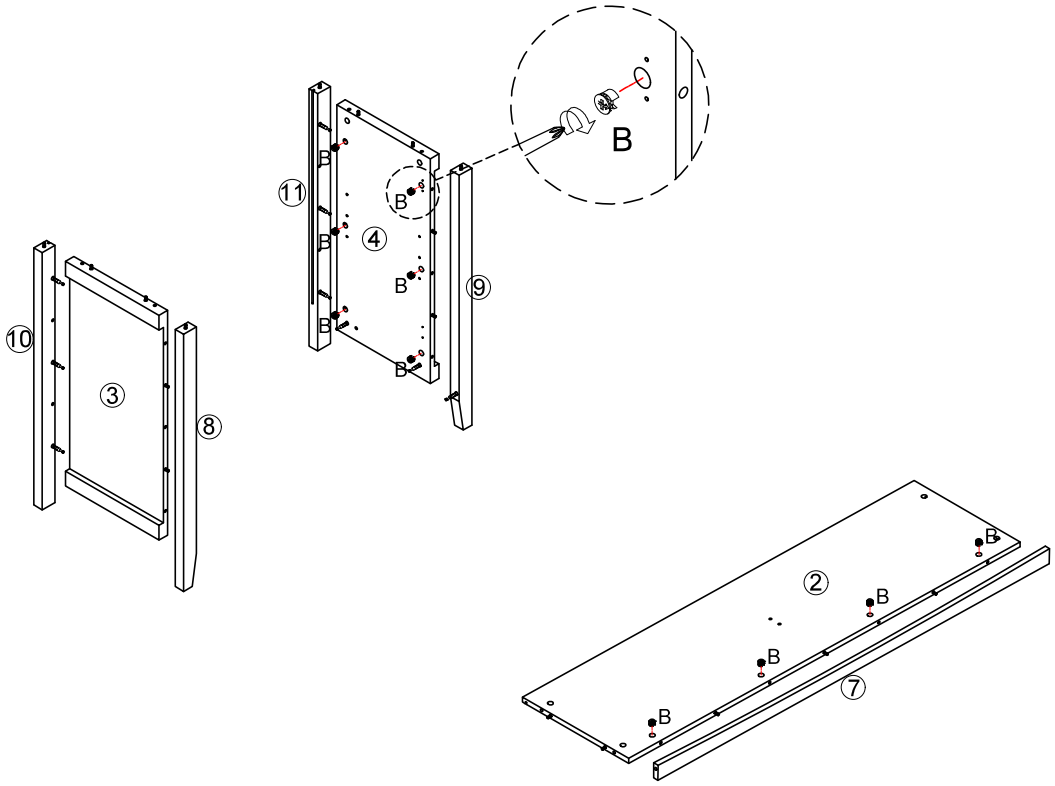


	B*16

put B on board ②③④

④

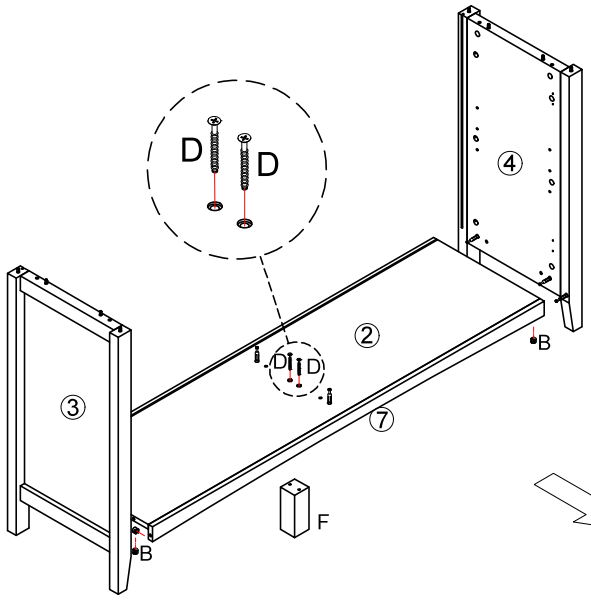

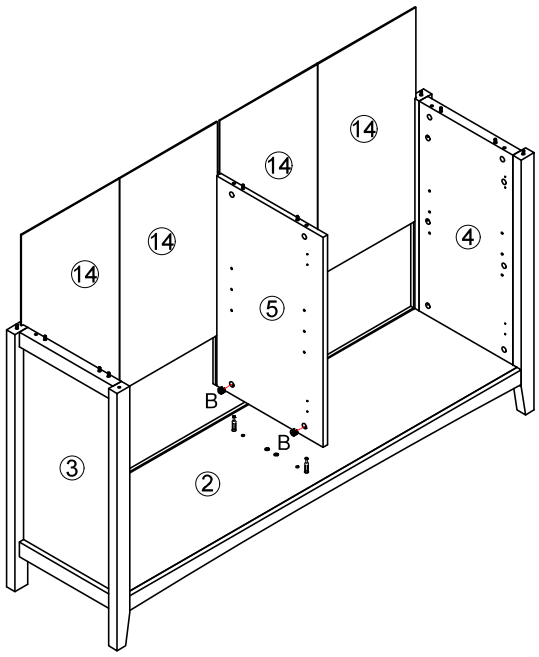


	B*8
	D*2
	F*1

put B on board ②⑤⑦

5


Make sure the arrow on the screw align to the hole on the side.

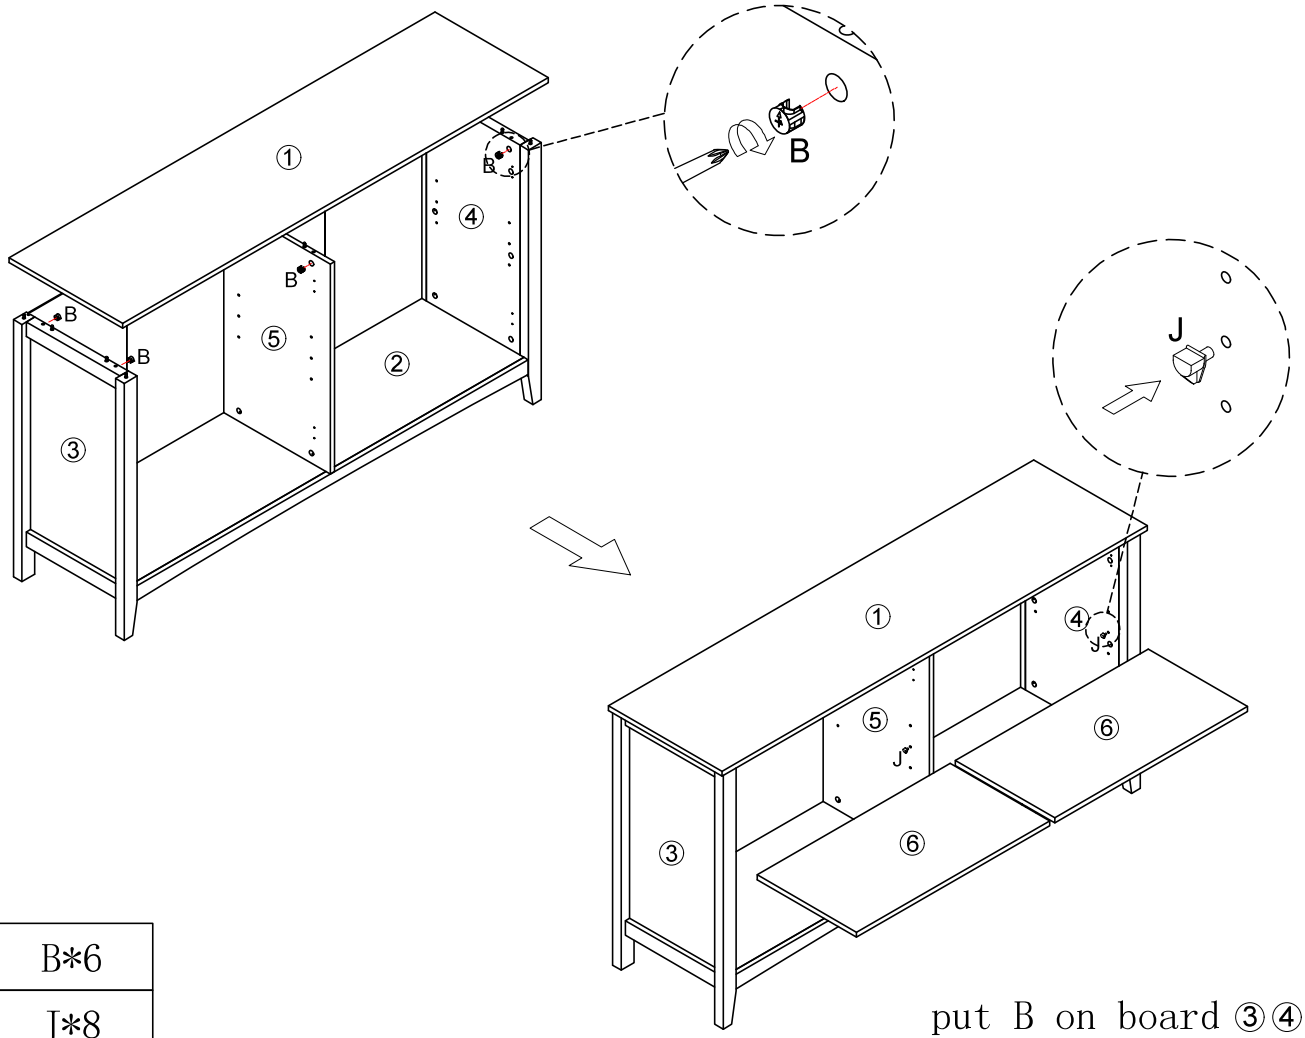

	B*6
	J*8


put B on board ③④⑤

6

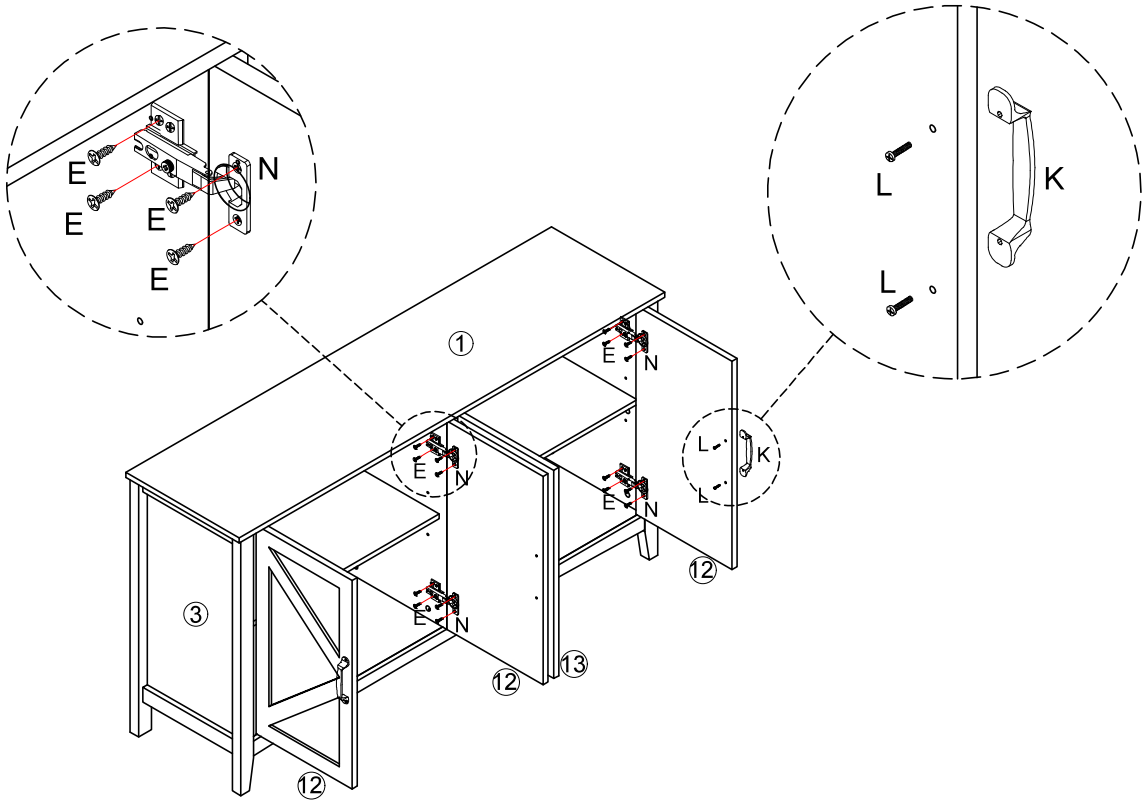


	E*48
	K*4
	L*8
	N*8


7

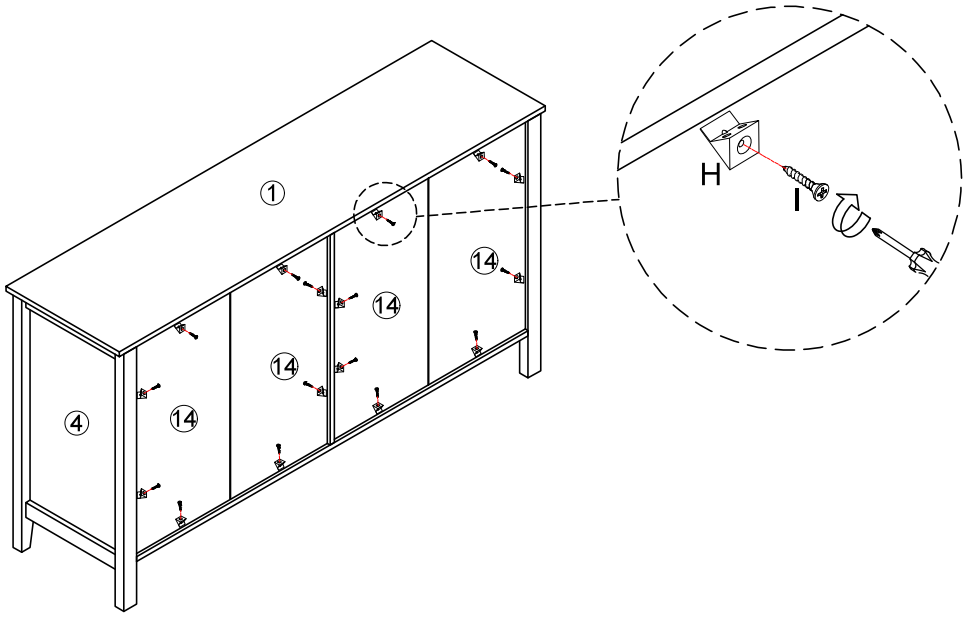



	H*16
	I*16


8

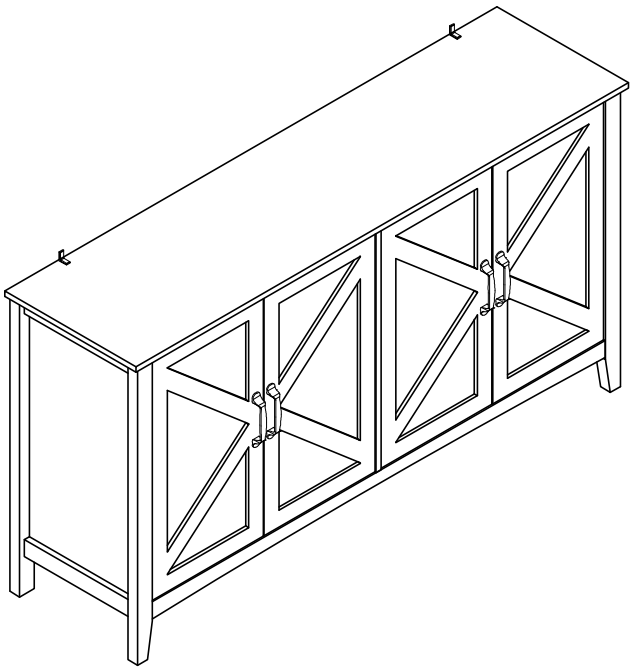

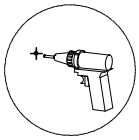

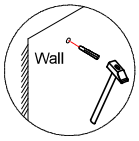

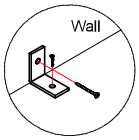

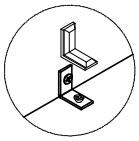



Please install tip-proof fitting.

	M*2

9

